# CCD-TR618/TR618E/TR718E/TR728E/TR818
# CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
# RMT-708

# SERVICE MANUAL

Self Diagnosis
Supported model

**Ver 1.4 2002. 05**

Handycam
Handycam Vision™
video Hi8
InfoLITHIUM™ L SERIES

B MECHANISM

Photo : CCD-TRV98E

*US Model*
*CCD-TR818/TRV58/TRV68/TRV88/TRV98*
*Canadian Model*
*CCD-TR818/TRV58/TRV68/TRV98*
*AEP Model*
*UK Model*
*CCD-TR718E/TR728E/TRV58E/TRV59E/TRV78E/TRV98E*
*E Model*
*CCD-TR618/TR618E/TR818/TRV49/TRV49E/TRV58/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E*
*Australian Model*
*CCD-TR618E/TRV49E/TRV78E/TRV98E*
*Hong Kong Model*
*CCD-TR618E/TRV49/TRV49E/TRV78/TRV78E/TRV98/TRV98E*
*Tourist Model*
*CCD-TRV49/TRV49E/TRV78/TRV78E/TRV98/TRV98E*
*Chinese Model*
*CCD-TR618E/TRV49E/TRV98E*
*Brazilian Model*
*CCD-TR818/TRV58/TRV98*
*Argentina Model*
*CCD-TR818/TRV58*
*Korea Model*
*CCD-TRV49/TRV78/TRV98*

**NTSC model : CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98**
**PAL model : CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E**

**For MECHANISM ADJUSTMENT, refer to the "8mm Video MECHANICAL ADJUSTMENT MANUAL Ⅶ" (9-973-801-11).**

## SPECIFICATIONS

### Video camera recorder

#### System

**Video recording system**
2 rotary heads
Helical scanning FM system
**Audio recording system**
Rotary heads, FM system
**Video signal**
CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98:
NTSC color, EIA standards
CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E:
PAL colour, CCIR standards
**Usable cassette**
8mm video format cassette
Hi8 or standard 8
**Recording/playback time**
CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98:
**(using 120 min. cassette)**
SP mode: 2 hours
LP mode: 4 hours
CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E: **(using 90 min. cassette)**
SP mode: 1 hour and 30 minutes
LP mode: 3 hours
**Fastforward/rewind time**
CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98:
**(using 120 min. cassette)**
CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E: **(using 90 min. cassette)**
Approx. 5 min.

**Viewfinder**
Electric viewfinder
CCD-TR818: Color
CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E:
Monochrome
**Image device**
CCD-TR618/TRV49/TRV58:
3 mm (1/6 type) CCD
(Charge Coupled Device)
Approx. 270 000 pixels
(Effective: Approx. 250 000 pixels)
CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E:
3 mm (1/6 type) CCD
(Charge Coupled Device)
Approx. 320 000 pixels
(Effective: Approx. 290 000 pixels)
CCD-TR818/TRV68/TRV78/TRV88/TRV98:
4.5 mm (1/4 type) CCD
(Charge Coupled Device)
Approx. 320 000 pixels
(Effective: Approx. 200 000 pixels)
CCD-TRV78E/TRV98E:
4.5 mm (1/4 type) CCD
(Charge Coupled Device)
Approx. 380 000 pixels
(Effective: Approx. 230 000 pixels)
**Lens**
Combined power zoom lens
Filter diameter 37 mm (1 7/16 in.)
CCD-TR618/TR618E/TRV49/TRV49E:
20× (Optical), 450× (Digital)
CCD-TR718E/TR818/TRV58/TRV58E/TRV68:
20× (Optical), 460× (Digital)
CCD-TR728E/TRV59E/TRV78/TRV78E/TRV88/TRV98/TRV98E:
20× (Optical), 560× (Digital)
**Focal length**
3.6 - 72 mm (5/32 - 2 7/8 in.)
When converted to a 35 mm still camera
CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E:
51.8 - 1 036 mm (2 - 40 6/8 in.)
CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E:
41 - 820 mm (1 5/8 - 32 3/8 in.)
**Colour temperature**
Auto
**Minimum illumination**
CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E:
1 lx (lux) (F 1.4)
CCD-TR818/TRV68/TRV78/TRV88/TRV98:
0.4 lx (lux) (F 1.4)
CCD-TRV78E/TRV98E:
0.3 lx (lux) (F 1.4)
0 lx (lux) (in the NightShot mode)*
* Objects unable to be seen due to the dark can be shot with infrared lighting.

#### Output connectors

**S video output**
4-pin mini DIN
Luminance signal: 1 Vp-p, 75 Ω (ohms), unbalanced
Chrominance signal:
CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98:
0.286 Vp-p,
CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E:
0.3 Vp-p,
75 Ω (ohms), unbalanced
**Audio/Video output**
AV MINIJACK, 1 Vp-p,
75 Ω (ohms), unbalanced, sync negative
327 mV,
(at output impedance more than 47 kΩ (kilohms))
Output impedance with less than 2.2 kΩ (kilohms)/Monaural minijack (ø 3.5 mm)
**RFU DC OUT**
Mini-mini jack (ø 2.5 mm), DC 5V
**Earphone jack**
CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E:
Monaural minijack (ø 3.5 mm)

— Continued on next page —

## Hi8 VIDEO CAMERA RECORDER

SONY®

### LCD screen

**Picture**
CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E:
6.2 cm (2.5 type)
50.3 × 37.4 mm. (2 × 11/2 in. )
CCD-TRV88:
7.5 cm (3.0 type)
61.0 × 43.8 mm (2 1/2 × 1 3/4 in.)
CCD-TRV98/TRV98E:
8.8 cm (3.5 type)
72.2 × 50.4 mm (2 7/8 × 2 in.)

**Total dot number**
CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E:
61 600 (280 × 220)
CCD-TRV88/TRV98/TRV98E:
123 200 (560 × 220)

### General

**Power requirements**
7.2 V (battery pack)
8.4 V (AC power adaptor)

**Average power consumption (when using the battery pack)**
During camera recording
CCD-TR618/TR618E/TR718E/TR728E: 2.3 W
CCD-TR818: 2.0 W
During camera recording using LCD
CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E: 2.7 W
CCD-TRV88/TRV98/TRV98E: 3.4 W
Viewfinder
2.3 W

**Operating temperature**
0 °C to 40 °C (32 °F to 104 °F)

**Recommended charging temperature**
10 °C to 30 °C (50 °F to 86 °F )

**Storage temperature**
–20 °C to +60 °C (–4 °F to +140 °F )

**Dimensions (approx.)**
CCD-TR618/TR618E/TR718E/TR728E:
104 × 105 × 223 mm
(4 1/8 × 4 1/4 × 9 1/8 in.)
(w/h/d)
CCD-TR818:
104 × 105 × 197 mm
(4 1/8 × 4 1/4 × 7 7/8 in.)
(w/h/d)
CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E:
104 × 109 × 223 mm
(4 1/8 × 4 3/8 × 9 1/8 in.)
(w/h/d)

**Mass (approx.)**
CCD-TR618/TR618E/TR718E/TR728E:
780 g (1 lb 11 oz)
CCD-TR818:
760 g (1 lb 10 oz)
CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E:
910 g (2 lb)
CCD-TRV88:
920 g (2 lb)
CCD-TRV98/TRV98E:
930 g (2 lb)
excluding the battery pack, cassette and shoulder strap
CCD-TR618/TR618E/TR718E/TR728E:
930 g (2 lb)
CCD-TR818:
910 g (2 lb)
CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E:
1.1 kg (2 lb 7 oz)
including the battery pack NP-F330, cassette and shoulder strap

**Supplied accessories**
See page 3.

### AC power adaptor

**Power requirements**
100 - 240 V AC, 50/60 Hz

**Power consumption**
23 W

**Output voltage**
DC OUT: 8.4 V, 1.5 A in operating mode

**Operating temperature**
0 °C to 40 °C (32 °F to 104 °F)

**Storage temperature**
–20 °C to +60 °C (–4 °F to +140 °F)

**Dimensions (approx.)**
125 × 39 × 62 mm
(5 × 1 9/16 × 2 1/2 in.) (w/h/d)
excluding projecting parts

**Mass (approx.)**
280 g (9.8 oz)
excluding power cord

### Battery pack

**Maximum output voltage**
DC 8.4 V

**Output voltage**
DC 7.2 V

**Capacity**
5.0 Wh (700mAh)

**Dimensions (approx.)**
38.4 × 20.6 × 70.8 mm
(1 9/16 × 13/16 × 2 7/8 in.)
(w/h/d)

**Mass (approx.)**
70 g (2.5 oz)

**Operating temperature**
0 °C to 40 °C (32 °F to 104 °F)

**Type**
Lithium ion

Design and specifications are subject to change without notice.

**SAFETY-RELATED COMPONENT WARNING!!**

**COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.**

**ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!**

**LES COMPOSANTS IDENTIFÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈSES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPÉMENTS PUBLIÉS PAR SONY.**

# SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.
6. Flexible Circuit Board Repairing
    - Keep the temperature of the soldering iron around 270˚C during repairing.
    - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
    - Be careful not to apply force on the conductor when soldering or unsoldering.

## • SUPPLIED ACCESSORIES

Check that the following accessories are supplied with your camcorder.

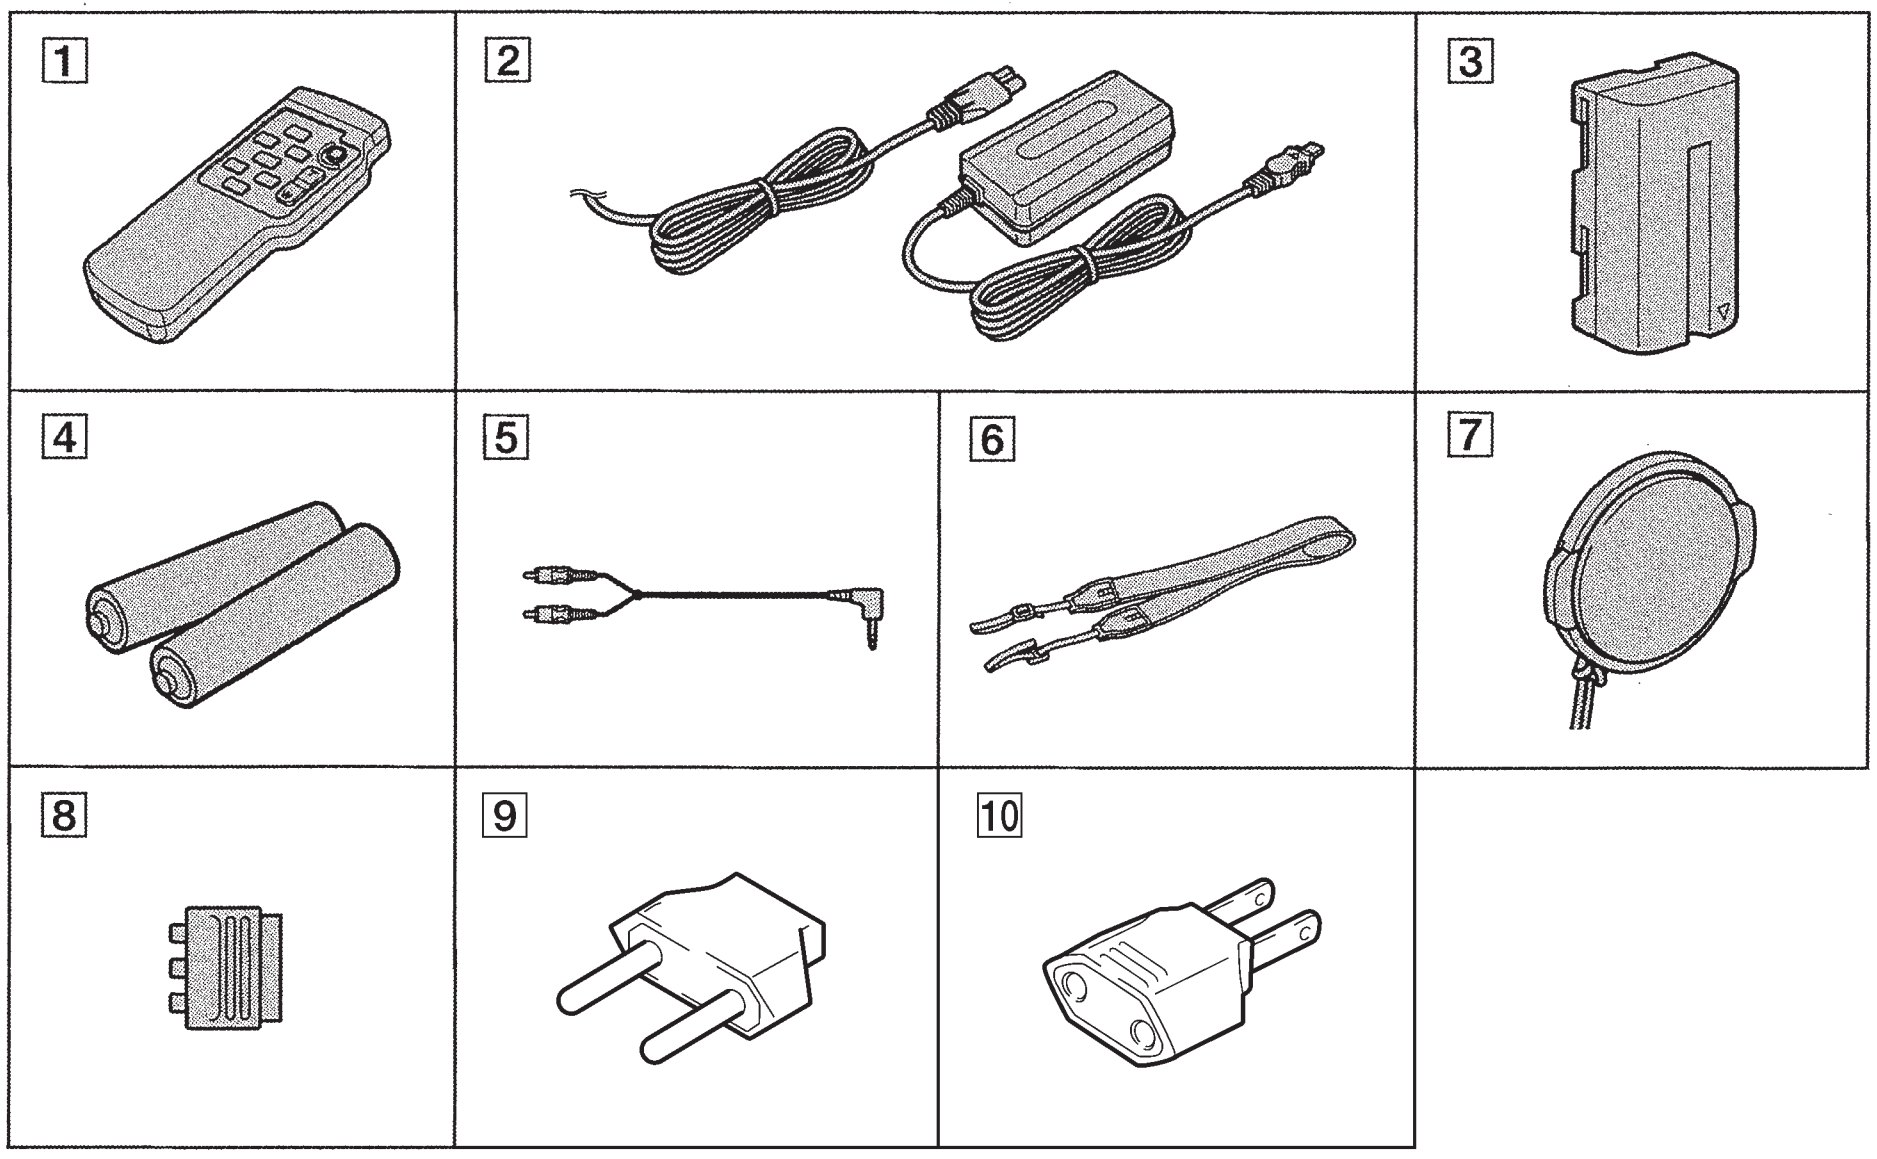

1 **Wireless Remote Commander** (1)
CCD-TR728E/TRV49/TRV49E/TRV59E/TRV78/TRV78E/TRV98/TRV98E only

2 **AC-L10A/L10B/L10C AC power adaptor** (1), **Mains lead** (1)

3 **NP-F330 battery pack** (1)

4 **R6 (size AA) battery for Remote Commander** (2)
CCD-TR728E/TRV49/TRV49E/TRV59E/TRV78/TRV78E/TRV98/TRV98E only

5 **A/V connecting cable** (1)

6 **Shoulder strap** (1)

7 **Lens cap** (1)

8 **21-pin adaptor** (1)
CCD-TR718E/TR728E/TRV58E/TRV59E/TRV78E/TRV98E (European models only)

9 **2-pin convesion adaptor** (1)
CCD-TRV49: JE/TRV49E: JE/TRV78: JE/TRV78E: JE/TRV98: JE/TRV98E: JE

10 **2-pin convesion adaptor** (1)
CCD-TR618/TR618E: E,HK/TR818: E,BR/TRV49: E,HK/TRV49E: E,HK/TRV58: E,BR/TRV68: E/TRV78: E,HK/TRV78E: E,HK/TRV88: E/TRV98: E,HK,BR/TRV98E: E,HK

- Abbreviation

| | |
|---|---|
| HK | : Hong Kong model |
| JE | : Tourist model |
| BR | : Brazilian model |

## Table for difference of function

| Model | | CCD-TR618 | CCD-TR618E | CCD-TR718E | CCD-TR728E | CCD-TR818 | CCD-TRV49 | CCD-TRV49E | CCD-TRV58 | CCD-TRV58E | CCD-TRV59E | CCD-TRV68 | CCD-TRV78 | CCD-TRV78E | CCD-TRV88 | CCD-TRV98 | CCD-TRV98E | Remark |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Destination | | E | E,HK, AUS,CN | AEP,UK | AEP,UK | US,CND, E,BR, AR | E,HK, KR,JE | E,HK, AUS,JE, CN | US,CND, E,BR, AR | AEP,UK | AEP,UK | US,CND, E | E,HK, KR,JE | AEP,UK, E,HK,AUS, JE | US,E | US,CND, E,HK,KR, JE,BR | AEP,UK, E,HK,AUS, JE,CN | |
| Color system | | NTSC | PAL | | | NTSC | | PAL | NTSC | PAL | | NTSC | | PAL | NTSC | | PAL | |
| Remote commander | | ×× | | | RMT-708 | ×× | RMT-708 | | ×× | | RMT-708 | ×× | RMT-708 | | XX | RMT-708 | | |
| Lens | Optical | 20× | | | | | | | | | | | | | | | | |
| | Digital | 450× | | 460× | 560× | 460× | 450× | | 460× | | 560× | 460× | 560× | | | | | |
| CCD imager size | | 1/6 inch | | | | 1/4 inch | 1/6 inch | | | | | 1/4 inch | | | | | | |
| LCD | size | ×× | | | | | 2.5 inch | | | | | | | | 3 inch | 3.5 inch | | |
| | pixel | ×× | | | | | 61K | | | | | | | | 123K | | | |
| View finder | | B/W | | | | Color | B/W | | | | | | | | | | | |
| Steady shot | | ×× | | | | ○ | ×× | | | | | ○ | | | | | | |
| Headphone jack | | ×× | | | | | ○ | | | | | | | | | | | |
| LASER LINK | | ×× | | | | | | | | | | | | | | ○ | ×× | |
| Video Light | | ○ | | | | ×× | ○ | | | | | | | | | | | |
| Board | CD- | CD-286 | | | | | CD-281 | | | | | | | | | | | |
| | CF- | CF-077 | | | | | CF-1000 block | | | | | | | | | | | |
| | VF- | VF-129 | | | | VF-141 | VF-129 | | | | | | | | | | | VF-129 : B/W EVF<br>VF-141 : Color EVF |
| | PD- | ×× | | | | | PD-131 | | | | | | | | | | | |
| | MI- | MI-040 | | | | | MI-041 | | | | | | | | | | | |
| | LB- | ×× | | | | LB-062 | ×× | | | | | | | | | | | LB-062 : Color EVF |

- Abbreviation

| | |
|---|---|
| CND | : Canadian model |
| HK | : Hong Kong model |
| KR | : Korea model |
| JE | : Tourist model |
| AUS | : Australian model |
| CN | : Chinese model |
| BR | : Brazilian model |
| AR | : Argentina model |

## TABLE OF CONTENTS

### SERVICE NOTE

1. POWER SUPPLY DURING REPAIRS ··························· 8
2. TO TAKE OUT A CASSETTE WHEN NOT EJECT (FORCE EJECT) ··························· 8

### SELF-DIAGNOSIS FUNCTION

1. Self-diagnosis Function ··························· 9
2. Self-diagnosis Display ··························· 9
3. Service Mode Display ··························· 9
3-1. Display Method ··························· 9
3-2. Switching of Backup No. ··························· 9
3-3. End of Display ··························· 9
4. Self-diagnosis Code Table ··························· 10

### 1. GENERAL

Checking supplied accessories ··························· 1-1
Quick Start Guide ··························· 1-1
Getting started
  Using this manual ··························· 1-1
  Step 1 Preparing the power supply ··························· 1-2
    Installing the battery pack ··························· 1-2
    Charging the battery pack ··························· 1-2
    Connecting to the mains ··························· 1-3
  Step 2 Setting the date and time ··························· 1-4
  Step 3 Inserting a cassette ··························· 1-4
Recording –Basics
  Recording a picture ··························· 1-5
    Shooting backlit subjects –BACK LIGHT ··························· 1-7
    Shooting in the dark –NightShot ··························· 1-7
    Superimposing the date and time on pictures ··························· 1-7
  Checking the recording –END SEARCH ··························· 1-8
Playback –Basics
  Playing back a tape ··························· 1-8
  Viewing the recording on TV ··························· 1-9
Advanced Recording Operation
  Using the wide mode ··························· 1-9
  Using the fader function ··························· 1-10
  Using special effects –Picture effect ··························· 1-11
  Using the PROGRAM AE function ··························· 1-11
  Adjusting the exposure manually ··························· 1-12
  Focusing manually ··························· 1-12
  Superimposing a title ··························· 1-13
  Making your own titles ··························· 1-13
  Using the built-in light ··························· 1-14
Editing
  Dubbing a tape ··························· 1-15
Customizing Your Camcorder
  Changing the menu settings ··························· 1-15
Troubleshooting
  Types of trouble and their solutions ··························· 1-17
  Self-diagnosis display ··························· 1-18
  Warning indicators and messages ··························· 1-18
Additional Information
  Usable cassettes and playback modes ··························· 1-19
  About “InfoLITHIUM” battery ··························· 1-19
  Using your camcorder abroad ··························· 1-20
  Maintenance information and precautions ··························· 1-20
Quick Reference
  Identifying the parts and controls ··························· 1-22

### 2. DISASSEMBLY

2-1. VIDEO LIGHT (VIDEO LIGHT MODEL) ··························· 2-2
2-2. LCD SECTION (PD-131 BOARD) (TRV MODEL) ··························· 2-3
2-3. FRONT PANEL SECTION, MI-040/041 BOARD ··························· 2-4
2-4. CABINET (L) SECTION ··························· 2-5
2-5. CABINET (R) SECTION (CF-077 BOARD) (TR MODEL) ···························
2-6. CABINET (R) SECTION [CONTROL SWITCH BLOCK (CF-1000)] (TRV MODEL) ··························· 2-7
2-7. VF-129 BOARD (B/W EVF MODEL) ··························· 2-8
2-8. VF-141, LB-062 BOARDS (COLOR EVF MODEL/TR818) ··························· 2-9
2-9. BATTERY PANEL SECTION (BATTERY TERMINAL BOARD) ··························· 2-10
2-10. LENS SECTION ···························
2-11. VC-251 BOARD ···························
2-12. MECHANISM DECK ··························· 2-
2-13. HINGE ASSEMBLY (TRV MODEL) ··························· 2-14
2-14. CIRCUIT BOARDS LOCATION ··························· 2-15
2-15. FLEXIBLE BOARDS LOCATION ··························· 2-16

### 3. BLOCK DIAGRAMS

3-1. OVERALL BLOCK DIAGRAM (1/2) ··························· 3-3
3-2. OVERALL BLOCK DIAGRAM (2/2) ··························· 3-5
3-3. CAMERA/VIDEO BLOCK DIAGRAM (1/2) ··························· 3-7
3-4. CAMERA/VIDEO BLOCK DIAGRAM (2/2) ··························· 3-9
3-5. VTR/CAMERA CONTROL BLOCK DIAGRAM ··························· 3-11
3-6. SERVO BLOCK DIAGRAM ··························· 3-13
3-7. MODE CONTROL BLOCK DIAGRAM ··························· 3-15
3-8. AUDIO BLOCK DIAGRAM ··························· 3-17
3-9. LCD BLOCK DIAGRAM ··························· 3-1
3-10. B/W EVF BLOCK DIAGRAM ··························· 3-21
3-11. COLOR EVF BLOCK DIAGRAM ··························· 3-23
3-12. POWER BLOCK DIAGRAM (1/2) ··························· 3-25
3-13. POWER BLOCK DIAGRAM (2/2) ··························· 3-27

### 4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAM (1/2) ··························· 4-1
FRAME SCHEMATIC DIAGRAM (2/2) ··························· 4-3
4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS ··························· 4-
- CD-281/286 (CCD IMAGER)
  PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM ··························· 4-7
- MI-040/041 (STEADY SHOT, MIC AMP, IR DRIVE)
  PRINTED WIRING BOARD ··························· 4-9
- MI-040/041 (STEADY SHOT, MIC AMP)(1/2)
  SCHEMATIC DIAGRAM ··························· 4-11
- MI-040/041 (IR DRIVE)(2/2)
  SCHEMATIC DIAGRAM ··························· 4-13
- PD-131 (RGB, TIMING GENERATOR, BACK LIGHT)
  PRINTED WIRING BOARD ··························· 4-15
- PD-131 (RGB, TIMING GENERATOR)(1/2)
  SCHEMATIC DIAGRAM ··························· 4-19
- PD-131 (BACK LIGHT)(2/2)
  SCHEMATIC DIAGRAM ··························· 4-21
- VF-129 (B/W EVF)
  PRINTED WIRING BOARD ··························· 4-24
- VF-129 (B/W EVF)
  SCHEMATIC DIAGRAM ··························· 4-25
- VF-141 (COLOR EVF)
  PRINTED WIRING BOARD ··························· 4-27
- VF-141 (COLOR EVF)
  SCHEMATIC DIAGRAM ··························· 4-29
- LB-062 (EVF BACK LIGHT)
  PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM ··························· 4-31
- CONTROL SWITCH BLOCK (CF-1000)
  SCHEMATIC DIAGRAM ··························· 4-33
- CF-077 (SWITCH)
  PRINTED WIRING BOARD ··························· 4-35

• CF-077 (SWITCH)
SCHEMATIC DIAGRAM 4-37
• VC-251 (CAMERA PROCESSOR, Y/C PROCESSOR, FOCUS/ZOOM MOTOR DRIVE, REC/PB AMP, LINE I/O AMP, SERVO, MODE CONTROL, HI CONTROL, AUDIO, DC/DC CONVERTER, CONNECTOR)
PRINTED WIRING BOARD 4-39
• VC-251 (CAMERA PROCESSOR AMP)(1/11)
SCHEMATIC DIAGRAM 4-43
• VC-251 (Y/C PROCESSOR)(2/11)
SCHEMATIC DIAGRAM 4-45
• VC-251 (FOCUS/ZOOM MOTOR DRIVE)(3/11)
SCHEMATIC DIAGRAM 4-47
• VC-251 (REC/PB AMP)(4/11)
SCHEMATIC DIAGRAM 4-49
• VC-251 (LINE I/O AMP)(5/11)
SCHEMATIC DIAGRAM 4-51
• FP-249 (S/T REEL SENSOR, TAPE TOP), FP-356 (TAPE END), FP-355 (TAPE LED)
FLEXIBLE BOARDS 4-52
• VC-251 (SERVO)(6/11)
SCHEMATIC DIAGRAM 4-53
• VC-251 (MODE CONTROL)(7/11)
SCHEMATIC DIAGRAM 4-55
• VC-251 (HI CONTROL)(8/11)
SCHEMATIC DIAGRAM 4-57
• VC-251 (AUDIO)(9/11)
SCHEMATIC DIAGRAM 4-59
• VC-251 (DC/DC CONVERTER)(10/11)
SCHEMATIC DIAGRAM 4-61
• VC-251 (CONNECTOR)(11/11)
SCHEMATIC DIAGRAM 4-63
• FP-257 (VIDEO LIGHT, S VIDEO)
FLEXIBLE BOARD 4-65
4-3. WAVEFORMS 4-66
4-4. MOUNTED PARTS LOCATION 4-70

## 5. ADJUSTMENTS

1. Before starting adjustment 5-2
1-1. Adjusting items when replacing main parts and boards 5-2
5-1. CAMERA SECTION ADJUSTMENT 5-4
1-1. PREPARATIONS BEFORE ADJUSTMENT (CAMERA SECTION) 5-4
1-1-1. List of Service Tools 5-4
1-1-2. Preparations 5-5
1-1-3. Precaution 5-8
1. Setting the Switch 5-8
2. Order of Adjustments 5-8
3. Subjects 5-8
1-2. INITIALIZATION OF D, E, F, 7 PAGE DATA 5-9
1. Initializing the D, E, F, 7 Page Data 5-9
2. Modification of D, E, F, 7 Page Data 5-9
3. D Page Table 5-9
4. F Page table 5-10
5. E Page Table 5-12
6. 7 Page Table 5-13
1-3. CAMERA SYSTEM ADJUSTMENTS 5-14
1. Lens Type Input 5-14
2. HALL Adjustment 5-14
3. Flange Back Adjustment (Using Minipattern Box) 5-15
4. Flange Back Adjustment (Using Flange Back Adjustment Chart and Subject More Than 500m Away) 5-16
4-1. Flange Back Adjustment (1) 5-16
4-2. Flange Back Adjustment (2) 5-16
5. Flange Back Check 5-17
6. Picture Frame Setting 5-18
7. Color Reproduction Adjustment 5-19
8. Auto White Balance & LV Standard Data Input 5-20
9. Auto White Balance Adjustment 5-21
10. White Balance Check 5-22
11. Angular Velocity Sensor Sensitivity Adjustment (CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) 5-23
1-4. COLOR ELECTRONIC VIEWFINDER SYSTEM ADJUSTMENT (CCD-TR818) 5-24
1. RGB AMP Adjustment (VF-141 board) 5-25
2. Contrast Adjustment (VF-141 board) 5-25
3. Backlight Consumption Current Adjustment (LB-062 board) 5-26
4. White Balance Adjustment (VF-141 board) 5-26
1-5. MONOCHROME ELECTRONIC VIEWFINEDER SYSTEM ADJUSTMENT (CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) 5-27
1-5-1. Horizontal Slant Check 5-27
1-5-2. Centering Adjustment 5-27
1-5-3. Focus Adjustment 5-27
1-5-4. Aberration Adjustment 5-28
1-5-5. Horizontal Amplitude Adjustment (VF-129 board) 5-28
1-5-6. Vertical Amplitude Adjustment (VF-129 board) 5-29
1-5-7. Brightness Adjustment (VF-129 board) 5-29
1-5-8. Horizontal Amplitude, Vertical Amplitude, Focus Check 5-29
1-6. LCD SYSTEM ADJUSTMENT (CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/ TRV98/TRV98E) 5-30
1. LCD Type Check 5-30
2. VCO Adjustment (PD-131 board) 5-31
3. RGB AMP Adjustment (PD-131 board) 5-31
4. Contrast Adjustment (PD-131 board) 5-32
5. COM AMP Adjustment (PD-131 board) 5-32
6. V-COM Adjustment (PD-131 board) 5-33
7. White Balance Adjustment (PD-131 board) 5-33
5-2. MECHANISM SECTION ADJUSTMENT 5-34
2-1. ADJUSTMENT REMOTE COMMANDER 5-34
2-2. OPERATING WITHOUT CASSETTE 5-34
2-3. TAPE PATH ADJUSTMENT 5-34
1. Preparations for Adjustment 5-34
5-3. VIDEO SECTION ADJUSTMENTS 5-35
3-1. PREPARATIONS BEFORE ADJUSTMENTS 5-35
3-1-1. Equipment to Required 5-35
3-1-2. Precautions on Adjusting 5-36
3-1-3. Adjusting Connectors 5-37
3-1-4. Connecting the Equipment 5-37
3-1-5. Alignment Tape 5-38
3-1-6. Output Level and Impedance 5-39
3-1-7. Recording Mode (Standard 8/Hi8) switching 5-39
3-2. SYSTEM CONTROL SYSTEM ADJUSTMENT 5-40
1. Initialization of D, E, F, 7 Page Data 5-40
3-3. SERVO SYSTEM ADJUSTMENT 5-40
1. CAP FG Offset Adjustment (VC-251 board) 5-40
2. Switching Position Adjustment (VC-251 Board) 5-40
3-4. VIDEO SYSTEM ADJUSTMENTS 5-41
1. 28 MHz Origin Oscillation Adjustment (VC-251 board) 5-41
2. AFC fo Adjustment (VC-251 board) 5-42
3. Filter fo Adjustment (VC-251 board) 5-42
4. Y OUT Level Adjustment (VC-251 board) 5-43
5. C OUT Level Adjustment (VC-251 board) 5-43
6. REC Y Current Adjustment (VC-251 board) 5-44
7. REC C/AFM Current Adjustment 5-45
7-1. Preparations 5-45

7-2. REC C Current Check (VC-251 board) ······················· 5-45
7-3. REC AFM Current Adjustment (VC-251 board) ·········· 5-46
7-4. Processing after completed adjustment ························ 5-46
3-5. IR TRANSMITTER ADJUSTMENTS (CCD-TRV98) ··· 5-47
1. IR Video Carrier Frequency Adjustment (MI-041 board) · 5-47
2. IR Video Deviation Adjustment (MI-041 board) ··········· 5-47
3. IR Audio Deviation Adjustment (MI-041 board) ·········· 5-48
3-6. AUDIO SYSTEM ADJUSTMENTS ··························· 5-49
1. 1.5MHz Deviation Adjustment (VC-251 board) ··········· 5-49
2. BPF fo Adjustment (VC-251 board) ···························· 5-49
5-4. SERVICE MODE ························································ 5-50
4-1. ADJUSTMENT REMOTE COMMANDER ················ 5-50
1. Using the Adjustment Remote Commander ·················· 5-50
2. Precautions Upon Using the Adjustment Remote Commander ································································ 5-50
4-2. DATA PROCESS ························································ 5-51
4-3. SERVICE MODE ························································ 5-52
1. Test Mode Setting ························································ 5-52
2. Emergency Memory Address ······································· 5-53
2-1. EMG code (Emergency code) ····································· 5-53
2-2. MSW codes ································································ 5-54
3. Bit Value Discrimination ············································· 5-55
4. Switch check (1) ·························································· 5-55
5. Switch check (2) ·························································· 5-55
6. Switch check (3) ·························································· 5-55
7. Switch check (4) ·························································· 5-56
8. Record of Use check ····················································· 5-56
9. Record of Self-diagnosis check ···································· 5-57

**6. REPAIR PARTS LIST**
6-1. EXPLODED VIEWS ···················································· 6-1
6-1-1. OVERALL SECTION ················································· 6-1
6-1-2. CABINET (L) SECTION ············································ 6-2
6-1-3. B/W EVF SECTION (TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) ··················· 6-3
6-1-4. COLOR EVF SECTION (TR818) ································· 6-4
6-1-5. CABINET (R) SECTION ············································ 6-5
6-1-6. LCD SECTION (TRV MODEL)(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) ················································ 6-6
6-1-7. LENS SECTION ························································ 6-7
6-1-8. CASSETTE COMPARTMENT ASSEMBLY ················ 6-8
6-1-9. LS CHASSIS BLOCK ASSEMBLY ······························ 6-9
6-1-10. MECHANISM CHASSIS ASSEMBLY ····················· 6-10
6-2. ELECTRICAL PARTS LIST ········································ 6-11

* Color reproduction frame is shown on page 239.

# SERVICE NOTE

## 1. POWER SUPPLY DURING REPAIRS

In this unit, about 10 seconds after power is supplied (8.4V) to the battery terminal using the service power cord (J-6082-223-A), the power is shut off so that the unit cannot operate.
This following method is available to prevent this.

**Method:**
Use the DC IN terminal. (Use the AC power adaptor.)

## 2. TO TAKE OUT A CASSETTE WHEN NOT EJECT (FORCE EJECT)

① Refer to 2-3. to remove the front panel assembly.
② Refer to 2-5 (TR model). or 2-6 (TRV model). to remove the cabinet (R) assembly.
③ Open the control switch block (FK-1000).
④ Refer to 2-4. to remove the cabinet (L) assembly.
⑤ Disconnect CN704 (8P) of VC-251 board.
⑥ Add +5V from the DC POWER SUPPLY and unload with a pressing the cassette compartment.

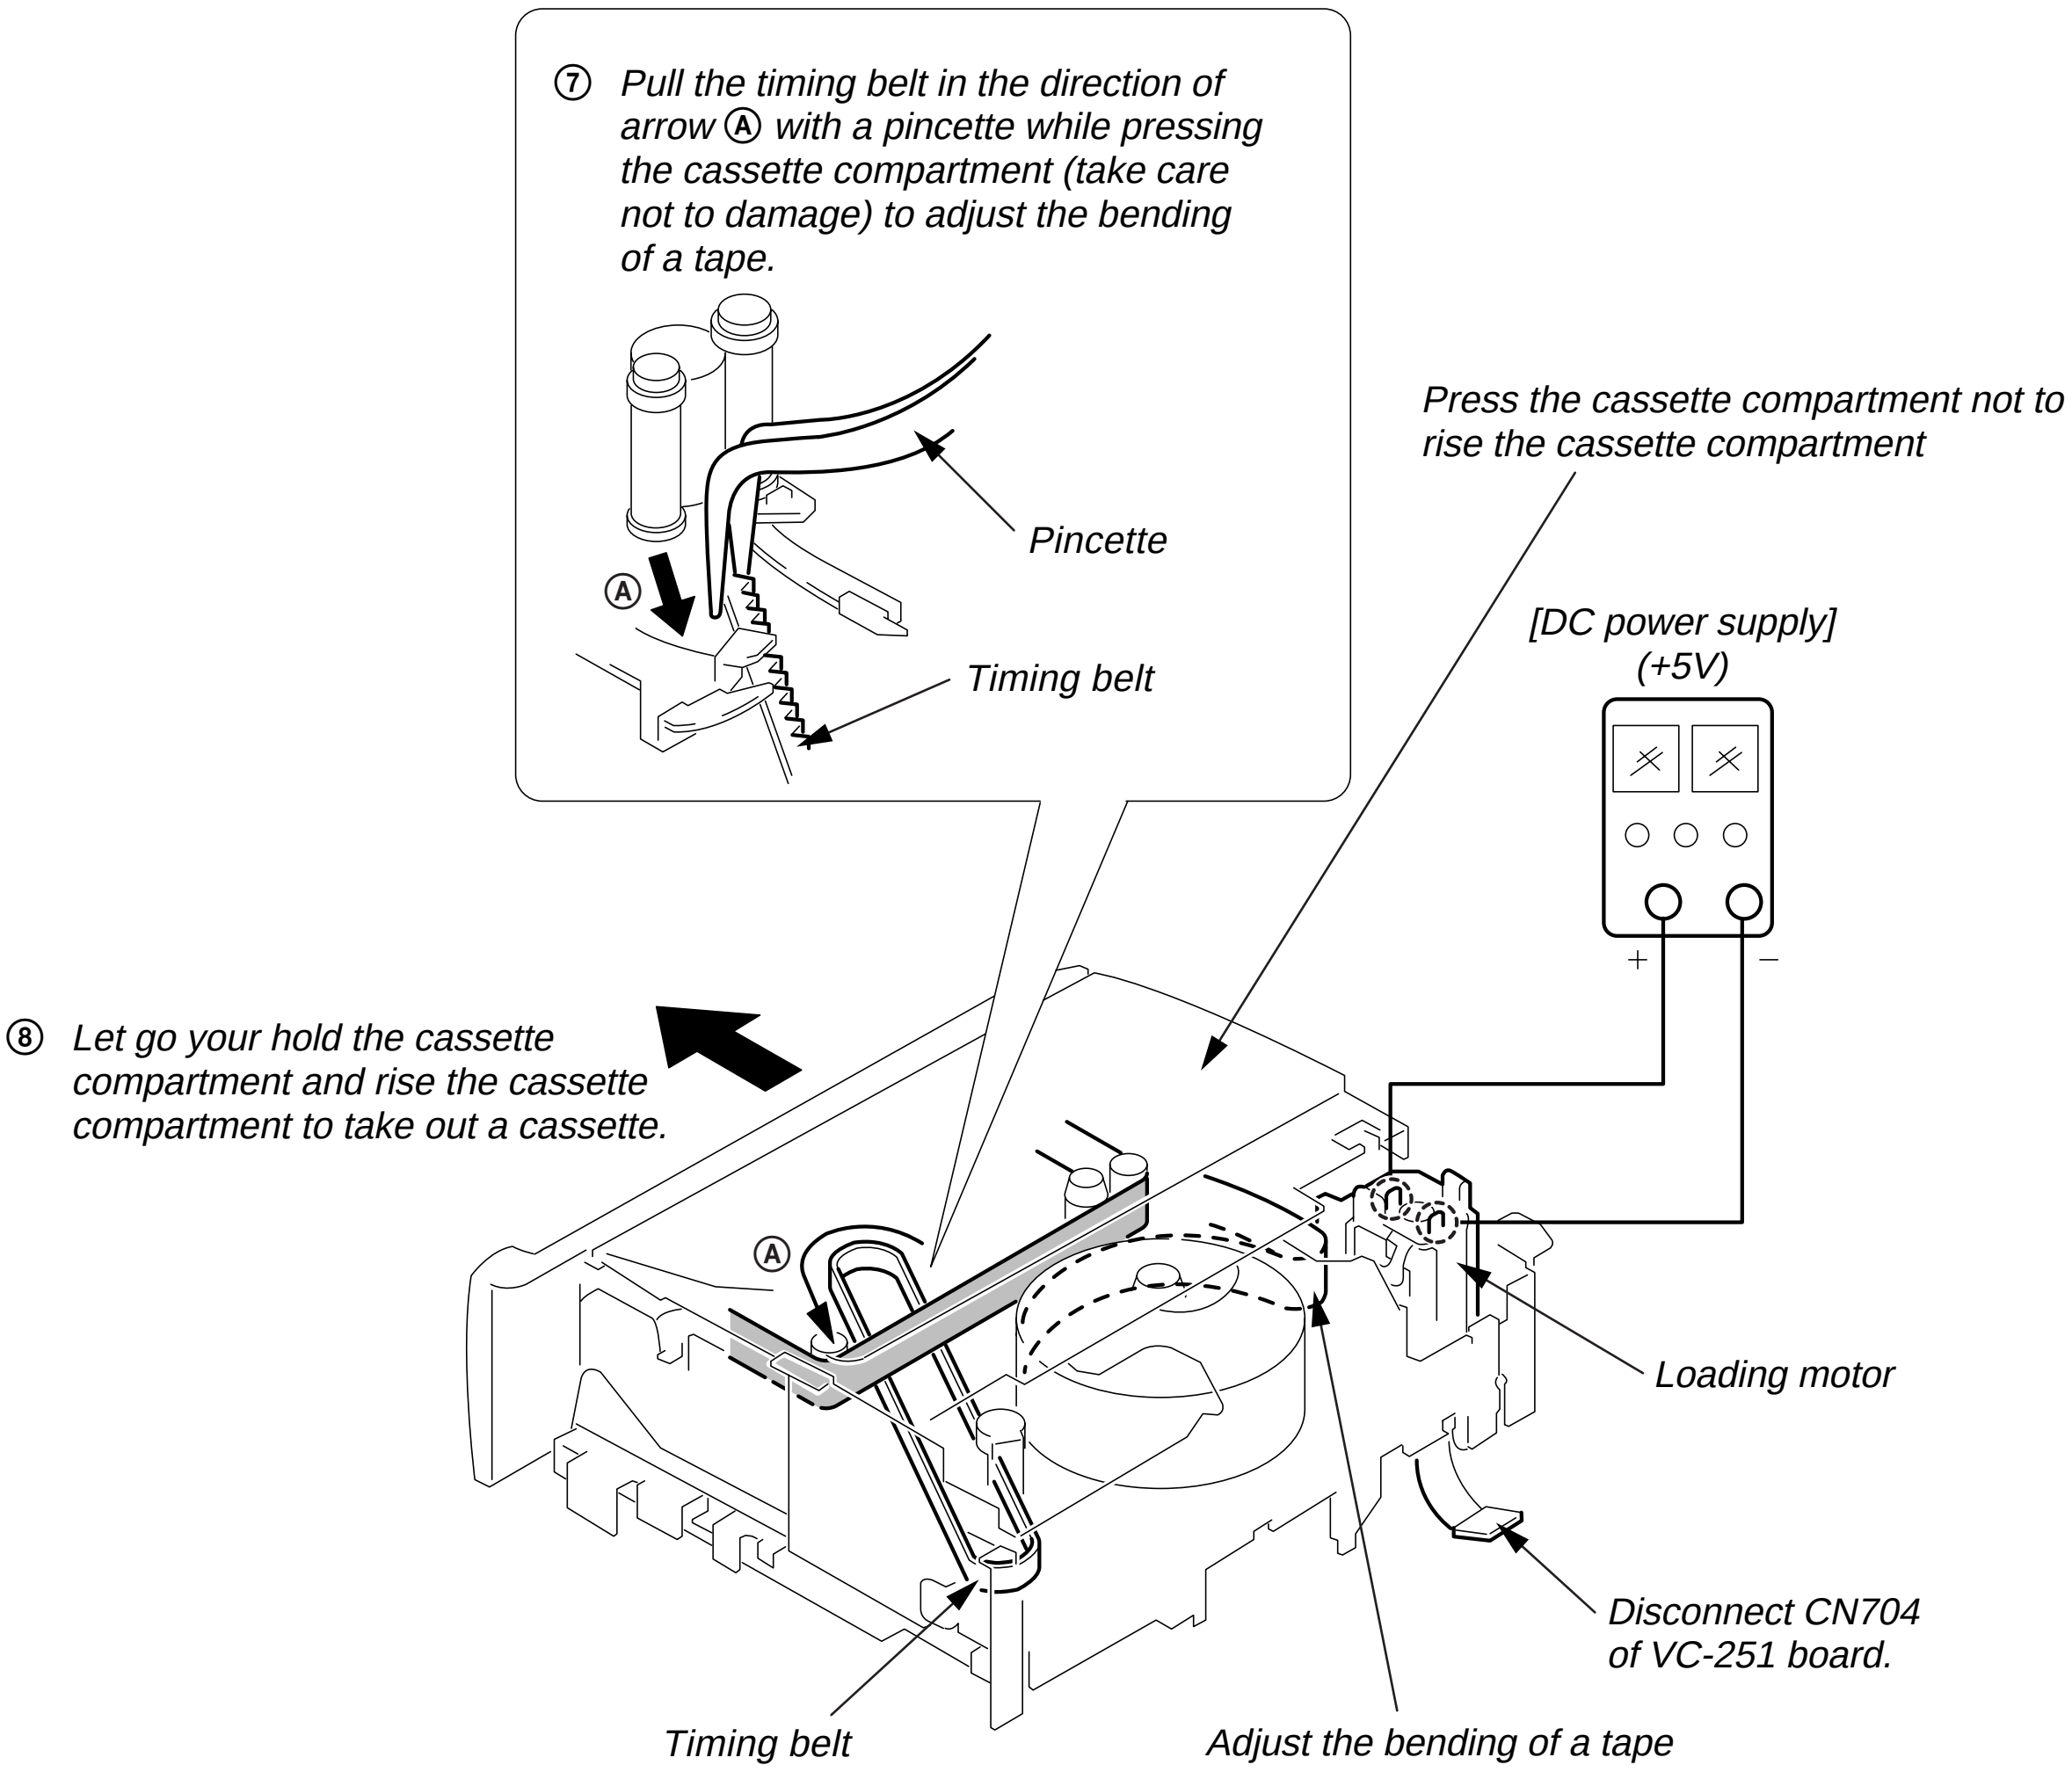

*⑦ Pull the timing belt in the direction of arrow Ⓐ with a pincette while pressing the cassette compartment (take care not to damage) to adjust the bending of a tape.*

*⑧ Let go your hold the cassette compartment and rise the cassette compartment to take out a cassette.*

Pincette
Ⓐ
Timing belt
Press the cassette compartment not to rise the cassette compartment
[DC power supply] (+5V)
+
−
Ⓐ
Loading motor
Disconnect CN704 of VC-251 board.
Timing belt
Adjust the bending of a tape

# SELF-DIAGNOSIS FUNCTION

## 1. Self-diagnosis Function

When problems occur while the unit is operating, the self-diagnosis function starts working, and displays on the viewfinder or LCD or Display window what to do. This function consists of two display; self-diagnosis display and service mode display.
Details of the self-diagnosis functions are provided in the Instruction manual.

## 2. Self-diagnosis Display

When problems occur while the unit is operating, the counter of the viewfinder or LCD or Display window shows a 4-digit display consisting of an alphabet and numbers, which blinks at 3.2 Hz. This 5-character display indicates the “repaired by:”, “block” in which the problem occurred, and “detailed code” of the problem.

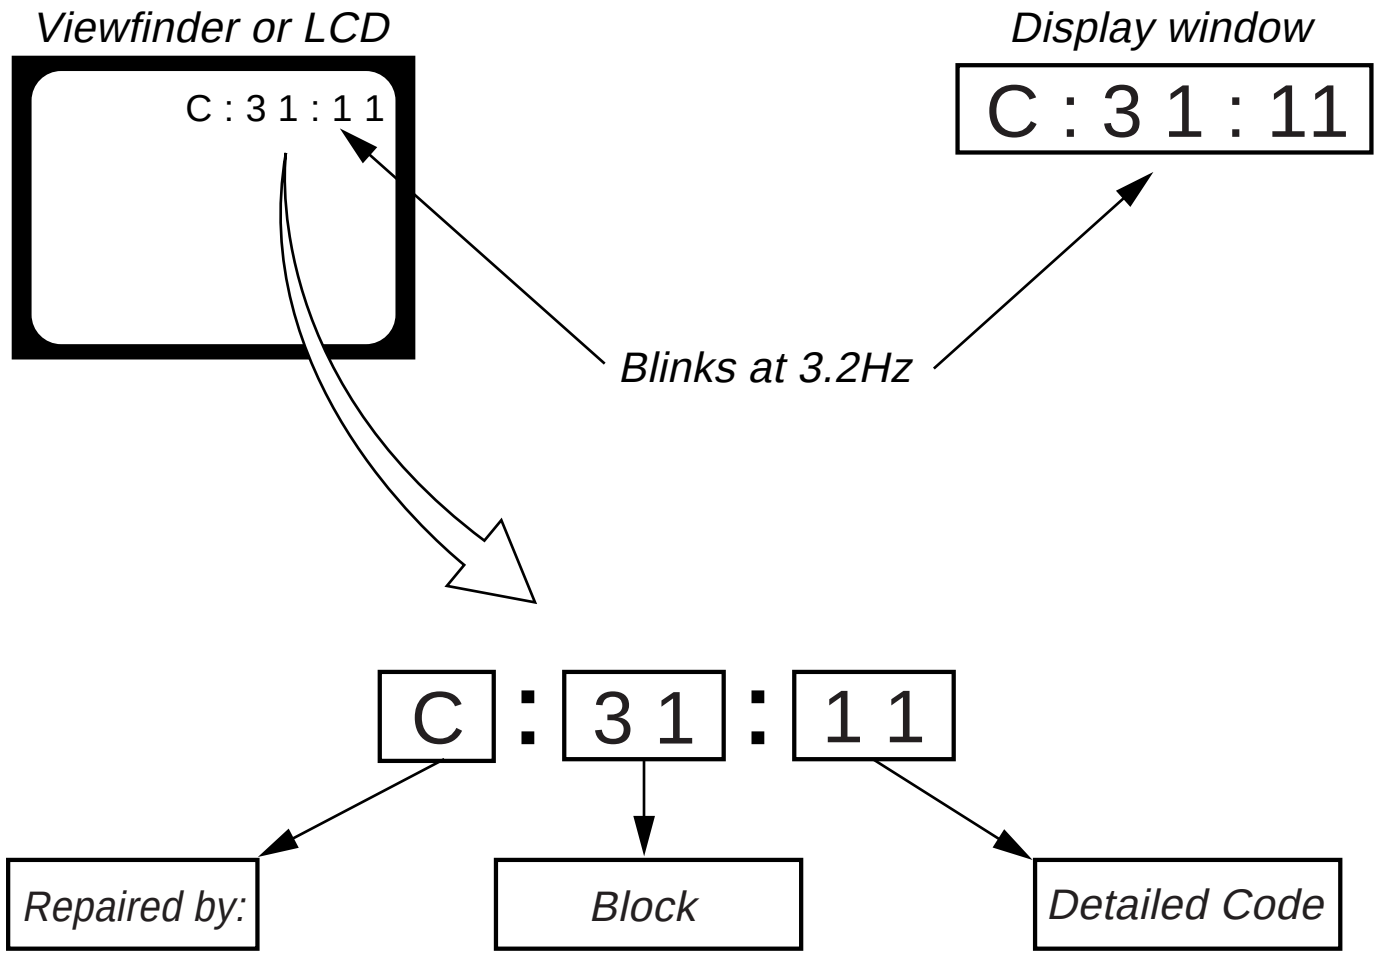

Viewfinder or LCD
C : 3 1 : 1 1
Display window
C : 3 1 : 11
Blinks at 3.2Hz
C : 3 1 : 1 1
Repaired by:
Block
Detailed Code

C : Corrected by customer
H : Corrected by dealer
E : Corrected by service engineer

Indicates the appropriate step to be taken.
E.g.
31 ....Reload the tape.
32 ....Turn on power again.

Refer to page 10 and 11. Self-diagnosis Code Table.

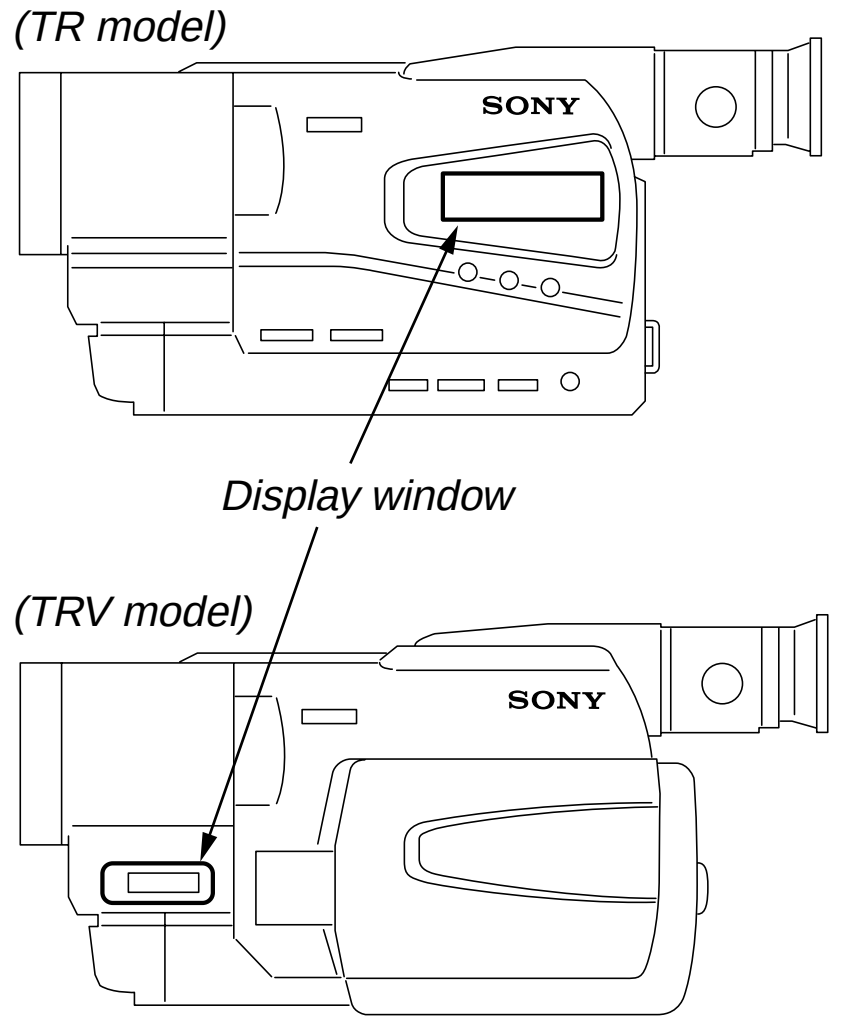

(TR model)
SONY
Display window
(TRV model)
SONY

## 3. Service Mode Display

The service mode display shows up to six self-diagnosis codes shown in the past.

### 3-1. Display Method

While pressing the “STOP” key, set the switch from OFF to “VTR or PLAYER”, and continue pressing the “STOP” key for 5 seconds continuously. The service mode will be displayed, and the counter will show the backup No. and the 5-character self-diagnosis codes.

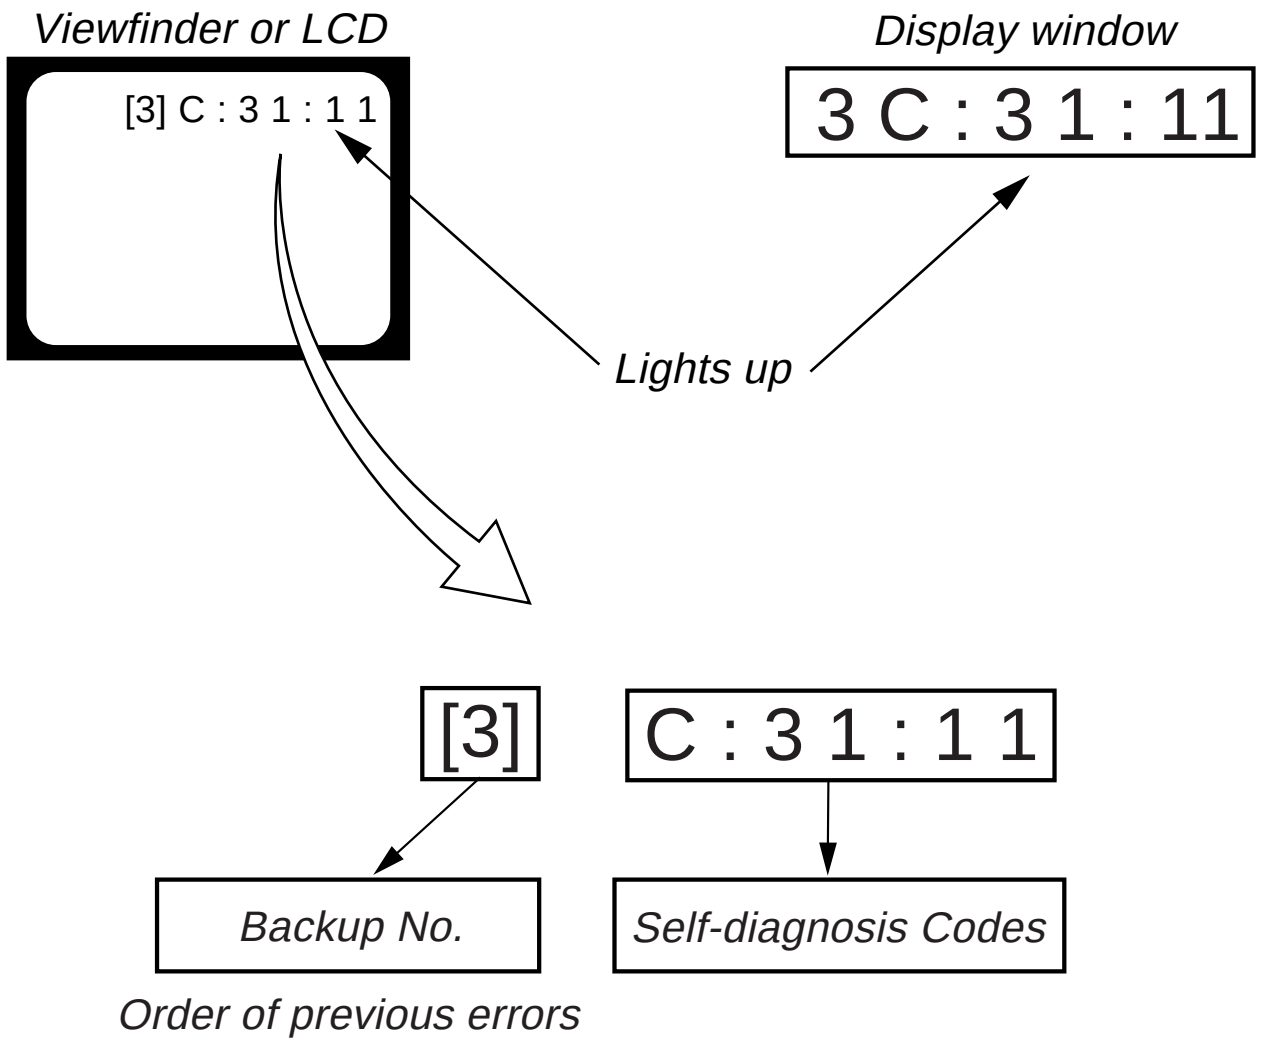

Viewfinder or LCD
[3] C : 3 1 : 1 1
Display window
3 C : 3 1 : 11
Lights up
[3]
C : 3 1 : 1 1
Backup No.
Self-diagnosis Codes
Order of previous errors

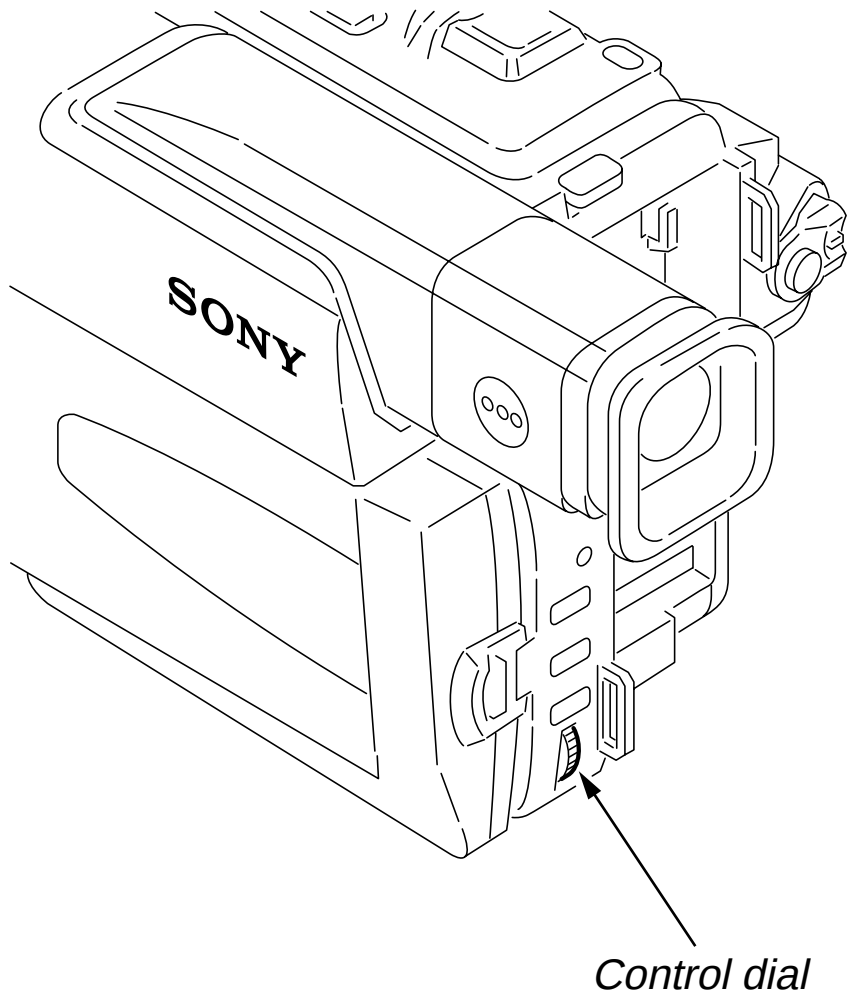

SONY
Control dial

### 3-2. Switching of Backup No.

By rotating the control dial, past self-diagnosis codes will be shown in order. The backup No. in the [] indicates the order in which the problem occurred. (If the number of problems which occurred is less than 6, only the number of problems which occurred will be shown.)

[1] : Occurred first time
[2] : Occurred second time
[3] : Occurred third time
[4] : Occurred fourth time
[5] : Occurred fifth time
[6] : Occurred the last time

### 3-3. End of Display

Turning OFF the power supply will end the service mode display.

**Note:** The “self-diagnosis display” data will be backed up by the built-in rechargeable lithium battery (CF-1000 block/CF-077 board BT101). When the cabinet (R) assembly is disconnected, the “self-diagnosis display” data will be lost by initialization.

## 4. Self-diagnosis Code Table

| Self-diagnosis Code | | | Symptom/State | Correction |
|---|---|---|---|---|
| Repaired by: | Block Function | Detailed Code | | |
| C | 0 4 | 0 0 | Non-standard battery is used. | Use the InfoLITHIUM battery. |
| C | 2 1 | 0 0 | Condensation. | Remove the cassette, and insert it again after one hour. |
| C | 2 2 | 0 0 | Video head is dirty. | Clean with the optional cleaning cassette. |
| C | 3 1 | 1 0 | LOAD direction. Loading does not complete within specified time | Load the tape again, and perform operations from the beginning. |
| C | 3 1 | 1 1 | UNLOAD direction. Loading does not complete within specified time | Load the tape again, and perform operations from the beginning. |
| C | 3 1 | 2 0 | T reel side tape slacking when unloading. | Load the tape again, and perform operations from the beginning. |
| C | 3 1 | 2 1 | S reel side tape slacking when unloading. | Load the tape again, and perform operations from the beginning. |
| C | 3 1 | 2 2 | T reel fault. | Load the tape again, and perform operations from the beginning. |
| C | 3 1 | 2 3 | S reel fault. | Load the tape again, and perform operations from the beginning. |
| C | 3 1 | 3 0 | FG fault when starting capstan. | Load the tape again, and perform operations from the beginning. |
| C | 3 1 | 3 1 | FG fault during normal capstan operations. | Load the tape again, and perform operations from the beginning. |
| C | 3 1 | 4 0 | FG fault when starting drum. | Load the tape again, and perform operations from the beginning. |
| C | 3 1 | 4 1 | PG fault when starting drum. | Load the tape again, and perform operations from the beginning. |
| C | 3 1 | 4 2 | FG fault during normal drum operations. | Load the tape again, and perform operations from the beginning. |
| C | 3 1 | 4 3 | PG fault during normal drum operations. | Load the tape again, and perform operations from the beginning. |
| C | 3 1 | 4 4 | Phase fault during normal drum operations. | Load the tape again, and perform operations from the beginning. |
| C | 3 2 | 1 0 | LOAD direction loading motor time-out. | Remove the battery or power cable, connect, and perform operations from the beginning. |
| C | 3 2 | 1 1 | UNLOAD direction loading motor time-out. | Remove the battery or power cable, connect, and perform operations from the beginning. |
| C | 3 2 | 2 0 | T reel side tape slacking when unloading. | Remove the battery or power cable, connect, and perform operations from the beginning. |
| C | 3 2 | 2 1 | S reel side tape slacking when unloading. | Remove the battery or power cable, connect, and perform operations from the beginning. |
| C | 3 2 | 2 2 | T reel fault. | Remove the battery or power cable, connect, and perform operations from the beginning. |
| C | 3 2 | 2 3 | S reel fault. | Remove the battery or power cable, connect, and perform operations from the beginning. |
| C | 3 2 | 3 0 | FG fault when starting capstan. | Remove the battery or power cable, connect, and perform operations from the beginning. |
| C | 3 2 | 3 1 | FG fault during normal capstan operations. | Remove the battery or power cable, connect, and perform operations from the beginning. |
| C | 3 2 | 4 0 | FG fault when starting drum. | Remove the battery or power cable, connect, and perform operations from the beginning. |
| C | 3 2 | 4 1 | PG fault when starting drum. | Remove the battery or power cable, connect, and perform operations from the beginning. |
| C | 3 2 | 4 2 | FG fault during normal drum operations. | Remove the battery or power cable, connect, and perform operations from the beginning. |
| C | 3 2 | 4 3 | PG fault during normal drum operations. | Remove the battery or power cable, connect, and perform operations from the beginning. |
| C | 3 2 | 4 4 | Phase fault during normal drum operations. | Remove the battery or power cable, connect, and perform operations from the beginning. |

| Self-diagnosis Code | | | Symptom/State | Correction |
|---|---|---|---|---|
| Repaired by: | Block Function | Detailed Code | | |
| E | 6 1 | 0 0 | Difficult to adjust focus<br>(Cannot initialize focus.) | Inspect the lens block focus reset sensor (Pin ⑫ of CN301 of VC-251 board) when focusing is performed when the control dial is rotated in the focus manual mode and the focus motor drive circuit (IC301 of VC-251 board) when the focusing is not performed. |
| E | 6 1 | 1 0 | Zoom operations fault<br>(Cannot initialize zoom lens.) | Inspect the lens block zoom reset sensor (Pin ⑭ of CN301 of VC-251 board) when zooming is performed when the zoom lens is operated and the zoom motor drive circuit (IC301 of VC-251 board) when zooming is not performed. |
| E | 6 2 | 0 0 | Handshake correction function does not work well. (With pitch angular velocity sensor output stopped.) | Inspect pitch angular velocity sensor (SE751 of MI-040/041 board) peripheral circuits. *1 |
| E | 6 2 | 0 1 | Handshake correction function does not work well. (With yaw angular velocity sensor output stopped.) | Inspect yaw angular velocity sensor (SE752 of MI-040/041 board) peripheral circuits. *1 |

*1: STEADY SHOT model (CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

# SECTION 1
# GENERAL

This section is extracted from instruction manual. (CCD-TRV49E/TRV58E/TRV59E/TRV78E/TRV98E model)

## Checking supplied accessories

Make sure that the following accessories are supplied with your camcorder.

## Проверка прилагаемых принадлежностей

Убедитесь, что следующие принадлежности прилагаются к Вашей видеокамере.

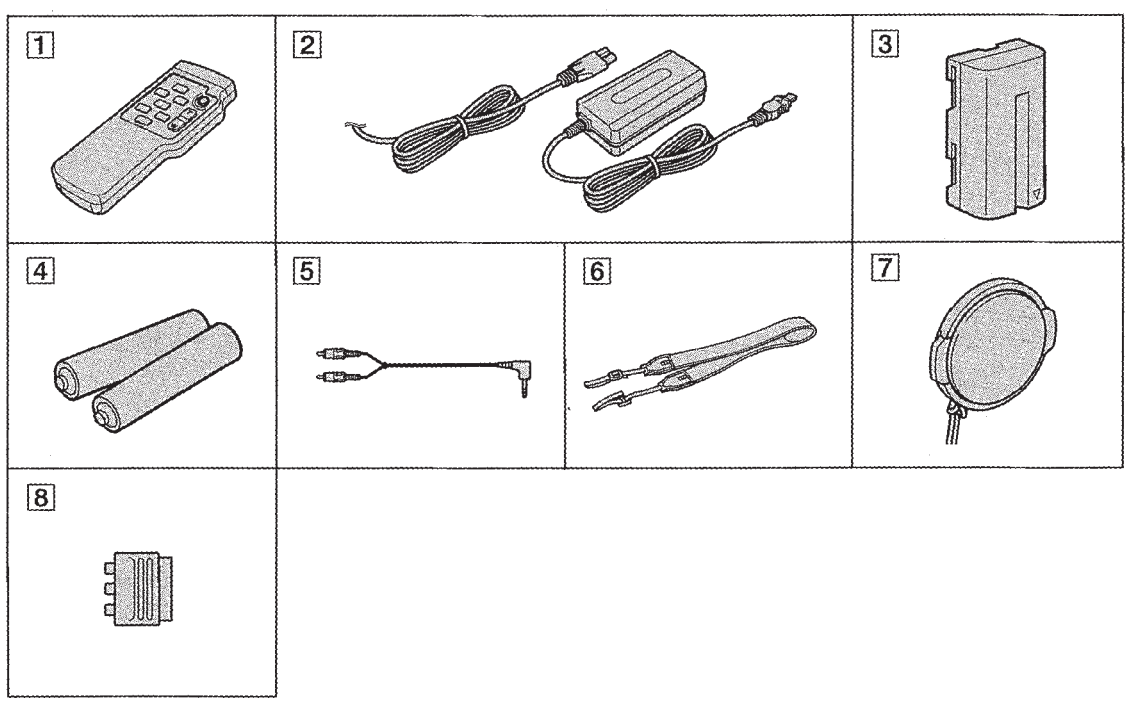

1 **Wireless Remote Commander** (1) (p. 116)
CCD-TRV49E/TRV59E/TRV78E/TRV98E only

2 **AC-L10A/L10B/L10C AC power adaptor** (1), **Mains lead** (1) (p. 15)

3 **NP-F330 battery pack** (1) (p. 14, 15)

4 **R6 (size AA) battery for Remote Commander** (2) (p. 116)
CCD-TRV49E/TRV59E/TRV78E/TRV98E only

5 **A/V connecting cable** (1) (p. 42)

6 **Shoulder strap** (1) (p. 112)

7 **Lens cap** (1) (p. 26, 113)

8 **21-pin adaptor** (1) (p. 43)
CCD-TRV58E/TRV59E/TRV78E/TRV98E
(European models only)

Contents of the recording cannot be compensated if recording or playback is not made due to a malfunction of the camcorder, storage media, etc.

1 **Беспроводный пульт дистанционного управления** (1) (стр. 116)
Только модели CCD-TRV49E/TRV59E/TRV78E/TRV98E

2 **Сетевой адаптер переменного тока AC-L10A/L10B/L10C** (1), **Провод электропитания** (1) (стр. 15)

3 **Батарейный блок NP-F330** (1) (стр. 14,15)

4 **Батарейка R6 (размера AA) для пульта дистанционного управления** (2) (стр. 116)
Только модели CCD-TRV49E/TRV59E/TRV78E/TRV98E

5 **Соединительный кабель аудио/видео** (1) (стр. 42)

6 **Плечевой ремень** (1) (стр. 112)

7 **Колпачок объектива** (1) (стр. 26, 113)

8 **21-штырьковый адаптер** (1) (стр. 43)
CCD-TRV58E/TRV59E/TRV78E/TRV98E
(Только европейские модели)

Содержание записи не может быть компенсировано в случае, если запись или воспроизведение не выполнены из-за неисправности видеокамеры, носителя записи и т.п.

## Quick Start Guide

This chapter introduces you to the basic features of your camcorder. See the page in parentheses "( )" for more information.

### 1 Connecting the mains lead (p. 20)

Use the battery pack when using your camcorder outdoors (p. 14).

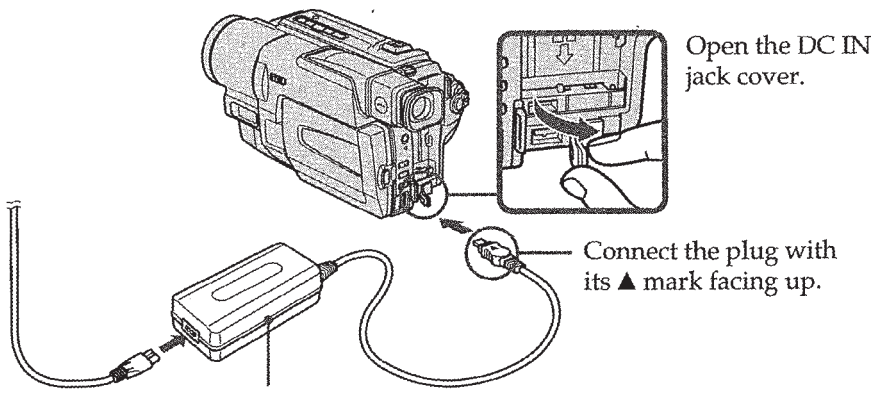
Open the DC IN jack cover.
Connect the plug with its ▲ mark facing up.

AC power adaptor (supplied)

### 2 Inserting a cassette (p. 24)

❶ Open the lid of the cassette compartment, and press EJECT. The compartment opens automatically.

❷ Insert a cassette into the cassette compartment with its window facing out and the write-protect tab on the cassette up.

❸ Close the cassette compartment by pressing the (PUSH) mark on the cassette compartment. The cassette compartment automatically goes down.
Close the lid of the cassette compartment.

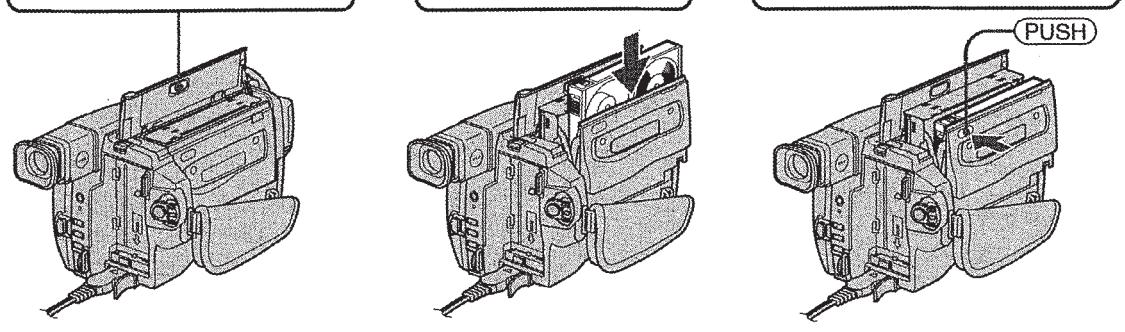

### 3 Recording a picture (p. 26)

❶ Remove the lens cap.

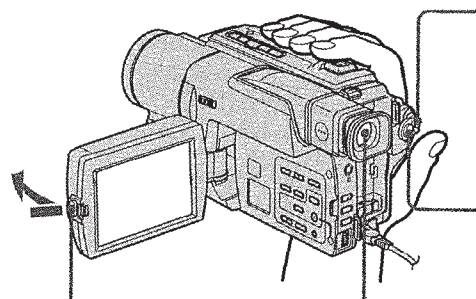

❷ Set the POWER switch to CAMERA while pressing the small green button.



❸ Open the LCD panel while pressing OPEN. The picture appears on the LCD screen.

❹ Press the red button. Your camcorder starts recording. To stop recording, press the red button again.



**Viewfinder**
When the LCD panel is closed, use the viewfinder placing your eye against its eyecup.
The picture in the viewfinder is black and white.

When you purchase your camcorder, the clock setting is set to off. If you want to record the date and time for a picture, set the clock setting before recording (p. 22)

### 4 Monitoring the playback picture on the LCD screen (p. 38)

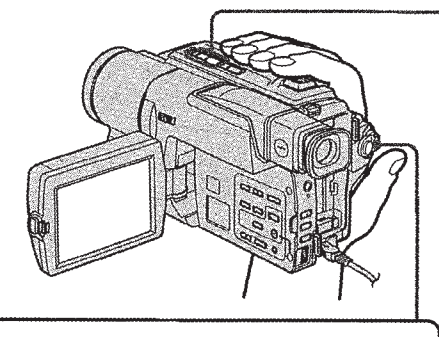

❶ Set the POWER switch to PLAYER while pressing the small green button.



❷ Press ◄◄ to rewind the tape.

❸ Press ► to start playback.



**NOTE**
Do not pick up your camcorder by holding the viewfinder, the LCD panel or the battery pack.



— Getting started —

## Using this manual

The instructions in this manual are for the five models listed in the table below. Before you start reading this manual and operating your camcorder, check the model number by looking at the bottom of your camcorder. The CCD-TRV98E is the model used for illustration purposes. Otherwise, the model name is indicated in the illustrations. Any differences in operation are clearly indicated in the text, for example, "CCD-TRV98E only."
As you read through this manual, buttons and settings on your camcorder are shown in capital letters.
e.g. Set the POWER switch to CAMERA.
When you carry out an operation, you can hear a beep sound to indicate that the operation is being carried out.

— Подготовка к эксплуатации —

## Использование данного руководства

Инструкция в данном руководстве относится к четырем моделям, перечисленным в таблице на следующей странице. Прежде, чем приступить к ознакомлению с данным руководством и эксплуатации Вашей видеокамеры, проверьте номер модели с нижней стороны видеокамеры. Для иллюстративных целей используется модель CCD-TRV98E. В противном случае название модели указывается на рисунках. Всякие отличия в работе четко указываются в тексте, например, "только модель CCD-TRV98E".
При чтении данного руководства учитывайте, что кнопки и установки на видеокамере показаны заглавными буквами.
Прим. Установите выключатель POWER в положение CAMERA.
При выполнении операции на видеокамере Вы сможете услышать зуммерный сигнал, подтверждающий выполнение операции.

### Types of differences/Типы отлиуий

| CCD- | TRV49E | TRV58E | TRV59E | TRV78E | TRV98E |
|---|---|---|---|---|---|
| Digital zoom/<br>Цифровой вариообъектив | 450× | 460× | 560× | 560× | 560× |
| Remote sensor/<br>Дистанционный датчик | ● | — | ● | ● | ● |
| SteadyShot/<br>Дистанционный датчик | — | — | — | ● | ● |

● Provided/Прилагается
— Not provided/Не прилагается

### Note on TV colour systems

TV colour systems differ from country to country. To view your recordings on a TV, you need a PAL system-based TV.

### Примечание по системам цветного телевидения

Системы цветного телевидения отличаются в зависимости от страны. Для просмотра Ваших записей на экране телевизора Вам необходимо использовать телевизор, основанный на системе PAL.

## Using this manual

### Precautions on camcorder care

**Lens and LCD screen/finder (on mounted models only)**

- **The LCD screen and the finder are manufactured using extremely high-precision technology so over 99.99% of the pixels are operational for effective use. However, there may be some tiny black points and/or bright points (white, red, blue or green in colour) that constantly appear on the LCD screen and the finder. These points are normal in the manufacturing process and do not affect the recording in any way.**
- Do not let your camcorder get wet. Keep your camcorder away from rain and sea water. Letting your camcorder get wet may cause your camcorder to malfunction. Sometimes this malfunction cannot be repaired **[a]**.
- Never leave your camcorder exposed to temperatures above 60°C (140°F ), such as in a car parked in the sun or under direct sunlight **[b]**.
- Be careful when placing the camera near a window or outdoors. Exposing the LCD screen, the finder or the lens to direct sunlight for long periods may cause malfunctions **[c]**.
- Do not directly shoot the sun. Doing so might cause your camcorder to malfunction. Take pictures of the sun in low light conditions such as dusk **[d]**.

## Использование данного руководства

### Меры предосторожности при уходе за видеокамерой

**Объектив и экран ЖКД/видоискатель (тоиько на определенных моделях)**

- **Экран ЖКД и искатель изготовлены с помощью чрезвычайно высокопрецизионной технологии таким образом, что свыше 99.99% пикселей предназначено для эффективного использования. Однако, на экране ЖКД и искателя могут постоянно появляться мелкие черные и/или яркие точки (белого, красного, синего или зеленого цвета). Появление этих точек вполне нормально для процесса съемки и никоим образом не влияет на записываемое изображение.**
- Не допускайте, чтобы видеокамера становилась влажной. Предохраняйте видеокамеру от дождя и морской воды. Если Вы намочите видеокамеру, то это может привести к неисправности аппарата, которая не всегда может быть устранена **[a]**.
- Никогда не оставляйте видеокамеру в месте с температурой выше 60°С (140°F), как, например, в автомобиле, оставленном на солнце или под прямым солнечным светом **[b]**.
- Помещая фотоаппарат вблизи окна или на открытом воздухе, соблюдайте осторожность. Попадание на экран ЖКД, искатель или объектив прямого солнечного света в течение длительного времени может быть причиной неисправностей. **[c]**.
- Не выполняйте съемку солнца непосредственно. Это может привести к неисправности Вашей видеокамеры. Выполняйте съемку изображений солнца в условиях слабой освещенности, как например, в сумерках **[d]**.

**[a]**

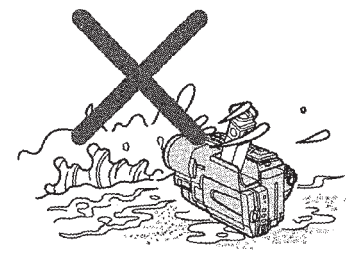

**[b]**

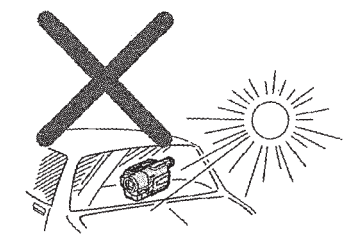

**[c]**

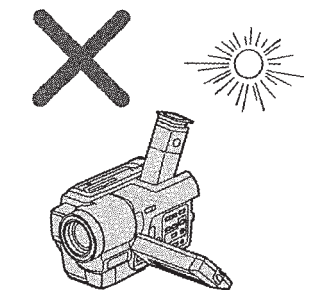

**[d]**

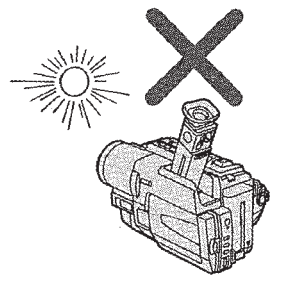

## Step 1 Preparing the power supply

## Пункт 1 Подготовка источника питания

### Installing the battery pack

Install the battery pack to use your camcorder outdoors.

Slide the battery pack down until it clicks.

### Установка батарейного блока

Установите батарейный блок для того, чтобы использовать Вашу видеокамеру вне помещения.

Передвиньте батарейный блок вниз, чтобы он защелкнулся на месте.

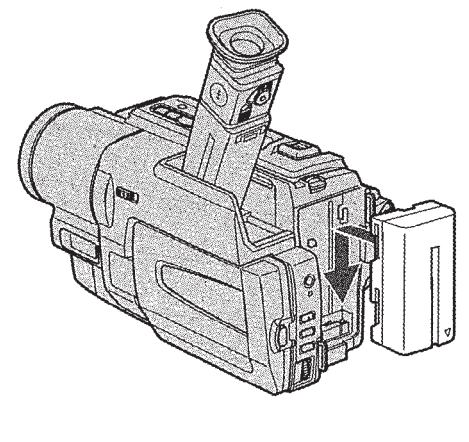

**To remove the battery pack**

Slide the battery pack out in the direction of the arrow while pressing ↓ BATT RELEASE down.

**Для снятия батарейного блока**

Передвиньте батарейный блок в направлении стрелки, нажав кнопку ↓ BATT RELEASE вниз.

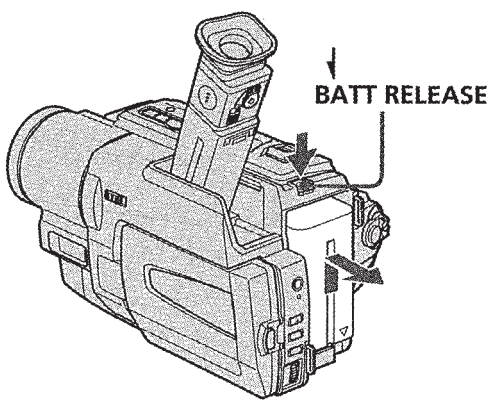

## Step 1 Preparing the power supply

### Charging the battery pack

Use the battery pack after charging it for your camcorder.
Your camcorder operates only with the "InfoLITHIUM" battery pack (L series).
See page 95 for more information about "InfoLITHIUM" battery pack.

**(1)** Open the DC IN jack cover and connect the AC power adaptor supplied with your camcorder to the DC IN jack with the plug's ▲ mark facing up.
**(2)** Connect the mains lead to the AC power adaptor.
**(3)** Connect the mains lead to the mains.
**(4)** Set the POWER switch to OFF (CHARGE). Charging begins, and the CHG lamp is lit.

When the CHG lamp goes out, the charging is completed.

## Пункт 1 Подготовка источника питания

### Зарядка батарейного блока

Используйте батарейный блок для Вашей видеокамеры после его зарядки.
Ваша видеокамера работает только с батарейным блоком "InfoLITHIUM" (серии L).
Более подробные сведения о батарейном блоке "InfoLITHIUM" приведены на стр. 95.

**(1)** Откройте крышку гнезда DC IN и подсоедините сетевой адаптер переменного тока, прилагаемый к Вашей видеокамере, к гнезду DC IN, так чтобы штекер ▲ был направлен вверх.
**(2)** Подсоедините провод электропитания к сетевому адаптеру переменного тока.
**(3)** Подсоедините провод электропитания к сетевой розетке.
**(4)** Установите переключатель POWER в положение OFF(CHARGE). Начнется зарядка, и лампочка CHG загорится.

Кода лампочка CHG погаснет, зарядка завершится.

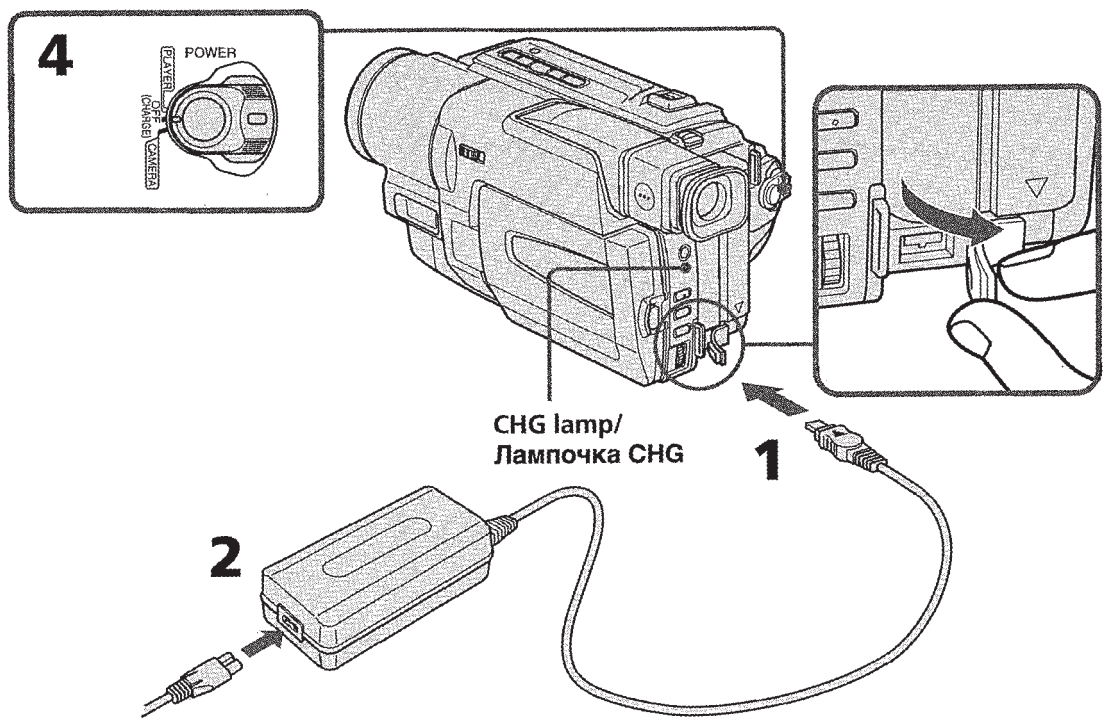

**After charging the battery pack**

Disconnect the AC power adaptor from the DC IN jack on your camcorder.

**После зарядки батарейного блока**

Отсоедините сетевой адаптер переменного тока от гнезда DC IN на Вашей видеокамере.

## Step 1 Preparing the power supply

**Notes**

- Prevent metallic objects from coming into contact with the metal parts of the DC plug of the AC power adaptor. This may cause a short-circuit, damaging the AC power adaptor.
- Keep the battery pack dry.
- When the battery pack is not to be used for a long time, charge the battery pack fully, and then use it until it fully discharges again. Do this once a year. Keep the battery pack in a cool place.

**While charging the battery pack, the CHG lamp does not light up in the following cases**

– The battery pack is not installed correctly.
– Something is wrong with the battery pack.

**If the power may go off although the battery remaining indicator indicates that the battery pack has enough power to operate**

Charge the battery pack fully again so that the indication on the battery remainiing indicator is correct.

## Пункт 1 Подготовка источника питания

**Примечания**

- Не допускайте контакта металлических предметов с металлическими частями штекера постоянного тока сетевого адаптера переменного тока. Это может привести к короткому замыканию и повреждению сетевого адаптера переменного тока.
- Храните батарейный блок в сухом состоянии.
- Если батарейный блок предполагается не использовать длительный период времени, зарядите батарейный блок полностью, а затем используйте до тех пор, пока он снова полностью не разрядится. Выполняйте это раз в год. Храните батарейный блок в прохладном месте.

**Во время зарядки батарейного блока лампочка CHG не будет загораться в следующих случаях**

– Батарейный блок установлен не правильно.
– Что-то не в порядке с батарейным блоком.

**Если питание может отключиться несмотря на то, батарейный блок достаточно заряжен для работы**

Зарядите батарейный блок полностью, так чтобы индикация времени оставшегося заряда батарейного блока была правильной.

### Charging time/Время зарядки

| Battery pack/<br>Батарейный блок | Full charge /<br>Полная зарядка |
|---|---|
| NP-F330 (supplied)/(прилагается) | 150 |
| NP-F530/F550 | 210 |
| NP-F730/F750 | 300 |
| NP-F930/F950 | 390 |
| NP-F960 | 420 |

Approximate number of minutes to charge an empty battery pack

Приблизительное время в минутах для зарядки полностью разряженного батарейного блока

### Recording time/Время записи

**CCD-TRV49E/TRV58E/TRV59E/TRV78E**

| Battery pack/ Батарейный блок | Recording with the viewfinder/ Запись с помощью видоискателя | | Recording with the LCD screen/ Запись с помощью экрана ЖКД | |
|---|---|---|---|---|
| | Continuous* Непрерывкая* | Typical** Типичная** | Continuous* Непрерывная* | Typical** Типичная** |
| NP-F330 (supplied)/(прилагается) | 140 | 75 | 120 | 65 |
| NP-F530 | 245 | 135 | 205 | 110 |
| NP-F550 | 280 | 155 | 240 | 130 |
| NP-F730 | 500 | 275 | 410 | 225 |
| NP-F750 | 580 | 320 | 490 | 270 |
| NP-F930 | 780 | 430 | 650 | 355 |
| NP-F950 | 900 | 495 | 750 | 410 |
| NP-F960 | 1035 | 570 | 880 | 490 |

**CCD-TRV98E**

| Battery pack/ Батарейный блок | Recording with the viewfinder/ Запись с помощью видоискателя | | Recording with the LCD screen/ Запись с помощью экрана ЖКД | |
|---|---|---|---|---|
| | Continuous* Непрерывкая* | Typical** Типичная** | Continuous* Непрерывная* | Typical** Типичная** |
| NP-F330 (supplied)/(прилагается) | 140 | 75 | 95 | 50 |
| NP-F530 | 245 | 135 | 155 | 85 |
| NP-F550 | 280 | 155 | 190 | 105 |
| NP-F730 | 500 | 275 | 315 | 175 |
| NP-F750 | 580 | 320 | 385 | 210 |
| NP-F930 | 780 | 430 | 495 | 270 |
| NP-F950 | 900 | 495 | 590 | 325 |
| NP-F960 | 1035 | 570 | 700 | 385 |

Approximate number of minutes when you use a fully charged battery pack

* Approximate continuous recording time at 25°C (77°F). The battery life will be shorter if you use your camcorder in a cold environment.

** Approximate number of minutes when recording while you repeat recording start/stop, zooming and turning the power on/off. The actual battery life may be shorter.

Приблизительное время в минутах при использовании полностью заряженного батарейного блока

* Приблизительное время непрерывной записи при температуре 25°C (77°F). При использовании видеокамеры в холодных условиях срок службы батарейного блока будет короче.

** Приблизительное время в минутах при записи с неоднократным пуском/остановкой записи, наездом видеокамеры и включением/выключением питания. Фактический срок службы заряда батарейного блока может быть короче.

### Playing time/Время воспроизведения

**CCD-TRV49E/TRV58E/TRV59E/TRV78E**

| Battery pack/ Батарейный блок | Playing time on LCD screen/ Время воспроизведения на экране ЖКД | Playing time with LCD closed/ Время воспроизведения при закрытом ЖКД |
|---|---|---|
| NP-F330 (supplied)/(прилагается) | 120 | 145 |
| NP-F530 | 205 | 260 |
| NP-F550 | 240 | 295 |
| NP-F730 | 410 | 525 |
| NP-F750 | 490 | 610 |
| NP-F930 | 650 | 825 |
| NP-F950 | 750 | 930 |
| NP-F960 | 880 | 1090 |

**CCD-TRV98E**

| Battery pack/ Батарейный блок | Playing time on LCD screen/ Время воспроизведения на экране ЖКД | Playing time with LCD closed/ Время воспроизведения при закрытом ЖКД |
|---|---|---|
| NP-F330 (supplied)/(прилагается) | 95 | 145 |
| NP-F530 | 155 | 260 |
| NP-F550 | 190 | 295 |
| NP-F730 | 315 | 525 |
| NP-F750 | 385 | 610 |
| NP-F930 | 495 | 825 |
| NP-F950 | 590 | 930 |
| NP-F960 | 700 | 1090 |

Approximate number of minutes when you use a fully charged battery pack

The battery life will be shorter if you use your camcorder in a cold environment.

**What is "InfoLITHIUM"?**
The "InfoLITHIUM" is a lithium ion battery pack which can exchange data such as battery consumption with compatible electronic equipment. This unit is compatible with the "InfoLITHIUM" battery pack (L series). Your camcorder operates only with the "InfoLITHIUM" battery. "InfoLITHIUM" L series battery packs have the InfoLITHIUM L mark. "InfoLITHIUM" is a trademark of Sony Corporation.

Приблизительное время в минутах при использовании полностью заряженного батарейного блока

При использовании видеокамеры в холодных условиях срок службы батарейного блока будет короче.

**Что такое "InfoLITHIUM"?**
"InfoLITHIUM" представляет собой литиево-ионный батарейный блок, который может обмениваться данными, такими как потребление заряда батарейного блока, с совместимой электронной аппаратурой. Это устройство совместимо с батарейным блоком "InfoLITHIUM" (серии L). Ваша видеокамера работает только с батарейным блоком "InfoLITHIUM". На батарейных блоках серии "InfoLITHIUM" L имеется знак InfoLITHIUM L. "InfoLITHIUM" является торговой маркой корпорации Sony Corporation.

### Connecting to the mains

When you use your camcorder for a long time, we recommend that you power it from the mains using the AC power adaptor.

**(1)** Open the DC IN jack cover, and connect the AC power adaptor to the DC IN jack on your camcorder with the plug's ▲ mark facing up.
**(2)** Connect the mains lead to the AC power adaptor.
**(3)** Connect the mains lead to the mains.

### Подсоединение к сетевой розетке

Если Вы собираетесь использовать видеокамеру длительное время, рекомендуется использовать питание от электрической сети с помощью сетевого адаптера переменного тока.

**(1)** Откройте крышку гнезда DC IN и подсоедините сетевой адаптер переменного тока к гнезду DC IN на Вашей видеокамеру, так чтобы знак ▲ на штекере был обращен вверх.
**(2)** Подсоедините провод электропитания к сетевому адаптеру переменного тока.
**(3)** Подсоедините провод электропитания к сетевой розетке.

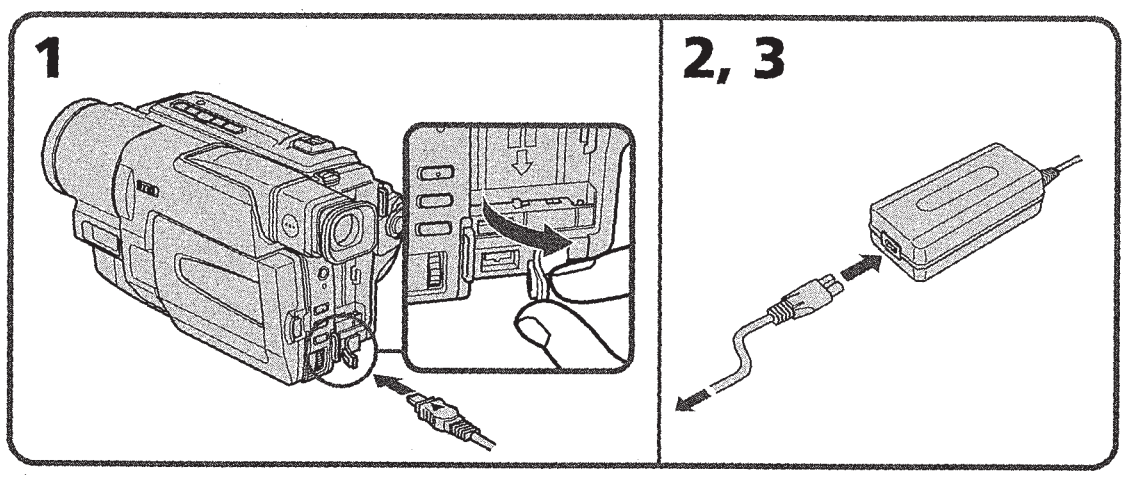

## Step 1 Preparing the power supply

**PRECAUTION**
The set is not disconnected from the AC power source (mains) as long as it is connected to the mains, even if the set itself has been turned off.

**Notes**
- The AC power adaptor can supply power even if the battery pack is attached to your camcorder.
- The DC IN jack has "source priority". This means that the battery pack cannot supply any power if the mains lead is connected to the DC IN jack, even when the mains lead is not plugged into the mains.
- Place the AC power adaptor near mains. While using the AC power adaptor, if any trouble occurs with this unit, disconnect the plug from the mains as soon as possible to cut off the power.

**Using a car battery**
Use Sony DC Adaptor/Charger (optional).

## Пункт 1 Подготовка источника питания

**МЕРА ПРЕДОСТОРОЖНОСТИ**
Аппарат не отключается от источника питания переменного тока (электрической сети) до тех пор, пока он остается подсоединенным к электрической сети, даже если сам аппарат и выключен.

**Примечания**
- Питание от сетевого адаптера переменного тока может подаваться даже в случае, если батарейный блок прикреплен к Вашей видеокамере.
- Гнездо DC IN имеет "приоритет источника". Это значит, что питание от батарейного блока не может подаваться, если провод электропитания подсоединен к гнезду DC IN, даже если провод электропитания и не подсоединен к сетевой розетке.
- Разместите сетевой адаптер переменного тока возле электросети. Во время использования сетевого адаптера переменного тока, если с данным аппаратом возникнет какая-либо проблема, отсоедините штекер от электросети как можно быстрее для отключения питания.

**Использование автомобильного аккумулятора**
Используйте адаптлер/зарядное устройство постоянного тока Sony (не прилагается).

## Step 2 Setting the date and time

Set the date and time settings when you use your camcorder for the first time.

If you do not use your camcorder for about 4 months, the date and time settings may be released (bars may appear) because the built-in rechargeable lithium cell in your camcorder will have been discharged.
First, set the year, then the month, the day, the hour and then the minute.

**(1)** While your camcorder is in CAMERA mode, press MENU to display the menu.
**(2)** Turn the SEL/PUSH EXEC dial to select 🖺, then press the dial.
**(3)** Turn the SEL/PUSH EXEC dial to select CLOCK SET, then press the dial.
**(4)** Turn the SEL/PUSH EXEC dial to adjust the desired year, then press the dial.
**(5)** Set the month, day and hour by turning the SEL/PUSH EXEC dial and pressing the dial.
**(6)** Set the minute by turning the SEL/PUSH EXEC dial and pressing the dial by the time signal. The clock starts to move.
**(7)** Press MENU to make the menu disappear. The time indicator appears.

## Пункт 2 Установка даты и времени

Если Вы используете Вашу видеокамеру впервые, выполните установки даты и времени.

Если Вы не собираетесь использовать Вашу видеокамеру около 4 месяцев, установки даты и времени могут быть стерты (могут появиться черточки), потому что встроенный перезаряжаемый литиевый элемент в Вашей видеокамере разрядится.
Сначала установите год, затем месяц, день, час, а затем минуту.

**(1)** В режиме видеокамеры CAMERA, нажмите кнопку MENU для отображения меню.
**(2)** Поверните диск SEL/PUSH EXEC для выбора индикации 🖺, а затем нажмите диск.
**(3)** Поверните диск SEL/PUSH EXEC для выбора команды CLOCK SET, а затем нажмите диск.
**(4)** Поверните диск SEL/PUSH EXEC для выбора нужного года, а затем нажмите диск.
**(5)** Установите месяц, день и час путем вращения диска SEL/PUSH EXEC и нажимания диска.
**(6)** Установите минуту путем вращения диска SEL/PUSH EXEC и нажимания диска в момент передачи сигнала точного времени. Часы начнут функционировать.
**(7)** Нажмите кнопку MENU для того, чтобы закрыть меню. Появится индикатор времени.

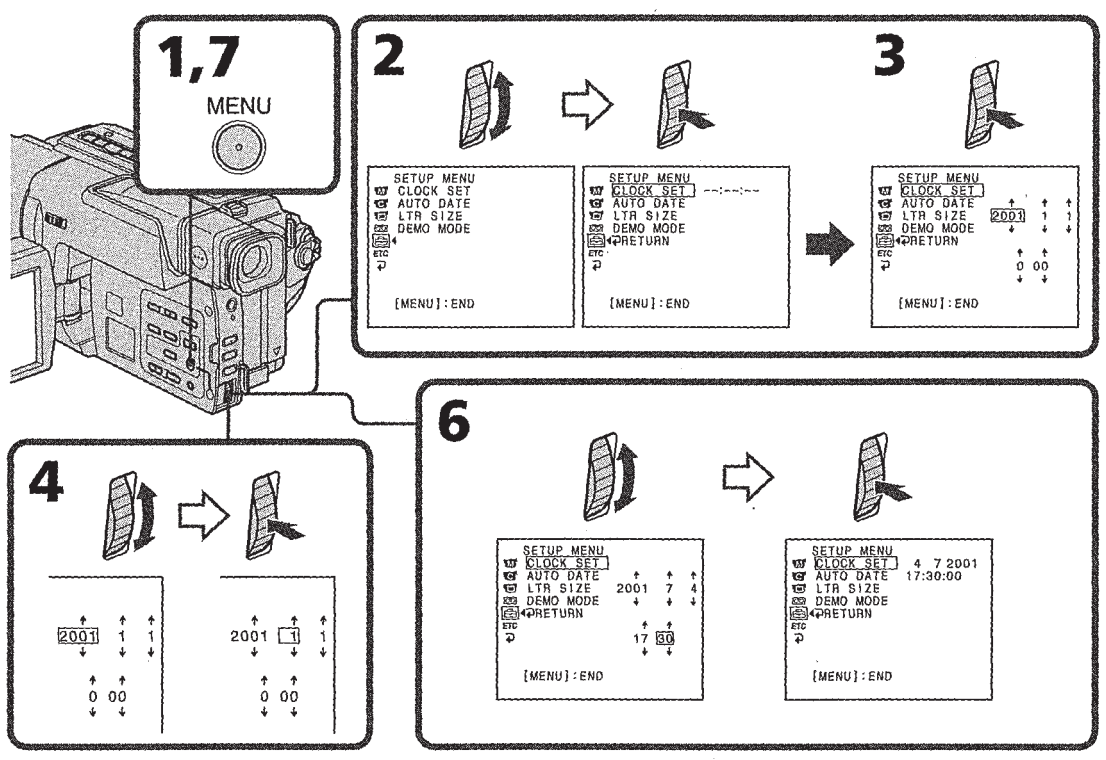

## Step 2 Setting the date and time

### To check the preset date and time

Press DATE to display the date indicator.
Press TIME to display the time indicator.
Press DATE (or TIME) and then press TIME (or DATE) to simultaneously display the date and time indicator.
Press DATE and/or TIME again. The date and/or time indicator disappears.

**The year changes as follows:**

1995 ←····→ 2001 ←····→ 2079

**Auto date function**
When you use your camcorder for the first time, turn it on and reset the date and time to your local time before you start recording (p. 22). The date is automatically recorded for 10 seconds after you start recording **(Auto date function)**. This function works only once a day.

**Note on the time indicator**
The internal clock of your camcorder operates on a 24-hour cycle.

**Note on the auto date function**
You can change the AUTO DATE setting by selecting ON or OFF in the menu settings. The auto date function automatically displays the date once a day.
However, the date may automatically appear more than once a day if:
– you reset the date and time.
– you eject and insert the tape again.
– you stop recording within 10 seconds.
– you set AUTO DATE to OFF once and set it back to ON in the menu settings.

## Пункт 2 Установка даты и времени

### Для проверки предварительно установленных даты и времени

РНажмите кнопку DATE для отображения индикатора даты.
Нажмите кнопку TIME для отображения индикатора времени.
Нажмите кнопку DATE (или TIME), а затем нажмите кнопку TIME (или DATE) для одновременного отображения индикатора даты и времени.
Нажмите еще раз кнопку DATE и/или TIME. Индикатор даты и/или времени исчезнет.

**Год изменяется следующим образом:**

**Функция автоматической даты**
Если Вы используете видеокамеру первый раз, включите ее и переустановите дату и время в соответствии со своим часовым поясом, прежде чем начать запись (стр. 22). Даты будет автоматически записываться в течение 10 секунд после начала записи **(функция автоматической даты)**. Эта функция работает один раз в день.

**Примечание по индикатору времени**
Встроенные часы Вашей видеокамеры работают в 24-часовом режиме.

**Примечание по функции автоматической даты**
Вы можете изменять установку AUTO DATE путем выбора положений ON или OFF в установках меню. Функция автоматической даты автоматически отображает дату один раз в день.
Однако, дата может автоматически появляться больше одного раза при:
– переустановке даты и времени.
– выталкивании и установке ленты обратно на место.
– остановке записи в пределах 10 секунд.
– установке команды AUTO DATE в положение OFF и возвращении в положение ON в установках меню.

## Step 3 Inserting a cassette

When you want to record in the Hi8 system, use Hi8 video cassettes **Hi8**.
**(1)** Prepare the power supply (p. 14).
**(2)** Open the lid of the cassette compartment, and press EJECT. The cassette compartment opens automatically.
**(3)** Insert a cassette with its window facing out and the write-protect tab on the cassette up.
**(4)** Close the cassette compartment by pressing the PUSH mark on the cassette compartment. The cassette compartment automatically goes down.
**(5)** Close the lid of the cassette compartment.

## Пункт 3 Установка кассеты

Если Вы хотите выполнять запись в системе Hi8, используйте видеокассету Hi8 **Hi8**.
**(1)** Подготовьте источник питания (стр. 14).
**(2)** Откройте крышку кассетного отсека и нажмите кнопку EJECT. Кассетный отсек откроется автоматически.
**(3)** Вставьте кассету так, чтобы окошко было обращено наружу, а лепесток защиты от записи на кассете – вверх.
**(4)** Закройте кассетный отсек, нажав метку PUSH на кассетном отсеке. Кассетный отсек автоматически опустится вниз.
**(5)** Закройте крышку кассетного отсека.

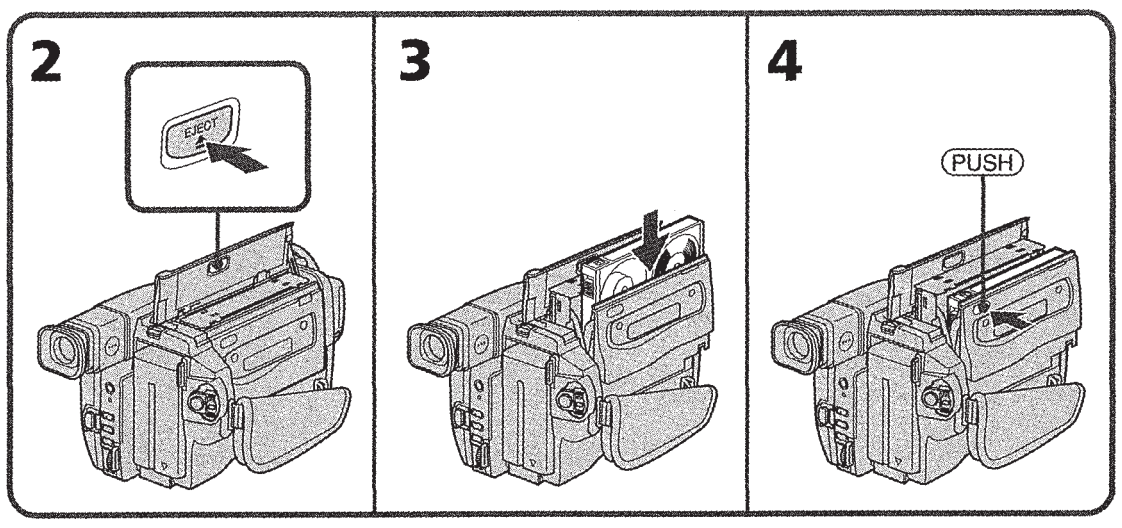

**To eject a cassette**
Follow the procedure above, and eject the cassette in step **3**.

**Для извлечения кассеты**
Следуйте описанной выше процедуре и извлеките кассету в пункте **3**.

## Step 3 Inserting a cassette

**Notes**
- Do not press the cassette compartment down. Doing so may cause a malfunction.
- The cassette compartment may not be closed when you press any part of the cassette compartment other than the (PUSH) mark.
- Do not pick up your camcorder by holding the lid of the cassette compartment.

## Пункт 3 Установка кассеты

**Примечания**
- Не нажимайте вниз кассетный отсек. Это может привести к неисправности.
- Кассетный отсек может не закрыться, если Вы нажмете на какое-либо другое место на кассетном отсеке, а не на отметку (PUSH).
- Не поднимайте Вашу видеокамеру, удерживая ее за крышку кассетного отсека.

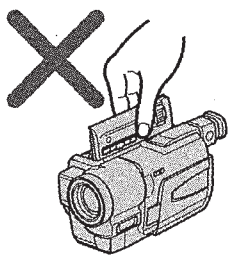

**To prevent accidental erasure**
Slide the write-protect tab on the cassette to expose the red mark.

**Для предотвращения случайного стирания**
Передвиньте лепесток защиты записи на кассете, так чтобы появилась красная метка.



---

— Recording – Basics —

## Recording a picture

Your camcorder automatically focuses for you.
- **(1)** Remove the lens cap by pressing both knobs on its sides and attach the lens cap to the grip strap.
- **(2)** Install the power source and insert a cassette. See "Step 1" to "Step 3" for more information (p. 14 to 25).
- **(3)** Set the POWER switch to CAMERA while pressing the small green button. Your camcorder is set to the standby mode.
- **(4)** Open the LCD panel while pressing OPEN. The viewfinder automatically turns off.
- **(5)** Press START/STOP. Your camcorder starts recording. The REC indicator appears. The camera recording lamp located on the front of your camcorder lights up. To stop recording, press START/STOP again.
  The recording lamp lights up in the viewfinder when you record with the viewfinder.

— Запись – Основные положения —

## Запись изображения

Ваша видеокамера автоматически выполняет фокусировку за Вас.
- **(1)** Снимите крышку объектива, нажав обе кнопки на ее кромке, и прикрепите крышку объектива к ремню для захвата.
- **(2)** Установите источник питания и вставьте кассету. Подробные сведения приведены в "Пункте 1" до "Пункте 3" (стр. 14 – 25).
- **(3)** Нажав маленькую зеленую кнопку, установите переключатель POWER в положение CAMERA. Ваша видеокамера переключится в режим ожидания.
- **(4)** Нажав кнопку OPEN, откройте панель ЖКД. Видоискатель выключится автоматически.
- **(5)** Нажмите кнопку START/STOP. Ваша видеокамера начнет запись. Появится индикатор REC. Высветится также лампочка записи, расположенная на передней панели видеокамеры. Для остановки записи нажмите кнопку START/STOP еще раз.
  При записи с помощью видоискателя, внутри него высветится лампочка записи.

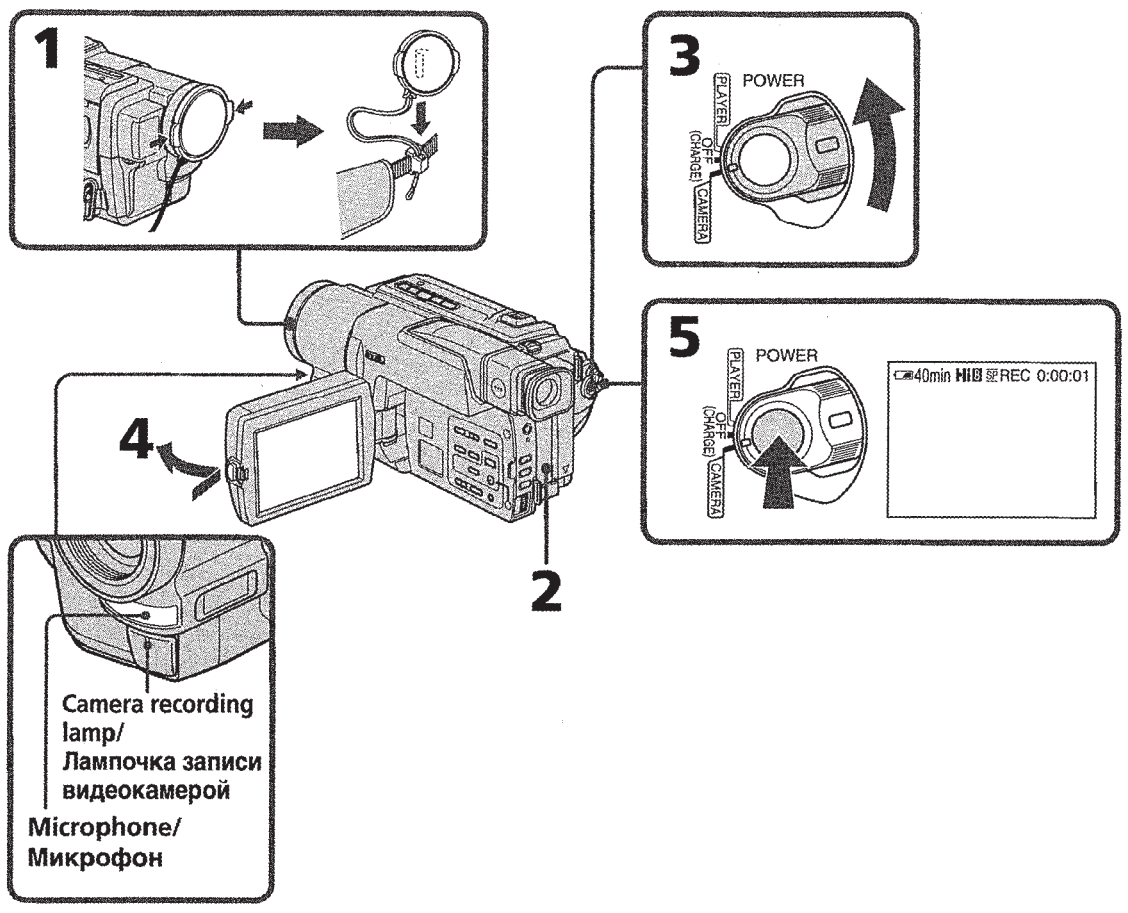

---

## Recording a picture

**Note**
Fasten the grip strap firmly. Do not touch the built-in microphone during recording.

**To enable smooth transition**
You can make the transition between the last scene you recorded and the next scene smooth as long as you do not eject the cassette even if you turn off your camcorder. When you change the battery pack, set the POWER switch to OFF (CHARGE).

**If you leave your camcorder in the standby mode for 5 minutes while the cassette is inserted**
Your camcorder automatically turns off. This is to save battery power and to prevent battery and tape wear. To resume the standby mode, set the POWER switch to OFF (CHARGE) once, then turn it to CAMERA again.

**To set the counter to 0:00:00**
Press COUNTER RESET (p. 113).

### After recording

- **(1)** Set the POWER switch to OFF (CHARGE).
- **(2)** Close the LCD panel.
- **(3)** Eject the cassette.
- **(4)** Attach the lens cap

**After using your camcorder**
Remove the battery pack from your camcorder to avoid turning on the built-in light accidentally.

## Запись изображения

**Примечания**
Плотно пристегните ремень для захвата видеокамеры. Не прикасайтесь к встроенному микрофону во время записи.

**Для обеспечения плавного перехода**
Вы можете выполнять плавный переход между последним записанным эпизодом и следующим эпизодом до тех пор, пока не извлечете кассету, даже при выключении Вашей видеокамеры. При замене батарейного блока установите переключатель POWER в положение OFF (CHARGE).

**Если Вы оставите Вашу видеокамеру в режиме готовности на 5 минут при вставленной кассете**
Ваша видеокамера выключится автоматически. Это предотвращает расход заряда батарейного блока и износ ленты. Для возобновления режима ожидания установите сначала переключатель POWER в положение OFF (CHARGE), а затем снова верните его в положение CAMERA.

**Для установки счетчика в положение 0:00:00**
Нажмите кнопку COUNTER RESET (стр. 113).

### После записи

- **(1)** Установите переключатель POWER в положение OFF (CHARGE).
- **(2)** Закройте панель ЖКД.
- **(3)** Извлеките кассету.
- **(4)** Присоедините колпачок объектива

**После использования видеокамеры**
Выньте батарейный блок из Вашей видеокамеры во избежание случайного включения встроенной подсветки.

---

## Recording a picture

### Adjusting the LCD screen

The LCD panel moves about 90 degrees to the viewfinder side and about 180 degrees to the lens side.
If you turn the LCD panel over so that it faces the other way, the ☺ indicator appears on the screen (**Mirror mode**).

## Запись изображения

### Регулировка экрана ЖКД

Панель ЖКД может передвигаться примерно на 90 градусов в сторону видоискателя и примерно на 180 градусов в сторону объектива.
Если Вы повернете панель ЖКД так, что будет направлена в другую сторону, на экране появится индикатор ☺ (**Зеркальный режим**).

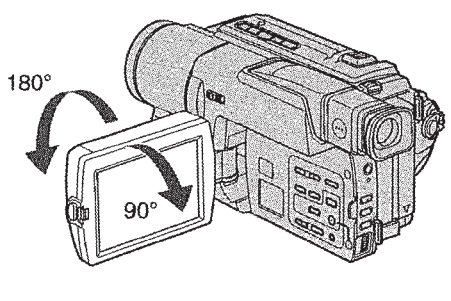

When closing the LCD panel, set it vertically until it clicks, and swing it into the camcorder body.

**Note**
When using the LCD screen except in the mirror mode, the viewfinder automatically turns off.

**When you use the LCD screen outdoors in direct sunlight**
The LCD screen may be difficult to see. If this happens, we recommend that you use the viewfinder.

**Picture in the mirror mode**
The picture on the LCD is a mirror-image. However, the picture will be normal when recorded.

**During recording in the mirror mode**
DATE and TIME on your camcorder do not work.

При закрывании панели ЖКД установите ее вертикально, пока не раздастся щелчок, а затем присоедините ее к корпусу видеокамеры.

**Примечание**
При использовании экрана ЖКД видоискатель автоматически выключается, кроме зеркального режима.

**Если Вы используете экран ЖКД вне помещения под прямым солнечным светом**
Возможно будет трудно разглядеть экран ЖКД. В этом случае рекомендуется использовать видоискатель.

**Изображение в зеркальном режиме**
Изображение на экране ЖКД будет отображаться зеркально. Однако запись изображения будет нормальной.

**Во время записи в зеркальном режиме**
Функции DATE и TIME на Вашей видеокамере не работают.

## Recording a picture

**Indicators in the mirror mode**
- The STBY indicator appears as II● and REC as ●. Some of the other indicators appear mirror-reversed and others are not displayed.
- The date appears mirror-reversed when the auto date function is working. However, the date will be normal when recorded.

### Adjusting the brighthess of the LCD screen

Adjust the brightness of the LCD screen with LCD BRIGHT in ▣ in the menu settings.

## Запись изображения

**Индикаторы в зеркальном режиме**
- Индикатор STBY появится в виде II●, а индикатор REC в виде ●. Некоторые другие индикаторы появятся в зеркально отображенном виде, а некоторые из них не будут отображаться совсем.
- В случае, если работает функция автоматической даты, то дата будет отображаться зеркально, однако на записи дата будет в нормальном виде.

### Регулировка яркости экрана ЖКД

Отрегулируйте яркость экрана ЖКД с помощью команды LCD BRIGHT в ▣ в установках меню.

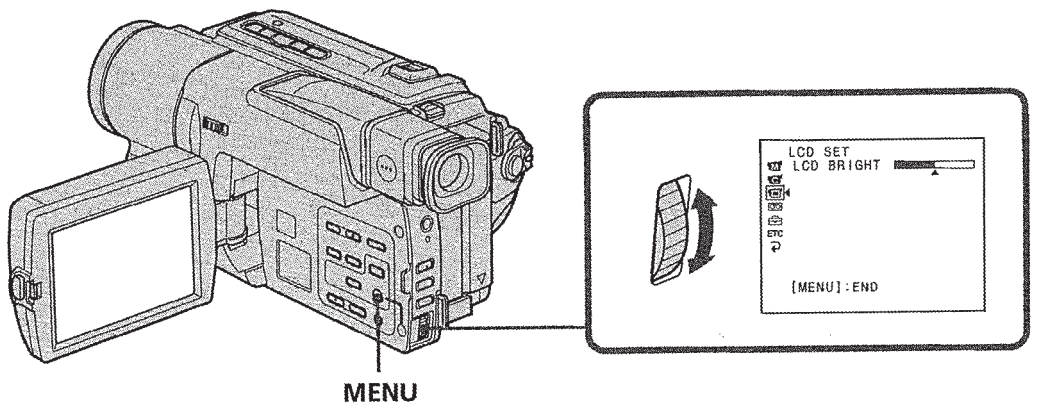

**LCD screen backlight**
You can adjust the brightness of the backlight. Select LCD B.L. in the menu settings (p. 70).

**Even if you adjust the LCD screen backlight**
The recorded picture will not be affected.

**Задняя подсветка экрана ЖКД**
Вы можете отрегулировать яркость задней подсветки. Выберите пункт LCD B.L. в установках меню (стр. 75).

**Даже если Вы регулируете заднюю подсветку экрана ЖКД**
На записанное изображение это не повлияет.

---

## Recording a picture

### Using the zoom feature

Move the power zoom lever a little for a slower zoom. Move it further for a faster zoom.
Using the zoom function sparingly results in better-looking recordings.
"T" side: for telephoto (subject appears closer)
"W" side: for wide-angle (subject appears farther away)

## Запись изображения

### Использование функции наезда видеокамеры

Передвиньте рычаг приводного вариообъектива слегка для относительно медленного наезда видеокамеры.
Передвиньте его сильнее для ускоренного наезда видеокамеры.
Использование функции наезда видеокамеры в небольшом количестве обеспечивает наилучшие результаты.
Сторона "T" : для телефото (объект приближается)
Сторона "W" : для широкоугольного вида (объект удаляется)

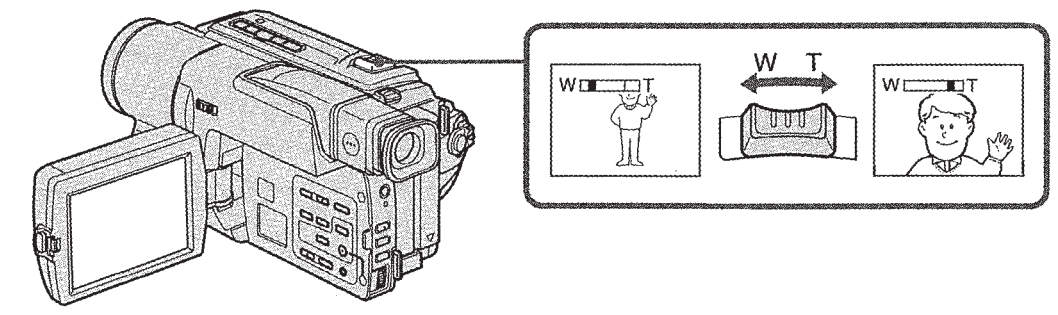

Zoom greater than 20× is performed digitally. To activate digital zoom, select the digital zoom power in D ZOOM in the menu settings (p. 69). The picture quality deteriorates as the picture is processed digitally.

Наезд видеокамеры более 20× выполняется цифровым методом.
Для приведения в действие цифрового вариообъектива выберите в установках меню приводной цифровой вариообъектив D ZOOM (стр. 74). Качество изображения будет немного худшим, поскольку обработка изображения ведется цифровым способом.



The right side of the bar shows the digital zooming zone. The digital zooming zone appears when you select the digital zoom power in D ZOOM in the menu settings./
Правая сторона полосы на экране показывает зону цифровой трансфокации.
Если в установках меню Вы выберите цифровой приводной объектив D ZOOM, то появится зона цифровой трансфокации.

---

## Recording a picture

**When you shoot close to a subject**
If you cannot get a sharp focus, move the power zoom lever to the "W" side until the focus is sharp. You can shoot a subject that is at least about 80 cm (about 2 feet 5/8 inch) away from the lens surface in the telephoto position, or about 1 cm (about 1/2 inch) away in the wide-angle position.

**Notes on digital zoom**
- Digital zoom starts to function when zoom exceeds 20×.
- The picture quality deteriorates as you go toward the "T" side.

### To record pictures with the viewfinder – adjusting the viewfinder

If you record pictures with the LCD panel closed, check the picture with the viewfinder. Adjust the viewfinder lens to your eyesight so that the indicators in the viewfinder come into sharp focus.

Lift up the viewfinder and move the viewfinder lens adjustment lever.

## Запись изображения

**При съемке объекта с близкого положения**
Если Вы не можете получить четкой фокусировки, передвиньте рычаг приводного вариообъектива сторону "W" до получения четкой фокусировки. Вы можете выполнять съемку объекта в положении телефото, который отстоит по крайней мере на расстоянии 80 см от поверхности объектива или же около 1 см в положении широкоугольного вида.

**Примечания к наезду видеокамеры цифровым методом**
- Цифровой вариообъектив начинает срабатывать в случае, если наезд видеокамеры превышает 20×.
- Качество изображения ухудшается по мере приближения к стороне "T".

### Для записи изображений с помощью видоискателя – регулировка видоискателя

Если Вы будете записывать изображения при закрытой панели ЖКД, проверьте изображение с помощью видоискателя. Отрегулируйте объектив видоискателя в соответствии со своим зрением, так чтобы индикаторы в видоискателе были четко сфокусированы.

Поднимите видоискатель и подвигайте рычаг регулировки объектива видоискателя.

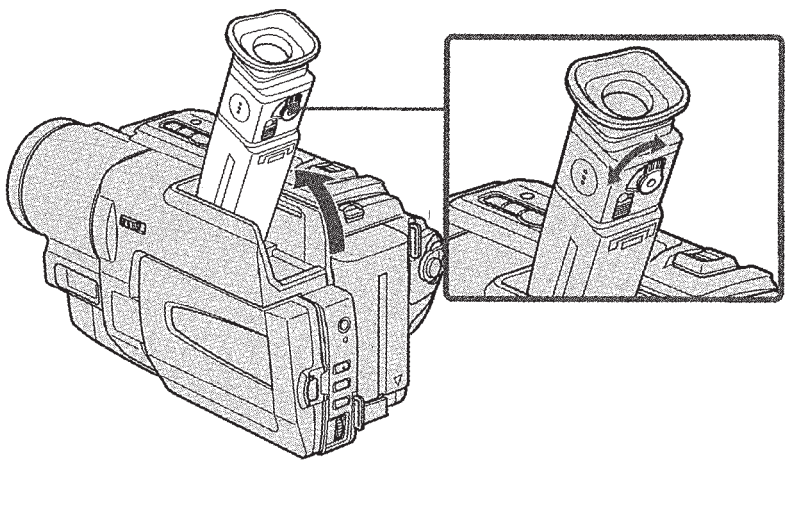

---

## Recording a picture

### Indicators displayed in the recording mode

The indicators are not recorded on tape.

## Запись изображения

### Индикаторы, отображаемые в режиме записи

Индикаторы не записываются на ленту.

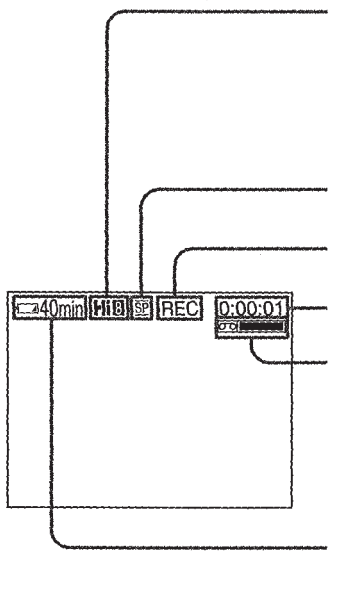

**Hi8 format indicator**
This appears while playing back or recording in Hi8 format. This appears after you insert a cassette for a while./
**Индикатор формата Hi8**
Этот индикатор появляется во время воспроизведения или записи в формате Hi8. Этот индикатор появляется через некоторое время после установки кассеты./

**Recording mode indicator/Индикатор режима записи**

**STBY/REC indicator/Индикатор STBY/REC**

**Tape counter indicator/Индикатор счетчика ленты**

**Remaining tape indicator**
This appears after you insert a cassette and record or play back for a while./
**Индикатор оставшейся ленты**
Этот индикатор появляется после установки кассеты и выполнения записи или воспроизведения в течение некоторого времени.

**Remaining battery time indicator/**
**Индикатор времени оставшегося заряда батарейного блока**

**Note on the remaining battery time indicator**
The remaining battery time indicator roughly indicates the recording time. The indicator may not be correct, depending on the conditions in which you are recording when you close the LCD panel and open it again, it takes about 1 minute for the correct remaining battery time in minutes to be displayed.

**Примечание относительно времени оставшегося заряда батарейного блока**
Индикатор времени оставшегося заряда батарейного блока в окошке дисплея в общем означает время записи. Индикатор может быть неточным, в зависимости от условий, в которых Вы выполняете запись. Если закроете панель ЖКД и откроете ее снова, понадобится около 1 минуты для того, чтобы правильное время оставшегося заряда батарейного блока отобразилось на дисплее.

## Shooting backlit subjects – BACK LIGHT

When you shoot a subject with the light source behind the subject or a subject with a light background, use the backlight function.

Press BACK LIGHT in CAMERA mode.
The ▨ indicator appears on the screen.
To cancel, press BACK LIGHT again.

## Съемка объектов с задней подсветкой – BACK LIGHT

Если Вы выполняете съемку объекта с источником света позади него или же объекта со светлым фоном, используйте функцию задней подсветки.

Нажмите кнопку BACK LIGHT в режиме CAMERA.
На экране появится индикатор ▨.
Для отмены, нажмите кнопку BACK LIGHT.

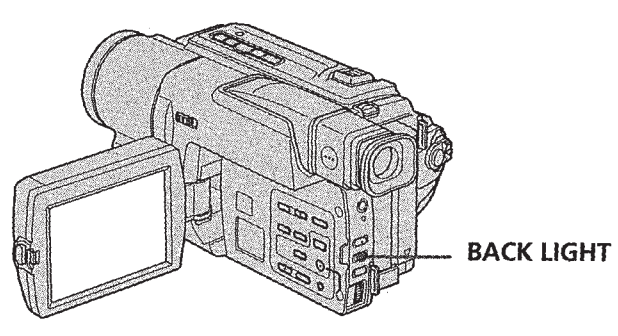

---

**If you press EXPOSURE when shooting backlit subjects**
The backlight function will be canceled.

---

**Если вы нажмете кнопку EXPOSURE при выполнении съемки объектов с задней подсветкой**
Функция задней подсветки будет отменена.

## Shooting in the dark – NightShot

The NightShot function enables you to shoot a subject in a dark place. For example, you can satisfactorily record the environment of nocturnal animals for observation when you use this function.

While your camcorder is in CAMERA mode, slide NIGHTSHOT to ON.
◙ and "NIGHTSHOT" indicators flash on the screen. To cancel the NightShot function, slide NIGHTSHOT to OFF.

## Съемка в темноте – Ночная съемка

Функция ночной съемки позволяет Вам выполнять съемку объектов в темных местах. Например, Вы сможете с успехом выполнять съемку ночных животных для наблюдения при использовании данной функции.

В то время, когда Ваша видеокамера находится в режиме CAMERA, передвиньте переключатель NIGHTSHOT в положение ON. Индикаторы ◙ и "NIGHTSHOT" начнут мигать на экране. Для отмены функции ночной съемки передвиньте переключатель NIGHTSHOT в положение OFF.

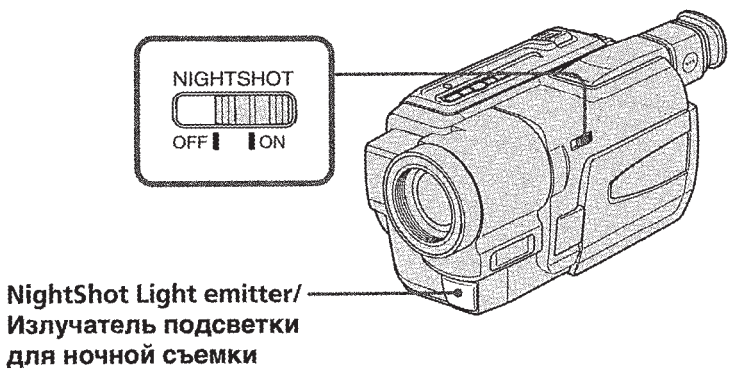

### Using the NightShot Light

The picture will be clearer with the NightShot Light on. To enable the NightShot Light, set N.S.LIGHT to ON in the menu settings (p. 69).

### Использование подсветки для ночной съемки

Изображение станет ярче, если включить функцию ночной подсветки. Для включения функции ночной подсветки установите переключатель N.S.LIGHT в положение ON в установках меню (стр. 74).

---

**Notes**
- Do not use the NightShot function in bright places (ex. outdoors in the daytime). This may cause your camcorder to malfunction.
- When you keep NIGHTSHOT setting to ON in normal recording, the picture may be recorded in incorrect or unnatural colours.
- If focusing is difficult with the autofocus mode when using the NightShot function, focus manually.

**While using the NightShot function, you can not use the following functions:**
– Exposure
– PROGRAM AE

**NightShot Light**
NightShot Light rays are infrared and so are invisible. The maximum shooting distance using the NightShot Light is about 3 m (10 feet).

---

**Примечания**
- Не используйте функцию ночной съемки в ярких местах (например, на улице в дневное время). Это может привести к неисправности Вашей видеокамеры.
- При удержании установки NIGHTSHOT в положении ON при нормальной записи изображение может быть записано в неправильных или неестественных цветах.
- Если фокусировка затруднена в автоматическом режиме при использовании функции ночной съемки, выполните фокусировку вручную.

**При использовании функции ночной съемки Вы не можете использовать следующие функции:**
– Экспозиция
– PROGRAM AE

**Подсветка для ночной съемки**
Лучи подсветки для ночной съемки являются инфракрасными и поэтому невидимыми. Максимальное расстояние для съемки при использовании подсветки для ночной съемки равно примерно 3 м.

## Superimposing the date and time on pictures

You can record the date and/or time displayed on the screen superimposed on the picture. Carry out the following operations in CAMERA mode.

Press DATE to record the date.
Press TIME to record the time.
Press DATE (or TIME), then press TIME (or DATE) to record the date and time.

Press DATE and/or TIME again. The date and/or time indicator disappears.

## Наложение даты и времени на изображения

Вы можете записывать дату и/или время, отображаемые на экране, которые будут наложены на изображение.
Выполните следующие операции в режиме CAMERA.

Нажмите кнопку DATE для записи даты.
Нажмите кнопку TIME для записи даты.
Нажмите кнопку DATE (или TIME), затем нажмите кнопку TIME (или DATE) для записи даты и времени.

Нажмите кнопку DATE и/или TIME еще раз. Индикатор даты и/или времени исчезнет.

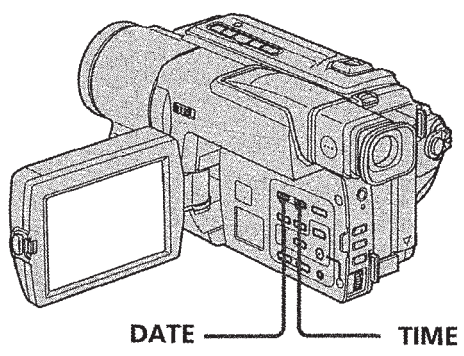

When you purchase your camcorder, the clock setting is set to off. Set the date and time to your local time before using (p. 22).

---

**Note**
The date and time indicators recorded manually cannot be deleted.

**If you do not record the date and time in the picture**
Record the date and time in the black screen as the background for about 10 seconds, then erase the date and time indicators before starting actual recording.

Когда Вы покупаете Вашу видеокамеру, установка часов выключена. Установите дату и время в соответствии с Вашим местным временем перед использованием (стр.22).

---

**Примечание**
Индикаторы даты и времени, записанные вручную, не могут быть удалены.

**Если Вы не записываете дату и время на изображении**
Запишите дату и время на фоне черного экрана в течение 10 секунд, затем сотрите индикаторы даты и времени перед тем, как начать действительную запись.

# Checking the recording – END SEARCH

You can use this button to record a picture from the last recorded scene successively.

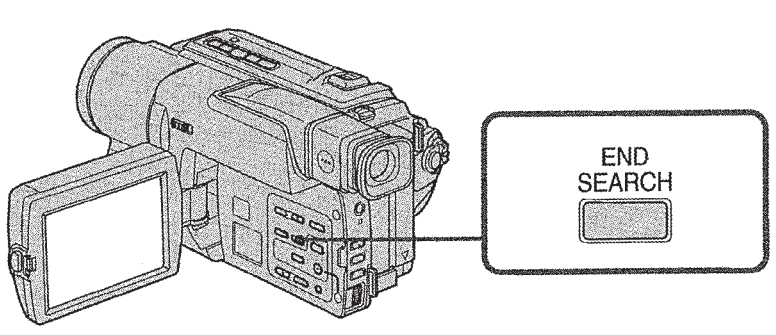

You can go to the end of the recorded section after you record.

Press END SEARCH in CAMERA mode.
The last 5 seconds of the recorded section are played back and the playback stops. You can monitor the sound from the speaker or an earphone.

**Note**
If you start recording after using the end search function, occasionally, the transition between the last scene you recorded and the next scene may not be smooth.

**Once you eject the cassette after you have recorded on the tape**
The end search function does not work.

# Проверка записи – END SEARCH

Вы можете использовать эту кнопку для последовательной записи за последним записанным эпизодом.

Вы можете дойти до конца записанной части ленты после выполнения записи.

Нажмите кнопку END SEARCH в режиме CAMERA. Будут воспроизведены последние 5 секунд записанной части, и воспроизведение остановится. Вы можете контролировать звук через акустическую систему или наушники.

**Примечание**
Если Вы случайно начнете запись после использования функции поиска конца записи, переход между последней записанной сценой и следующей записываемой сценой может не быть плавным.

**Если Вы вынули кассету после записи на ленту**
Функция поиска конца записи работать не будет.

# Playing back a tape

You can monitor the playback picture on the screen. If you close the LCD panel, you can monitor the playback picture in the viewfinder. You can control playback using the Remote Commander supplied with your camcorder. (CCD-TRV49E/TRV59E/TRV78E/TRV98E)

**(1)** Install the power source and insert the recorded tape.
**(2)** Set the POWER switch to PLAYER while pressing the small green button.
**(3)** Open the LCD panel while pressing OPEN.
**(4)** Press ◀◀ to rewind the tape.
**(5)** Press ► to start playback.
**(6)** To adjust the volume, press either of the two buttons on VOLUME. The speaker on your camcorder is silent when the LCD panel is closed.

# Воспроизведение ленты

Вы можете контролировать воспроизводимое изображение на экране. Если Вы закроете панель ЖКД, Вы сможете контролировать воспроизводимое изображение в видоискателе. Вы можете контролировать воспроизведение с помощью пульта дистанционного управления, прилагаемого к Вашей видеокамере. (модели CCD-TRV49E/TRV59E/TRV78E/TRV98E)

**(1)** Установите источник питания и вставьте записанную ленту.
**(2)** Установите переключатель POWER в положение PLAYER, нажав маленькую зеленую кнопку.
**(3)** Нажав кнопку OPEN, откройте панель ЖКД.
**(4)** Нажмите кнопку ◀◀ для ускоренной перемотки ленты назад.
**(5)** Нажмите кнопку ► для включения воспроизведения.
**(6)** Для регулировки громкости нажимайте одну из двух кнопок VOLUME. Если панель ЖКД на Вашей видеокамере закрыта, динамик не будет работать.

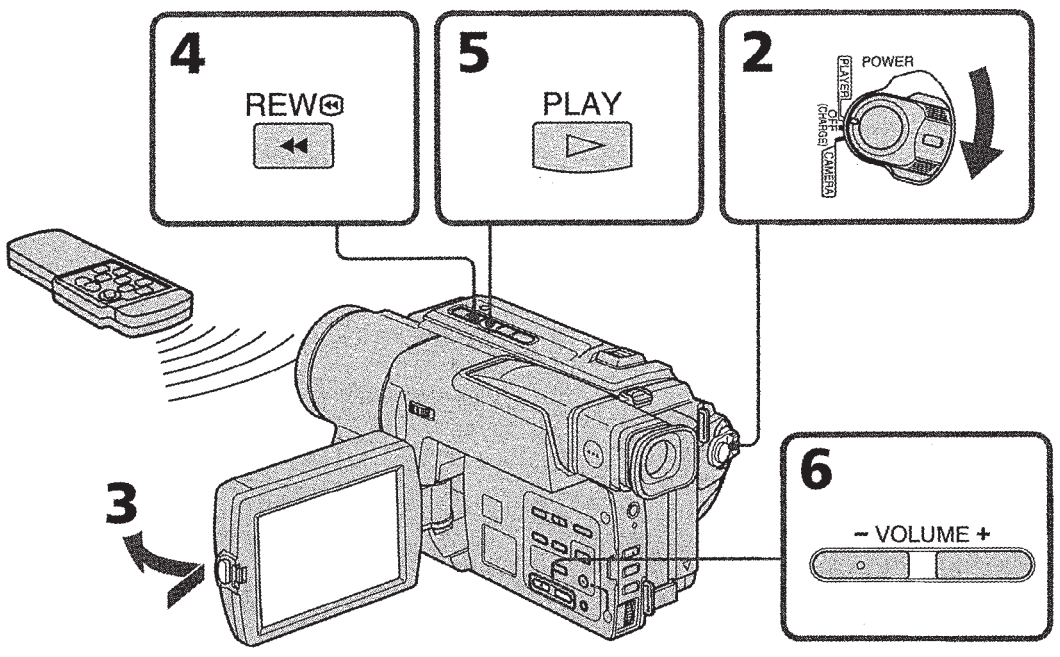

**To stop playback**
Press ■.

**Для остановки воспроизведения**
Нажмите кнопку ■.

**When monitoring on the LCD screen**
You can turn the LCD panel over and move it back to the camcorder body with the LCD screen facing out **[a]**. You can adjust the angle of the LCD panel by lifting the LCD panel up by 23 degrees **[b]**.

**Во время контроля на экране ЖКД**
Вы можете повернуть панель управления и придвинуть ее обратно на место к корпусу видеокамеры, так что экран ЖКД будет обращен наружу **[a]**.Вы можете отрегулировать угол панели ЖКД, подняв панель ЖКД вверх на 23 градусов **[b]**.

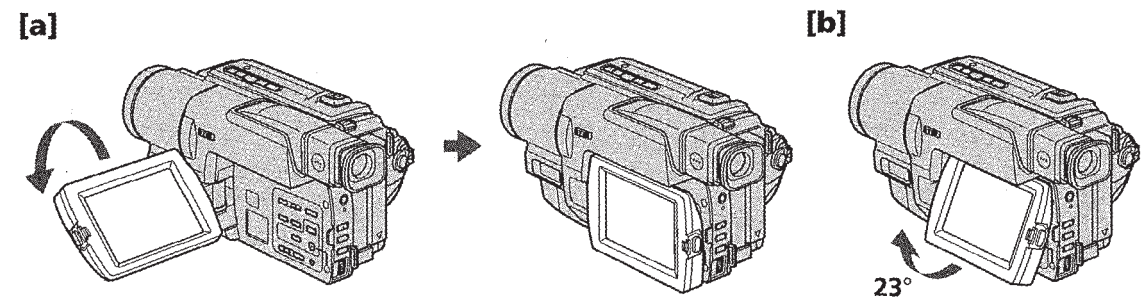

## To control the display of the screen indicators

Press DISPLAY on your camcorder or the Remote Commander (CCD-TRV49E/TRV59E/TRV78E/TRV98E) supplied with your camcorder.
The indicators appear on the LCD screen.
To make the indicators disappear, press DISPLAY again.

## Для контроля экранных индикаторов

Нажмите кнопку DISPLAY на Вашей видеокамере или на пульте дистанционного управления (модели CCD-TRV-49E/TRV59E/TRV78E/TRV98E), который прилагается к Вашей видеокамере.
На экране ЖКД появятся индикаторы.
Для того, чтобы индикаторы исчезли, нажмите еще раз кнопку DISPLAY.

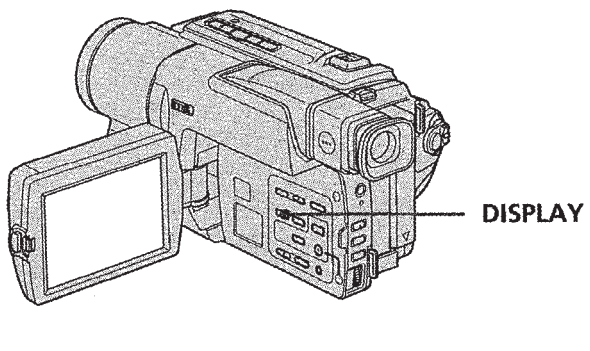

## Various playback modes

To operate video control buttons, set the POWER switch to PLAYER.

### To view a still picture (playback pause)

Press ❚❚ during playback. To resume playback, press ❚❚ or ►.

### To advance the tape

Press ▶▶ in the stop mode. To resume normal playback, press ►.

### To rewind the tape

Press ◀◀ in the stop mode. To resume normal playback, press ►.

### To locate a scene monitoring the picture (picture search)

Keep pressing ◀◀ or ▶▶ during playback. To resume normal playback, release the button.

### To monitor the high-speed picture while advancing or rewinding the tape (skip scan)

Keep pressing ◀◀ while rewinding or ▶▶ while advancing the tape. To resume rewinding or advancing, release the button.

### To view the picture at slow speed (slow playback)

**– CCD-TRV49E/TRV59E/TRV78E/TRV98E only**
Press ❚► on the Remote Commander during playback. To resume normal playback, press ►.

### To search the last scene recorded (END SEARCH)

Press END SEARCH in the stop mode. The last 5 seconds of the recorded section are played back and the playback stops.

## Переменные режимы воспроизведения

Для использования кнопок управления видео установите переключатель POWER в положение PLAYER.

### Для просмотра неподвижного изображения (пауза воспроизведения)

Нажмите во время воспроизведения кнопку ❚❚. Для возобновления обычного воспроизведения нажмите кнопку ❚❚ или кнопку ►.

### Для ускоренной перемотки ленты вперед

Нажмите в режиме остановки кнопку ▶▶. Для возобновления обычного воспроизведения нажмите кнопку ►.

### Для ускоренной перемотки ленты назад

Нажмите в режиме остановки кнопку ◀◀. Для возобновления обычного воспроизведения нажмите кнопку ►.

### Для отыскания эпизода во время контроля изображения (поиск изображения)

Держите нажатой кнопку ◀◀ или ▶▶ во время воспроизведения. Для восстановления обычного воспроизведения отпустите кнопку.

### Для контроля изображения на высокой скорости во время ускоренной перемотки ленты вперед или назад (поиск методом прогона)

Держите нажатой кнопку ◀◀ во время ускоренной перемотки ленты назад или кнопку ▶▶ во время ускоренной перемотки ленты вперед. Для возобновления обычной перемотки ленты вперед или назад отпустите кнопку.

### Для просмотра изображения на медленной скорости (замедленное воспроизведение)

**– Только модели CCD-TRV49E/TRV59E/TRV78E/TRV98E**
Нажмите во время воспроизведения кнопку ❚► на пульте дистанционного управления. Для возобновления обычного воспроизведения нажмите кнопку ►.

### Для поиска последнего записанного эпизода (END SEARCH)

Нажмите кнопку END SEARCH в режиме остановки. Будут воспроизведены последние 5 секунд записанного участка, и воспроизведение прекратится.

## Playing back a tape

**In the various playback modes**
Sound is muted.

**When the playback pause mode lasts for 5 minutes**
Your camcorder automatically enters the stop mode. To resume playback, press ►.

**If slow playback lasts for about 1 minute (CCD-TRV49E/TRV59E/TRV78E/TRV98E only)**
Your camcorder automatically returns to normal speed.

**When you play back a tape**
Noise may appear during playback pause mode, slow playback or picture search.

**When you play back a tape in reverse**
Horizontal noise may appear at the centre or top and bottom of the screen.
This is not a malfunction.

## Воспроизведение ленты

**В переменных режимах воспроизведения**
Звук будет приглушен.

**Если режим паузы воспроизведения продлится 5 минут**
Ваша видеокамера автоматически войдет в режим остановки. Для возобновления воспроизведения воспроизведения нажмите кнопку ►.

**Если замедленное воспроизведение продлится около 1 минуты (Только модели CCD-TRV49E/TRV59E/TRV78E/TRV98E)**
Ваша видеокамера автоматически переключится на нормальную скорость.

**При воспроизведении записанной ленты**
В режиме паузы воспроизведения, замедленного воспроизведения или поиска изображения могут появиться помехи.

**При воспроизведении ленты в обратном направлении**
Могут появиться горизонтальные помехи в центре или вверху и внизу экрана.
Этой не является неисправностью.

## Viewing the recording on TV

Connect your camcorder to your TV with the A/V connecting cable supplied with your camcorder to watch the playback picture on the TV screen. You can operate the playback control buttons in the same way as when you monitor playback pictures on the LCD screen. When monitoring the playback picture on the TV screen, we recommend that you power your camcorder from the mains using the AC power adaptor (p. 20). Refer to the operating instructions of your TV.

Open the jack cover. Connect your camcorder to the TV using the A/V connecting cable. Then, set the TV/VCR selector on the TV to VCR.

## Просмотр записи на экране телевизора

Подсоедините Вашу видеокамеру к Вашему телевизору с помощью соединительного кабеля аудио/видео, который прилагается к Вашей видеокамере для просмотра воспроизводимого изображения на экране телевизора. Вы можете оперировать кнопками управления воспроизведением таким же способом, как при управлении воспроизводимым изображением на экране ЖКД. При управлении воспроизводимым изображением на экране телевизора рекомендуется подключить питание к Вашей видеокамере от сетевой розетки с помощью сетевого адаптера переменного тока (стр. 20). См. инструкцию по эксплуатации Вашего телевизора.

Откройте крышку гнезд. Подсоедините Вашу видеокамеру к телевизору с помощью соединительного кабеля аудио/видео. Затем, установите переключатель TV/VCR на Вашем телевизоре в положение VCR.

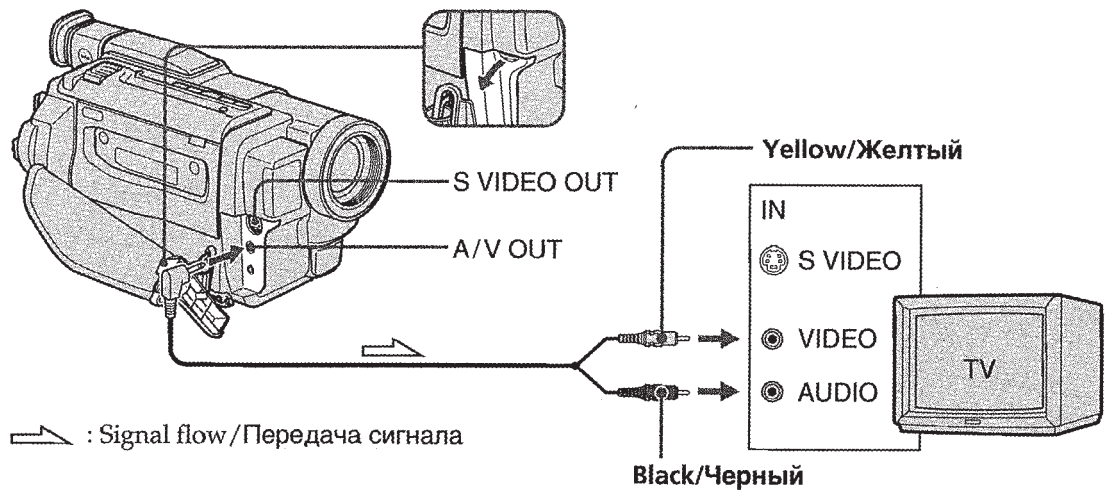

⇨ : Signal flow/Передача сигнала

### If your TV is already connected to a VCR

Connect your camcorder to the LINE IN input on the VCR by using the A/V connecting cable supplied with your camcorder. Set the input selector on the VCR to LINE.

### Если Ваш телевизор уже подсоединен к КВМ

Подсоедините Вашу видеокамеру к входному гнезду LINE IN на КВМ с помощью соединительного кабеля аудио/видео, который прилагается к Вашей видеокамере. Установите селектор входного сигнала на КВМ в положение LINE.

## Viewing the recording on TV

### To connect to a TV without Video/Audio input jacks

Use a PAL system RFU adaptor (optional). Refer to the operating instructions of your TV and the RFU adaptor.

### If your TV/VCR has a 21-pin connector (EUROCONNECTOR)

**– CCD-TRV58E/TRV59E/TRV78E/TRV98E (European models only)**
Use the 21-pin adaptor supplied with your camcorder.

## Просмотр записи на экране телевизора

### Для подсоединения к Вашему телевизору без входных гнезд аудио/видео

Используйте ВЧ-адаптер системы PAL (приобретается отдельно).
Обратитесь к инструкции по эксплуатации Вашего телевизора и ВЧ-адаптера. При использовании ВЧ-адаптера звук будет монофоническим даже на стереофонических моделях.

### Если в Вашем телевизоре/КВМ имеется 21-штырьковый разъем (EUROCONNECTOR)

**– Только модели CCD-TRV58E/TRV59E/TRV78E/TRV98E (только европейские модели)**
Используйте 21-штырьковый адаптер, прилагаемый к Вашей видеокамере.



**If your TV has an S video jack**
Connect using an S video cable (optional) to obtain high-quality pictures. With this connection, you do not need to connect the yellow (video) plug of the A/V connecting cable. Connect the S video cable (optional) to the S video jacks on both your camcorder and the TV.

**Если в Вашем телевизоре имеется гнездо S видео**
Выполните соединение с помощью кабеля S видео (не прилагается) для получения высококачественного изображения. При данном соединении Вам не нужно подсоединять желтый штекер (видео) соединительного кабеля аудио/видео. Подсоедините кабель S видео (не прилагается) к гнездам S видео на Вашей видеокамере и Вашем телевизоре.

— Advanced Recording Operation —

## Using the wide mode

You can record a cinema-like picture (CINEMA) or a 16:9 wide picture to watch on the 16:9 wide-screen TV (16:9FULL). Refer to the operating instructions of your TV.

**CINEMA**
Black bands appear on the screen during recording in the CINEMA mode **[a]**, playing back on a normal TV **[b]** or a wide-screen TV **[c]**. If you set the screen mode of the wide-screen TV to the zoom mode, a picture without black bands appears **[d]**.

**16:9FULL**
The picture during recording in the 16:9FULL mode **[e]**, or playing back on a normal TV **[f]** or a wide-screen TV **[g]** is horizontally compressed. If you set the screen mode of the wide-screen TV to the full mode, you can watch pictures of normal images **[h]**.

— Усовершенствованные операции съемки —

## Использование широкоэкранного режима

Вы можете записывать изображение наподобие кино (CINEMA) или широкоэкранное изображение 16:9 для просмотра на широкоэкранном телевизоре 16:9 (16:9FULL). Обратитесь к инструкции по эксплуатации Вашего телевизора.

**CINEMA**
Черные полосы появятся на экране во время записи в режиме CINEMA **[a]**, воспроизведения на обычном телевизоре **[b]** или на широкоэкранном телевизоре **[c]**. Если Вы установите экранный режим на широкоэкранном телевизоре в режим масштабирования, то изображение появится без черных полос **[d]**.

**16:9FULL**
Изображение во время записи в режиме 16:9 FULL **[e]**, либо во время воспроизведения на обычном телевизоре **[f]** или широкоэкранном телевизоре **[g]** будет сжато по горизонтали. Если Вы установите экранный режим широкоэкранного телевизора в полноэкранный режим, Вы можете просматривать изображения обычных съемок **[h]**.

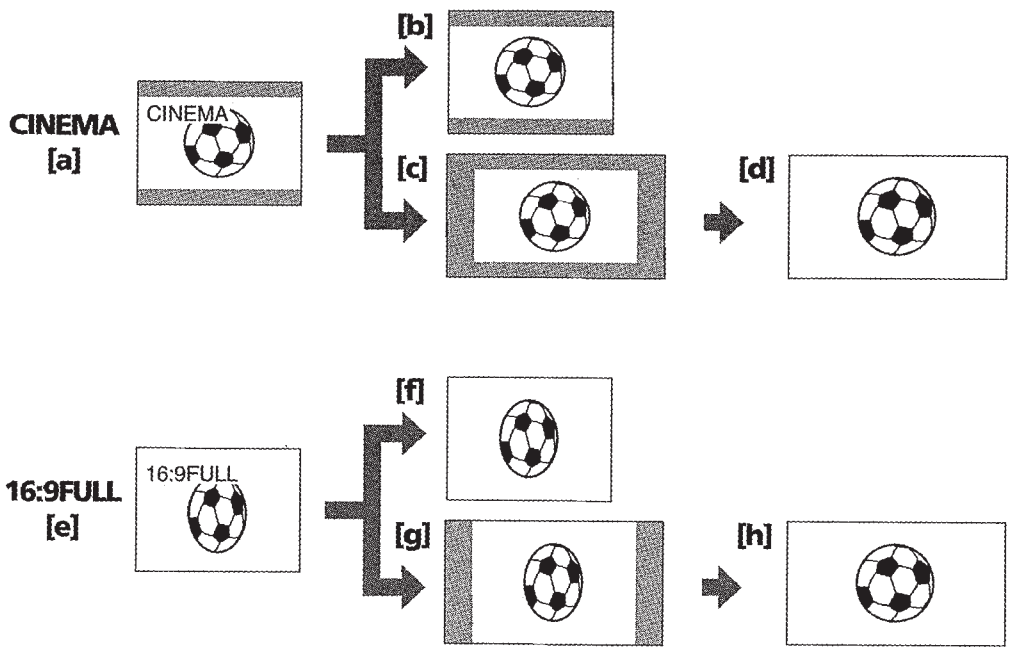

## Using the wide mode

In CAMERA mode, set 16:9WIDE to CINEMA or 16:9FULL in 📷 in the menu settings (p. 69).

## Использование широкоэкранного режима

В режиме CAMERA установите 16:9WIDE положение CINEMA или 16:9FULL в установках меню (стр. 74).

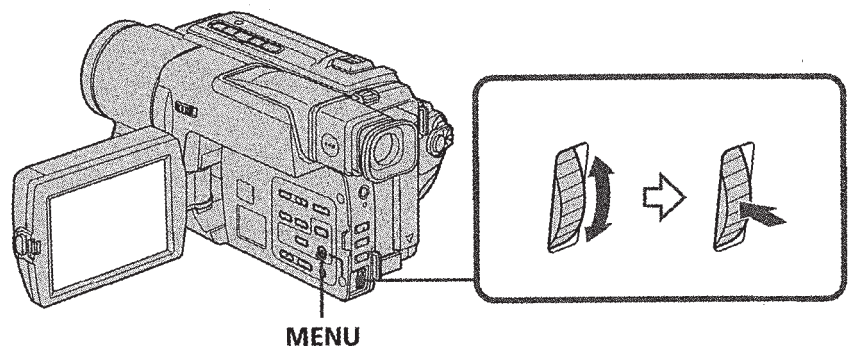

### To cancel the wide mode

Set 16:9WIDE to OFF in the menu settings.

---

**If the wide mode is set to 16:9FULL (CCD-TRV78E/TRV98E only)**
The SteadyShot function does not work. If you select 16:9FULL in the menu settings when the SteadyShot function is working, ✋ flashes and the SteadyShot function does not function.

**In the wide mode**
You cannot select the bounce function with FADER.

**Date or time indicator**
When you record in the 16:9FULL mode, the date or time indicator will be widened on wide-screen TVs.

**During recording**
You cannot change or cancel the wide mode. When you cancel the wide mode, set your camcorder to the standby mode and then set 16:9WIDE to OFF in the menu settings.

### Для отмены широкоэкранного режима

Установите команду 16:9WIDE в положение OFF в установках меню.

---

**Если широкоэкранный режим установлен в положение 16:9FULL (Только модели CCD-TRV78E/TRV98E)**
Функция устойчивой съемки не работает. Если Вы выберите команду 16:9FULL в установках меню в то время, когда работает функция устойчивой съемки, начнет мигать индикация “✋”, и функция устойчивой съемки работать не будет.

**В широкоэкранном режиме**
Вы не можете выбрать функцию отскока с помощью кнопки FADER.

**Индикатор даты или времени**
Если Вы выполняете запись в режиме 16:9FULL, индикатор даты или времени расширится на широкоэкранном телевизоре.

**Во время записи**
Вы не можете изменить или отменить широкоэкранный режим.
Для отмены широкоэкранного режима установите Вашу видеокамеру на режим ожидания, а затем установите 16:9WIDE на OFF в установках меню.

## Using the fader function

You can fade in or out to give your recording a professional appearance.

## Использование функции фейдера

Вы можете выполнять плавное введение и выведение изображения, чтобы придать Вашей съемке профессиональный вид.

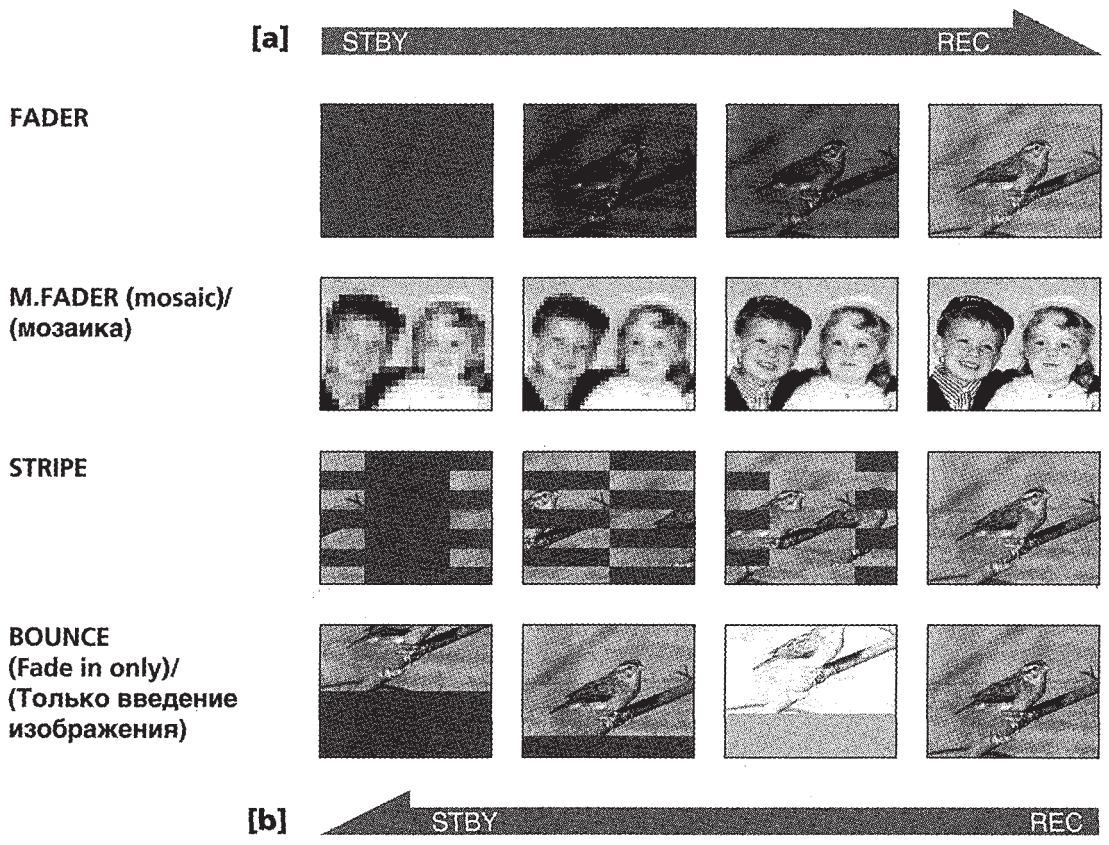

**MONOTONE**
When fading in, the picture gradually changes from black-and-white to colour.
When fading out, the picture gradually changes from colour to black-and-white.

**MONOTONE**
При введении изображение будет постепенно изменяться от черно-белого до цветного.
При выведении изображение будет постепенно изменяться от цветного до черно-белого.

## Using the fader function

**(1) When fading in [a]**
In the standby mode, press FADER until the desired fader indicator flashes.
**When fading out [b]**
In the recording mode, press FADER until the desired fader indicator flashes.
The indicator changes as follows:

→ FADER → M.FADER → STRIPE ─┐
no indicator ← MONOTONE ← BOUNCE ←┘

The last selected fader mode is indicated first of all.

**(2)** Press START/STOP. The fader indicator stops flashing.
After the fade in/out is carried out, your camcorder automatically returns to the normal mode.

## Использование функции фейдера

**(1) При введении изображения [a]**
В режиме ожидания, нажимайте кнопку FADER до тех пор, пока не начнет мигать нужный индикатор фейдера.
**При выведении изображения [b]**
В режиме записи, нажимайте кнопку FADER до тех пор, пока не начнет мигать нужный индикатор фейдера.
Индикатор будет изменяться следующим образом:

→ FADER → M.FADER → STRIPE ─┐
без индикатора ← MONOTONE ← BOUNCE

Последний из выбранных режимов фейдера отображается первым.

**(2)** Нажмите кнопку START/STOP. Индикатор фейдера перестанет мигать.
После выполнения введения/выведения изображения Ваша видеокамера автоматически вернется в обычный режим.

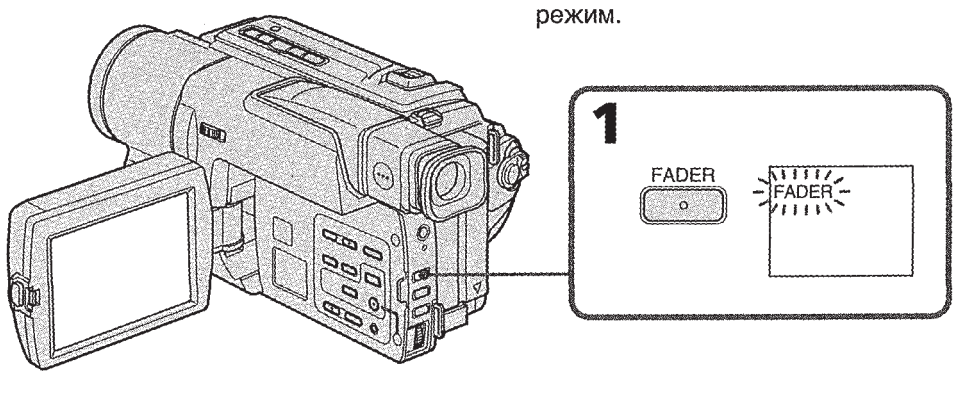

### To cancel the fader function

Before pressing START/STOP, press FADER until the indicator disappears.

### Для отмены функции фейдера

Перед тем, как нажать кнопку START/STOP, нажимайте кнопку FADER до тех пор, пока не исчезнет индикатор.

## Using the fader function

---

**The date, time indicator and title do not fade in or fade out**
Erase them before operating the fader function if they are not needed.

**While using the bounce function, you cannot use the following functions:**
- Focus
- Zoom
- Picture effect

**Note on the bounce function**
The BOUNCE indicator does not appear in the following mode or functions:
- D ZOOM is set to the mode other than OFF in the menu settings
- Wide mode
- Picture effect
- PROGRAM AE

## Использование функции фейдера

---

**Индикатор даты, времени и титр не вводятся и не выводятся вместе с изображением**
Удалите их перед тем, как включить функцию фейдера, если они не нужны.

**Во время использования функции перескакивания Вы не можете использовать следующие функции:**
- Фокусировка
- Трансфокация
- Эффект изображения

**Примечание по функции перескакивания**
Индикатор BOUNCE не появляется в следующих режимах или при использовании следующих функций:
- Команда D ZOOM установлена в положение, отличное от положения OFF в установках меню
- Широкоэкранный режим
- Эффект изображения
- PROGRAM AE

# Using special effects – Picture effect

You can digitally process images to obtain special effects like those in films or on the TV.

| | |
|---|---|
| **PASTEL [a]** : | The contrast of the picture is emphasized, and the picture looks like an animated cartoon. |
| **NEG. ART [b]** : | The colour and brightness of the picture are reversed. |
| **SEPIA** : | The picture is sepia. |
| **B&W** : | The picture is monochrome (black-and-white). |
| **SOLARIZE [c]** : | The light intensity is clearer, and the picture looks like an illustration. |
| **MOSAIC [d]** : | The picture is mosaic. |
| **SLIM [e]** : | The picture expands vertically. |
| **STRETCH [f]** : | The picture expands horizontally. |

# Использование специальных эффектов – Эффект изображения

Вы можете выполнять обработку изображения цифровым методом для получения специальных эффектов, как в кинофильмах или на экранах телевизоров.

| | |
|---|---|
| **PASTEL [a]** : | Подчеркивается контрастность изображения, которому придается мультипликационный вид. |
| **NEG. ART [b]** : | Цвет и яркость изображения будут негативными. |
| **SEPIA** : | Изображение будет в цвете сепии. |
| **B&W** : | Изображение будет монохроматическим (черно-белым). |
| **SOLARIZE [c]** : | Яркость света будет усиленной, а изображение будет выглядеть как иллюстрация. |
| **MOSAIC [d]** : | Изображение будет мозаическим. |
| **SLIM [e]** : | Изображение растянется по вертикали. |
| **STRETCH [f]** : | Изображение растянется по горизонтали. |

**[a]**



**[b]**

**[c]**

**[d]**



**[e]**

**[f]**

### Using special effects – Picture effect

**(1)** In CAMERA mode, select P EFFECT in ▣ in the menu settings. (p. 69).
**(2)** Select the desired picture effect mode in the menu settings, then press the SEL/PUSH EXEC dial.

### Использование специальных эффектов – Эффект изображения

**(1)** В режиме CAMERA выберите пункт P EFFECT в разделе ▣ в установках меню. (стр. 74).
**(2)** Выберите нужный режим эффекта изображения в установках меню, затем нажмите диск SEL/PUSH EXEC.

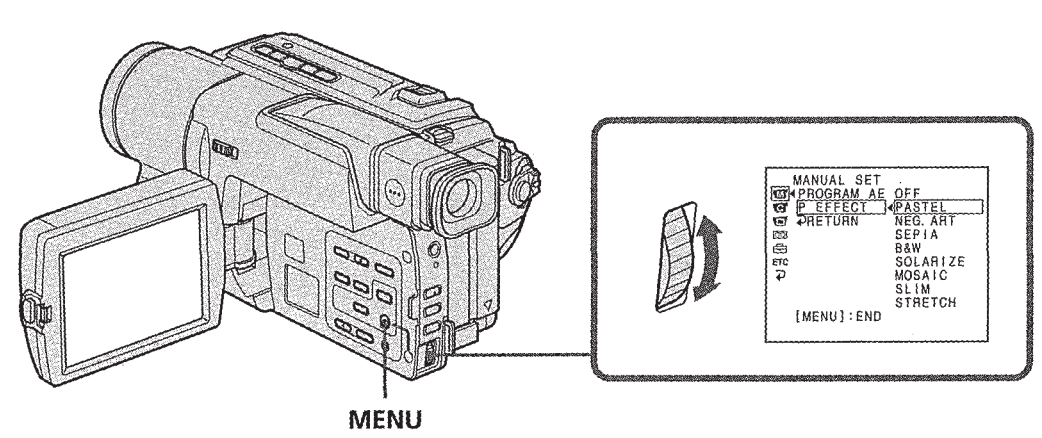

### To turn the picture effect function off

Set P EFFECT to OFF in the menu settings.

**When you turn the power off**
Your camcorder automatically returns to the normal mode.

### Для выключения функции эффекта изображения

Установите пункт P EFFECT в установках меню в положение OFF.

**Если Вы выключите питание**
Ваша видеокамера автоматически вернется в обычный режим.

---

# Using the PROGRAM AE function

You can select PROGRAM AE (Auto Exposure) mode to suit your specific shooting requirements.

**Spotlight**
This mode prevents people's faces, for example, from appearing excessively white when shooting subjects lit by strong light in the theatre.

**Soft portrait**
This mode brings out the subject while creating a soft background for subjects such as people or flowers.

**Sports lesson**
This mode minimizes shake on fast-moving subjects such as in tennis or golf.

**Beach & ski**
This mode prevents people's faces from appearing dark in strong light or reflected light, such as at a beach in midsummer or on a ski slope.

**Sunset & moon**
This mode allows you to maintain atmosphere when you are recording sunsets, general night views, fireworks displays and neon signs.

**Landscape**
This mode is for when you are recording distant subjects such as mountains and prevents your camcorder from focusing on glass or metal mesh in windows when you are recording a subject behind glass or a screen.

# Использование функции PROGRAM AE

Вы можете выбрать режим PROGRAM AE (автоматическая съемка) в соответствии со специфическими требованиями к съемке.

**Прожекторное освещение**
Данный режим предотвращает, к примеру, лица людей от появления в чрезмерно белом свете при выполнении съемки людей, освещенных сильным светом на свадебных церемониях или в театре.

**Мягкий портрет**
Этот режим позволяет выделить объект на фоне мягкого фона, и подходит для съемки, например, людей или цветов.

**Спортивные состязания**
Этот режим позволяет минимизировать дрожание при съемке быстро движущихся предметов, например, при игре в теннис или гольф.

**Пляжный и лыжный курорт**
Этот режим предотвращает появление темных лиц людей в зоне сильного света или отраженного света, например, на пляже в разгар лета или на снежном склоне.

**Заход солнца и луны**
Этот режим позволяет в точности отражать обстановку при съемке заходов солнца, общих ночных видов, фейерверков и неоновых реклам.

**Ландшафт**
Этот режим позволяет выполнять съемку отдаленных объектов, таких как горы, например, и предотвращает фокусировку видеокамеры на стекло или металлическую решетку на окнах, когда Вы выполняете запись объектов позади стекла или решетки.

### Using the PROGRAM AE function

**(1)** In CAMERA mode, select PROGRAM AE in ▣ in the menu settings (p. 69).
**(2)** Select the desired PROGRAM AE mode in the menu settings, then press the SEL/PUSH EXEC dial.

### Использование функции PROGRAM AE

**(1)** В режиме CAMERA выберите пункт PROGRAM AE в разделе ▣ в установках меню. (стр. 74).
**(2)** Выберите нужный режим PROGRAM AE в установках меню, затем нажмите диск SEL/PUSH EXEC.

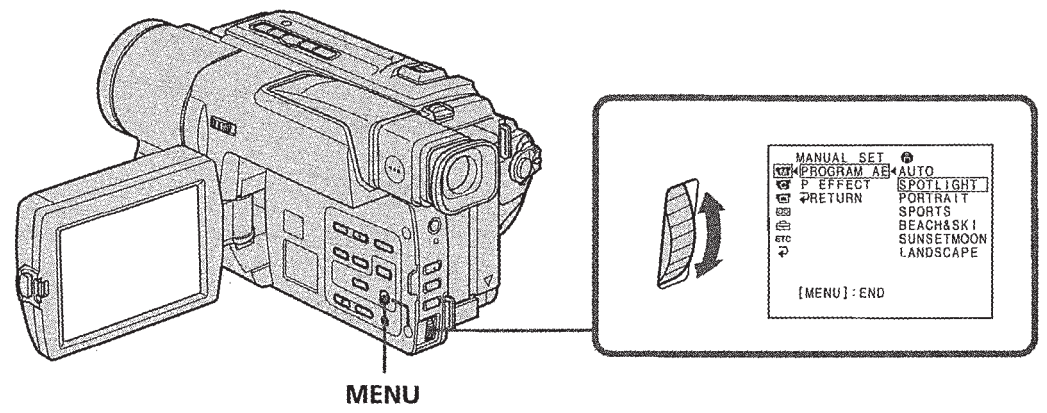

### To turn the PROGRAM AE function off

Set PROGRAM AE to AUTO in the menu settings.

### Для выключения функции PROGRAM AE

Установите пункт PROGRAM AE в установках меню в положение AUTO.

## Using the PROGRAM AE function

**Notes**
- In the spotlight, sports lesson and beach & ski modes, you cannot take close-ups. This is because your camcorder is set to focus only on subjects in the middle to far distance.
- In the sunset & moon and landscape modes, your camcorder is set to focus only on distant subjects.
- The bounce function with FADER does not work in the PROGRAM AE mode.
- While setting NIGHTSHOT to ON, the PROGRAM AE function does not work. (The indicator flashes.)

**If you are recording under a discharge tube such as a fluorescent lamp, sodium lamp or mercury lamp**
Flickering or changes in colour may occur in the following modes. If this happens, turn the PROGRAM AE function off.
- Soft portrait mode
- Sports lesson mode

## Использование функции PROGRAM AE

**Примечания**
- В режимах прожекторного освещения, спортивных состязаний, а также в пляжном и лыжном режиме Вы можете выполнять съемку крупным планом. Это объясняется тем, что Ваша видеокамера настроена для фокусировки только на объекты, находящиеся на среднем и дальнем расстояниях.
- В режиме захода солнца и луны, а также в ландшафтном режиме Ваша видеокамера настроена на фокусировку только на дальние объекты.
- Функция перескакивания с функцией FADER не работают в режиме PROGRAM AE.
- При установке переключателя NIGHTSHOT в положение ON функция PROGRAM AE не будет работать. (Индикатор мигает)

**Если Вы выполняете запись при использовании газоразрядной лампы, натриевой лампы или ртутной лампы**
В следующих режимах может возникнуть мерцание или неустойчивые процессы. Если это произойдет, выключите функцию PROGRAM AE.
- Мягкий портретный режим
- Режим спортивных состязаний

## Adjusting the exposure manually

You can manually adjust and set the exposure. Adjust the exposure manually in the following cases:
- The subject is backlit
- Bright subject and dark background
- To record dark pictures (e.g. night scenes) faithfully

**(1)** In CAMERA mode, press EXPOSURE.
The exposure indicator appears.
**(2)** Turn the SEL/PUSH EXEC dial to adjust the brightness.

## Регулировка экспозиции вручную

Вы можете отрегулировать и установить экспозицию вручную.
Отрегулируйте экспозицию вручную в следующих случаях:
- Объект на фоне задней подсветки
- Яркий объект на темном фоне
- Для записи темных изображений (например, ночных сцен) с большой достоверностью

**(1)** Нажмите кнопку EXPOSURE в режиме CAMERA.
Появится индикатор экспозиции.
**(2)** Поверните диск SEL/PUSH EXEC для регулировки яркости.

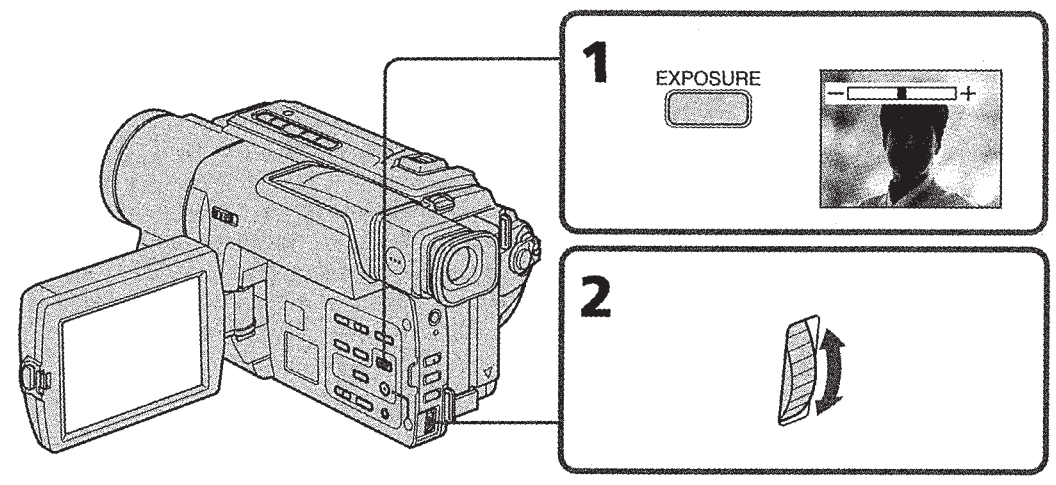

**To return to the automatic exposure mode**
Press EXPOSURE again.

**Для возврата в режим автоматической экспозиции**
Нажмите кнопку EXPOSURE еще раз.

**Note**
When you adjust the exposure manually, the backlight function does not work.

**Your camcorder automatically returns to the automatic exposure mode:**
- if you change the PROGRAM AE mode
- if you slide NIGHTSHOT to ON

**Примечание**
При выполнении регулировки экспозиции вручную функция задней подсветки не работает.

**Ваша видеокамера автоматически вернется в режим автоматической экспозиции:**
- если Вы измените режим PROGRAM AE
- если Вы передвинете переключатель NIGHTSHOT в положение ON

## Focusing manually

You can gain better results by manually adjusting the focus in the following cases:
- The autofocus mode is not effective when shooting
  - subjects through glass coated with water droplets
  - horizontal stripes
  - subjects with little contrast with backgrounds such as walls and sky
- When you want to change the focus from a subject in the foreground to a subject in the background
- Shooting a stationary subject when using a tripod

## Фокусировка вручную

Вы можете получить лучшие результаты путем регулировки вручную в следующих случаях:
- Режим автоматической фокусировки является неэффективным при выполнении съемки
  - объектов через стекло, покрытое каплями воды
  - горизонтальных полос
  - объектов с малой контрастностью на таком фоне, как стена или небо
- Если Вы хотите выполнить изменение фокусировки с объекта на переднем плане на объект на заднем плане
- При выполнении съемки стационарных объектов с использованием треноги



**(1)** In CAMERA mode, press FOCUS.
The Ⓕ indicator appears.
**(2)** Turn the SEL/PUSH EXEC dial to sharpen focus.

**(1)** Нажмите кнопку FOCUS в режиме CAMERA.
Появится индикатор Ⓕ.
**(2)** Поверните диск SEL/PUSH EXEC для получения четкой фокусировки.

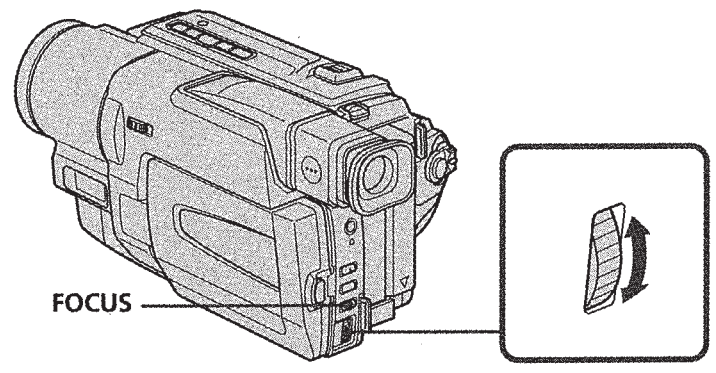

**To return to the autofocus mode**
Press FOCUS.

**Для возвращения в режим автоматической фокусировки**
Нажмите кнопку FOCUS.

## Focusing manually

**To focus precisely**
Adjust the zoom by first focusing at the "T" (telephoto) position and then shooting at the "W" (wide-angle) positon. This makes focusing easier.

**When you shoot close to the subject**
Focus at the end of the "W" (wide-angle) position.

**Ⓕ changes to the following indicators:**
▲ When recording a distant subject.
👤 When the subject is too close to focus on.

## Фокусировка вручную

**Для точной фокусировки**
Отрегулируйте вариообъектив, сначала выполнив фокусировку в положении "T" (телефото), а затем выполнив съемку в положении "W" (широкого угла охвата). Это упростит фокусировку.

**Если Вы выполняете съемку вблизи объекта**
Выполните фокусировку в конце положения "W" (широкоугольное).

**Индикатор Ⓕ будет изменяться на следующие индикаторы:**
▲ при записи удаленного объекта.
👤 при записи объекта, расположенного слишком близко к фокусу.

# Superimposing a title

You can select one of eight preset titles and two custom titles (p. 59). You can also select the language, colour, size and position of titles.

# Наложение титра

Вы можете выбрать один из восьми предварительно установленных титров и два созданных Вами титра (стр. 59). Вы можете также выбрать язык, цвет, размер и положение титров.

**(1)** In CAMERA mode, press TITLE to display the title menu.
**(2)** Turn the SEL/PUSH EXEC dial to select 🗀, then press the dial.
**(3)** Select the desired title in the menu settings, then press the SEL/PUSH EXEC dial.
**(4)** Change the colour, size, or position, if necessary.
  ① Turn the SEL/PUSH EXEC dial to select the colour, size, or position, then press the dial. The item appears.
  ② Turn the SEL/PUSH EXEC dial to select the desired item, then press the dial.
  ③ Repeat steps ① and ② until the title is laid out as desired.
**(5)** Press the SEL/PUSH EXEC dial again to complete the setting.
**(6)** Press START/STOP to start recording.
**(7)** When you want to stop recording the title, press TITLE.

**(1)** В режиме CAMERA, нажмите кнопку TITLE для отображения меню титров.
**(2)** Поверните диск SEL/PUSH EXEC для выбора индикации 🗀, а затем нажмите диск.
**(3)** Выберите нужный титр в установках меню, затем нажмите диск SEL/PUSH EXEC.
**(4)** Измените цвет, размер или положение титра, если нужно.
  ① Поверните диск SEL/PUSH EXEC для выбора цвета, размера или положения титра, а затем нажмите диск. Появится нужный пункт.
  ② Поверните диск SEL/PUSH EXEC для выбора нужного пункта, а затем нажмите диск.
  ③ Повторяйте пункты ① и ② до тех пор, пока титр не будет расположен, как нужно.
**(5)** Нажмите диск SEL/PUSH EXEC еще раз для завершения установки.
**(6)** Нажмите кнопку START/STOP для начала записи.
**(7)** Если Вы хотите остановить запись титра, нажмите кнопку TITLE.

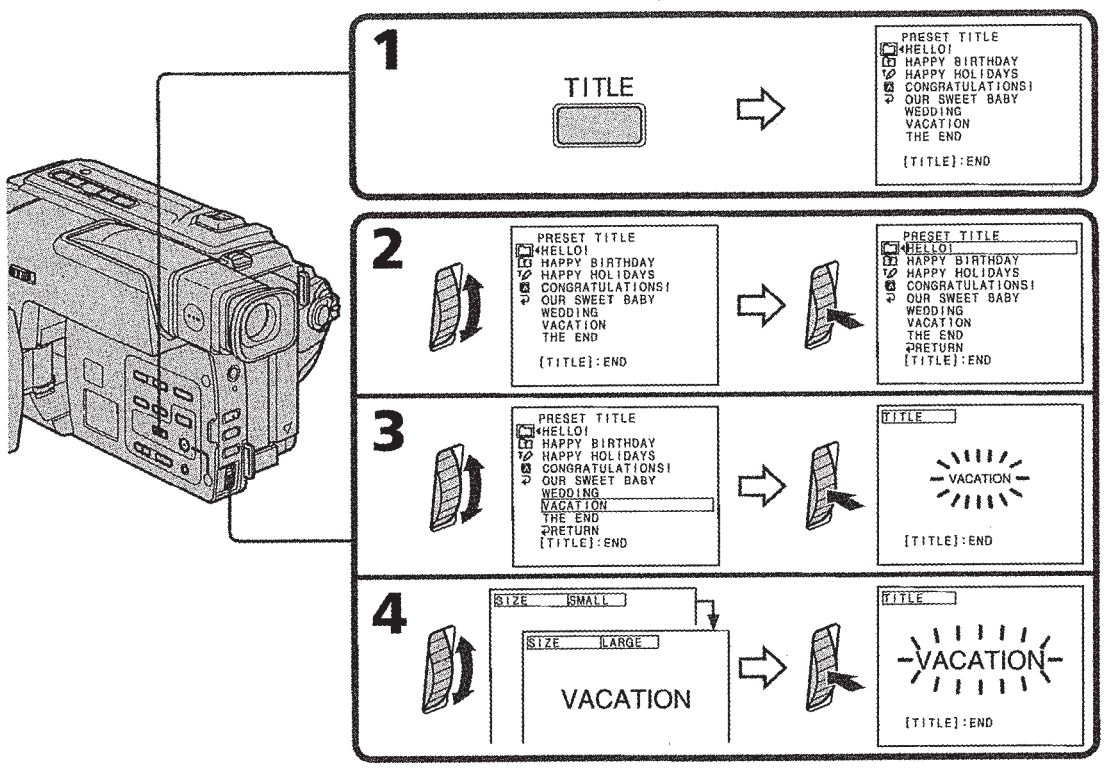

## Superimposing a title

### To superimpose the title while you are recording

Press TITLE while you are recording, and carry out steps 2 to 5. When you press the SEL/PUSH EXEC dial at step 5, the title is superimposed.

### To select the language of a preset title

If you want to change the language, select 🅰 before step 2. Then select the desired language and return to step 2.

---

**Note**

Both the date and time or either of them may not be displayed depending on the size or position of the title.

**If you display the menu or title menu while superimposing a title**

The title is not recorded while the menu or title menu is displayed.

**To use the custom title**

If you want to use the custom title, select 🅃 in step 2.

**Title setting**

- The title colour changes as follows :
  WHITE ←→ YELLOW ←→ VIOLET ←→ RED ←→ CYAN ←→ GREEN ←→ BLUE
- The title size changes as follows :
  SMALL ←→ LARGE
  You cannot input 13 characters or more in LARGE size.
- The title position changes as follows :
  1 ←→ 2 ←→ 3 ←→ 4 ←→ 5 ←→ 6 ←→ 7 ←→ 8 ←→ 9
  The larger the position number, the lower the title is positioned.
  When you select the title size "LARGE", you cannot choose position 9.
  When you select the title size "LARGE" in the CINEMA mode, you cannot choose position 8 nor 9.

**When you are selecting and setting the title**

You cannot superimpose the title displayed on the screen.

**When you superimpose a title while you are recording**

The beep does not sound.

## Наложение титра

### Для наложения титра во время записи

Нажмите кнопку TITLE во время записи и выполните действия пунктов со 2 по 5. Если Вы нажмете кнопку SEL/PUSH EXEC в пункте 5, титр будет наложен на изображение.

### Для выбора языка предварительно установленного титра

Если Вы хотите изменить язык, выберите индикацию 🅰 перед выполнением действия пункта 2. Затем выберите нужный язык и вернитесь к пункту 2.

---

**Примечание**

Индикация даты и времени или же одна из них не могут отображаться на дисплее в зависимости от размера или положения титра.

**Если на дисплее отображается меню или меню титров во время наложения титра**

Титр не записывается во время отображения на дисплее меню или меню титров.

**Для использования созданного Вами титра**

Если Вы хотите использовать созданный Вами титр, выберите индикацию 🅃 в пункте 2.

**Установка титра**

- Цвет титра изменяется следующим образом:
  WHITE (БЕЛЫЙ) ←→ YELLOW (ЖЕЛТЫЙ) ←→ VIOLET (ФИОЛЕТОВЫЙ) ←→ RED (КРАСНЫЙ) ←→ CYAN (ГОЛУБОЙ) ←→ GREEN (ЗЕЛЕНЫЙ) ←→ BLUE (СИНИЙ)
- Размер титра изменяется следующим образом:
  SMALL (МАЛЕНЬКИЙ) ←→ LARGE (БОЛЬШОЙ)
  Вы не можете ввести 13 знаков или более при размере LARGE.
- Положение титра изменяется следующим образом:
  1 ←→ 2 ←→ 3 ←→ 4 ←→ 5 ←→ 6 ←→ 7 ←→ 8 ←→ 9
  Чем больше номер положения титра, тем ниже будет расположен титр.
  Если Вы выберите размер "LARGE", Вы не сможете изменять положения 9.
  Если Вы выберите размер титра "LARGE" в режиме CINEMA, Вы не сможете выбрать ни положение 8, ни положение 9.

**Во время выбора и установки титра**

Вы не можете налагать на изображение титр, отображаемый на экране.

**При наложении титра во время записи**

Зуммерного сигнала не будет.

# Making your own titles

You can make up to two titles and store them in your camcorder. Each title can have up to 20 characters.

**(1)** In CAMERA or PLAYER mode, press TITLE.
**(2)** Turn the SEL/PUSH EXEC dial to select T✎, then press the dial.
**(3)** Turn the SEL/PUSH EXEC dial to select the first line (CUSTOM1 SET) or second line (CUSTOM2 SET), then press the dial.
**(4)** Turn the SEL/PUSH EXEC dial to select the column of the desired character, then press the dial.
**(5)** Turn the SEL/PUSH EXEC dial to select the desired character, then press the dial.
**(6)** Repeat steps 4 and 5 until you have selected all characters and completed the title.
**(7)** To finish making your own titles, turn the SEL/PUSH EXEC dial to select [SET], then press the dial. The title is stored in memory.
**(8)** Press TITLE to make the title menu disappear.

# Создание своих собственных титров

Вы можете создать два собственных титра и хранить их в памяти видеокамеры. Каждый титр может состоять из 20 символов.

**(1)** В режиме CAMERA или PLAYER, нажмите кнопку TITLE.
**(2)** Поверните диск SEL/PUSH EXEC для выбора индикации T✎, а затем нажмите диск.
**(3)** Поверните диск SEL/PUSH EXEC для выбора первой строки (CUSTOM1 SET) или второй строки (CUSTOM2 SET), а затем нажмите диск.
**(4)** Поверните диск SEL/PUSH EXEC для выбора колонки с нужным символом, а затем нажмите диск.
**(5)** Поверните диск SEL/PUSH EXEC нужного символа, а затем нажмите диск.
**(6)** Повторяйте действия пунктов 4 и 5 до тех пор, пока не выберите все символы и не составите полностью титр.
**(7)** Для завершения создания своих собственных титров поверните диск SEL/PUSH EXEC для выбора команды [SET], а затем нажмите диск. Титр будет занесен в память.
**(8)** Нажмите кнопку TITLE, чтобы меню титров исчезло.

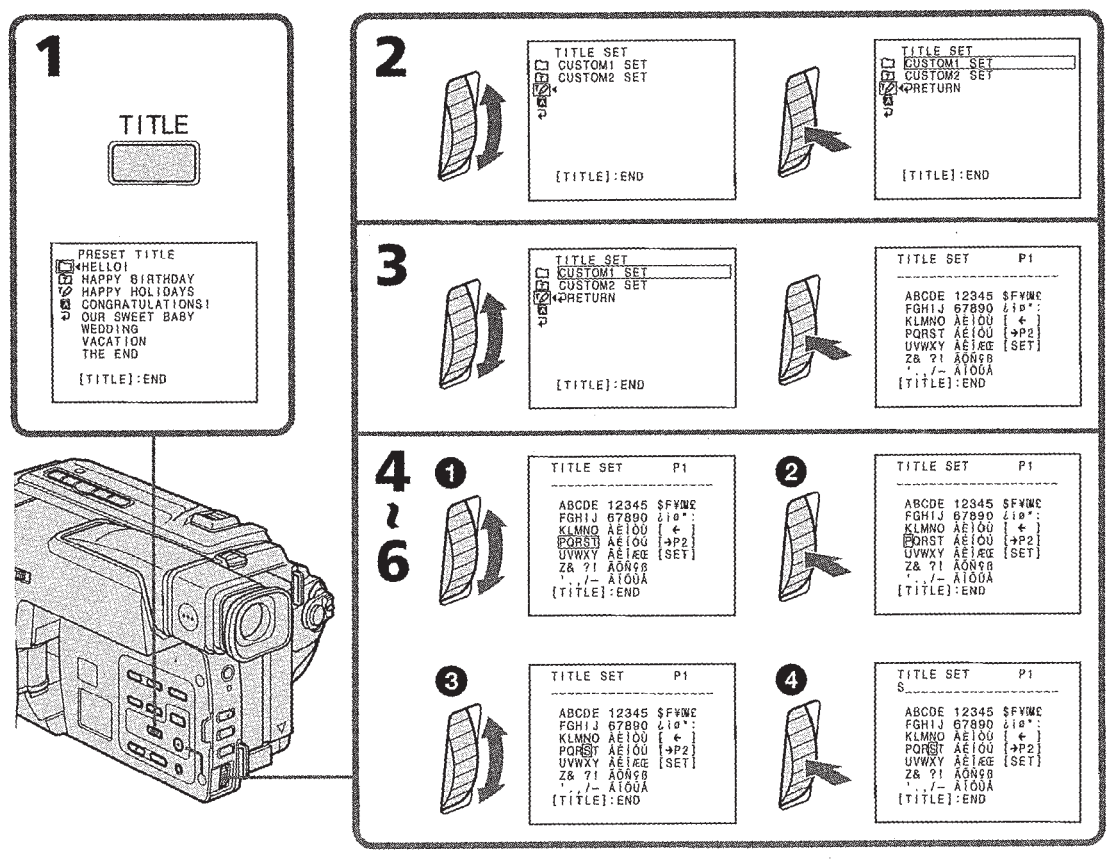

## Making your own titles

### To change a title you have stored

In step 3, select CUSTOM1 SET or CUSTOM2 SET, depending on which title you want to change, then press the SEL/PUSH EXEC dial. Turn the SEL/PUSH EXEC dial to select [←], then press the dial to delete the title. The last character is erased. Enter the new title as desired.

---

**If you take 5 minutes or longer to enter characters in the standby mode while a cassette is in your camcorder**

The power automatically turns off. The characters you have entered remain stored in memory. Set the POWER switch to OFF (CHARGE) once, and turn it to CAMERA again, then proceed from step 1.
We recommend setting the POWER switch to PLAYER or removing the cassette so that your camcorder does not automatically turn off while you are entering title characters.

**If you select [→P2]**

The menu for selecting alphabet and Russian characters appears. Select [→P1] to return to the previous screen.

**To delete the title**

Select [←]. The last character is erased.

**To enter a space**

Select [ Z&    ? ! ], then select the blank part.

## Создание своих собственных титров

### Для изменения сохраненного в памяти титра

В пункте 3, выберите команду CUSTOM1 SET или CUSTOM2 SET в зависимости от того, какой титр Вы хотите изменить, а затем нажмите диск SEL/PUSH EXEC. Поверните диск SEL/PUSH EXEC для выбора индикации [←], а затем нажмите диск для удаления титра. Последний символ будет удален. Введите новый нужный символ.

---

**Если при вводе символов пройдет 5 минут или более в режиме ожидания при вставленной кассете в Вашу видеокамеру**

Питание автоматически выключится. Введенные символы будут сохранены в памяти. Установите переключатель POWER сначала в положение OFF (CHARGE), снова верните его в положение CAMERA, а затем продолжите с пункта 1.
Рекомендуется установить переключатель POWER в положение PLAYER или вынуть кассету, чтобы Ваша видеокамера автоматически не выключалась при вводе символов титра.

**Если Вы выбрали команду [→P2]**

Появится меню для выбора алфавита и русских букв. Выберите команду [→P1], чтобы вернуться к предыдущему экрану.

**Для удаления титра**

Выберите команду [←]. Последний символ будет удален.

**Для ввода пробела**

Нажмите клавиши [ Z&    ? ! ], а затем выберите чистую часть.

# Using the built-in light

You can use the built-in light to suit your shooting situation. The recommended distance between the subject and camcorder is about 1.5 m (5 feet).

Press LIGHT until the ON indicator appears on the screen while your camcorder is in CAMERA mode. The built-in light turns on. If you turn the POWER switch to OFF (CHARGE), the built-in light turns off simultaneously. You cannot turn the built-in light on by turning the POWER switch to CAMERA again. To turn on the built-in light again, press LIGHT again in CAMERA mode.

# Использование встроенной подсветки

Вы можете использовать встроенную подсветку в соответствии с условиями съемки. Рекомендуемое расстояние между объектом и видеокамерой равно около 1,5 м.

Нажимайте кнопку LIGHT в то время, когда видеокамера находится в режиме CAMERA до тех пор, пока индикатор ON не появится на экране. Высветится встроенная подсветка. Если Вы повернете переключатель POWER в положение OFF (CHARGE), встроенная подсветка одновременно погаснет. Вы не сможете включить встроенную подсветку, снова повернув переключатель POWER в положение CAMERA. Для включения встроенной подсветки, нажмите снова кнопку LIGHT в режиме CAMERA.

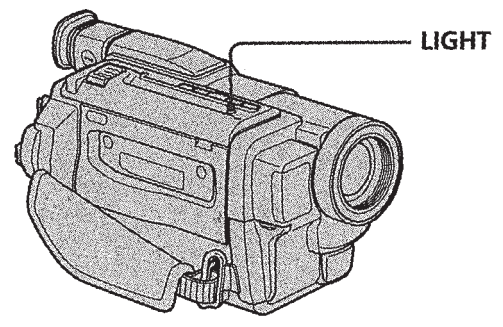

### To turn off the built-in light

Press LIGHT until no indicator appears on the screen.

### To turn on the built-in light automatically

Press LIGHT until the AUTO indicator appears on the screen.
The built-in light automatically turns on and off according to the ambient brightness.

### Для выключения встроенной подсветки

Нажимайте кнопку LIGHT до тех пор, пока на экране не останется никакого индикатора.

### Для автоматического включения встроенной подсветки

Нажимайте кнопку LIGHT до тех пор, пока индикатор AUTO появится на экране.
Встроенная подсветка будет автоматически включаться и выключаться в соответствии с яркостью окружающей среды.

---

## Using the built-in light

**CAUTION**

**Be careful not to touch the lighting section, because the plastic window and surrounding surfaces are hot while the light is on. It remains hot for a while after the light is turned off.**

**DANGER**

**Not to be handled by children.**
**Emits intense heat and light.**
**Use with caution to reduce the risk of fire or injury to persons.**
**Do not directly light at persons or materials from less than 1.22 m (4 feet) during use and until cool.**
**Turn the built-in light off when not in use.**

**When you press LIGHT**
The indicator changes as follows:

→ AUTO → ON → no indicator

**Notes**
- The built-in light turns off automatically in the following cases:
  - When it stays on in the AUTO mode for more than 5 minutes.
  - When you leave it on for more than 5 minutes with no cassette inserted or after the tape has run out.

  To turn the built-in light on again, press LIGHT again.
- The battery pack is quickly discharging while the built-in light is turned on. Turn it off when not in use.
- When you do not use your camcorder, turn the built-in light off and remove the battery pack to avoid turning on the built-in light accidentally.
- When flickering occurs while shooting in the AUTO mode, press LIGHT until the ON indicator appears.
- The built-in light may turn on/off when you use the PROGRAM AE or backlight function while shooting in the AUTO mode.

## Использование встроенной подсветки

**ВНИМАНИЕ**

**Будьте осторожны, чтобы не прикасаться к секции подсветки, поскольку пластмассовое окно и прилегающая поверхность являются горячими при включенной подсветке. Эта секция будет оставаться горячей и некоторое время после выключения подсветки.**

**ОСТОРОЖНО**

**Детям пользоваться аппаратом запрещено. Он излучает сильное тепло и свет.**
**Соблюдайте осторожность, чтобы не допустить случайного воспламенения предметов и не травмировать людей вокруг.**
**Не направляйте подсветку на людей или материалы с расстояния менее 1,22 м во время пользования аппаратом и до его остывания.**
**Выключите встроенную подсветку, если аппарат не используется.**

**При нажатии кнопки LIGHT**
Индикатор изменяется, как

→ AUTO → ON → индикатора нет

**Примечания**
- Встроенная подсветка выключается автоматически в следующих случаях:
  - Если она остается включенной в режиме AUTO более, чем на 5 минут.
  - Если Вы оставляете ее включенной более чем на 5 минут, когда кассета не установлена или достигнут конец ленты.

  Чтобы включить встроенную подсветку снова, нажмите кнопку LIGHT еще раз.
- Батарейный блок быстро разряжается при включенной подсветке. Выключите ее, если аппарат не используется.
- Если Вы не используете Вашу видеокамеру, выключите встроенную подсветку и снимите батарейный блок во избежание случайного включения встроенной подсветки.
- В случае появления мерцания во время съемки в режиме AUTO нажимайте кнопку LIGHT, пока не появится индикатор ON.
- Встроенная подсветка может включаться/выключаться при использовании функции PROGRAM AE или функции задней подсветки во время съемки в AUTO режиме.

---

## Using the built-in light

- The built-in light may be turned off when inserting or ejecting a cassette.
- While the end search function is working, the built-in light is turned off.
- When you use the conversion lens (optional) light from the built-in light is blocked and may not illuminate the subject properly.

### Replacing the bulb

Use the Sony XB-3D halogen lamp (optional). The supplied halogen lamp is not on the market. Purchase the Sony XB-3D halogen lamp.
Remove the power source before replacing the bulb.

**(1)** Remove the built-in light unit while pushing the hole under the built-in light unit using a wire.
**(2)** Turn the bulb housing counterclockwise and detach from the built-in light unit.
**(3)** Replace the bulb using a dry cloth.
**(4)** Attach the bulb housing turning it clockwise, then replace the built-in light unit.

## Использование встроенной подсветки

- Встроенная подсветка может выключаться при установке или извлечении кассеты.
- При использовании функции поиска конца записи на ленте встроенная подсветка выключается.
- Если Вы используете преобразовательный объектив (приобретается отдельно), лампа встроенной подсветки блокируется и может не обеспечивать освещение объекта надлежащим образом.

### Замена лампы накаливания

Используйте галогенную лампу Sony XB-3D (приобретается отдельно). Прилагаемая галогенная лампа не поступает в розничную продажу. Приобретите галогенную лампу Sony XB-3D.
Перед заменой лампы накаливания выньте источник питания.

**(1)** Выньте встроенное устройство подсветки, нажав на отверстие под встроенным устройством с помощью проволоки.
**(2)** Поверните корпус лампы накаливания против часовой стрелки и отсоедините лампу от встроенного устройства подсветки.
**(3)** Отсоедините лампу накаливания с помощью сухой ткани.
**(4)** Прикрепите корпус лампы накаливания, повернув его по часовой стрелке, и замените встроенное устройство подсветки.

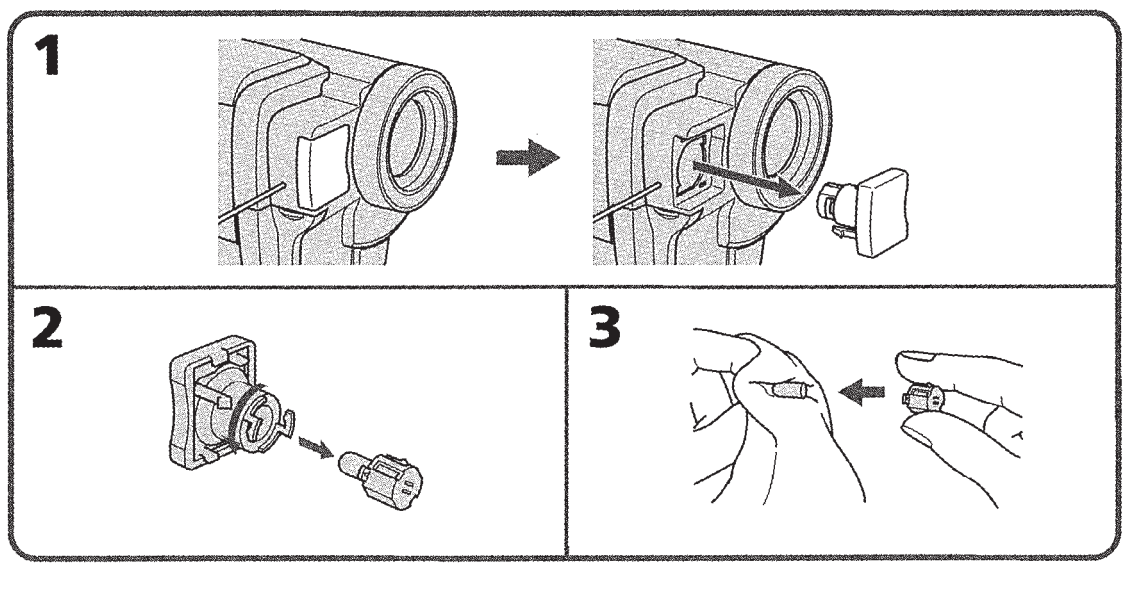

---

## Using the built-in light

**CAUTION**

- When replacing the bulb, use only the Sony XB-3D halogen lamp (optional) to reduce the risk of fire.
- To prevent possible burn hazard, disconnect the power source before replacing and do not touch the bulb until the bulb becomes cool enough to handle (for about 30 minutes or more).

**Note**
To prevent the bulb from being smudged with finger prints, handle it with a dry cloth, etc. If the bulb is smudged, wipe it completely.

## Использование встроенной подсветки

**ВНИМАНИЕ**

- При замене лампы накаливания используйте только галогенную лампу Sony XB-3D (приобретается отдельно) для уменьшения вероятности воспламенения.
- Для предотвращения опасности получения ожога, отсоедините источник питания перед тем, как заменить лампу накаливания, и не прикасайтесь к лампе до тех пор, пока она достаточно не остынет (около 30 минут или более).

**Примечание**
Для предотвращения загрязнения лампы накаливания от отпечатков пальцев обращайтесь с ней осторожно, используя сухую ткань. В случае загрязнения лампы накаливания тщательно протрите ее.

— Editing —

# Dubbing a tape

### Using the A/V connecting cable

Connect your camcorder to the VCR using the A/V connecting cable supplied with your camcorder.
You can record and edit a picture with the connected VCR by using your camcorder as a player.
Make the indicators disappear by pressing DISPLAY . If you do not make the indicators disappear, they are recorded on tapes.

**(1)** Insert a blank tape (or a tape you want to record over) into the VCR, and insert the recorded tape into your camcorder.
**(2)** Set the input selector on the VCR to LINE. Refer to the operating instructions of your VCR for more information.
**(3)** Set the POWER switch to PLAYER.
**(4)** Play back the recorded tape on your camcorder.
**(5)** Start recording on the VCR. Refer to the operating instructions of your VCR for more information.

—Монтаж —

# Перезапись ленты

### Использование соединительного шнура аудио/видео

Подсоедините Вашу видеокамеру к КВМ с помощью соединительного кабеля аудио/видео, который прилагается к Вашей видеокамере.
Вы можете записывать и монтировать изображение на присоединенном КВМ, используя Вашу видеокамеру в качестве плейера.
Отключите индикаторы, нажав кнопку DISPLAY. Если Вы не отключите индикаторы, они будут записаны на ленте.

**(1)** Вставьте незаписанную ленту (или ленту, на которую Вы хотите выполнить запись) в КВМ и вставьте записанную ленту в Вашу видеокамеру.
**(2)** Установите селектор входного сигнала на КВМ в положение LINE. Подробные сведения приведены в инструкции по эксплуатации Вашего КВМ.
**(3)** Установите переключатель POWER в положение PLAYER.
**(4)** Начните воспроизведение записанной ленты на Вашей видеокамере.
**(5)** Начните запись на Вашем КВМ. Подробные сведения приведены в инструкции по эксплуатации Вашего КВМ.

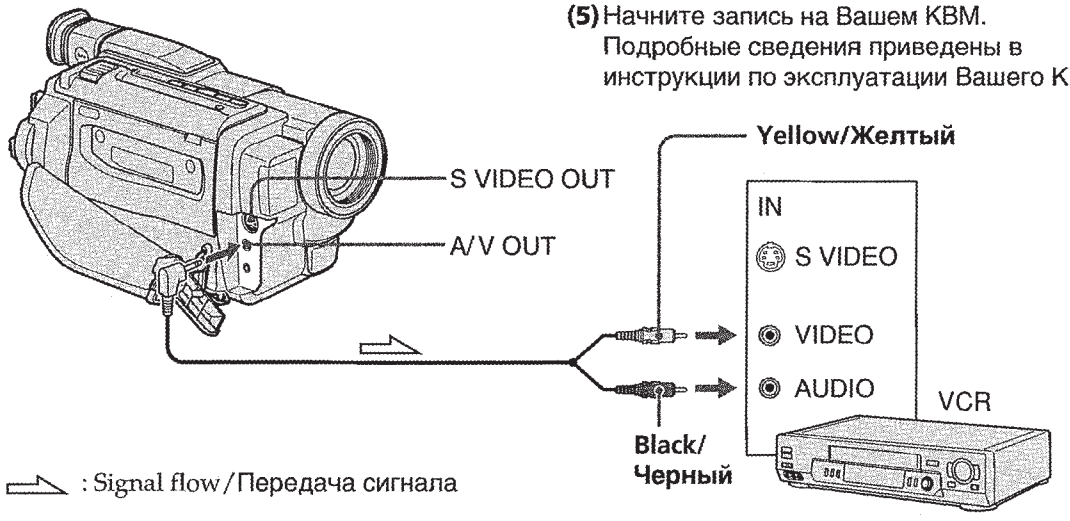
S VIDEO OUT
A/V OUT
Yellow/Желтый
IN
S VIDEO
VIDEO
AUDIO
VCR
Black/
Черный

⟶ : Signal flow/Передача сигнала

### When you have finished dubbing a tape

Press ■ on both your camcorder and the VCR.

### To prevent deterioration of pictures when dubbing

Set EDIT to ON in the menu settings before dubbing.

### Если Вы закончили перезапись ленты

Нажмите кнопку ■ как на видеокамере, так и на КВМ.

### Для предотвращения ухудшения изображения при перезаписи

Перед выполнением перезаписи установите переключатель EDIT в положение ON в установках меню.

## Dubbing a tape

**You can edit on VCRs that support the following systems**
8 8 mm, Hi8 Hi8, Digital8, VHS VHS, SVHS S-VHS, VHSC VHSC, SVHSC S-VHSC, β Betamax, Mini DV mini DV or DV DV

**Connect using an S video cable (optional) to obtain high-quality pictures**
With this connection, you do not need to connect the yellow (video) plug of the A/V connecting cable.
Connect an S video cable (optional) to the S video jacks of both your camcoder and the VCR.

## Перезапись ленты

**Вы можете выполнять монтаж на КВМ, которые поддерживают следующие системы**
8 8 мм, Hi8 Hi8, Digital8, VHS VHS, SVHS S-VHS, VHSC VHSC, SVHSC S-VHSC, β Betamax, Mini DV mini DV или DV DV

**Выполните подсоединение с помощью кабеля S видео (не прилагается) для получения высококачественных изображений**
При таком подсоединении Вам не нужно подсоединять желтый (видео) штекер соединительного кабеля аудио/видео.
Подсоедините кабель S видео (не прилагается) к гнездам S видео на Вашей видеокамере и КВМ.

— Customizing Your Camcorder —

# Changing the menu settings

To change the mode settings in the menu settings, select the menu items with the SEL/PUSH EXEC dial. The default settings can be partially changed. First, select the icon, then the menu item and then the mode.

**(1)** In CAMERA or PLAYER mode, press MENU.
**(2)** Turn the SEL/PUSH EXEC dial to select the desired icon, then press the dial to set.
**(3)** Turn the SEL/PUSH EXEC dial to select the desired item, then press the dial to set.
**(4)** Turn the SEL/PUSH EXEC dial to select the desired mode, and press the dial to set.
**(5)** If you want to change other items, select ⮐ RETURN and press the dial, then repeat steps from 2 to 4.
For details, see "Selecting the mode setting of each item"(p. 69).

— Выполнение индивидуальных установок на видеокамере —

# Изменение установок меню

Для изменения установок режима в установках меню выберите пункты меню с помощью диска SEL/PUSH EXEC. Установки по умолчанию могут быть частиуно изменены. Сначала выберите пиктограмму, затем пункт меню, а затем режим.

**(1)** В режиме CAMERA или режиме PLAYER нажмите кнопку MENU.
**(2)** Поверните диск SEL/PUSH EXEC для выбора нужной пиктограммы, а затем нажмите диск для установки.
**(3)** Поверните диск SEL/PUSH EXEC для выбора нужной пиктограммы, а затем нажмите диск для установки.
**(4)** Поверните диск SEL/PUSH EXEC для выбора нужной пиктограммы, а затем нажмите диск для установки.
**(5)** Если Вы хотите изменить другие пункты, выберите команду ⮐ RETURN, а затем нажмите диск, после чего повторите действия пунктов со 2 по 4.
Подробные сведения приведены в разделе "Выбор установок режима по каждому пункту" (стр. 74)

## Changing the menu settings

## Изменение установок меню

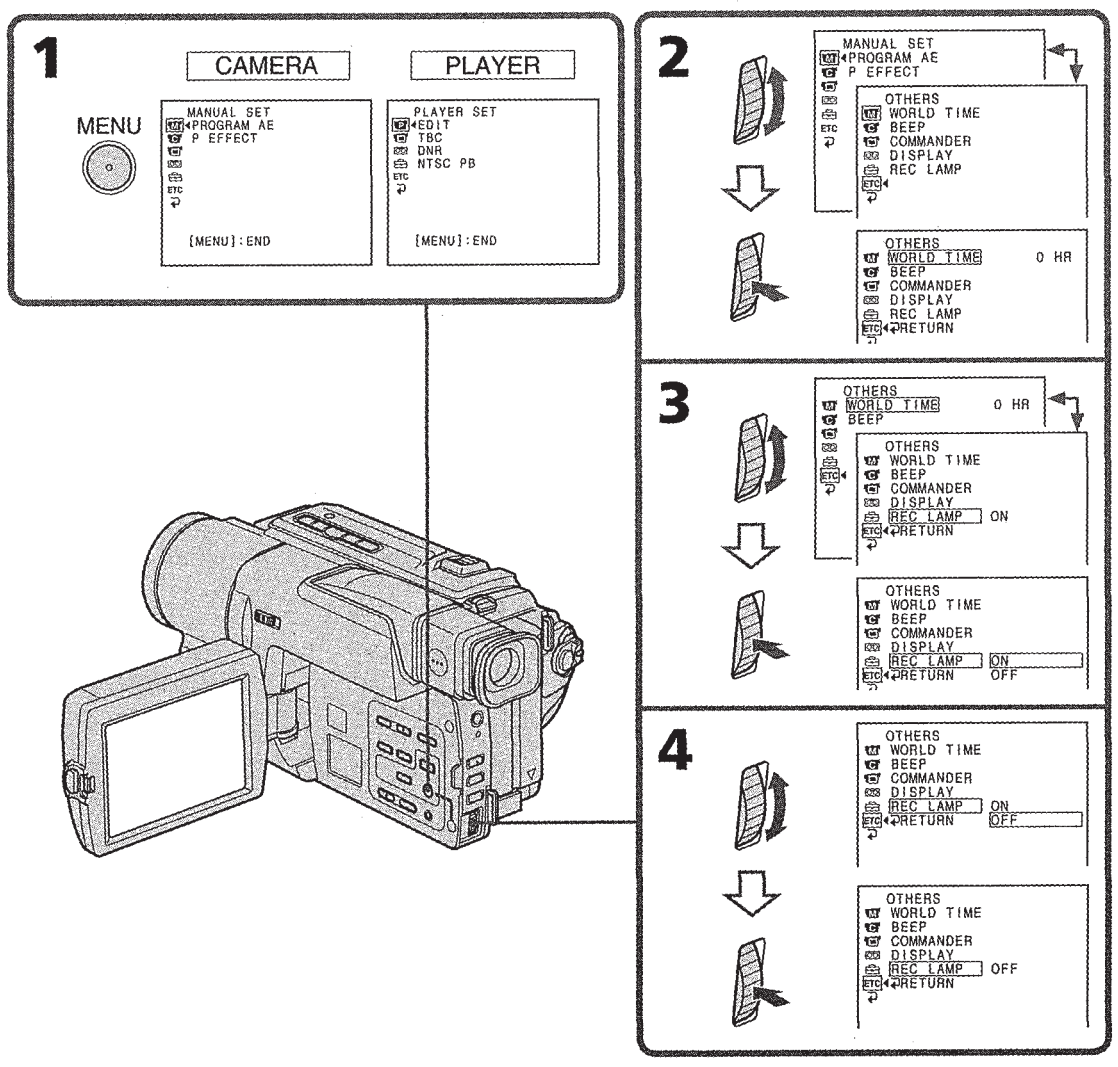
1
CAMERA
PLAYER
MENU
MANUAL SET
PROGRAM AE
P EFFECT
[MENU]:END
PLAYER SET
EDIT
TBC
DNR
NTSC PB
[MENU]:END
2
MANUAL SET
PROGRAM AE
P EFFECT
OTHERS
WORLD TIME
BEEP
COMMANDER
DISPLAY
REC LAMP
ETC
OTHERS
WORLD TIME 0 HR
BEEP
COMMANDER
DISPLAY
REC LAMP
RETURN
3
OTHERS
WORLD TIME 0 HR
BEEP
OTHERS
WORLD TIME
BEEP
COMMANDER
DISPLAY
REC LAMP ON
RETURN
OTHERS
WORLD TIME
BEEP
COMMANDER
DISPLAY
REC LAMP ON
RETURN OFF
4
OTHERS
WORLD TIME
BEEP
COMMANDER
DISPLAY
REC LAMP ON
RETURN OFF
OTHERS
WORLD TIME
BEEP
COMMANDER
DISPLAY
REC LAMP OFF
RETURN

**To make the menu display disappear**
Press MENU.

**Для того, чтобы исчезла индикация меню**
Нажмите кнопку MENU.

## Changing the menu settings

**Menu items are displayed as the following icons:**

- M MANUAL SET
- C CAMERA SET
- P PLAYER SET
- LCD SET
- TAPE SET
- SETUP MENU
- ETC OTHERS

**Depending on your camcorder model**
The menu display may be different from that in this illustration.

## Изменение установок меню

**Пункты меню отображаются в виде шести, приведенных ниже, пиктограмм:**

- M MANUAL SET
- C CAMERA SET
- P PLAYER SET
- LCD SET
- TAPE SET
- SETUP MENU
- ETC OTHERS

**В зависимость от модели Вашей видеокамеры**
Меню индикации может отличаться от указанной на рисунке.

**English**

### Selecting the mode setting of each item

● is the default setting.

Menu items differ according to the position of the POWER switch.
The screen shows only the items you can operate at the moment.

| Icon/item | Mode | Meaning | POWER switch |
|---|---|---|---|
| M **PROGRAM AE** | —— | To suit your specific shooting requirement (p. 51) | CAMERA |
| **P EFFECT** | —— | To add special effects like those in films or on the TV to images (p. 49). | CAMERA |
| C **D ZOOM** | ● OFF | If you set to OFF, digital zoom is deactivated and up to 20× is carried out. | CAMERA |
| | 40×<br>450× | If you set to 40×/450×, digital zoom is activated and more than 20× to 40×/450× is performed digitally. (p. 30) (CCD-TRV49E only) | |
| | ● OFF | If you set to OFF, digital zoom is deactivated and up to 20× is carried out. | |
| | 40×<br>460× | If you set to 40×/460×, digital zoom is activated and more than 20× to 40×/460× is performed digitally. (p. 30) (CCD-TRV58E only) | |
| | ● OFF | If you set to OFF, digital zoom is deactivated and up to 20× is carried out. | |
| | 40×<br>560× | If you set to 40×/560×, digital zoom is activated and more than 20× to 40×/560× is performed digitally. (p. 30) (CCD-TRV59E/TRV78E/TRV98E only) | |
| **16:9WIDE** | ● OFF | — | CAMERA |
| | CINEMA | To record in the CINEMA mode (p. 44) | |
| | 16:9FULL | To record in the 16:9FULL mode | |
| **STEADYSHOT*** | ● ON | To compensate for camera-shake | CAMERA |
| | OFF | To cancel the SteadyShot function. Natural pictures are produced when shooting a stationary object with a tripod. | |
| **N.S. LIGHT** | ● ON | To use the NightShot Light function (p. 34) | CAMERA |
| | OFF | To cancel the NightShot Light function | |

* CCD-TRV78E/TRV98E only

## Changing the menu settings

| Icon/item | Mode | Meaning | POWER switch |
|---|---|---|---|
| P **EDIT** | ● OFF | — | PLAYER |
| | ON | To minimize picture deterioration when editing | |
| **TBC** | ● ON | To correct jitter | PLAYER |
| | OFF | To not correct jitter. Set TBC to OFF when playing back a tape on which you have dubbed over and recorded the signal of a TV game or similar machine. | |
| TBC stands for “Time Base Corrector”. | | | |
| **DNR** | ● ON | To reduce picture noise | PLAYER |
| | OFF | To reduce a conspicuous afterimage when the picture has a lot of movement | |
| DNR stands for “Digital Noise Reduction”. | | | |
| **NTSC PB** | ● ON PAL TV | To play back a tape recorded in the NTSC colour system on a PAL system TV | PLAYER |
| | NTSC 4.43 | To play back a tape recorded in the NTSC colour system on a TV with the NTSC 4.43 mode | |
| **LCD BRIGHT** | —— | To adjust the brightness on the LCD screen with the SEL/PUSH EXEC dial.  | PLAYER<br>CAMERA |
| **LCD B. L.** | ● BRT NORMAL | To set the brightness on the LCD screen normal | PLAYER<br>CAMERA |
| | BRIGHT | To brighten the LCD screen | |
| **LCD COLOUR** | —— | To adjust the colour on the LCD screen  | PLAYER<br>CAMERA |

**Notes on the SteadyShot function (CCD-TRV78E/TRV98E only)**

- The SteadyShot function will not correct excessive camera-shake.
- Attachment of a conversion lens (optional) may influence the SteadyShot function.
- SteadyShot does not operate in the 16:9FULL mode. If you set STEADYSHOT to ON in the menu settings, the “✋” indicator flashes.

**If you cancel the SteadyShot function (CCD-TRV78E/TRV98E only)**
The SteadyShot off indicator ✋ appears. Your camcorder prevents excessive compensation for camera-shake.

**Note on the playback of the NTSC tapes**
You can play back tapes recorded in the NTSC video system.
When you play back a tape on a Multi System TV, select the best mode while viewing the picture on the TV.

**In more than 5 minutes after removing the power source**
The “EDIT” and “COMMANDER” (CCD-TRV49E/TRV59E/TRV78E/TRV98E only) items are returned to their default settings.
The other menu items are held in memory even when the battery is removed.

**Note on LCD B.L.**
When you use power sources other than the battery pack, “BRIGHT” is automatically selected.

## Changing the menu settings

| Icon/item | Mode | Meaning | POWER switch |
|---|---|---|---|
| **REC MODE** | ● SP | To record in SP (Standard Play) mode | CAMERA |
| | LP | To increase the recording time to twice the SP mode | |
| **ORC TO SET** | —— | To automatically adjust the recording condition to get the best possible recording. Press START/STOP to start adjustment. Your camcorder takes about 10 seconds to check the tape condition and then returns to the standby mode. | CAMERA |
| ORC stands for “Optimizing the Recording Condition”. | | | |
| **REMAIN** | ● AUTO | To display the remaining tape bar:<br>• for about 8 seconds after your camcorder is turned on and calculates the remaining amount of tape<br>• for about 8 seconds after a cassette is inserted and your camcorder calculates the remaining amount of tape<br>• for about 8 seconds after ▶ is pressed in PLAYER mode<br>• for about 8 seconds after DISPLAY is pressed to display the screen indicators<br>• for the period of tape rewinding, forwarding or picture search in the PLAYER mode | PLAYER<br>CAMERA |
| | ON | To always display the remaining tape bar | |

**Notes on the LP mode**

- When you record a tape in the LP mode on your camcorder, we recommend playing back the tape on your camcorder. When you play back the tape on other camcorders or VCRs, noise may occur in pictures or sound.
- Noise may occur also when you play on your camcorder tapes recorded in the LP mode on other camcorders or VCRs.

**Notes on ORC setting**

- Each time you eject the cassette, the ORC setting will be canceled. If necessary, reset the setting.
- You cannot use this setting on a tape with the red mark on the cassette exposed.
  (i. e. the tape is write-protected)
- When you set ORC TO SET, a non-recorded section of about 0.1 seconds appears on the tape. However, note that this non-recorded section disappears from the tape when you continue recording from this section.
- To check if you have already set the ORC setting, select ORC TO SET in the menu settings. “ORC ON” is displayed if ORC TO SET is already set.

## Changing the menu settings

| Icon/item | Mode | Meaning | POWER switch |
|---|---|---|---|
| **CLOCK SET** | —— | To set the date or time (p. 22) | CAMERA |
| **AUTO DATE** | ● ON | To record the date for 10 seconds after recording has started | CAMERA |
| | OFF | To cancel the auto date function | |
| **LTR SIZE** | ● NORMAL | To display selected menu items in normal size | PLAYER<br>CAMERA |
| | 2× | To display selected menu items at twice the normal size | |
| **DEMO MODE** | ● ON | To make the demonstration appear | CAMERA |
| | OFF | To cancel the demonstration mode | |

**Notes on DEMO MODE**

- You cannot select DEMO MODE when a cassette is inserted in your camcorder.
- DEMO MODE is set to STBY (Standby) at the factory and the demonstration starts about 10 minutes after you have set the POWER switch to CAMERA without a cassette inserted.
  To cancel the demonstration, insert a cassette, set the POWER switch to other than CAMERA, or set DEMO MODE to OFF.
- When NIGHTSHOT is set to ON, the “NIGHTSHOT” indicator appears on the screen and you cannot select DEMO MODE in the menu settings.

## Changing the menu settings

| Icon/item | Mode | Meaning | POWER switch |
|---|---|---|---|
| ETC **WORLD TIME** | —— | To set the clock to the local time. Turn the SEL/PUSH EXEC dial to set a time difference. The clock changes by the time difference you set here. If you set the time difference to 0, the clock returns to the originally set time. | CAMERA |
| **BEEP** | ● MELODY | To output the melody when you start/stop recording or when an unusual condition occurs on your camcorder | PLAYER<br>CAMERA |
| | NORMAL | To output the beep sound instead of the melody | |
| | OFF | To cancel the melody and beep sound | |
| **COMMANDER*** | ● ON | To activate the Remote Commander supplied with your camcorder | PLAYER<br>CAMERA |
| | OFF | To deactivate the Remote Commander to avoid remote control misoperation caused by other VCR's remote control | |
| **DISPLAY** | ● LCD | To show the display on the LCD screen and viewfinder | PLAYER<br>CAMERA |
| | V-OUT/LCD | To show the display on the TV screen, LCD screen and viewfinder | |
| **REC LAMP** | ● ON | To light up the camera recording lamp at the front of your camcorder | CAMERA |
| | OFF | To turn the camera recording lamp off so that the subject is not aware of the recording | |

* CCD-TRV49E/TRV59E/TRV78E/TRV98E only

**English**

# Types of trouble and their solutions

If you run into any problem using your camcorder, use the following table to troubleshoot the problem. If the problem persists, disconnect the power source and contact your Sony dealer or local authorized Sony service facility. If "C:□□:□□" appears on the screen, the self-diagnosis display function has worked. See page 83.

## In the recording mode

| Symptom | Cause and/or Corrective Actions |
|---|---|
| START/STOP does not operate. | • The POWER switch is set to OFF (CHARGE) or PLAYER.<br>→ Set it to CAMERA. (p. 26)<br>• The tape has run out.<br>→ Rewind the tape or insert a new one. (p. 24, 38)<br>• The write-protect tab is set to expose the red mark.<br>→ Use a new tape or slide the tab. (p. 24)<br>• The tape is stuck to the drum (moisture condensation).<br>→ Remove the cassette and leave your camcorder for at least 1 hour to acclimatize. (p. 98) |
| The power goes off. | • While being operated in CAMERA mode, your camcorder has been in the standby mode for more than 5 minutes.<br>→ Set the POWER switch to OFF (CHARGE) and then to CAMERA again. (p. 26)<br>• The battery pack is dead or nearly dead.<br>→ Install a fully charged battery pack. (p. 14, 15) |
| The image on the viewfinder screen is not clear. | • The viewfinder lens is not adjusted.<br>→ Adjust the viewfinder lens. (p. 31) |
| The SteadyShot function does not work. (CCD-TRV78E/TRV98E only) | • STEADYSHOT is set to OFF in the menu settings.<br>→ Set it to ON. (p. 69)<br>• The SteadyShot function does not work when the wide mode is set to 16:9FULL. |
| The autofocusing function does not work. | • FOCUS is set to MANUAL.<br>→ Set it to AUTO. (p. 55)<br>• Shooting conditions are not suitable for autofocus.<br>→ Set FOCUS to MANUAL to focus manually. (p. 55) |
| The ⊗ indicator flashes in the viewfinder. | • The video heads may be dirty.<br>→ Clean the heads using the Sony V8-25CLD cleaning cassette (optional). (p. 99) |
| The picture does not appear in the viewfinder. | • The LCD panel is open.<br>→ Close the LCD panel. (p. 28) |
| A vertical band appears when you shoot a subject such as lights or a candle flame against a dark background. | • The contrast between the subject and background is too high. This is not a malfunction. |
| A vertical band appears when you shoot a very bright subject. | • This is not a malfunction. |

(Continued on the following page)

| Symptom | Cause and/or Corrective Actions |
|---|---|
| An unknown picture is displayed on the screen. | • If 10 minutes elapse after you set the POWER switch to CAMERA or DEMO MODE is set to ON in the menu settings without a cassette inserted, your camcorder automatically starts the demonstration.<br>→ Insert a cassette and the demonstration stops. You can also cancel DEMO MODE. (p. 72) |
| The picture is recorded in incorrect or unnatural colours. | • NIGHTSHOT is set to ON.<br>→ Set it to OFF. (p. 34) |
| The picture appears too bright, and the subject does not appear on the screen. | • NIGHTSHOT is set to ON in a bright place.<br>→ Set it to OFF, or use the NightShot function in a dark place. (p. 34)<br>• The backlight function is working.<br>→ Cancel it. (p. 33) |

## In the playback mode

| Symptom | Cause and/or Corrective Actions |
|---|---|
| The tape does not move when a video control button is pressed. | • The POWER switch is set to CAMERA or OFF (CHARGE).<br>→ Set it to PLAYER. (p. 38)<br>• The tape has run out.<br>→ Rewind the tape. (p. 38) |
| The playback picture is not clear or does not appear. | • The television's video channel is not adjusted correctly.<br>→ Adjust it. (p. 42)<br>• EDIT is set to ON in the menu settings.<br>→ Set it to OFF. (p. 70)<br>• The video head may be dirty.<br>→ Clean the heads using the Sony V8-25CLD cleaning cassette (optional). (p. 99) |
| No sound or only a low sound is heard when playing back a tape. | • The volume is turned to minimum.<br>→ Turn up the volume. (p. 38) |

## In the recording and playback modes

| Symptom | Cause and/or Corrective Actions |
|---|---|
| The power does not turn on. | • The battery pack is not installed, or is dead or nearly dead.<br>→ Install a charged battery pack. (p. 14, 15)<br>• The AC power adaptor is not connected to the mains.<br>→ Connect the AC power adaptor to the mains. (p. 20) |
| The end search function does not work. | •The tape was ejected after recording.<br>•You have not recorded on the new cassette yet. |
| The battery pack is quickly discharged. | • The operating temperature is too low.<br>• The battery pack is not fully charged.<br>→ Charge the battery pack fully again. (p. 15)<br>• The battery pack is completely dead, and cannot be recharged.<br>→ Replace with a new battery pack. (p. 14) |
| The remaining battery time indicator does not indicate the correct time. | • You have used the battery pack in an extremely hot or cold environment for a long time.<br>• The battery pack is completely dead, and cannot be recharged.<br>→ Replace with a new battery pack. (p. 14)<br>• The battery is not fully charged.<br>→ Charge the battery pack fully again. (p. 15)<br>• A deviation has occured in the remainning battery time.<br>→ Charge the battery pack fully again. (p. 15) |
| The power goes off although the remaining battery indicator indicates that the battery pack has enough power to operate. | • A deviation has occured in the remaining battery time.<br>→ Charge the battery pack fully again. (p. 15) |
| The cassette cannot be removed from the holder. | • The power source is disconnected.<br>→ Connect it firmly. (p. 14, 20)<br>• The battery is dead.<br>→ Use a charged battery pack. (p. 14, 15) |
| The ▣ and ⏏ indicators flash and no functions except for cassette ejection work. | • Moisture condensation has occurred.<br>→ Remove the cassette and leave your camcorder for at least 1 hour to acclimatize. (p. 98) |

(Continued on the following page)

## Types of trouble and their solutions

### Others

| Symptom | Cause and/or Corrective Actions |
|---|---|
| The Remote Commander supplied with your camcorder does not work. (CCD-TRV49E/TRV59E/TRV78E/TRV98E only) | • COMMANDER is set to OFF in the menu settings.<br>→ Set it to ON. (p. 73)<br>• Something is blocking the infrared rays.<br>→ Remove the obstacle.<br>• The batteries inserted in the battery holder with the + – polarities incorrectly matching the + – marks.<br>→ Insert the batteries with the correct polarity. (p. 116)<br>• The batteries are dead.<br>→ Insert new ones. (p. 116) |
| The date or time indicator does not appear, and the bars "--:--:--" appear. | • Reset the date and time. (p. 22) |
| The melody or beep sounds for 5 seconds. | • Moisture condensation has occurred.<br>→ Remove the cassette and leave your camcorder for at least 1 hour to acclimatize. (p. 98)<br>• Some troubles have occurred in your camcorder.<br>→ Remove the cassette and insert it again, then operate your camcorder. |
| No funciton works though the power is on. | • Disconnect the connecting plate of the AC adaptor or remove the battery, then reconnect it in about 1 minute. Turn the power on (p. 14, 20). If the functions still do not work, press the RESET button using a sharp-pointed object. (If you press the RESET button, all the settings including the date and time return to the default.) (p. 112) |
| While charging the battery pack, the CHG lamp does not light up. | • The AC power adaptor is disconnected.<br>→ Connect it firmly. (p. 15)<br>• Something is wrong with the battery pack.<br>→ Contact your Sony dealer or local authorized Sony service facility. |
| You cannot charge the battery pack installed to your camcorder. | • The POWER switch is not set to OFF (CHARGE).<br>→ Set it to OFF (CHARGE). |

English

# Self-diagnosis display

Your camcorder has a self-diagnosis display function.
This function displays the current condition of your camcorder as a 5-digit code (a combination of a letter and figures) on the LCD screen, in the viewfinder or in the display window. If a 5-digit code is displayed, check the following code chart. The last two digits (indicated by □□) will differ depending on the state of your camcorder.

**Viewfinder or LCD screen**



**Self-diagnosis display**

- C:□□:□□
  You can service your camcorder yourself.
- E:□□:□□
  Contact your Sony dealer or local authorized Sony service facility.

| Five-digit display | Cause and/or Corrective Actions |
|---|---|
| C:04:□□ | • You are using a battery pack that is not an "InfoLITHIUM" battery pack.<br>→ Use an "InfoLITHIUM" battery pack. (p. 95) |
| C:21:□□ | • Moisture condensation has occurred.<br>→ Remove the cassette and leave your camcorder for at least 1 hour to acclimatize. (p. 98) |
| C:22:□□ | • The video heads are dirty.<br>→ Clean the heads using the Sony V8-25CLD cleaning cassette (optional). (p. 99) |
| C:31:□□<br>C:32:□□ | • A malfunction other than the above that you can service has occurred.<br>→ Remove the cassette and insert it again, then operate your camcorder.<br>→ Disconnect the mains lead of the AC power adaptor or remove the battery pack. After reconnecting the power source, operate your camcorder. |
| E:61:□□<br>E:62:□□ | • A malfunction that you cannot service has occurred.<br>→ Contact your Sony dealer or local authorized Sony service facility and inform them of the 5-digit code. (example: E:61:10) |

If you are unable to rectify the problem even if you try corrective actions a few times, contact your Sony dealer or local authorized Sony service facility.

English

# Warning indicators and messages

If indicators and messages appear on the screen, check the following:
See the page in parentheses "(  )" for more information.

### Warning indicators

**The video heads are dirty**
Slow flashing:
- You need to clean the heads using the Sony V8-25CLD cleaning cassette (optional) (p. 99).

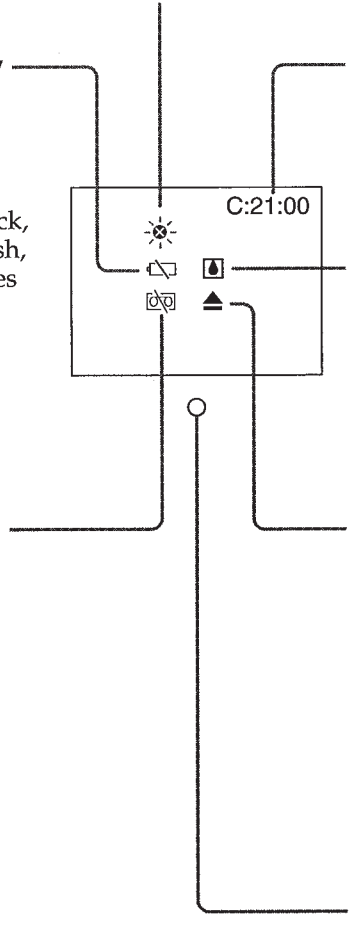

**The battery is dead or nearly dead**
Slow flashing:
- The battery is nearly dead.

Depending on conditions, the environment or the battery pack, the warning indicator may flash, even if there are 5 to 10 minutes battery remaining.

Fast flashing:
- The battery is dead (p. 15).
- The battery is completely dead, and cannot be recharged.

**Warning indicator as to tape**
Slow flashing:
- The tape is near the end.
- No tape is inserted.*
- The write-protect tab on the cassette is out (red) (p. 25).*

Fast flashing:
- The tape has run out.*

**Self-diagnosis display** (p. 83)

**Moisture condensation has occurred***
Fast flashing:
- Eject the cassette, turn off your camcorder, and leave it for about 1 hour with the cassette compartment open (p. 98).

**You need to eject the cassette**
Slow flashing:
- The write-protect tab on the cassette is out (red) (p. 25).*

Fast flashing:
- Moisture condensation has occurred (p. 98).
- The tape has run out.*
- The self-diagnosis display function is activated (p. 83).*

**Warning indicator as to tape or battery**
Slow flashing:
- The battery is nearly dead.
- The tape is near the end.

Fast flashing:
- The battery is dead.
- The tape has run out.*

* You hear the melody or beep sound.

## Warning indicators and messages

### Warning messages

| | |
|---|---|
| • CLOCK SET | Set the date and time (p. 22). |
| • For "InfoLITHIUM" BATTERY ONLY | Use an "InfoLITHIUM" battery pack (p. 95). |
| • CLEANING CASSETTE | The video heads are dirty (p. 99). |
| • START/STOP KEY | Press the START/STOP button to activate the ORC setting. This message is displayed in white. (p. 71). |
| • ORC | The ORC setting is working. This message is displayed in white (p. 71). |
| • NO TAPE | Insert a cassette tape*. |
| • TAPE END | The tape has reached the end of the tape*. |

* You hear the melody or beep sound.

## Предупреждающие индикаторы и сообщения

### Предупреждающие сообщения

| | |
|---|---|
| • CLOCK SET | Переустановите дату и время (стр. 22). |
| • For "InfoLITHIUM" BATTERY ONLY | Используйте батарейный блок "InfoLITHIUM" (стр. 95). |
| • CLEANING CASSETTE | Загрязнились видеоголовки (стр. 99). |
| • START/STOP KEY | Нажмите кнопку START/STOP для включения установки ORC. Это сообщение высветится белым цветом (стр. 76). |
| • ORC | Выполняется установка ORC. Это сообщение высвечивается белым цветом (стр. 76). |
| • NO TAPE | Установите кассету с лентой*. |
| • TAPE END | Достигнут конец ленты*. |

* Вы услышите мелодию или зуммерный сигнал.

— Additional Information —

# Usable cassettes and playback modes

## Selecting the cassette type

You can use both Hi8 and standard 8 mm video cassettes on your camcorder. When you use a Hi8 video cassette, recording and playback are carried out in the Hi8 system. When you use a standard 8 mm video cassette, recording and playback are carried out in the standard 8 mm system.
If you play back a tape recorded on a different video recorder on your camcorder, the playback mode is automatically selected according to the format in which the tape has been recorded.

This Hi8 system is an extension of the standard 8 mm system, and was developed to produce higher quality pictures.
You cannot playback a tape recorded in the Hi8 system correctly on video recorders/players other than a Hi8 video recorder/player.

## When you play back

The playback mode (SP/LP) and system, Hi8 or standard 8 mm are automatically selected according to the format in which the tape has been recorded. The quality of the recorded picture in the LP mode, however, will not be as good as the SP mode.

### Foreign 8 mm video

Because TV colour systems differ from country to country, you may not be able to play back foreign pre-recorded tapes. Refer to "Using your camcorder abroad" to check the TV colour systems used in foreign countries.

— Дополнительная информация —

# Используемые кассеты и режимы воспроизведения

## Выбор типа кассеты

Вы можете использовать на Вашей видеокамере либо видеокассеты Hi8, либо стандартные 8-мм видеокассеты. Если Вы используете видеокассету Hi8, запись и воспроизведение будут выполняться в системе Hi8. Если Вы используете стандартную 8-мм видеокассету, запись и воспроизведение будут выполняться в стандартной 8-мм системе.
Если Вы будете воспроизводить на Вашей видеокамере ленту, записанную на разных видеомагнитофонах, то режим воспроизведения будет выбираться автоматически в соответствии с форматом, в котором была записана лента.

Система Hi8 является модификацией стандартной 8-мм системы и была разработана для получения высококачественных изображений.
Вы не сможете воспроизвести надлежащим образом ленту, записанную в системе Hi8, на видеомагнитофоне/плейере, который не относится к видеомагнитофону/плейеру Hi8.

## При выполнении воспроизведения

Режим воспроизведения (SP/LP) и система, Hi8/стандартная 8-мм система выбираются автоматически в соответствии с форматом, в котором была выполнена запись на ленте. Однако, качество записанного изображения в режиме LP не будет таким хорошим, как в режиме SP.

### Иностранные 8-мм видеоленты

Поскольку системы цветного телевидения отличаются от страны к стране, возможно Вы не сможете воспроизводить иностранные предварительно записанные ленты. См. раздел "Использование Вашей видеокамеры за границей" для проверки систем цветного телевидения, используемых в других странах.

## Usable cassettes and playback modes

### Playing back an NTSC-recorded tape

You can play back tapes recorded in the NTSC video system using the SP mode.
However, note that the following will occur during playback of an NTSC-recorded tape.

- When playing back a tape on a TV screen, you may not get the original colour depending on the TV. When you play back on a Multi System TV, set NTSC PB to the desired mode in the menu settings.
- During playback, a black band appears on the lower part of the viewfinder.
- You cannot play back a tape recorded in the NTSC video system with the LP mode neither on the LCD nor on a TV screen.
- If a tape has portions recorded in PAL and NTSC video systems, the tape counter reading is not correct. This discrepancy is due to the difference between the counting cycle of the two video systems.
- You cannot edit the NTSC-recorded tape onto another VCR.

## Используемые кассеты и режимы воспроизведения

### Воспроизведение лент, записанных в системе NTSC

Вы можете воспроизводить ленты, записанные в системе NTSC, используя режим SP.
Однако, имейте в виду, что во время воспроизведения лент, записанных в системе NTSC, будет иметь место следующее.

- При воспроизведении ленты на экране телевизора Вы можете не получить первоначальные цвета в зависимости от типа телевизора. При воспроизведении на мультисистемном телевизоре установите переключатель NTSC PB на нужный режим в установках меню.
- Во время воспроизведения в нижней части видоискателя будет появляться черная полоса.
- Вы не можете воспроизводить ленту, записанную в видеосистеме NTSC в режиме LP, ни на экране ЖКД, ни на экране телевизора.
- Если на ленте имеются участки, записанные в видеосистемах PAL и NTSC, то функционирование счетчика ленты будет неправильным. Это расхождение объясняется разницей между счетными циклами двух видеосистем.
- Вы не можете выполнять монтаж ленты, записанной в системе NTSC, на другой КВМ.

# About "InfoLITHIUM" battery

### What is the "InfoLITHIUM" battery?

The "InfoLITHIUM" battery is a lithium-ion battery that has functions for communicating information related to operating conditions between your camcorder and an AC power adaptor.
The "InfoLITHIUM" battery calculates the power consumption according to the operating conditions of your camcorder, and displays the remaining battery time in minutes.

### Charging the battery

- Be sure to charge the battery before you start using your camcorder.
- We recommend charging the battery in an ambient temperature of between 10 to 30°C until the CHG lamp goes out, indicating that the battery is fully charged. If you charge the battery outside of this temperature range, you may not be able to effectively charge the battery.
- After charging is completed, either disconnect the cable from the DC IN jack on your camcorder or remove the battery.

### Effective use of the battery

- Battery performance drops in low-temperature surroundings. So, the time that the battery can be used is shorter in cold places. We recommend the following to ensure care-free, longer use:
  - –Put the battery in a pocket close to your body to warm it up, and insert it in your camcorder immediately before you start taking shots.
  - –Use the high-power battery (NP-F730/F750/F930/F950/F960, optional).
- Frequently using the LCD screen or frequently operating playback, fast forward or rewind wears out the battery faster. We recommend using the high-power battery (NP-F730/F750/F930/F950/F960, optional).
- Be certain to turn the POWER switch to OFF (CHARGE) while taking shots or playing back on your camcorder. The battery also wears out when your camcorder is in the standby mode or playback is paused.
- Have spare batteries handy for two or three times the expected shooting time, and take test shots before taking the actual shots.

# О батарейном блоке "InfoLITHIUM"

### Что такое батарейный блок "InfoLITHIUM"?

Батарейный блок "InfoLITHIUM" является литиево-ионным батарейным блоком, который имеет функции для информации связи, относящейся к условиям взаимодействия между Вашей видеокамерой и сетевым адаптером переменного тока. Батарейный блок "InfoLITHIUM" подсчитывает потребляемую мощность в соответствии с условиями эксплуатации Вашей видеокамеры и отображает время оставшегося заряда батарейного блока в минутах.

### Зарядка батарейного блока

- Не забудьте зарядить батарейный блок перед началом эксплуатации видеокамеры.
- Мы рекомендуем заряжать батарейный блок при окружающей температуре в пределах между 10 и 30°C до тех пор, пока не погаснет лампочка CHG, означающая, что батарейный блок полностью заряжен. Если Вы будете заряжать батарейный блок вне рекомендуемого температурного диапазона, возможно Вы не сможете эффективно зарядить батарейный блок.
- После завершения зарядки, либо отсоедините кабель от гнезда DC IN на Вашей видеокамере, либо снимите батарейный блок.

### Эффективное использование батарейного блока

- Характеристика батарейного блока упадет при низкой окружающей температуре. Поэтому время использования батарейного блока в холодных местах будет короче. Для обеспечения долговечной эксплуатации без проблем рекомендуется следующее:
  - – Положите батарейный блок в свой карман поближе к своему телу для того, чтобы прогреть его, и вставьте его в свою видеокамеру непосредственно перед выполнением съемок.
  - – Используйте высокоемкостный батарейный блок (NP-F730/F750/F930/F950/F960, приобретается отдельно).
- Частое использование экрана ЖКД или частое использование функций воспроизведения, ускоренной перемотки вперед или назад приводит к более быстрой разрядке батарейного блока. Рекомендуется использовать высокоемкостный батарейный блок (NP-F730/F750/F930/F950/F960, приобретается отдельно).
- Не забудьте повернуть переключатель POWER в положение OFF (CHARGE) при выполнении съемок или воспроизведения на Вашей видеокамере. Батарейный блок всегда разряжается, если Ваша видеокамера находится в режиме ожидания вили паузы воспроизведения.
- Удобно иметь батарейных блоков для времени съемок в два или три раза больше ожидаемого, рекомендуется также выполнять пробные съемки перед выполнением реальных съемок.

## About "InfoLITHIUM" battery

### Remaining battery time indicator

- If the POWER switch turns to OFF (CHARGE) immediately even though the remaining battery indicator indicates sufficient battery power, fully charge the battery again. The correct remaining battery time will be indicated. Note, however, that the correct battery indication sometimes will not be restored if it is used in high temperatures for a long time or left in a fully charged state, or the battery is frequently used. Regard the remaining battery time indication as the approximate shooting time.
- The 🪫 mark indicating there is little remaining battery time sometimes blinks depending on the operating conditions or ambient temperature and environment even if the remaining battery time is 5 to 10 minutes.

### How to store the battery

- Even if the battery is not used for a long time, store it in a low humidity, cool place after fully charging it once per year and then using the battery up on your camcorder. This is to maintain the battery's functions.
- To use the battery up on your camcorder, leave your camcorder in the shooting mode until there is no more battery power left without a cassette inserted.

### Battery life

- The battery life is limited. Battery capacity drops little by little as you use it more and more, and as time passes. When the available battery time is shortened considerably, a probable cause is that the battery has reached the end of its life. Buy a new battery.
- The battery life varies according to how it is stored and operating conditions and environment for each battery pack.

## О батарейном блоке "InfoLITHIUM"

### Индикатор времени оставшегося заряда батарейного блока

- Если переключатель POWER будет сразу повернут в положение OFF (CHARGE), даже если индикатор времени оставшегося заряда батарейного блока будет указывать достаточный заряд батарейного блока, то следует снова полностью зарядить батарейный блок. После этого время оставшегося заряда батарейного блока будет отображаться правильно. Однако имейте в виду, что правильная индикация времени оставшегося заряда батарейного блока иногда не будет восстановлена, если он использовался при высоких температурах длительный период времени или был оставлен в полностью заряженном состоянии, либо же батарейный блок часто использовался. Считайте, что индикация времени оставшегося заряда батарейного блока означает прилизительное время съемки.
- Знак 🪫, означающий, что осталось немного времени заряда батарейного блока, иногда мигает в зависимости от условий эксплуатации или окружающей температуры, даже если время оставшегося заряда батарейного блока составляет 5-10 минут.

### Как хранить батарейный блок

- Даже если батарейный блок не используется в течение длительного периода времени, храните его при низкой влажности, в прохладном месте после его полной зарядки один раз в год и полного использования заряда на Вашей видеокамере. Это необходимо для поддержания функций батарейного блока.
- Для полного использования заряда на вашей видеокамере, оставьте вашу видеокамеру в режиме съемки до тех пор, пока заряд батарейного блока полностью израсходуется без вставленной кассеты.

### Срок службы батарейного блока

- Срок службы батарейного блока ограничен. Емкость батарейного блока будет постепенно уменьшаться по мере продолжительности его использования. Если время использования батарейного блока существенно уменьшится, вероятной причиной может быть то, что срок службы батарейного блока подошел к концу. Купите новый батарейный блок.
- Срок службы батарейного блока зависит от условий хранения и эксплуатации каждого батарейного блока.

# Using your camcorder abroad

## Using your camcorder abroad

You can use your camcorder in any country or area with the AC power adaptor supplied with your camcorder within 100 V to 240 V AC, 50/60 Hz.

Your camcorder is a PAL system based camcorder. If you want to view the playback picture on a TV, it must be a PAL system based TV with VIDEO/AUDIO input jack.
The following shows TV colour systems used overseas.

**PAL system**
Australia, Austria, Belgium, China, Czech Republic, Denmark, Finland, Germany, Great Britain, Holland, Hong Kong, Italy, Kuwait, Malaysia, New Zealand, Norway, Portugal, Singapore, Slovak Republic, Spain, Sweden, Switzerland, Thailand, etc.

**PAL-M system**
Brazil

**PAL-N system**
Argentina, Paraguay, Uruguay

**NTSC system**
Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.

**SECAM system**
Bulgaria, France, Guyana, Hungary, Iran, Iraq, Monaco, Poland, Russia, Ukraine, etc.

## Simple setting of clock by time difference

You can easily set the clock to the local time by setting a time difference. Select WORLD TIME in the menu settings. See page 73 for more information.

# Использование Вашей видеокамеры за границей

## Использование Вашей видеокамеры за границей

Вы можете использовать Вашу видеокамеру в любой стране или области с помощью сетевого адаптера переменного тока, прилагаемого к Вашей видеокамере, который можно использовать в пределах от 100 В до 240 В переменного тока с частотой 50/60 Гц.

Ваша видеокамера основана на системе PAL. Если Вы хотите просмотреть воспроизводимое изображение на телевизоре, то это должен быть телевизор, основанный на системе PAL, с входными гнездами VIDEO/AUDIO.
Ниже приведены системы цветного телевидения, используемые за рубежом.

**Система PAL**
Австралия, Австрия, Бельгия, Великобритания, Германия, Голландия, Гонконг, Дания, Испания, Италия, Китай, Кувейт, Малайзия, Новая Зеландия, Норвегия, Португалия, Сингапур, Словацкая Республика, Таиланд, Финляндия, Чешская Республика, Швейцария, Швеция и т.д.

**Система PAL-M**
Бразилия

**Система PAL-N**
Аргентина, Парагвай, Уругвай

**Система NTSC**
Багамские острова, Боливия, Венесуэла, Канада, Колумбия, Корея, Мексика, Перу, Суринам, США, Тайвань, Филиппины, Центральная Америка, Чили, Эквадор, Ямайка, Япония и т.д.

**Система SECAM**
Болгария, Венгрия, Гвиана, Ирак, Иран, Монако, Польша, Россия, Украина, Франция и т.д.

## Простая установка разницы во времени на часах

Вы можете легко установить часы на местное время путем установки разницы во времени. Выберите команду WORLD TIME в установках меню. Подробные сведения приведены на стр. 78.

# Maintenance information and precautions

## Moisture condensation

If your camcorder is brought directly from a cold place to a warm place, moisture may condense inside your camcorder, on the surface of the tape, or on the lens. In this condition, the tape may stick to the head drum and be damaged or your camcorder may not operate correctly. If there is moisture inside your camcorder, the beep sounds and the ▣ indicator flashes. When the ⏏ indicator flashes at the same time, the cassette is inserted in your camcorder. If moisture condenses on the lens, the indicator will not appear.

### If moisture condensation occurs

None of the functions except cassette ejection will work. Eject the cassette, turn off your camcorder, and leave it for about 1 hour with the cassette compartment open. Your camcorder can be used again if the ▣ indicator does not appear when the power is turned on again.

---

**Note on moisture condensation**
Moisture may condense when you bring your camcorder from a cold place into a warm place (or vice versa) or when you use your camcorder in a hot place as follows:

- You bring your camcorder from a ski slope into a place warmed up by a heating device
- You bring your camcorder from an air-conditioned car or room into a hot place outside
- You use your camcorder after a squall or a shower
- You use your camcorder in a high temperature and humid place

**How to prevent moisture condensation**
When you bring your camcorder from a cold place into a warm place, put your camcorder in a plastic bag and tightly seal it. Remove the bag when the air temperature inside the plastic bag has reached the surrounding temperature (after about 1 hour).

# Информация по уходу за аппаратом и меры предосторожности

## Конденсация влаги

Если видеокамера принесена прямо из холодного места в теплое, то внутри видеокамеры, на поверхности ленты или на объективе может произойти конденсанция влаги. В таком состоянии лента может прилипнуть к барабану головки и будет повреждена или же видеокамера не сможет работать надлежащим образом. Если внутри видеокамеры произошла конденсация влаги, то прозвучит зуммерный сигнал и будет мигать индикатор ▣. Если в то же самое время будет мигать индикатор ⏏, это значит, что в видеокамеру вставлена кассета. Если влага сконденсировалась на объективе, индикатор появляться не будет.

### Если произойдет конденсация влаги

Ни одна из функций, кроме выталкивания кассеты, не будут работать. Извлеките кассету, выключите видеокамеру и оставьте ее приблизительно на 1 час с открытым отсеком для кассеты. Если при повторном включении питания индикатор ▣ не появится на дисплее, Вы можете снова пользоваться видеокамерой.

---

**Примечание по конденсации влаги**
Влага может образоваться, если Вы принесете Вашу видеокамеру из холодного места в теплое (или наоборот) или когда Вы используете Вашу видеокамеру в жарком месте в следующих случаях:

- Вы принесли Вашу видеокамеру с лыжного склона в помещение, где функционирует обогреватель
- Вы принесли Вашу видеокамеру из автомобиля или из комнаты с воздушным кондиционированием в жаркое место на улице
- Вы используете видеокамеру после грозы или дождя
- Вы используете Вашу видеокамеру в очень жарком и влажном месте

**Как предотвратить конденсацию влаги**
Если видеокамера принесена из холодного места в теплое, то положите видеокамеру в полиэтиленовый пакет и плотно заклейте его. Выньте видеокамеру из полиэтиленового пакета, когда температура воздуха внутри пакета достигнет температуры окружающего воздуха (приблизительно через 1 час).

## Maintenance information and precautions

## Maintenance information

### Cleaning the video head

To ensure normal recording and clear pictures, clean the video heads. The video head may be dirty when:

- The ⊗ indicator and "📼 CLEANING CASSETTE" message appear one after another or the ⊗ indicator flashes on the screen.
- Playback pictures contain noise.
- Playback pictures are hardly visible.
- Playback pictures do not appear.

If this happens, clean the video heads with the Sony V8-25CLD cleaning cassette (optional).

## Информация по уходу за аппаратом и меры предосторожности

## Информация по уходу за аппаратом

### Чистка видеоголовок

Для обеспечения нормальной записи и четкого изображения следует периодически чистить видеоголовки. Видеоголовки возможно загрязнены, если:

- На экране появляются один за другим индикатор ⊗ и сообщение "📼 CLEANING CASSETTE" или же мигат индикатор ⊗.
- Воспроизводимое изображение содержит помехи.
- Воспроизводимое изображение с трудом различимо.
- Воспроизводимое изображение не появляется на экране.

Если это произошло, почистите видеоголовки с помощью очистительной кассеты Sony V8-25CLD (приобретается отдельно).

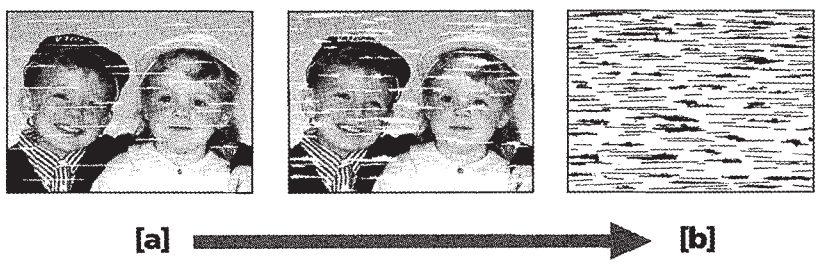

**[a]** Slightly dirty
**[b]** Very dirty

**[a]** Слегка загрязнены
**[b]** Очень загрязнены

---

**Note on video heads**
When the playback pictures still contain noise even if you have cleaned the video heads with a cleaning cassette, the video heads may have worn down due to long use. If this is the case, they must be replaced with new heads. Contact your Sony dealer or local authorized Sony service facility.

---

**Примечание по видеоголовкам**
Если воспроизводимое изображение все еще содержит помехи даже после того, как Вы почистили видеоголовки с помощью очистительной кассеты, то, возможно, видеоголовки уже износились вследствие длительной эксплуатации видеокамеры. В этом случае, их следует заменить на новые. Обратитесь в сервисный центр Sony или в местное уполномоченное предприятие по обслуживанию изделий Sony.

## Maintenance information and precautions

### About care and storage of the lens

- Wipe the surface of the lens clean with a soft cloth in the following instances.
  - When there are fingerprints on the lens surface
  - In hot or humid locations
  - When the lens is used in environments susceptible to salt such as the seaside
- Store the lens in a well-ventilated location subject to little dirt or dust.

To prevent mold from occurring, periodically perform the adove.
We recommend turning on and operating your camcorder about once per month to keep your camcorder in an optimum state for a long time.

### Cleaning the LCD screen

If fingerprints or dust make the LCD screen dirty, we recommend using a LCD Cleaning Kit (optional) to clean the LCD screen.

### Removing dust from inside the viewfinder

**(1)** ❶Remove the screw with a screwdriver (not supplied). ❷Then, while holding the RELEASE knob up, ❸turn the eyecup in a counterclockwise direction and pull it out.
**(2)** Clean the surface with a commercially available blower for a still camera.
**(3)** Turn the eyecup in a clockwise direction, then replace the screw.

## Информация по уходу за аппаратом и меры предосторожности

### Об уходе за объективом и его хранении

- В следующих случаях следует протирать поверхность объектива дочиста:
  - Если на поверхности объектива имеются отпечатки
  - В жарких и влажных местах
  - Если объектив используется в условиях, подверженных воздействию соли, например, на морском курорте.
- Храните объектив в хорошо проветриваемом место без излишней грязи и пыли.

Для предотвращения образования плесени, периодически выполняйте приведенные выше процедуры.
Рекомендуется включать и использовать некоторое время Вашу видеокамеру один раз в месяц для поддержания оптимального состояния Вашей видеокамеры в течение длительного времени.

### Чистка экрана ЖКД

Если на экране ЖКД появятся отпечатки или пыль, рекомендуется воспользоваться очистительным набором для ЖКД (не прилагается) для чистки ЖКД.

### Удаление пыли изнутри видоискателя

**(1)** ❶Отвинтите винт с помощью отвертки (по заказу). ❷Затем, передвинув кнопку RELEASE, ❸поверните окуляр в направлении против часовой стрелки и потяните его.
**(2)** Почистите поверхность с помощью воздуходувки для фотоаппаратов, которая приобретается отдельно.
**(3)** Прикрепите окуляр в направлении по часовой стрелке и завинтите винт обратно на место.

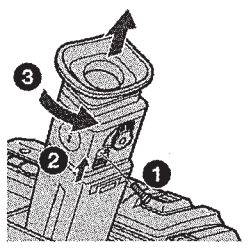

---

**Caution**
Do not remove any other screws. You may remove only the screw to remove the eyecup.

**Внимание**
Не отвинчивайте другие винты. Вы можете отвинчивать только винт для снятия окуляра.

## Maintenance information and precautions

### Charging the built-in rechargeable lithium cell

Your camcorder is supplied with a built-in rechargeable lithium cell so as to retain the date and time, etc., regardless of the setting of the POWER switch. The rechargeable lithium cell is always charged as long as you are using your camcorder. The cell, however, will get discharged gradually if you do not use your camcorder. It will be completely discharged in about 4 months if you do not use your camcorder at all.
Even if the rechargeable lithium cell is not charged, it will not affect the camcorder operation. To retain the date and time, etc., charge the cell if the cell is discharged.

**Charging the rechargeable lithium cell:**

- Connect your camcorder to the mains using the AC power adaptor supplied with your camcorder, and leave your camcorder with the POWER switch turned off for more than 24 hours.
- Or install the fully charged battery pack in your camcorder with the POWER switch turned off for more than 24 hours.

## Информация по уходу за аппаратом и меры предосторожности

### Зарядка встроенного перезаряжаемого литевого элемента

Ваша видеокамера оснащена перезаряжаемой литиевой батарейкой, установленной для того, чтобы поддерживать дату, время и т.д., вне зависимости от установки переключателя POWER. Перезаряжаемая литиевая батарейка всегда заряжена, когда Вы используете Вашу видеокамеру. Однако, батарейка постепенно разрядится, если Вы не будете использовать Вашу видеокамеру. Она будет полностью разряжена примерно через 4 месяца, если Вы вообще не будете пользоваться Вашей видеокамерой. Даже если перезаряжаемая литиевая батарейка не заряжена, она не повлияет на работу видеокамеры. Чтобы поддерживать дату и время, зарядите батарейку, если она разрядилась.

**Зарядка перезаряжаемого литиевого элемента:**

- Подсоедините Вашу видеокамеру к электросети с помощью сетевого адаптера переменного тока, прилагаемого к Вашей видеокамере, и оставьте Вашу видеокамеру при выключенном положении переключателя POWER более чем на 24 часа.
- Или прикрепите полностью заряженный батарейный блок к Вашей видеокамере и оставьте Вашу видеокамеру с выключенным переключателем POWER более чем на 24 часа.

## Maintenance information and precautions

### Precautions

### Camcorder operation

- Operate your camcorder on 7.2 V (battery pack) or 8.4 V (AC power adaptor).
- For DC or AC operation, use the accessories recommended in this operating instructions.
- If any solid object or liquid get inside the casing, unplug your camcorder and have it checked by a Sony dealer before operating it any further.
- Avoid rough handling or mechanical shock. Be particularly careful of the lens.
- Keep the POWER switch set to OFF (CHARGE) when you are not using your camcorder.
- Do not wrap your camcorder with a towel, for example, and operate it. Doing so might cause heat to build up inside.
- Keep your camcorder away from strong magnetic fields or mechanical vibration.
- Do not touch the LCD screen with your fingers or a sharp-pointed object.
- If your camcorder is used in a cold place, a residual image may appear on the LCD screen. This is not a malfunction.
- While using your camcorder, the back of the LCD screen may heat up. This is not a malfunction.

## Информация по уходу за аппаратом и меры предосторожности

### Меры предосторожности

### Эксплуатация видеокамеры

- Эксплуатируйте видеокамеру от 7,2 В (батарейный блок) или 8,4 В (сетевой адаптер переменного тока)
- Что касается эксплуатации видеокамеры от постоянного и переменного тока, используйте принадлежности, рекомендуемые в данной инструкции по эксплуатации.
- Если какой-нибудь твердый предмет или жидкость попали внутрь корпуса, то выключите видеокамеру и проверьте ее у дилера Sony перед дальнейшей ее эксплуатацией.
- Избегайте грубого обращения с видеокамерой или механических ударов. Будьте особенно осторожны с объективом.
- Если видеокамера не используется, держите выключатель POWER в положении OFF (CHARGE).
- Не заворачивайте Вашу видеокамеру, например, в полотенце, и не эксплуатируйте ее в таком состоянии. В противном случае может произойти повышение температуры внутри видеокамеры.
- Держите Вашу видеокамеру подальше от сильных магнитных полей или механической вибрации.
- Не прикасайтесь к экрану ЖКД своими пальцами или острыми предметами.
- При эксплуатации Вашей видеокамеры в холодном месте, на экране ЖКД может появляться остаточное изображение. Это не является неисправностью.
- При эксплуатации Вашей видеокамеры, задняя сторона экрана ЖКД может нагреваться. Это не является неисправностью.

## Maintenance information and precautions

### Built-in light

- Do not knock or jolt the built-in light while it is turned on as it may damage the bulb or shorten the life of the bulb.
- Do not leave the built-in light on while it is resting on or against something; it may cause a fire or damage the built-in light.

### On handling tapes

Do not insert anything into the small holes on the rear of the cassette. These holes are used to sense the type and thickness of the tape and if the recording tab is in or out.

### Camcorder care

- Remove the tape, and periodically turn on the power, operate the CAMERA and PLAYER sections and play back a tape for about 5 minutes when your camcorder is not to be used for a long time.
- Clean the lens with a soft brush to remove dust. If there are fingerprints on the lens, remove them with a soft cloth.
- Clean the camcorder body with a dry soft cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent which may damage the finish.
- Do not let sand get into your camcorder. When you use your camcorder on a sandy beach or in a dusty place, protect it from the sand or dust. Sand or dust may cause your camcorder to malfunction, and sometimes this malfunction cannot be repaired.

## Информация по уходу за аппаратом и меры предосторожности

### Встроенная подсветка

- Не стучите по устройству подсветки и не трясите его в то время, когда оно включено, поскольку это может повредить лампу накаливания или сократить ее срок службы.
- Не оставляйте встроенную подсветку включенной в то время, когда она на чем-то лежит или направлена на какой-либо предмет.

### Относительно обращения с лентами

Не вставляйте ничего в маленькие отверстия на задней стороне кассеты. Эти отверстия используются для определения типа и толщины ленты, а также для определения наличия или отсутствия лепестка защиты записи на ленте.

### Уход за видеокамерой

- Если Ваша видеокамера не будет использоваться в течение длительного времени, выньте кассету с лентой и периодически включайте питание, оперируйте устройствами CAMERA и PLAYER и воспроизводите ленту в течение 5-ти минут.
- Чистите объектив с помощью мягкой кисточки для удаления пыли. Если имеются отпечатки пальцев на объективе, удалите их с помощью мягкой ткани.
- Чистите корпус видеокамеры с помощью сухой мягкой ткани или мягкой ткани, слегка смоченной раствором умеренного моющего средства. Не используйте каких-либо типов растворителей, которые могут повредить отделку.
- Не допускайте попадания песка в видеокамеру. Если Вы используете видеокамеру на песчаном пляже или в каком-либо пыльном месте, предохраните аппарат от песка или пыли. Песок или пыль могут привести к неисправности аппарата, которая иногда может быть неисправимой.

## Maintenance information and precautions

### AC power adaptor

- Unplug the unit from the mains when you are not using the unit for a long time. To disconnect the mains lead, pull it out by the plug. Never pull the mains lead itself.
- Do not operate the unit with a damaged cord or if the unit has been dropped or damaged.
- Do not bend the mains lead forcibly, or place a heavy object on it. This will damage the cord and may cause fire or electrical shock.
- Prevent metallic objects from coming into contact with the metal parts of the connecting section. If this happens, a short may occur and the unit may be damaged.
- Always keep metal contacts clean.
- Do not disassemble the unit.
- Do not apply mechanical shock or drop the unit.
- While the unit is in use, particularly during charging, keep it away from AM receivers and video equipment. AM receivers and video equipment disturb AM reception and video operation.
- The unit becomes warm during use. This is not a malfunction.
- Do not place the unit in locations that are:
  - – Extremely hot or cold
  - – Dusty or dirty
  - – Very humid
  - – Vibrating

## Информация по уходу за аппаратом и меры предосторожности

### Сетевой адаптер переменного тока

- Отсоедините аппарат от электрической сети, если он не используется длительное время. Для отсоединения сетевого шнура потяните его за разъем. Никогда не тяните за сам шнур.
- Не эксплуатируйте аппарат с поврежденным шнуром или же в случае, если аппарат упал или был поврежден.
- Не сгибайте сетевой провод силой и не ставьте на него тяжелые предметы. Это повредит провод и может привести к пожару или поражению электрическим током.
- Будьте осторожны, чтобы никакие металлические предметы не соприкасались с металлическими частями соединительной секции. Если это случится, то может произойти короткое замыкание, и аппарат может быть поврежден.
- Всегда поддерживайте металлические контакты в чистоте.
- Не разбирайте аппарат.
- Не подвергайте аппарат механической вибрации и не роняйте его.
- При использовании аппарата, особенно во время зарядки, держите его подальше от приемников АМ-радиовещания и видеоаппаратуры. Приемники АМ-радиовещания и видеоаппаратура нарушают АМ-радиоприем и работу видеоаппаратуры.
- В процессе эксплуатации аппарат нагревается. Это является вполне нормальным.
- Не размещайте аппарат в местах:
  - – Чрезмерно жарких или холодных
  - – Пыльных или грязных
  - – Очень влажных
  - – Подверженных вибрации

## Maintenance information and precautions

### Battery pack

- Use only the specified charger or video equipment with the charging function.
- To prevent an accidental short circuit, do not allow metal objects to come into contact with the battery terminals.
- Keep the battery pack away from fire.
- Never expose the battery pack to temperatures above 60°C (140°F ), such as in a car parked in the sun or under direct sunlight.
- Keep the battery pack dry.
- Do not expose the battery pack to any mechanical shock.
- Do not disassemble nor modify the battery pack.
- Attach the battery pack to the video equipment securely.
- Charging while some capacity remains does not affect the original battery capacity.

### Notes on dry batteries
**– CCD-TRV49E/TRV59E/TRV78E/TRV98E only**

To avoid possible damage from battery leakage or corrosion, observe the following:

- Be sure to insert the batteries with the + – polarities matched to the + – marks.
- Dry batteries are not rechargeable.
- Do not use a combination of new and old batteries.
- Do not use different types of batteries.
- Current flows from batteries when you are not using them for a long time.
- Do not use leaking batteries.

#### If batteries are leaking

- Wipe off the liquid in the battery compartment carefully before replacing the batteries.
- If you touch the liquid, wash it off with water.
- If the liquid get into your eyes, wash your eyes with a lot of water and then consult a doctor.

If any problem occurs, unplug your camcorder and contact your nearest Sony dealer.

## Информация по уходу за аппаратом и меры предосторожности

### Батарейный блок

- Используйте только указанные устройство зарядки или видеоаппаратуру с функцией зарядки.
- Для предотвращения несчастного случая из-за короткого замыкания не допускайте контакта металлических предметов с контактами батарейного блока.
- Храните батарейный блок подальше от огня.
- Никогда не подвергайте батарейный блок воздействию температур выше 60°C, например, не оставляйте батарейный блок в припаркованном автомобиле под солнцем или прямым солнечным светом.
- Храните батарейный блок в сухом виде.
- Не подвергайте батарейный блок механическим ударам.
- Не разбирайте и не переделывайте батарейный блок.
- Подсоединяйте батарейный блок к видеоаппаратуре плотно.
- Зарядка при наличии оставшейся емкости не влияет на первоначальную емкость батарейного блока.

### Примечание к сухим батарейкам – Только модели CCD-TRV76E/TRV78E/TRV98E

Во избежание возможного повреждения видеока-меры вследствие утечки внутреннего вещества батареек или коррозии соблюдайте следующее:

- При установке батареек соблюдайте правильную полярность + – в соответствии с метками + –.
- Сухие батарейки нельзя перезаряжать.
- Не используйте новые батарейки вместе со старыми.
- Не используйте батарейки разного типа.
- Если батарейки не используются длительное время, они постепенно разряжаются.
- Не используйте батарейки, которые потекли.

#### Если произошла утечка внутреннего вещества батареек

- Перед тем, как заменить батарейки, тщательно протрите остатки жидкости в отсеке для батареек.
- В случае попадания жидкости на кожу, промойте жидкость водой.
- В случае попадания жидкости в глаза, промойте свои глаза большим количеством воды, после чего обратитесь к врачу.

В случае возникновения каких-либо проблем, отключите Вашу видеокамеру от источника питания и обратитесь в ближайший сервисный центр Sony.

— Quick Reference —

# Identifying the parts and controls

### Camcorder

— Оперативный справочник —

# Обозначение частей и регуляторов

### Видеокамера

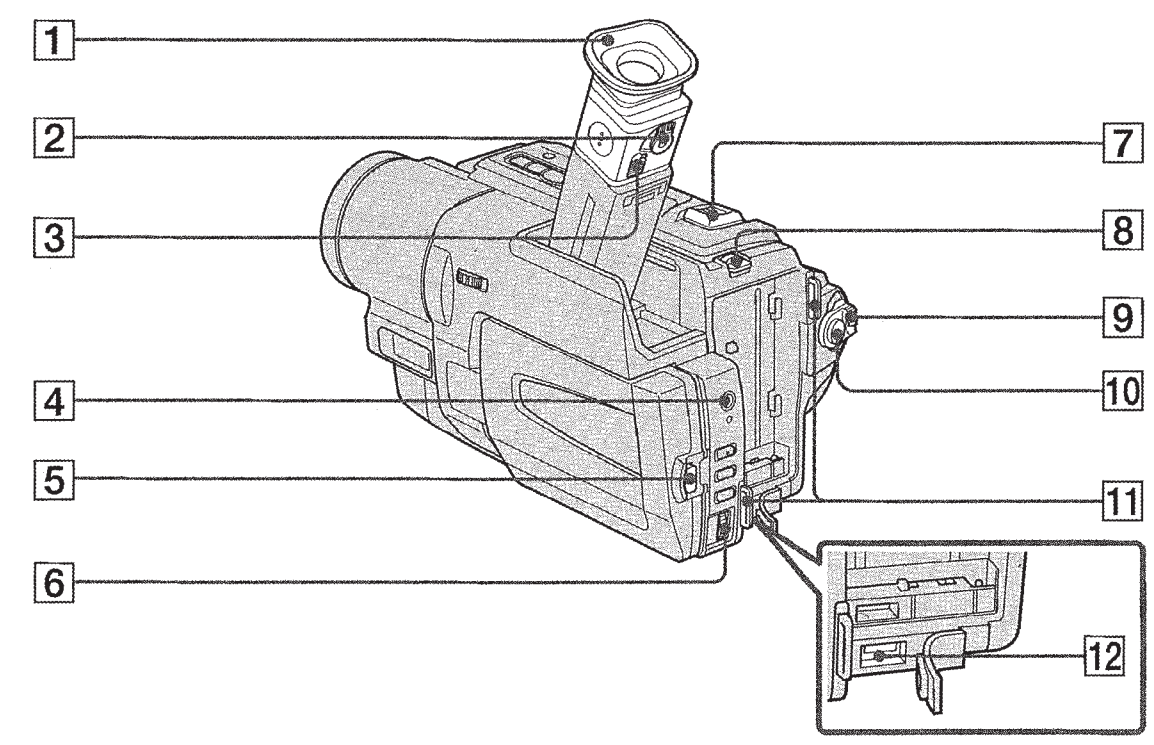

1 **Eyecup** (p. 100)

2 **Viewfinder lens adjustment lever** (p. 31)

3 **Eyecup RELEASE knob** (p. 100)

4 **⑨ (earphone) jack**
When you use earphone, the speaker on your camcorder is silent.

5 **OPEN button** (p. 26)

6 **SEL/PUSH EXEC dial** (p. 45, 67)

7 **Power zoom lever** (p. 30)

8 **BATT RELEASE lever** (p. 14)

9 **POWER switch** (p. 26)

10 **START/STOP button** (p. 26)

11 **Hooks for shoulder strap** (p. 112)

12 **DC IN jack** (p. 15, 20)

This mark indicates that this product is a genuine accessory for Sony video products.
When purchasing Sony video products, Sony recommends that you purchase accessories with this "GENUINE VIDEO ACCESSORIES" mark.

1 **Окуляр** (стр. 100)

2 **Рычаг регулировки объектива видоискателя** (стр. 31)

3 **Кнопка окуляра RELEASE** (стр. 100)

4 **Гнездо ⑨ (наушники)**
Если Вы используете гнездо (наушники), динамик на Вашей видеокамере отключается.

5 **Кнопка OPEN** (стр. 26)

6 **Диск SEL/PUSH EXEC** (стр. 45, 67)

7 **Рычаг приводного вариообъектива** (стр. 30)

8 **Рычаг BATT RELEASE** (стр. 14)

9 **Переключатель POWER** (стр. 26)

10 **Кнопка START/STOP** (стр. 26)

11 **Крючок для плечевого ремня** (стр. 112)

12 **Гнездо DC IN** (стр. 15, 20)

Данный знак означает, что это изделие является подлинной принадлежностью для видеоаппаратуры Sony. При покупке видеоаппаратуры Sony рекомендуется приобретать для нее принадлежности Sony с таким знаком "GENUINE VIDEO ACCESSORIES".

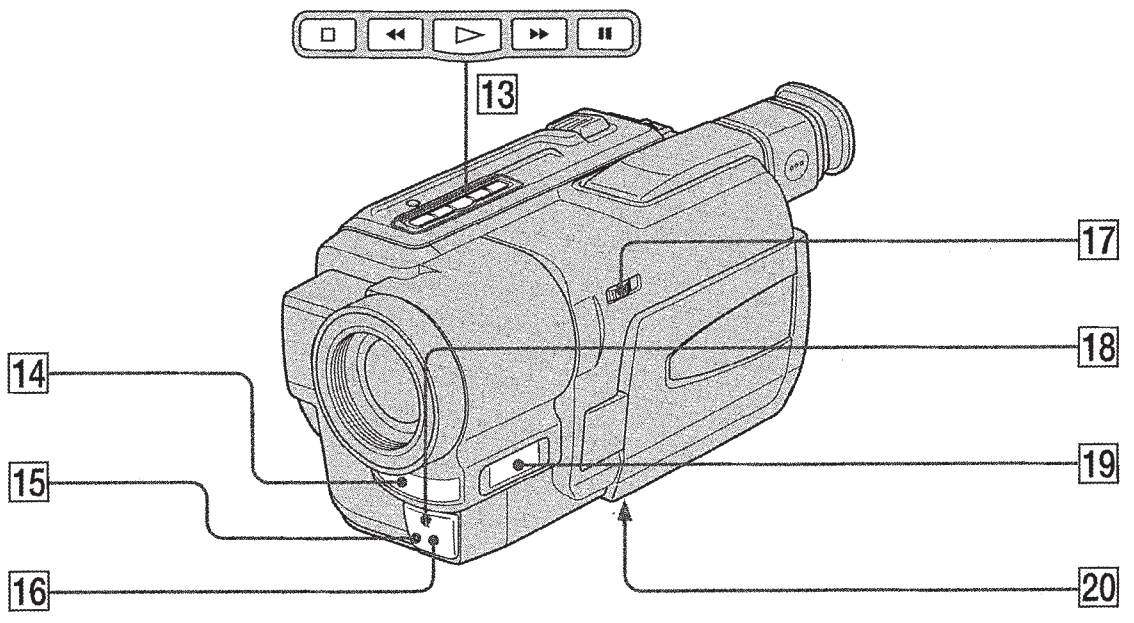

13 **Video control buttons** (p. 38, 40)
■ STOP (stop)
◀◀ REW (rewind)
▶ PLAY (playback)
▶▶ FF (fastforward)
❚❚ PAUSE (pause)

14 **Microphone**

15 **Remote sensor** (CCD-TRV49E/TRV59E/TRV78E/TRV98E only) (p. 116)

16 **Infrared rays emitter** (p. 34)

17 **NIGHTSHOT switch** (p. 34)

18 **Camera recording lamp** (p. 26)

19 **Display window** (p. 118)

20 **Tripod receptacle** (base)
Make sure that the length of the tripod screw is less than 6.5 mm (9/32 inch). Otherwise, you cannot attach the tripod securely and the screw may damage your camcorder.

13 **Кнопки видеоконтроля** (стр. 38, 40)
■ STOP (остановка)
◀◀ REW (ускоренная перемотка назад)
▶ PLAY (воспроизведение
▶▶ FF (ускоренная перемотка вперед)
❚❚ PAUSE (пауза)

14 **Микрофон**

15 **Датчик дистанционного управления** (Только модели CCD-TRV49E/TRV59E/TRV78E/TRV98E) (стр. 116)

16 **Излучатель инфракрасных лучей** (стр. 34)

17 **Переключатель NIGHTSHOT** (стр. 34)

18 **Лампочка записи видеокамеры** (стр. 26)

19 **Окошко дисплея** (стр. 118)

20 **Гнездо для треноги** (основание)
Убедитесь, что длина винта треноги менее 6,5 мм. В противном случае Вы не сможете надежно прикрепить треногу, а винт может повредить Вашу видеокамеру.

## Identifying the parts and controls

## Обозначение частей и регуляторов

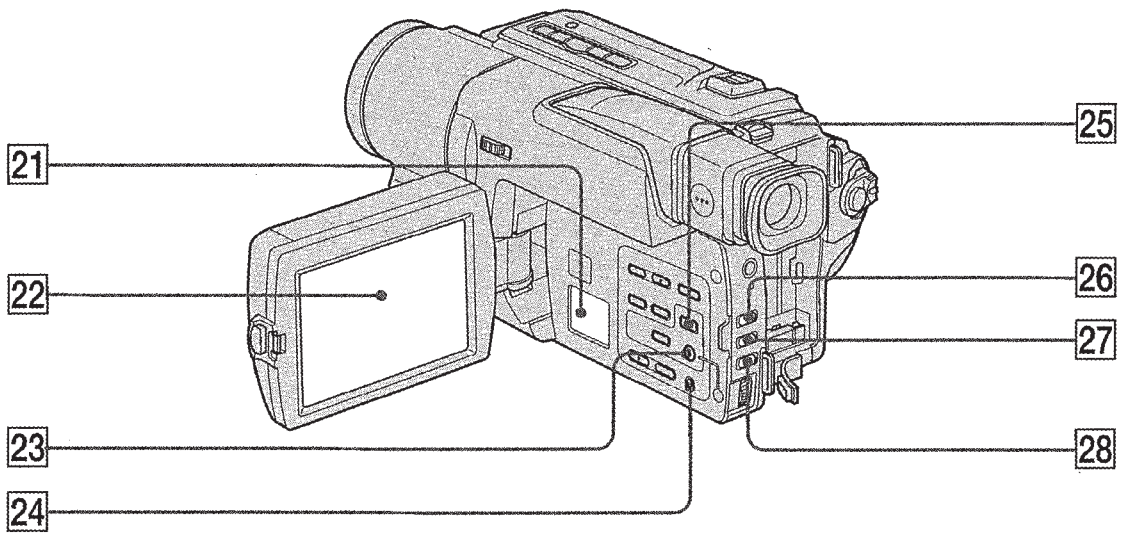

| | |
|---|---|
| 21 **Speaker** | 21 **Динамик** |
| 22 **LCD screen** (p. 28) | 22 **Экран ЖКД** (стр. 28) |
| 23 **MENU button** (p. 67) | 23 **Кнопка MENU** (стр. 67) |
| 24 **RESET button** (p.82) | 24 **Кнопка RESET** (стр. 89) |
| 25 **EXPOSURE button** (p. 54) | 25 **Кнопка EXPOSURE** (стр. 54) |
| 26 **FADER button** (p. 47) | 26 **Кнопка FADER** (стр. 47) |
| 27 **BACK LIGHT button** (p. 33) | 27 **Кнопка BACK LIGHT** (стр. 33) |
| 28 **FOCUS button** (p. 55) | 28 **Переключатель FOCUS** (стр. 55) |

### Attaching the shoulder strap

Attach the shoulder strap supplied with your camcorder to the hooks for the shoulder strap.

### Прикрепление плечевого ремня

Прикрепите плечевой ремень, прилагаемый к Вашей видеокамере, к крючкам для плечевого ремня.



## Identifying the parts and controls

## Обозначение частей и регуляторов

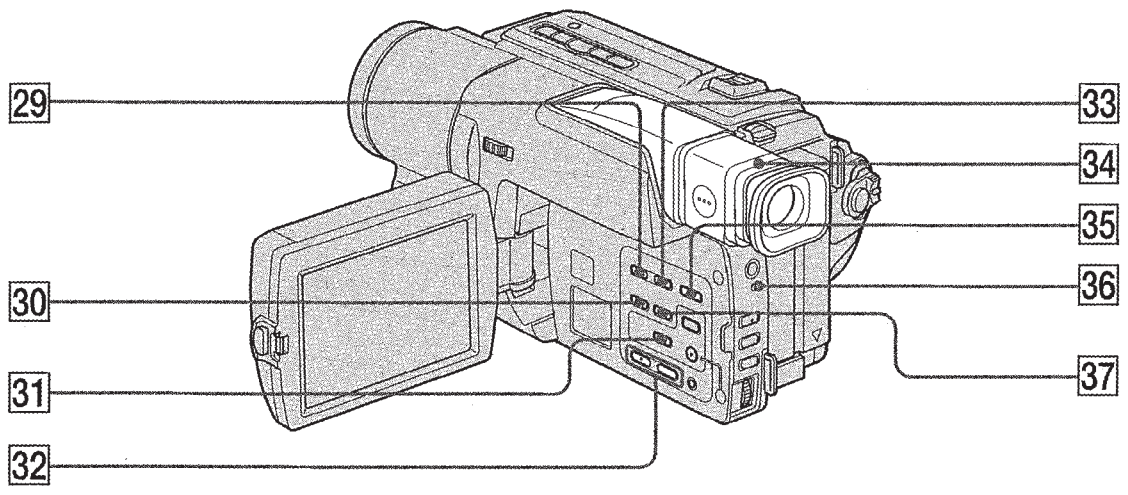

| | |
|---|---|
| 29 **DATE button** (p. 36) | 29 **Кнопка DATE** (стр. 36) |
| 30 **DISPLAY button** (p. 39) | 30 **Кнопка DISPLAY** (стр. 39) |
| 31 **TITLE button** (p. 57) | 31 **Кнопка TITLE** (стр. 57) |
| 32 **VOLUME buttons** (p. 38) | 32 **Кнопка VOLUME** (стр. 38) |
| 33 **TIME button** (p. 36) | 33 **Кнопка TIME** (стр. 36) |
| 34 **Viewfinder** (p. 31) | 34 **Видоискатель** (стр. 31) |
| 35 **COUNTER RESET button** (p. 27) | 35 **Кнопка COUNTER RESET** (стр. 27) |
| 36 **CHG lamp** (p. 15) | 36 **Лампа CHG** (стр. 15) |
| 37 **END SEARCH button** (p. 37) | 37 **Кнопка END SEARCH** (стр. 37) |

### Attaching the lens cap

Attach the lens cap to the grip strap as illustrated.

### Прикрепление крышкч объектива

Прикрепление крышкч объектива к ремнго для захвата, как показано на риеунке.

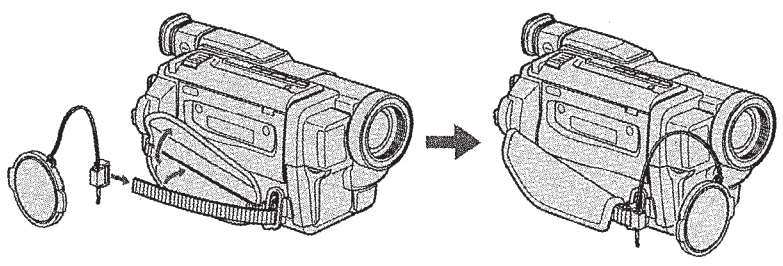

## Identifying the parts and controls

## Обозначение частей и регуляторов

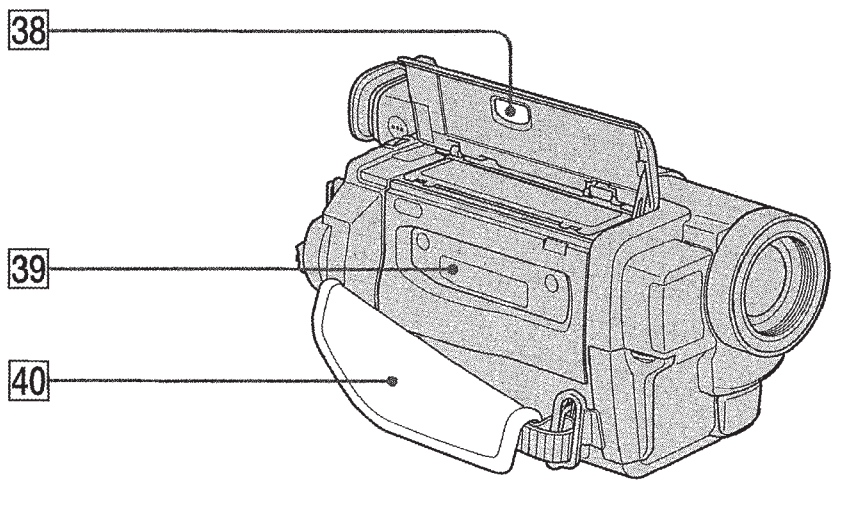

| | |
|---|---|
| 38 **EJECT button** (p. 22) | 38 **Кнопка EJECT** (стр. 22) |
| 39 **Cassette compartment** (p. 22) | 39 **Кассетный отсек** (стр. 22) |
| 40 **Grip strap** | 40 **Ремень для захвата** |

### Fastening the grip strap

### Прикрепление ремня для захвата

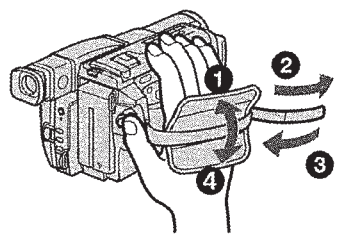

Fasten the grip strap firmly.

Прикрепите ремень для захвата надежно.

## Identifying the parts and controls

## Обозначение частей и регуляторов

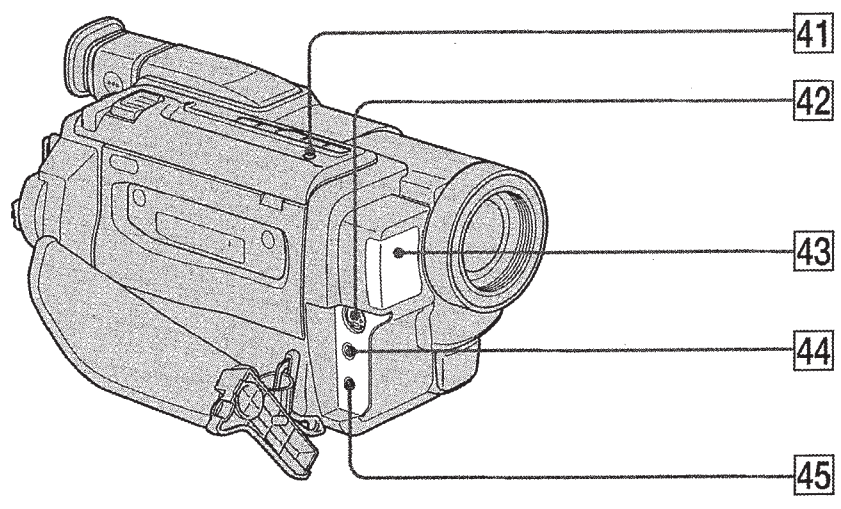

| | |
|---|---|
| 41 **LIGHT button** (p. 61) | 41 **Кнопка LIGHT** (стр. 61) |
| 42 **S VIDEO OUT jack** (p. 42) | 42 **Гнездо S VIDEO OUT** (стр. 42) |
| 43 **Built-in light** (p. 61) | 43 **Встроенная подсветка** (стр. 61) |
| 44 **A/V OUT jack** (p. 42) | 44 **Гнездо A/V OUT** (стр. 42) |
| 45 **RFU DC OUT (RFU adaptor DC output) jack** (p. 43) | 45 **Гнездо RFU DC OUT (выход пост. тока ВЧ-адаптера)** (стр. 43) |

## Identifying the parts and controls

### Remote Commander

**– CCD-TRV49E/TRV59E/TRV78E/TRV98E only**

The buttons that have the same name on the Remote Commander as on your camcorder function identically to the buttons on your camcorder.

## Обозначение частей и регуляторов

### Пульт дистанционного управления

**– Только модели CCD-TRV49E/TRV59E/TRV78E/TRV98E**

Кнопки пульта дистанционного управления, которые имеют одинаковые наименования с кнопками на видеокамере, функционируют идентично.

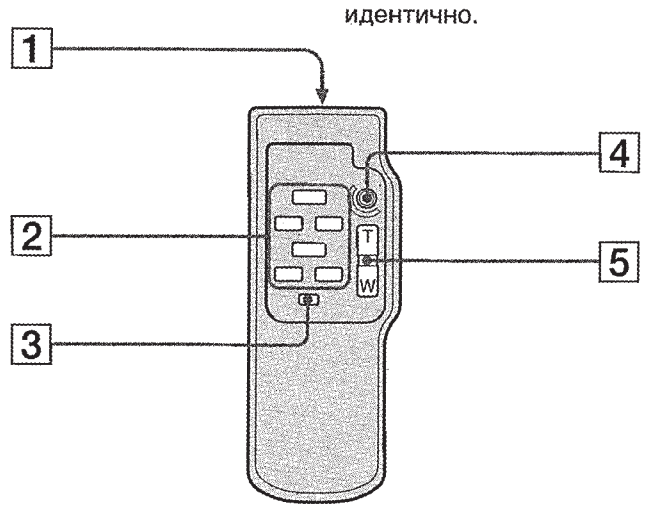

1 **Transmitter**
Point toward the remote sensor to control your camcorder after turning on your camcorder.

2 **Video control buttons** (p. 40)

3 **DISPLAY button** (p. 39)

4 **START/STOP button** (p. 26)

5 **Power zoom button** (p. 30)

1 **Передатчик**
Направьте на дистанционный датчик для управления Вашей видеокамерой после ее включения.

2 **Кнопки видеоконтроля** (стр. 40)

3 **Кнопка DISPLAY** (стр. 39)

4 **Кнопка START/STOP** (стр. 26)

5 **Кнопка приводного вариообъектива** (стр. 30)

### To prepare the Remote Commander

Insert 2 R6 (size AA) batteries by matching the + and – polarities on the batteries to the + – marks inside the battery compartment.

### Для подготовки пульта дистанционного управления

Вставьте 2 батарейки R6 (размера AA), соблюдая надлежащую полярность + и – на батарейках в соответствии со знаками + – внутри отсека для батареек.

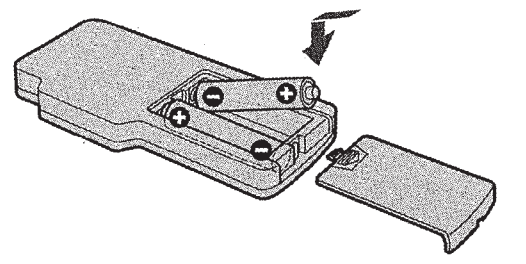

## Identifying the parts and controls

**Notes on the Remote Commander**
- Point the remote sensor away from strong light sources such as direct sunlight or overhead lighting. Otherwise, the Remote Commander may not function properly.
- Your camcorder works in the commander mode VTR 2. Commander modes 1, 2 and 3 are used to distinguish your camcorder from other Sony VCRs to avoid remote control misoperation. If you use another Sony VCR in the commander mode VTR 2, we recommend changing the commander mode or covering the sensor of the VCR with black paper.

## Обозначение частей и регуляторов

**Примечания к пульту дистанционного управления**
- Держите дистанционный датчик подальше от сильных источников света, как например, прямые солнечные лучи или иллюминация. В противном случае дистанционное управление может не действовать.
- Данная видеокамера работает в режиме пульта дистанционного управления VTR 2. Режимы пульта дистанционного управления 1, 2 и 3 используются для отличия данной видеокамеры от других КВМ фирмы Sony во избежание неправильной работы дистанционного управления. Если Вы используете другой КВМ фирмы Sony, работающий в режиме VTR 2, мы рекомендуем Вам изменить режим пульта дистанционного управления или закрыть дистанционный датчик КВМ черной бумагой.

## Identifying the parts and controls

## Обозначение частей и регуляторов

### Operation indicators

### Рабочие индикаторы

**LCD screen and Viewfinder/ Экран ЖКД и видоискатель**

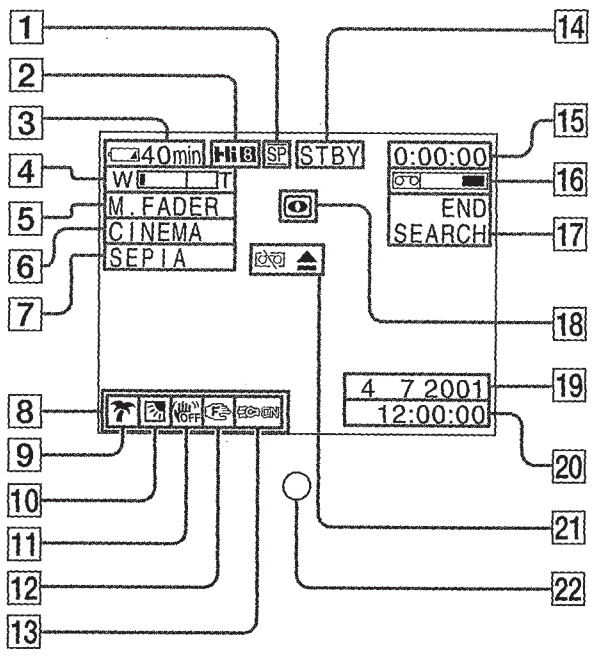

**Display window/Окошко дисплея**



1 **Recording mode indicator** (p. 71)/**Mirror mode indicator** (p. 28)

2 **Hi8 format indicator**

3 **Remaining battery time indicator** (p. 32)

4 **Exposure indicator** (p. 54)/**Zoom indicator** (p. 30)

5 **Fader indicator** (p. 47)

6 **Wide mode indicator** (p. 44)

7 **Picture effect indicator** (p. 50)

8 **Volume indicator** (p. 38)

9 **PROGRAM AE indicator** (p. 51)

10 **Backlight indicator** (p. 33)

11 **SteadyShot off indicator (CCD-TRV78E/TRV98E only)** (p. 70)

12 **Manual focusing indicator** (p. 55)

13 **Built-in light indicator** (p. 61)

1 **Индикатор режима записи** (стр. 76)/**индикатор зеркального режима** (стр. 28)

2 **Индикатор формата Hi8**

3 **Индикатор оставшегося заряда батарейного блока** (стр. 32)

4 **Индикатор экспозиции** (стр. 54)/**индикатор вариообъектива** (стр. 30)

5 **Индикатор фейдера** (стр. 47)

6 **Индикатор широкоформатного режима** (стр. 44)

7 **Индикатор эффекта изображения** (стр. 50)

8 **индикатор громкости** (стр. 38)

9 **Индикатор PROGRAM AE** (стр. 51)

10 **Индикатор задней подсветки** (стр. 33)

11 **Индикатор выключенной устойчивой съемки (CCD-TRV78E/TRV98E)** (стр. 75)

12 **Индикатор ручной фокусировки** (стр. 55)

13 **Индикатор встроенной подсветки** (стр. 61)

## Identifying the parts and controls

14 **STBY/REC indicator** (p. 26)/**Video control mode indicator** (p. 40)

15 **Tape counter indicator** (p. 32)/**Self-diagnosis display indicator** (p. 83)

16 **Remaining tape indicator** (p. 32)

17 **END SEARCH indicator** (p. 37)

18 **NIGHTSHOT indicator** (p. 34)

19 **AUTO DATE indicator** (p. 23)/**Date indicator** (p. 23, 36)

20 **Time indicator** (p. 23, 36)

21 **Warning indicators** (p. 84)

22 **Recording lamp** (p. 26)
This indicator appears in the viewfinder only

23 **Date or time indicator** (p. 23, 36)/**Tape counter indicator** (p. 32)/**Self-diagnosis display indicator** (p. 83)

## Обозначение частей и регуляторов

14 **Индикатор STBY/REC** (стр. 26)/**индикатор режима видеоконтроля** (стр. 40)

15 **Индикатор счетчика ленты** (стр. 32)/**индикатор функции самодиагностики** (стр. 90)

16 **Индикатор оставшейся ленты** (стр. 32)

17 **Индикатор END SEARCH** (стр. 37)

18 **Индикатор NIGHTSHOT** (стр. 34)

19 **Индикатор AUTO DATE** (стр. 23)/**индикатор даты** (стр. 23, 36)

20 **Индикатор времени** (стр. 23, 36)

21 **Предупреждающие индикаторы** (стр. 91)

22 **Лампочка записи** (стр. 26)
Индикатор появляется только в окне видоискателя

23 **Индикатор даты или времени** (стр. 23, 36)/**индикатор счетчика ленты** (стр. 32)/**индикатор функции самодиагностики** (стр. 90)

# SECTION 2
# DISASSEMBLY

The following flow chart shows the disassembly procedure.

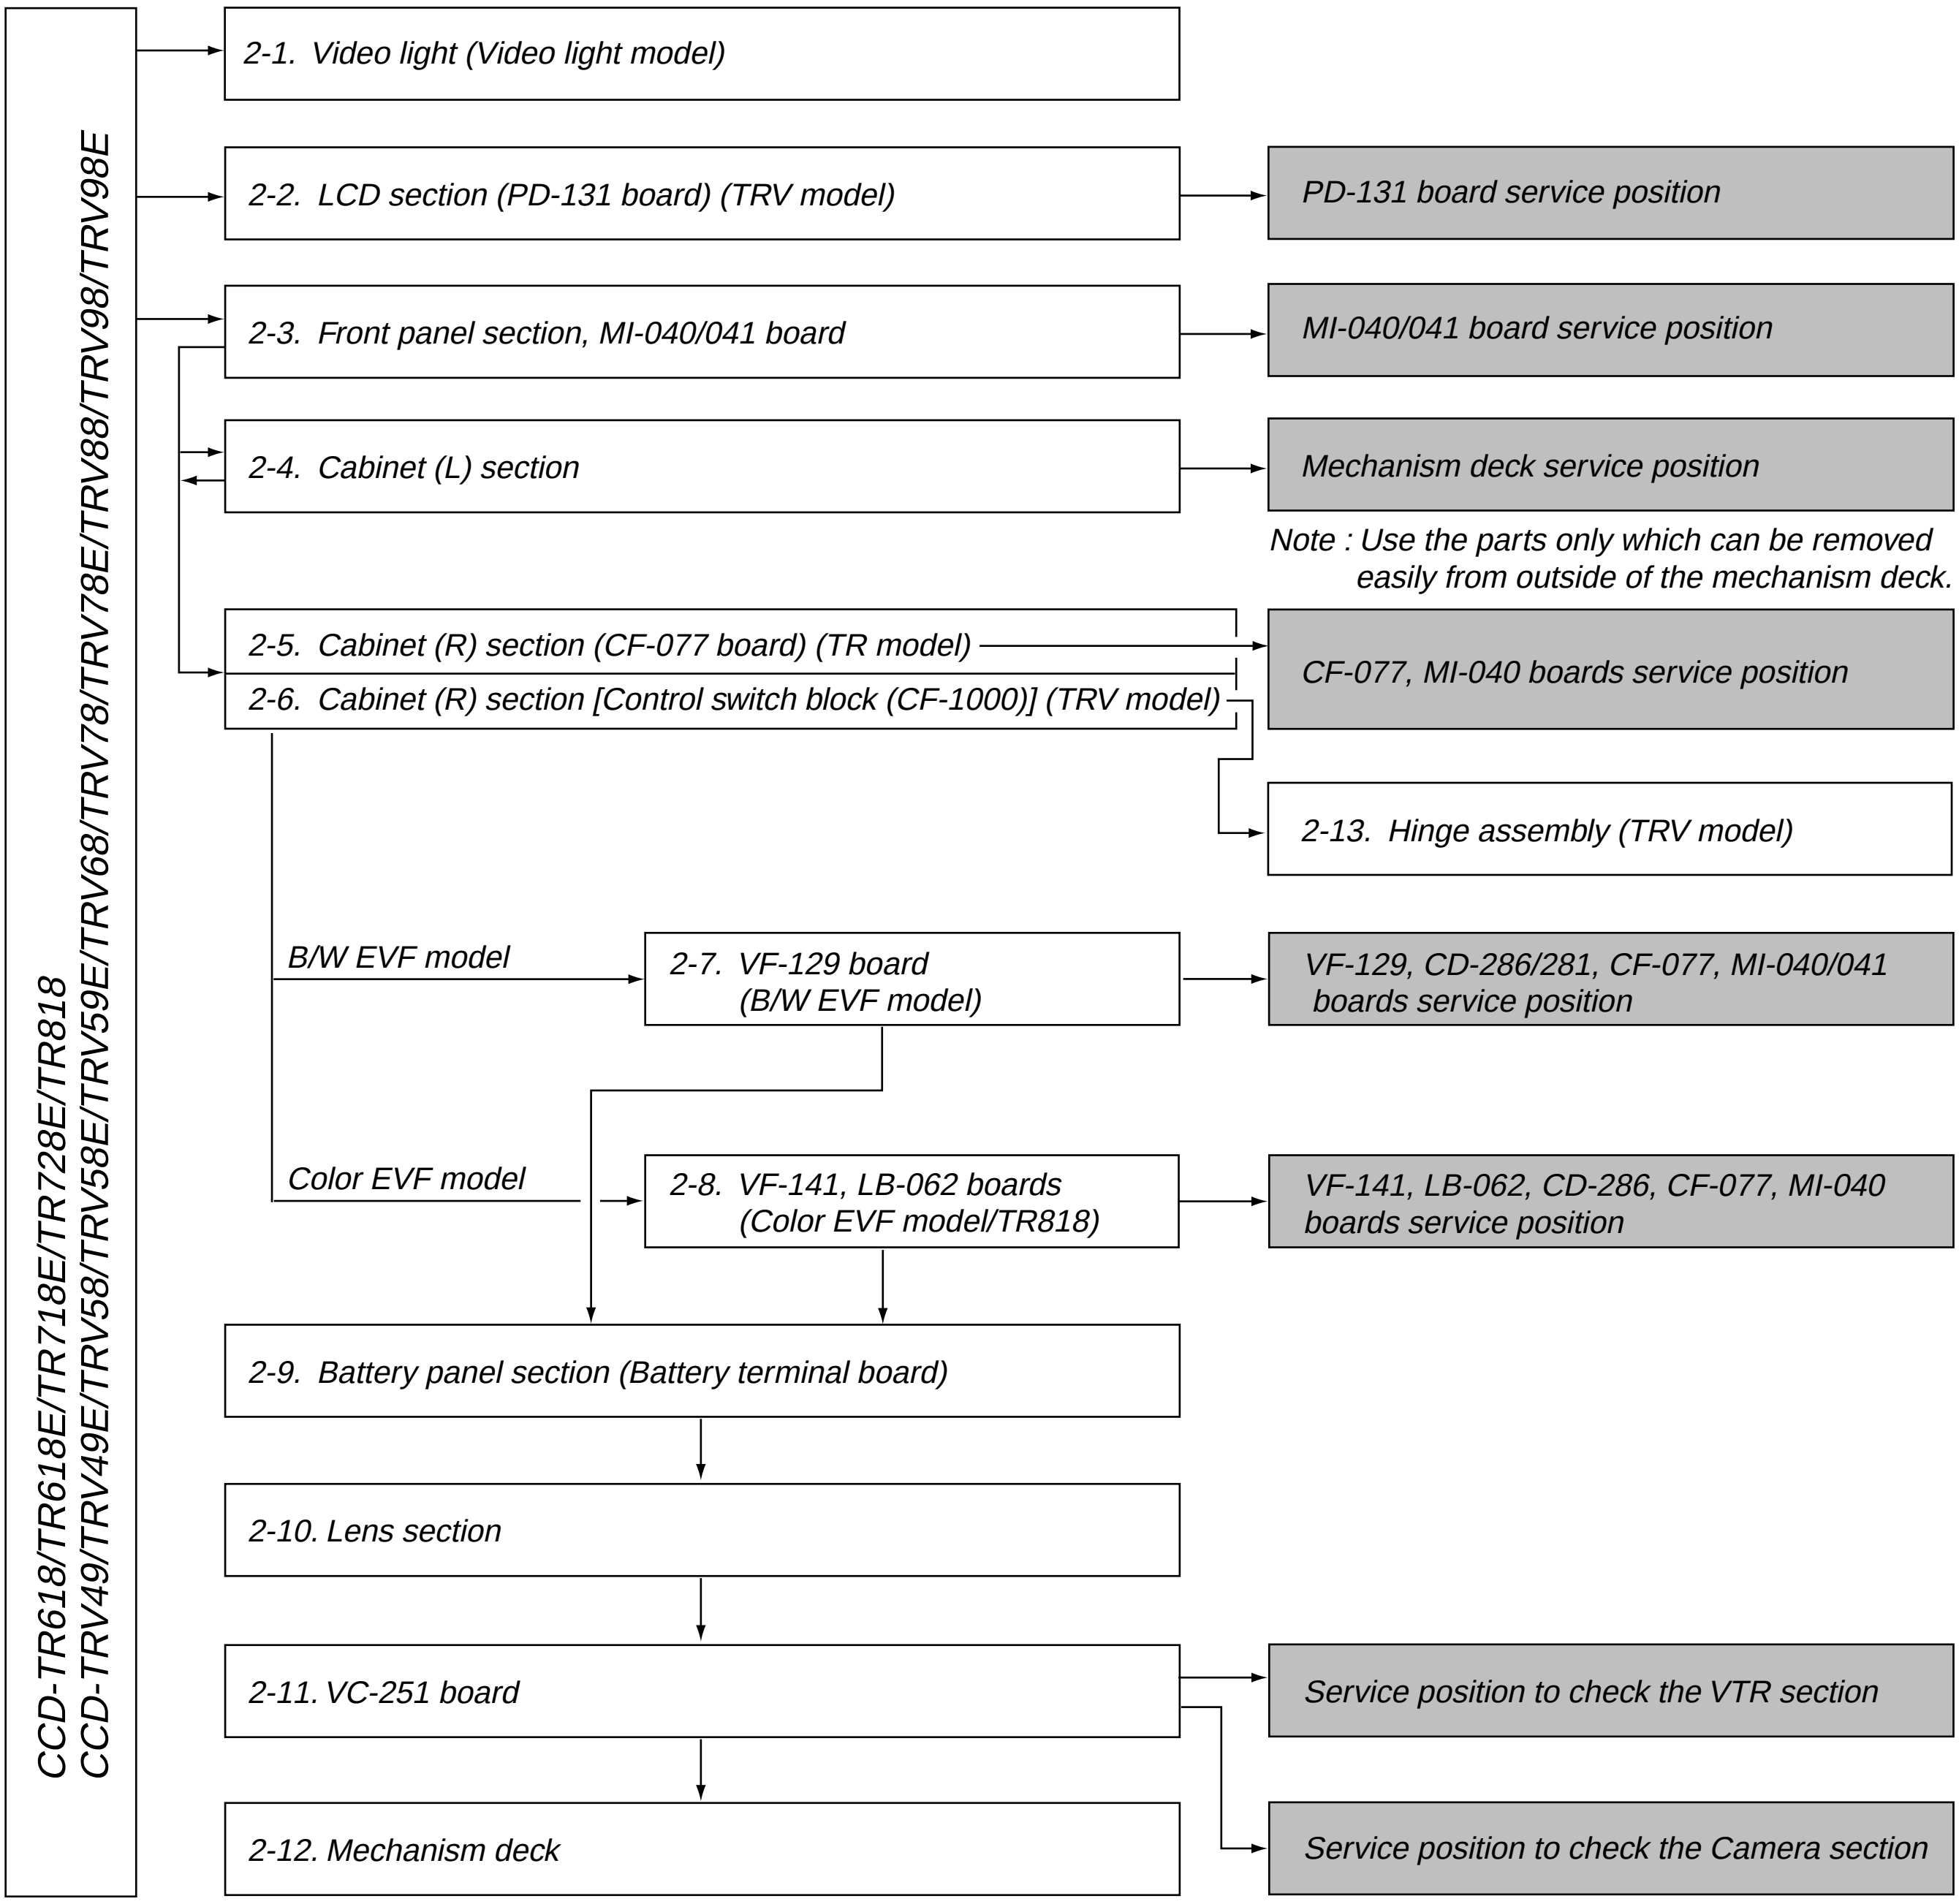
CCD-TR618/TR618E/TR718E/TR728E/TR818
CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
2-1. Video light (Video light model)
2-2. LCD section (PD-131 board) (TRV model)
PD-131 board service position
2-3. Front panel section, MI-040/041 board
MI-040/041 board service position
2-4. Cabinet (L) section
Mechanism deck service position
Note : Use the parts only which can be removed easily from outside of the mechanism deck.
2-5. Cabinet (R) section (CF-077 board) (TR model)
2-6. Cabinet (R) section [Control switch block (CF-1000)] (TRV model)
CF-077, MI-040 boards service position
2-13. Hinge assembly (TRV model)
B/W EVF model
2-7. VF-129 board (B/W EVF model)
VF-129, CD-286/281, CF-077, MI-040/041 boards service position
Color EVF model
2-8. VF-141, LB-062 boards (Color EVF model/TR818)
VF-141, LB-062, CD-286, CF-077, MI-040 boards service position
2-9. Battery panel section (Battery terminal board)
2-10. Lens section
2-11. VC-251 board
Service position to check the VTR section
2-12. Mechanism deck
Service position to check the Camera section

*TR model* :*CCD-TR618/TR618E/TR718E/TR728E/TR818*
*TRV model* :*CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E*
*Video light model* :*CCD-TR618/TR618E/TR718E/TR728E/*
*TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E*
*No video light model* :*CCD-TR818*
*B/W EVF model* :*CCD-TR618/TR618E/TR718E/TR728E/*
*TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E*
*Color EVF model* :*CCD-TR818*

## [CONNECTION OF EQUIPMENTS]

### (TR MODEL)

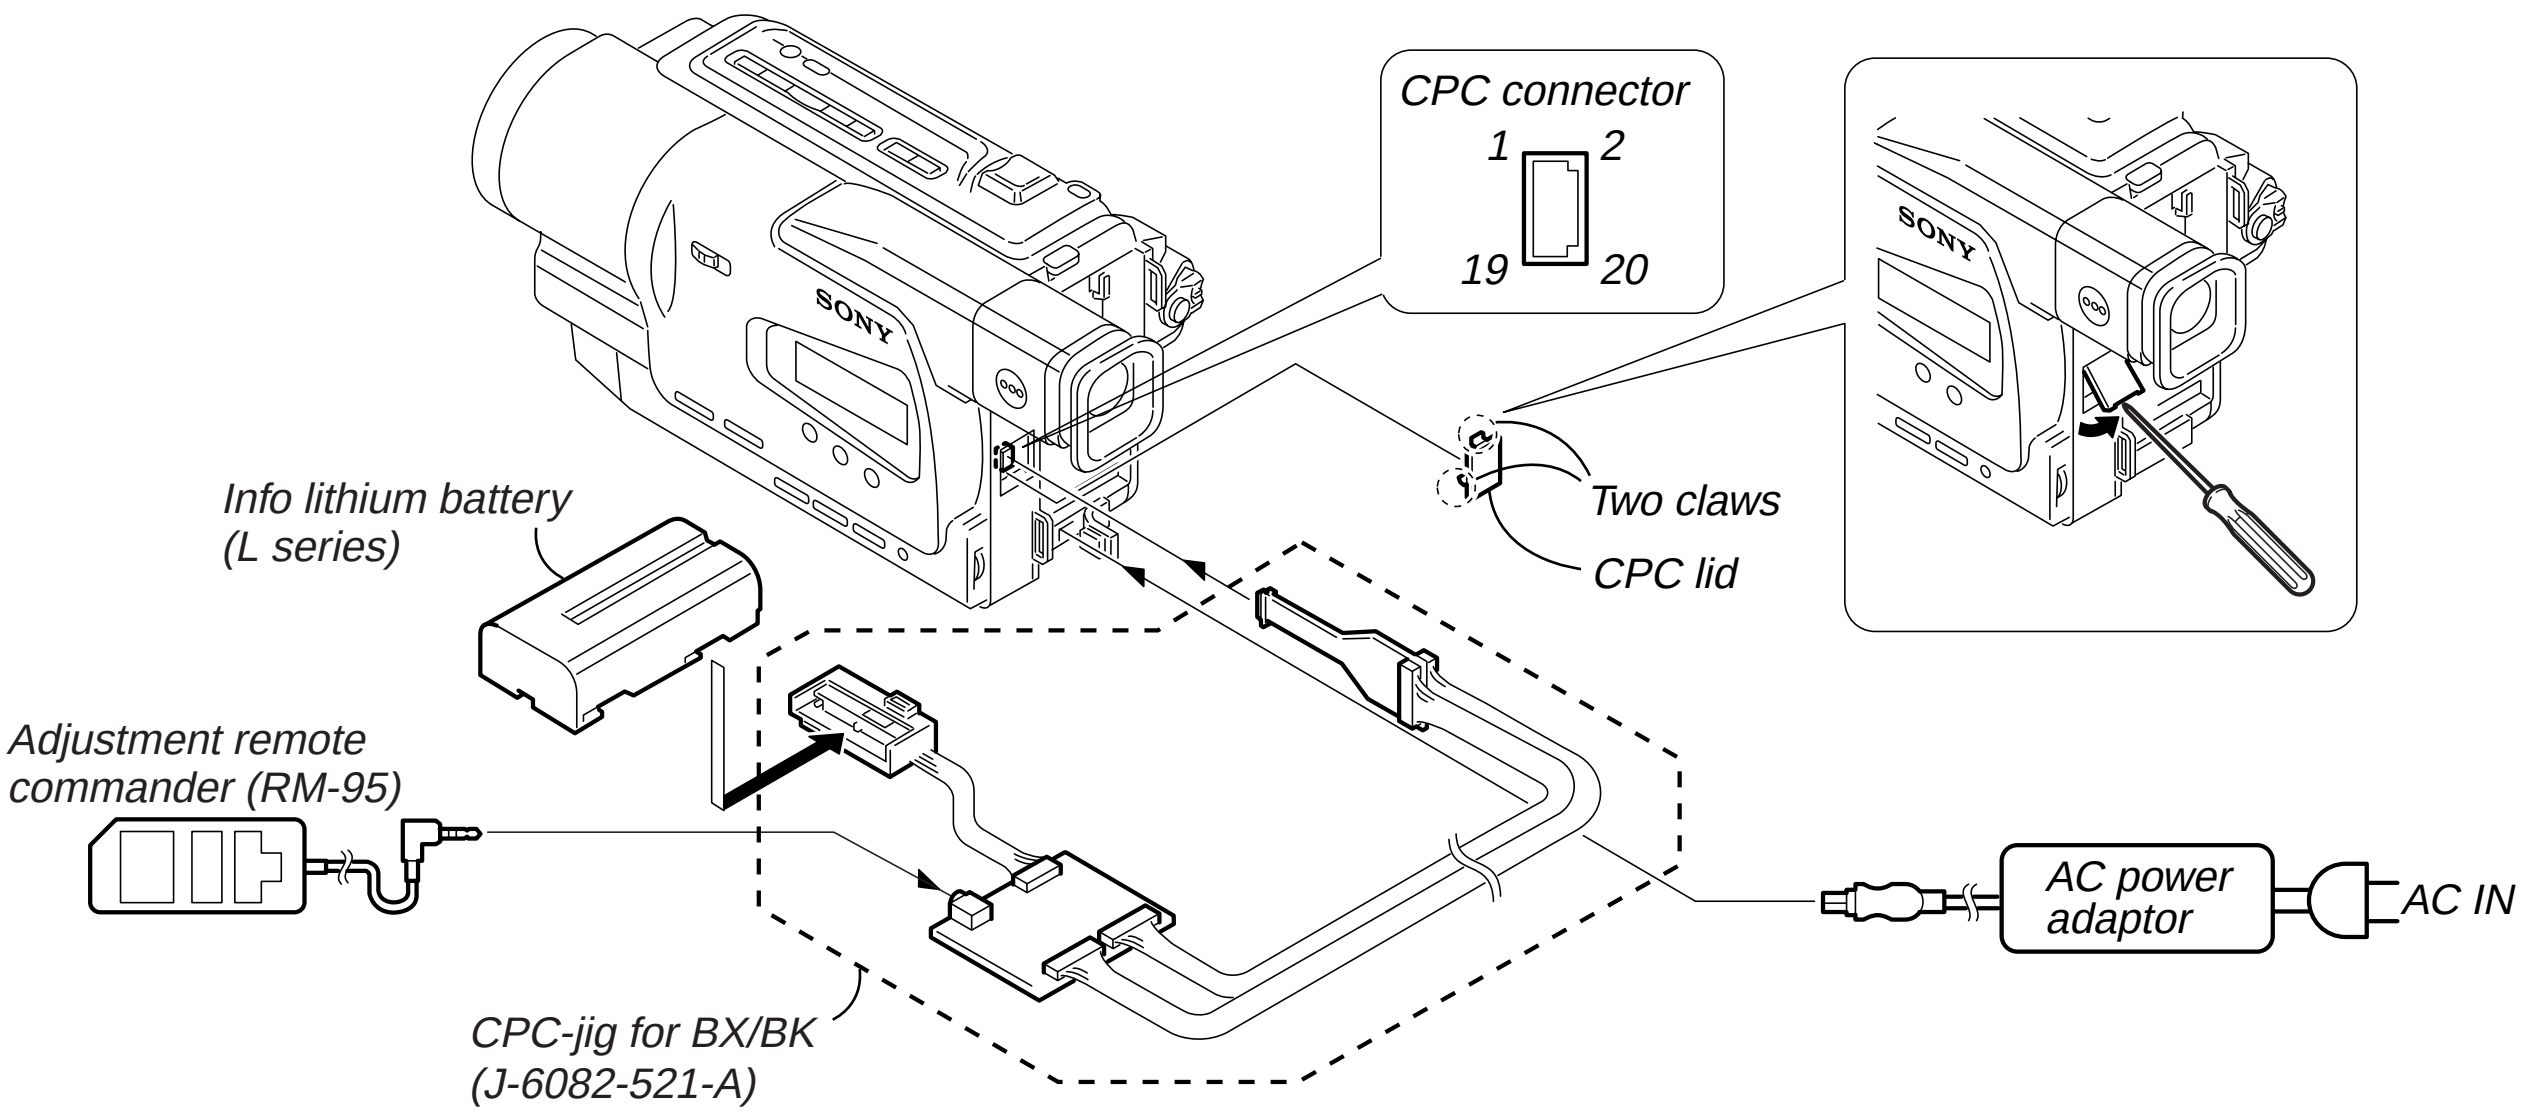
CPC connector
1
2
19
20
Two claws
CPC lid
Info lithium battery
(L series)
Adjustment remote
commander (RM-95)
AC power
adaptor
AC IN
CPC-jig for BX/BK
(J-6082-521-A)

### (TRV MODEL)

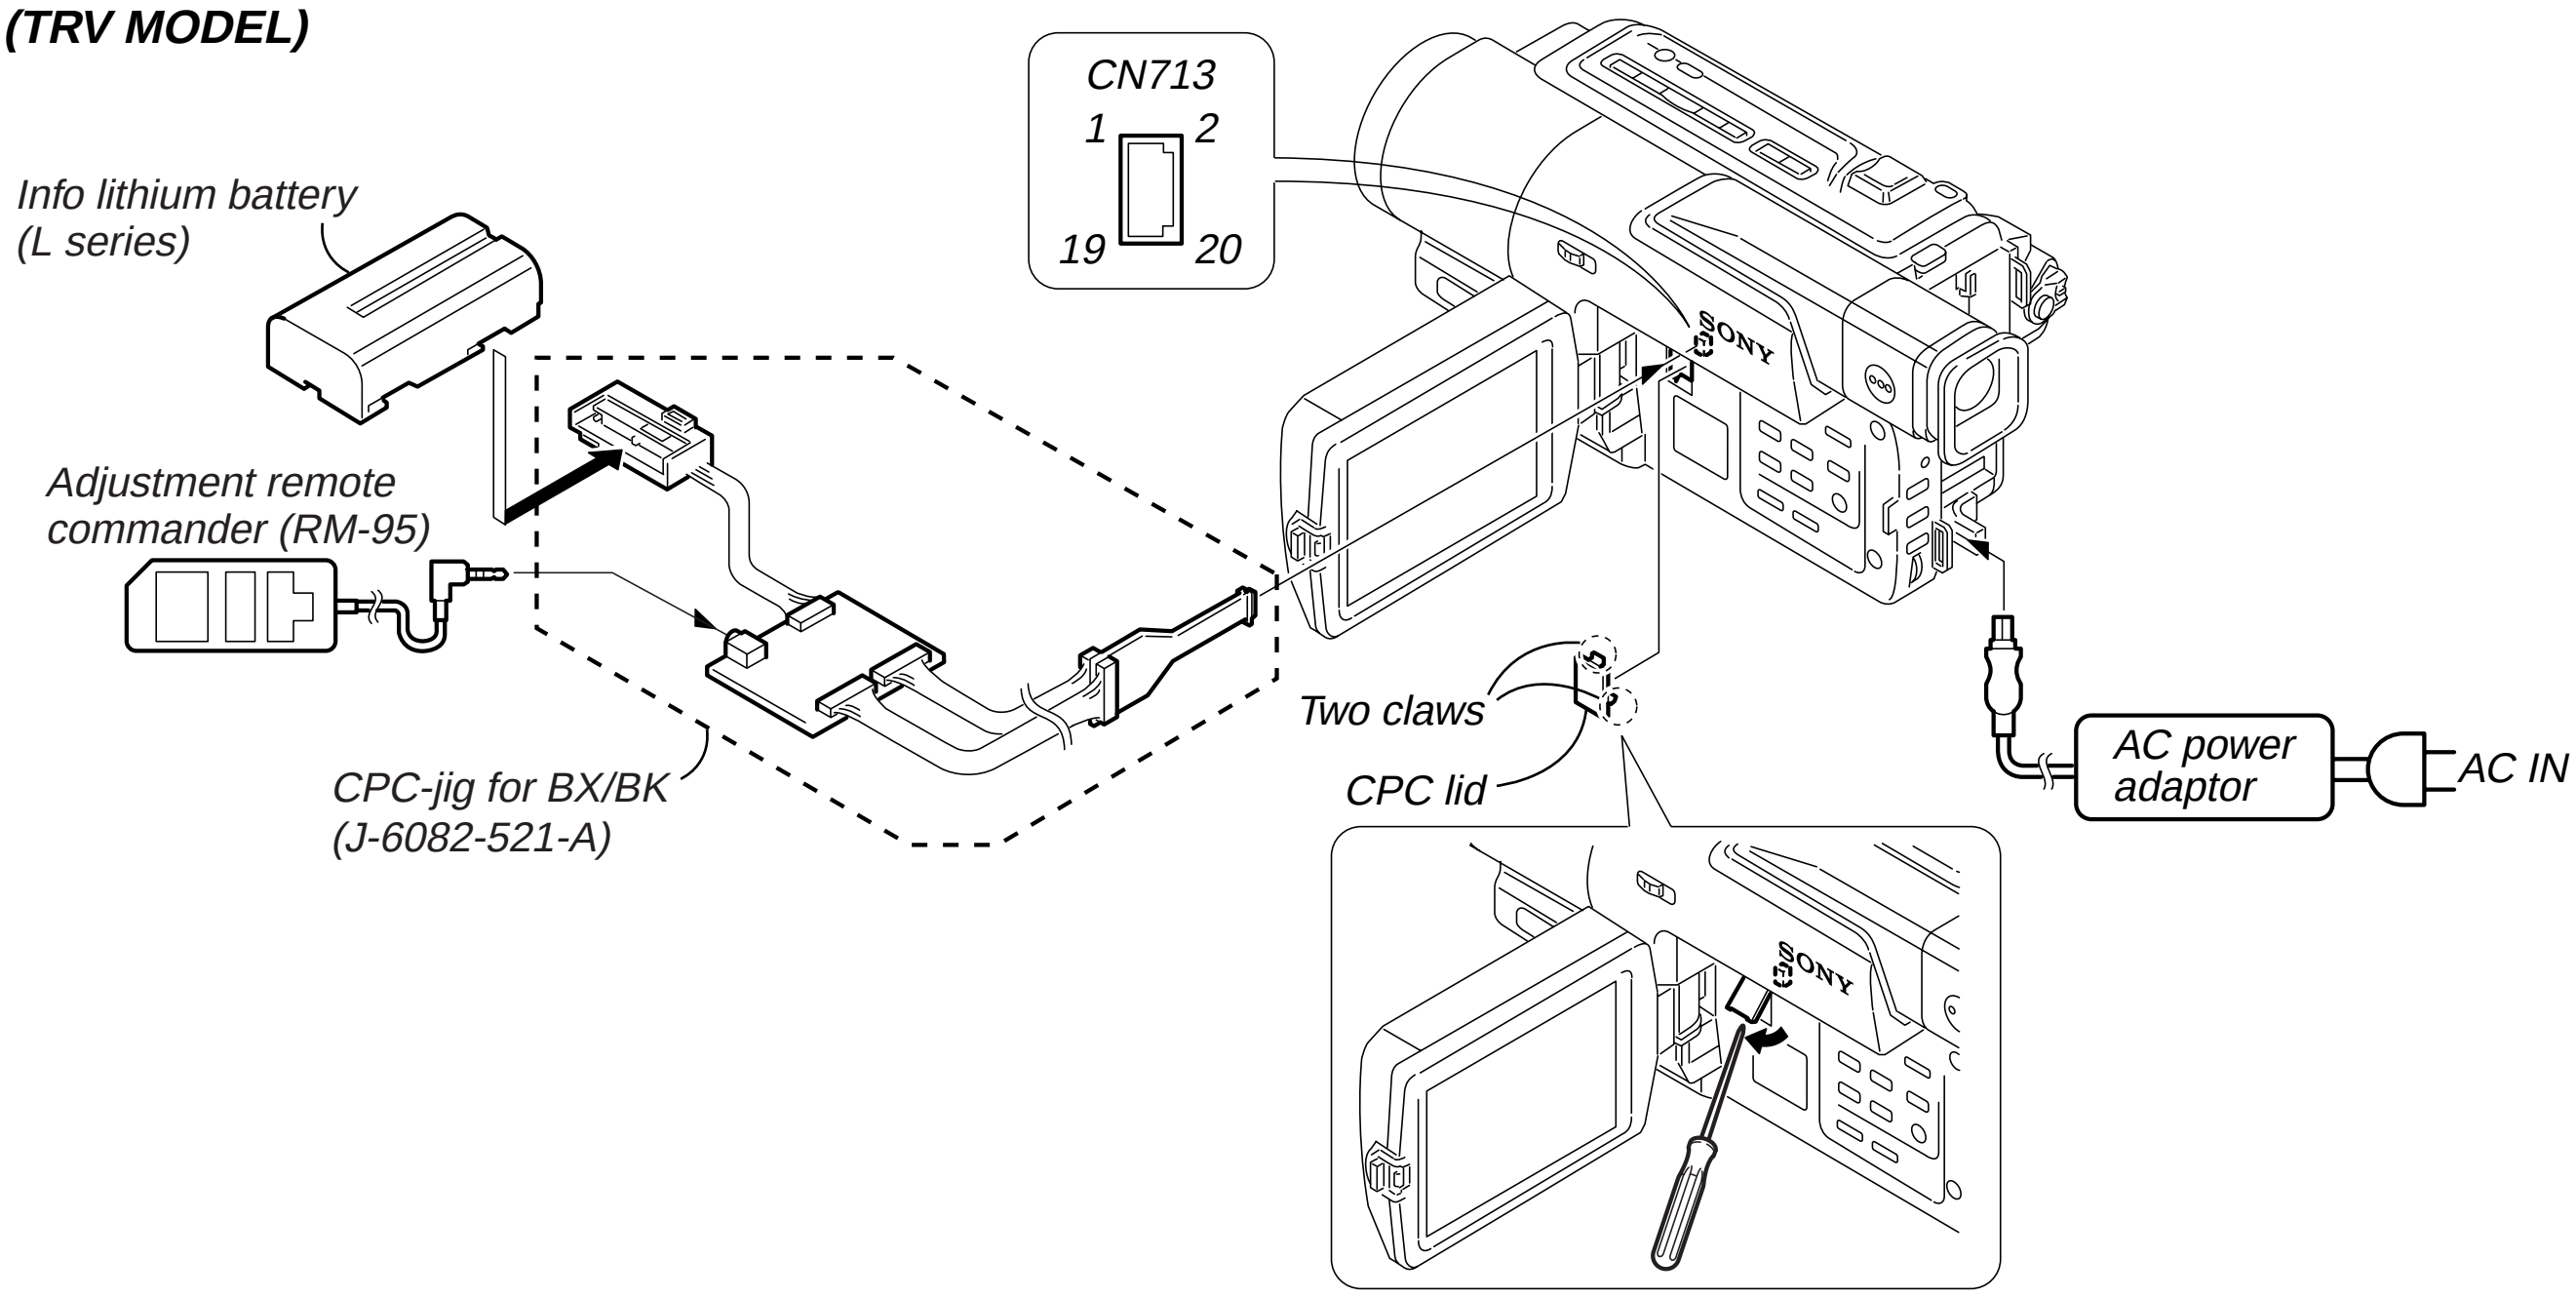
CN713
1
2
19
20
Info lithium battery
(L series)
Adjustment remote
commander (RM-95)
Two claws
CPC lid
AC power
adaptor
AC IN
CPC-jig for BX/BK
(J-6082-521-A)

**NOTE:** Follow the disassembly procedure in the numerical order given.

## 2-1. VIDEO LIGHT (VIDEO LIGHT MODEL)

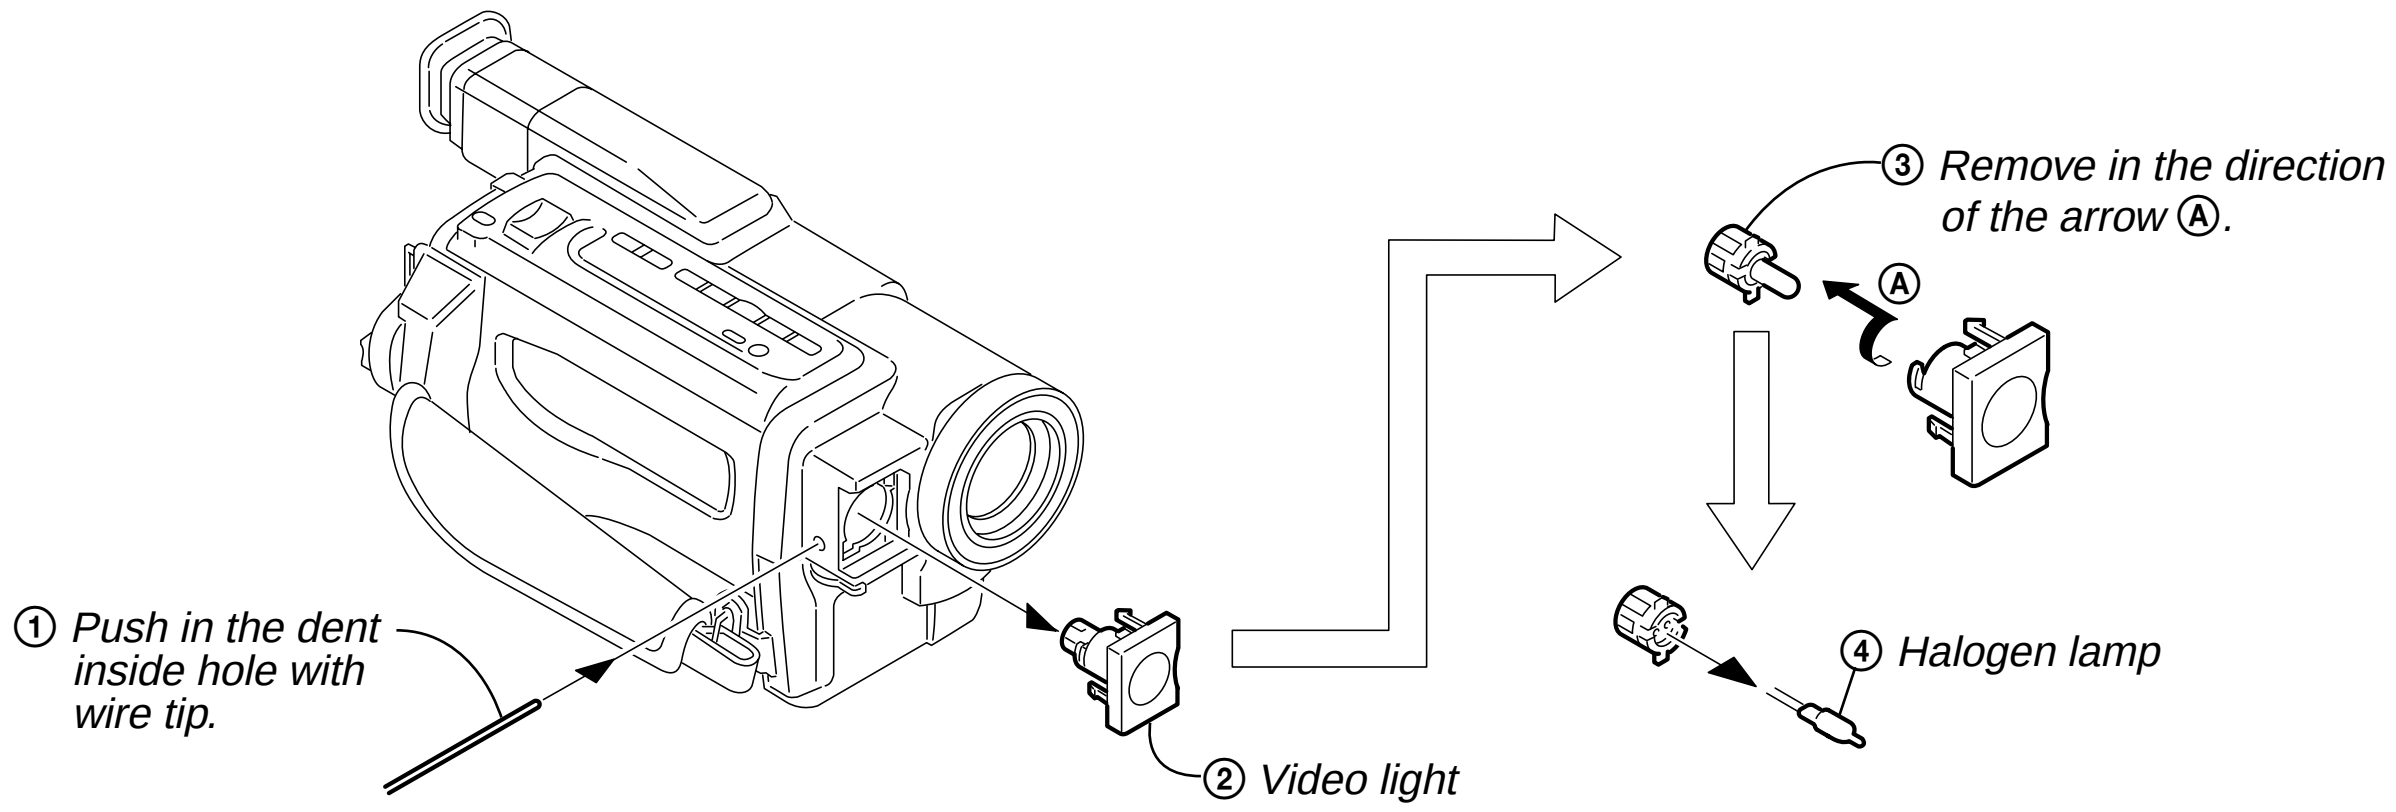
③ Remove in the direction
of the arrow Ⓐ.
Ⓐ
① Push in the dent
inside hole with
wire tip.
② Video light
④ Halogen lamp

## 2-2. LCD SECTION (PD-131 BOARD) (TRV MODEL)

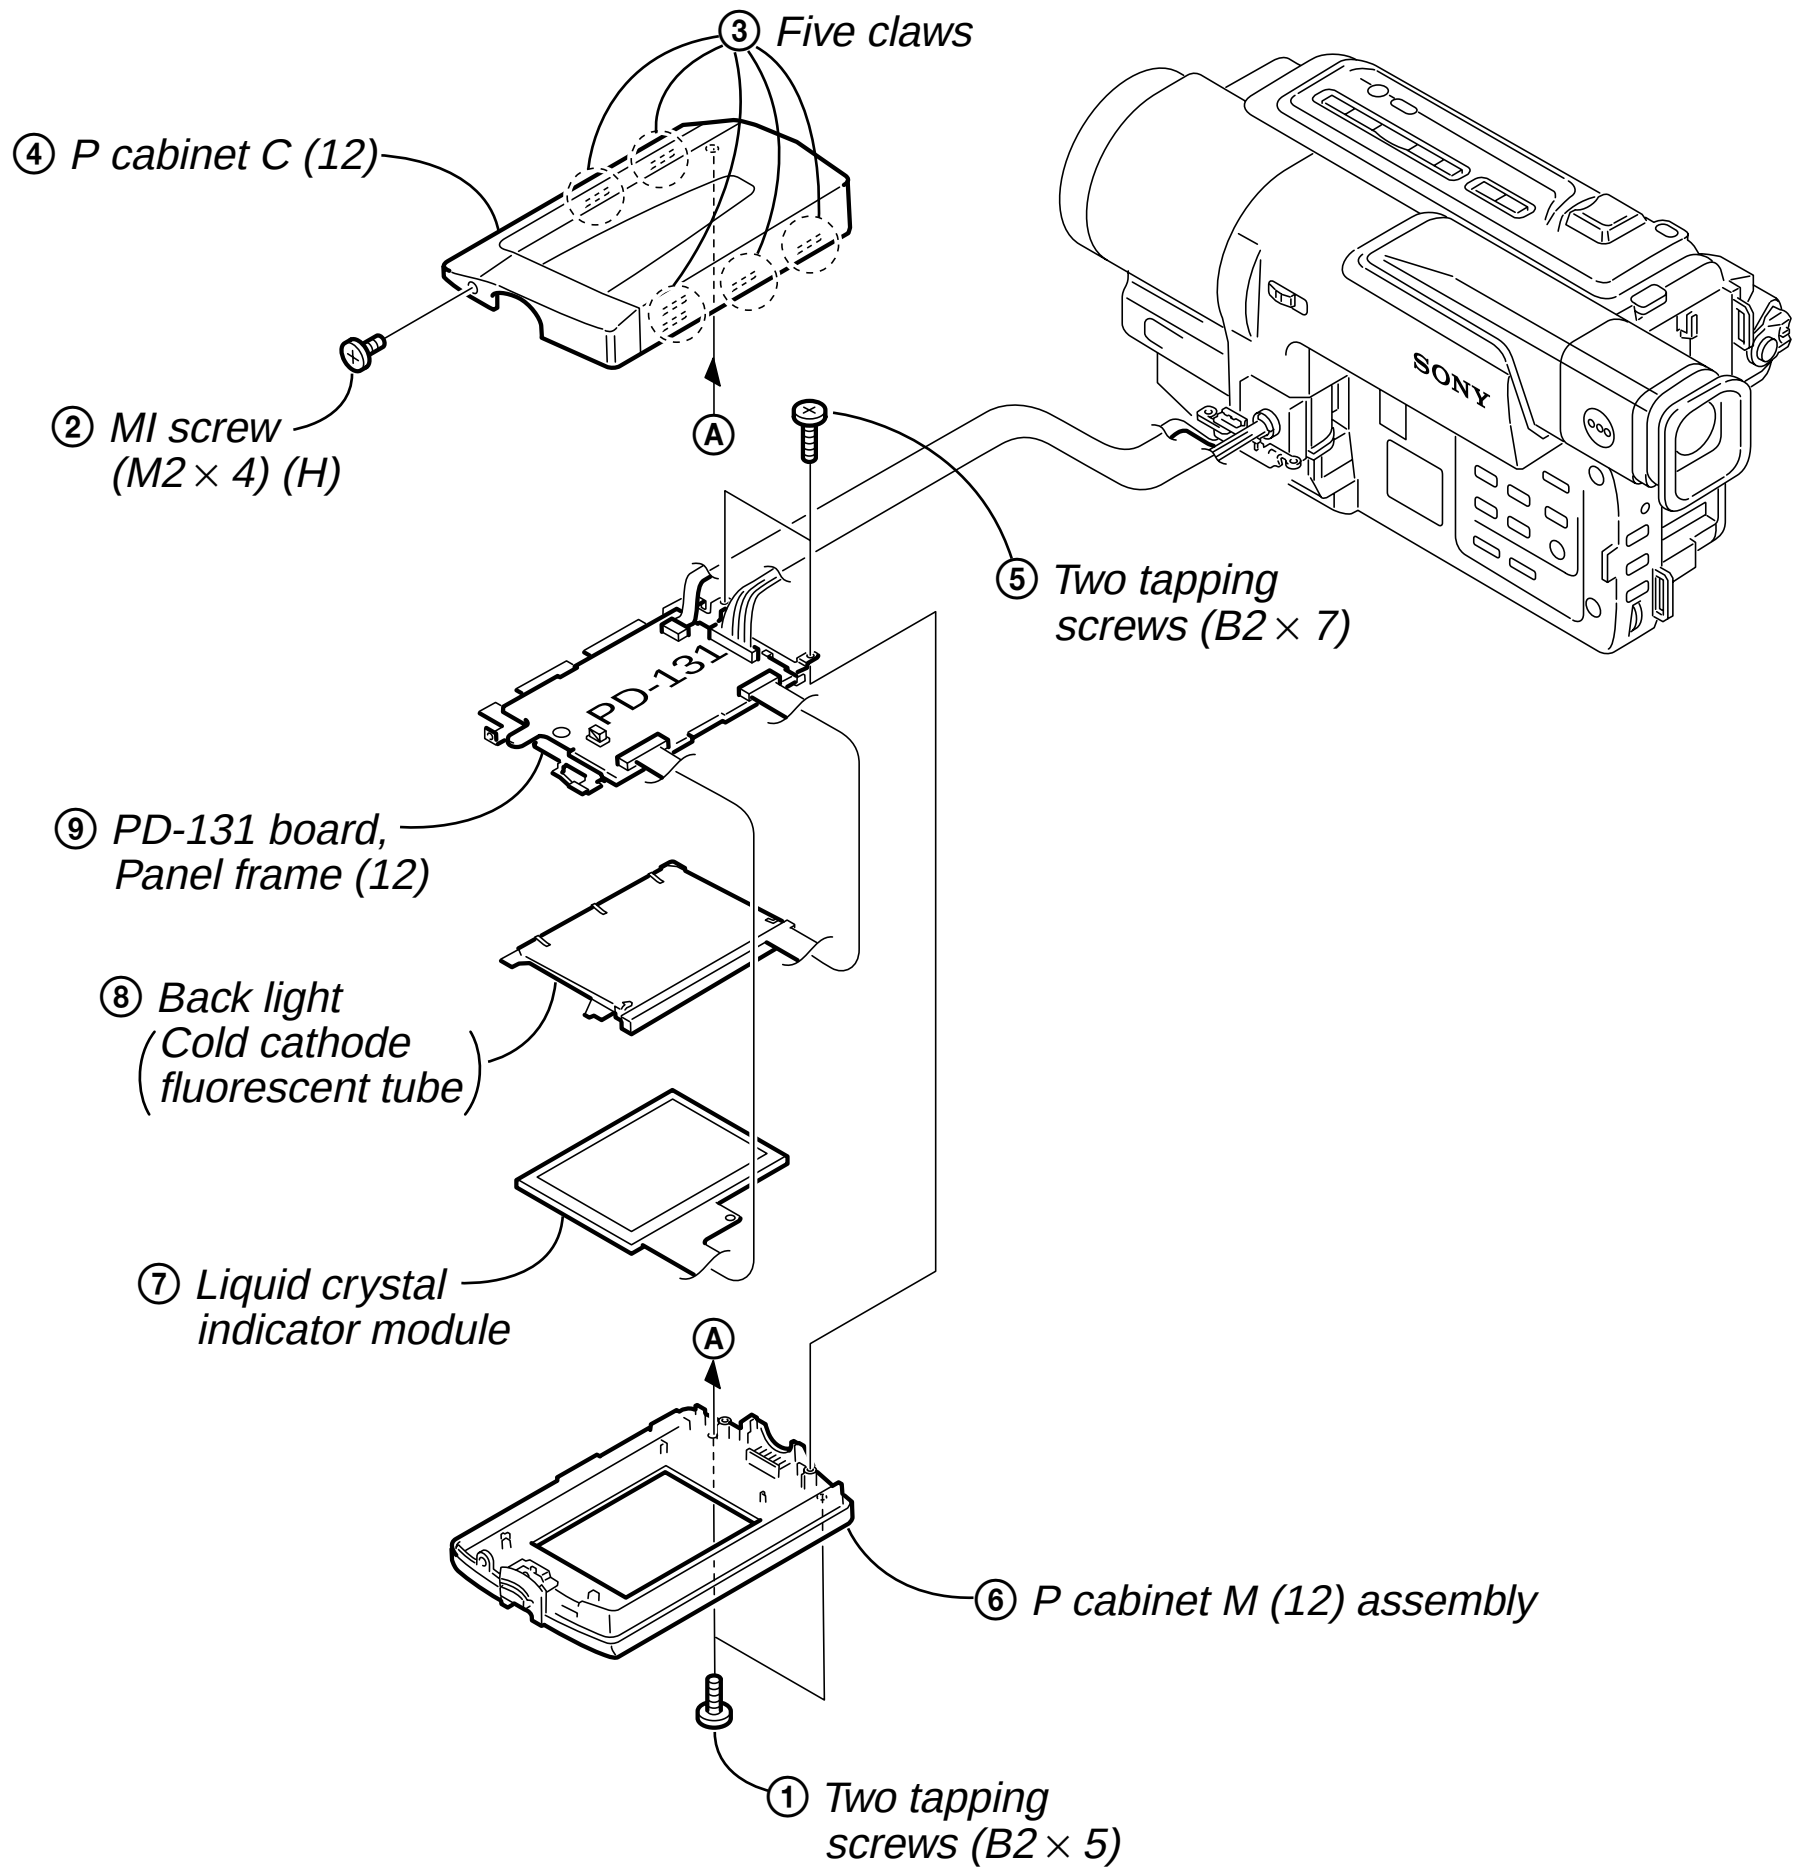
③ Five claws
④ P cabinet C (12)
② MI screw (M2 × 4) (H)
Ⓐ
⑤ Two tapping screws (B2 × 7)
SONY
PD-131
⑨ PD-131 board, Panel frame (12)
⑧ Back light (Cold cathode fluorescent tube)
⑦ Liquid crystal indicator module
Ⓐ
⑥ P cabinet M (12) assembly
① Two tapping screws (B2 × 5)

### [PD-131 BOARD SERVICE POSITION]

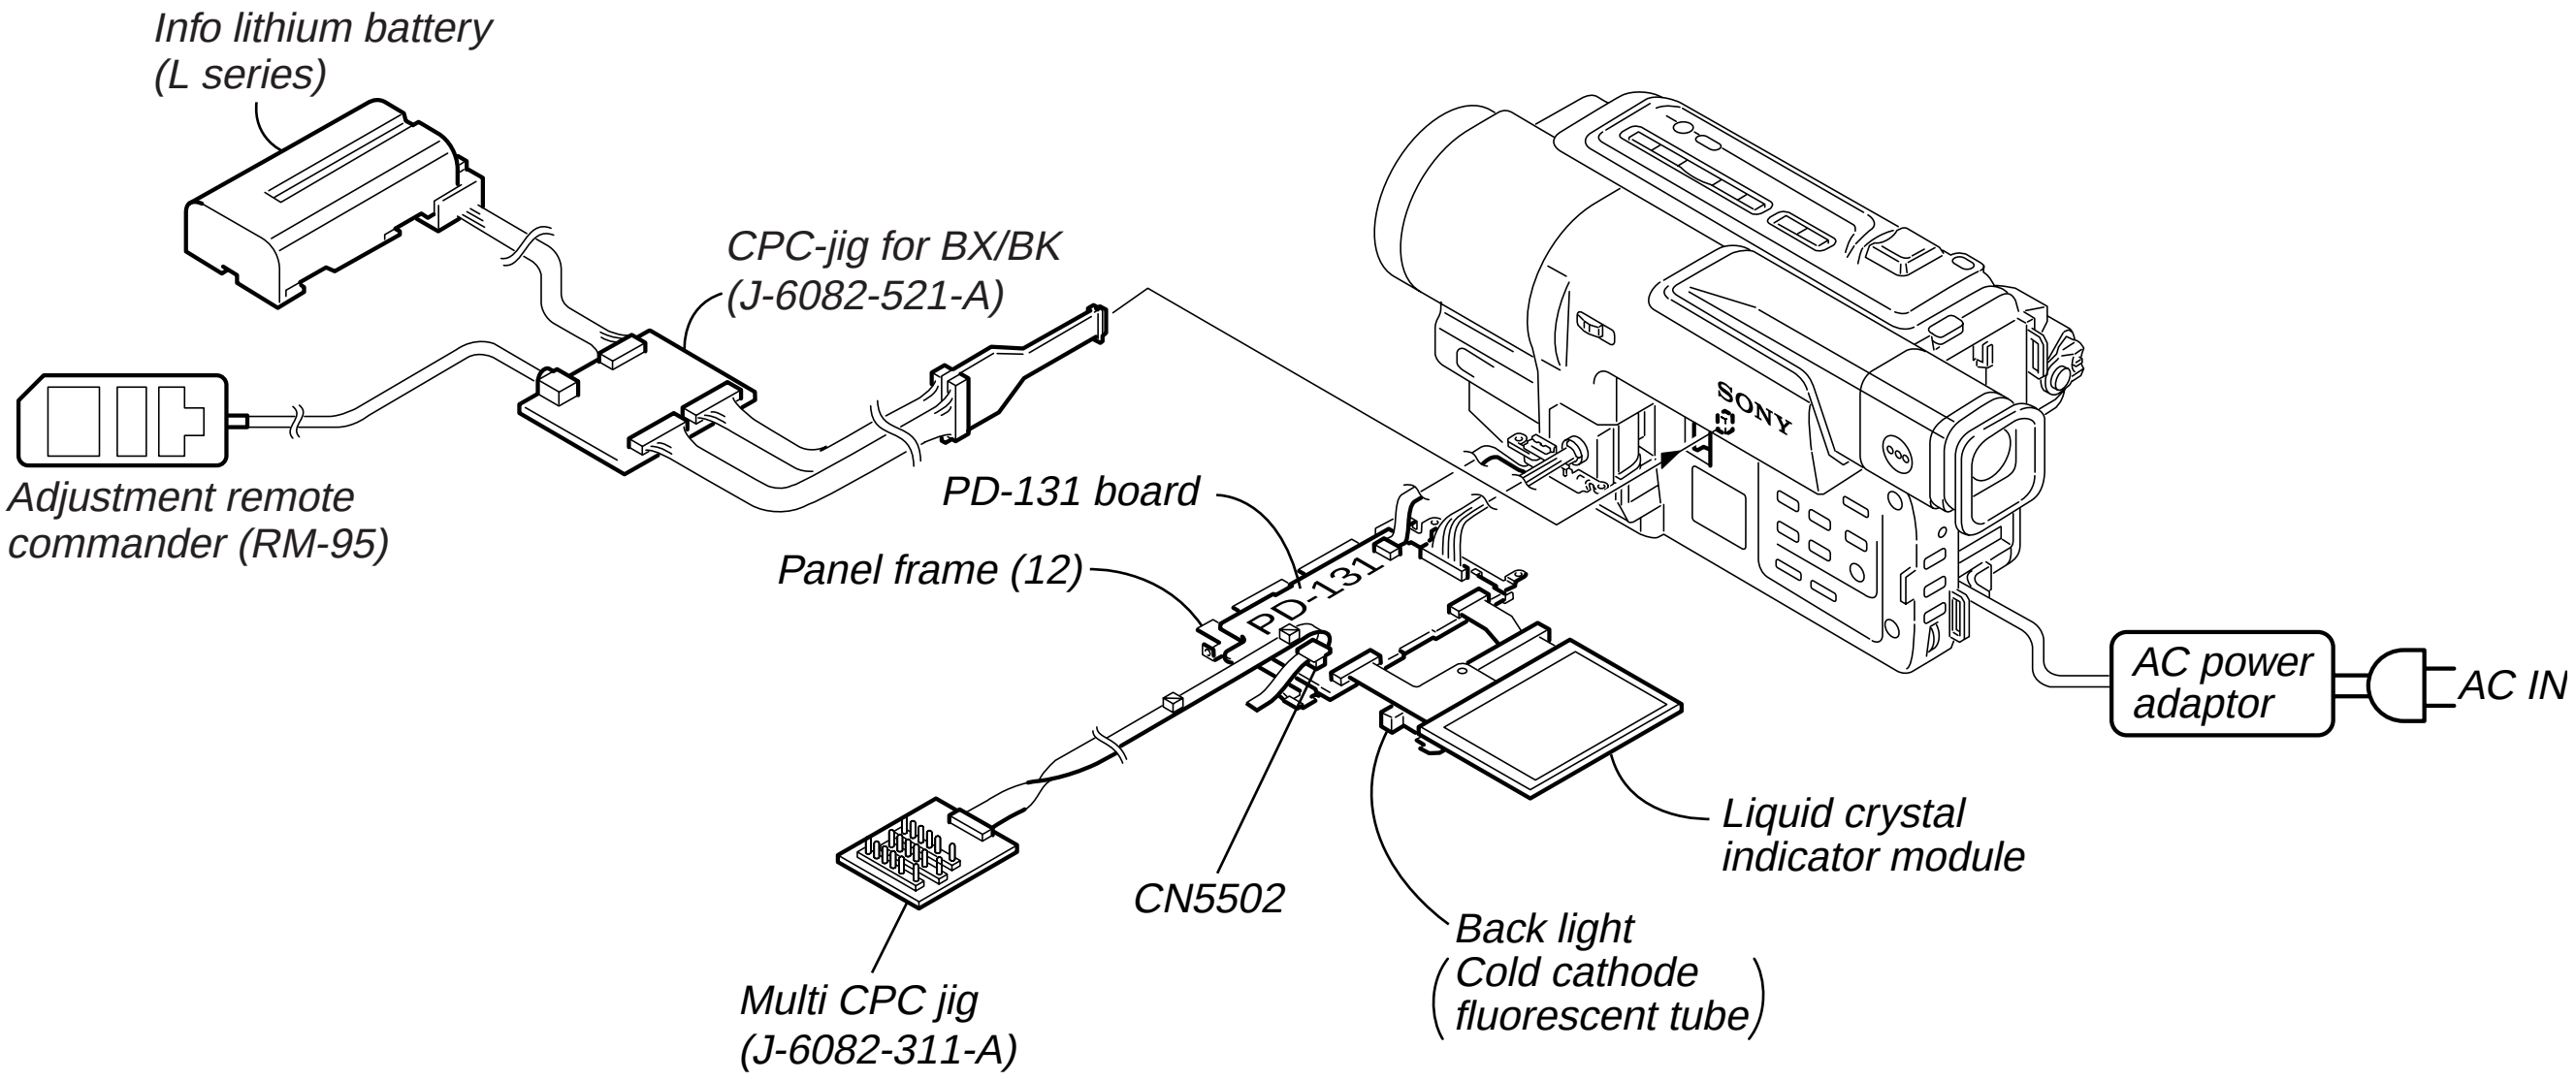
Info lithium battery (L series)
CPC-jig for BX/BK (J-6082-521-A)
Adjustment remote commander (RM-95)
SONY
PD-131 board
Panel frame (12)
PD-131
AC power adaptor
AC IN
Liquid crystal indicator module
CN5502
Back light (Cold cathode fluorescent tube)
Multi CPC jig (J-6082-311-A)

## 2-3. FRONT PANEL SECTION, MI-040/041 BOARD

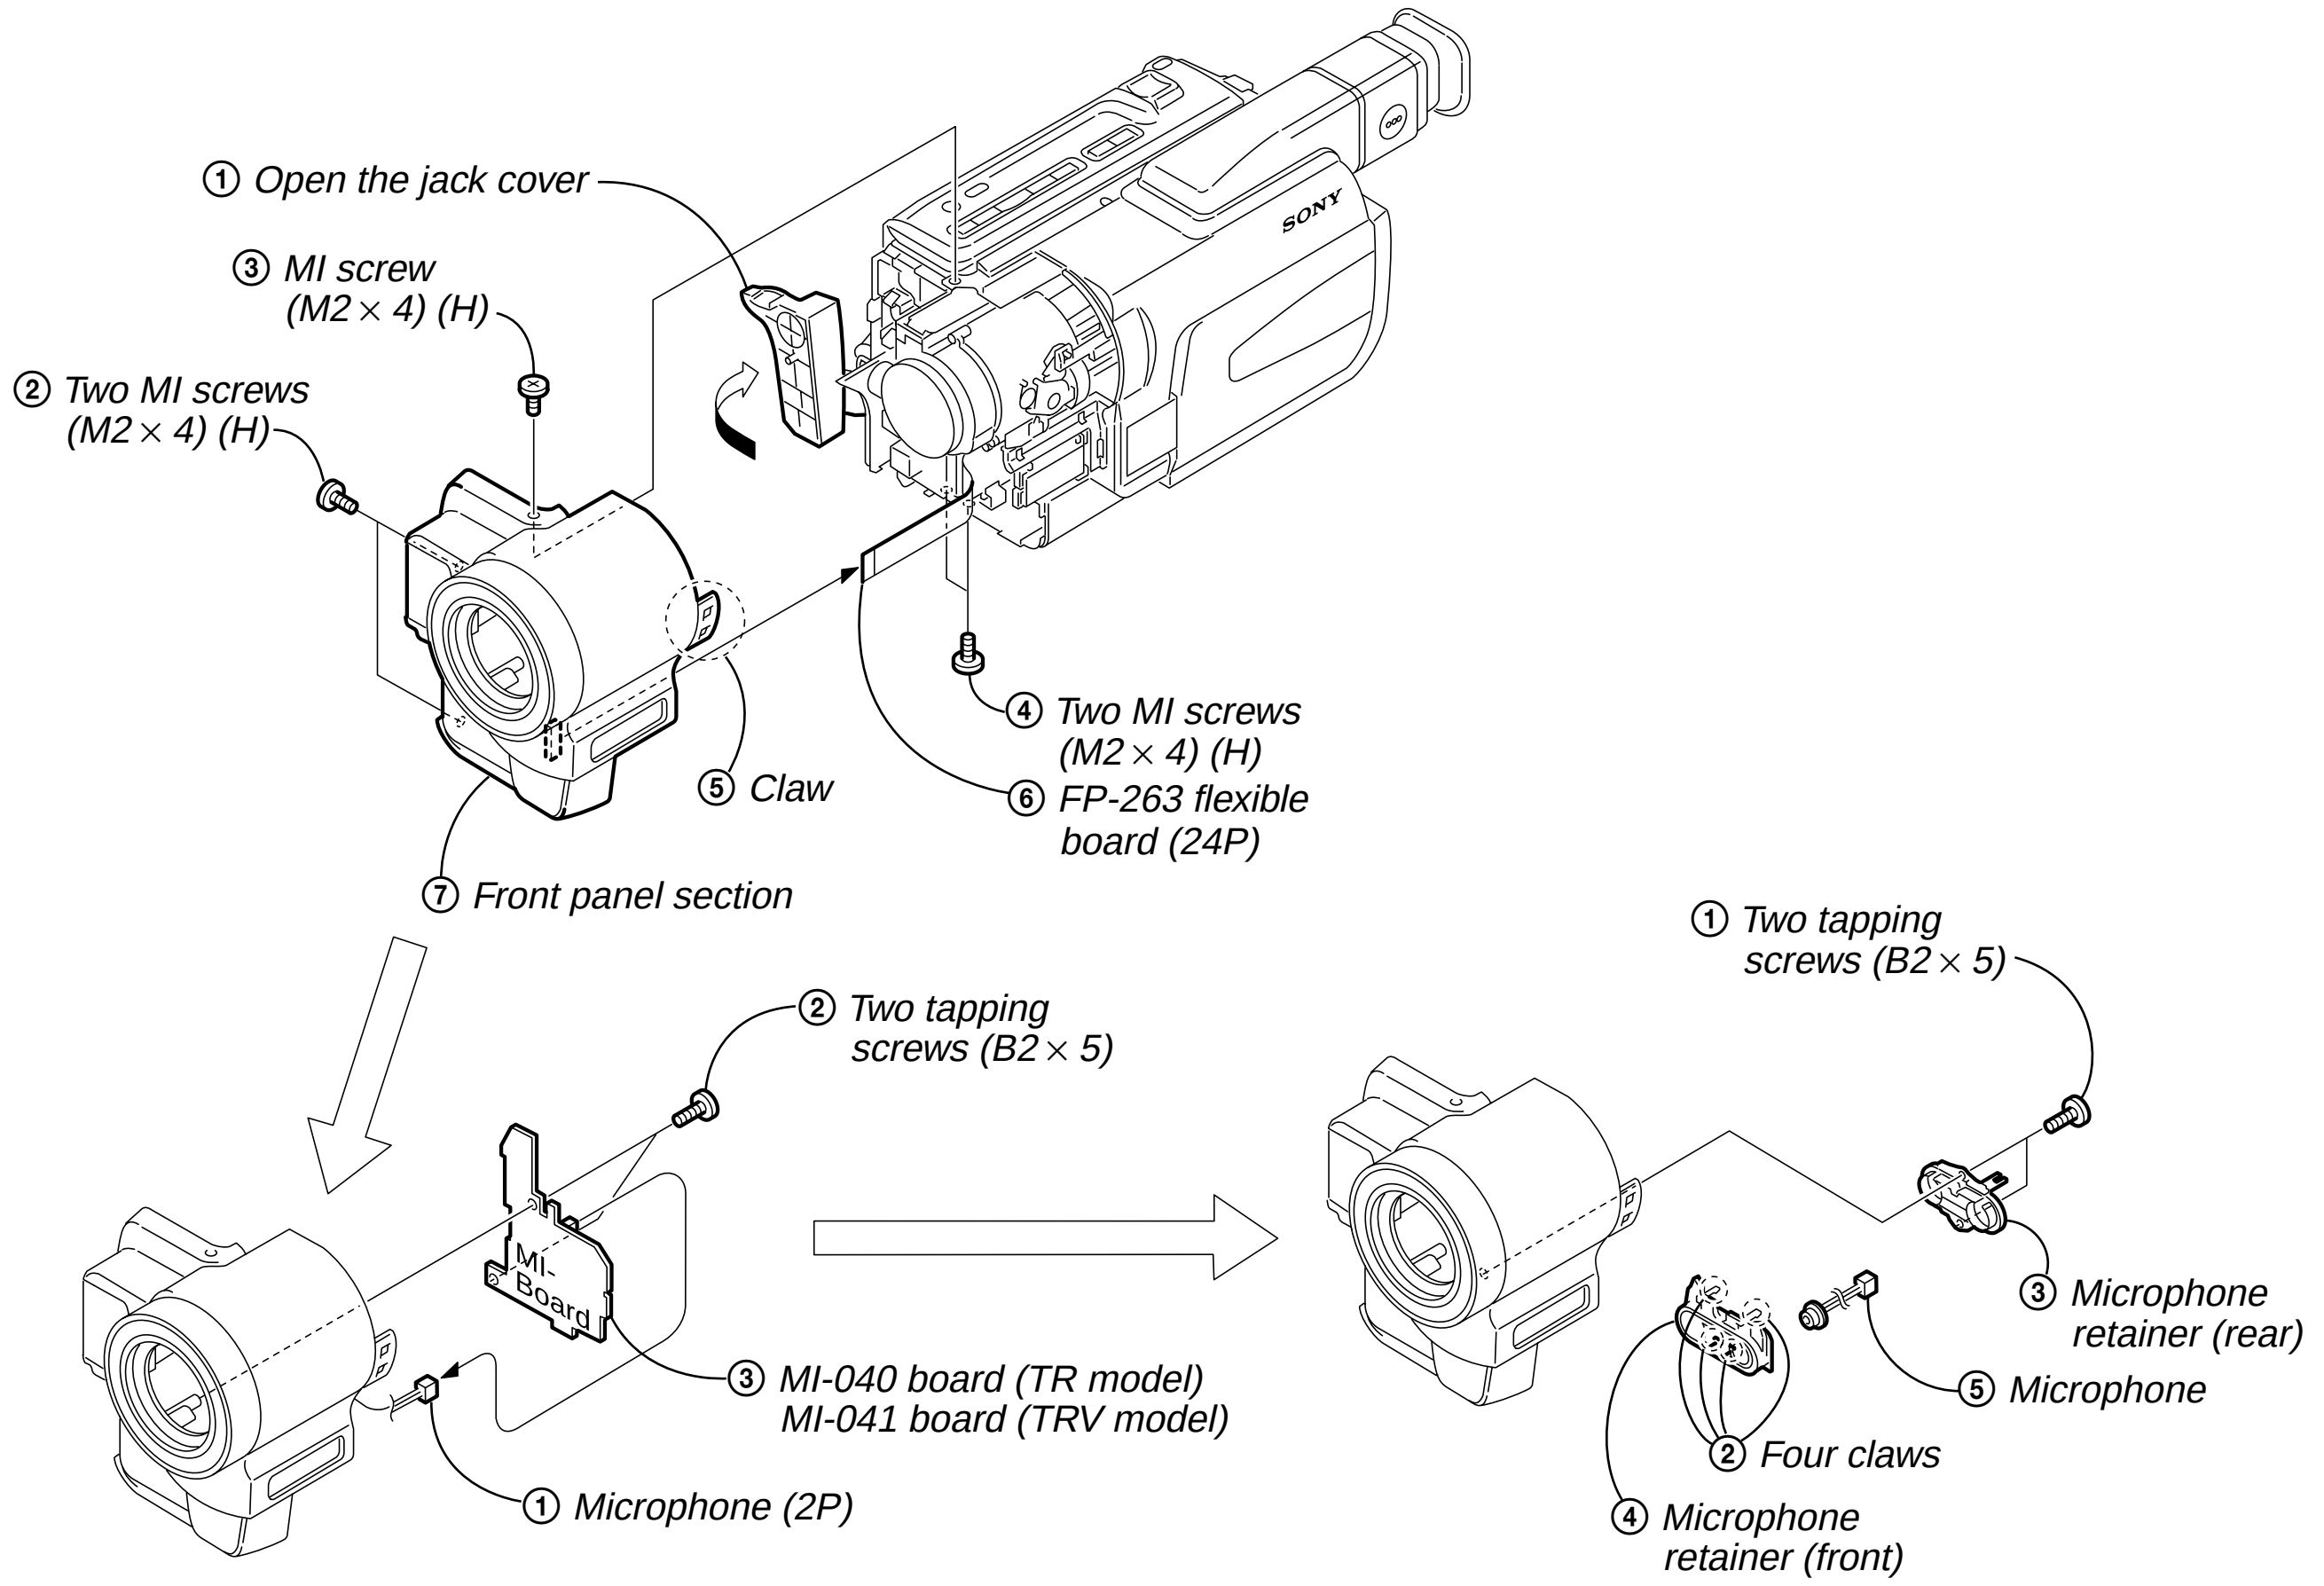
① Open the jack cover
③ MI screw (M2 × 4) (H)
② Two MI screws (M2 × 4) (H)
④ Two MI screws (M2 × 4) (H)
⑤ Claw
⑥ FP-263 flexible board (24P)
⑦ Front panel section
② Two tapping screws (B2 × 5)
MI-Board
③ MI-040 board (TR model) MI-041 board (TRV model)
① Microphone (2P)
① Two tapping screws (B2 × 5)
③ Microphone retainer (rear)
⑤ Microphone
② Four claws
④ Microphone retainer (front)

### [MI-040/041 BOARD SERVICE POSITION]

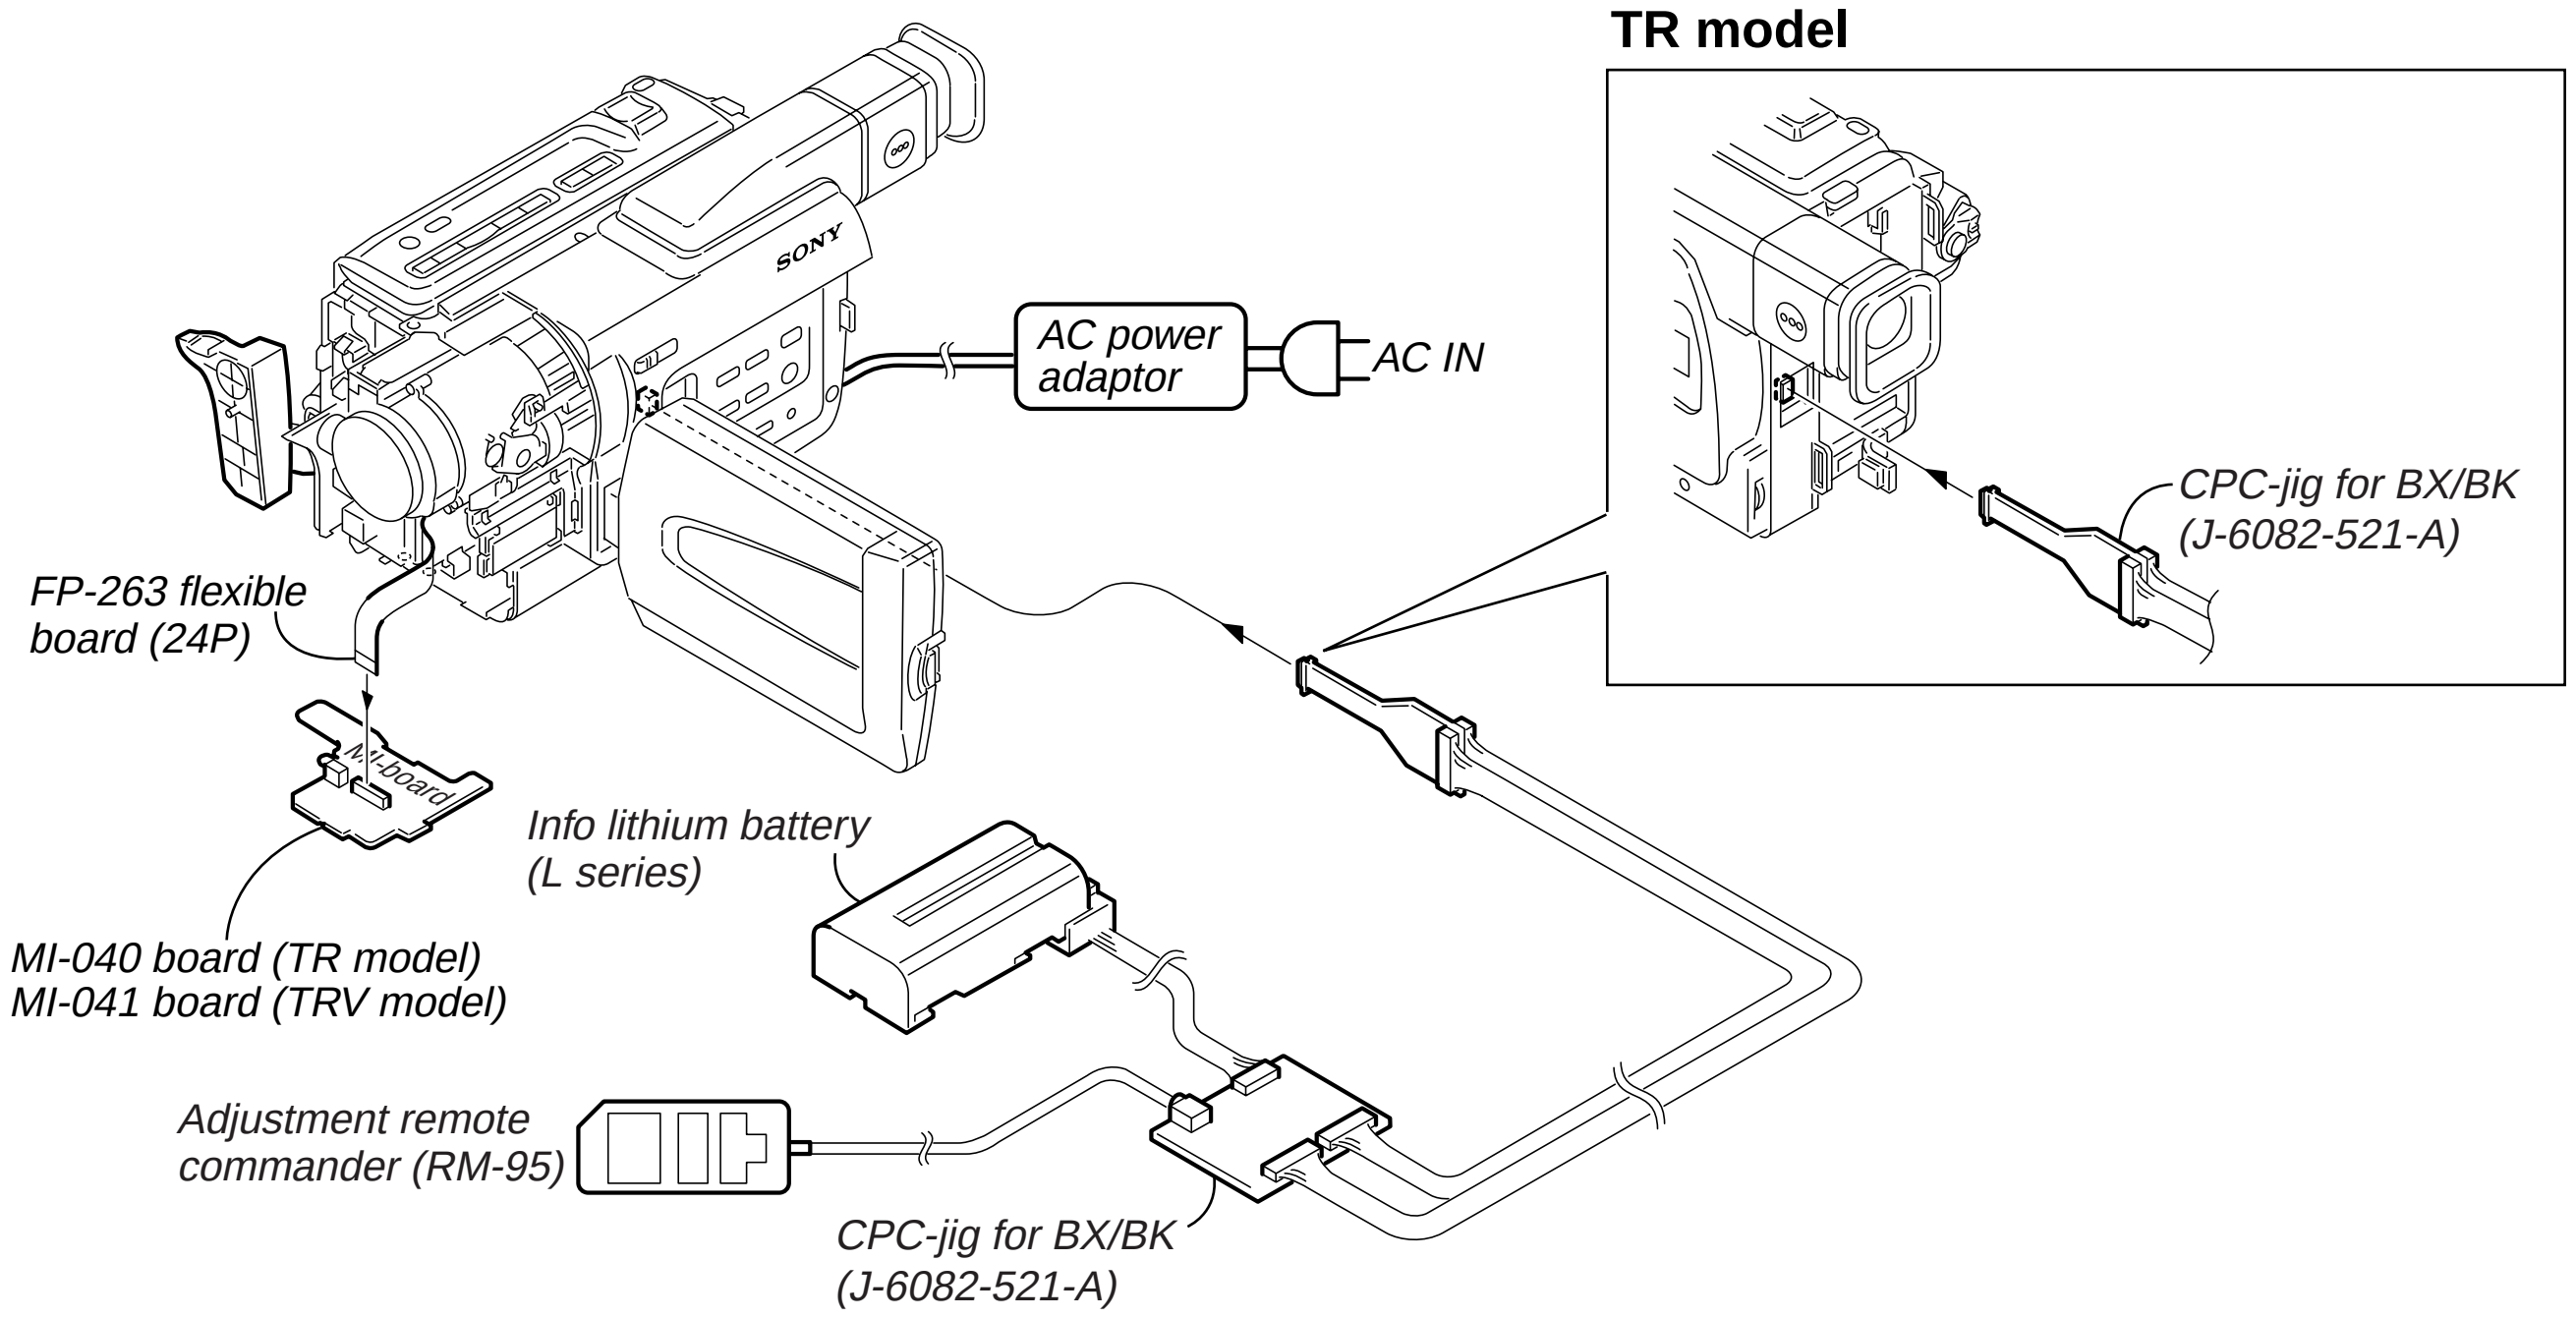
TR model
AC power adaptor
AC IN
CPC-jig for BX/BK (J-6082-521-A)
FP-263 flexible board (24P)
MI-board
Info lithium battery (L series)
MI-040 board (TR model)
MI-041 board (TRV model)
Adjustment remote commander (RM-95)
CPC-jig for BX/BK (J-6082-521-A)

## 2-4. CABINET (L) SECTION

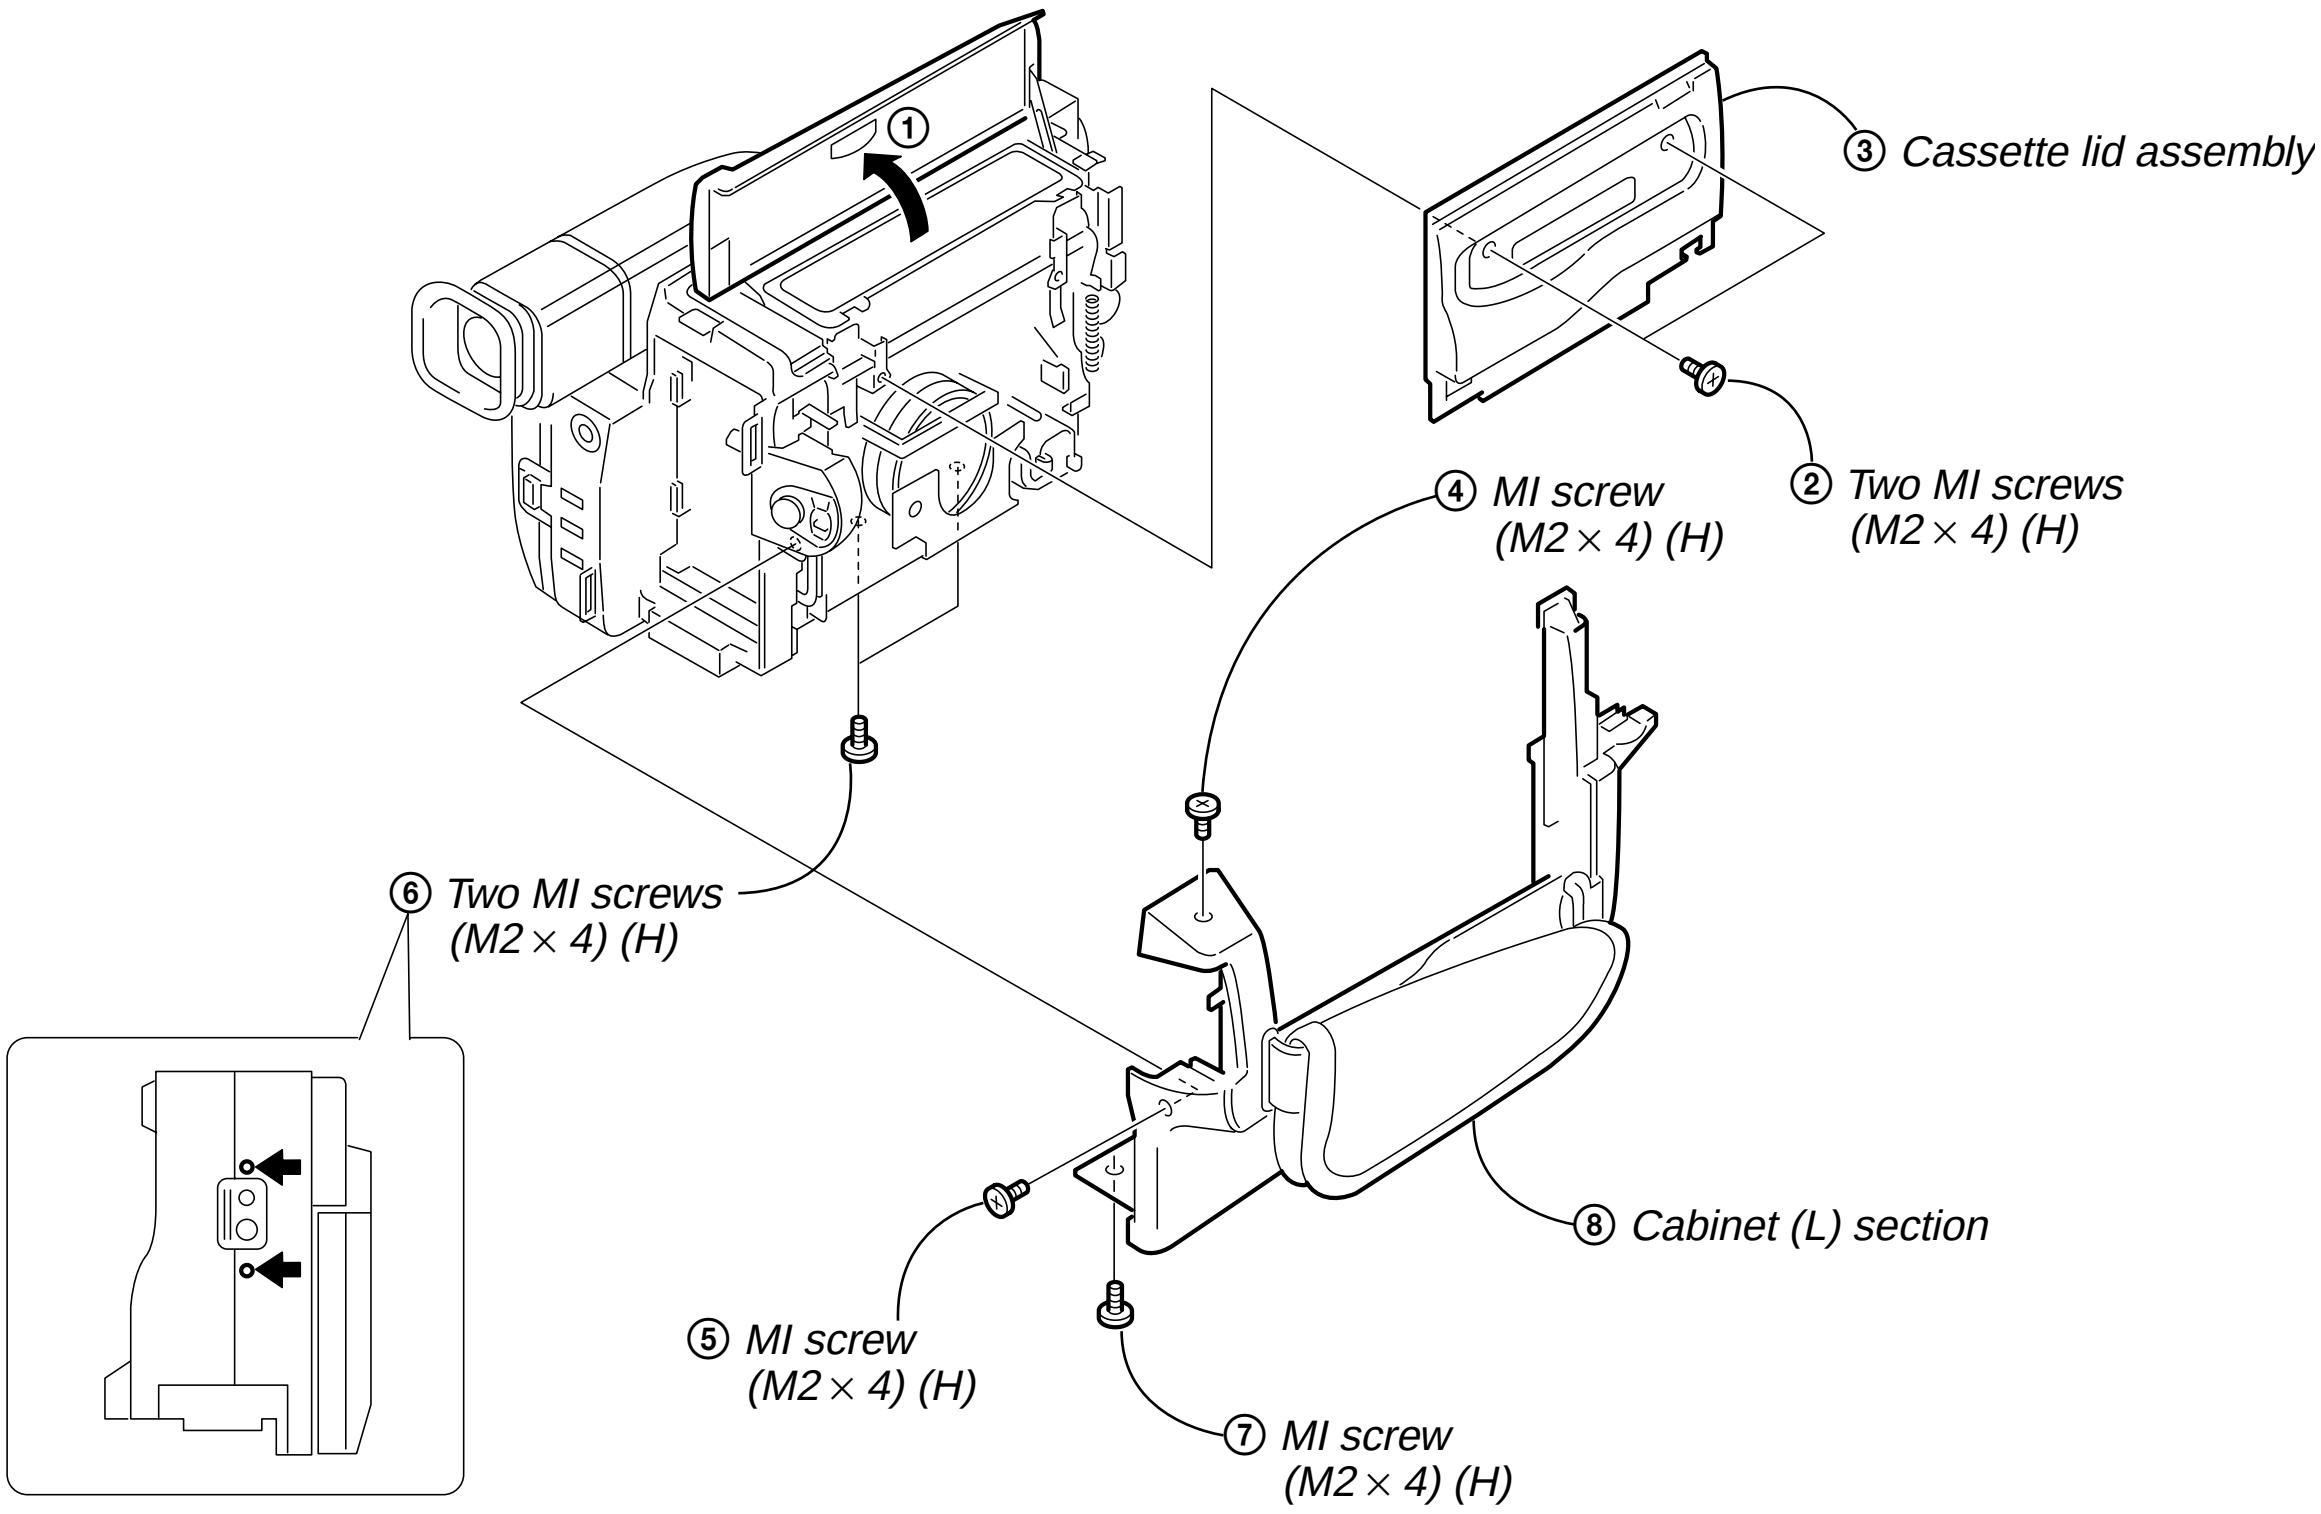
①
③ Cassette lid assembly
② Two MI screws
(M2 × 4) (H)
④ MI screw
(M2 × 4) (H)
⑥ Two MI screws
(M2 × 4) (H)
⑧ Cabinet (L) section
⑤ MI screw
(M2 × 4) (H)
⑦ MI screw
(M2 × 4) (H)

### *[MECHANISM DECK SERVICE POSITION]*

***Note:*** *Use the parts only which can be removed easily from outside of the mechanism deck.*

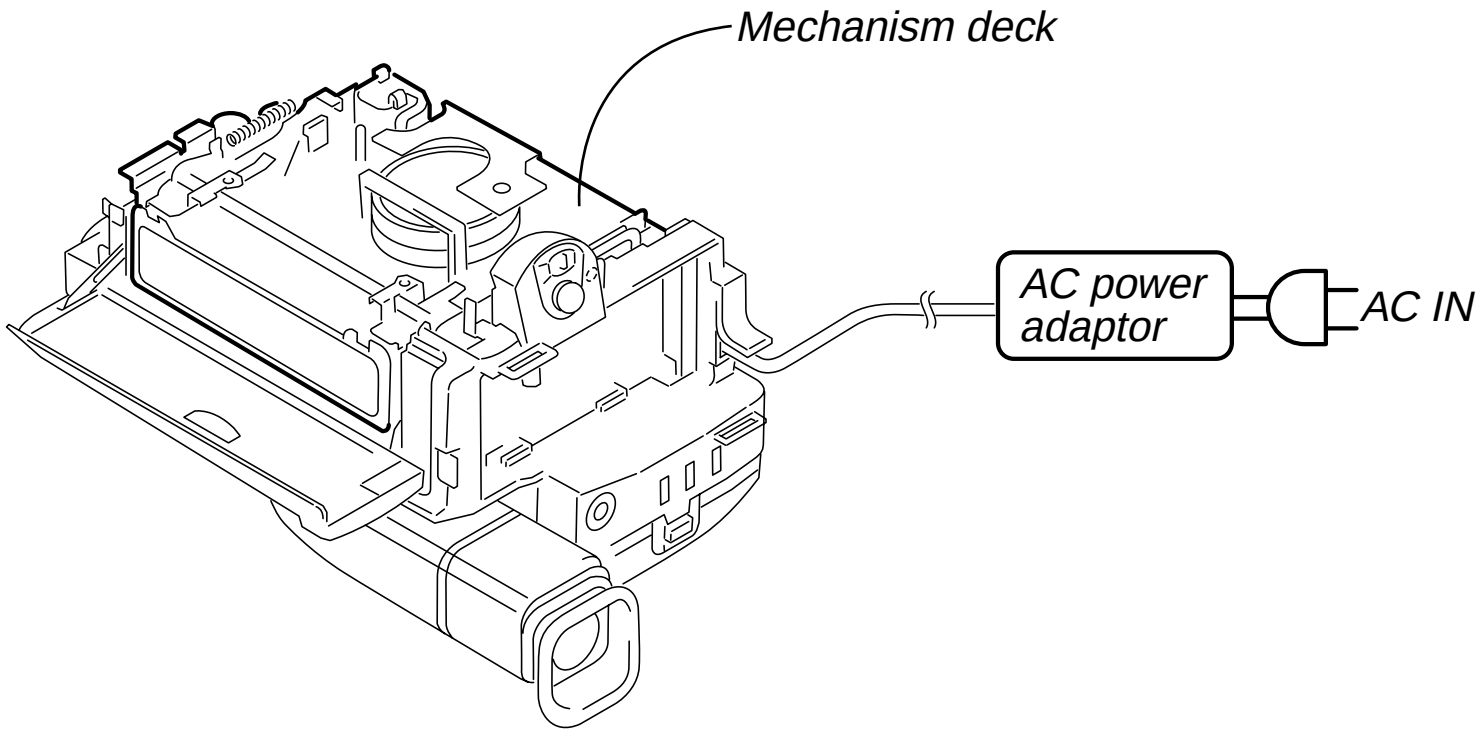
Mechanism deck
AC power
adaptor
AC IN

## 2-5. CABINET (R) SECTION (CF-077 BOARD) (TR MODEL)

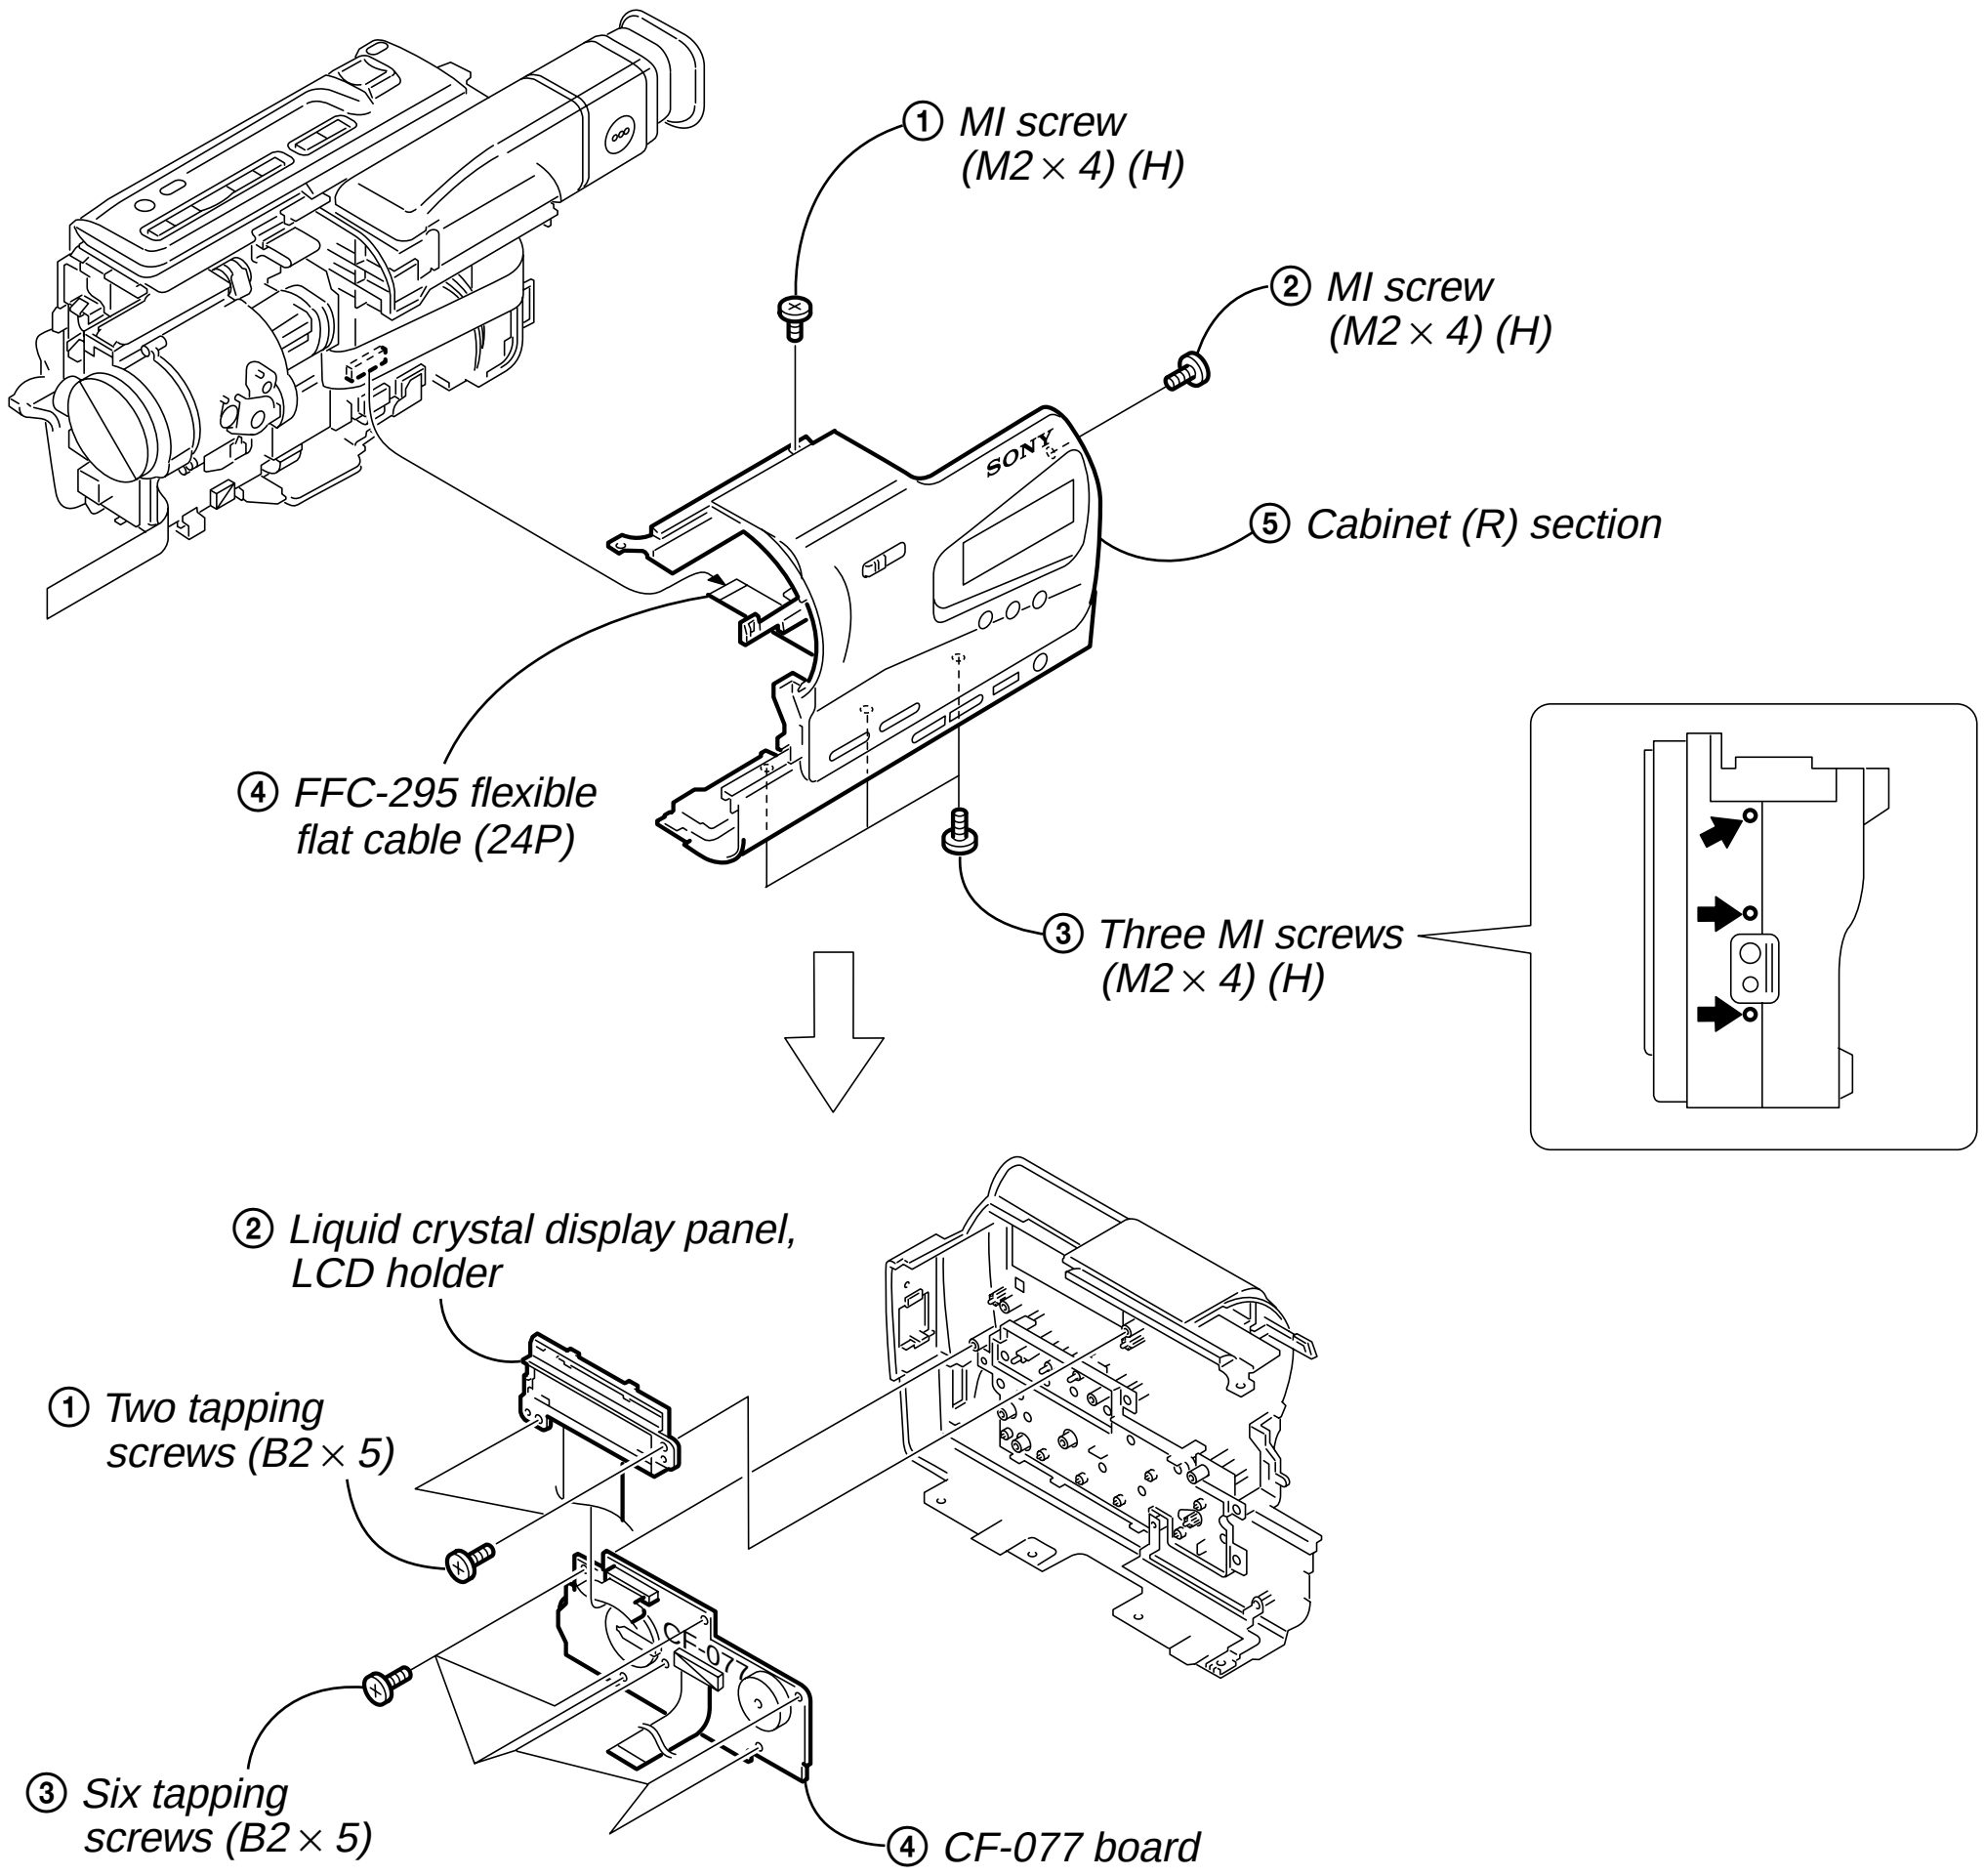
① MI screw (M2 × 4) (H)
② MI screw (M2 × 4) (H)
⑤ Cabinet (R) section
④ FFC-295 flexible flat cable (24P)
③ Three MI screws (M2 × 4) (H)
② Liquid crystal display panel, LCD holder
① Two tapping screws (B2 × 5)
③ Six tapping screws (B2 × 5)
④ CF-077 board

### *[CF-077, MI-040 BOARDS SERVICE POSITION]*

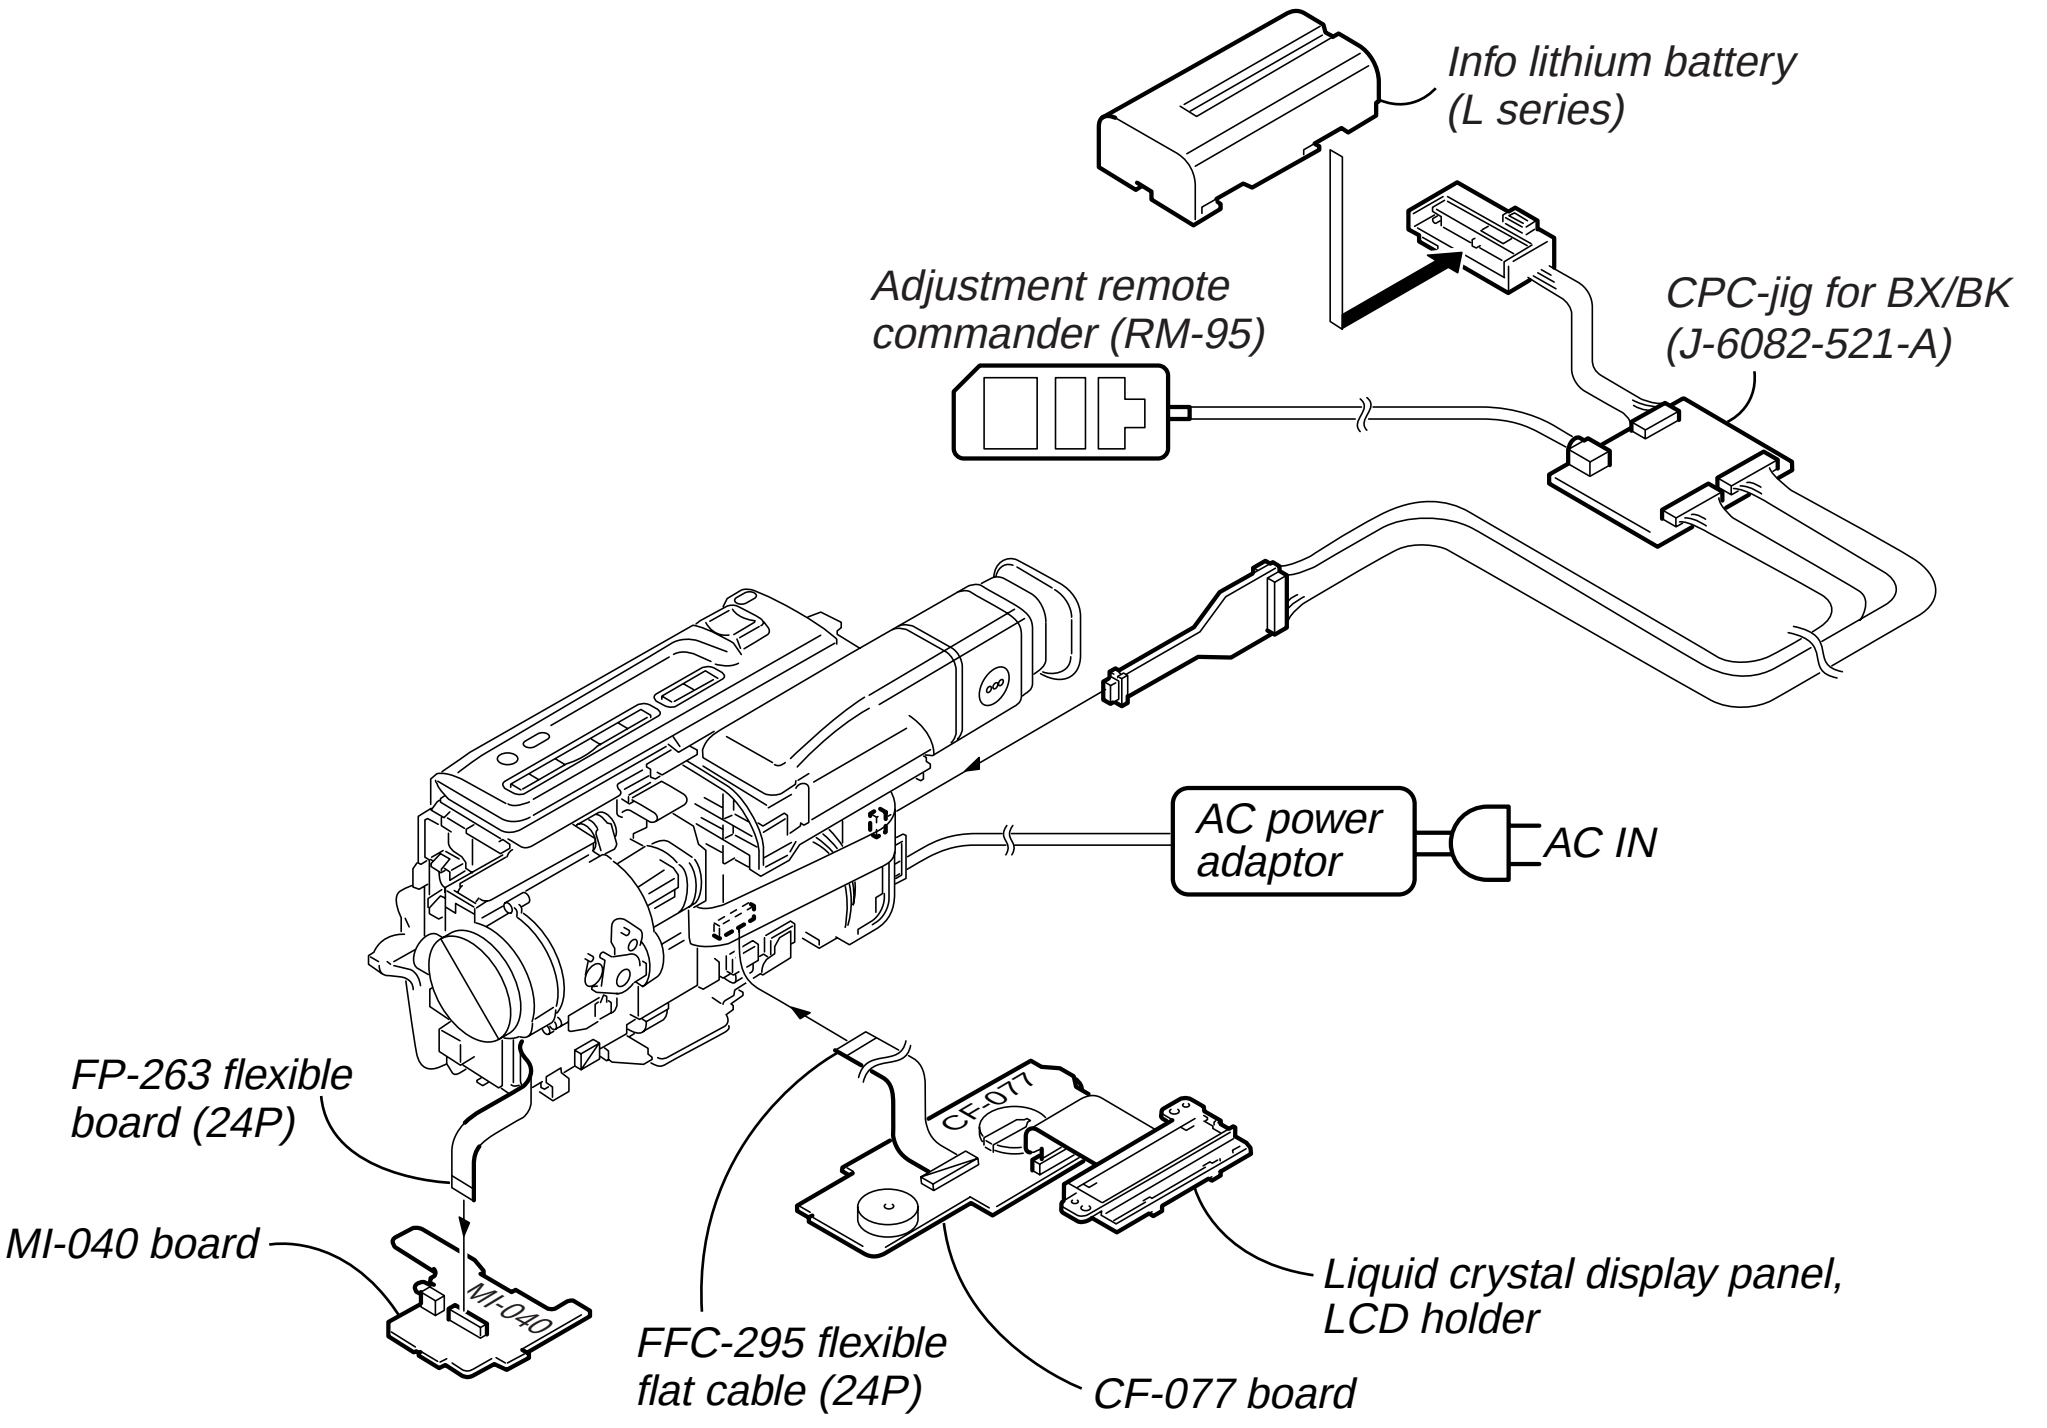
Info lithium battery (L series)
Adjustment remote commander (RM-95)
CPC-jig for BX/BK (J-6082-521-A)
AC power adaptor
AC IN
FP-263 flexible board (24P)
MI-040 board
MI-040
CF-077
FFC-295 flexible flat cable (24P)
CF-077 board
Liquid crystal display panel, LCD holder

## 2-6. CABINET (R) SECTION [ CONTROL SWITCH BLOCK (CF-1000) ] (TRV MODEL)

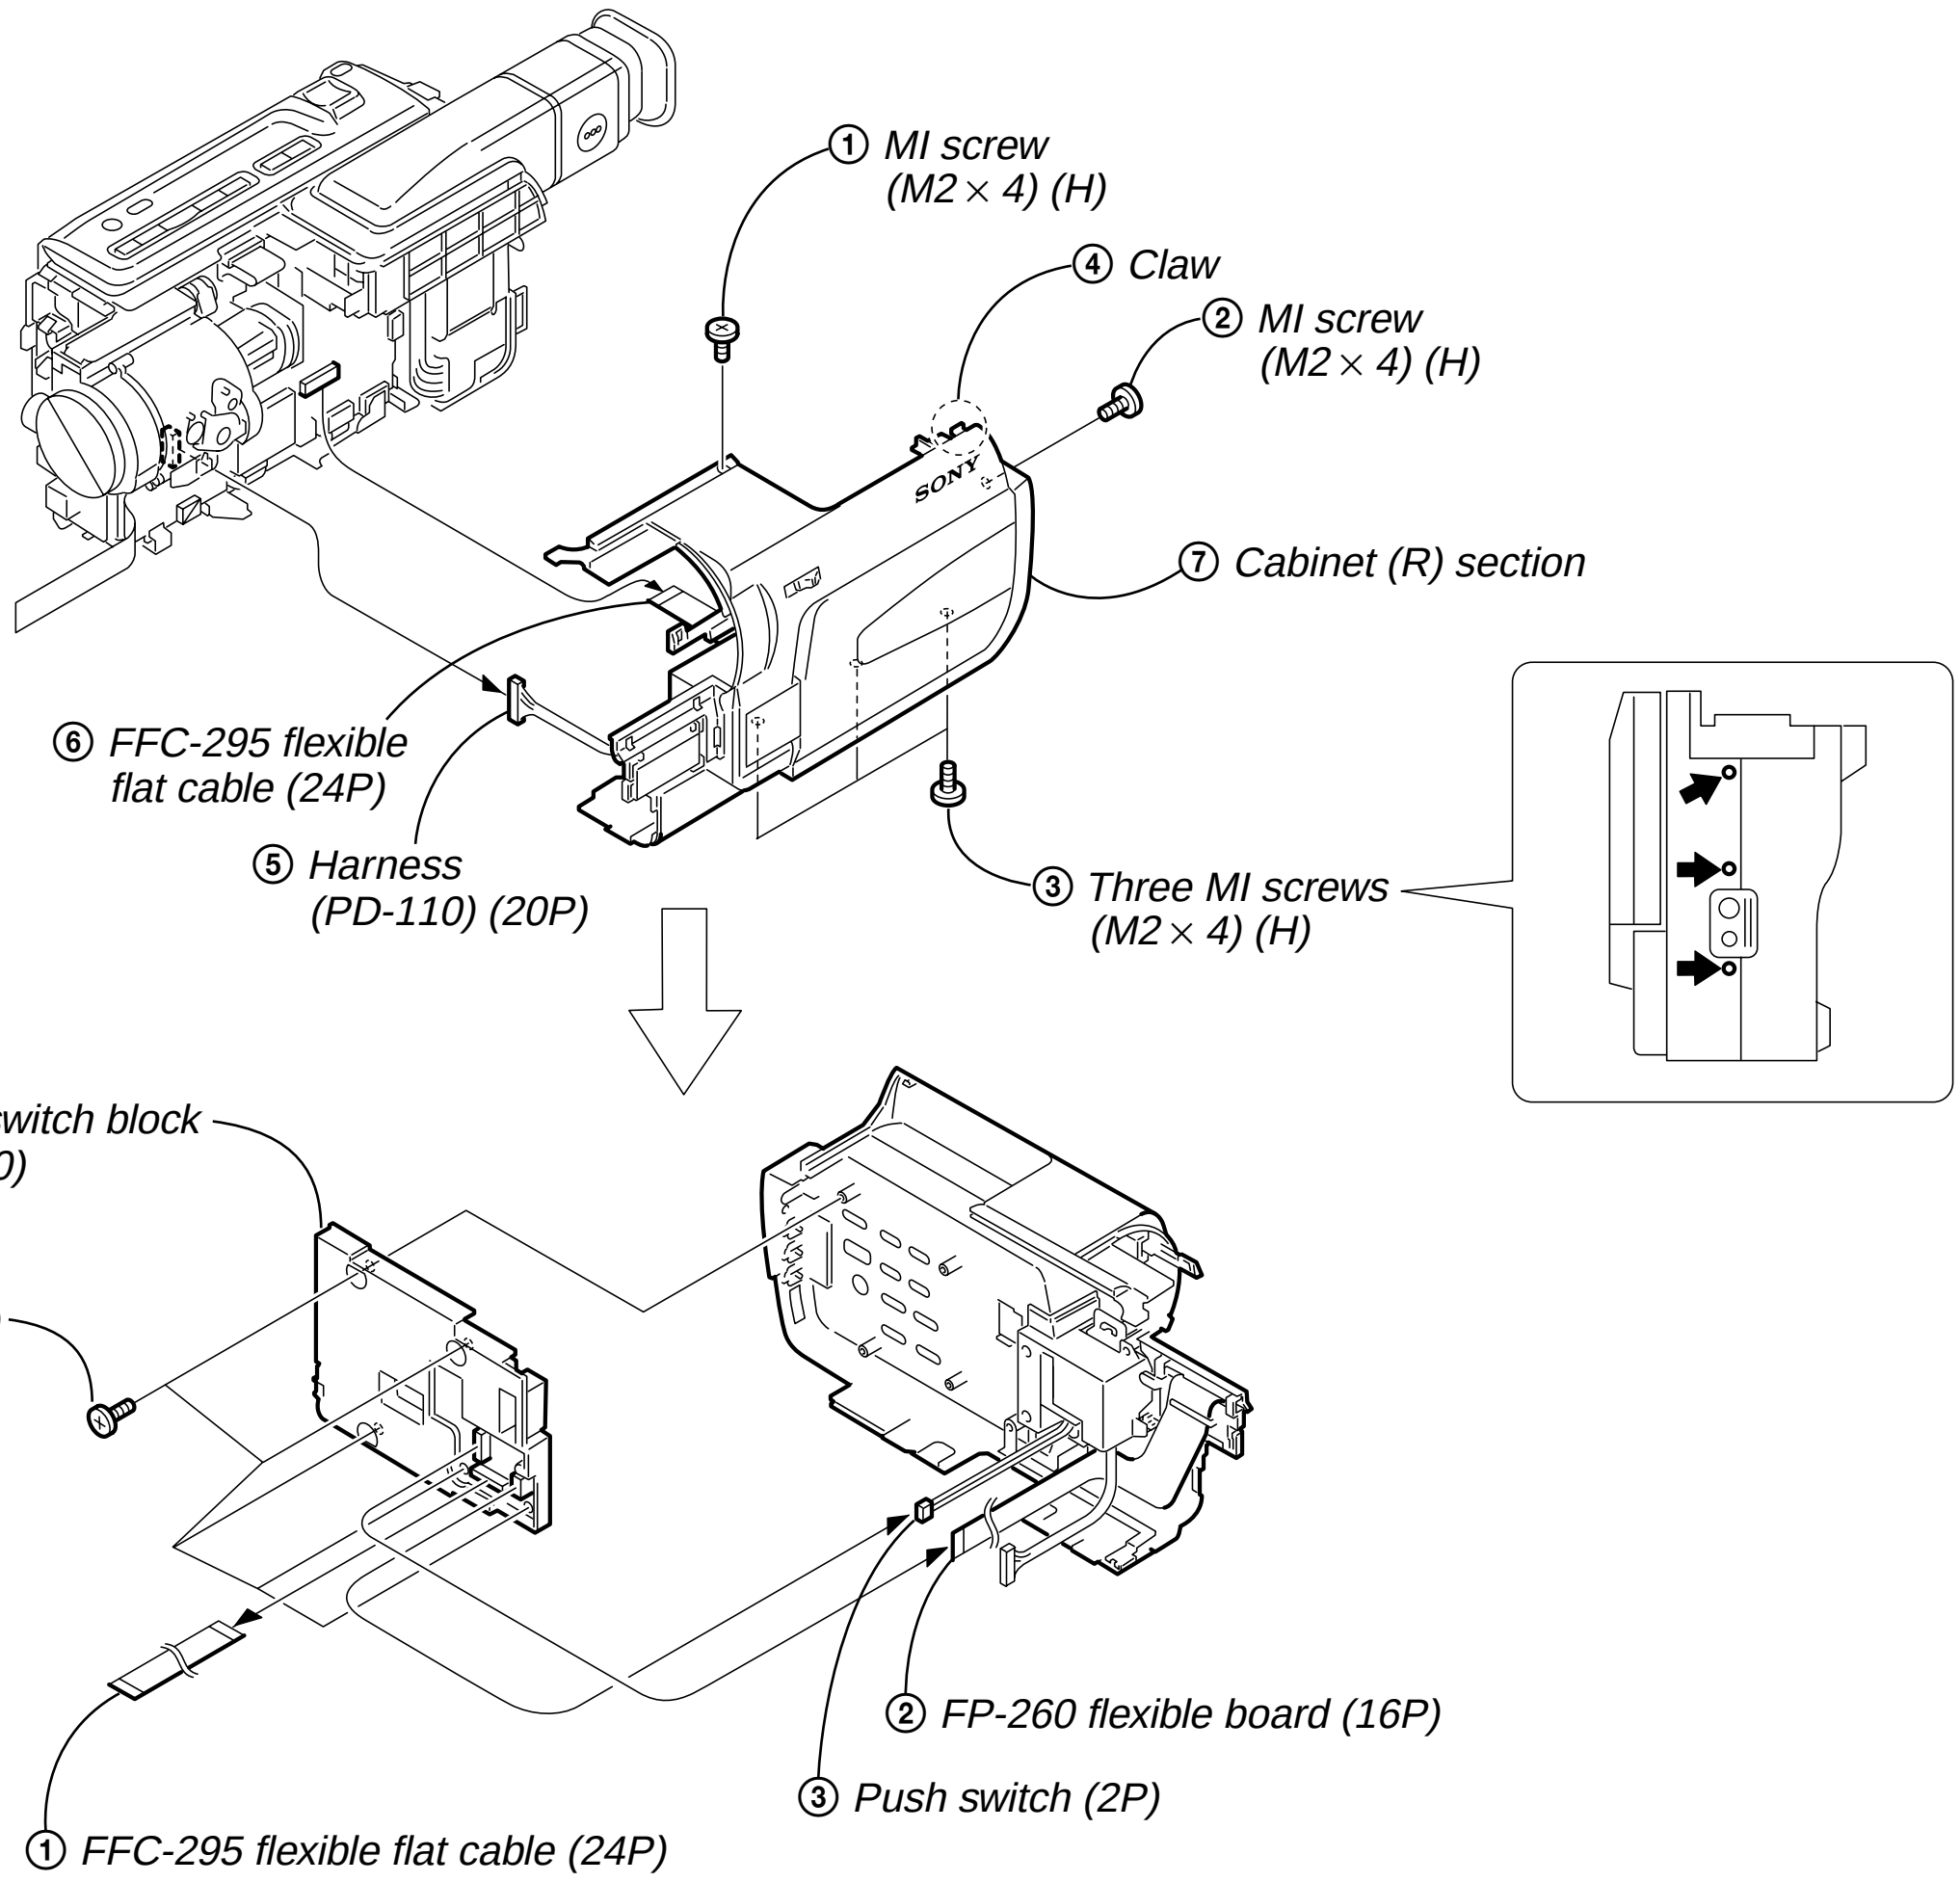
① MI screw (M2 × 4) (H)
④ Claw
② MI screw (M2 × 4) (H)
SONY
⑦ Cabinet (R) section
⑥ FFC-295 flexible flat cable (24P)
⑤ Harness (PD-110) (20P)
③ Three MI screws (M2 × 4) (H)
⑤ Control switch block (CF-1000)
④ Five tapping screws (B2 × 5)
② FP-260 flexible board (16P)
③ Push switch (2P)
① FFC-295 flexible flat cable (24P)

## 2-7. VF-129 BOARD (B/W EVF MODEL)

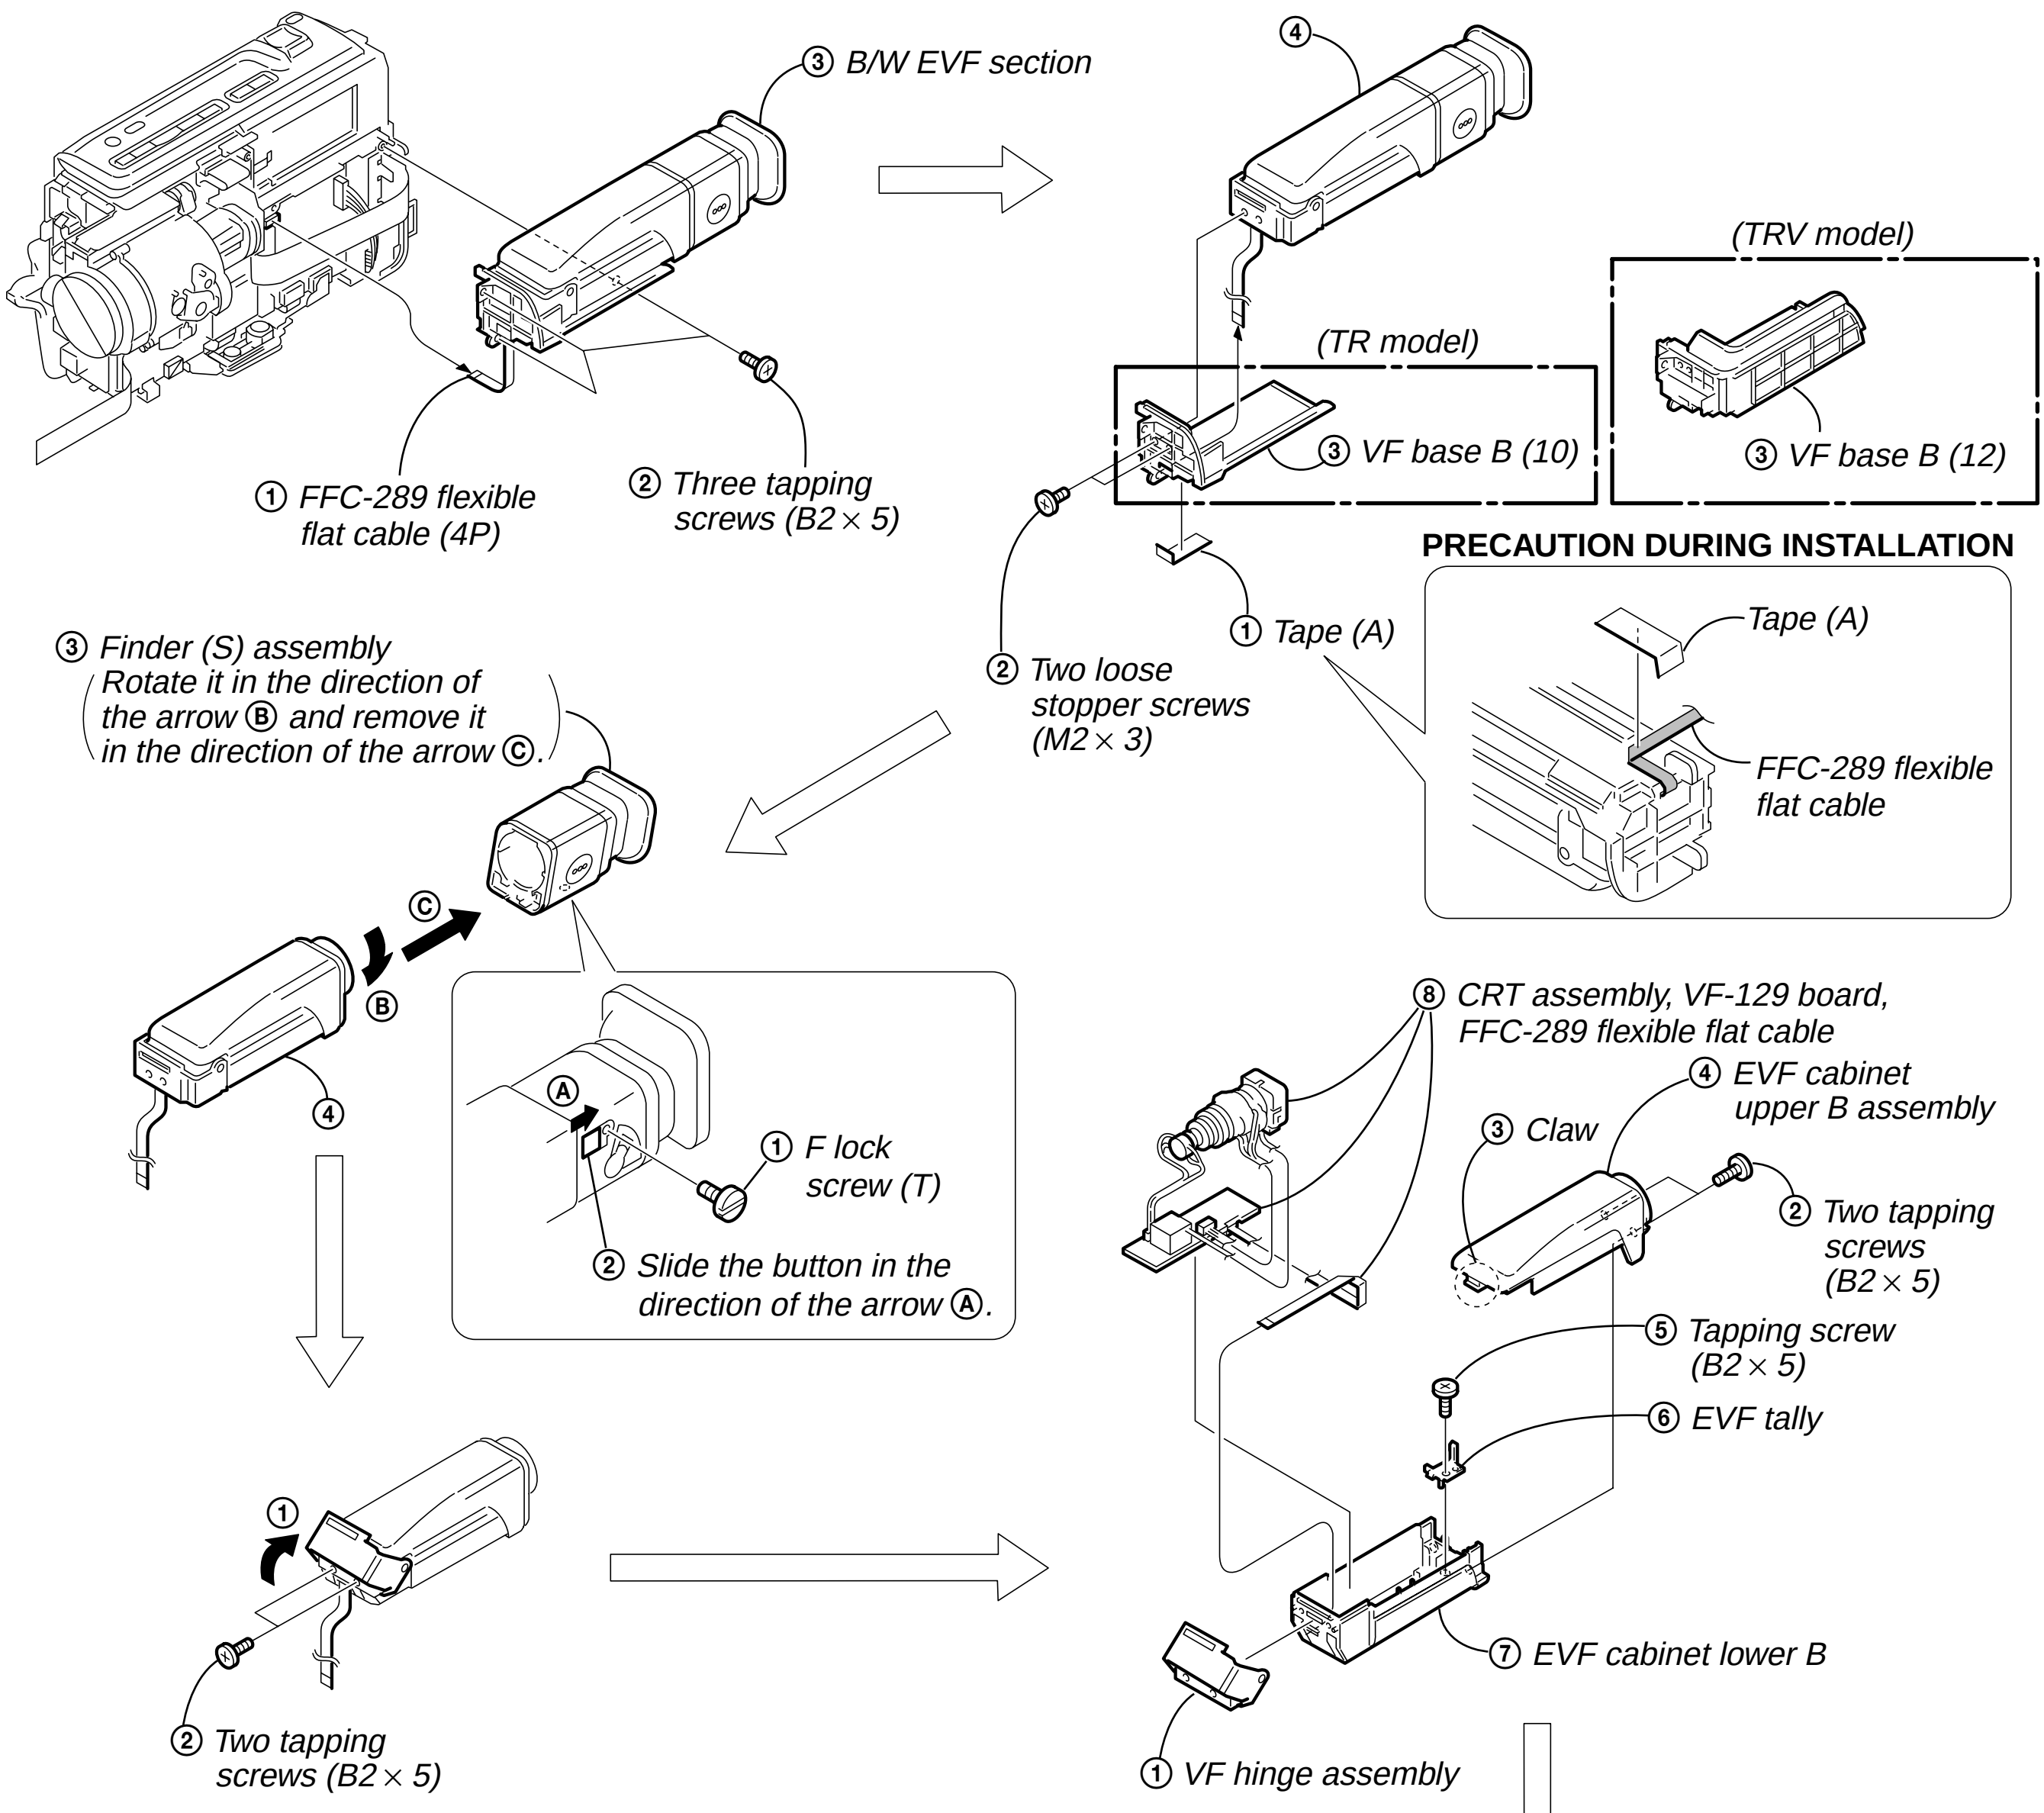
③ B/W EVF section
① FFC-289 flexible flat cable (4P)
② Three tapping screws (B2 × 5)
④
(TRV model)
(TR model)
③ VF base B (10)
③ VF base B (12)
② Two loose stopper screws (M2 × 3)
① Tape (A)
PRECAUTION DURING INSTALLATION
Tape (A)
FFC-289 flexible flat cable
③ Finder (S) assembly
Rotate it in the direction of the arrow Ⓑ and remove it in the direction of the arrow Ⓒ.
Ⓒ
Ⓑ
④
Ⓐ
① F lock screw (T)
② Slide the button in the direction of the arrow Ⓐ.
①
② Two tapping screws (B2 × 5)
⑧ CRT assembly, VF-129 board, FFC-289 flexible flat cable
④ EVF cabinet upper B assembly
③ Claw
② Two tapping screws (B2 × 5)
⑤ Tapping screw (B2 × 5)
⑥ EVF tally
⑦ EVF cabinet lower B
① VF hinge assembly

## REMOVING THE CRT ASSEMBLY AND VF-129 BOARD

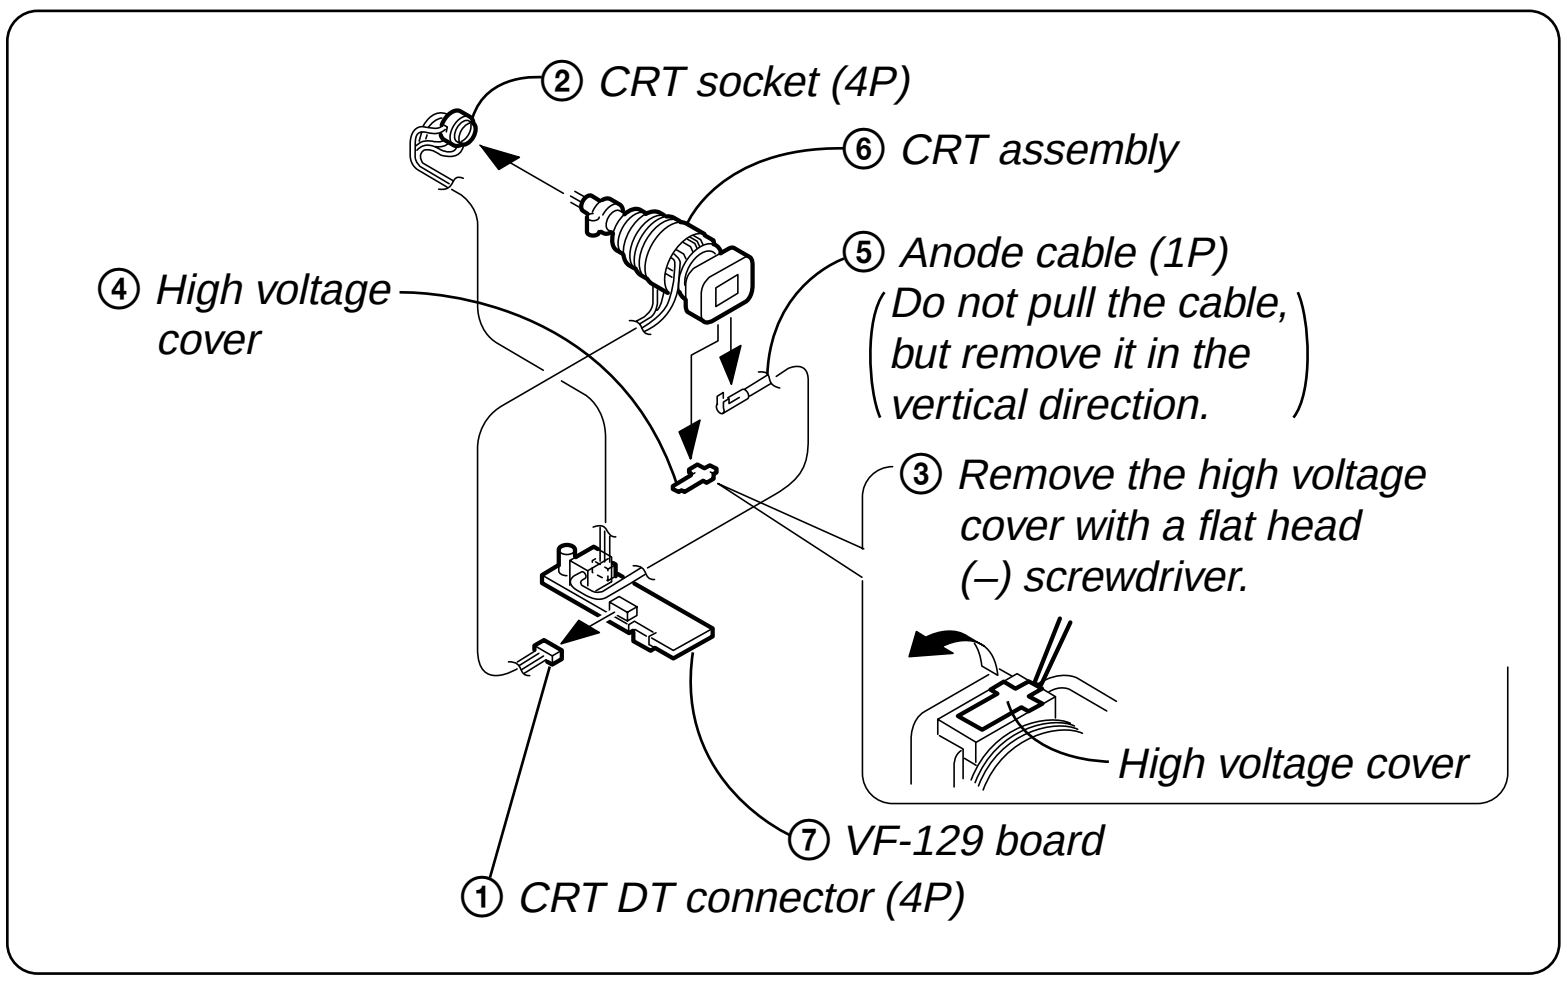
② CRT socket (4P)
⑥ CRT assembly
④ High voltage cover
⑤ Anode cable (1P)
Do not pull the cable, but remove it in the vertical direction.
③ Remove the high voltage cover with a flat head (–) screwdriver.
High voltage cover
⑦ VF-129 board
① CRT DT connector (4P)

### [VF-129, CD-286/281, CF-077, MI-040/041 BOARDS SERVICE POSITION]

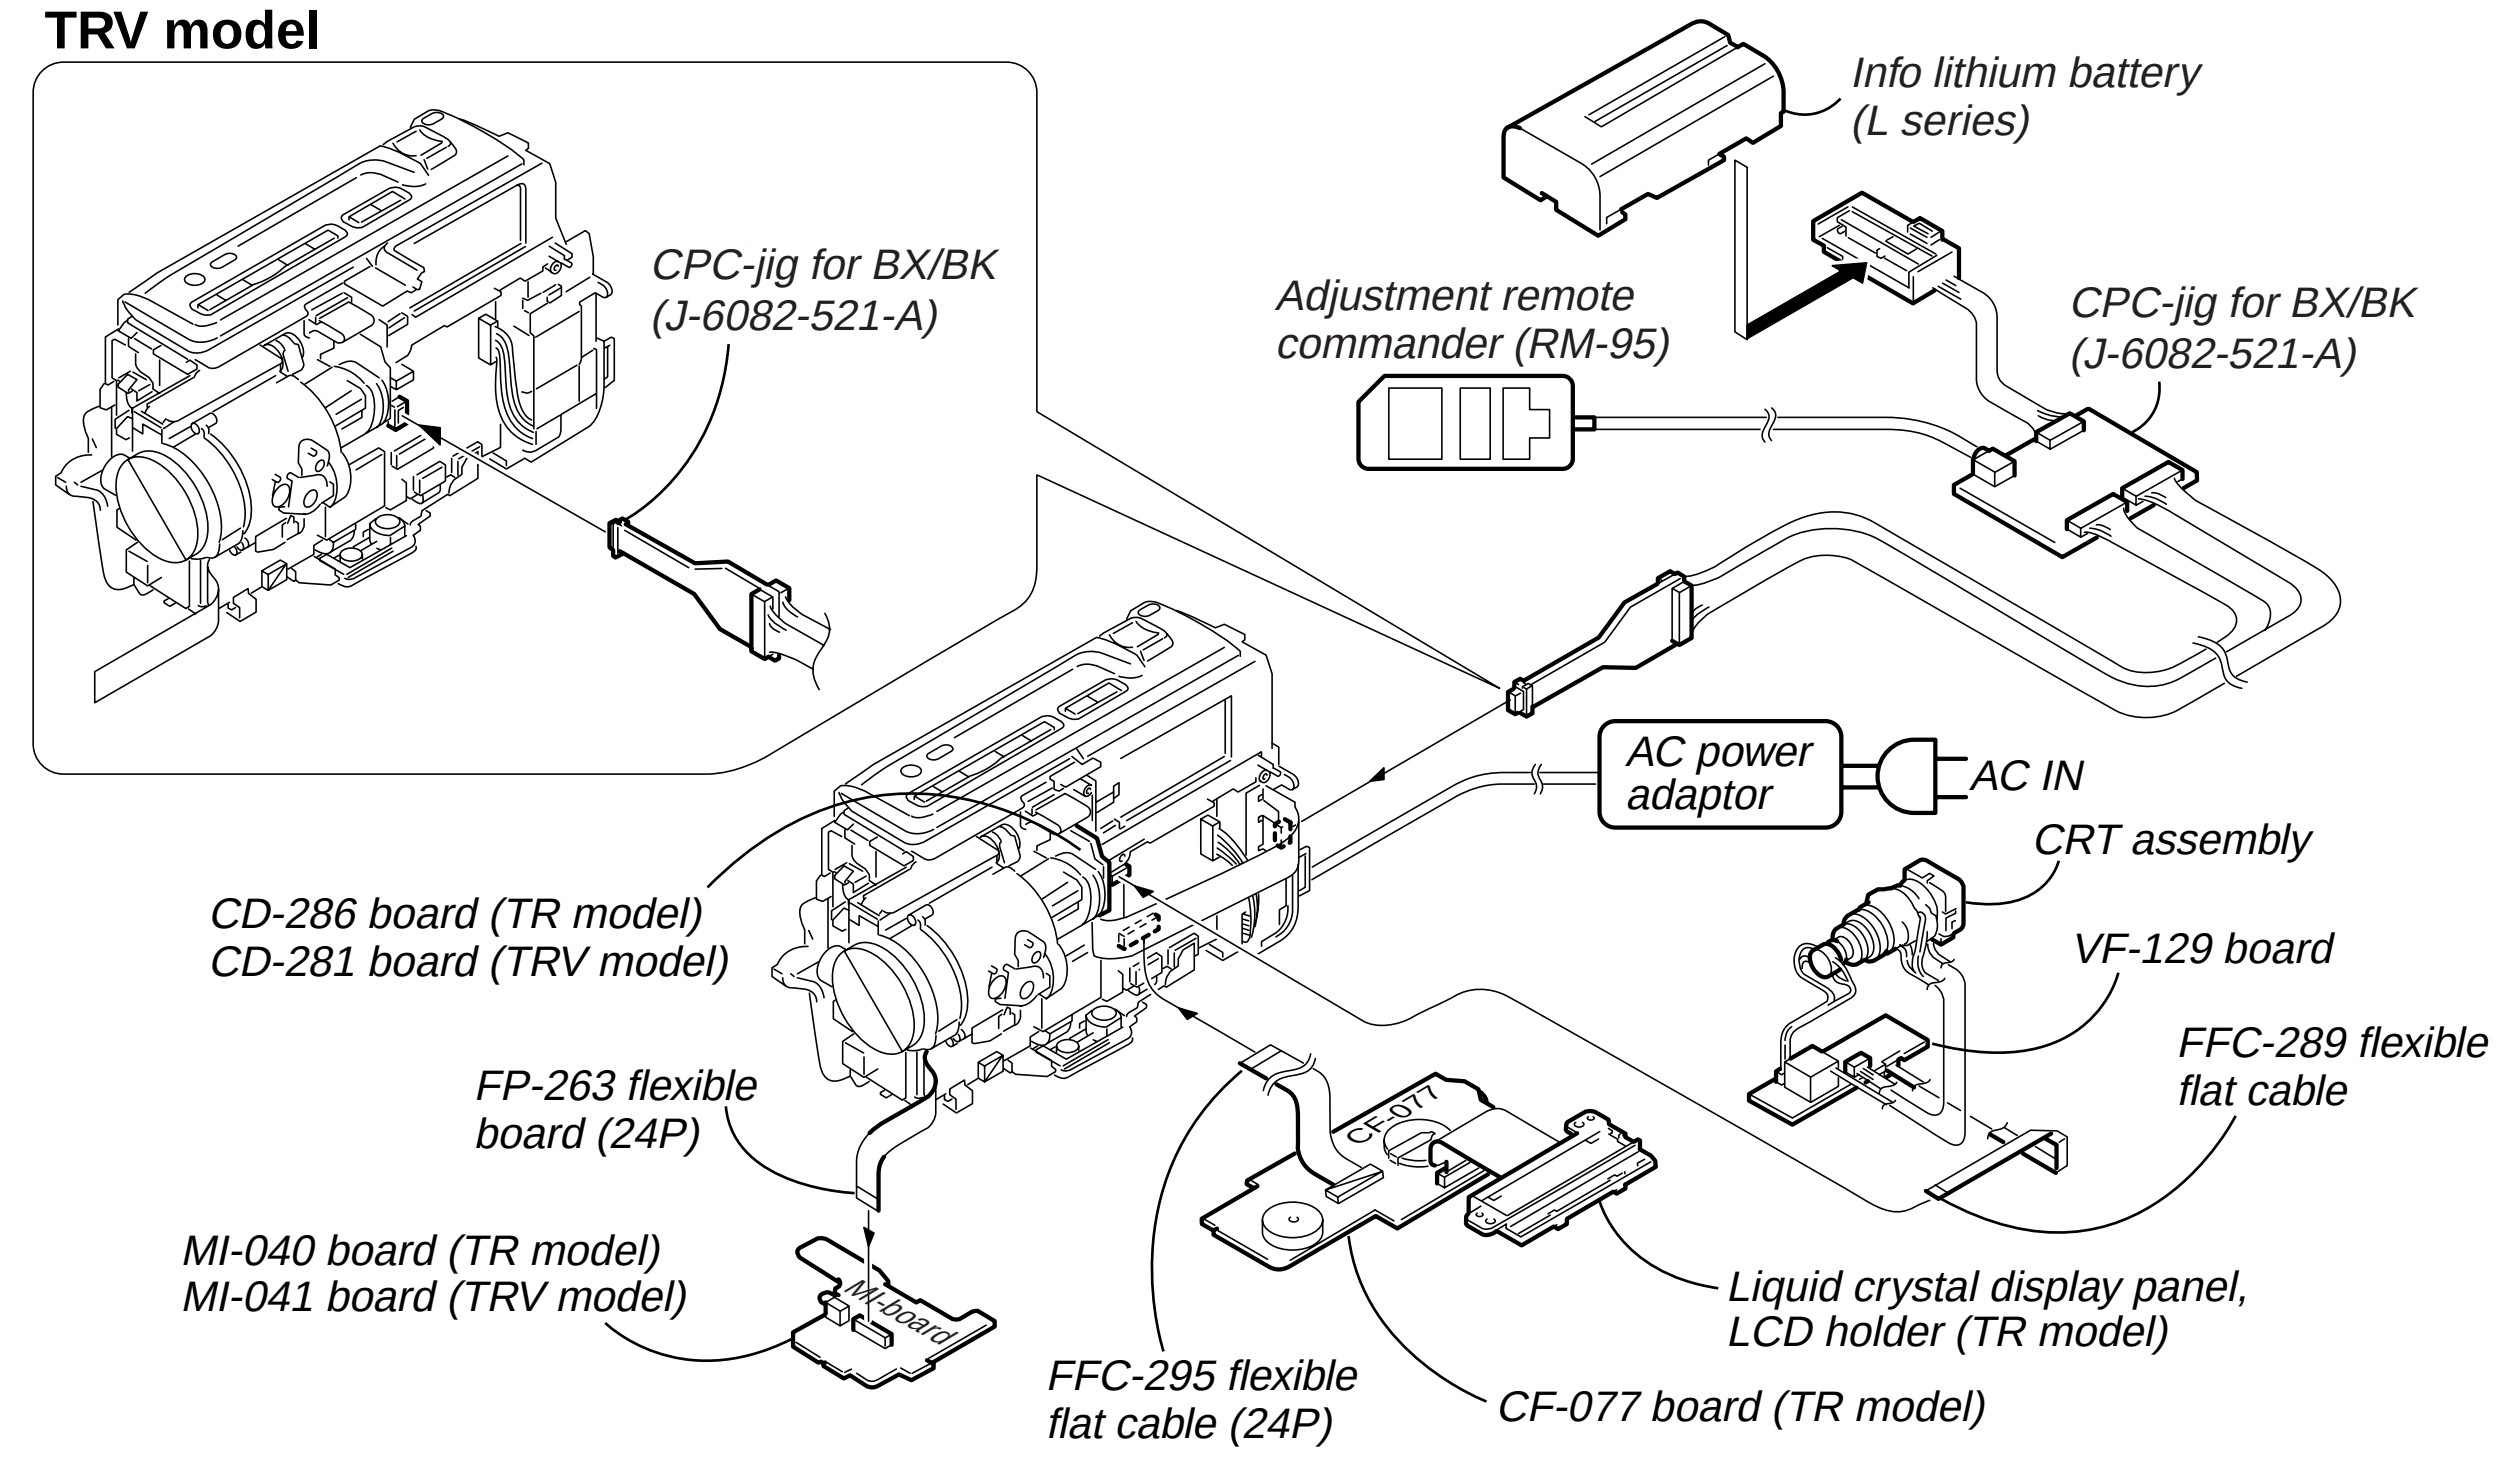
TRV model
CPC-jig for BX/BK
(J-6082-521-A)
Info lithium battery
(L series)
Adjustment remote
commander (RM-95)
CPC-jig for BX/BK
(J-6082-521-A)
AC power
adaptor
AC IN
CRT assembly
VF-129 board
FFC-289 flexible
flat cable
CD-286 board (TR model)
CD-281 board (TRV model)
FP-263 flexible
board (24P)
MI-040 board (TR model)
MI-041 board (TRV model)
MI-board
CF-077
FFC-295 flexible
flat cable (24P)
CF-077 board (TR model)
Liquid crystal display panel,
LCD holder (TR model)

## 2-8. VF-141, LB-062 BOARDS (COLOR EVF MODEL/TR818)

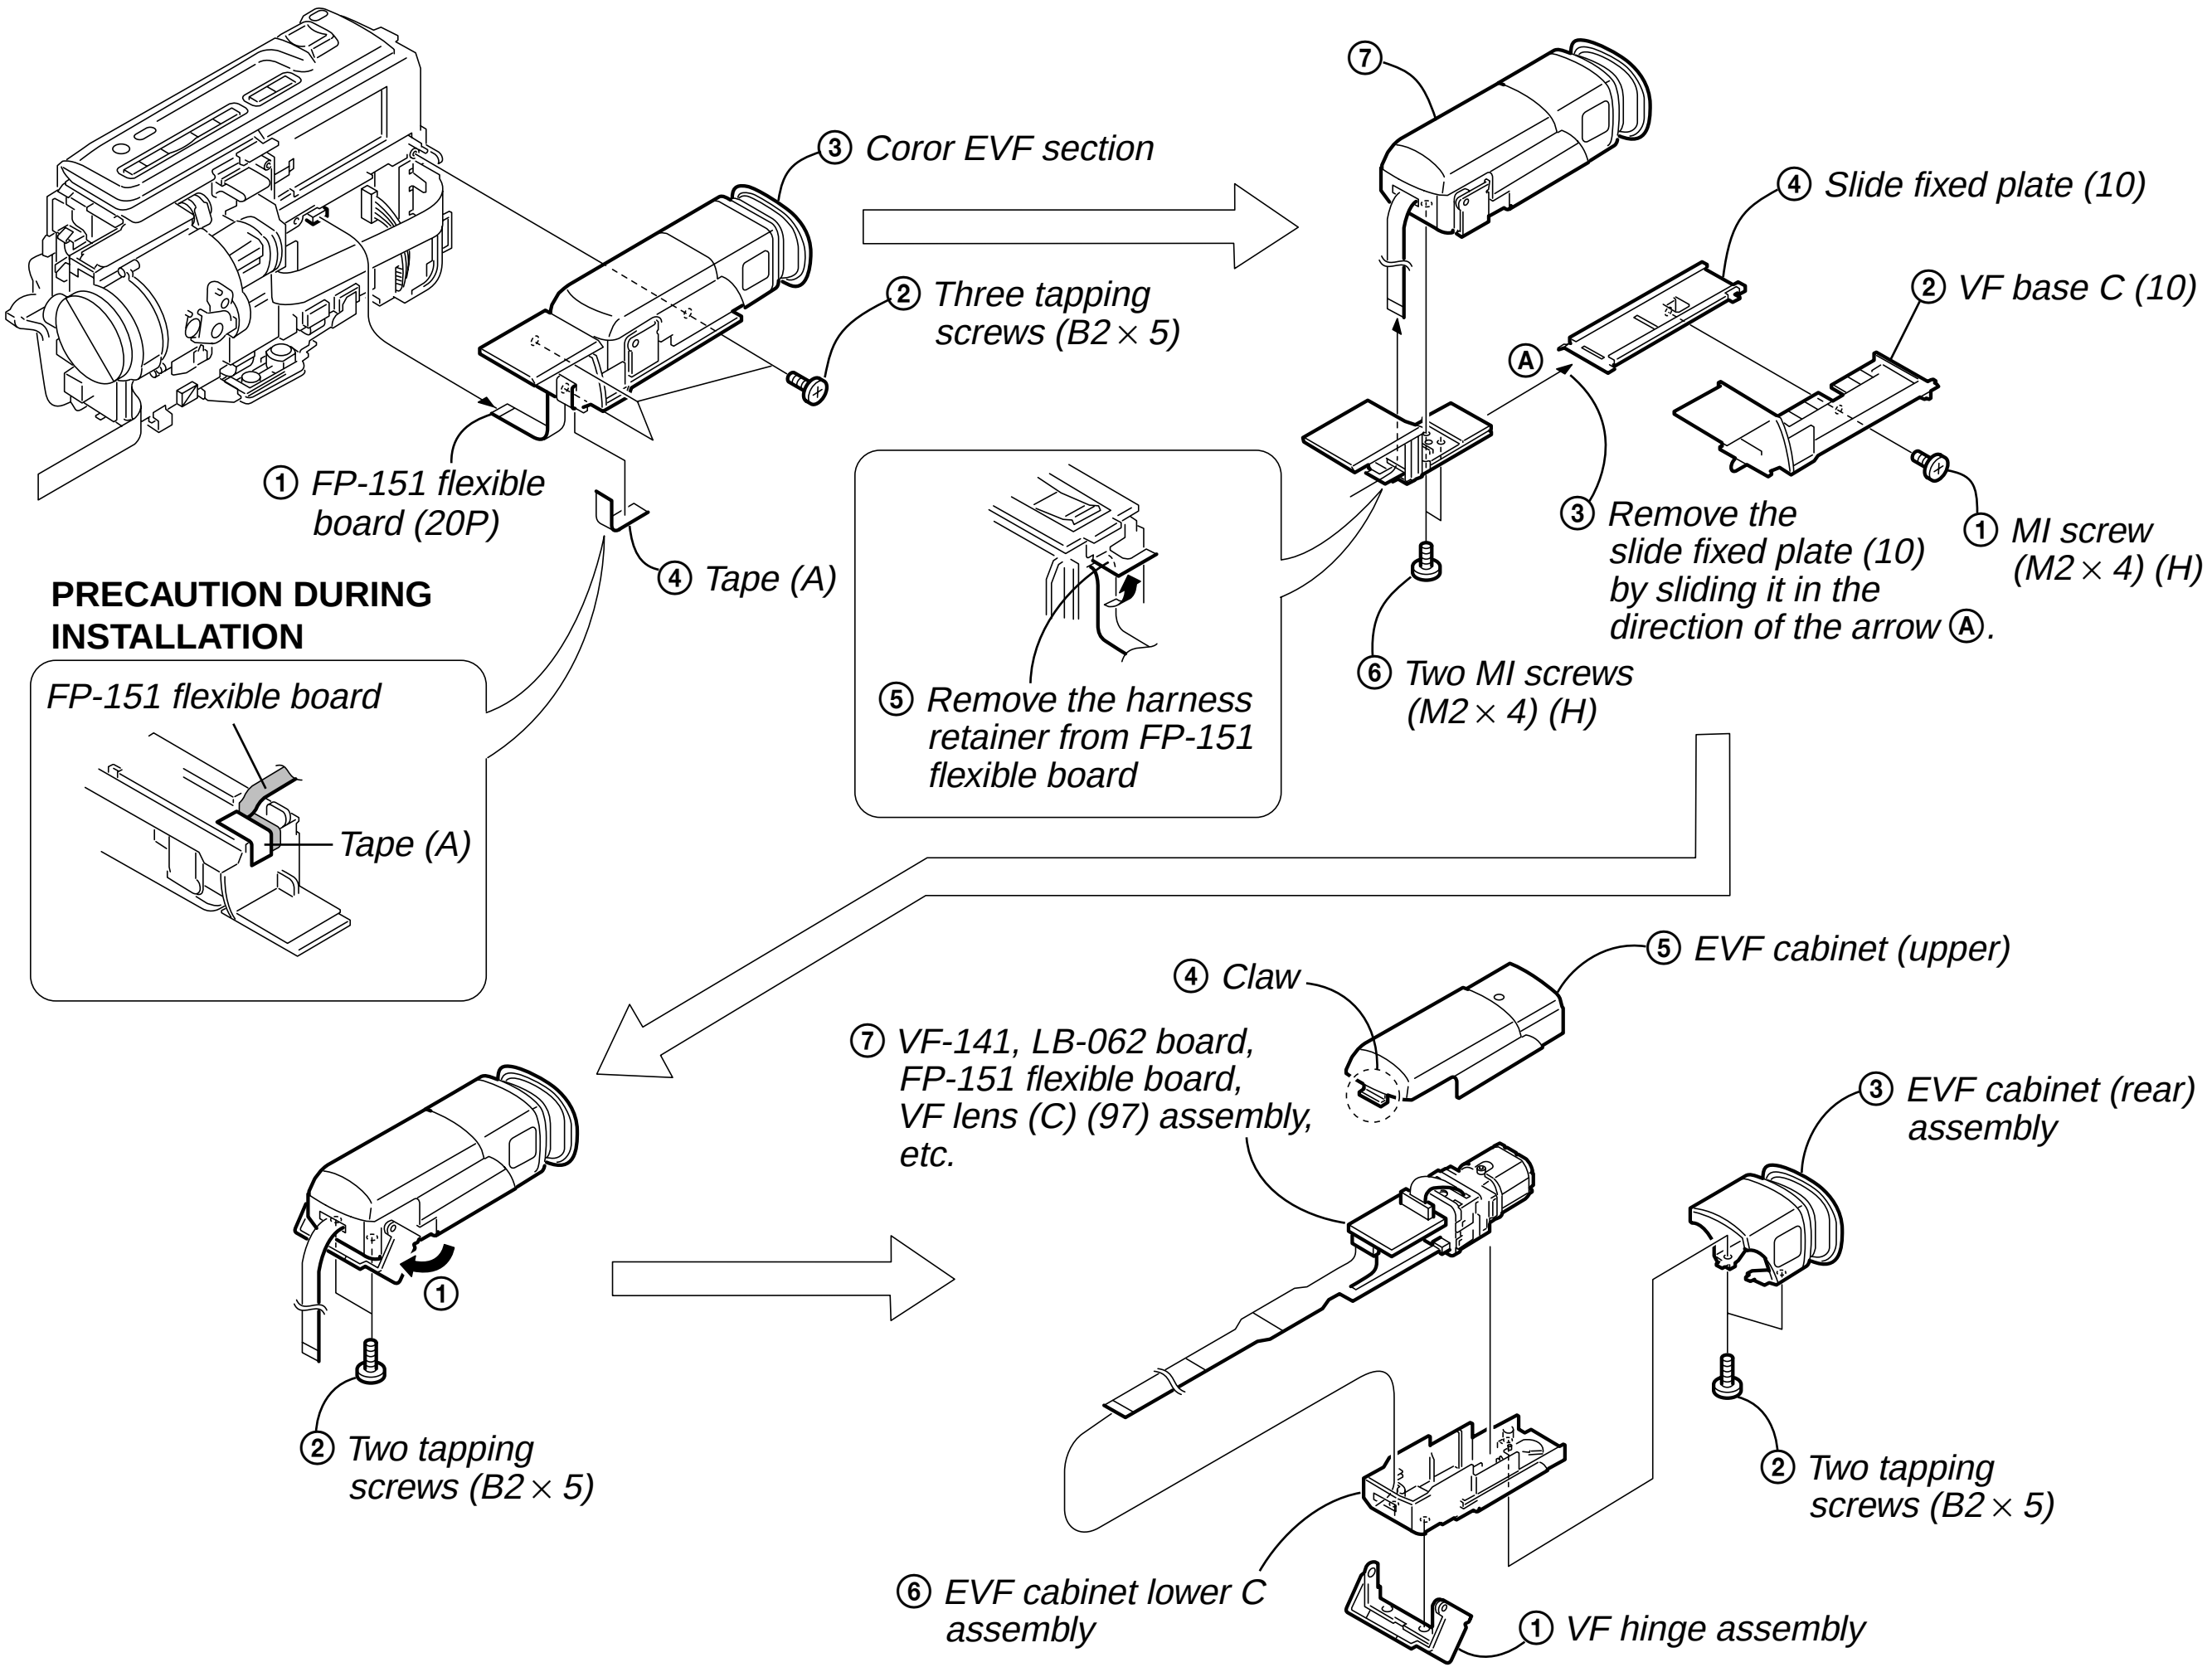
③ Coror EVF section
② Three tapping
screws (B2 × 5)
① FP-151 flexible
board (20P)
④ Tape (A)
PRECAUTION DURING
INSTALLATION
FP-151 flexible board
Tape (A)
⑦
④ Slide fixed plate (10)
② VF base C (10)
Ⓐ
③ Remove the
slide fixed plate (10)
by sliding it in the
direction of the arrow Ⓐ.
① MI screw
(M2 × 4) (H)
⑤ Remove the harness
retainer from FP-151
flexible board
⑥ Two MI screws
(M2 × 4) (H)
④ Claw
⑤ EVF cabinet (upper)
⑦ VF-141, LB-062 board,
FP-151 flexible board,
VF lens (C) (97) assembly,
etc.
③ EVF cabinet (rear)
assembly
①
② Two tapping
screws (B2 × 5)
② Two tapping
screws (B2 × 5)
⑥ EVF cabinet lower C
assembly
① VF hinge assembly

### [VF-141, LB-062, CD-286, CF-077, MI-040 BOARDS SERVICE POSITION]

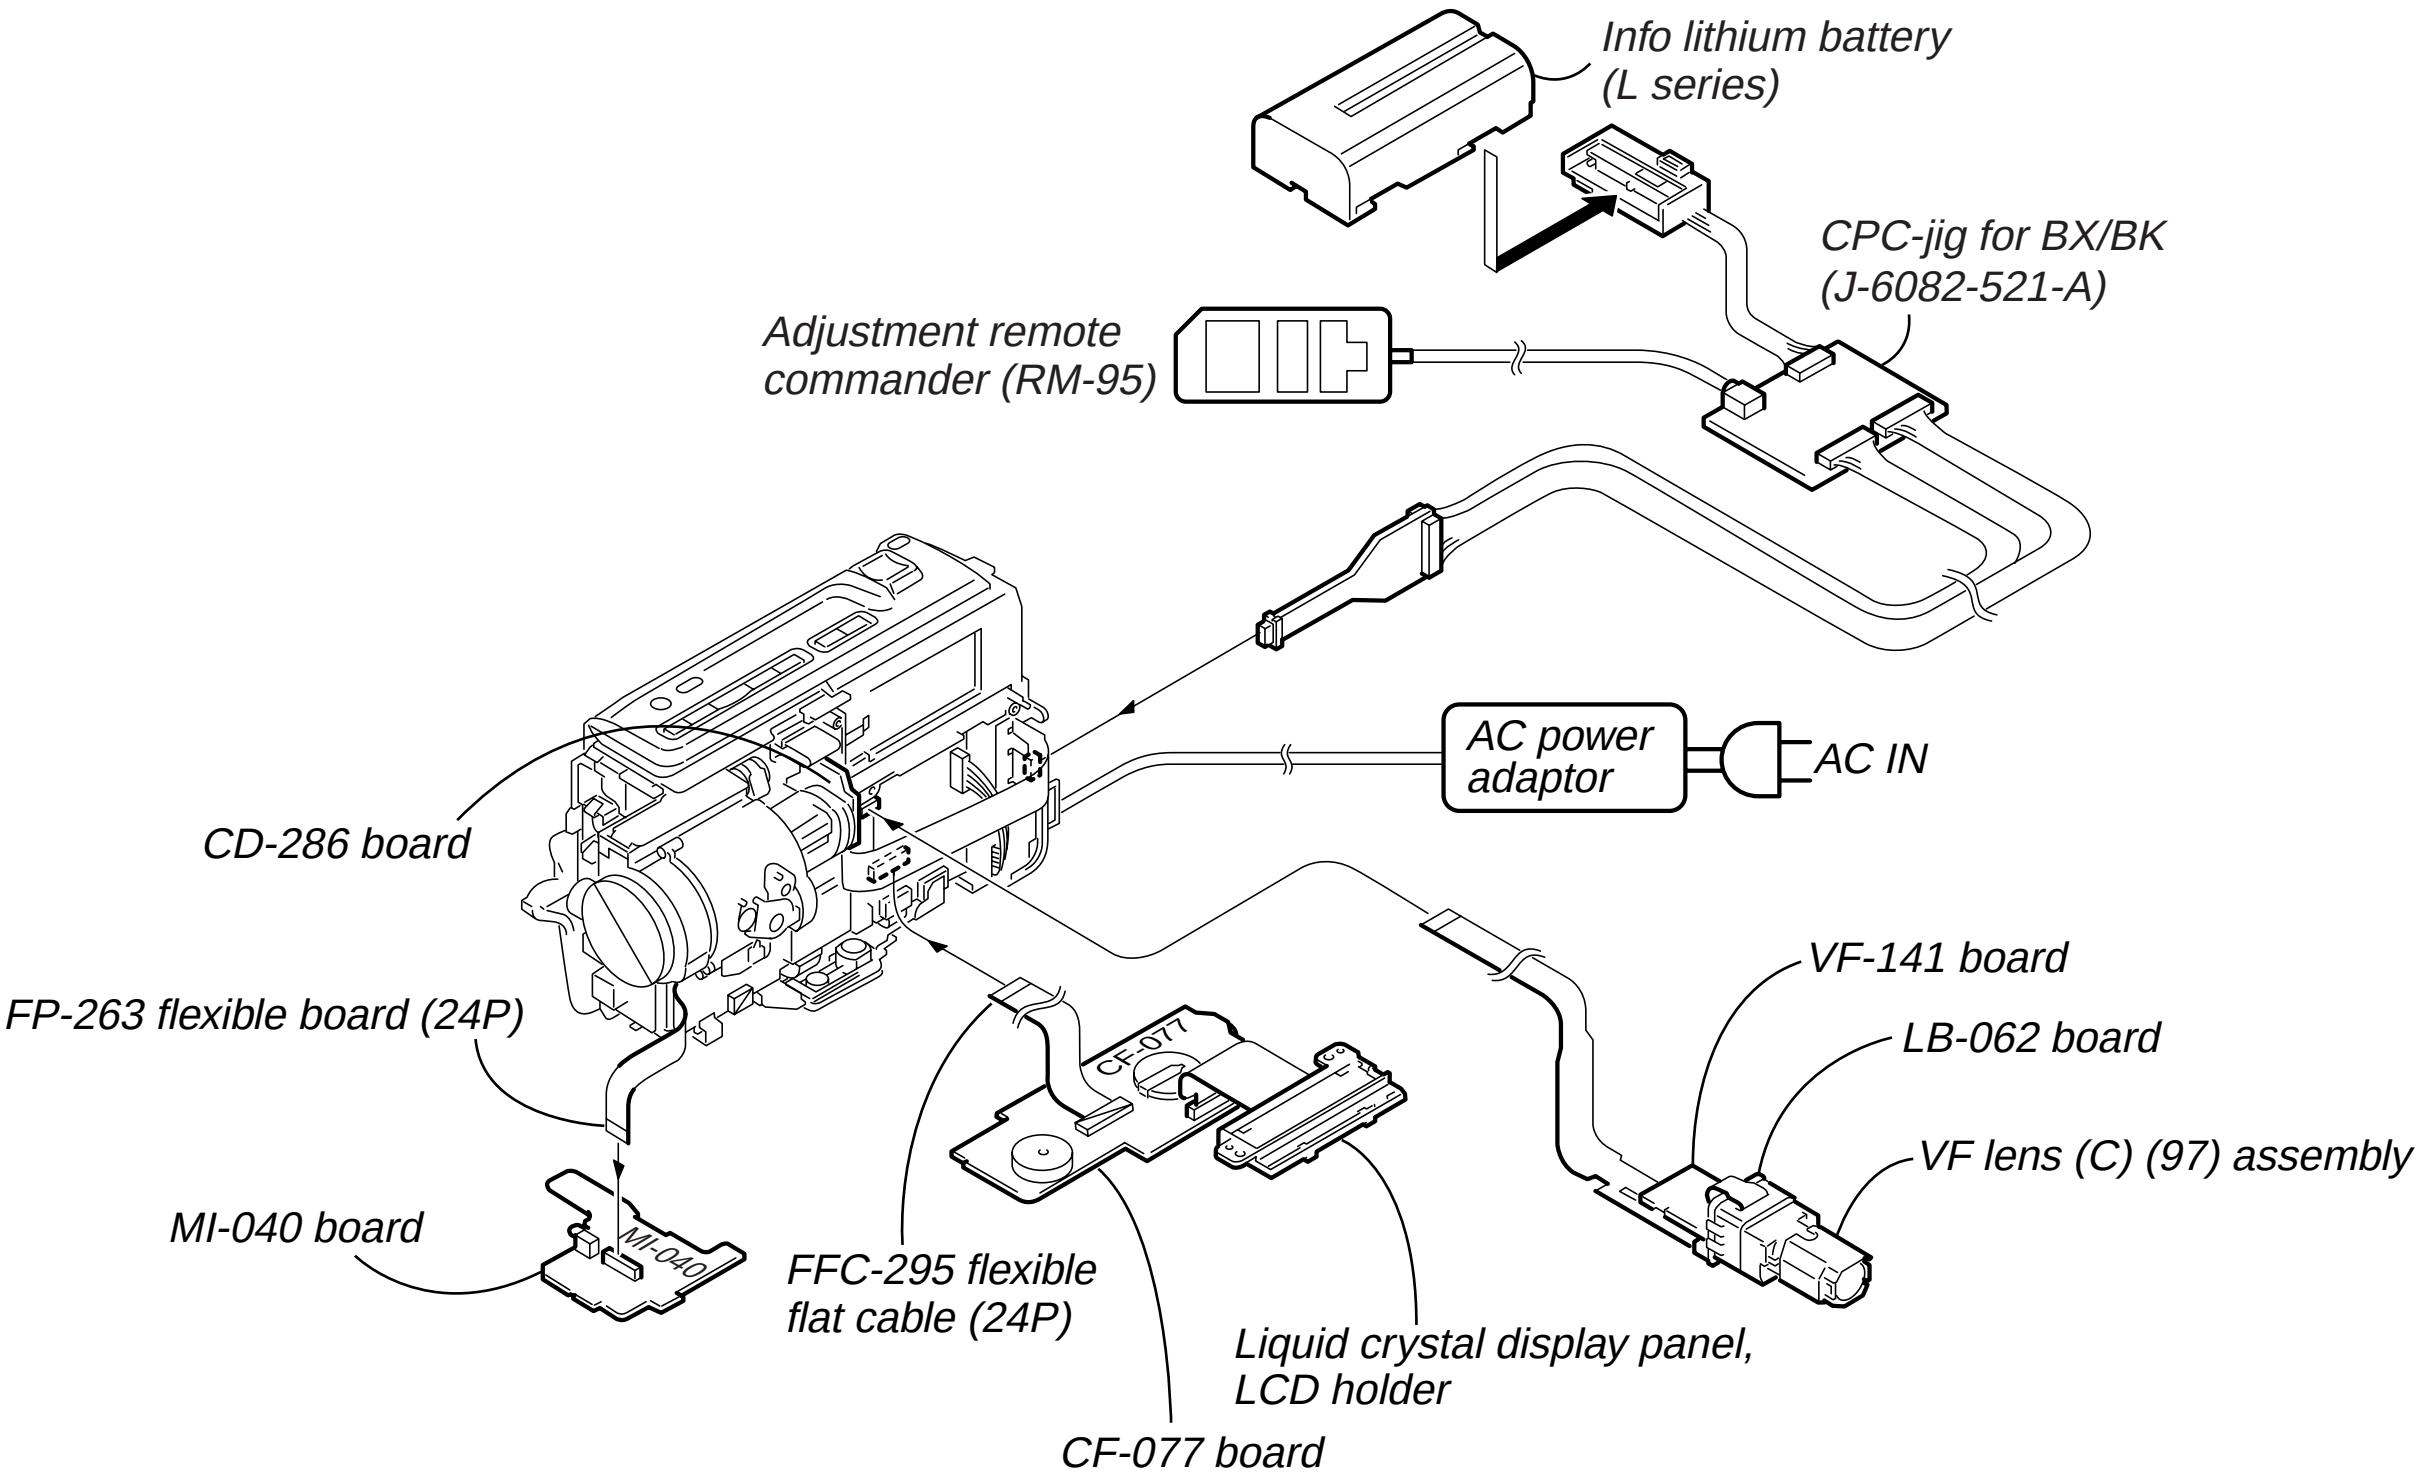
Info lithium battery
(L series)
CPC-jig for BX/BK
(J-6082-521-A)
Adjustment remote
commander (RM-95)
AC power
adaptor
AC IN
CD-286 board
FP-263 flexible board (24P)
VF-141 board
LB-062 board
VF lens (C) (97) assembly
MI-040 board
MI-040
CF-077
FFC-295 flexible
flat cable (24P)
Liquid crystal display panel,
LCD holder
CF-077 board

## 2-9. BATTERY PANEL SECTION (BATTERY TERMINAL BOARD)

(Remove the Cabinet (L) section reffering to section 2-4 before starting disassembling.)

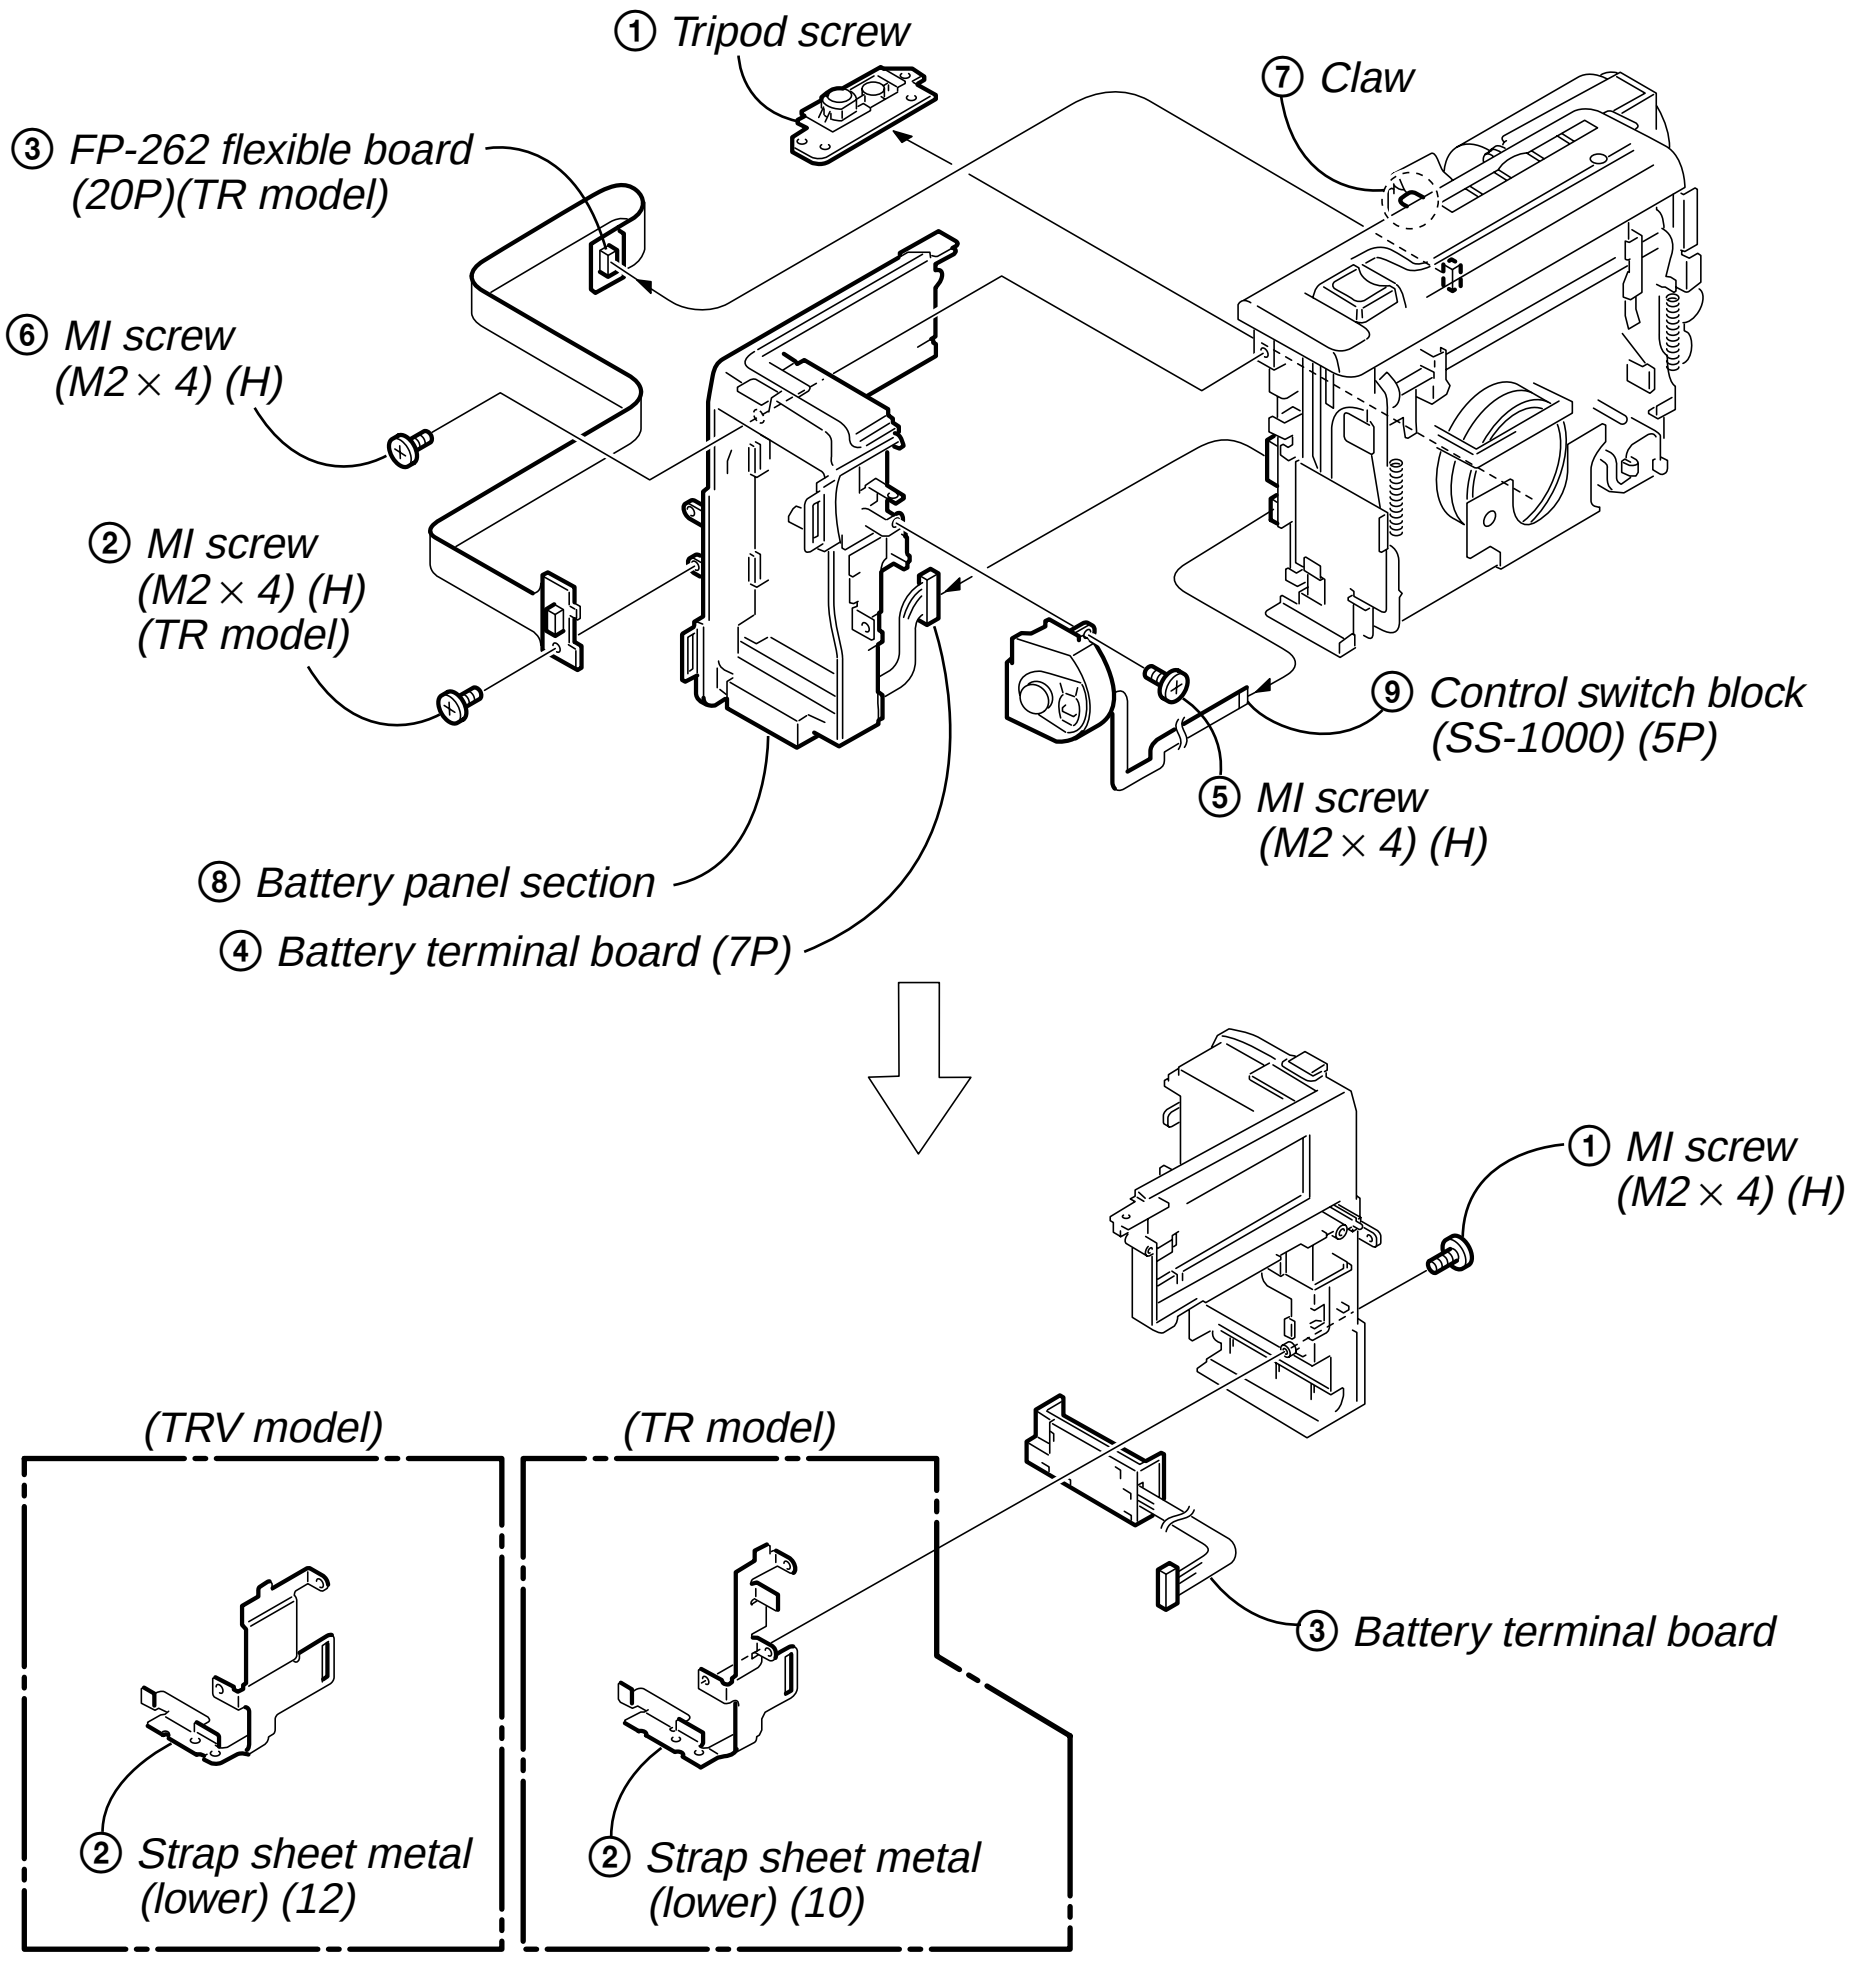
① Tripod screw
⑦ Claw
③ FP-262 flexible board
(20P)(TR model)
⑥ MI screw
(M2 × 4) (H)
② MI screw
(M2 × 4) (H)
(TR model)
⑨ Control switch block
(SS-1000) (5P)
⑤ MI screw
(M2 × 4) (H)
⑧ Battery panel section
④ Battery terminal board (7P)
① MI screw
(M2 × 4) (H)
(TRV model)
(TR model)
③ Battery terminal board
② Strap sheet metal
(lower) (12)
② Strap sheet metal
(lower) (10)

## 2-10. LENS SECTION

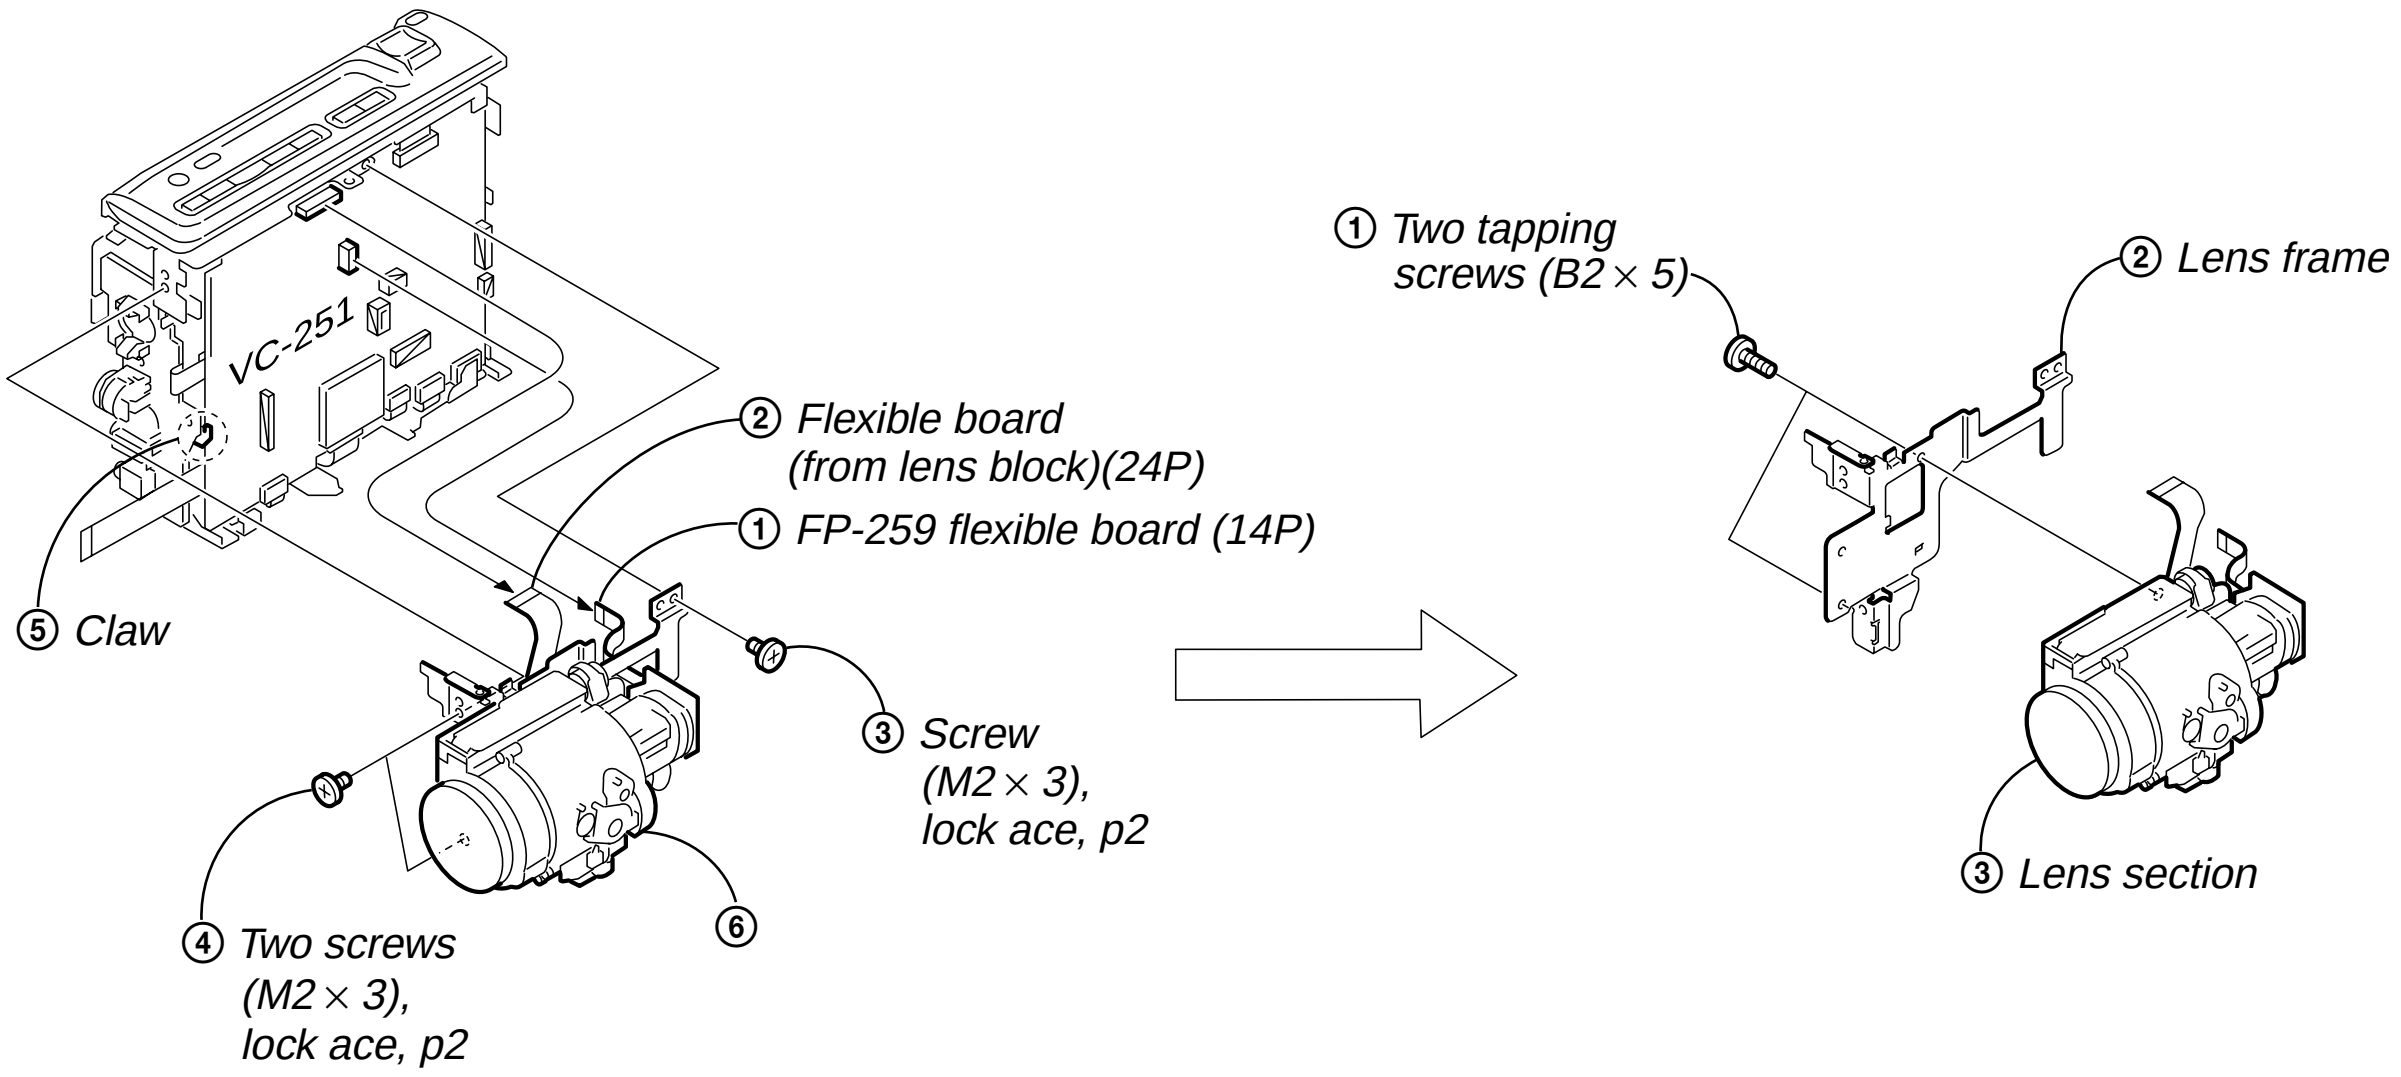
VC-251
② Flexible board
(from lens block)(24P)
① FP-259 flexible board (14P)
⑤ Claw
③ Screw
(M2 × 3),
lock ace, p2
④ Two screws
(M2 × 3),
lock ace, p2
⑥
① Two tapping
screws (B2 × 5)
② Lens frame
③ Lens section

## 2-11. VC-251 BOARD

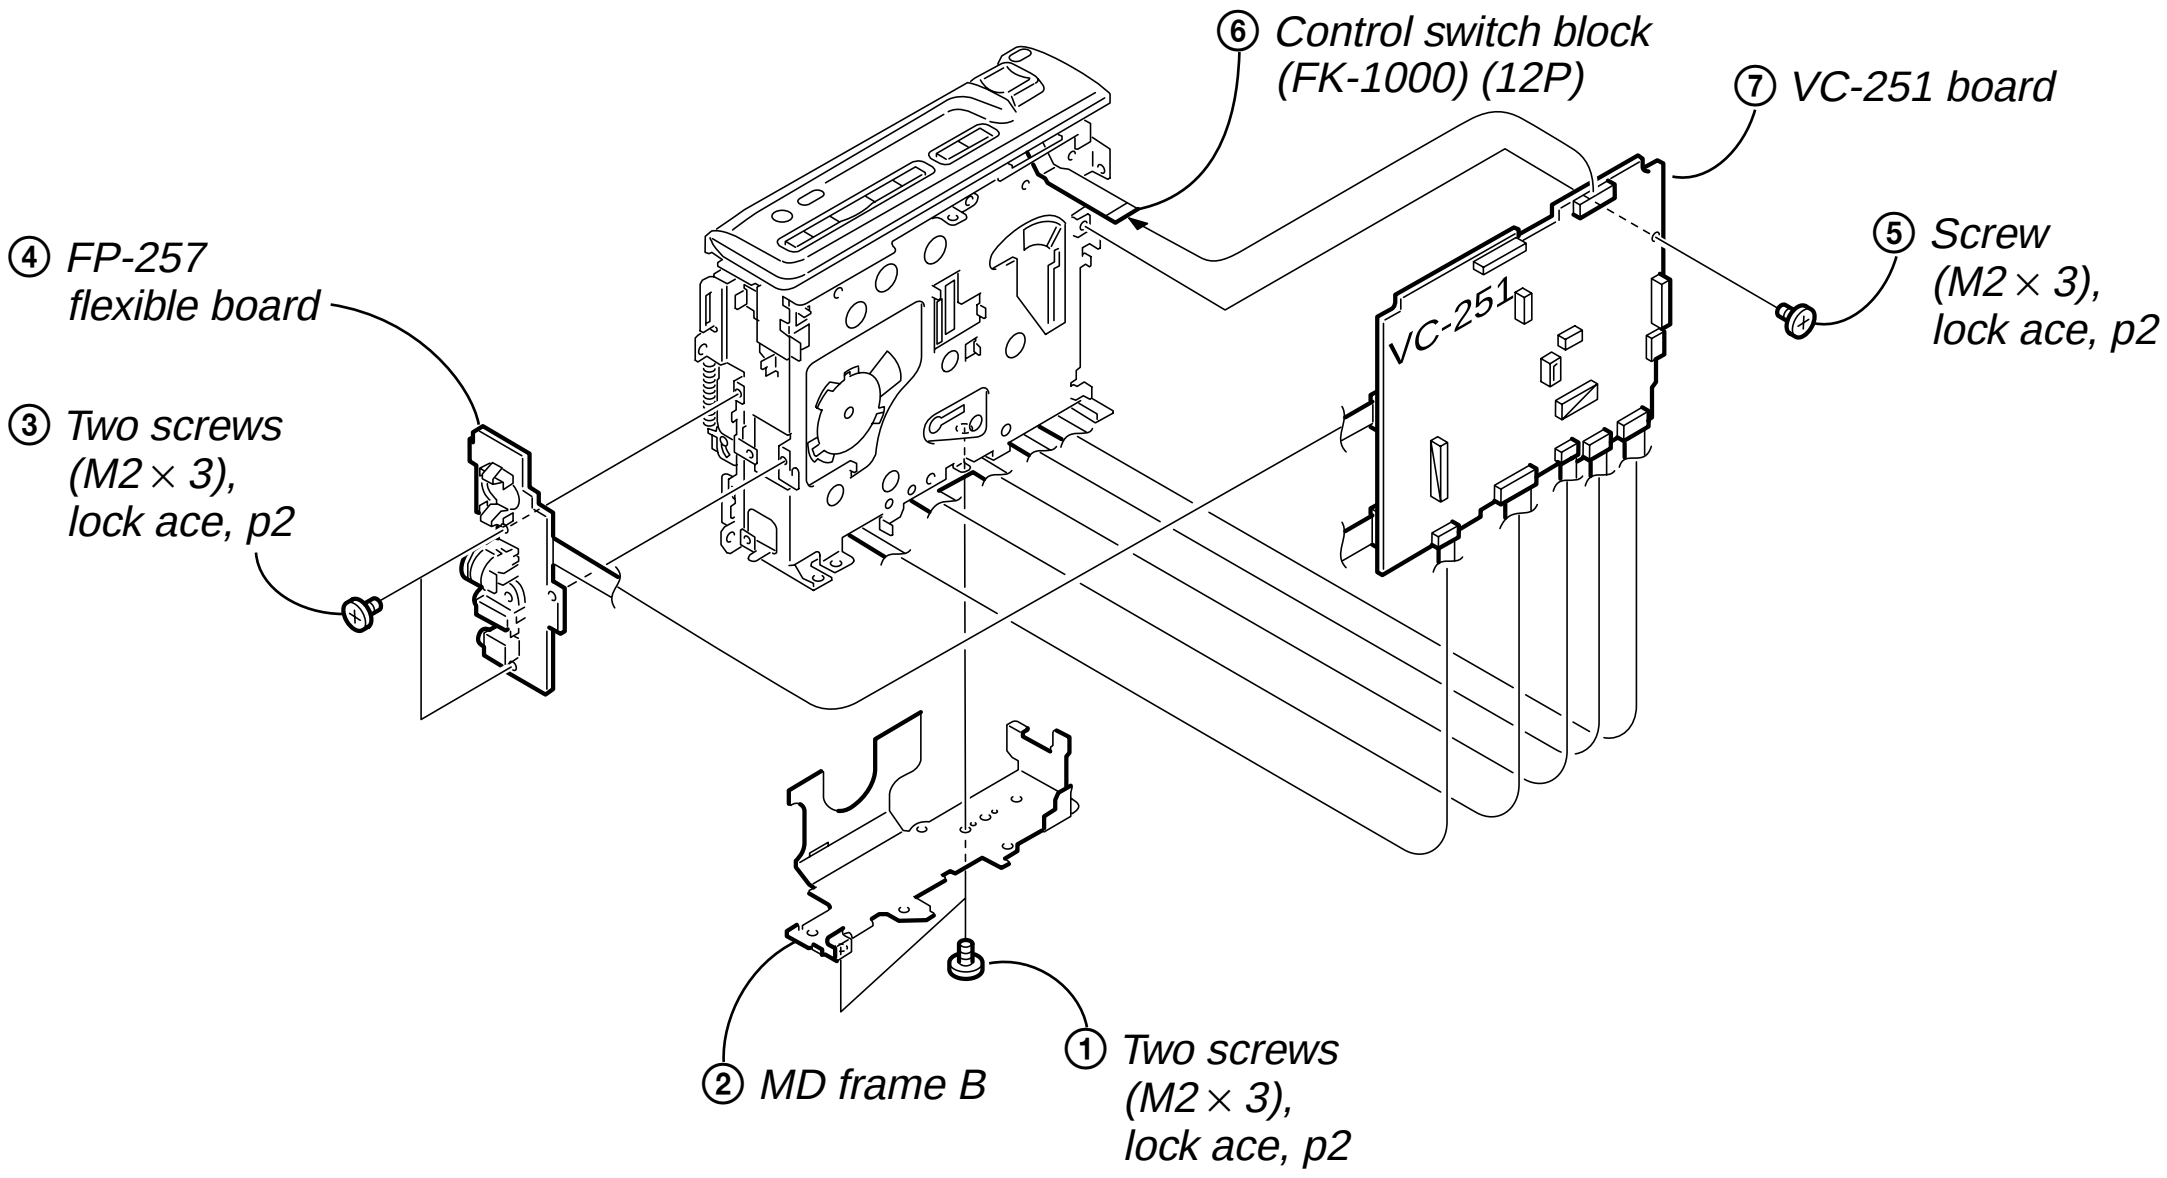
⑥ Control switch block
(FK-1000) (12P)
⑦ VC-251 board
VC-251
⑤ Screw
(M2 × 3),
lock ace, p2
④ FP-257
flexible board
③ Two screws
(M2 × 3),
lock ace, p2
② MD frame B
① Two screws
(M2 × 3),
lock ace, p2

## *[SERVICE POSITION TO CHECK THE VTR SECTION]*

### Connection to Check the VTR Section

To check the VTR section, set the VTR to the "Forced VTR power ON" mode.
Operate the VTR functions using the adjustment remote commander (with the HOLD switch set in the OFF position).

**Setting the "Forced VTR Power ON" mode**

1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 02, and press the PAUSE button of the adjustment remote commander.

**Exiting the "Forced VTR Power ON" mode**

1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjustment remote commander.
3) Select page: 0, address: 01, and set data: 00.

**Note:** If the machine malfunctions (the operating mode changes by itself), connect the FK-1000 block, CF-1000 block/CF-077 board.

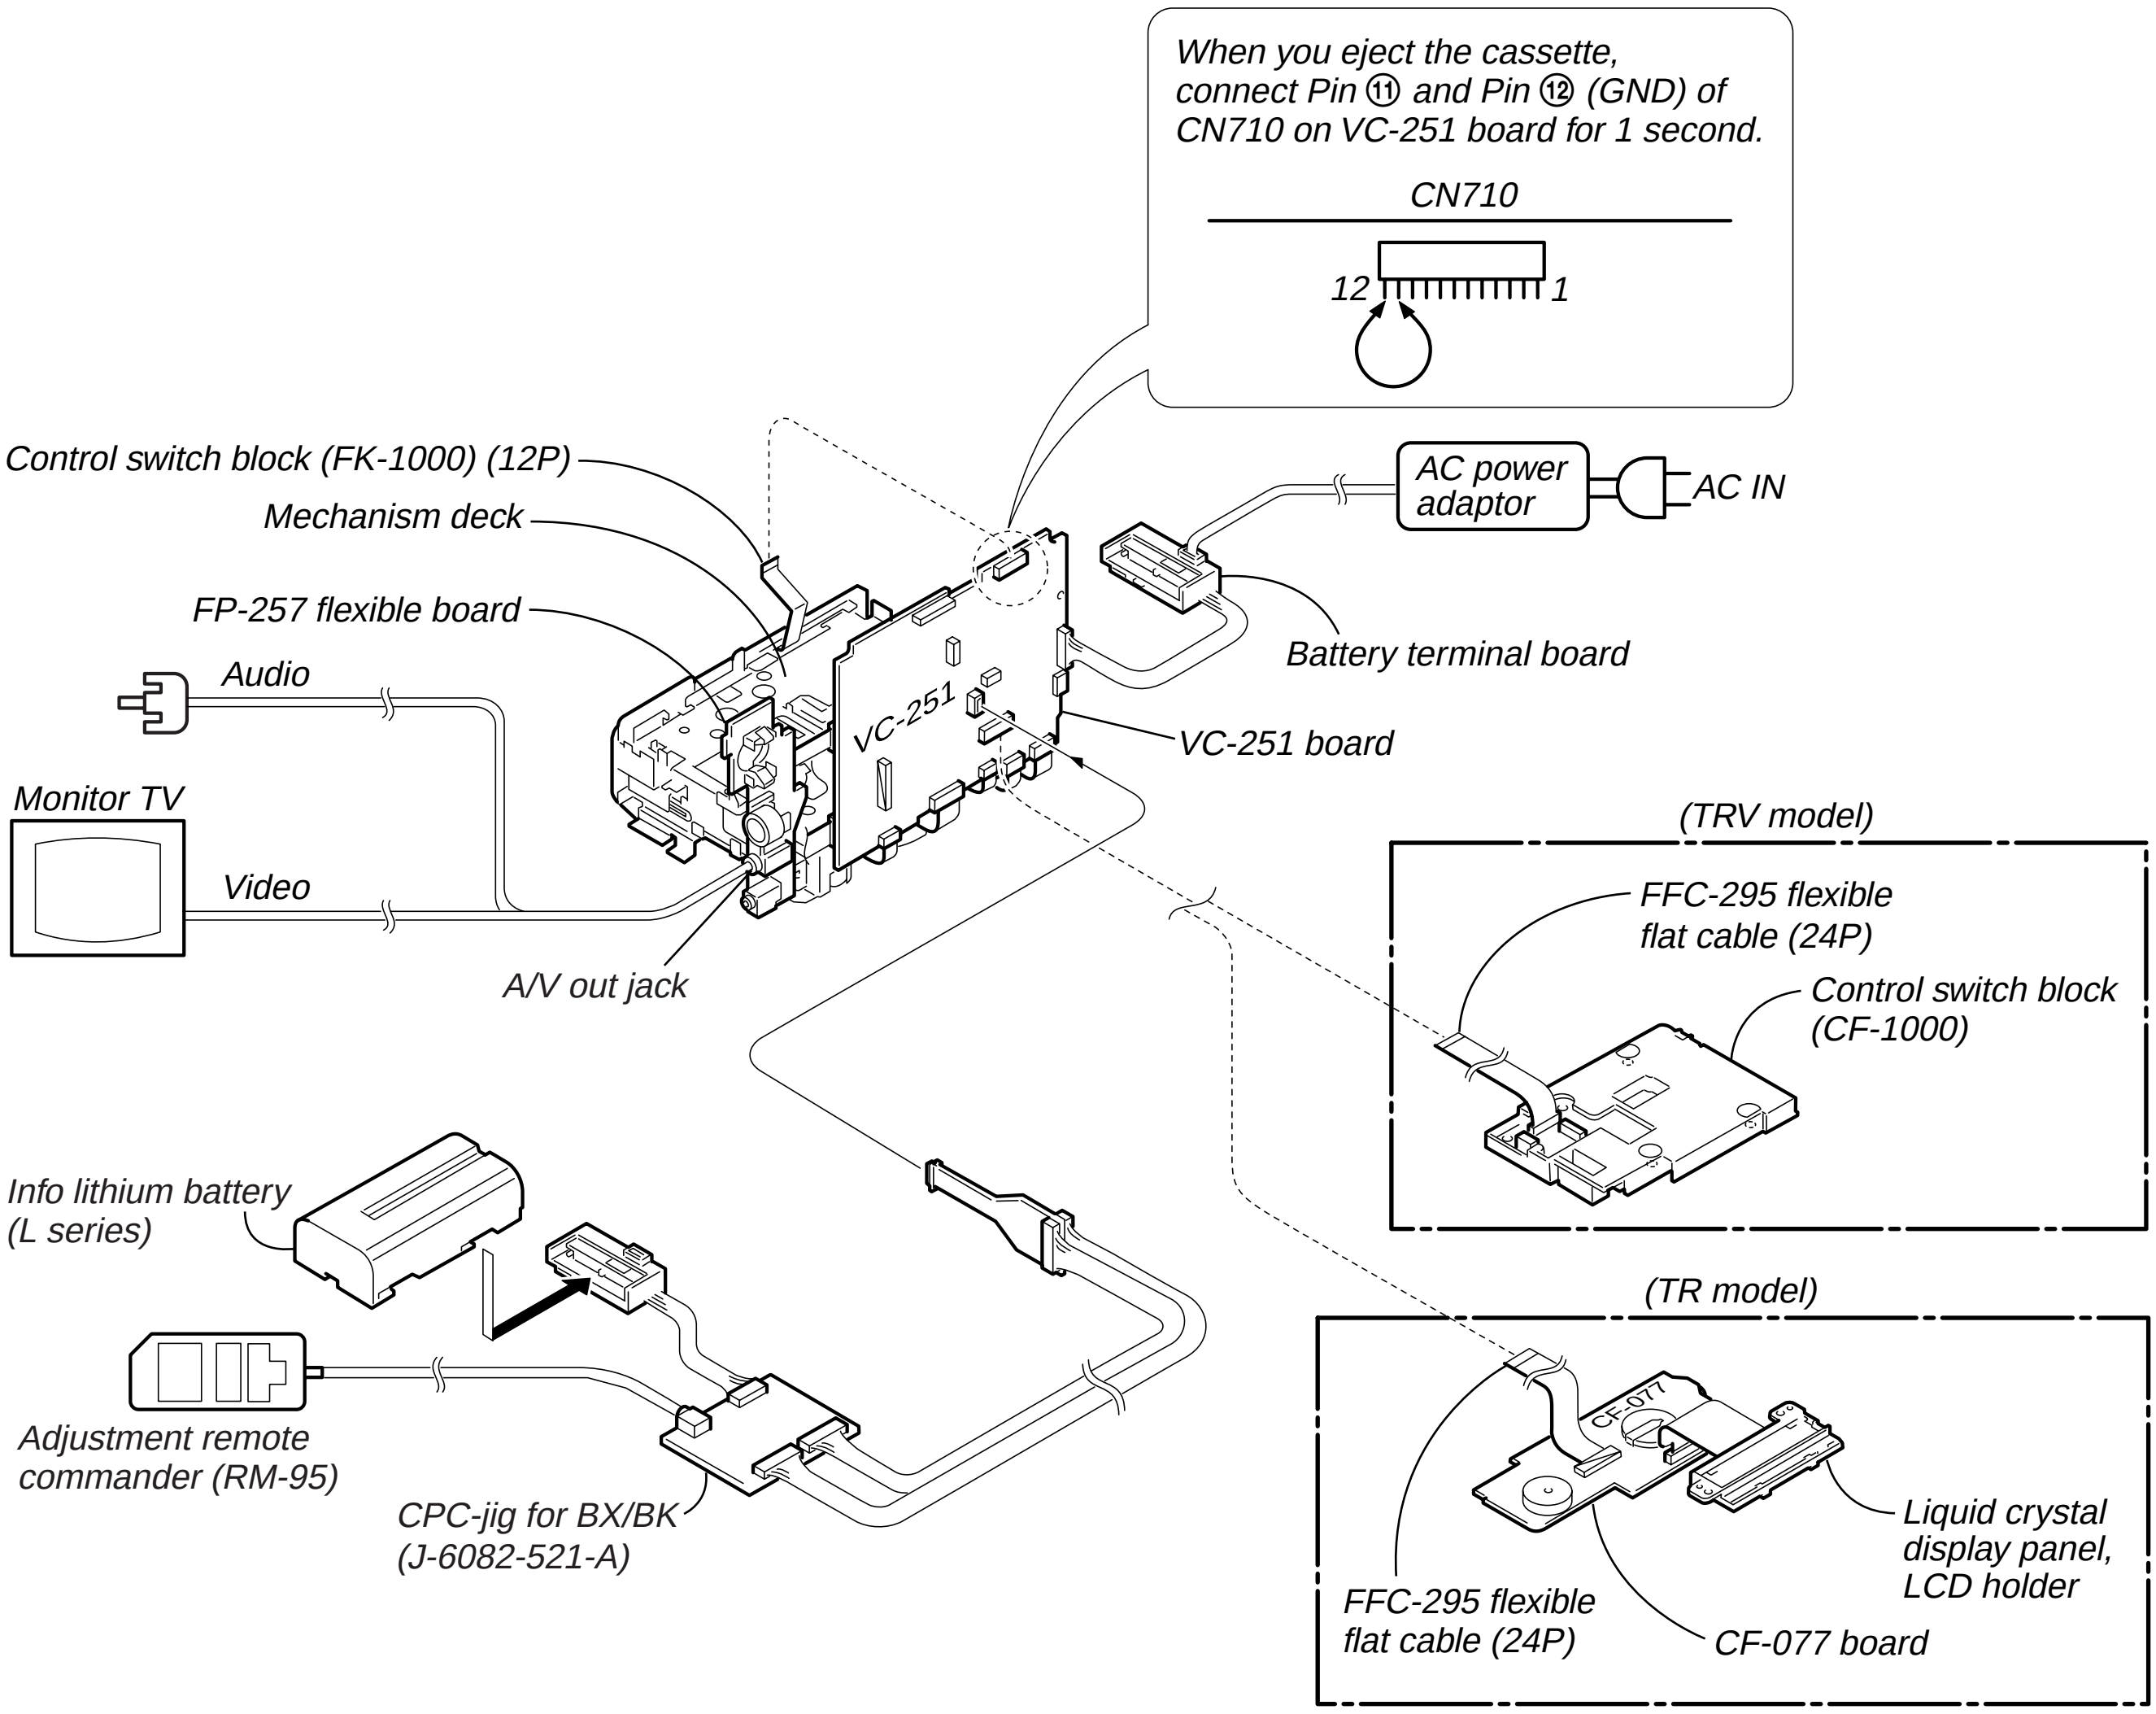

*When you eject the cassette, connect Pin ⑪ and Pin ⑫ (GND) of CN710 on VC-251 board for 1 second.*

CN710
12
1
Control switch block (FK-1000) (12P)
Mechanism deck
FP-257 flexible board
Audio
Monitor TV
Video
A/V out jack
VC-251
AC power adaptor
AC IN
Battery terminal board
VC-251 board
(TRV model)
FFC-295 flexible flat cable (24P)
Control switch block (CF-1000)
Info lithium battery (L series)
Adjustment remote commander (RM-95)
CPC-jig for BX/BK (J-6082-521-A)
(TR model)
CF-077
Liquid crystal display panel, LCD holder
FFC-295 flexible flat cable (24P)
CF-077 board

## *[SERVICE POSITION TO CHECK THE CAMERA SECTION]*

### Connection to Check the Camera Section

To check the camera section, set the camera to the "Forced camera power ON" mode.

**Setting the “Forced Camera Power ON” mode**

1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 01, and press the PAUSE button of the adjustment remote commander.

**Exiting the “Forced Camera Power ON” mode**

1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjustment remote commander.
3) Select page: 0, address: 01, and set data: 00.

**Note:** If the machine malfunctions (the operating mode changes by itself), connect the FK-1000 block, CF-1000 block/CF-077 board.

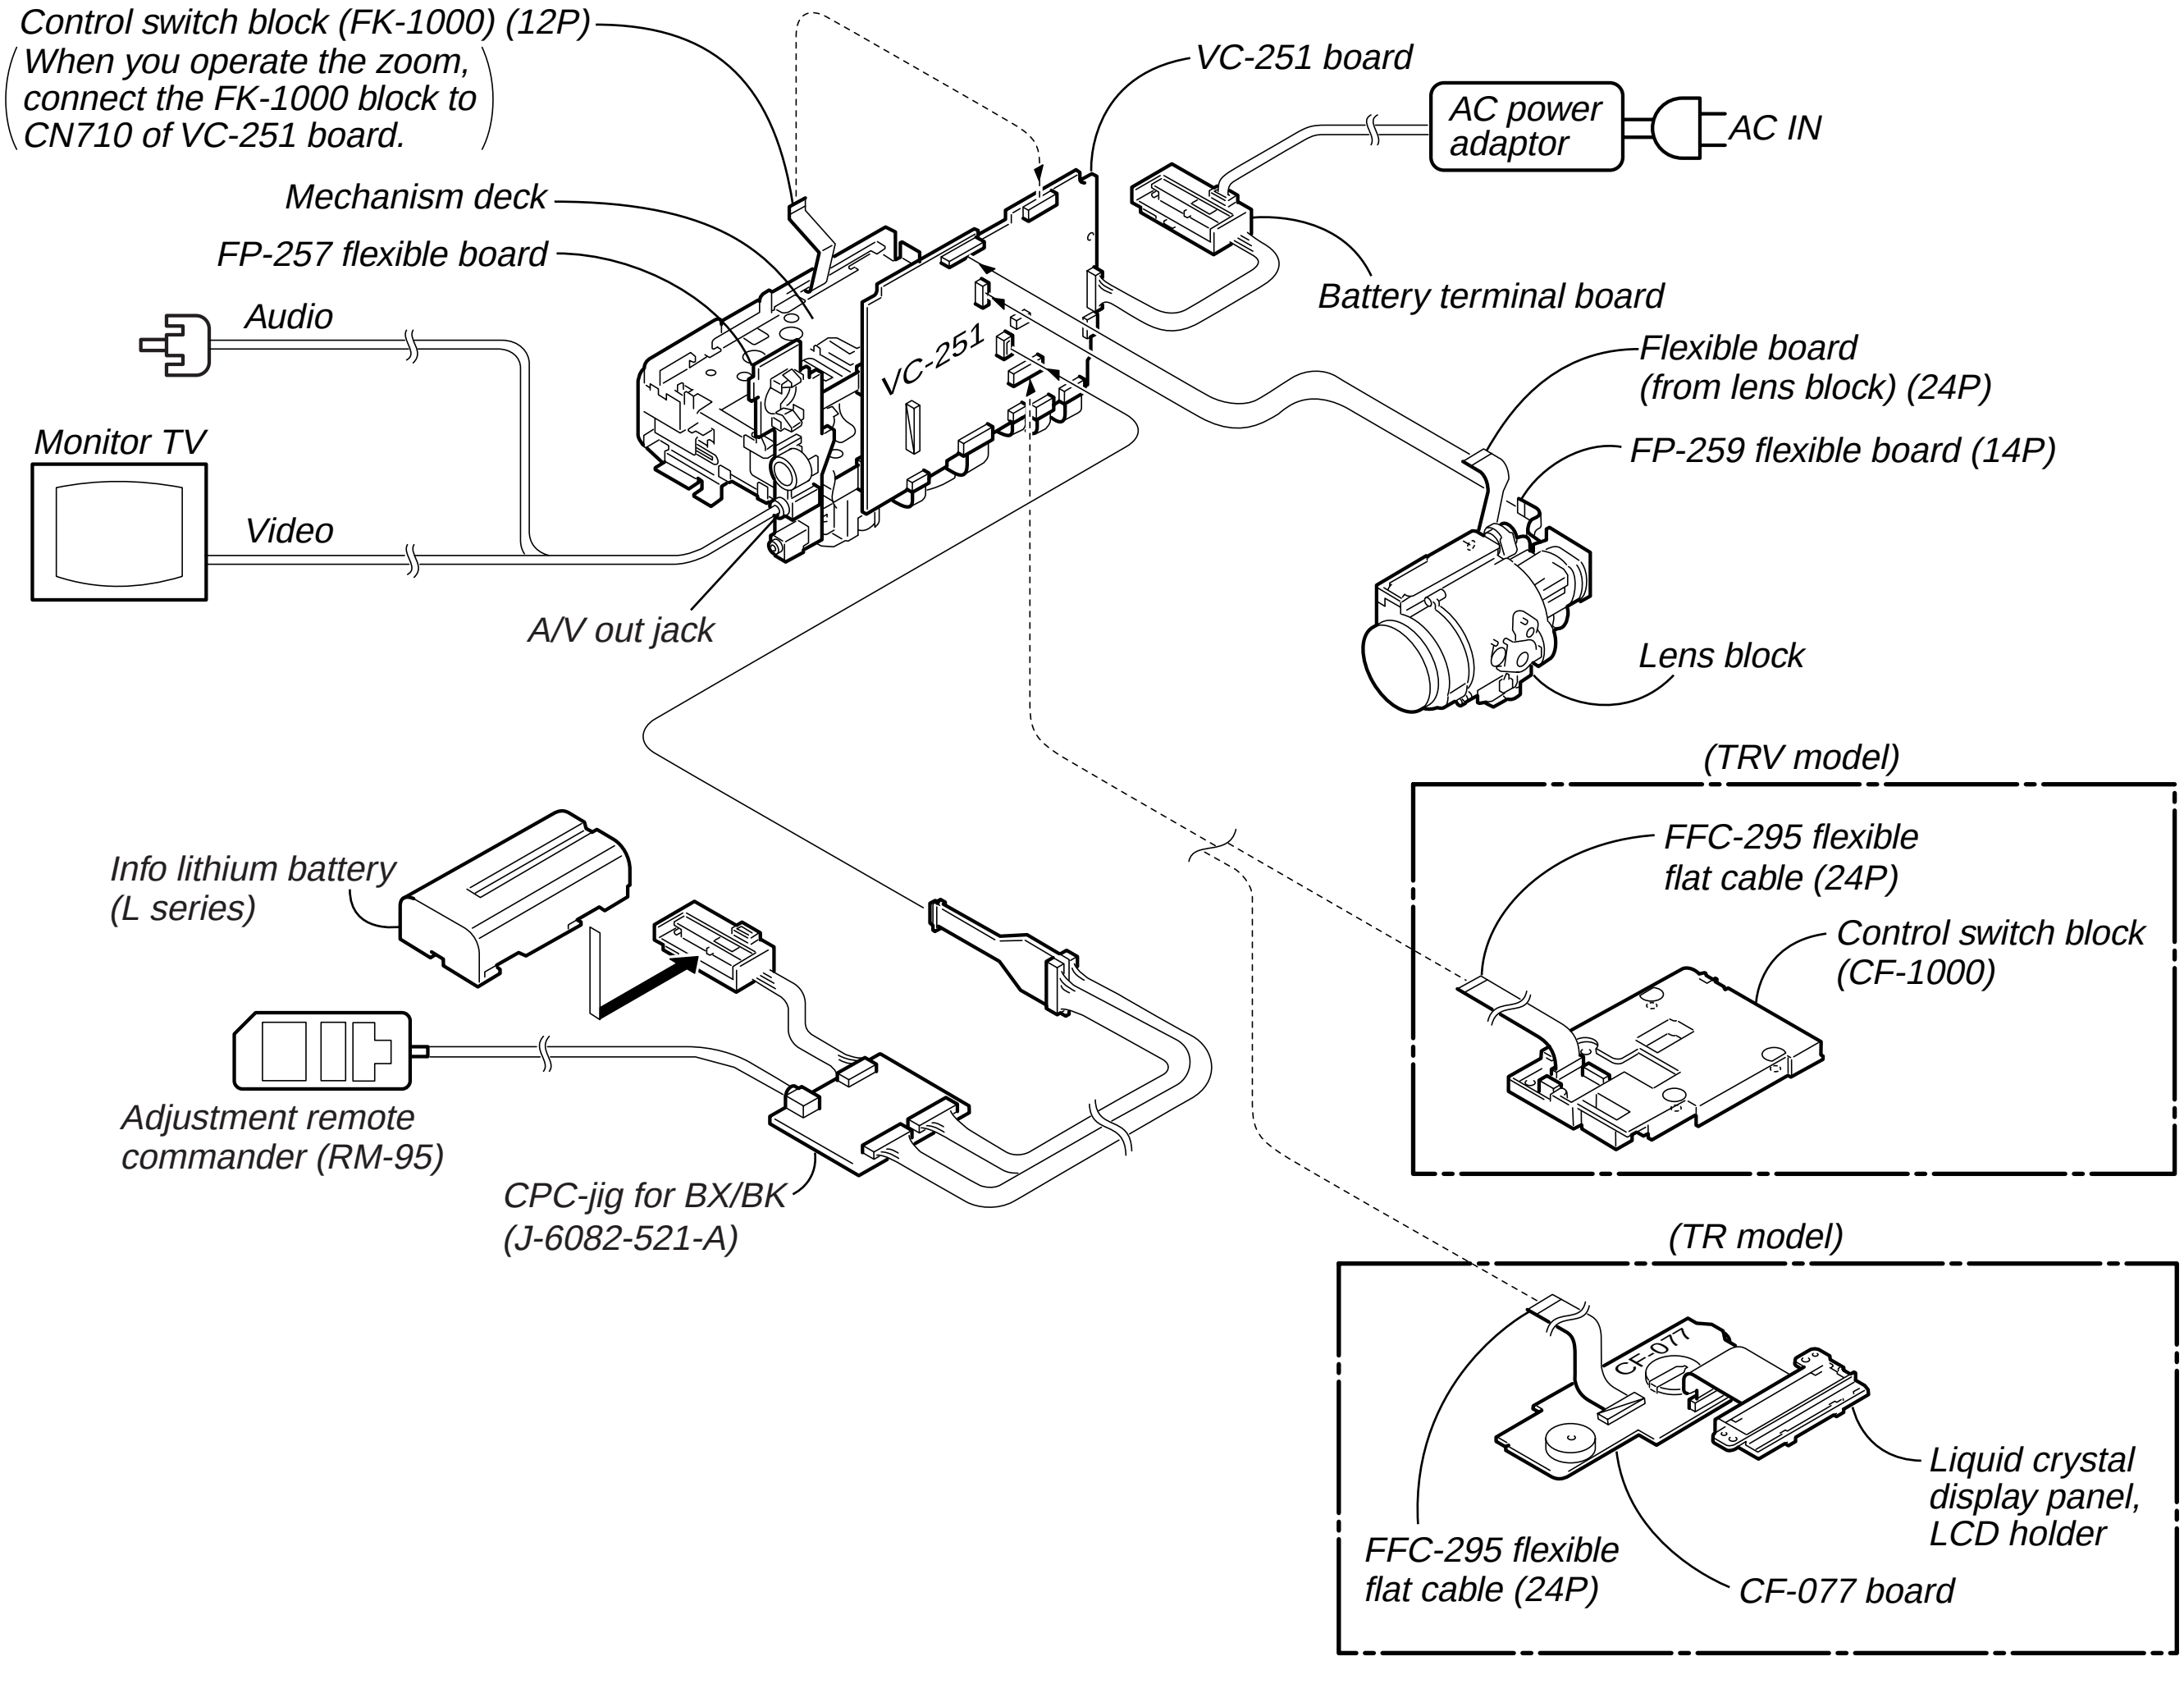
Control switch block (FK-1000) (12P)
(When you operate the zoom, connect the FK-1000 block to CN710 of VC-251 board.)
Mechanism deck
FP-257 flexible board
Audio
Monitor TV
Video
A/V out jack
VC-251
VC-251 board
AC power adaptor
AC IN
Battery terminal board
Flexible board (from lens block) (24P)
FP-259 flexible board (14P)
Lens block
Info lithium battery (L series)
Adjustment remote commander (RM-95)
CPC-jig for BX/BK (J-6082-521-A)
(TRV model)
FFC-295 flexible flat cable (24P)
Control switch block (CF-1000)
(TR model)
CF-077
Liquid crystal display panel, LCD holder
FFC-295 flexible flat cable (24P)
CF-077 board

## 2-12. MECHANISM DECK

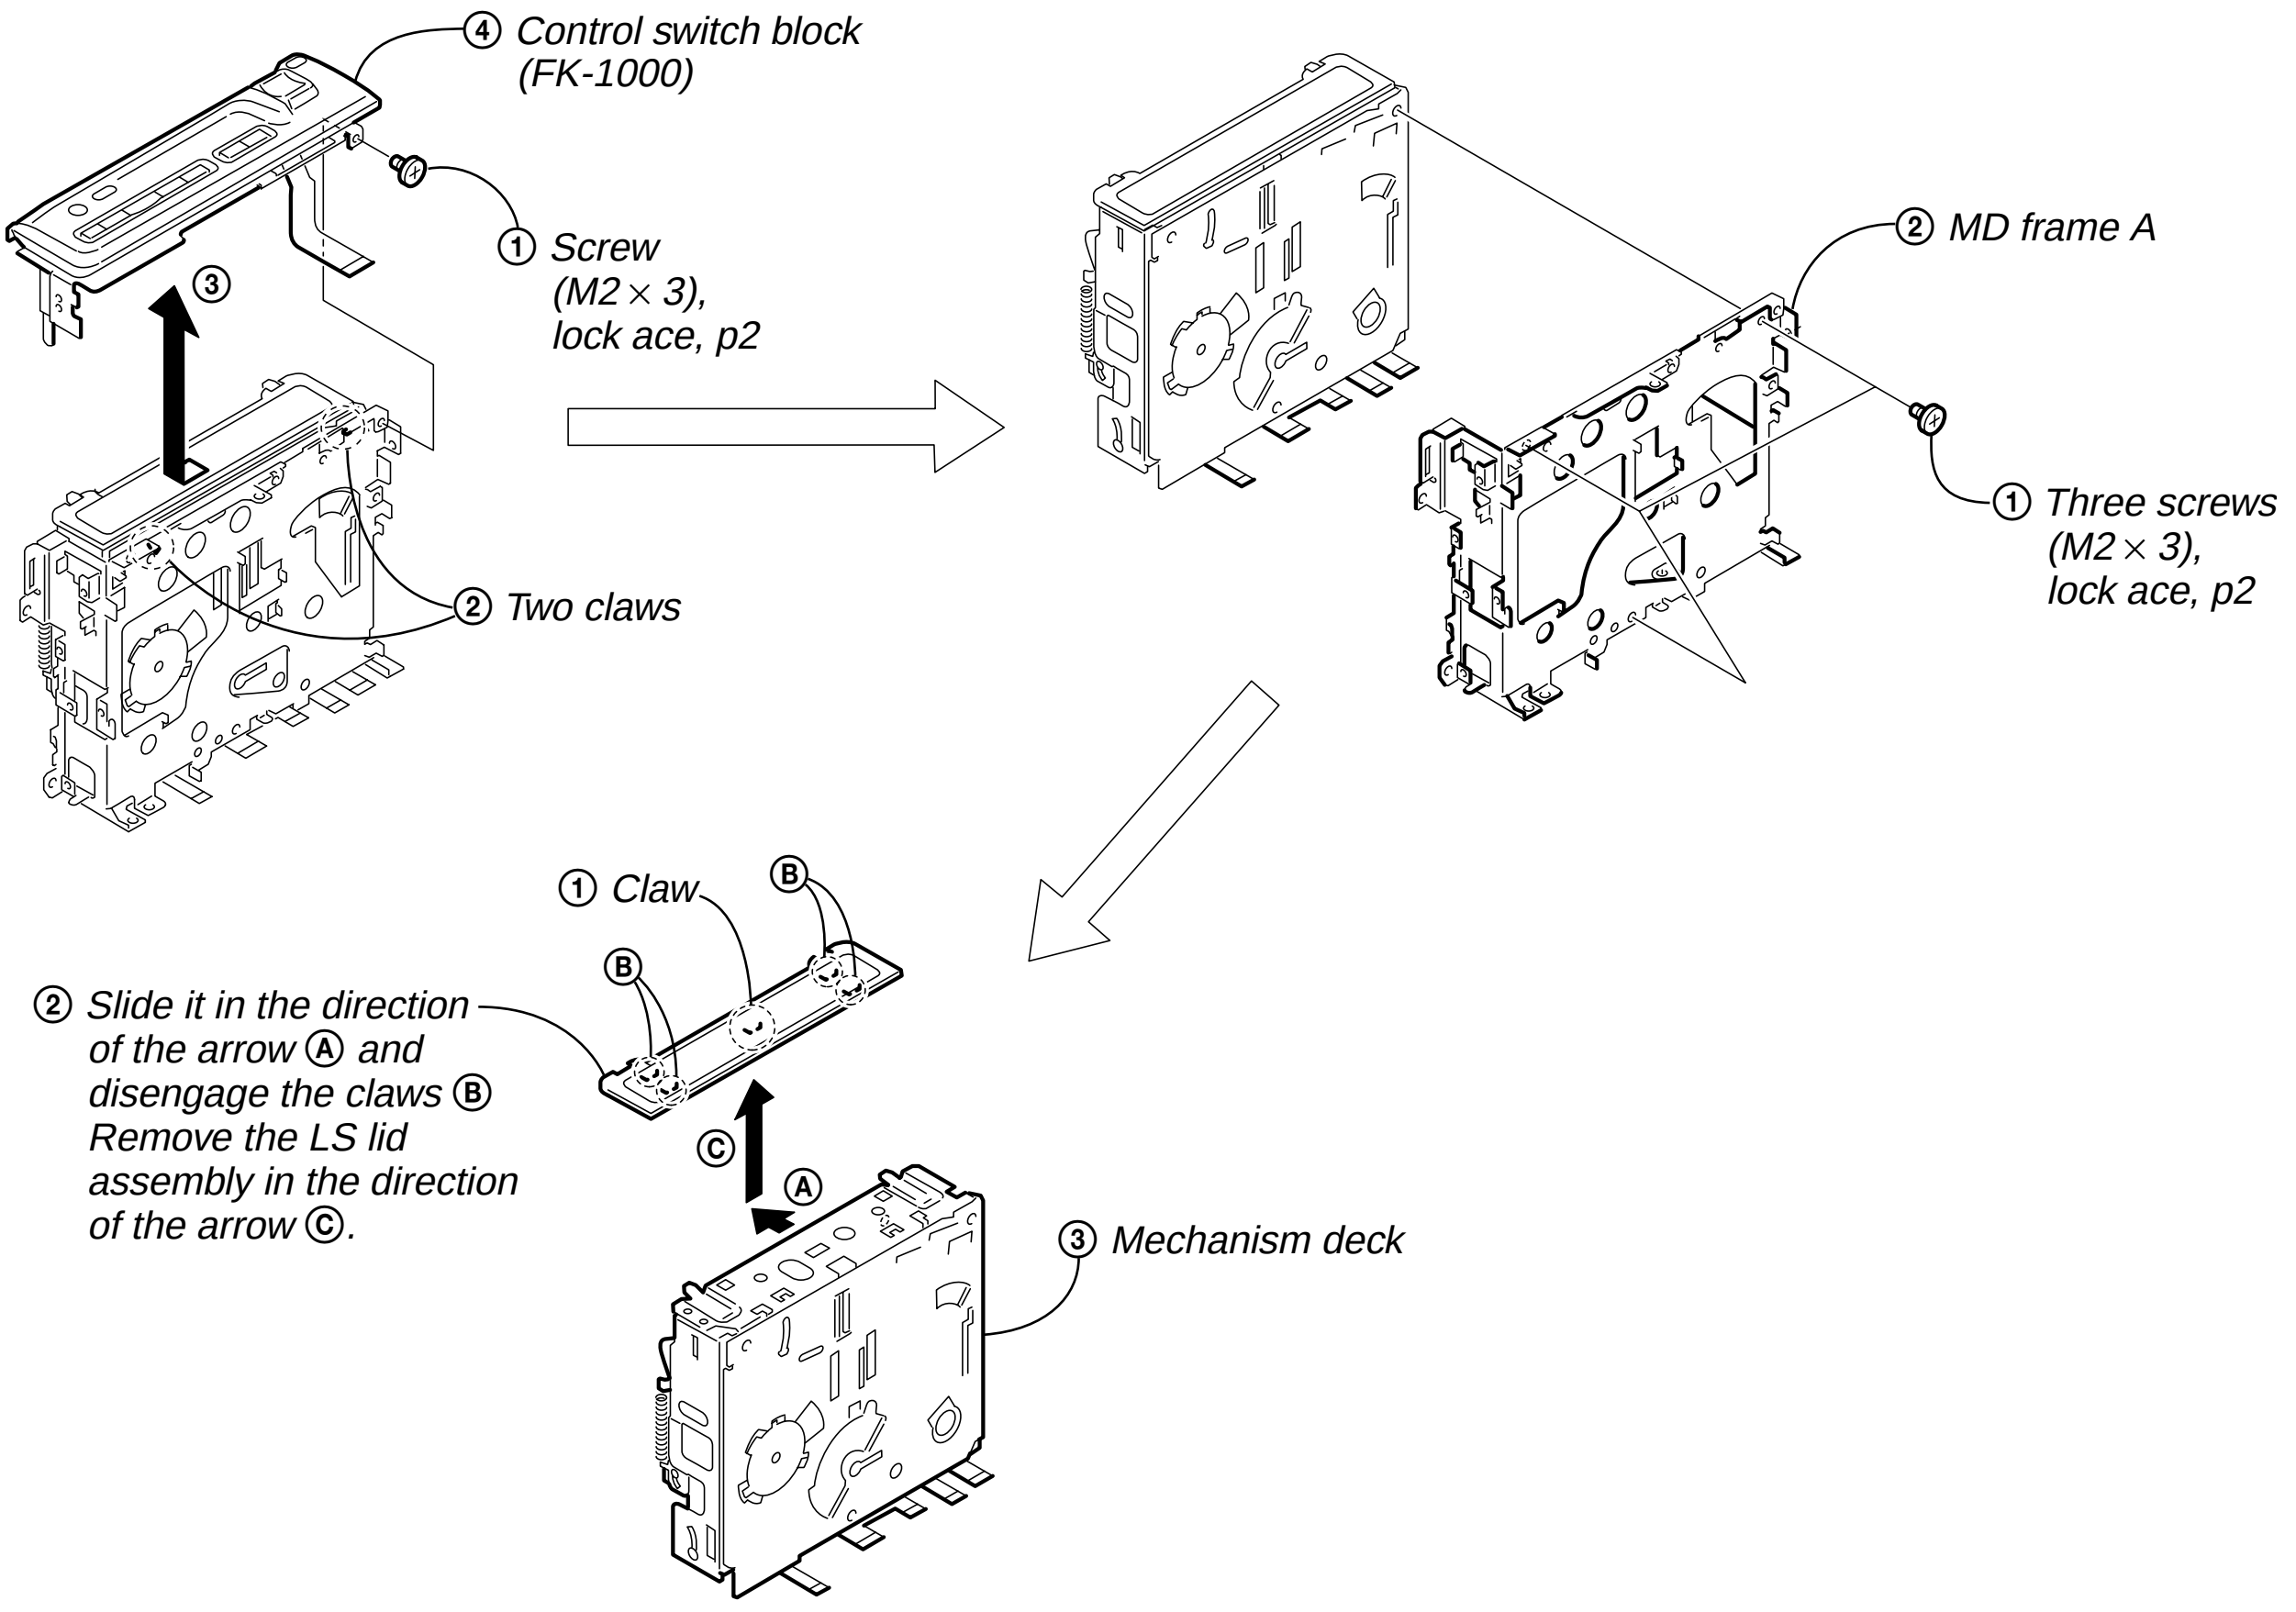
④ Control switch block (FK-1000)
① Screw (M2 × 3), lock ace, p2
③
② Two claws
② MD frame A
① Three screws (M2 × 3), lock ace, p2
① Claw
Ⓑ
Ⓑ
② Slide it in the direction of the arrow Ⓐ and disengage the claws Ⓑ Remove the LS lid assembly in the direction of the arrow Ⓒ.
Ⓒ
Ⓐ
③ Mechanism deck

## 2-13. HINGE ASSEMBLY (TRV MODEL)

(Remove the LCD unit reffering to section 2-2 before starting disassembling.)

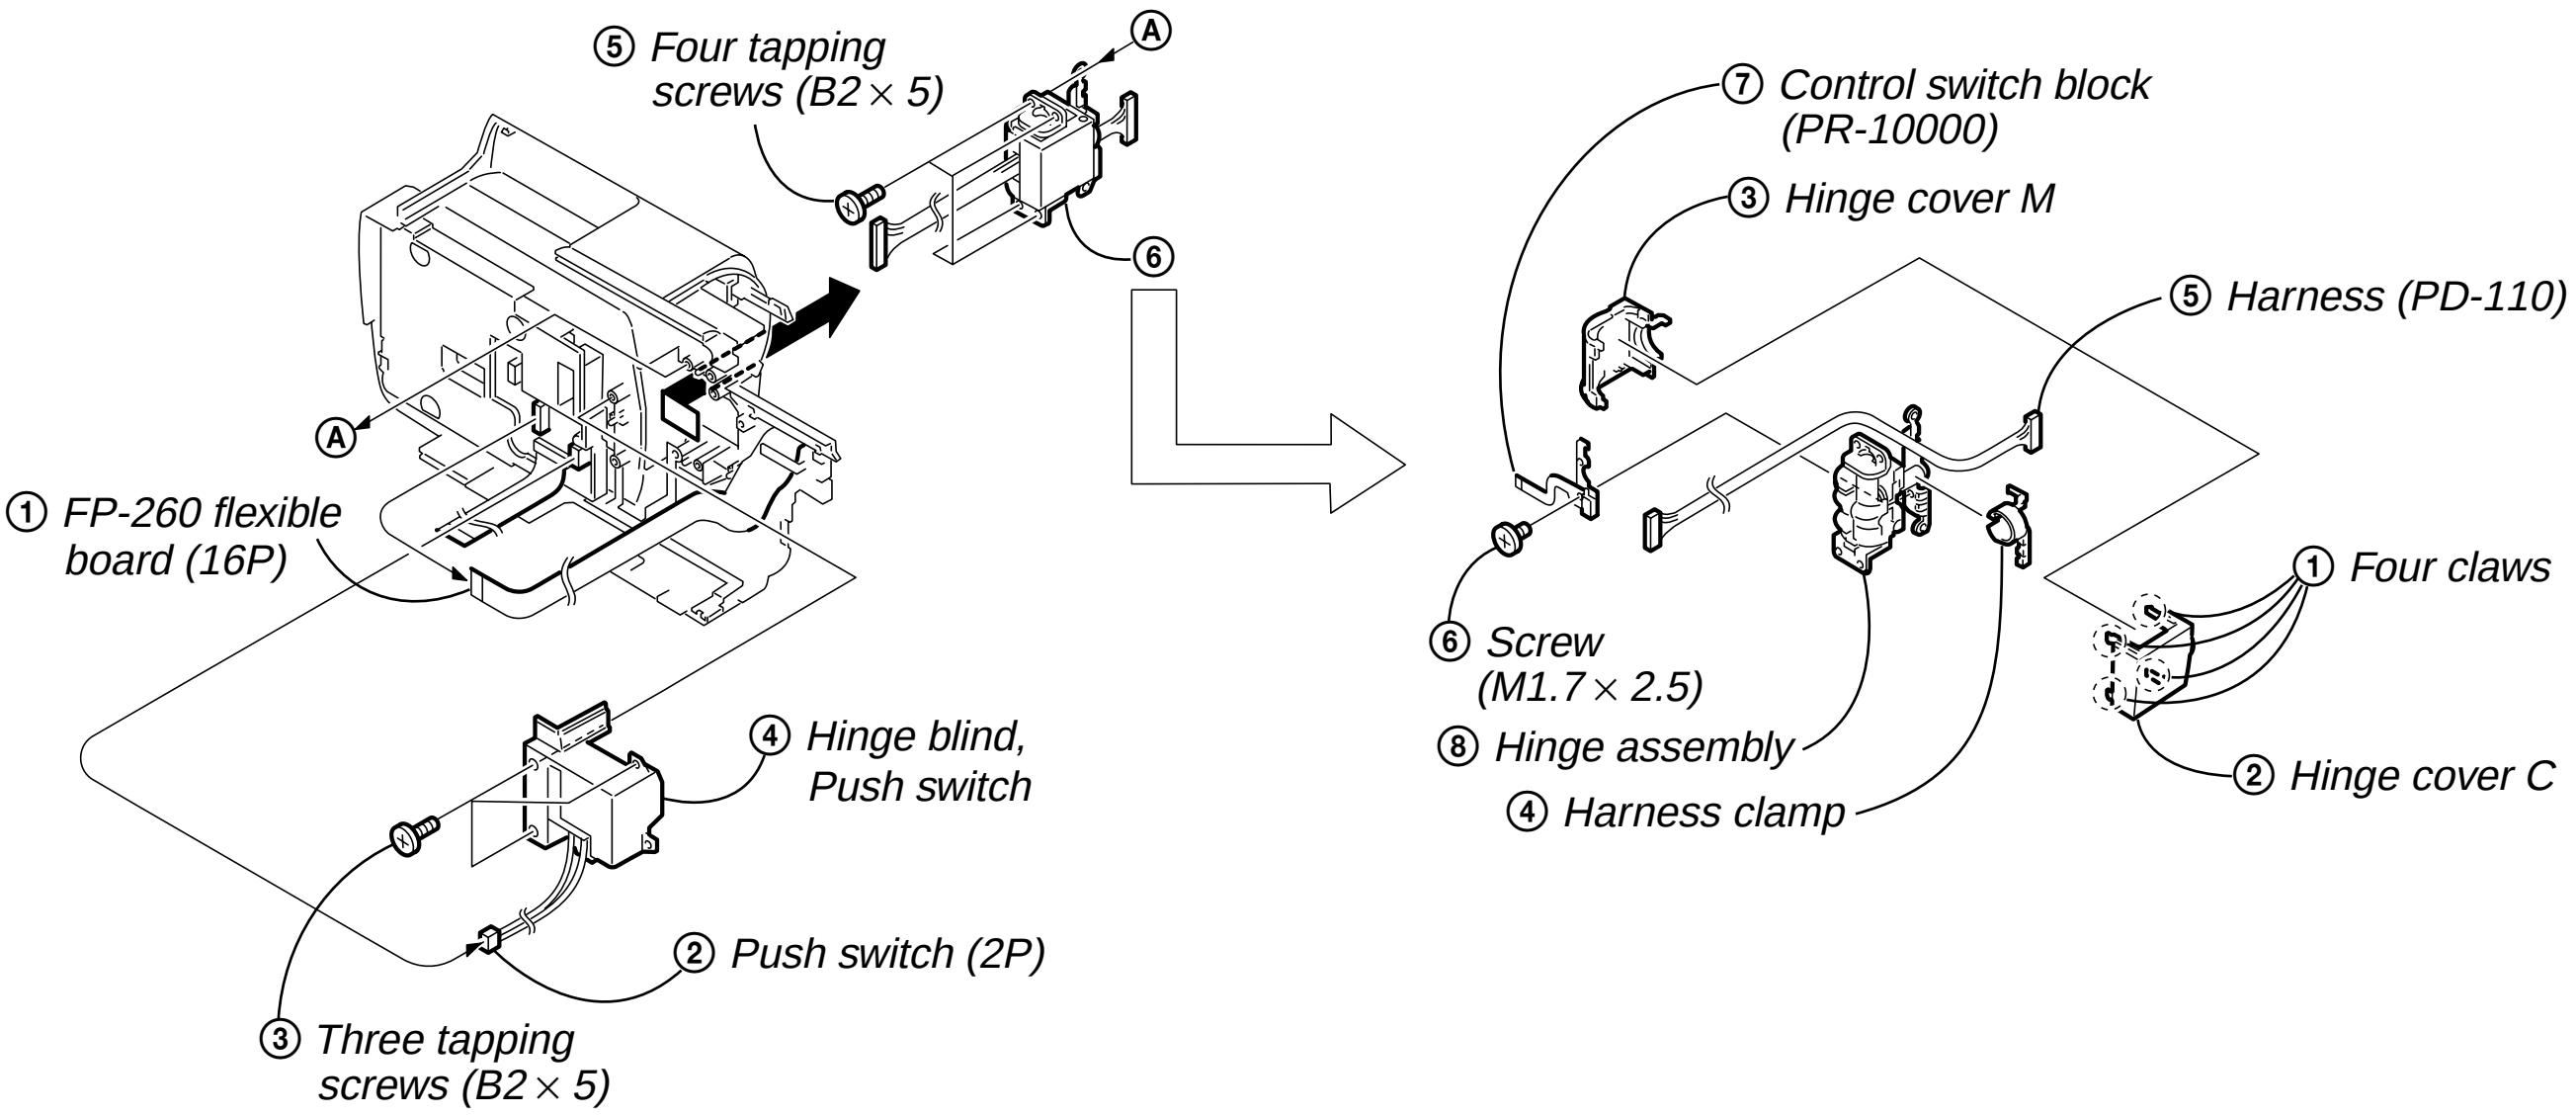
⑤ Four tapping screws (B2 × 5)
Ⓐ
⑥
Ⓐ
① FP-260 flexible board (16P)
④ Hinge blind, Push switch
② Push switch (2P)
③ Three tapping screws (B2 × 5)
⑦ Control switch block (PR-10000)
③ Hinge cover M
⑤ Harness (PD-110)
① Four claws
⑥ Screw (M1.7 × 2.5)
⑧ Hinge assembly
④ Harness clamp
② Hinge cover C

## 2-14. CIRCUIT BOARDS LOCATION

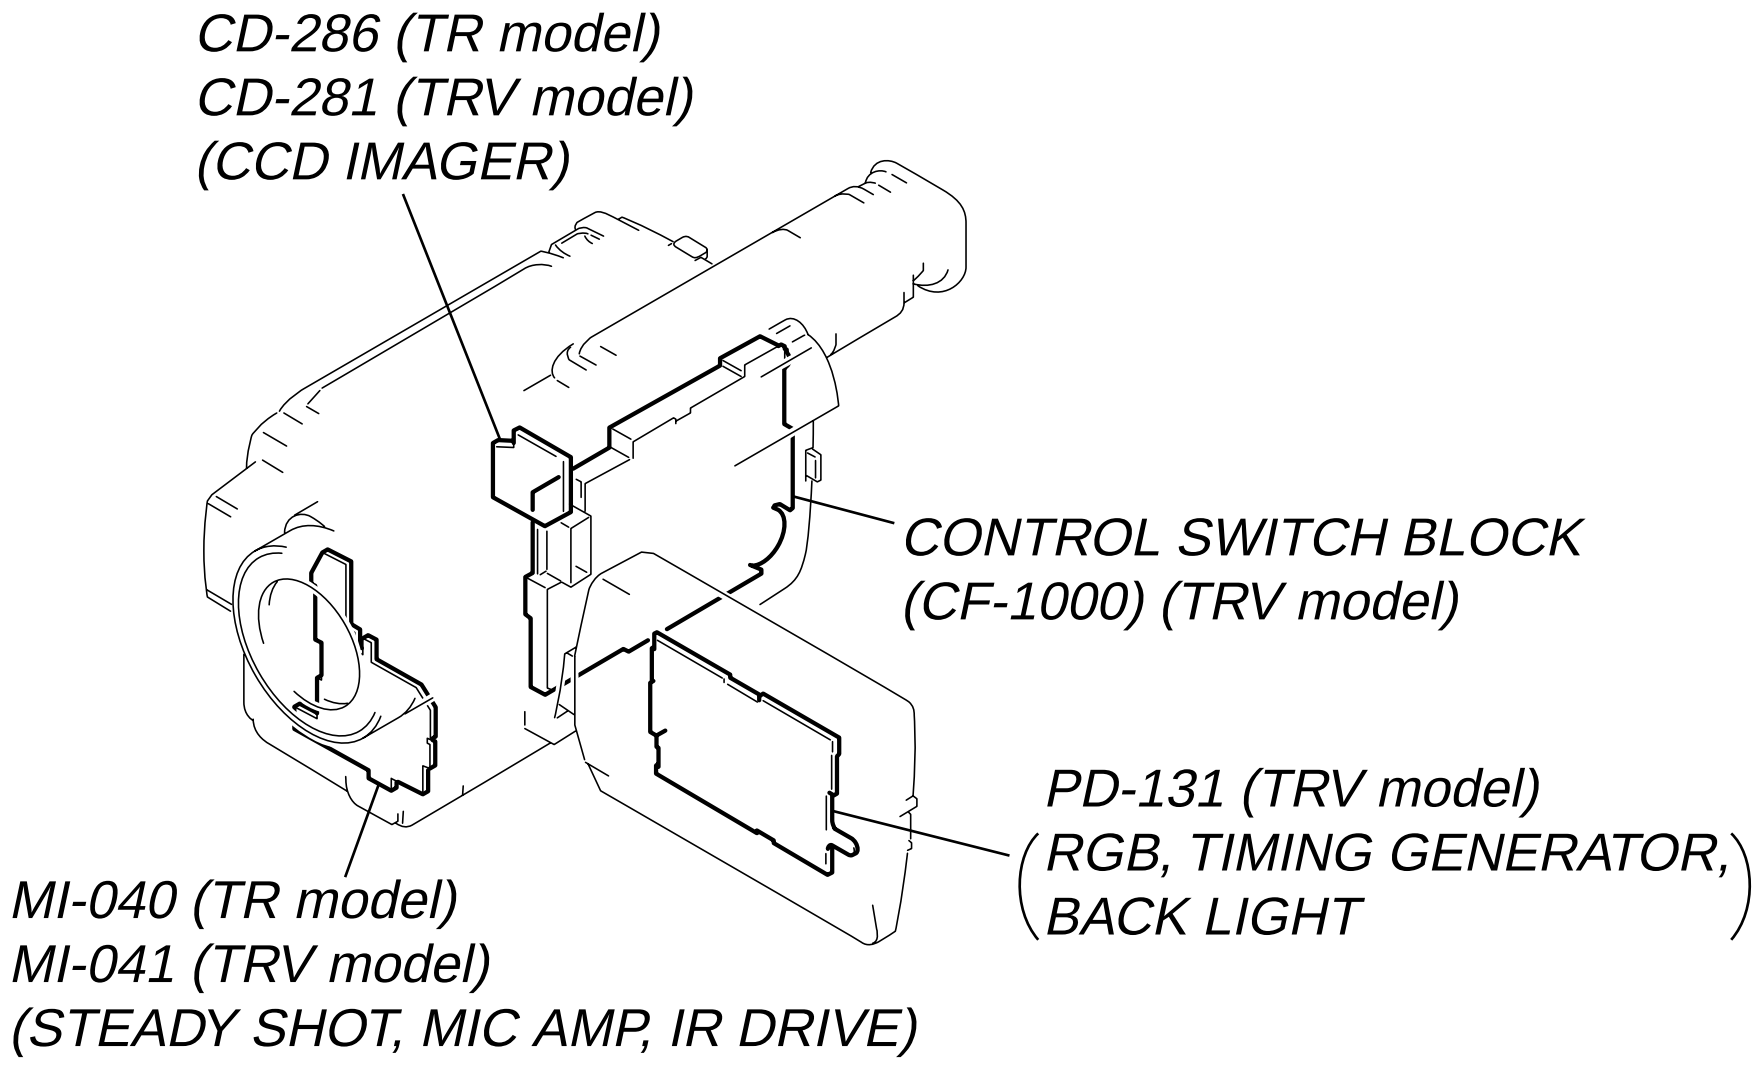
CD-286 (TR model)
CD-281 (TRV model)
(CCD IMAGER)
CONTROL SWITCH BLOCK
(CF-1000) (TRV model)
PD-131 (TRV model)
(RGB, TIMING GENERATOR,
BACK LIGHT)
MI-040 (TR model)
MI-041 (TRV model)
(STEADY SHOT, MIC AMP, IR DRIVE)

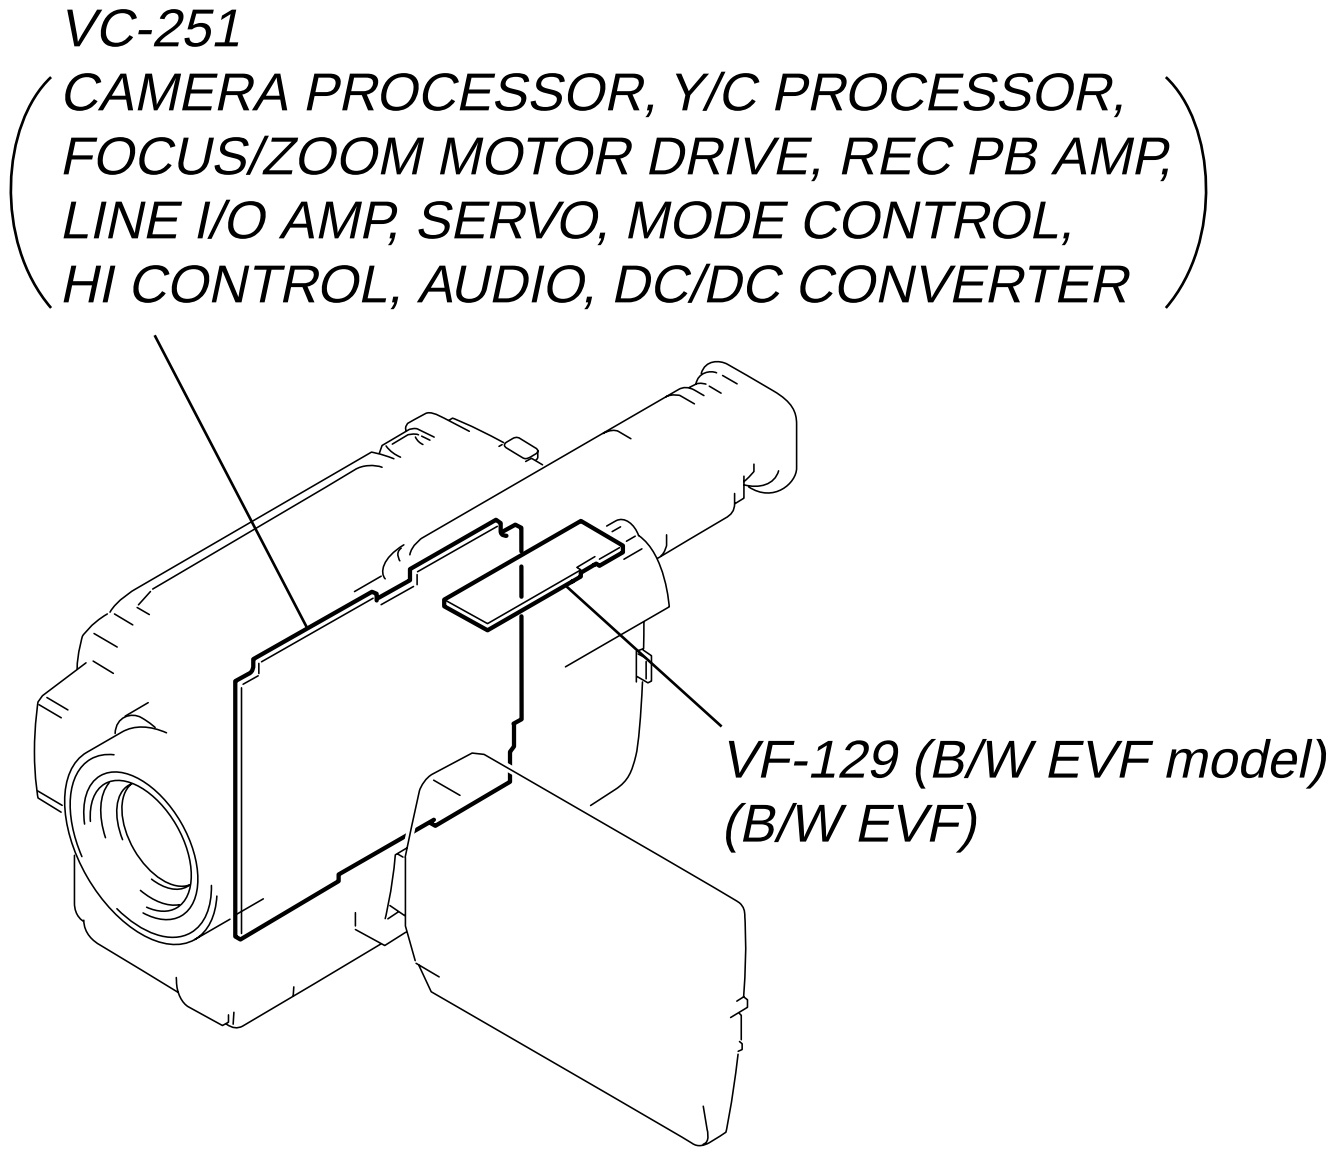
VC-251
(CAMERA PROCESSOR, Y/C PROCESSOR,
FOCUS/ZOOM MOTOR DRIVE, REC PB AMP,
LINE I/O AMP, SERVO, MODE CONTROL,
HI CONTROL, AUDIO, DC/DC CONVERTER)
VF-129 (B/W EVF model)
(B/W EVF)

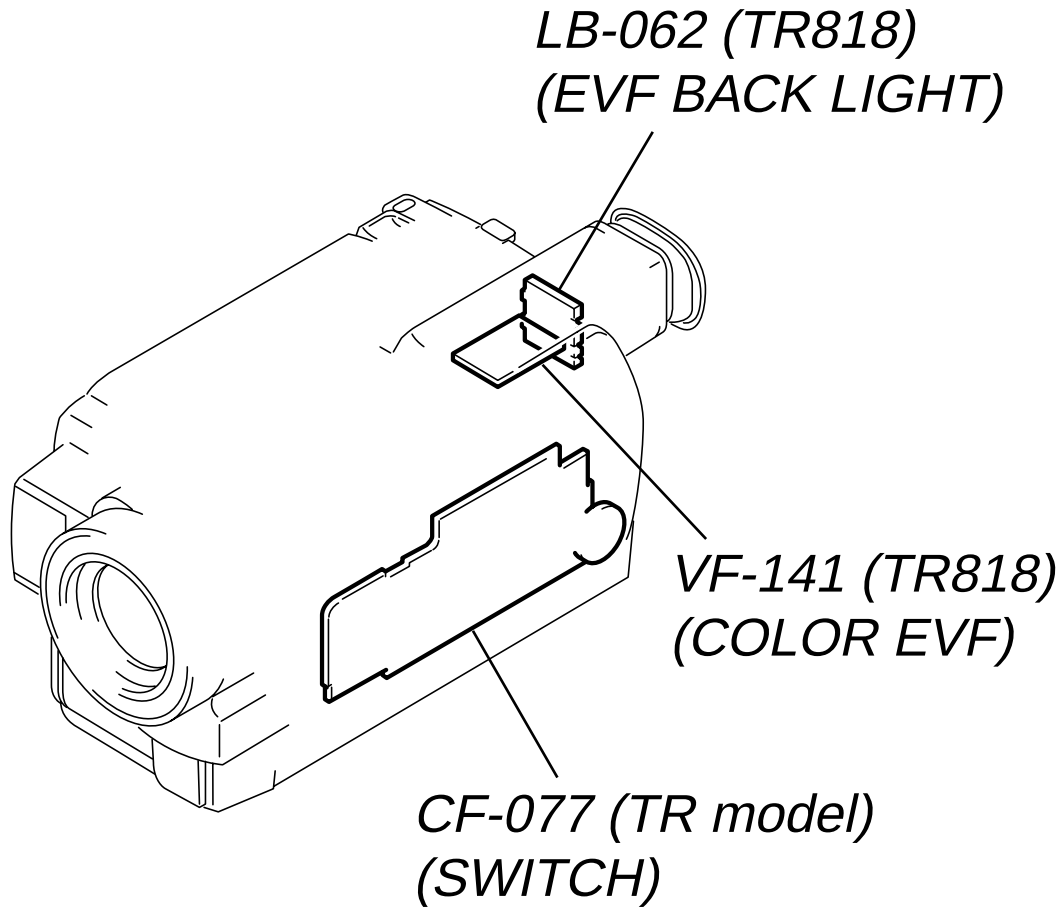
LB-062 (TR818)
(EVF BACK LIGHT)
VF-141 (TR818)
(COLOR EVF)
CF-077 (TR model)
(SWITCH)

## 2-15. FLEXIBLE BOARDS LOCATION

The flexible boards contained in the mechanism deck are not shown.

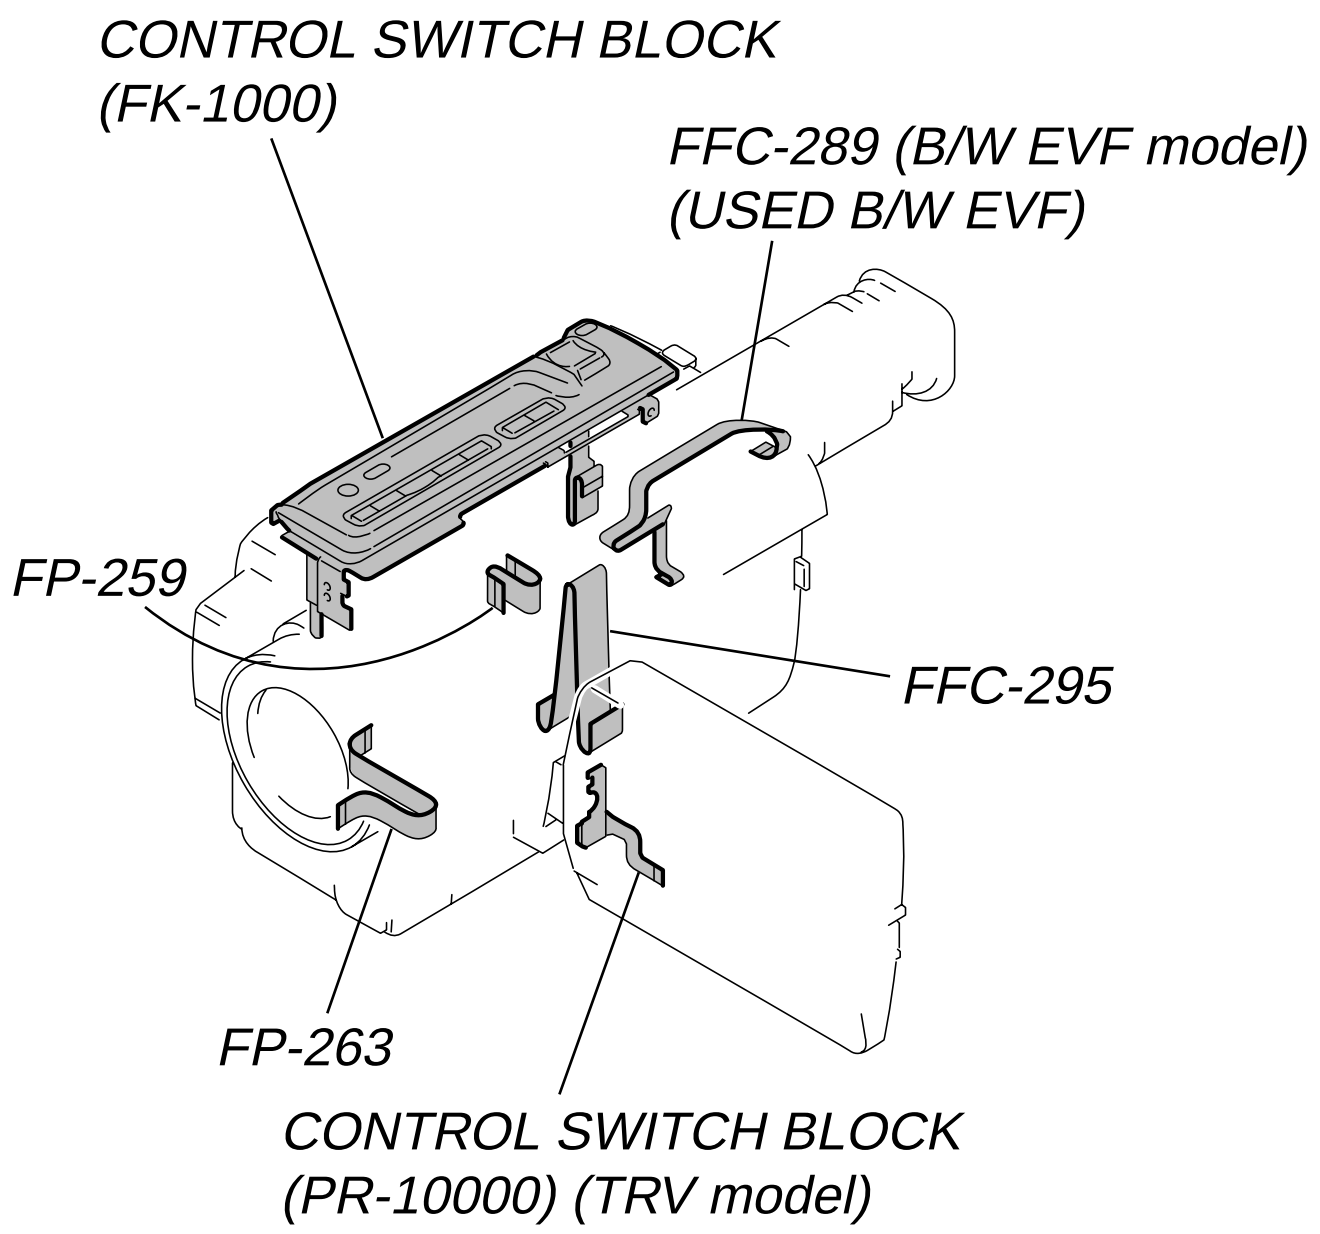
CONTROL SWITCH BLOCK
(FK-1000)
FFC-289 (B/W EVF model)
(USED B/W EVF)
FP-259
FFC-295
FP-263
CONTROL SWITCH BLOCK
(PR-10000) (TRV model)

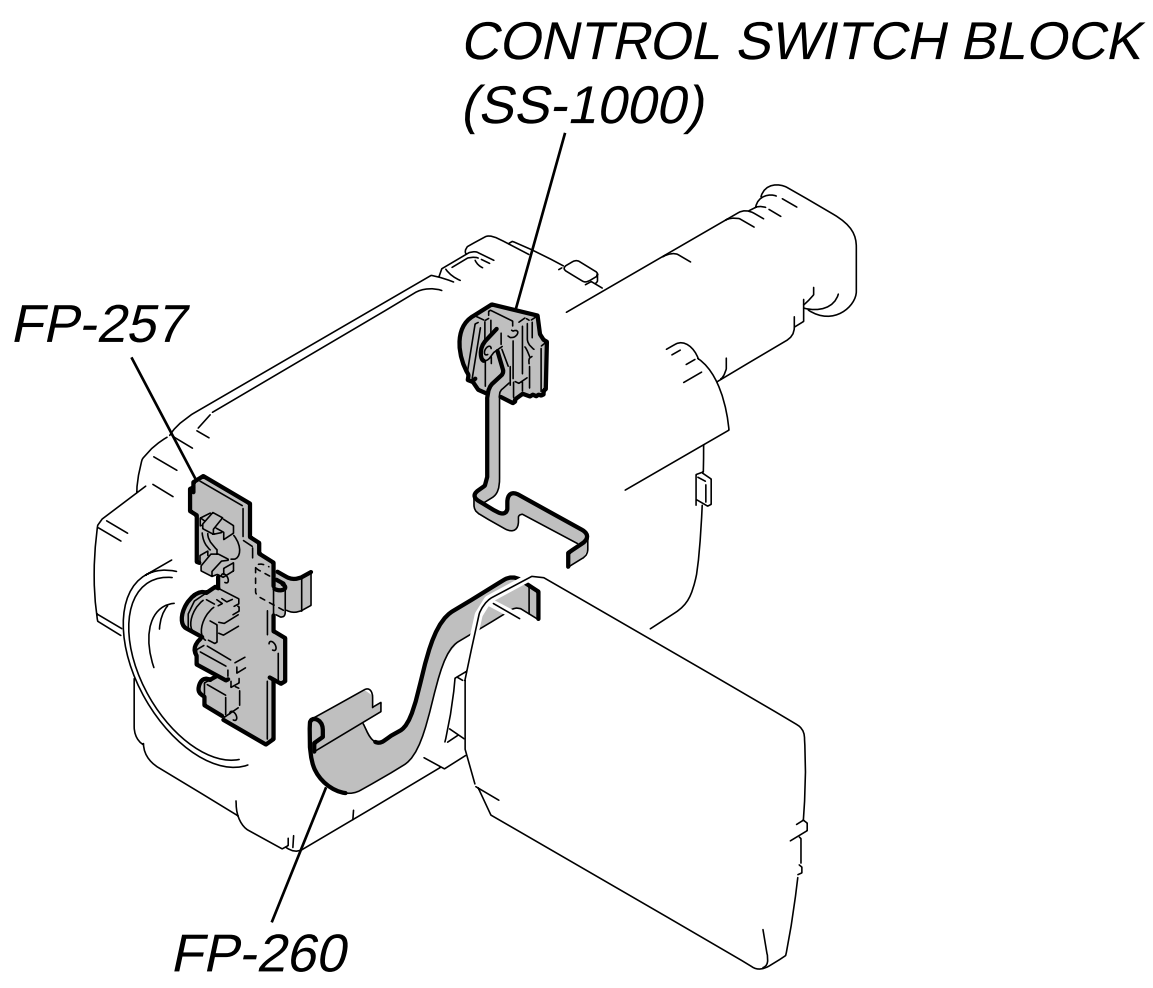
CONTROL SWITCH BLOCK
(SS-1000)
FP-257
FP-260

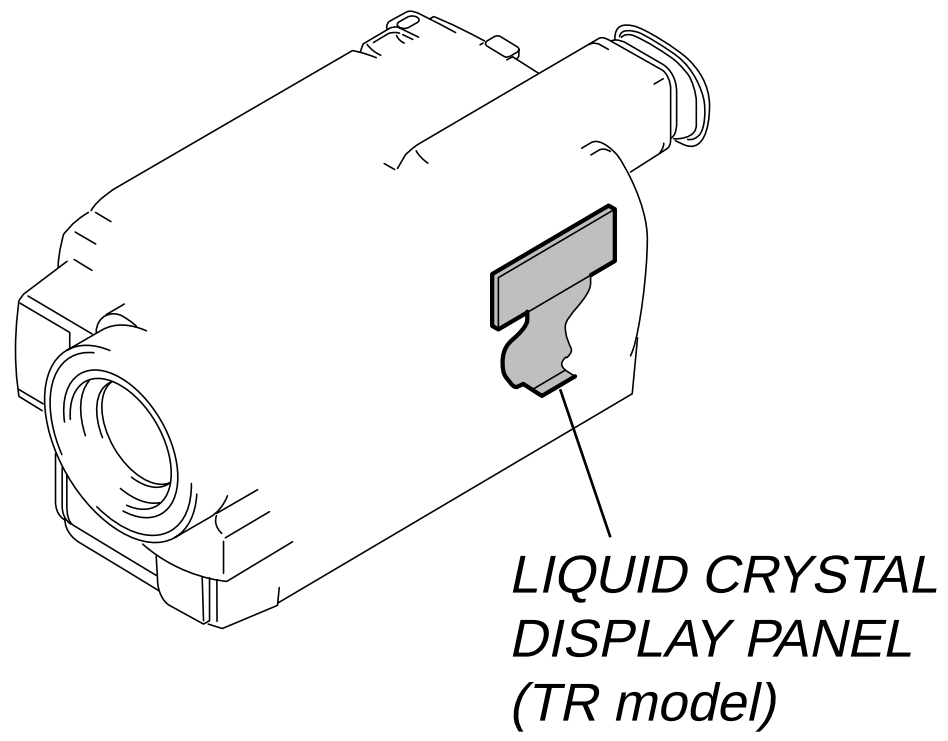
LIQUID CRYSTAL
DISPLAY PANEL
(TR model)

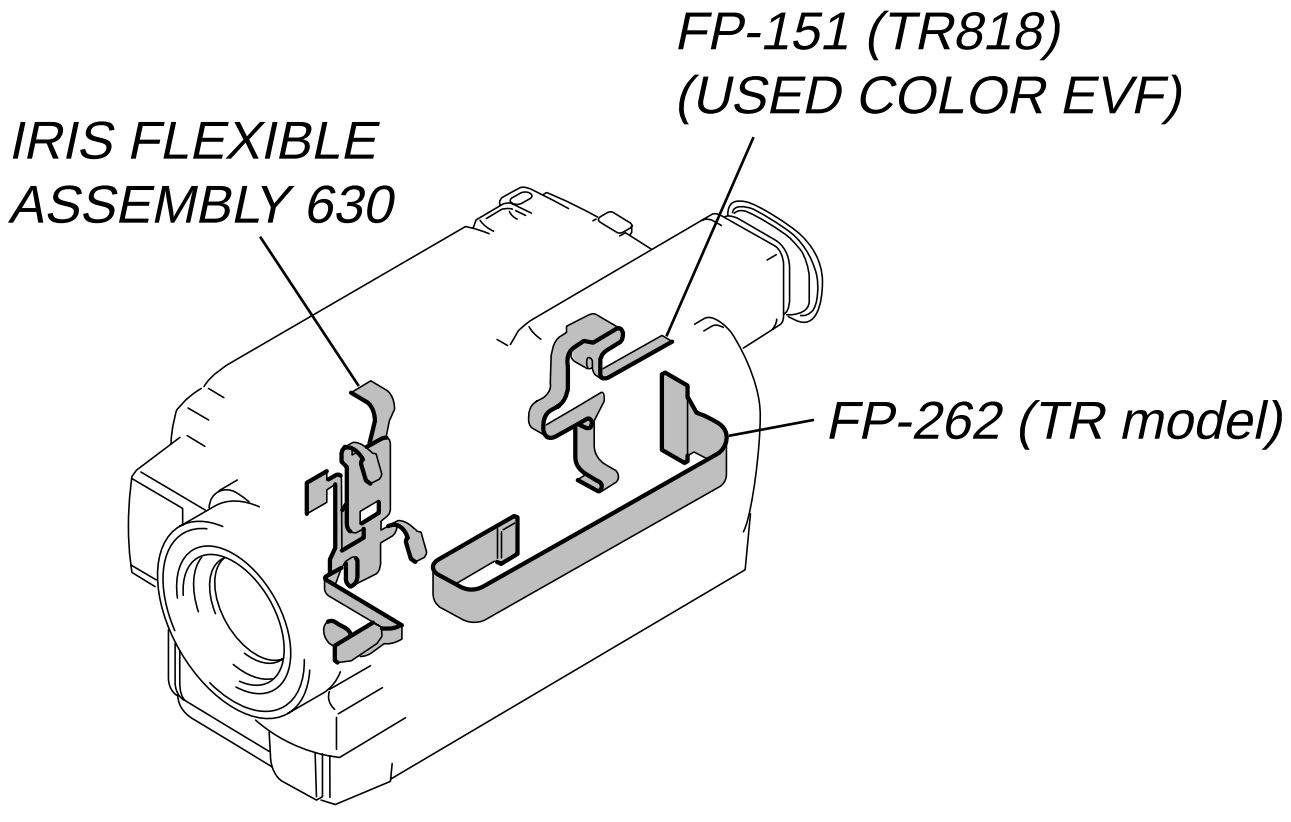
FP-151 (TR818)
(USED COLOR EVF)
IRIS FLEXIBLE
ASSEMBLY 630
FP-262 (TR model)

# SECTION 3
# BLOCK DIAGRAMS

## 3-1. OVERALL BLOCK DIAGRAM (1/2)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

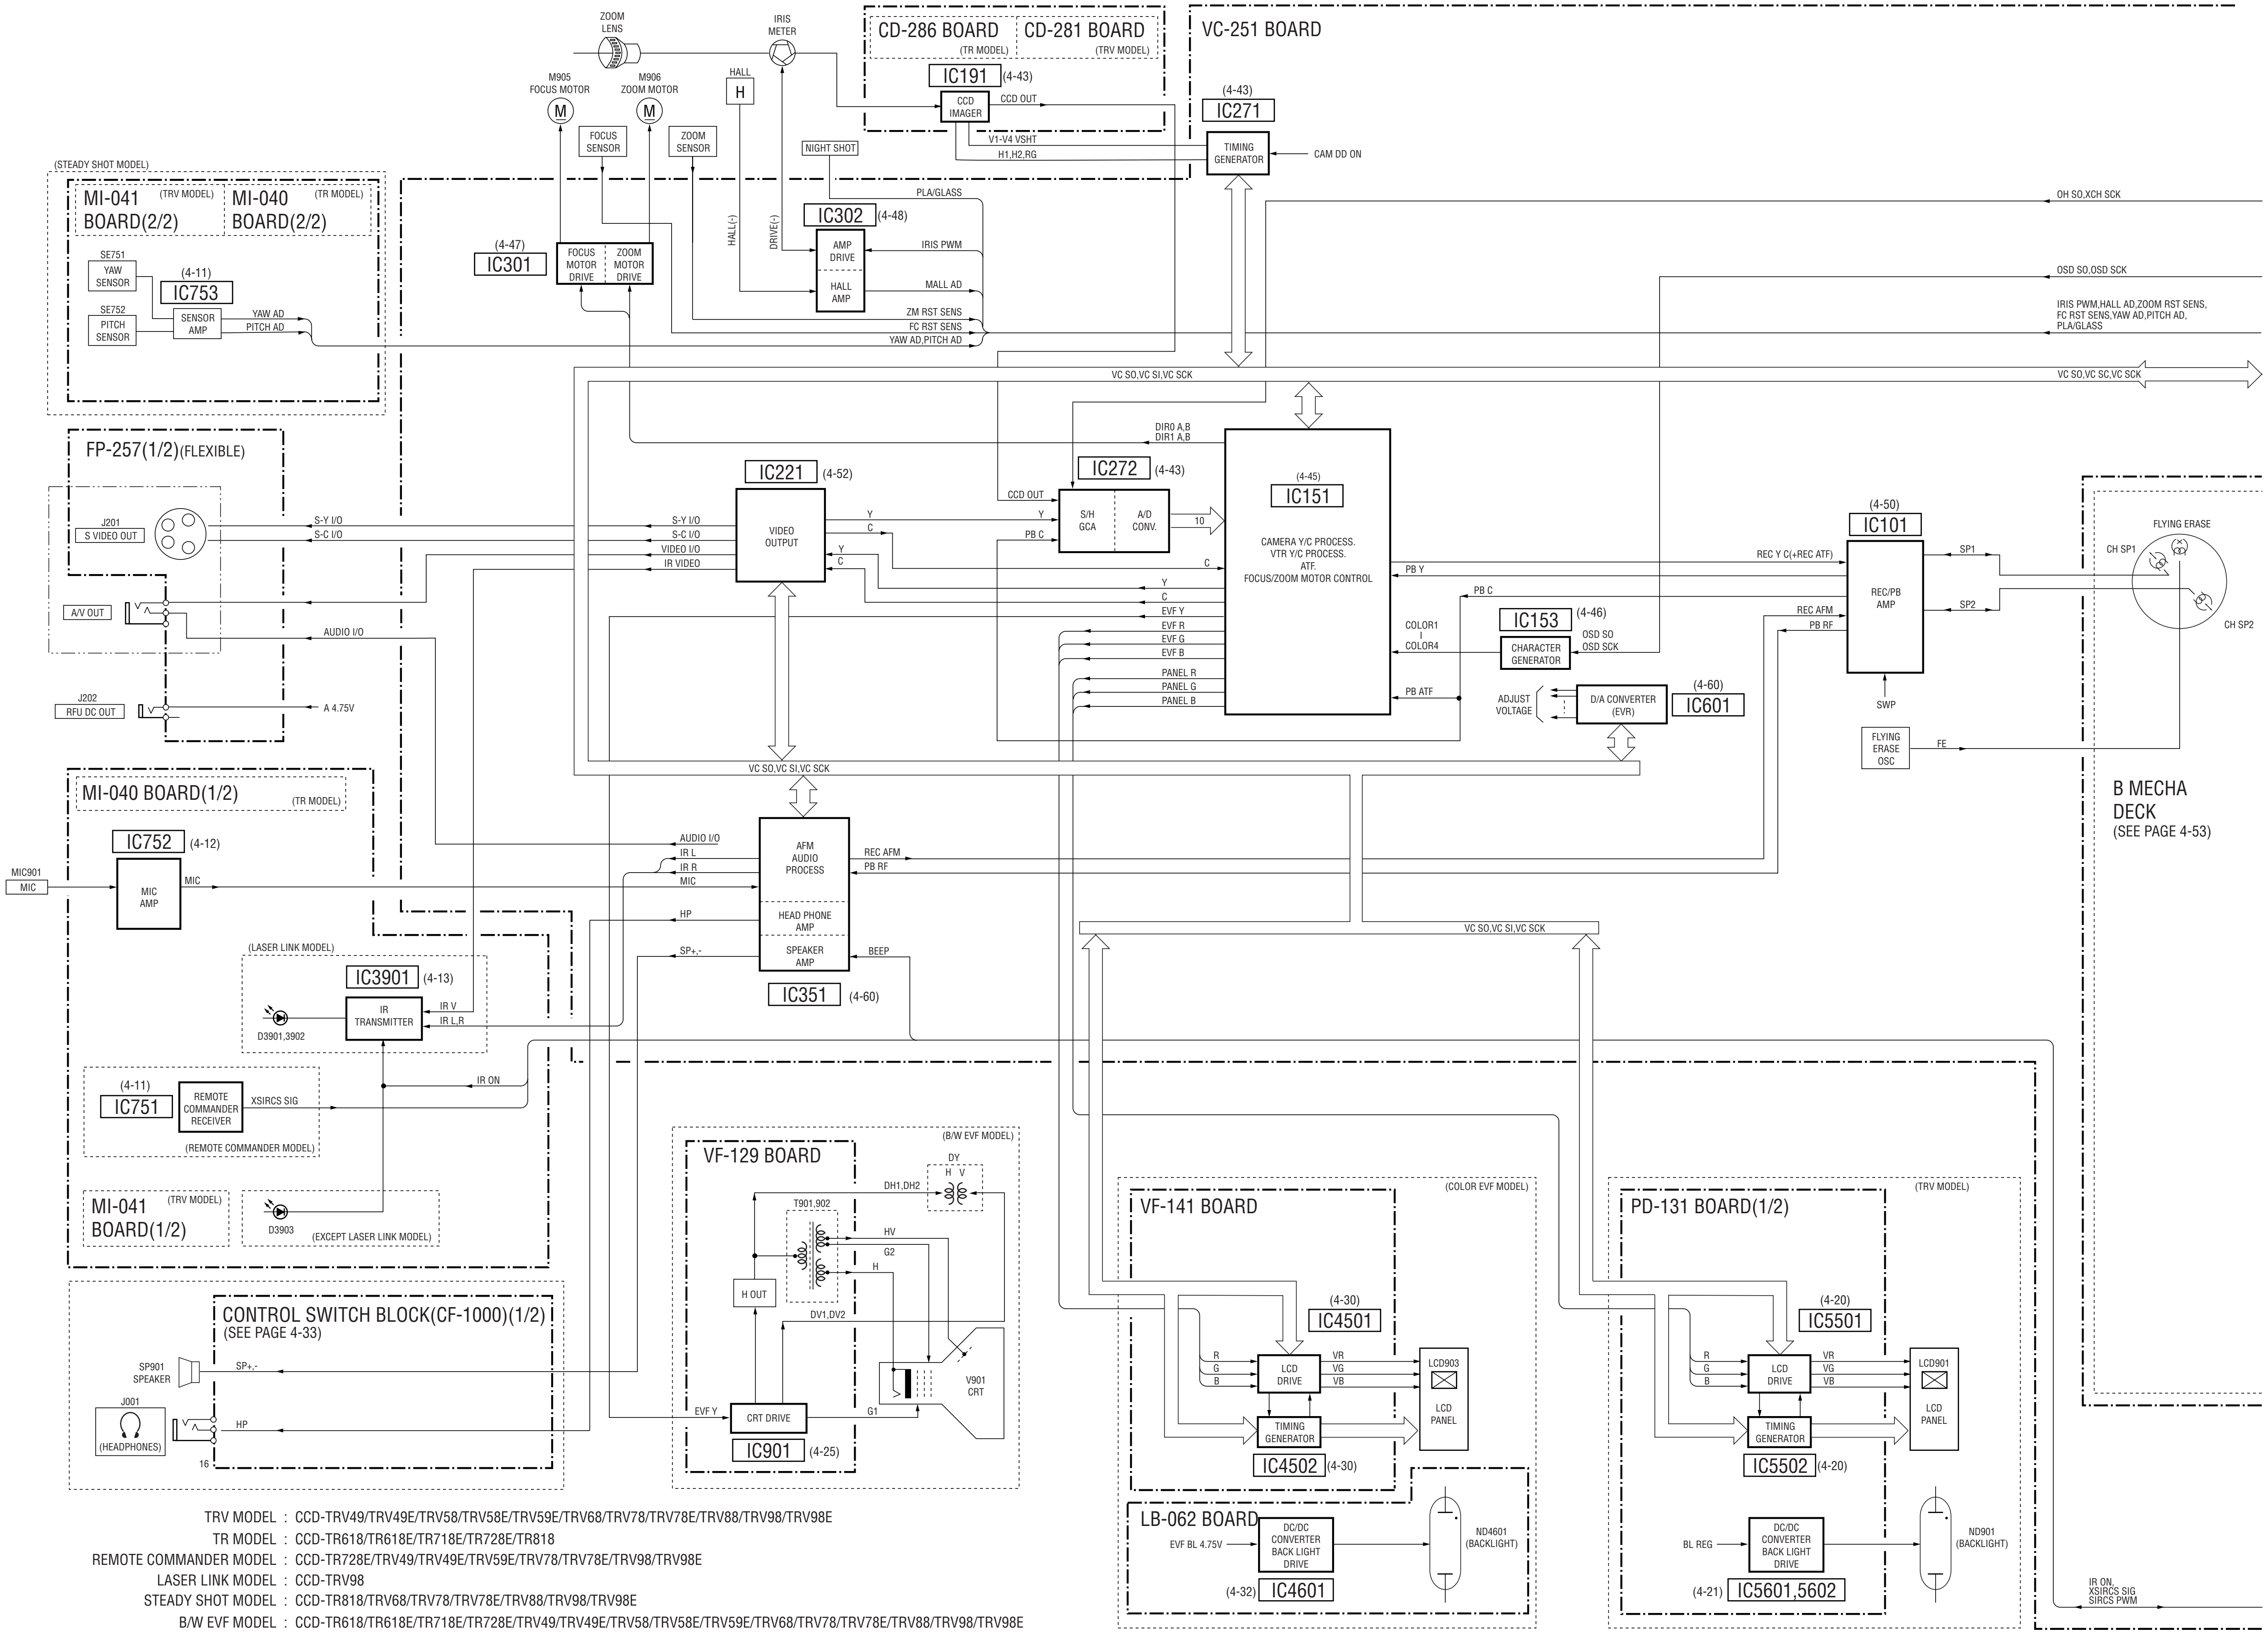
ZOOM LENS
IRIS METER
M905 FOCUS MOTOR
M906 ZOOM MOTOR
HALL
H
M
FOCUS SENSOR
ZOOM SENSOR
NIGHT SHOT
CD-286 BOARD
(TR MODEL)
CD-281 BOARD
(TRV MODEL)
IC191
(4-43)
CCD IMAGER
CCD OUT
V1-V4 VSHT
H1,H2,RG
VC-251 BOARD
(4-43)
IC271
TIMING GENERATOR
CAM DD ON
(STEADY SHOT MODEL)
MI-041
(TRV MODEL)
BOARD(2/2)
MI-040
(TR MODEL)
BOARD(2/2)
SE751
YAW SENSOR
(4-11)
IC753
SE752
PITCH SENSOR
SENSOR AMP
YAW AD
PITCH AD
(4-47)
IC301
FOCUS MOTOR DRIVE
ZOOM MOTOR DRIVE
HALL(-)
DRIVE(-)
IC302
(4-48)
AMP DRIVE
HALL AMP
PLA/GLASS
IRIS PWM
MALL AD
ZM RST SENS
FC RST SENS
YAW AD,PITCH AD
OH SO,XCH SCK
OSD SO,OSD SCK
IRIS PWM,HALL AD,ZOOM RST SENS,
FC RST SENS,YAW AD,PITCH AD,
PLA/GLASS
VC SO,VC SI,VC SCK
VC SO,VC SC,VC SCK
FP-257(1/2)(FLEXIBLE)
J201
S VIDEO OUT
S-Y I/O
S-C I/O
A/V OUT
AUDIO I/O
J202
RFU DC OUT
A 4.75V
IC221
(4-52)
VIDEO OUTPUT
S-Y I/O
S-C I/O
VIDEO I/O
IR VIDEO
Y
C
Y
C
DIR0 A,B
DIR1 A,B
IC272
(4-43)
CCD OUT
Y
PB C
S/H GCA
A/D CONV.
10
(4-45)
IC151
CAMERA Y/C PROCESS.
VTR Y/C PROCESS.
ATF.
FOCUS/ZOOM MOTOR CONTROL
C
Y
C
EVF Y
EVF R
EVF G
EVF B
PANEL R
PANEL G
PANEL B
PB Y
PB C
COLOR1
I
COLOR4
PB ATF
IC153
(4-46)
CHARACTER GENERATOR
OSD SO
OSD SCK
ADJUST VOLTAGE
D/A CONVERTER (EVR)
(4-60)
IC601
(4-50)
IC101
REC/PB AMP
REC Y C(+REC ATF)
REC AFM
PB RF
SP1
SP2
SWP
FLYING ERASE OSC
FE
FLYING ERASE
CH SP1
CH SP2
B MECHA
DECK
(SEE PAGE 4-53)
MI-040 BOARD(1/2)
(TR MODEL)
IC752
(4-12)
MIC901
MIC
MIC AMP
MIC
AUDIO I/O
IR L
IR R
MIC
HP
SP+,-
AFM AUDIO PROCESS
HEAD PHONE AMP
SPEAKER AMP
REC AFM
PB RF
BEEP
IC351
(4-60)
(LASER LINK MODEL)
IC3901
(4-13)
IR TRANSMITTER
IR V
IR L,R
D3901,3902
IR ON
(4-11)
IC751
REMOTE COMMANDER RECEIVER
XSIRCS SIG
(REMOTE COMMANDER MODEL)
MI-041
(TRV MODEL)
BOARD(1/2)
D3903
(EXCEPT LASER LINK MODEL)
CONTROL SWITCH BLOCK(CF-1000)(1/2)
(SEE PAGE 4-33)
SP901 SPEAKER
SP+,-
J001
(HEADPHONES)
HP
16
(B/W EVF MODEL)
VF-129 BOARD
DY
H V
DH1,DH2
T901,902
HV
G2
H
H OUT
DV1,DV2
V901 CRT
EVF Y
CRT DRIVE
G1
IC901
(4-25)
(COLOR EVF MODEL)
VF-141 BOARD
(4-30)
IC4501
R
G
B
LCD DRIVE
VR
VG
VB
LCD903
LCD PANEL
TIMING GENERATOR
IC4502
(4-30)
LB-062 BOARD
EVF BL 4.75V
DC/DC CONVERTER BACK LIGHT DRIVE
ND4601 (BACKLIGHT)
(4-32)
IC4601
(TRV MODEL)
PD-131 BOARD(1/2)
(4-20)
IC5501
R
G
B
LCD DRIVE
VR
VG
VB
LCD901
LCD PANEL
TIMING GENERATOR
IC5502
(4-20)
BL REG
DC/DC CONVERTER BACK LIGHT DRIVE
ND901 (BACKLIGHT)
(4-21)
IC5601,5602
IR ON,
XSIRCS SIG
SIRCS PWM

TRV MODEL : CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
TR MODEL : CCD-TR618/TR618E/TR718E/TR728E/TR818
REMOTE COMMANDER MODEL : CCD-TR728E/TRV49/TRV49E/TRV59E/TRV78/TRV78E/TRV98/TRV98E
LASER LINK MODEL : CCD-TRV98
STEADY SHOT MODEL : CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
B/W EVF MODEL : CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
COLOR EVF MODEL : CCD-TR818

## 3-2. OVERALL BLOCK DIAGRAM (2/2)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

TRV MODEL : CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
TR MODEL : CCD-TR618/TR618E/TR718E/TR728E/TR818
VIDEO LIGHT MODEL : CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
COLOR EVF MODEL : CCD-TR818

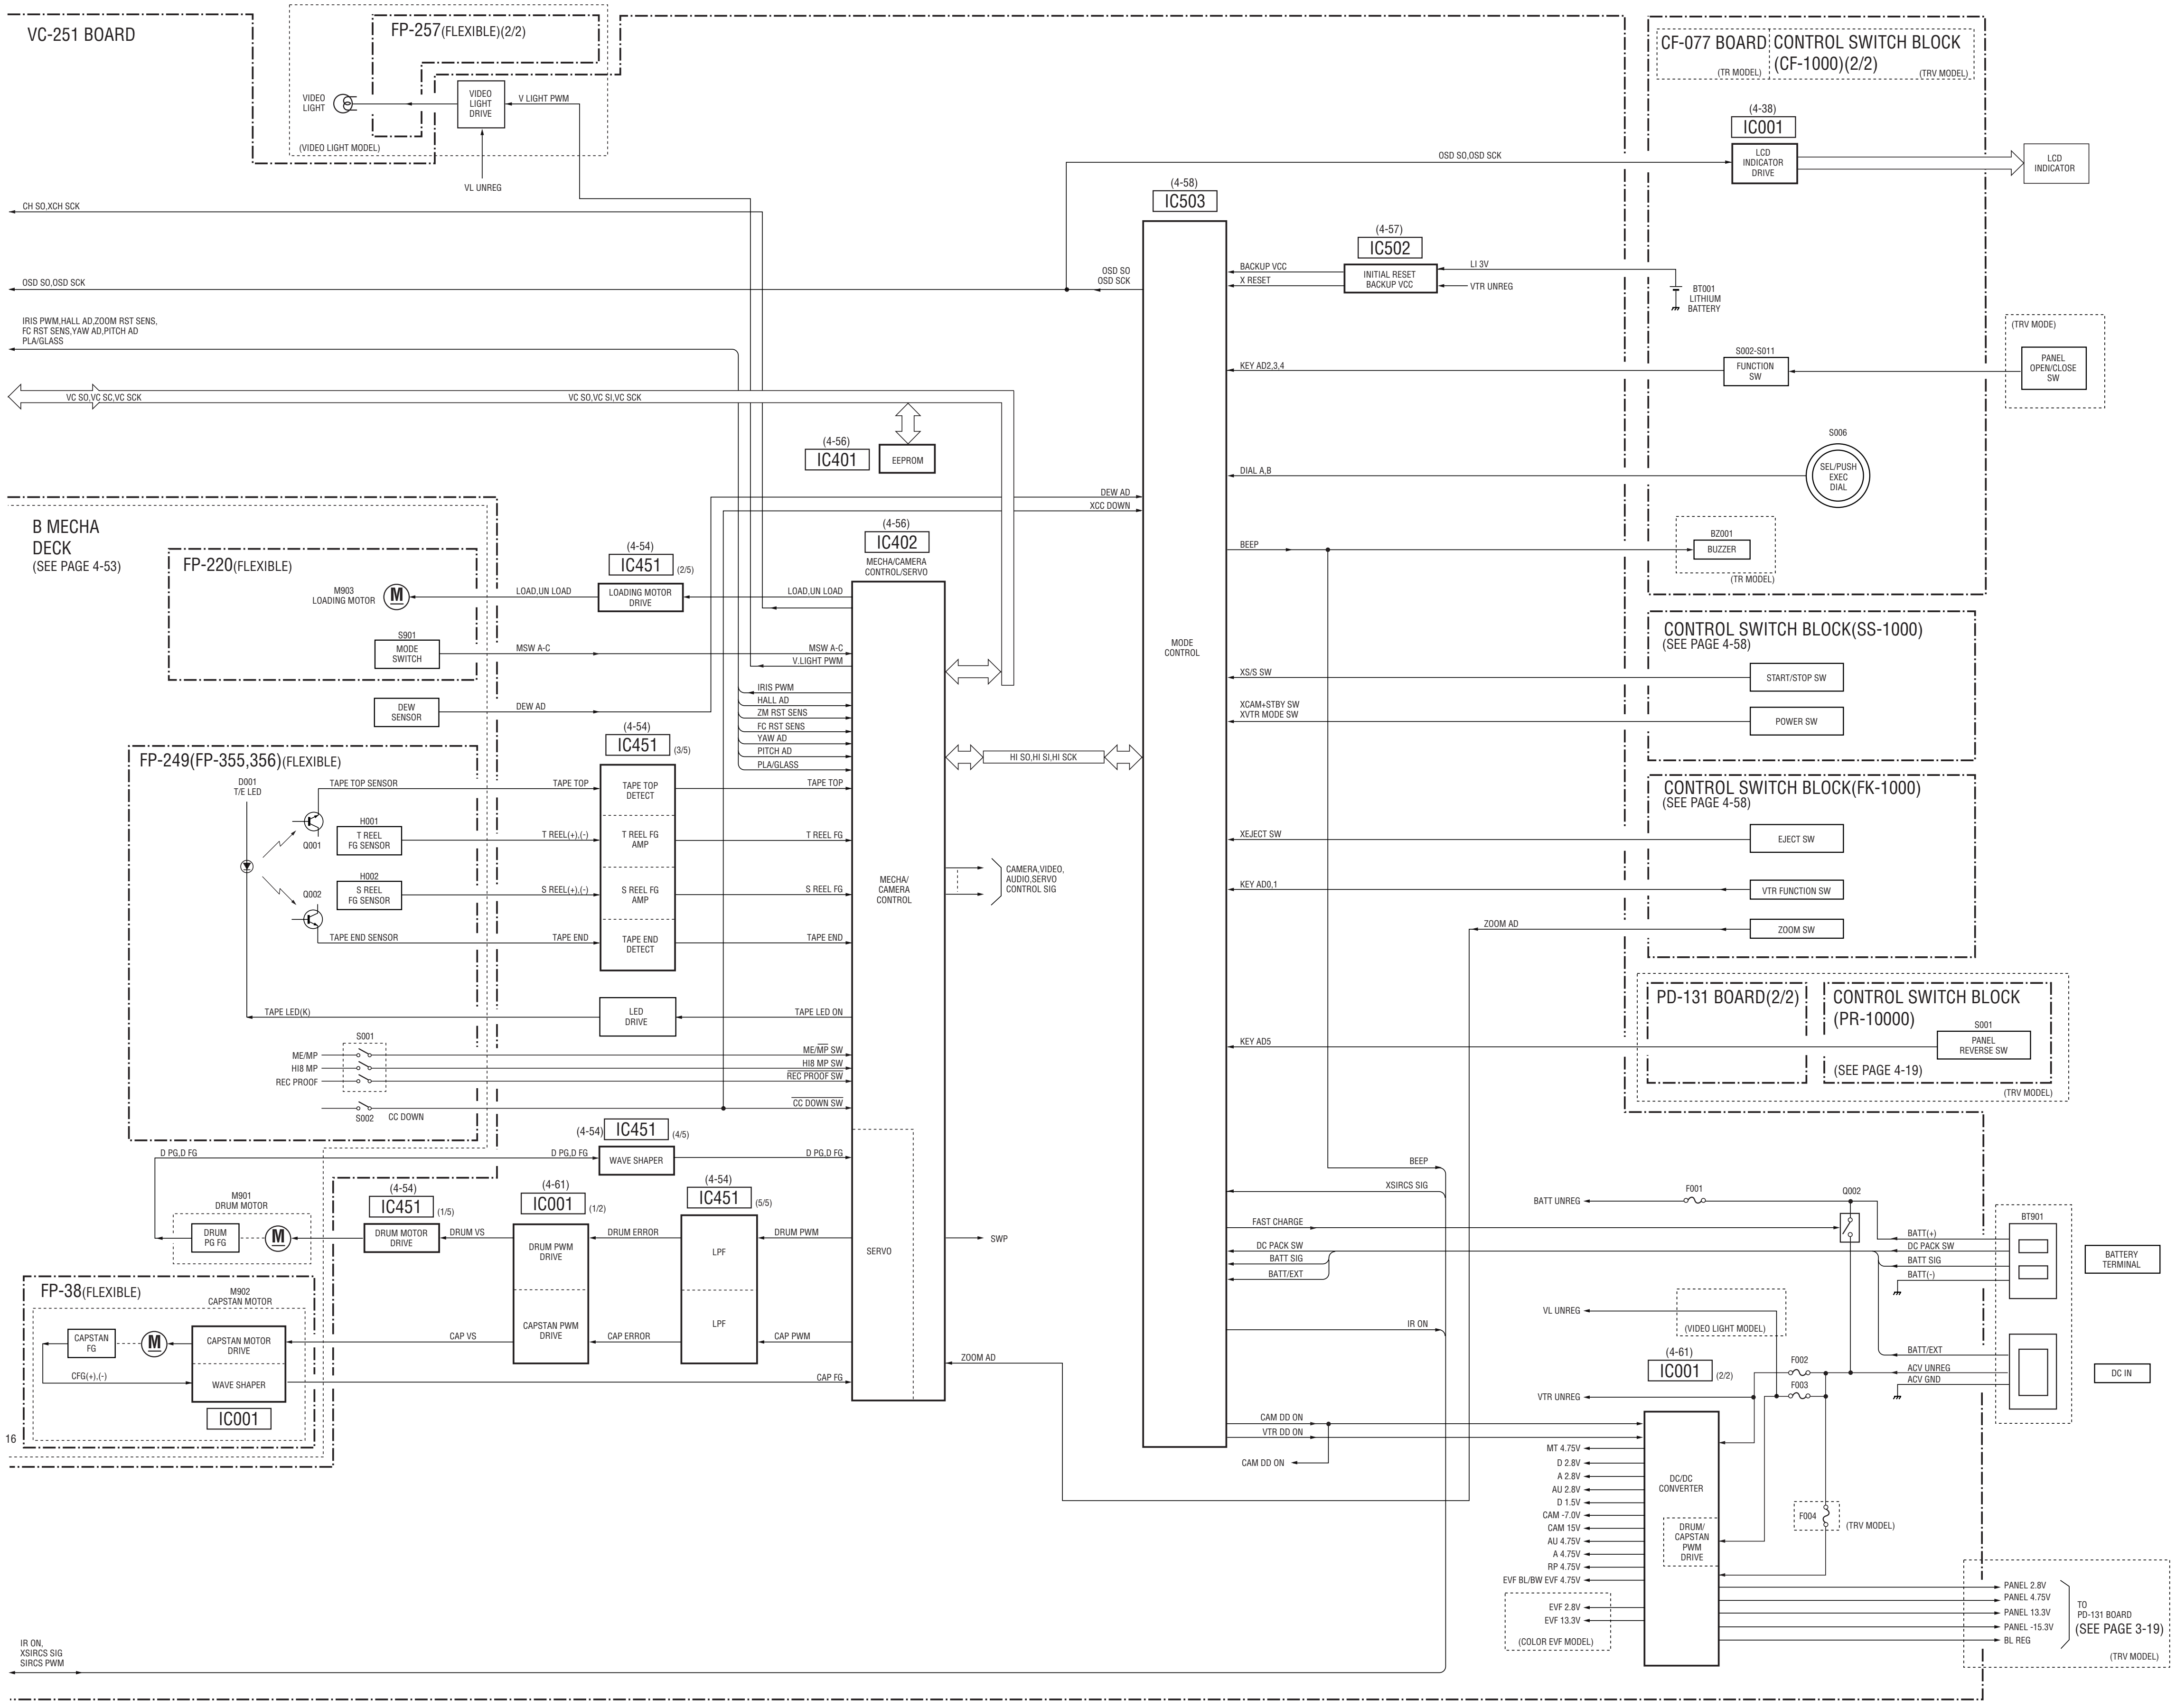
VC-251 BOARD
FP-257(FLEXIBLE)(2/2)
VIDEO LIGHT
VIDEO LIGHT DRIVE
V LIGHT PWM
(VIDEO LIGHT MODEL)
VL UNREG
CH SO,XCH SCK
OSD SO,OSD SCK
IRIS PWM,HALL AD,ZOOM RST SENS, FC RST SENS,YAW AD,PITCH AD PLA/GLASS
VC SO,VC SC,VC SCK
VC SO,VC SI,VC SCK
(4-56) IC401 EEPROM
B MECHA DECK (SEE PAGE 4-53)
FP-220(FLEXIBLE)
M903 LOADING MOTOR
S901 MODE SWITCH
DEW SENSOR
LOAD,UN LOAD
MSW A-C
DEW AD
(4-54) IC451 (2/5) LOADING MOTOR DRIVE
(4-56) IC402 MECHA/CAMERA CONTROL/SERVO
V.LIGHT PWM
IRIS PWM
HALL AD
ZM RST SENS
FC RST SENS
YAW AD
PITCH AD
PLA/GLASS
DEW AD
XCC DOWN
HI SO,HI SI,HI SCK
FP-249(FP-355,356)(FLEXIBLE)
D001 T/E LED
TAPE TOP SENSOR
Q001
H001 T REEL FG SENSOR
H002 S REEL FG SENSOR
Q002
TAPE END SENSOR
TAPE TOP
T REEL(+),(-)
S REEL(+),(-)
TAPE END
(4-54) IC451 (3/5)
TAPE TOP DETECT
T REEL FG AMP
S REEL FG AMP
TAPE END DETECT
T REEL FG
S REEL FG
MECHA/ CAMERA CONTROL
CAMERA,VIDEO, AUDIO,SERVO CONTROL SIG
TAPE LED(K)
LED DRIVE
TAPE LED ON
S001
ME/MP
HI8 MP
REC PROOF
S002 CC DOWN
ME/MP SW
HI8 MP SW
REC PROOF SW
CC DOWN SW
D PG,D FG
(4-54) IC451 (4/5) WAVE SHAPER
M901 DRUM MOTOR
DRUM PG FG
(4-54) IC451 (1/5) DRUM MOTOR DRIVE
DRUM VS
(4-61) IC001 (1/2)
DRUM PWM DRIVE
CAPSTAN PWM DRIVE
DRUM ERROR
CAP ERROR
(4-54) IC451 (5/5)
LPF
DRUM PWM
CAP PWM
SERVO
SWP
FP-38(FLEXIBLE)
M902 CAPSTAN MOTOR
CAPSTAN FG
CAPSTAN MOTOR DRIVE
WAVE SHAPER
IC001
CFG(+),(-)
CAP VS
CAP FG
ZOOM AD
16
IR ON, XSIRCS SIG SIRCS PWM
(4-58) IC503
MODE CONTROL
OSD SO OSD SCK
(4-57) IC502 INITIAL RESET BACKUP VCC
BACKUP VCC
X RESET
LI 3V
VTR UNREG
BT001 LITHIUM BATTERY
KEY AD2,3,4
DIAL A,B
BEEP
XS/S SW
XCAM+STBY SW XVTR MODE SW
XEJECT SW
KEY AD0,1
ZOOM AD
KEY AD5
CF-077 BOARD (TR MODEL)
CONTROL SWITCH BLOCK (CF-1000)(2/2) (TRV MODEL)
(4-38) IC001 LCD INDICATOR DRIVE
LCD INDICATOR
S002-S011 FUNCTION SW
(TRV MODE) PANEL OPEN/CLOSE SW
S006 SEL/PUSH EXEC DIAL
BZ001 BUZZER (TR MODEL)
CONTROL SWITCH BLOCK(SS-1000) (SEE PAGE 4-58)
START/STOP SW
POWER SW
CONTROL SWITCH BLOCK(FK-1000) (SEE PAGE 4-58)
EJECT SW
VTR FUNCTION SW
ZOOM SW
PD-131 BOARD(2/2)
CONTROL SWITCH BLOCK (PR-10000)
S001 PANEL REVERSE SW
(SEE PAGE 4-19)
(TRV MODEL)
BEEP
XSIRCS SIG
FAST CHARGE
DC PACK SW
BATT SIG
BATT/EXT
IR ON
CAM DD ON
VTR DD ON
CAM DD ON
BATT UNREG
F001
Q002
BT901
BATT(+)
DC PACK SW
BATT SIG
BATT(-)
BATTERY TERMINAL
VL UNREG
(VIDEO LIGHT MODEL)
(4-61) IC001 (2/2)
F002
F003
BATT/EXT
ACV UNREG
ACV GND
DC IN
VTR UNREG
DC/DC CONVERTER
DRUM/ CAPSTAN PWM DRIVE
F004 (TRV MODEL)
MT 4.75V
D 2.8V
A 2.8V
AU 2.8V
D 1.5V
CAM -7.0V
CAM 15V
AU 4.75V
A 4.75V
RP 4.75V
EVF BL/BW EVF 4.75V
EVF 2.8V
EVF 13.3V
(COLOR EVF MODEL)
PANEL 2.8V
PANEL 4.75V
PANEL 13.3V
PANEL -15.3V
BL REG
TO PD-131 BOARD (SEE PAGE 3-19)
(TRV MODEL)

## 3-3. CAMERA/VIDEO BLOCK DIAGRAM (1/2)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

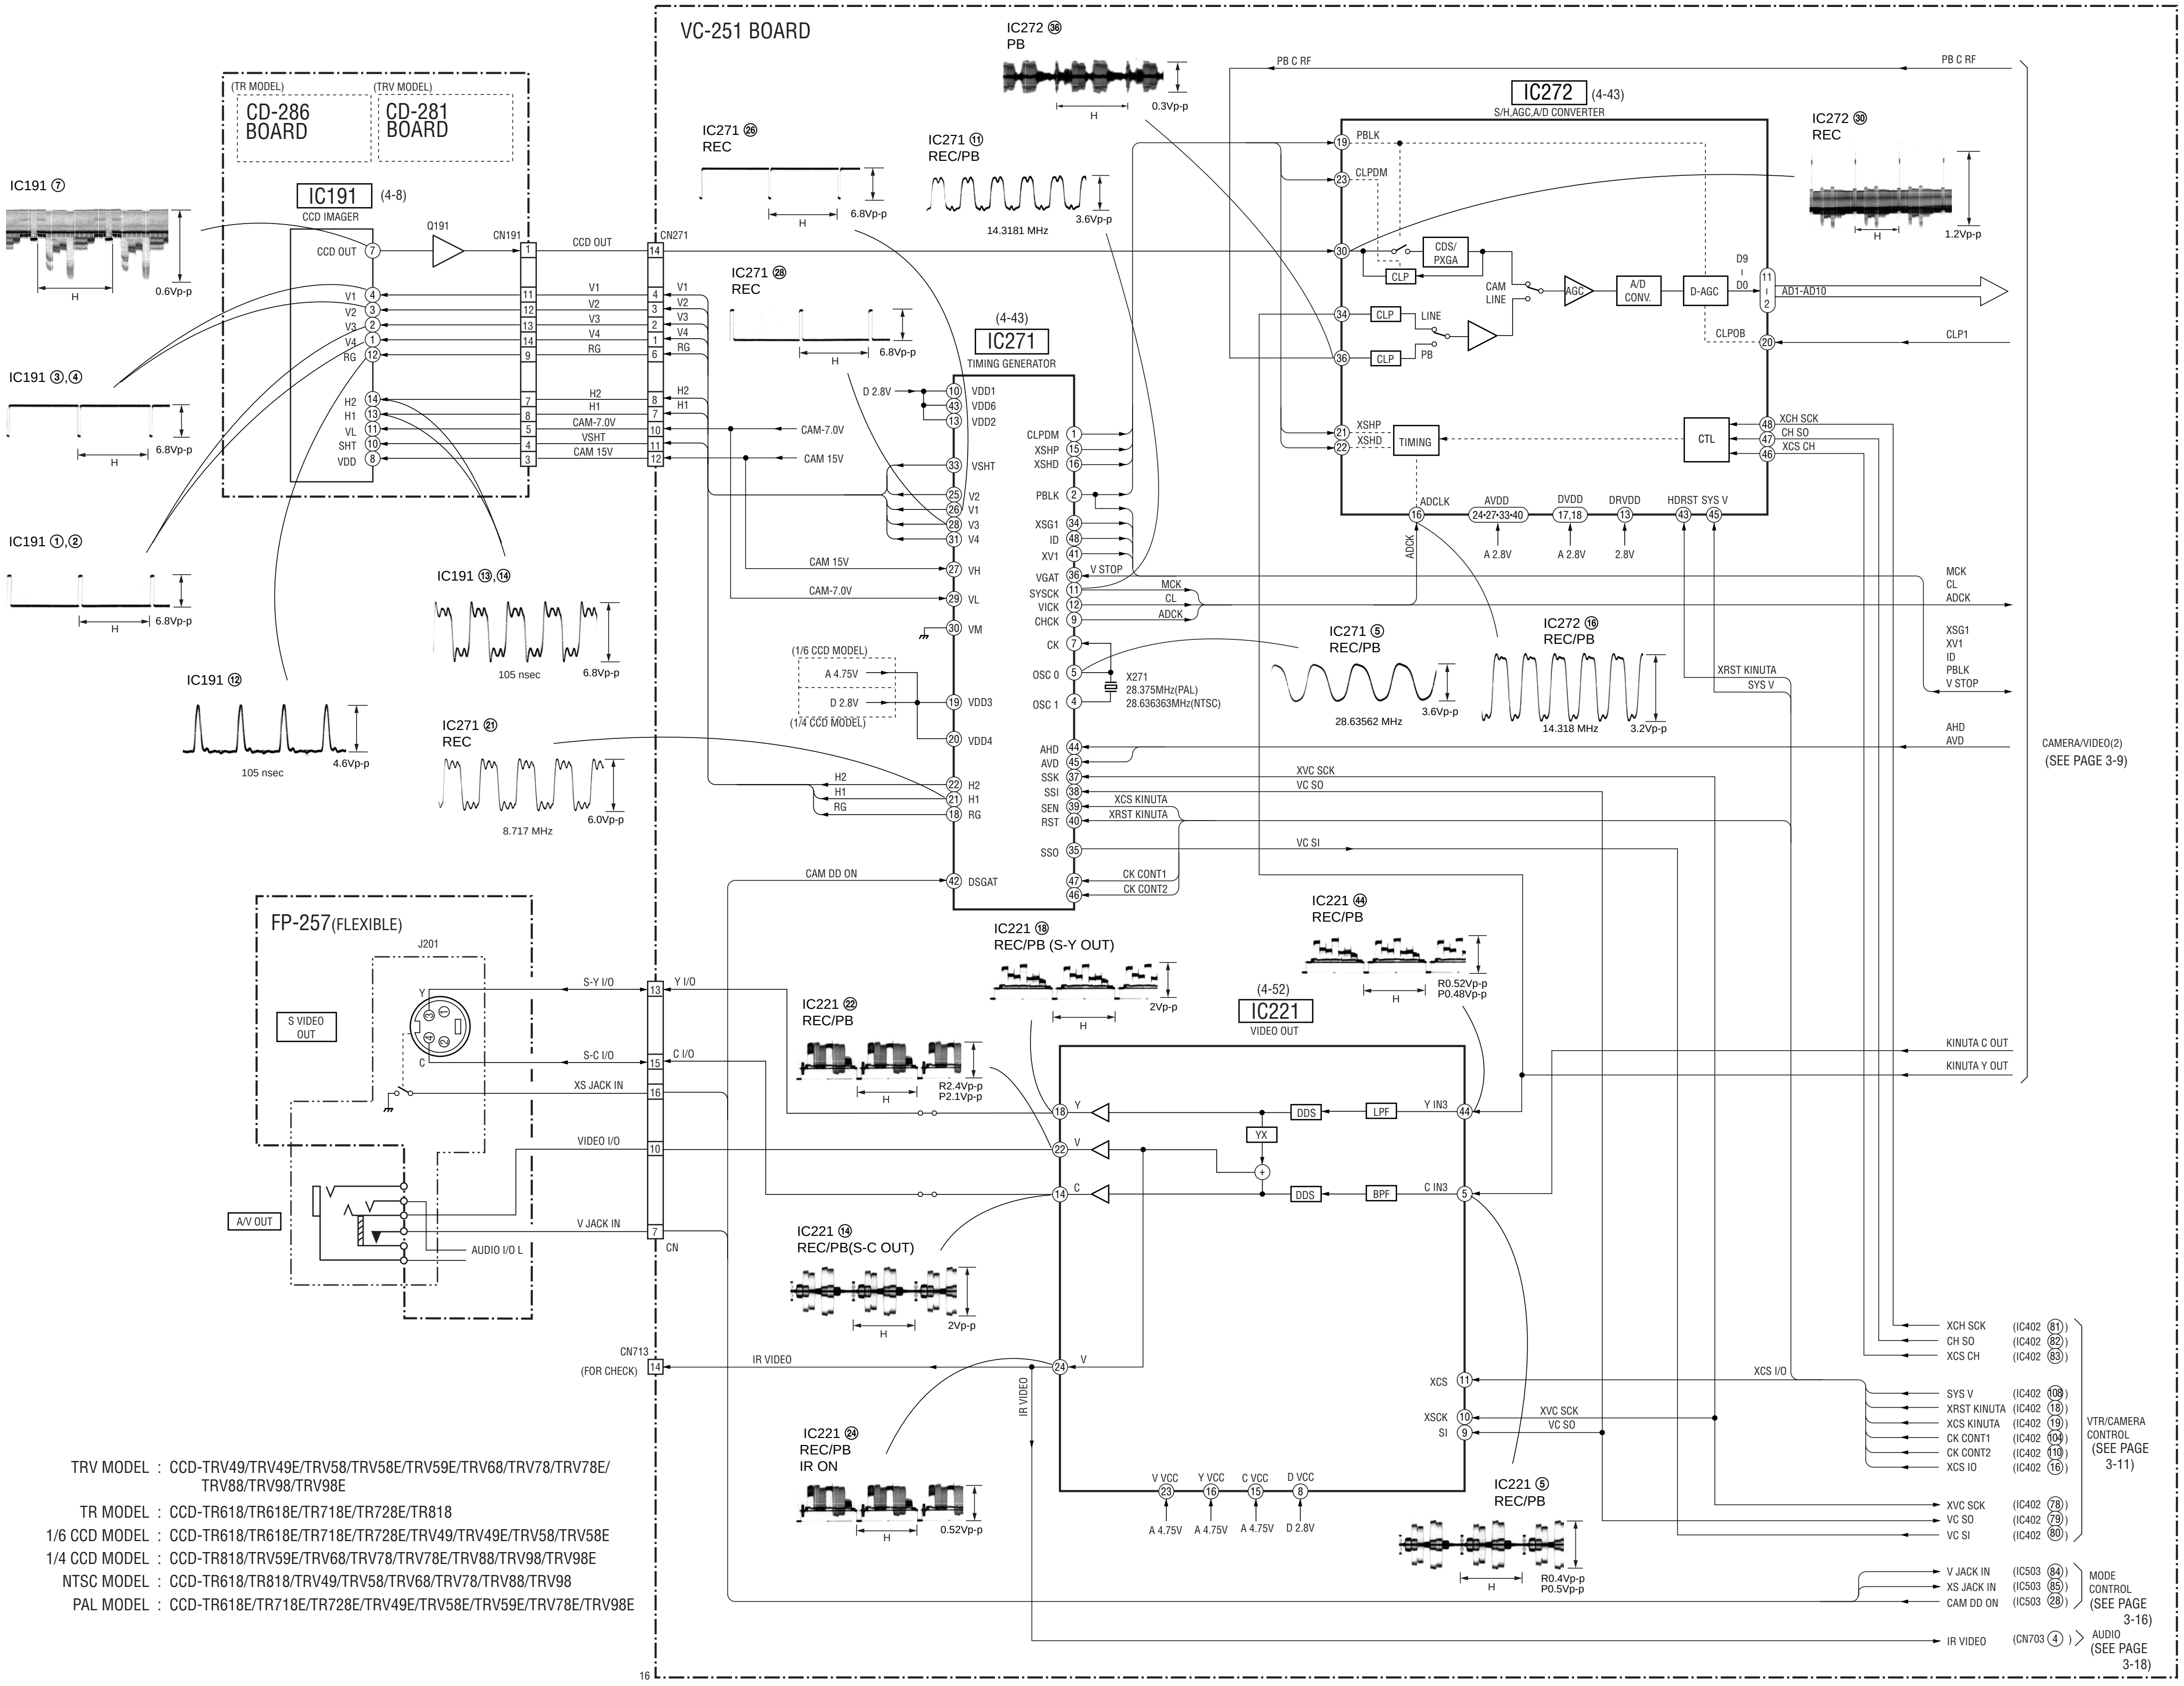
VC-251 BOARD
(TR MODEL) CD-286 BOARD
(TRV MODEL) CD-281 BOARD
IC191 (4-8) CCD IMAGER
CCD OUT
V1 V2 V3 V4 RG
H2 H1 VL SHT VDD
Q191
CN191
CN271
CAM-7.0V
VSHT
CAM 15V
IC191 ⑦ 0.6Vp-p H
IC191 ③,④ 6.8Vp-p H
IC191 ①,② 6.8Vp-p H
IC191 ⑬,⑭ 105 nsec 6.8Vp-p
IC191 ⑫ 105 nsec 4.6Vp-p
IC271 ㉖ REC 6.8Vp-p H
IC271 ㉘ REC 6.8Vp-p H
IC271 ⑪ REC/PB 14.3181 MHz 3.6Vp-p
IC271 ㉑ REC 8.717 MHz 6.0Vp-p
IC272 ㊱ PB 0.3Vp-p H
IC272 ㉚ REC 1.2Vp-p H
IC271 (4-43) TIMING GENERATOR
VDD1 VDD6 VDD2 VSHT V2 V1 V3 V4 VH VL VM VDD3 VDD4 H2 H1 RG DSGAT
CLPDM XSHP XSHD PBLK XSG1 ID XV1 VGAT SYSCK VICK CHCK CK OSC 0 OSC 1 AHD AVD SSK SSI SEN RST SSO
D 2.8V
(1/6 CCD MODEL) A 4.75V D 2.8V (1/4 CCD MODEL)
X271 28.375MHz(PAL) 28.636363MHz(NTSC)
V STOP MCK CL ADCK
CK CONT1 CK CONT2
XCS KINUTA XRST KINUTA XVC SCK VC SO VC SI
CAM DD ON
IC271 ⑤ REC/PB 28.63562 MHz 3.6Vp-p
IC272 ⑯ REC/PB 14.318 MHz 3.2Vp-p
IC272 (4-43) S/H,AGC,A/D CONVERTER
PB C RF
PBLK CLPDM CDS/PXGA CLP CAM LINE AGC A/D CONV. D-AGC D9 D0 AD1-AD10 CLPOB CLP1
LINE PB XSHP XSHD TIMING CTL XCH SCK CH SO XCS CH
ADCLK AVDD DVDD DRVDD HDRST SYS V
A 2.8V A 2.8V 2.8V
XRST KINUTA SYS V
MCK CL ADCK
XSG1 XV1 ID PBLK V STOP
AHD AVD
CAMERA/VIDEO(2) (SEE PAGE 3-9)
FP-257(FLEXIBLE)
J201 S VIDEO OUT Y C
A/V OUT
S-Y I/O S-C I/O XS JACK IN VIDEO I/O V JACK IN AUDIO I/O L
Y I/O C I/O CN
CN713 (FOR CHECK) IR VIDEO
IC221 ⑲ REC/PB (S-Y OUT) 2Vp-p H
IC221 ㊹ REC/PB R0.52Vp-p P0.48Vp-p H
IC221 ㉒ REC/PB R2.4Vp-p P2.1Vp-p H
IC221 ⑭ REC/PB(S-C OUT) 2Vp-p H
IC221 ㉔ REC/PB IR ON 0.52Vp-p H
IC221 ⑤ REC/PB R0.4Vp-p P0.5Vp-p H
IC221 (4-52) VIDEO OUT
Y V C DDS LPF Y IN3 YX BPF C IN3
XCS XSCK SI
V VCC Y VCC C VCC D VCC
A 4.75V A 4.75V A 4.75V D 2.8V
KINUTA C OUT KINUTA Y OUT
XCS I/O
XCH SCK (IC402 81) CH SO (IC402 82) XCS CH (IC402 83)
SYS V (IC402 108) XRST KINUTA (IC402 18) XCS KINUTA (IC402 19) CK CONT1 (IC402 104) CK CONT2 (IC402 110) XCS IO (IC402 16)
XVC SCK (IC402 78) VC SO (IC402 79) VC SI (IC402 80)
VTR/CAMERA CONTROL (SEE PAGE 3-11)
V JACK IN (IC503 84) XS JACK IN (IC503 85) CAM DD ON (IC503 28)
MODE CONTROL (SEE PAGE 3-16)
IR VIDEO (CN703 4) AUDIO (SEE PAGE 3-18)

TRV MODEL : CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
TR MODEL : CCD-TR618/TR618E/TR718E/TR728E/TR818
1/6 CCD MODEL : CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E
1/4 CCD MODEL : CCD-TR818/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
NTSC MODEL : CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98
PAL MODEL : CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E

## 3-4. CAMERA/VIDEO BLOCK DIAGRAM (2/2)

() : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

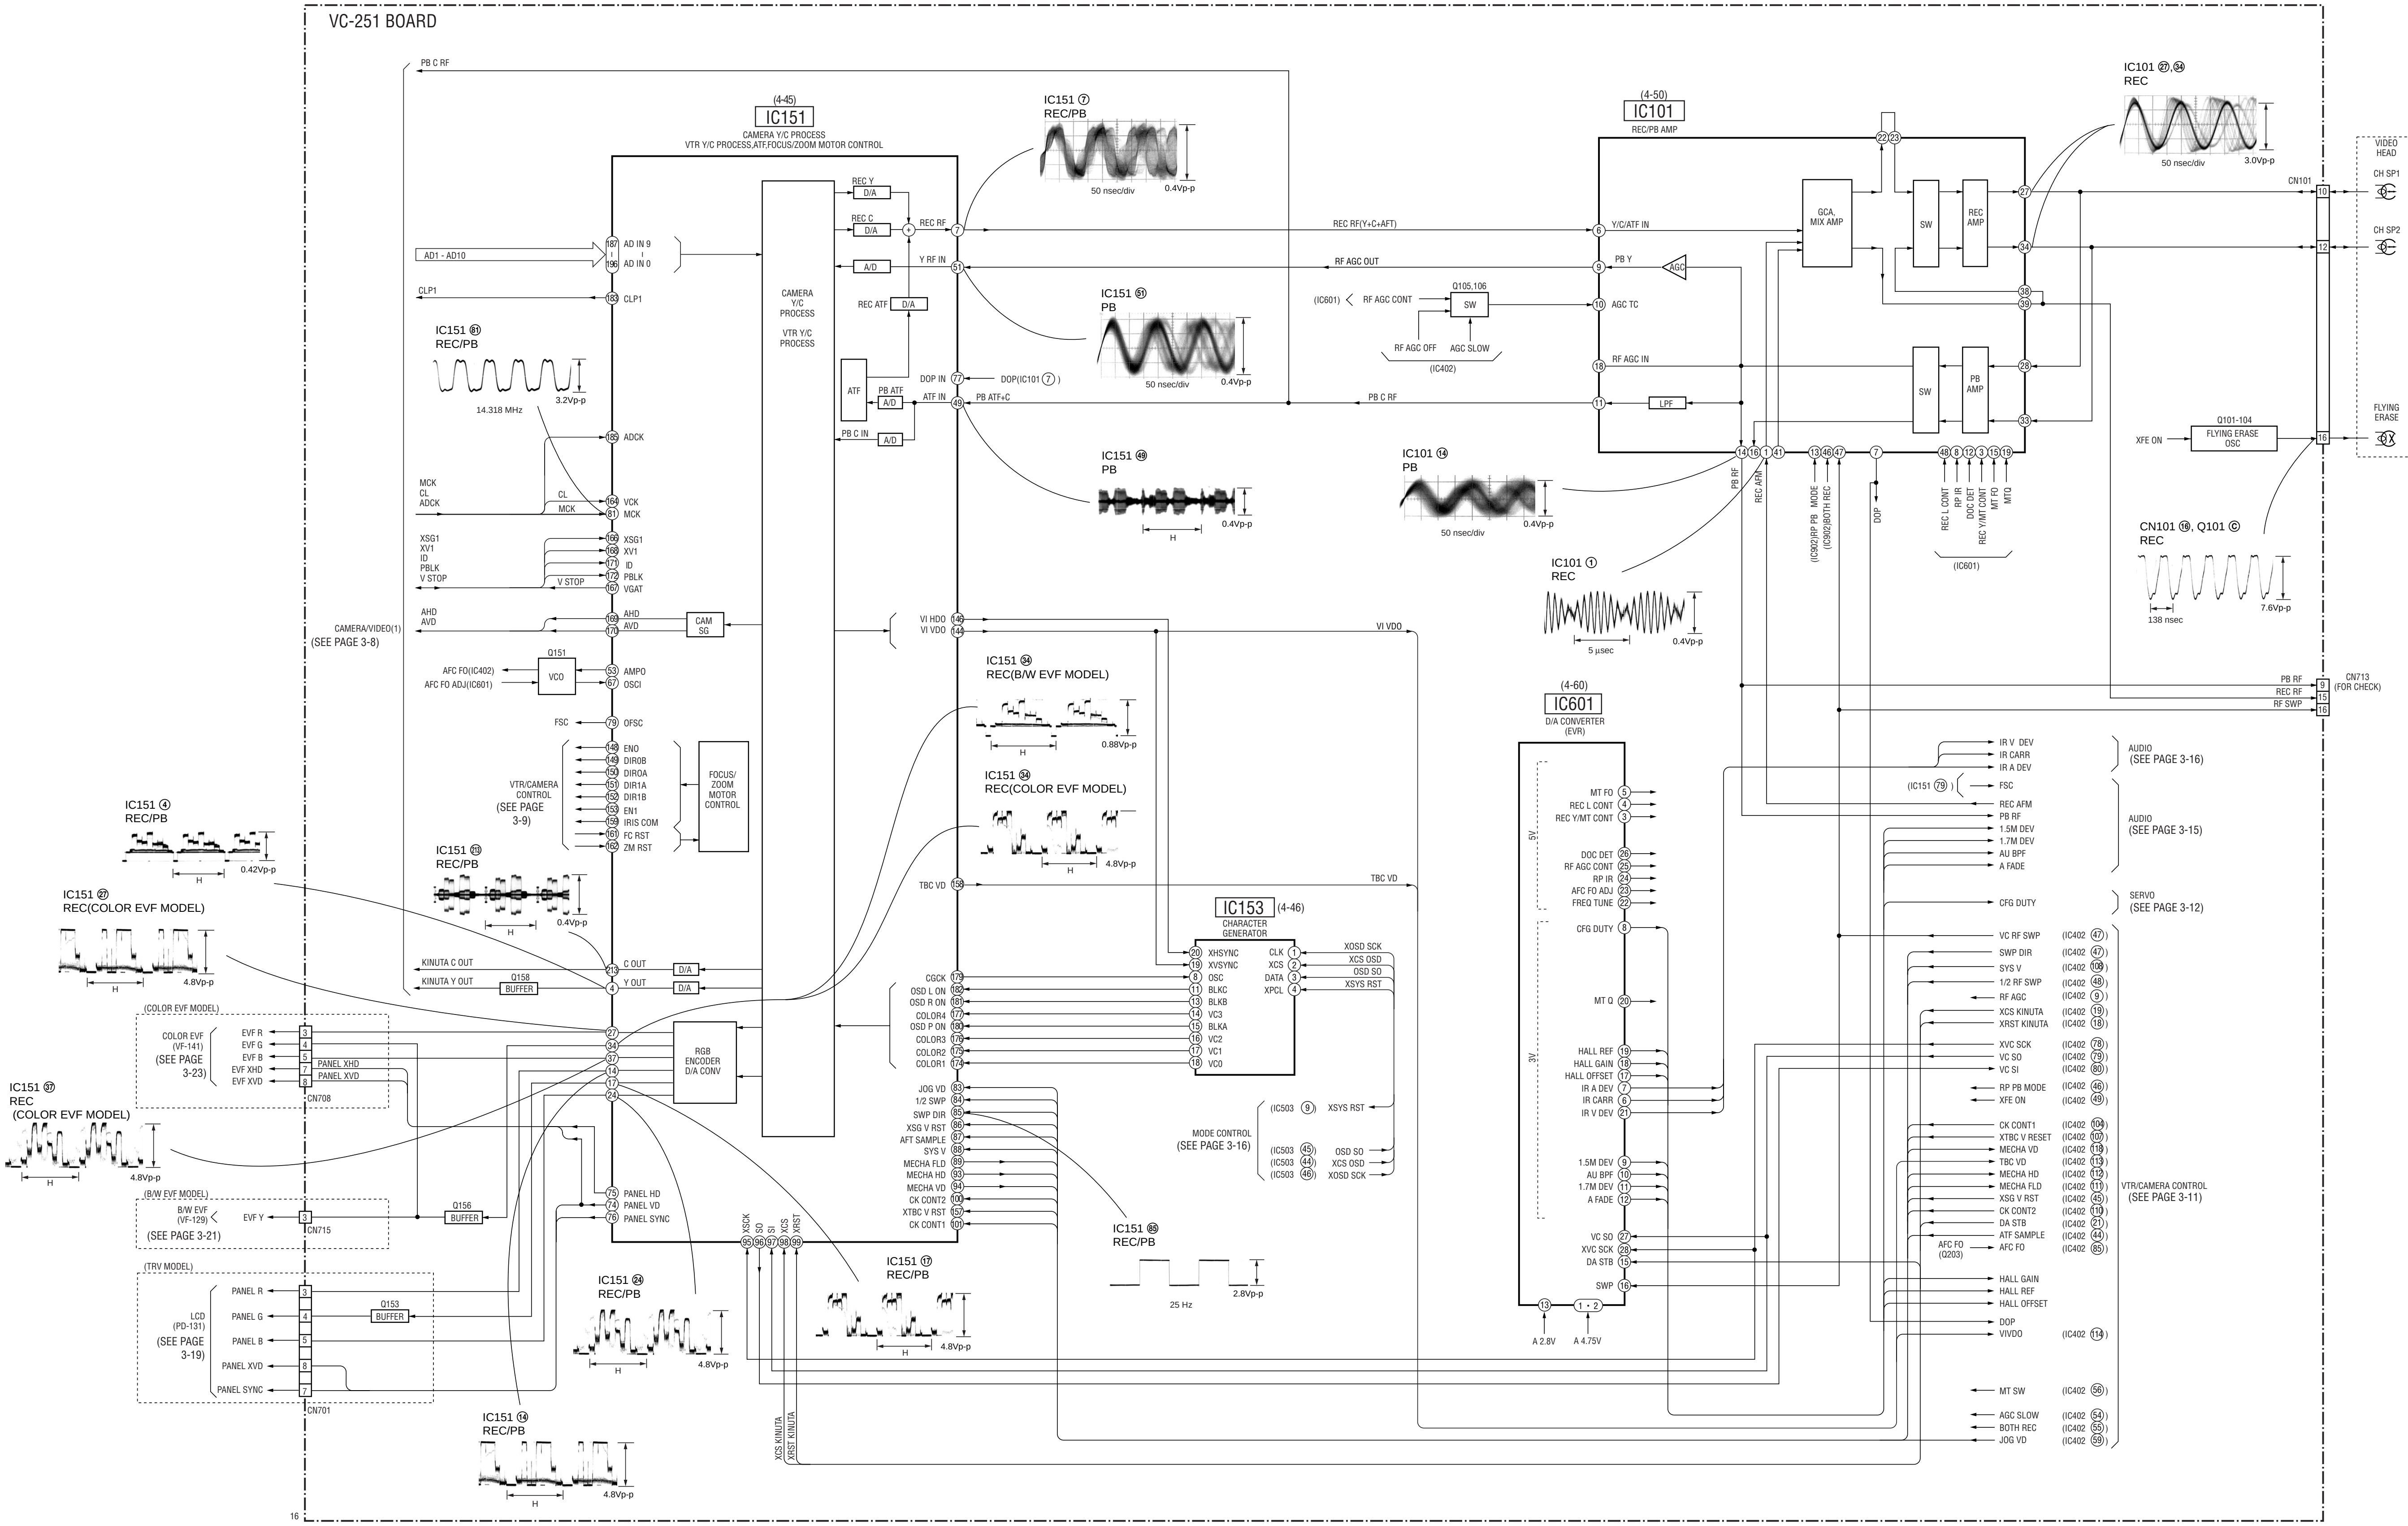
VC-251 BOARD
PB C RF
IC151
(4-45)
CAMERA Y/C PROCESS
VTR Y/C PROCESS,ATF,FOCUS/ZOOM MOTOR CONTROL
CAMERA Y/C PROCESS
VTR Y/C PROCESS
REC Y
REC C
REC RF
Y RF IN
REC ATF
DOP IN
ATF IN
PB ATF
PB C IN
AD1 - AD10
AD IN 9
AD IN 0
CLP1
ADCK
MCK
CL
VCK
XSG1
XV1
ID
PBLK
V STOP
VGAT
AHD
AVD
CAM SG
CAMERA/VIDEO(1)
(SEE PAGE 3-8)
Q151
VCO
AFC FO(IC402)
AFC FO ADJ(IC601)
AMPO
OSCI
FSC
OFSC
ENO
DIR0B
DIR0A
DIR1A
DIR1B
EN1
IRIS COM
FC RST
ZM RST
VTR/CAMERA CONTROL
(SEE PAGE 3-9)
FOCUS/ ZOOM MOTOR CONTROL
KINUTA C OUT
KINUTA Y OUT
Q158
BUFFER
C OUT
Y OUT
D/A
A/D
RGB ENCODER D/A CONV
IC151 ⑦ REC/PB
50 nsec/div 0.4Vp-p
IC151 (51) PB
IC151 (49) PB
IC151 (81) REC/PB
14.318 MHz 3.2Vp-p
IC151 (34) REC(B/W EVF MODEL) 0.88Vp-p
IC151 (34) REC(COLOR EVF MODEL) 4.8Vp-p
IC151 (10) REC/PB 0.4Vp-p
IC151 ④ REC/PB 0.42Vp-p
IC151 (27) REC(COLOR EVF MODEL) 4.8Vp-p
IC151 (37) REC (COLOR EVF MODEL) 4.8Vp-p
IC151 (24) REC/PB 4.8Vp-p
IC151 ⑭ REC/PB 4.8Vp-p
IC151 ⑰ REC/PB 4.8Vp-p
IC151 (85) REC/PB 25 Hz 2.8Vp-p
(COLOR EVF MODEL)
COLOR EVF (VF-141) (SEE PAGE 3-23)
EVF R
EVF G
EVF B
EVF XHD
EVF XVD
PANEL XHD
PANEL XVD
CN708
(B/W EVF MODEL)
B/W EVF (VF-129) (SEE PAGE 3-21)
EVF Y
CN715
Q156 BUFFER
(TRV MODEL)
LCD (PD-131) (SEE PAGE 3-19)
PANEL R
PANEL G
PANEL B
PANEL XVD
PANEL SYNC
Q153 BUFFER
CN701
PANEL HD
PANEL VD
PANEL SYNC
VI HDO
VI VDO
TBC VD
CGCK
OSD L ON
OSD R ON
COLOR4
OSD P ON
COLOR3
COLOR2
COLOR1
JOG VD
1/2 SWP
SWP DIR
XSG V RST
AFT SAMPLE
SYS V
MECHA FLD
MECHA HD
MECHA VD
CK CONT2
XTBC V RST
CK CONT1
XSCK SO SI XCS XRST
XCS KINUTA
XRST KINUTA
IC153 (4-46)
CHARACTER GENERATOR
XHSYNC
XVSYNC
OSC
BLKC
BLKB
VC3
BLKA
VC2
VC1
VC0
CLK
XCS
DATA
XPCL
XOSD SCK
XCS OSD
OSD SO
XSYS RST
MODE CONTROL (SEE PAGE 3-16)
(IC503)
OSD SO
XCS OSD
XOSD SCK
IC101 (4-50)
REC/PB AMP
REC RF(Y+C+AFT)
RF AGC OUT
RF AGC CONT
Q105,106 SW
RF AGC OFF
AGC SLOW
(IC402)
(IC601)
Y/C/ATF IN
PB Y
AGC TC
RF AGC IN
PB C RF
LPF
AGC
GCA, MIX AMP
SW
REC AMP
PB AMP
IC101 (27),(34) REC
50 nsec/div 3.0Vp-p
CN101
VIDEO HEAD
CH SP1
CH SP2
FLYING ERASE
Q101-104
FLYING ERASE OSC
XFE ON
PB RF
REC AFM
(IC902)RP PB MODE
(IC902)BOTH REC
DOP
REC L CONT
RP IR
DOC DET
REC Y/MT CONT
MT FO
MT Q
(IC601)
IC101 ⑭ PB
50 nsec/div 0.4Vp-p
IC101 ① REC
5 μsec 0.4Vp-p
CN101 (16), Q101 © REC
138 nsec 7.6Vp-p
CN713 (FOR CHECK)
PB RF
REC RF
RF SWP
VI VDO
TBC VD
IC601 (4-60)
D/A CONVERTER (EVR)
MT FO
REC L CONT
REC Y/MT CONT
DOC DET
RF AGC CONT
RP IR
AFC FO ADJ
FREQ TUNE
CFG DUTY
MT Q
HALL REF
HALL GAIN
HALL OFFSET
IR A DEV
IR CARR
IR V DEV
1.5M DEV
AU BPF
1.7M DEV
A FADE
VC SO
XVC SCK
DA STB
SWP
A 2.8V
A 4.75V
5V
3V
IR V DEV
IR CARR
IR A DEV
FSC
REC AFM
PB RF
1.5M DEV
1.7M DEV
AU BPF
A FADE
AUDIO (SEE PAGE 3-16)
AUDIO (SEE PAGE 3-15)
CFG DUTY
SERVO (SEE PAGE 3-12)
VC RF SWP
SWP DIR
SYS V
1/2 RF SWP
RF AGC
XCS KINUTA
XRST KINUTA
XVC SCK
VC SO
VC SI
RP PB MODE
XFE ON
CK CONT1
XTBC V RESET
MECHA VD
TBC VD
MECHA HD
MECHA FLD
XSG V RST
CK CONT2
DA STB
ATF SAMPLE
AFC FO
AFC FO (Q203)
VTR/CAMERA CONTROL (SEE PAGE 3-11)
HALL GAIN
HALL REF
HALL OFFSET
DOP
VIVDO
MT SW
AGC SLOW
BOTH REC
JOG VD
(IC402)

TRV MODEL : CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/
TRV88/TRV98/TRV98E
B/W EVF MODEL : CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
COLOR EVF MODEL : CCD-TR818

## 3-5. VTR/CAMERA CONTROL BLOCK DIAGRAM

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

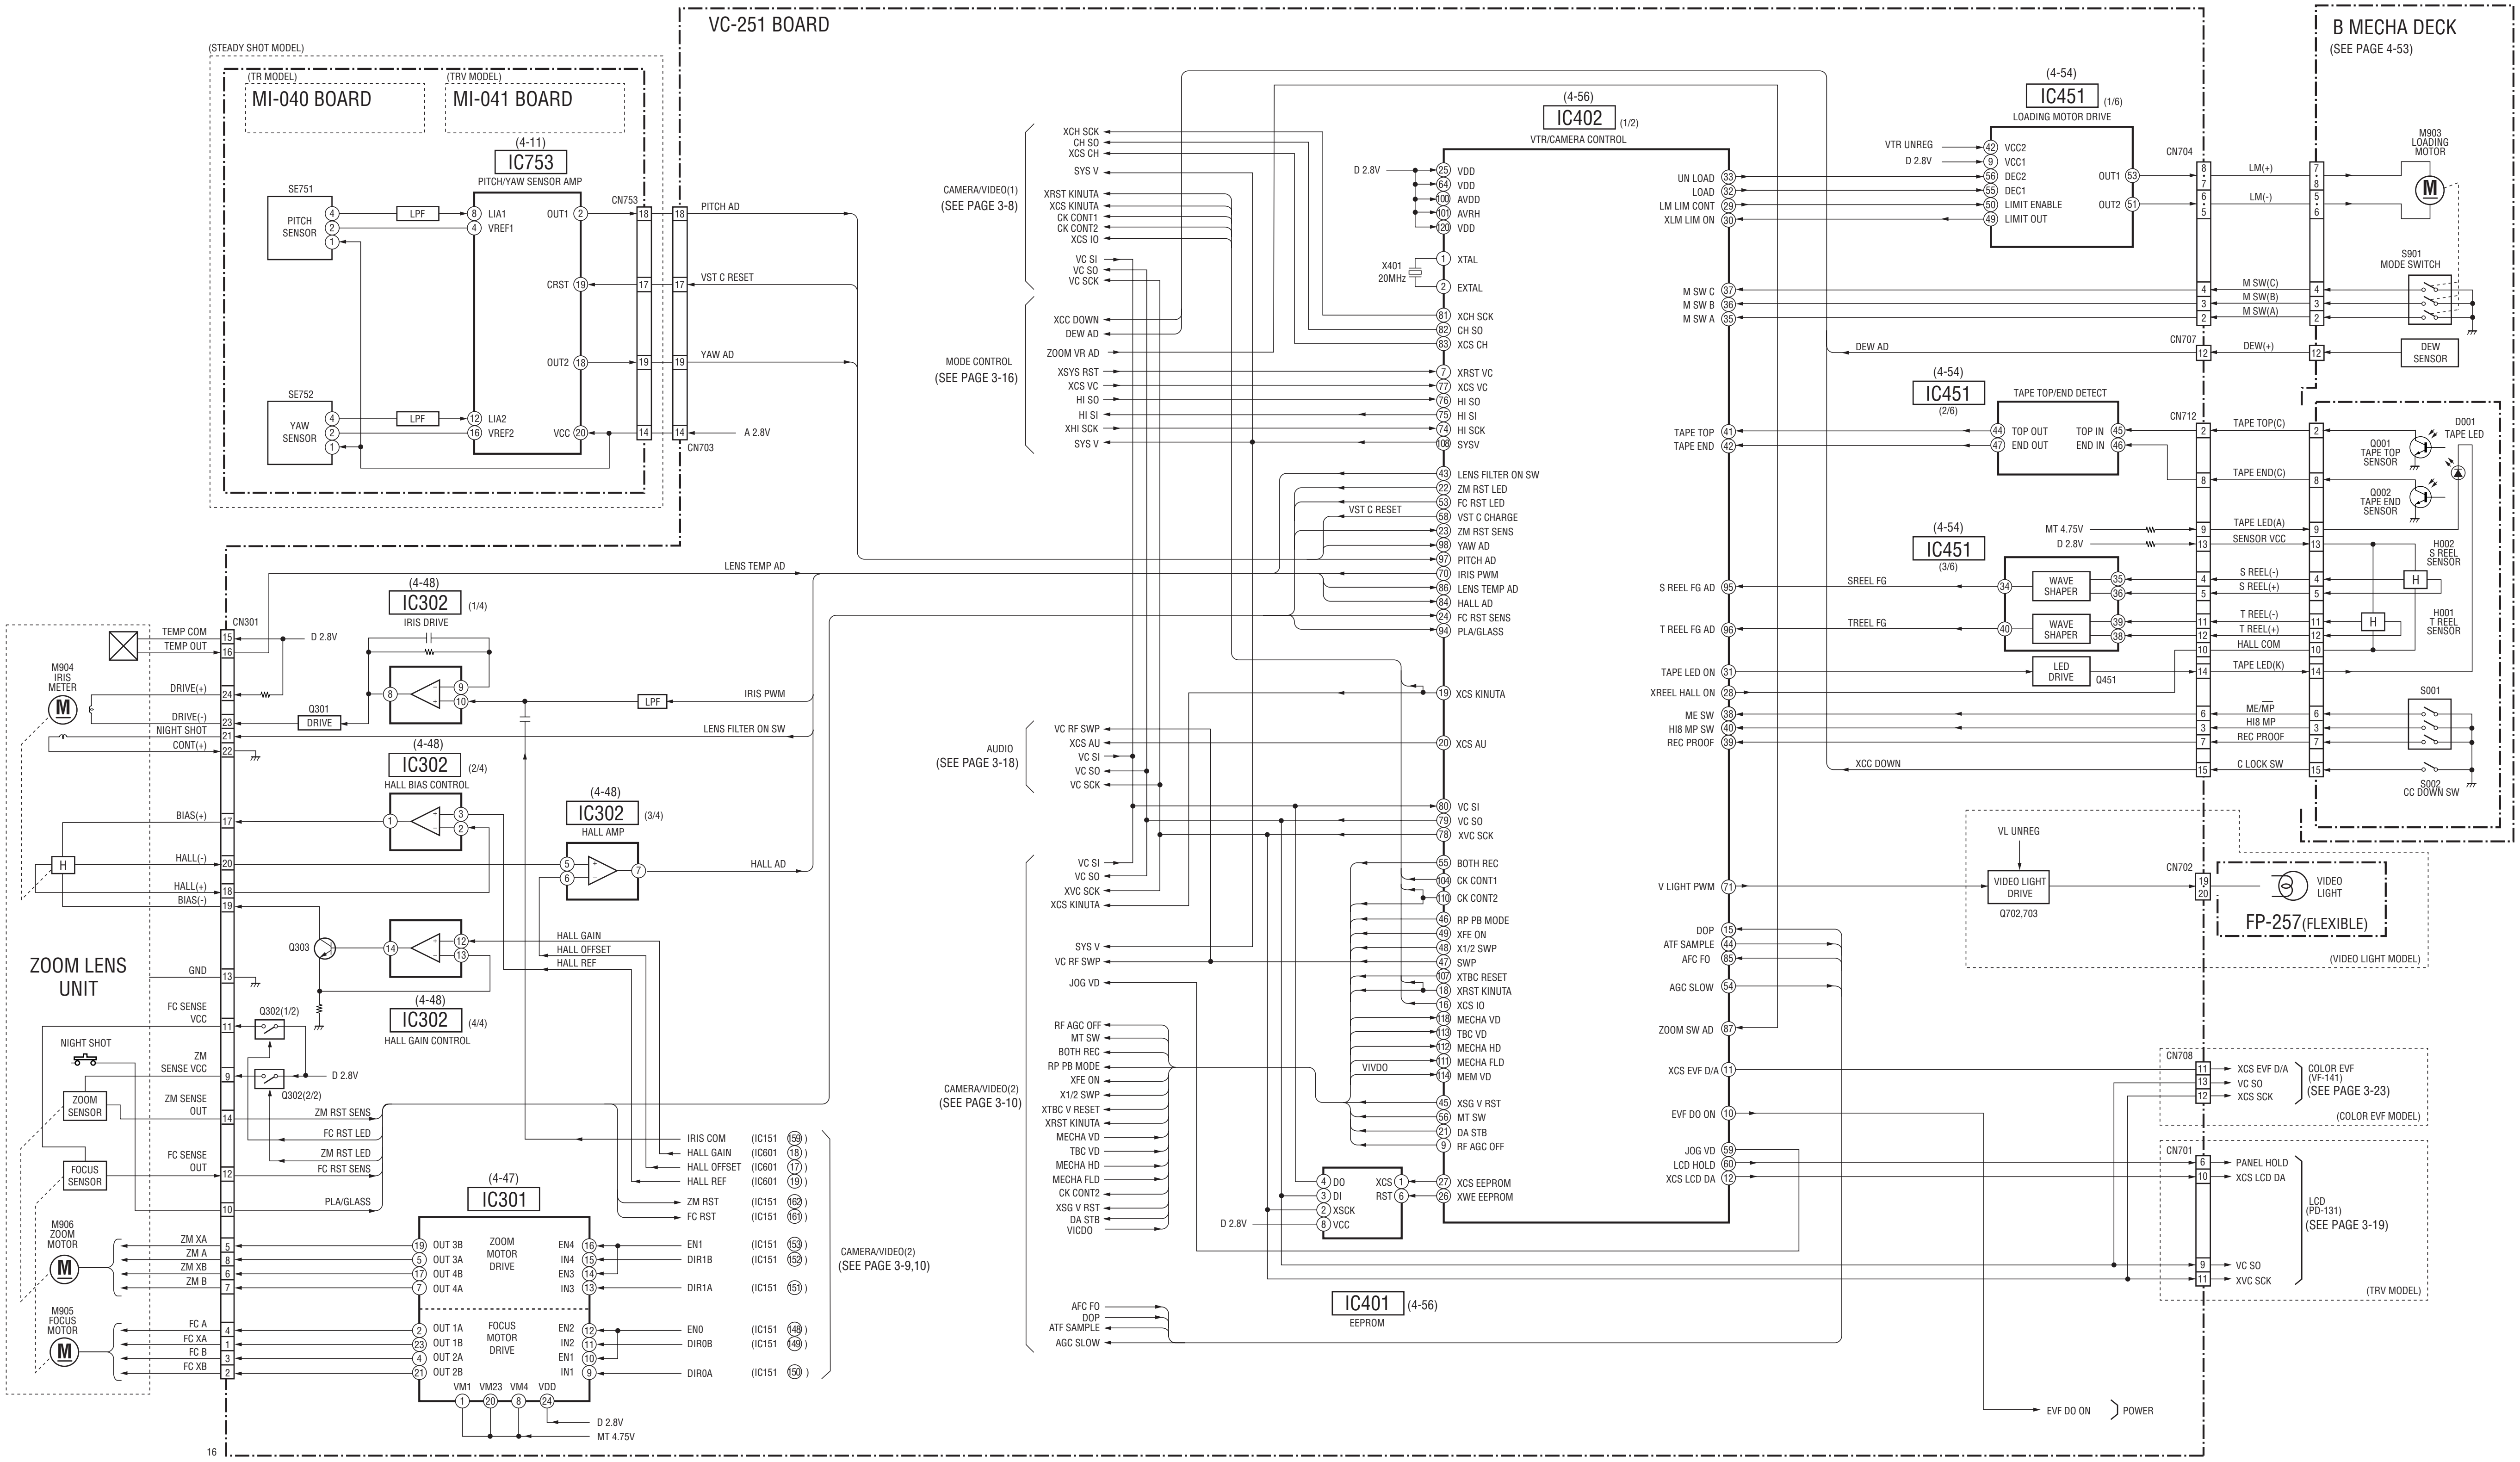
VC-251 BOARD
B MECHA DECK
(SEE PAGE 4-53)
(STEADY SHOT MODEL)
(TR MODEL)
(TRV MODEL)
MI-040 BOARD
MI-041 BOARD
(4-11)
IC753
PITCH/YAW SENSOR AMP
SE751
PITCH SENSOR
SE752
YAW SENSOR
LPF
LIA1
VREF1
LIA2
VREF2
OUT1
CRST
OUT2
VCC
CN753
CN703
PITCH AD
VST C RESET
YAW AD
A 2.8V
LENS TEMP AD
CN301
TEMP COM
TEMP OUT
D 2.8V
M904 IRIS METER
DRIVE(+)
DRIVE(-)
NIGHT SHOT
CONT(+)
Q301 DRIVE
(4-48)
IC302 (1/4)
IRIS DRIVE
LPF
IRIS PWM
LENS FILTER ON SW
(4-48)
IC302 (2/4)
HALL BIAS CONTROL
BIAS(+)
HALL(-)
HALL(+)
BIAS(-)
(4-48)
IC302 (3/4)
HALL AMP
HALL AD
ZOOM LENS UNIT
Q303
HALL GAIN
HALL OFFSET
HALL REF
(4-48)
IC302 (4/4)
HALL GAIN CONTROL
GND
FC SENSE VCC
Q302(1/2)
NIGHT SHOT
ZM SENSE VCC
Q302(2/2)
ZOOM SENSOR
ZM SENSE OUT
ZM RST SENS
FC RST LED
ZM RST LED
FC RST SENS
FOCUS SENSOR
FC SENSE OUT
PLA/GLASS
M906 ZOOM MOTOR
ZM XA
ZM A
ZM XB
ZM B
M905 FOCUS MOTOR
FC A
FC XA
FC B
FC XB
(4-47)
IC301
ZOOM MOTOR DRIVE
FOCUS MOTOR DRIVE
OUT 3B
OUT 3A
OUT 4B
OUT 4A
OUT 1A
OUT 1B
OUT 2A
OUT 2B
EN4
IN4
EN3
IN3
EN2
IN2
EN1
IN1
VM1
VM23
VM4
VDD
MT 4.75V
IRIS COM
HALL GAIN
HALL OFFSET
HALL REF
ZM RST
FC RST
EN1
DIR1B
DIR1A
EN0
DIR0B
DIR0A
(IC151)
(IC601)
CAMERA/VIDEO(2)
(SEE PAGE 3-9,10)
CAMERA/VIDEO(1)
(SEE PAGE 3-8)
XCH SCK
CH SO
XCS CH
SYS V
XRST KINUTA
XCS KINUTA
CK CONT1
CK CONT2
XCS IO
VC SI
VC SO
VC SCK
MODE CONTROL
(SEE PAGE 3-16)
XCC DOWN
DEW AD
ZOOM VR AD
XSYS RST
XCS VC
HI SO
HI SI
XHI SCK
AUDIO
(SEE PAGE 3-18)
VC RF SWP
XCS AU
XVC SCK
XCS KINUTA
JOG VD
CAMERA/VIDEO(2)
(SEE PAGE 3-10)
RF AGC OFF
MT SW
BOTH REC
RP PB MODE
XFE ON
X1/2 SWP
XTBC RESET
MECHA VD
TBC VD
MECHA HD
MECHA FLD
XSG V RST
DA STB
VIVDO
AFC FO
DOP
ATF SAMPLE
AGC SLOW
(4-56)
IC402 (1/2)
VTR/CAMERA CONTROL
VDD
AVDD
AVRH
X401 20MHz
XTAL
EXTAL
XRST VC
SYSV
LENS FILTER ON SW
ZM RST LED
FC RST LED
VST C CHARGE
ZM RST SENS
YAW AD
PITCH AD
IRIS PWM
LENS TEMP AD
HALL AD
FC RST SENS
PLA/GLASS
VST C RESET
XCS AU
XVC SCK
SWP
XRST KINUTA
MEM VD
XCS EEPROM
XWE EEPROM
D 2.8V
DO
DI
XSCK
VCC
XCS
RST
IC401 (4-56)
EEPROM
UN LOAD
LOAD
LM LIM CONT
XLM LIM ON
M SW C
M SW B
M SW A
DEW AD
TAPE TOP
TAPE END
S REEL FG AD
T REEL FG AD
TAPE LED ON
XREEL HALL ON
ME SW
HI8 MP SW
REC PROOF
XCC DOWN
V LIGHT PWM
ZOOM SW AD
XCS EVF D/A
EVF DO ON
JOG VD
LCD HOLD
XCS LCD DA
(4-54)
IC451 (1/6)
LOADING MOTOR DRIVE
VTR UNREG
VCC2
VCC1
DEC2
DEC1
LIMIT ENABLE
LIMIT OUT
OUT1
OUT2
CN704
LM(+)
LM(-)
M903 LOADING MOTOR
S901 MODE SWITCH
M SW(C)
M SW(B)
M SW(A)
CN707
DEW(+)
DEW SENSOR
(4-54)
IC451 (2/6)
TAPE TOP/END DETECT
TOP OUT
END OUT
TOP IN
END IN
CN712
TAPE TOP(C)
TAPE END(C)
D001 TAPE LED
Q001 TAPE TOP SENSOR
Q002 TAPE END SENSOR
MT 4.75V
TAPE LED(A)
SENSOR VCC
(4-54)
IC451 (3/6)
SREEL FG
TREEL FG
WAVE SHAPER
S REEL(-)
S REEL(+)
T REEL(-)
T REEL(+)
HALL COM
H002 S REEL SENSOR
H001 T REEL SENSOR
LED DRIVE
Q451
TAPE LED(K)
S001
ME/MP
HI8 MP
REC PROOF
C LOCK SW
S002 CC DOWN SW
VL UNREG
VIDEO LIGHT DRIVE
Q702,703
CN702
VIDEO LIGHT
FP-257(FLEXIBLE)
(VIDEO LIGHT MODEL)
CN708
XCS EVF D/A
COLOR EVF (VF-141)
(SEE PAGE 3-23)
(COLOR EVF MODEL)
CN701
PANEL HOLD
XCS LCD DA
LCD (PD-131)
(SEE PAGE 3-19)
(TRV MODEL)
EVF DO ON
POWER
16

TRV MODEL : CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
TR MODEL : CCD-TR618/TR618E/TR718E/TR728E/TR818
VIDEO LIGHT MODEL : CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
STEADY SHOT MODEL : CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
COLOR EVF MODEL : CCD-TR818

## 3-6. SERVO BLOCK DIAGRAM

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

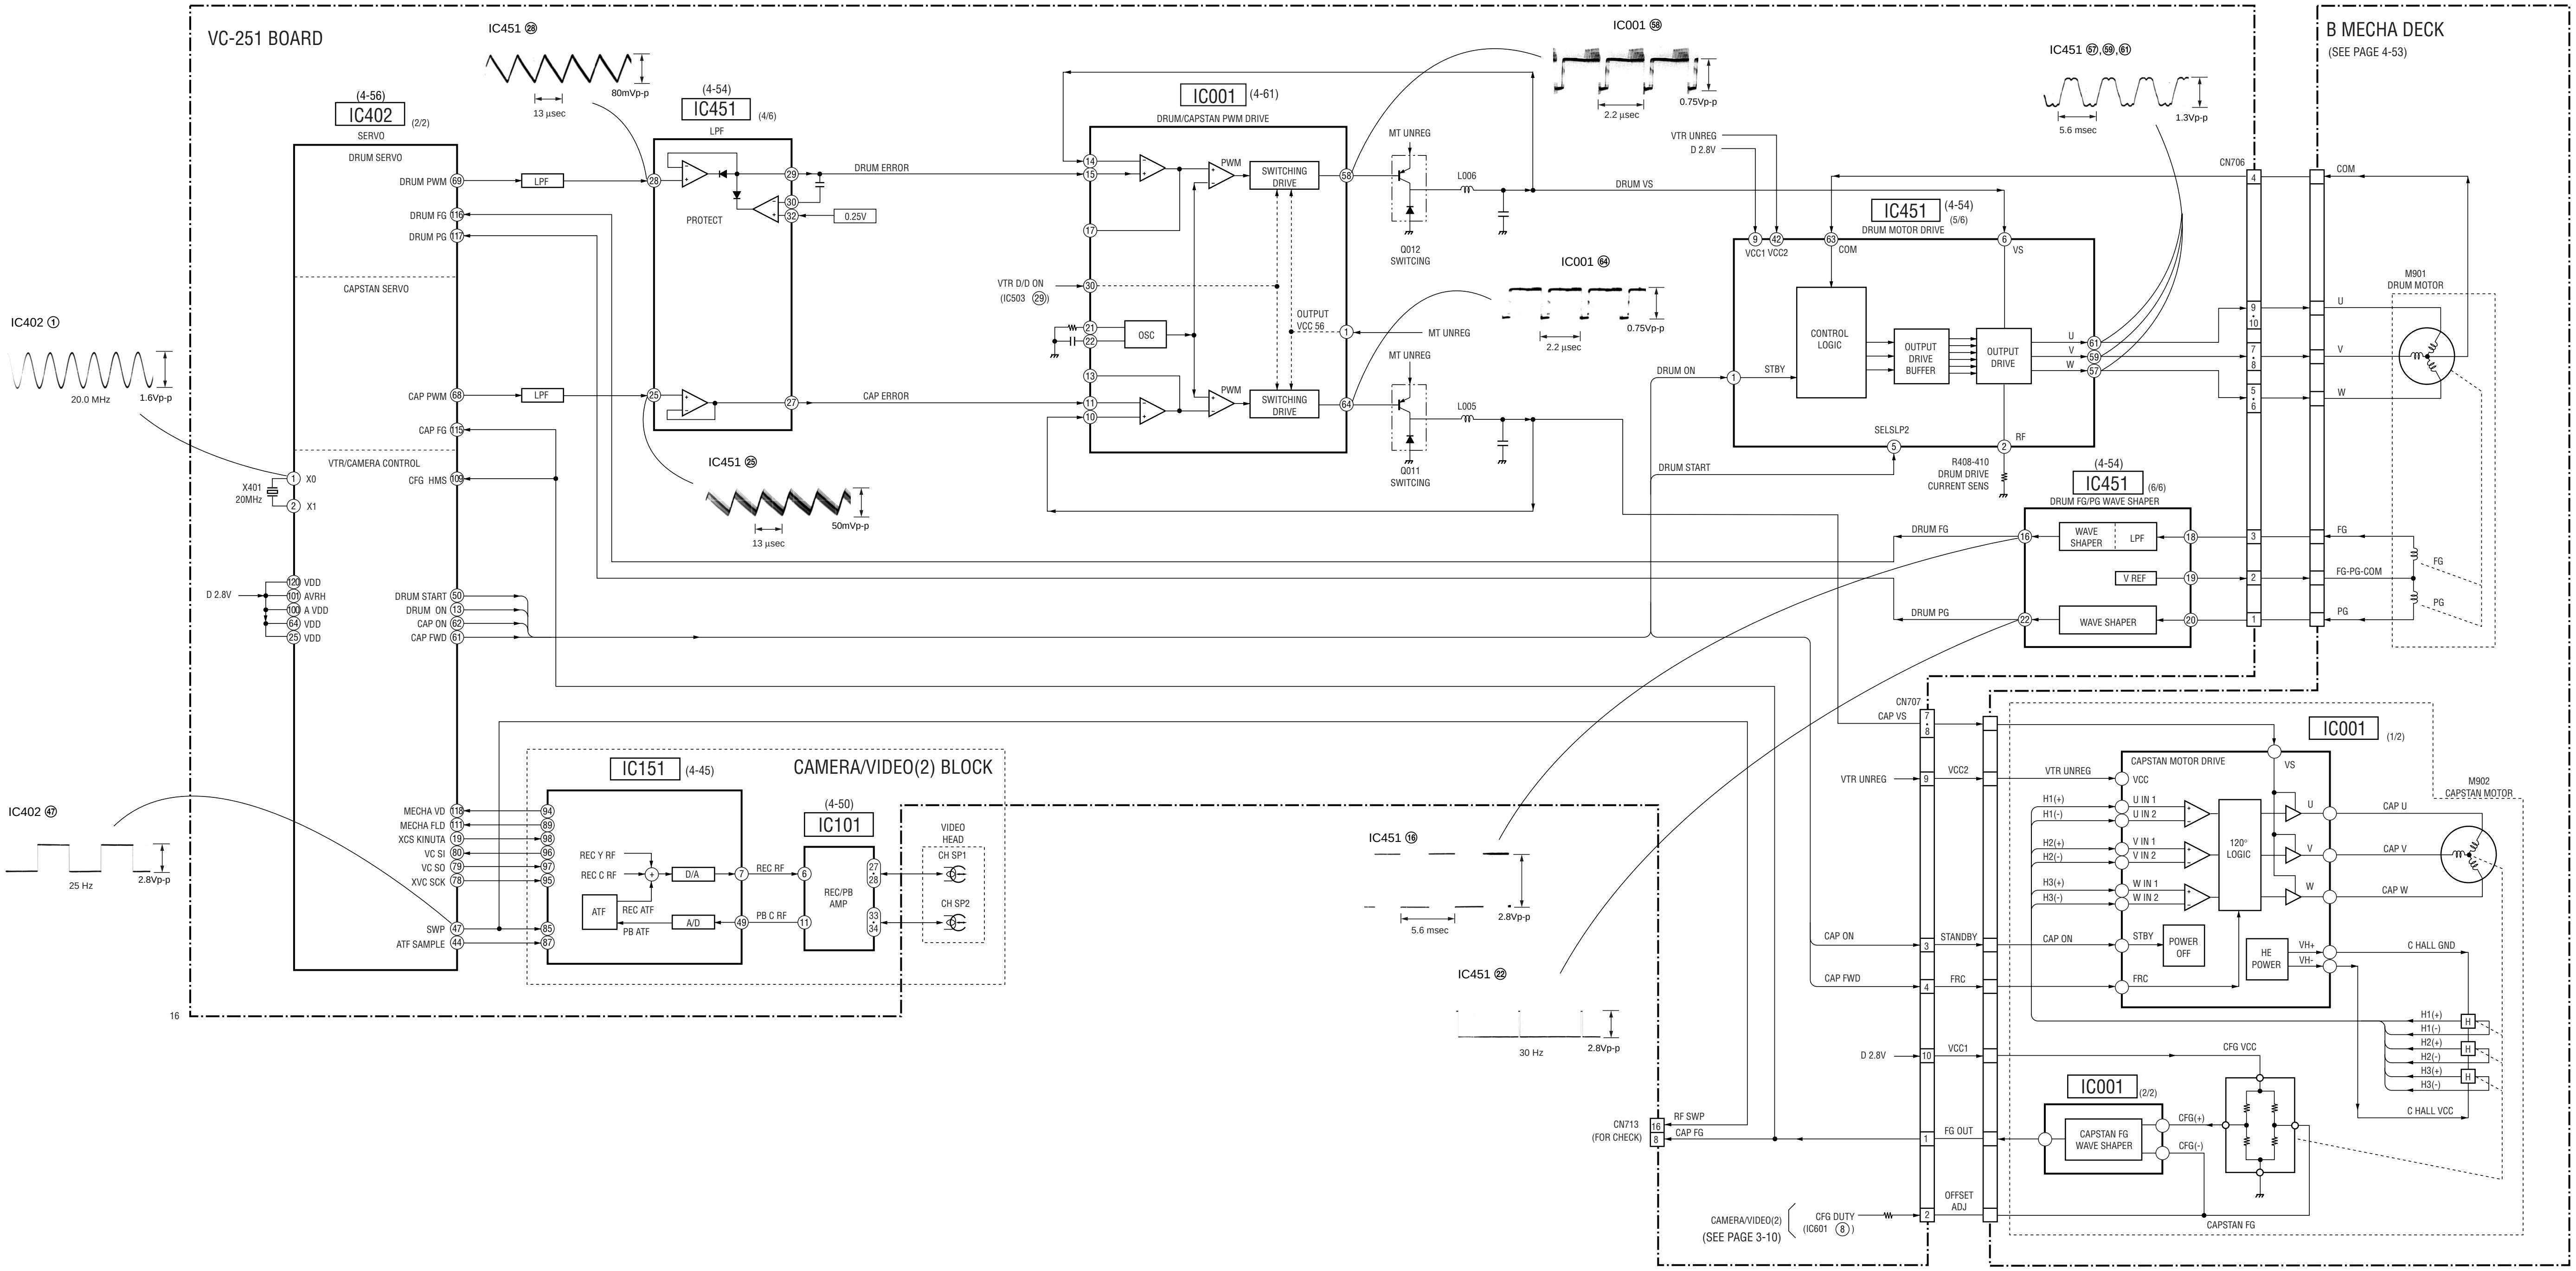
VC-251 BOARD
IC451 ㉘
80mVp-p
13 µsec
(4-56)
IC402
(2/2)
SERVO
DRUM SERVO
DRUM PWM 69
DRUM FG 116
DRUM PG 117
CAPSTAN SERVO
CAP PWM 68
CAP FG 115
VTR/CAMERA CONTROL
CFG HMS 109
X0
X1
X401
20MHz
D 2.8V
VDD
AVRH
A VDD
VDD
VDD
DRUM START 50
DRUM ON 13
CAP ON 62
CAP FWD 61
MECHA VD
MECHA FLD
XCS KINUTA
VC SI
VC SO
XVC SCK
SWP 47
ATF SAMPLE 44
IC402 ①
20.0 MHz
1.6Vp-p
IC402 ㊼
25 Hz
2.8Vp-p
LPF
(4-54)
IC451
(4/6)
LPF
PROTECT
0.25V
DRUM ERROR
CAP ERROR
IC451 ㉕
50mVp-p
13 µsec
IC001
(4-61)
DRUM/CAPSTAN PWM DRIVE
PWM
SWITCHING DRIVE
VTR D/D ON
(IC503 ㉙)
OSC
OUTPUT VCC 56
MT UNREG
L006
L005
Q012 SWITCING
Q011 SWITCING
IC001 58
0.75Vp-p
2.2 µsec
IC001 64
0.75Vp-p
2.2 µsec
DRUM VS
VTR UNREG
D 2.8V
IC451
(4-54)
(5/6)
DRUM MOTOR DRIVE
VCC1 VCC2
COM
VS
CONTROL LOGIC
OUTPUT DRIVE BUFFER
OUTPUT DRIVE
STBY
DRUM ON
SELSLP2
RF
R408-410
DRUM DRIVE
CURRENT SENS
DRUM START
IC451 ㊼,㊾,61
5.6 msec
1.3Vp-p
CN706
(4-54)
IC451
(6/6)
DRUM FG/PG WAVE SHAPER
WAVE SHAPER
LPF
V REF
WAVE SHAPER
DRUM FG
DRUM PG
B MECHA DECK
(SEE PAGE 4-53)
COM
U
V
W
M901
DRUM MOTOR
FG
FG-PG-COM
PG
IC151
(4-45)
CAMERA/VIDEO(2) BLOCK
REC Y RF
REC C RF
D/A
A/D
ATF
REC ATF
PB ATF
(4-50)
IC101
REC RF
PB C RF
REC/PB AMP
VIDEO HEAD
CH SP1
CH SP2
IC451 ⑯
5.6 msec
2.8Vp-p
IC451 ㉒
30 Hz
2.8Vp-p
CN713
(FOR CHECK)
RF SWP
CAP FG
CAMERA/VIDEO(2)
(SEE PAGE 3-10)
CFG DUTY
(IC601 ⑧)
CN707
CAP VS
VTR UNREG
CAP ON
CAP FWD
D 2.8V
VCC2
STANDBY
FRC
VCC1
FG OUT
OFFSET ADJ
IC001
(1/2)
CAPSTAN MOTOR DRIVE
VCC
VS
U IN 1
U IN 2
V IN 1
V IN 2
W IN 1
W IN 2
H1(+)
H1(-)
H2(+)
H2(-)
H3(+)
H3(-)
120° LOGIC
STBY
POWER OFF
HE POWER
VH+
VH-
CAP U
CAP V
CAP W
M902
CAPSTAN MOTOR
C HALL GND
C HALL VCC
CFG VCC
IC001
(2/2)
CAPSTAN FG WAVE SHAPER
CFG(+)
CFG(-)
CAPSTAN FG
16

## 3-7. MODE CONTROL BLOCK DIAGRAM

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

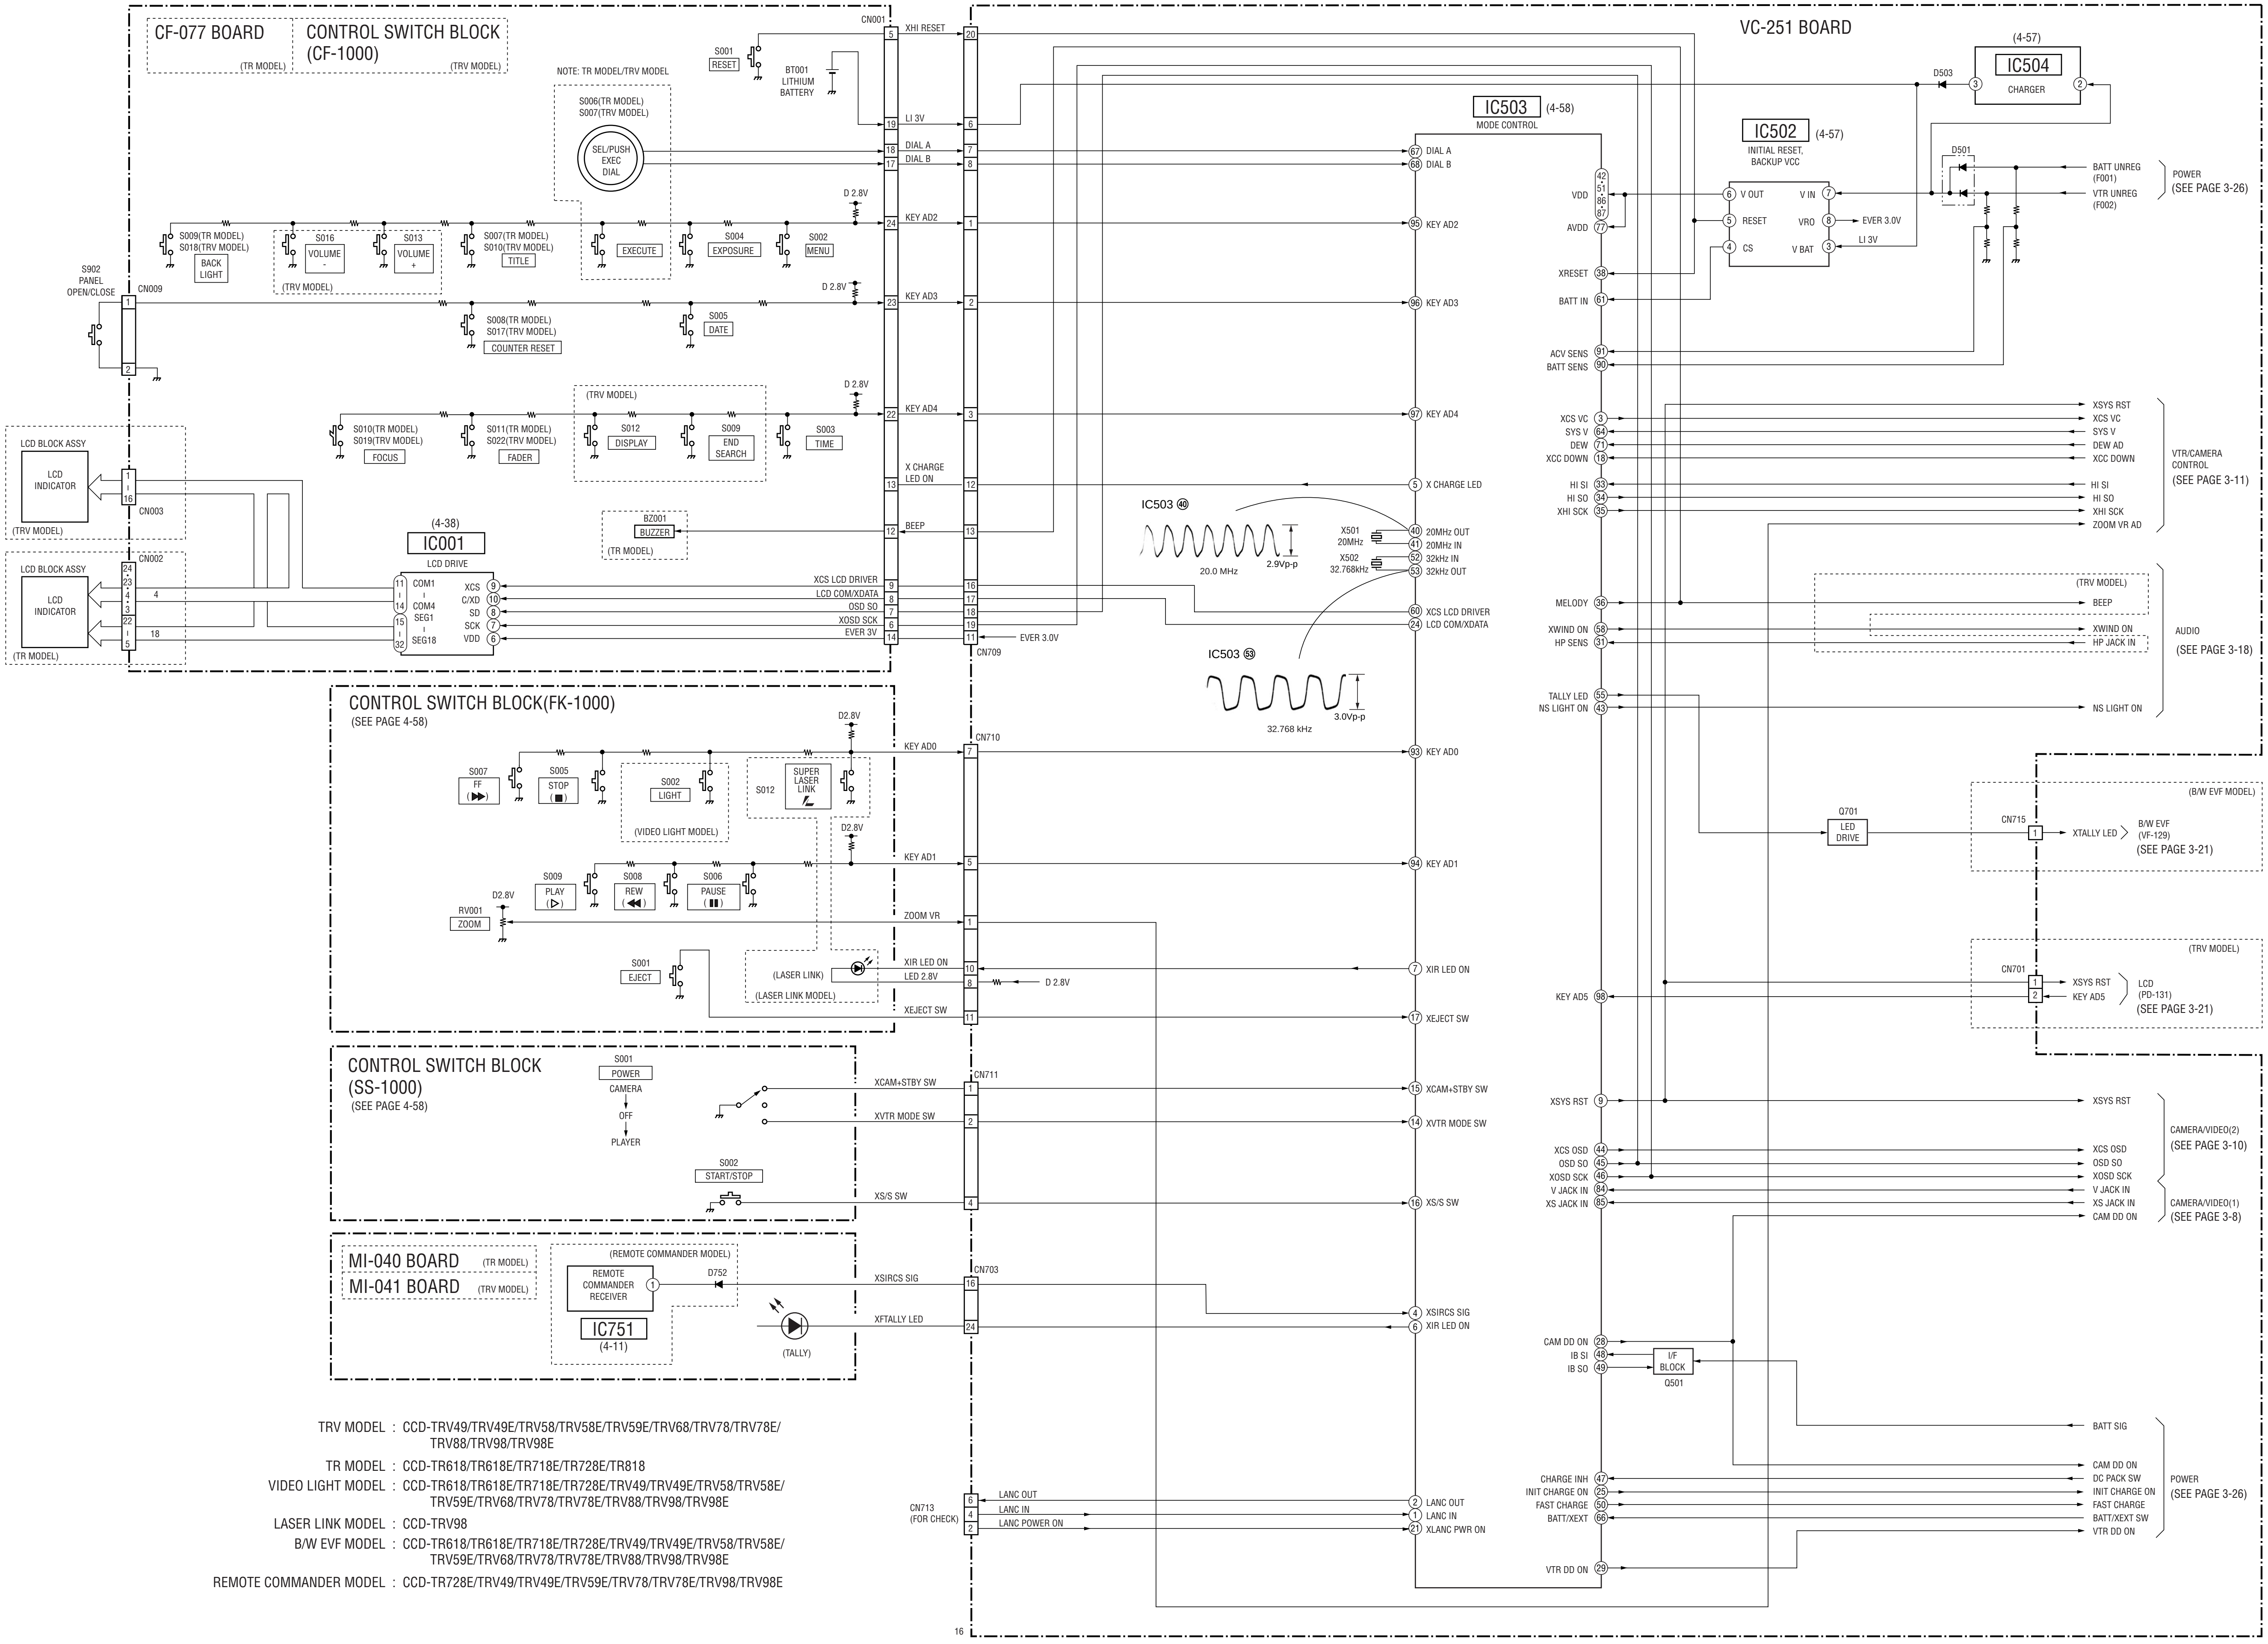
CF-077 BOARD (TR MODEL)
CONTROL SWITCH BLOCK (CF-1000) (TRV MODEL)
NOTE: TR MODEL/TRV MODEL
S001 RESET
BT001 LITHIUM BATTERY
S006(TR MODEL) S007(TRV MODEL)
SEL/PUSH EXEC DIAL
S009(TR MODEL) S018(TRV MODEL) BACK LIGHT
S016 VOLUME -
S013 VOLUME +
S007(TR MODEL) S010(TRV MODEL) TITLE
EXECUTE
S004 EXPOSURE
S002 MENU
S902 PANEL OPEN/CLOSE
CN009
S008(TR MODEL) S017(TRV MODEL) COUNTER RESET
S005 DATE
(TRV MODEL)
S010(TR MODEL) S019(TRV MODEL) FOCUS
S011(TR MODEL) S022(TRV MODEL) FADER
S012 DISPLAY
S009 END SEARCH
S003 TIME
LCD BLOCK ASSY
LCD INDICATOR
CN003
CN002
BZ001 BUZZER (TR MODEL)
(4-38) IC001 LCD DRIVE
COM1 COM4 SEG1 SEG18
XCS C/XD SD SCK VDD
CN001
XHI RESET
LI 3V
DIAL A
DIAL B
D 2.8V
KEY AD2
KEY AD3
KEY AD4
X CHARGE LED ON
BEEP
XCS LCD DRIVER
LCD COM/XDATA
OSD SO
XOSD SCK
EVER 3V
EVER 3.0V
CN709
VC-251 BOARD
(4-57) IC504 CHARGER
D503
IC503 (4-58) MODE CONTROL
IC502 (4-57) INITIAL RESET, BACKUP VCC
V OUT V IN RESET VRO CS V BAT
EVER 3.0V
LI 3V
D501
BATT UNREG (F001)
VTR UNREG (F002)
POWER (SEE PAGE 3-26)
VDD AVDD XRESET BATT IN ACV SENS BATT SENS
KEY AD2 KEY AD3 KEY AD4
X CHARGE LED
XCS VC SYS V DEW XCC DOWN HI SI HI SO XHI SCK
XSYS RST XCS VC SYS V DEW AD XCC DOWN HI SI HI SO XHI SCK ZOOM VR AD
VTR/CAMERA CONTROL (SEE PAGE 3-11)
IC503 (40)
20.0 MHz 2.9Vp-p
X501 20MHz
X502 32.768kHz
20MHz OUT 20MHz IN 32kHz IN 32kHz OUT
XCS LCD DRIVER LCD COM/XDATA
IC503 (53)
32.768 kHz 3.0Vp-p
MELODY XWIND ON HP SENS
(TRV MODEL) BEEP XWIND ON HP JACK IN
AUDIO (SEE PAGE 3-18)
TALLY LED NS LIGHT ON
NS LIGHT ON
CONTROL SWITCH BLOCK(FK-1000) (SEE PAGE 4-58)
S007 FF (▶▶)
S005 STOP (■)
S002 LIGHT
(VIDEO LIGHT MODEL)
S012 SUPER LASER LINK
D2.8V
KEY AD0
CN710
KEY AD1
S009 PLAY (▷)
S008 REW (◀◀)
S006 PAUSE (❚❚)
RV001 ZOOM
ZOOM VR
S001 EJECT
(LASER LINK)
(LASER LINK MODEL)
XIR LED ON
LED 2.8V
D 2.8V
XEJECT SW
KEY AD0 KEY AD1 XIR LED ON XEJECT SW
(B/W EVF MODEL)
Q701 LED DRIVE
CN715 XTALLY LED
B/W EVF (VF-129) (SEE PAGE 3-21)
(TRV MODEL)
CN701 XSYS RST KEY AD5
LCD (PD-131) (SEE PAGE 3-21)
KEY AD5
CONTROL SWITCH BLOCK (SS-1000) (SEE PAGE 4-58)
S001 POWER
CAMERA OFF PLAYER
S002 START/STOP
CN711
XCAM+STBY SW
XVTR MODE SW
XS/S SW
XSYS RST
XCS OSD OSD SO XOSD SCK V JACK IN XS JACK IN
XSYS RST
CAMERA/VIDEO(2) (SEE PAGE 3-10)
XCS OSD OSD SO XOSD SCK V JACK IN XS JACK IN CAM DD ON
CAMERA/VIDEO(1) (SEE PAGE 3-8)
MI-040 BOARD (TR MODEL)
MI-041 BOARD (TRV MODEL)
(REMOTE COMMANDER MODEL)
REMOTE COMMANDER RECEIVER
D752
IC751 (4-11)
(TALLY)
CN703
XSIRCS SIG
XFTALLY LED
XSIRCS SIG XIR LED ON
CAM DD ON IB SI IB SO
I/F BLOCK Q501
BATT SIG
CHARGE INH INIT CHARGE ON FAST CHARGE BATT/XEXT
CAM DD ON DC PACK SW INIT CHARGE ON FAST CHARGE BATT/XEXT SW VTR DD ON
POWER (SEE PAGE 3-26)
VTR DD ON
CN713 (FOR CHECK)
LANC OUT LANC IN LANC POWER ON
LANC OUT LANC IN XLANC PWR ON
16

TRV MODEL : CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

TR MODEL : CCD-TR618/TR618E/TR718E/TR728E/TR818

VIDEO LIGHT MODEL : CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

LASER LINK MODEL : CCD-TRV98

B/W EVF MODEL : CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

REMOTE COMMANDER MODEL : CCD-TR728E/TRV49/TRV49E/TRV59E/TRV78/TRV78E/TRV98/TRV98E

## 3-8. AUDIO BLOCK DIAGRAM

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

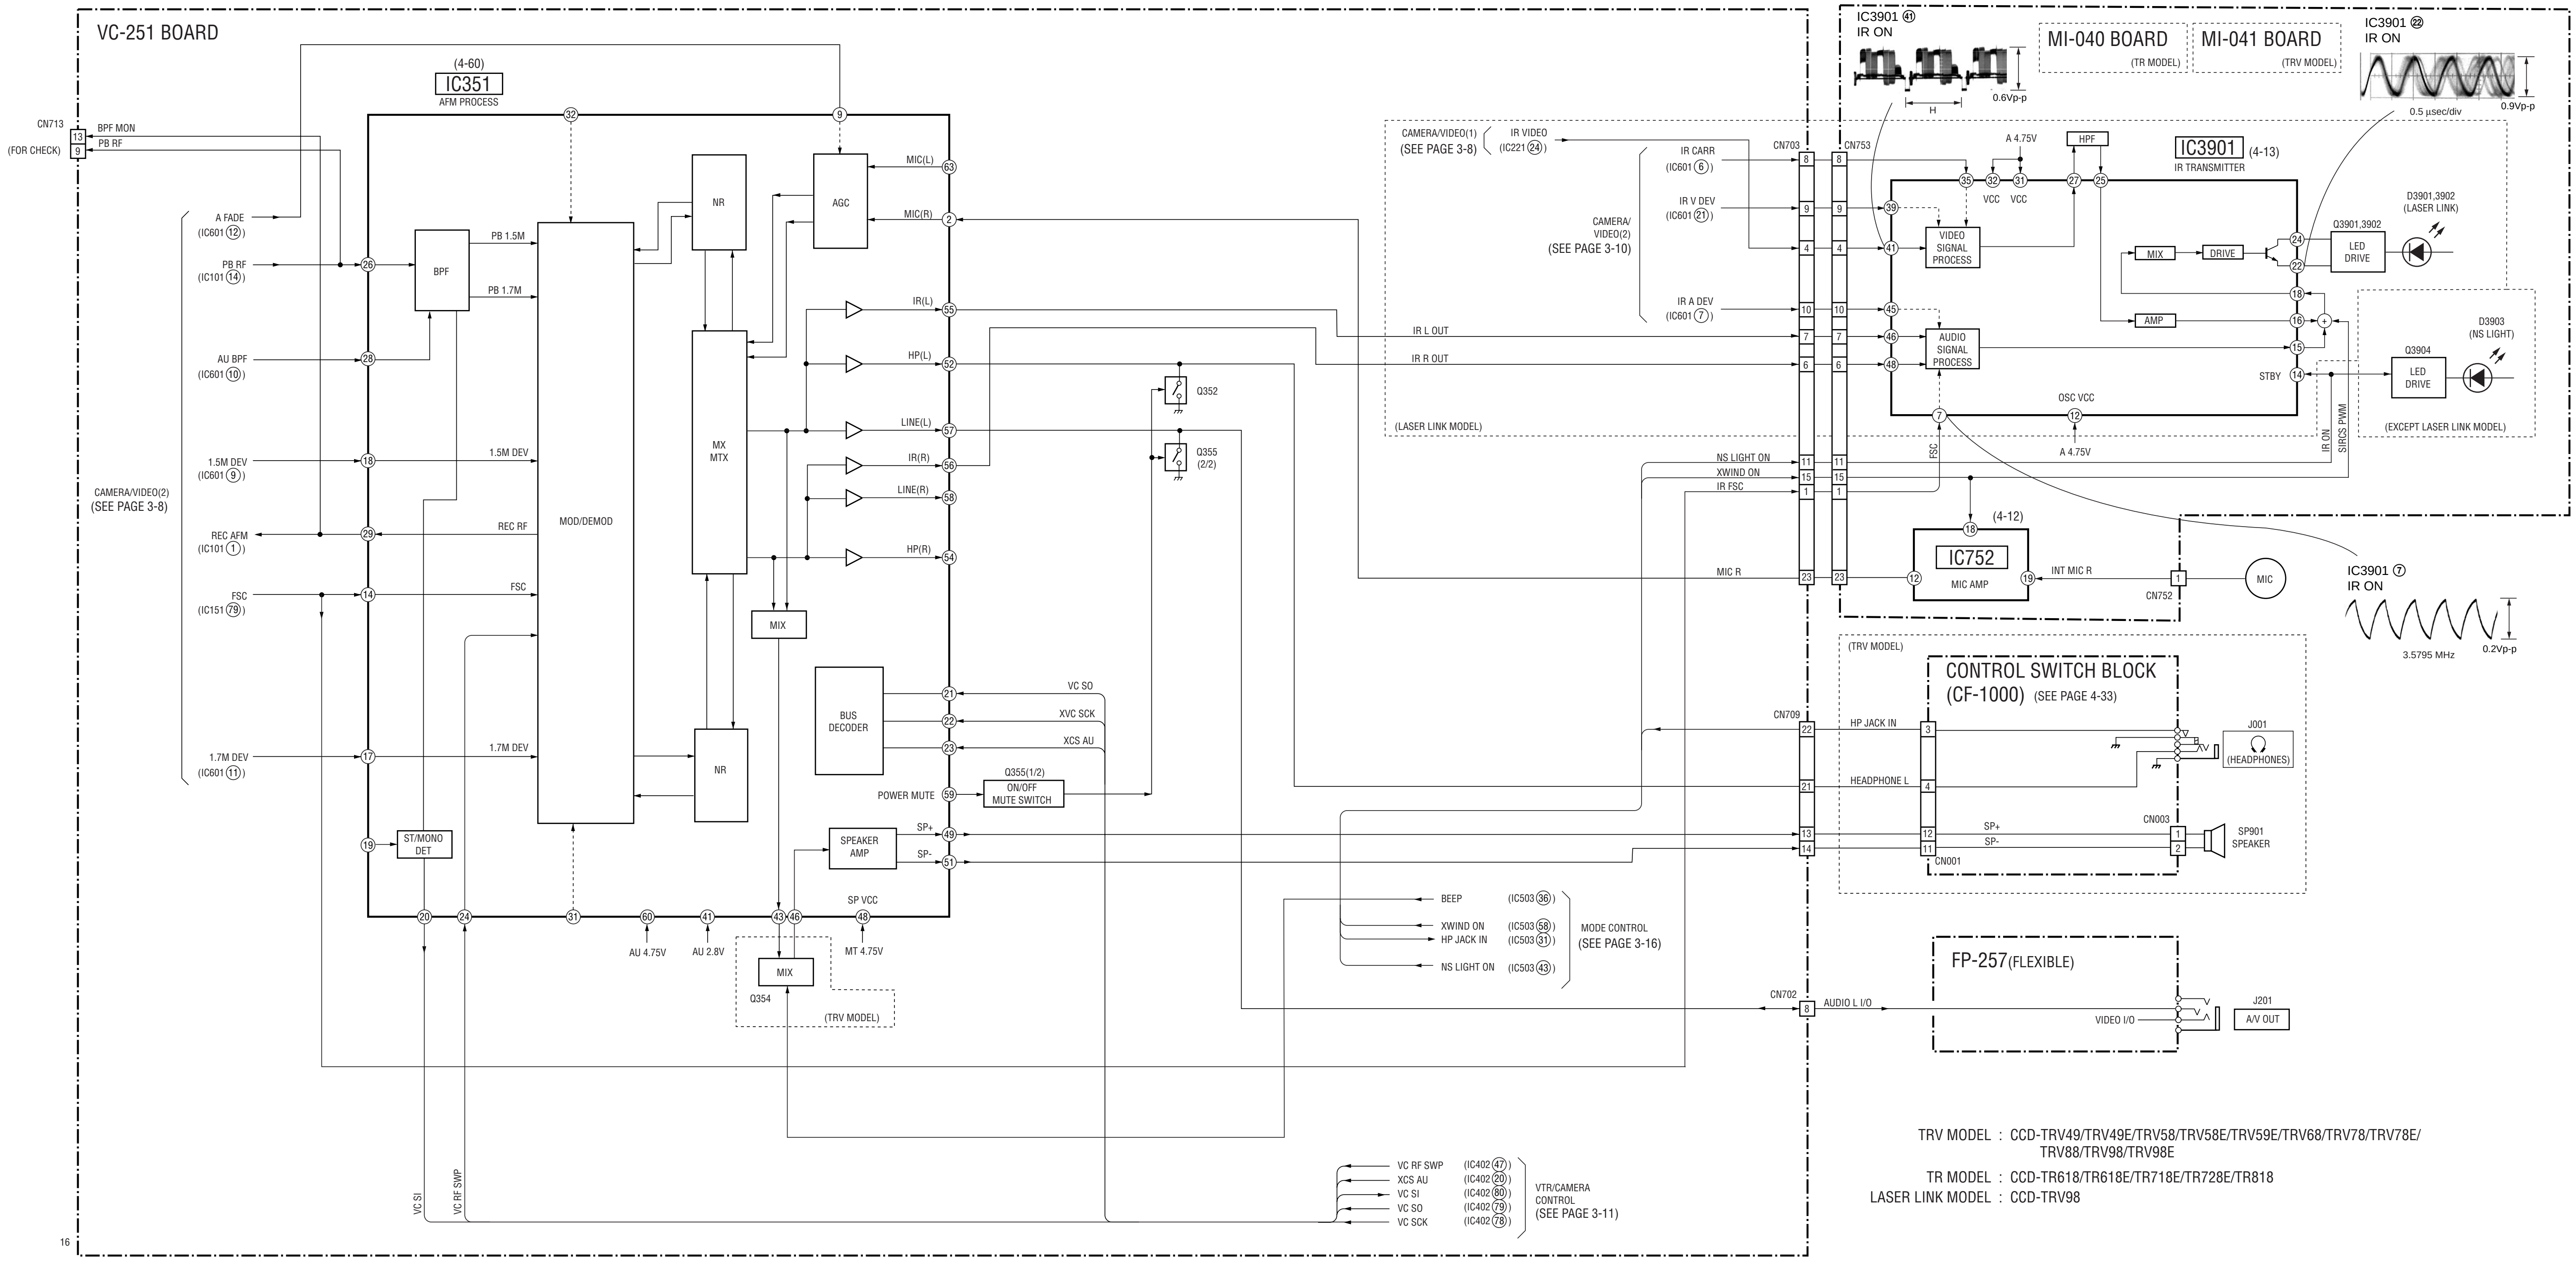
VC-251 BOARD
CN713
(FOR CHECK)
BPF MON
PB RF
(4-60)
IC351
AFM PROCESS
A FADE (IC601 ⑫)
PB RF (IC101 ⑭)
AU BPF (IC601 ⑩)
1.5M DEV (IC601 ⑨)
REC AFM (IC101 ①)
FSC (IC151 (79))
1.7M DEV (IC601 ⑪)
CAMERA/VIDEO(2) (SEE PAGE 3-8)
BPF
PB 1.5M
PB 1.7M
1.5M DEV
REC RF
FSC
1.7M DEV
MOD/DEMOD
NR
AGC
MX MTX
MIX
NR
BUS DECODER
SPEAKER AMP
ST/MONO DET
MIC(L)
MIC(R)
IR(L)
HP(L)
LINE(L)
IR(R)
LINE(R)
HP(R)
VC SO
XVC SCK
XCS AU
POWER MUTE
Q355(1/2) ON/OFF MUTE SWITCH
SP+
SP-
SP VCC
AU 4.75V
AU 2.8V
MT 4.75V
MIX
Q354
(TRV MODEL)
Q352
Q355 (2/2)
VC SI
VC RF SWP
CAMERA/VIDEO(1) (SEE PAGE 3-8)
IR VIDEO (IC221 ㉔)
IR CARR (IC601 ⑥)
IR V DEV (IC601 ㉑)
CAMERA/VIDEO(2) (SEE PAGE 3-10)
IR A DEV (IC601 ⑦)
IR L OUT
IR R OUT
(LASER LINK MODEL)
NS LIGHT ON
XWIND ON
IR FSC
MIC R
CN703
CN753
IC3901 (41) IR ON
H
0.6Vp-p
MI-040 BOARD (TR MODEL)
MI-041 BOARD (TRV MODEL)
IC3901 ㉒ IR ON
0.5 μsec/div
0.9Vp-p
A 4.75V
HPF
IC3901 (4-13) IR TRANSMITTER
VCC
VIDEO SIGNAL PROCESS
AUDIO SIGNAL PROCESS
MIX
DRIVE
AMP
Q3901,3902
LED DRIVE
D3901,3902 (LASER LINK)
D3903 (NS LIGHT)
Q3904
LED DRIVE
STBY
OSC VCC
FSC
IR ON
SIRCS PWM
(EXCEPT LASER LINK MODEL)
(4-12)
IC752 MIC AMP
INT MIC R
CN752
MIC
IC3901 ⑦ IR ON
3.5795 MHz
0.2Vp-p
(TRV MODEL)
CONTROL SWITCH BLOCK (CF-1000) (SEE PAGE 4-33)
CN709
HP JACK IN
HEADPHONE L
J001 (HEADPHONES)
SP+
SP-
CN003
CN001
SP901 SPEAKER
BEEP (IC503 (36))
XWIND ON (IC503 (58))
HP JACK IN (IC503 (31))
NS LIGHT ON (IC503 (43))
MODE CONTROL (SEE PAGE 3-16)
FP-257(FLEXIBLE)
CN702
AUDIO L I/O
VIDEO I/O
J201 A/V OUT
VC RF SWP (IC402 (47))
XCS AU (IC402 ⑳)
VC SI (IC402 (80))
VC SO (IC402 (79))
VC SCK (IC402 (78))
VTR/CAMERA CONTROL (SEE PAGE 3-11)
16

TRV MODEL : CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/
TRV88/TRV98/TRV98E
TR MODEL : CCD-TR618/TR618E/TR718E/TR728E/TR818
LASER LINK MODEL : CCD-TRV98

## 3-9. LCD BLOCK DIAGRAM

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

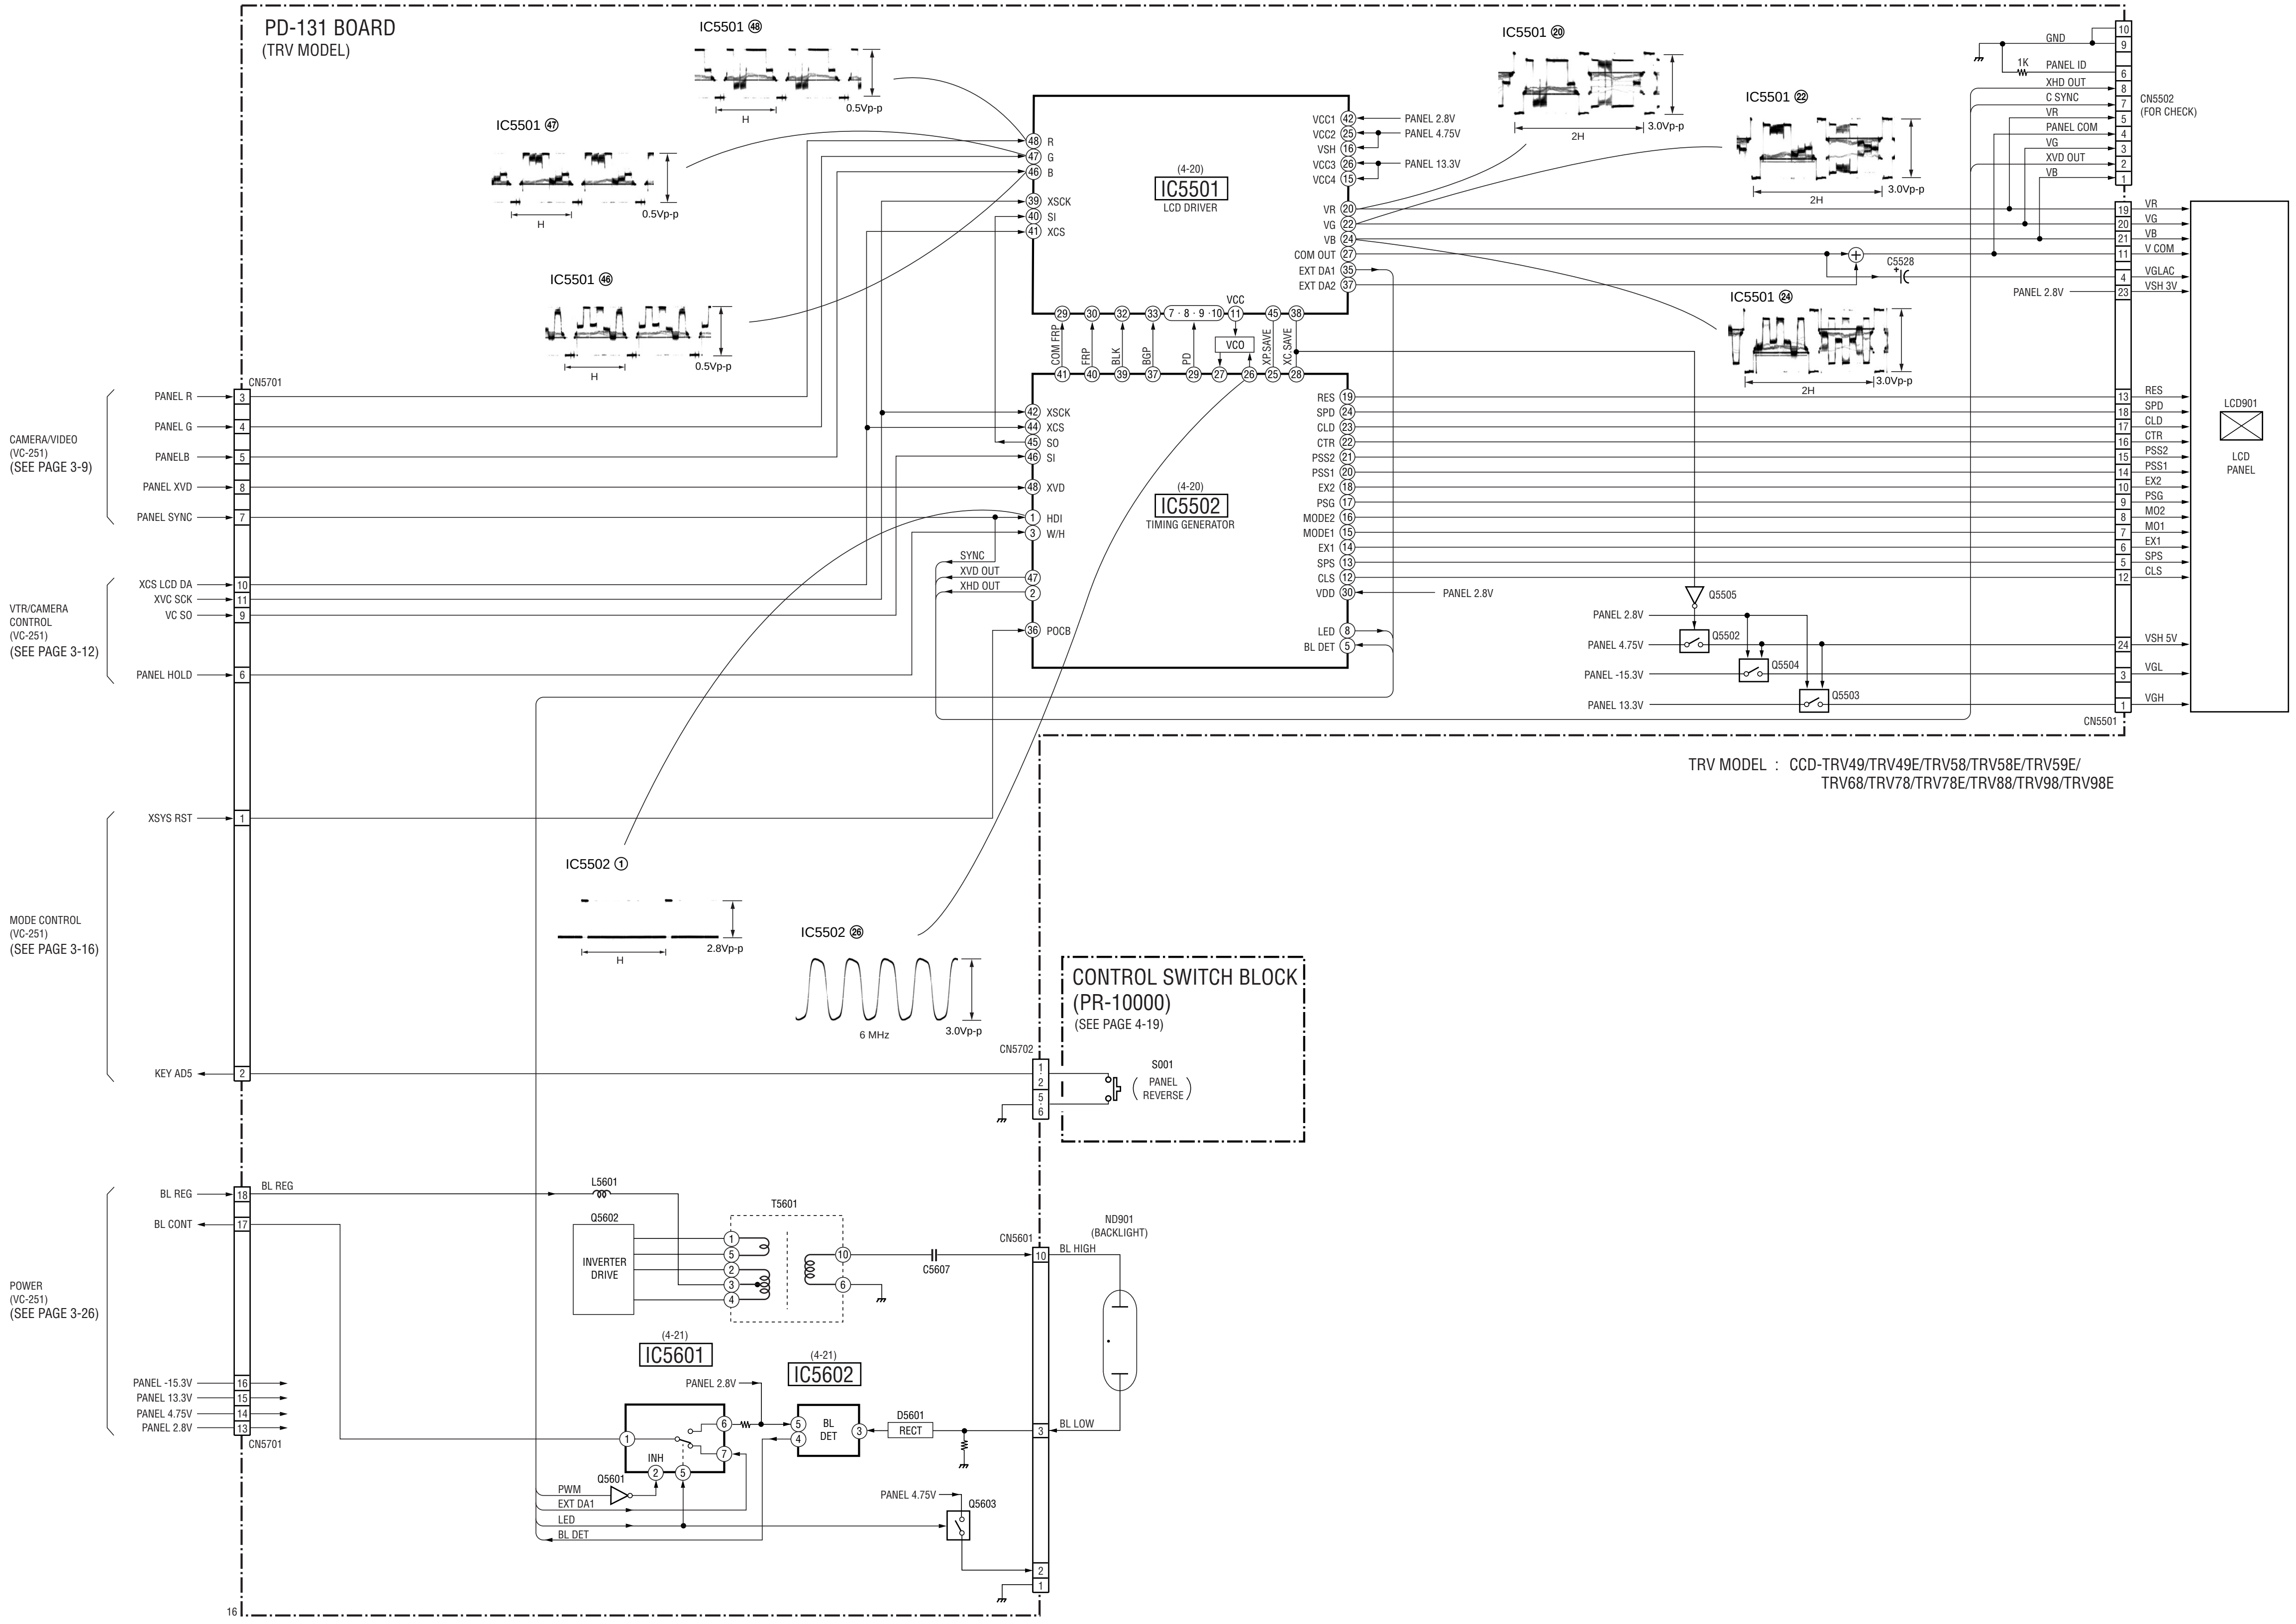
PD-131 BOARD
(TRV MODEL)
IC5501 ㊽
0.5Vp-p
H
IC5501 ㊼
IC5501 ㊻
IC5501 ㉕
2H
3.0Vp-p
IC5501 ㉒
IC5501 ㉔
IC5502 ①
2.8Vp-p
IC5502 ㉖
6 MHz
3.0Vp-p
(4-20)
IC5501
LCD DRIVER
R
G
B
XSCK
SI
XCS
VCC1
VCC2
VSH
VCC3
VCC4
VR
VG
VB
COM OUT
EXT DA1
EXT DA2
PANEL 2.8V
PANEL 4.75V
PANEL 13.3V
COM FRP
FRP
BLK
BGP
PD
VCC
VCO
XP SAVE
XC SAVE
(4-20)
IC5502
TIMING GENERATOR
XSCK
XCS
SO
SI
XVD
HDI
W/H
SYNC
XVD OUT
XHD OUT
POCB
RES
SPD
CLD
CTR
PSS2
PSS1
EX2
PSG
MODE2
MODE1
EX1
SPS
CLS
VDD
LED
BL DET
CN5701
PANEL R
PANEL G
PANELB
PANEL XVD
PANEL SYNC
CAMERA/VIDEO
(VC-251)
(SEE PAGE 3-9)
XCS LCD DA
XVC SCK
VC SO
PANEL HOLD
VTR/CAMERA
CONTROL
(VC-251)
(SEE PAGE 3-12)
XSYS RST
MODE CONTROL
(VC-251)
(SEE PAGE 3-16)
KEY AD5
BL REG
BL CONT
POWER
(VC-251)
(SEE PAGE 3-26)
PANEL -15.3V
PANEL 13.3V
PANEL 4.75V
PANEL 2.8V
GND
1K
PANEL ID
XHD OUT
C SYNC
VR
PANEL COM
VG
XVD OUT
VB
CN5502
(FOR CHECK)
C5528
V COM
VGLAC
VSH 3V
LCD901
LCD
PANEL
Q5505
Q5502
Q5504
Q5503
PANEL -15.3V
VSH 5V
VGL
VGH
CN5501
CN5702
CONTROL SWITCH BLOCK
(PR-10000)
(SEE PAGE 4-19)
S001
PANEL
REVERSE
L5601
Q5602
INVERTER
DRIVE
T5601
C5607
CN5601
ND901
(BACKLIGHT)
BL HIGH
BL LOW
(4-21)
IC5601
(4-21)
IC5602
INH
BL
DET
D5601
RECT
Q5601
Q5603
PWM
EXT DA1
LED
BL DET

TRV MODEL : CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/
TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

## 3-10. B/W EVF BLOCK DIAGRAM

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

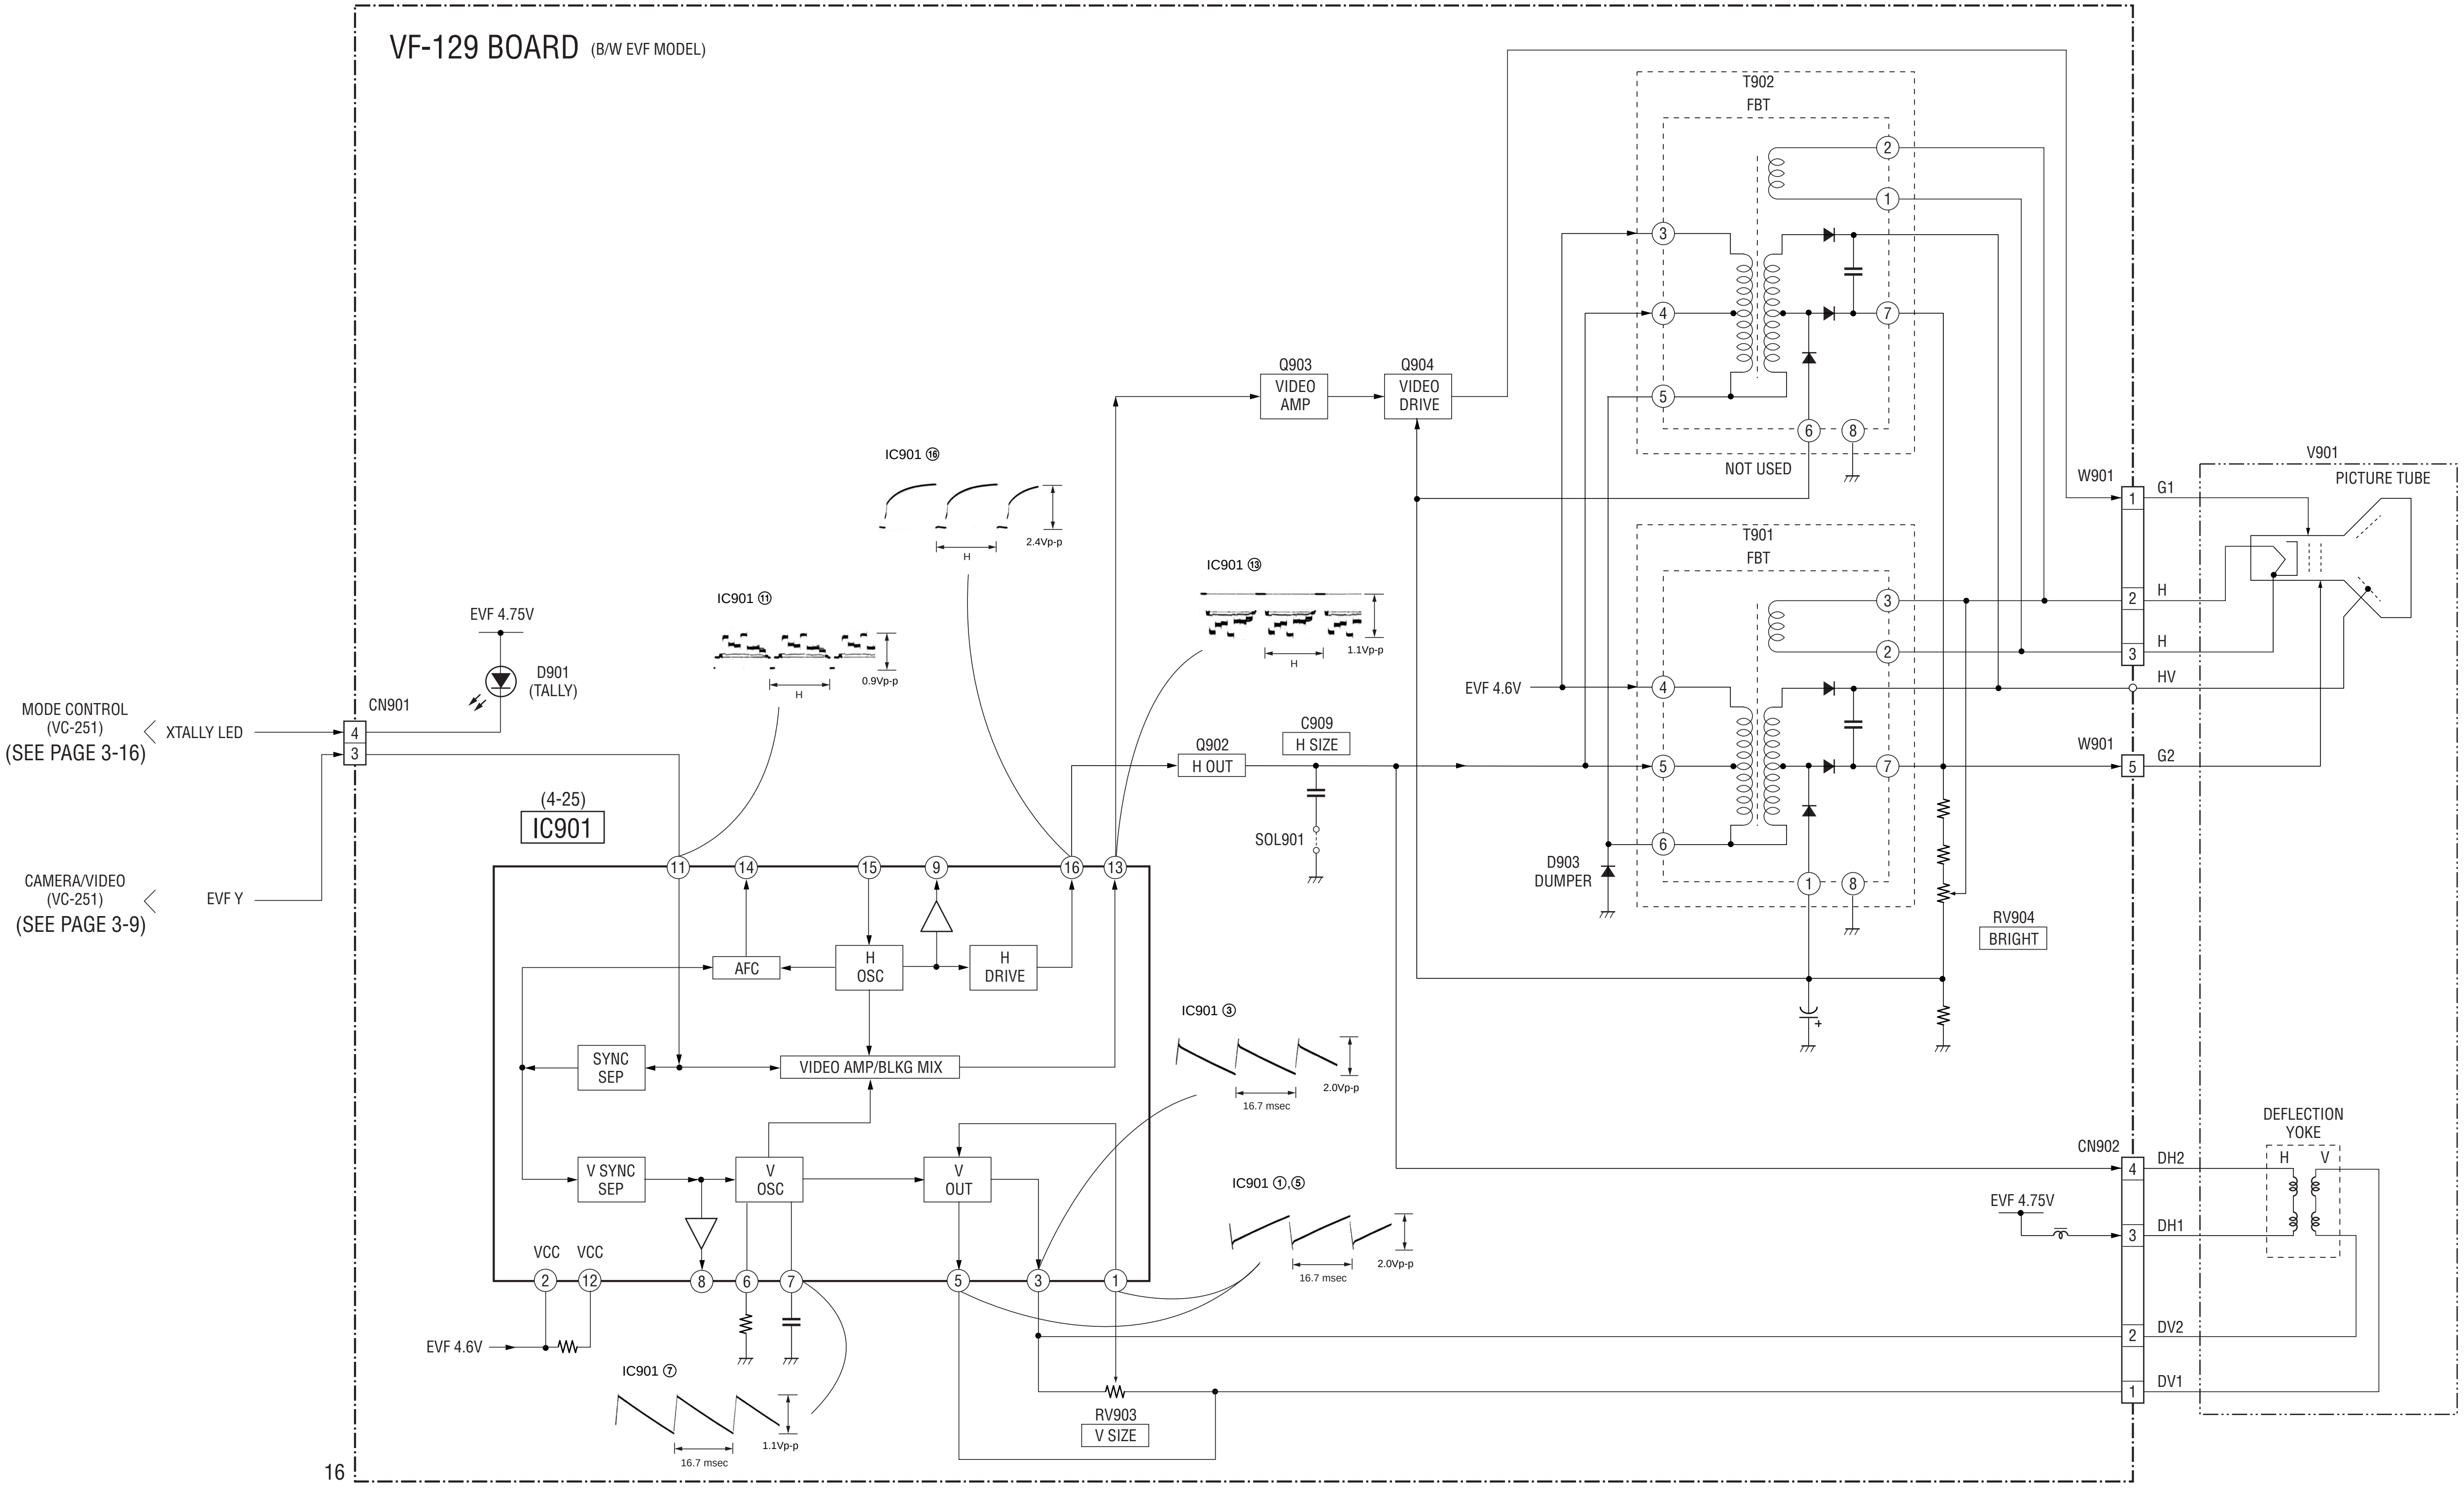
VF-129 BOARD (B/W EVF MODEL)
MODE CONTROL
(VC-251)
(SEE PAGE 3-16)
XTALLY LED
CAMERA/VIDEO
(VC-251)
(SEE PAGE 3-9)
EVF Y
CN901
4
3
EVF 4.75V
D901
(TALLY)
(4-25)
IC901
11
14
15
9
16
13
AFC
H OSC
H DRIVE
SYNC SEP
VIDEO AMP/BLKG MIX
V SYNC SEP
V OSC
V OUT
VCC
VCC
2
12
8
6
7
5
3
1
EVF 4.6V
IC901 ⑪
0.9Vp-p
H
IC901 ⑯
2.4Vp-p
H
IC901 ⑬
1.1Vp-p
H
IC901 ③
2.0Vp-p
16.7 msec
IC901 ①,⑤
2.0Vp-p
16.7 msec
IC901 ⑦
1.1Vp-p
16.7 msec
RV903
V SIZE
Q903
VIDEO AMP
Q904
VIDEO DRIVE
Q902
H OUT
C909
H SIZE
SOL901
T902
FBT
NOT USED
T901
FBT
EVF 4.6V
D903
DUMPER
RV904
BRIGHT
W901
G1
H
H
HV
W901
G2
V901
PICTURE TUBE
CN902
DH2
DH1
DV2
DV1
EVF 4.75V
DEFLECTION YOKE
H
V
16

B/W EVF MODEL : CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

## 3-11.COLOR EVF BLOCK DIAGRAM

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

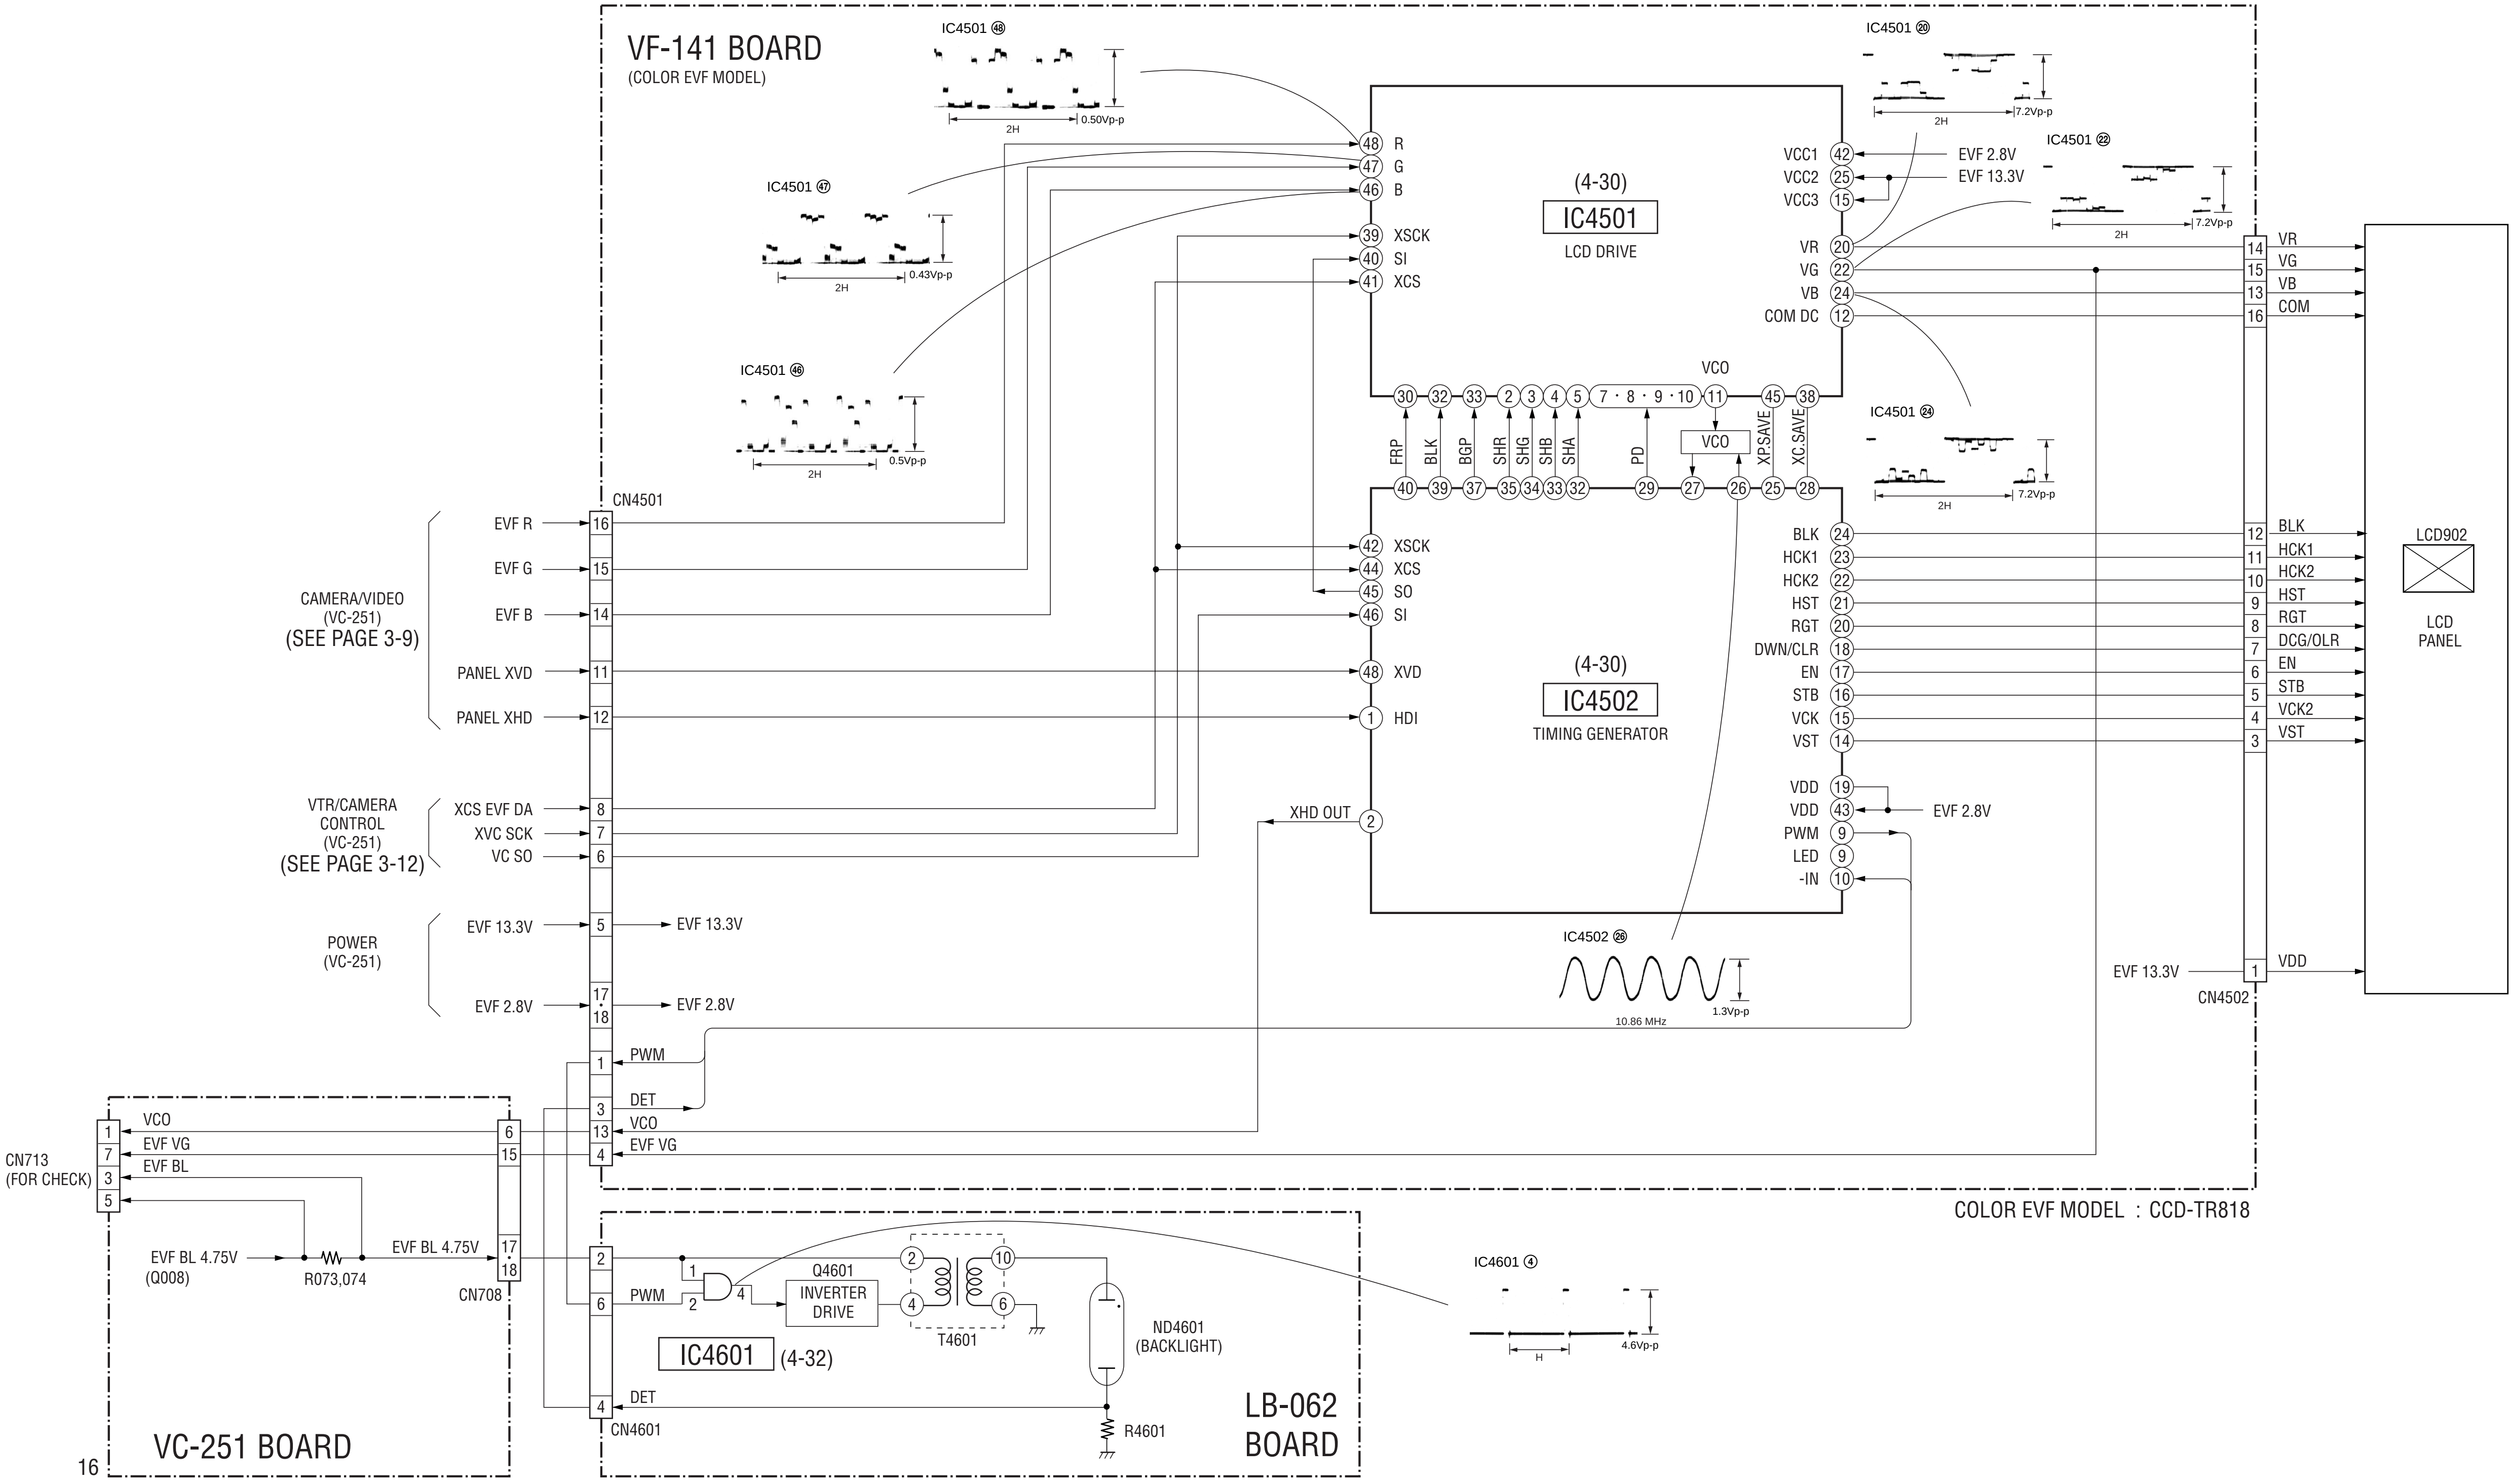
VF-141 BOARD
(COLOR EVF MODEL)
IC4501 ㊽
0.50Vp-p
2H
IC4501 ㊼
0.43Vp-p
2H
IC4501 ㊻
0.5Vp-p
2H
IC4501 ⑳
7.2Vp-p
2H
IC4501 ㉒
7.2Vp-p
2H
IC4501 ㉔
7.2Vp-p
2H
(4-30)
IC4501
LCD DRIVE
48 R
47 G
46 B
39 XSCK
40 SI
41 XCS
VCC1 42
VCC2 25
VCC3 15
EVF 2.8V
EVF 13.3V
VR 20
VG 22
VB 24
COM DC 12
VCO
30 32 33 2 3 4 5 7 · 8 · 9 · 10 11 45 38
FRP BLK BGP SHR SHG SHB SHA PD VCO XP.SAVE XC.SAVE
40 39 37 35 34 33 32 29 27 26 25 28
(4-30)
IC4502
TIMING GENERATOR
42 XSCK
44 XCS
45 SO
46 SI
48 XVD
1 HDI
XHD OUT 2
BLK 24
HCK1 23
HCK2 22
HST 21
RGT 20
DWN/CLR 18
EN 17
STB 16
VCK 15
VST 14
VDD 19
VDD 43
EVF 2.8V
PWM 9
LED 9
-IN 10
IC4502 ㉖
10.86 MHz
1.3Vp-p
CN4501
EVF R 16
EVF G 15
EVF B 14
PANEL XVD 11
PANEL XHD 12
CAMERA/VIDEO
(VC-251)
(SEE PAGE 3-9)
VTR/CAMERA
CONTROL
(VC-251)
(SEE PAGE 3-12)
XCS EVF DA 8
XVC SCK 7
VC SO 6
POWER
(VC-251)
EVF 13.3V 5 EVF 13.3V
EVF 2.8V 17 18 EVF 2.8V
1 PWM
3 DET
13 VCO
4 EVF VG
14 VR
15 VG
13 VB
16 COM
12 BLK
11 HCK1
10 HCK2
9 HST
8 RGT
7 DCG/OLR
6 EN
5 STB
4 VCK2
3 VST
EVF 13.3V
1 VDD
CN4502
LCD902
LCD
PANEL
COLOR EVF MODEL : CCD-TR818
CN713
(FOR CHECK)
1 VCO
7 EVF VG
3 EVF BL
5
6
15
EVF BL 4.75V
(Q008)
R073,074
EVF BL 4.75V
17
18
CN708
16
VC-251 BOARD
2
6 PWM
4 DET
CN4601
1
2
4
Q4601
INVERTER
DRIVE
IC4601
(4-32)
2 10
4 6
T4601
ND4601
(BACKLIGHT)
R4601
LB-062
BOARD
IC4601 ④
4.6Vp-p
H

## 3-12. POWER BLOCK DIAGRAM (1/2)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

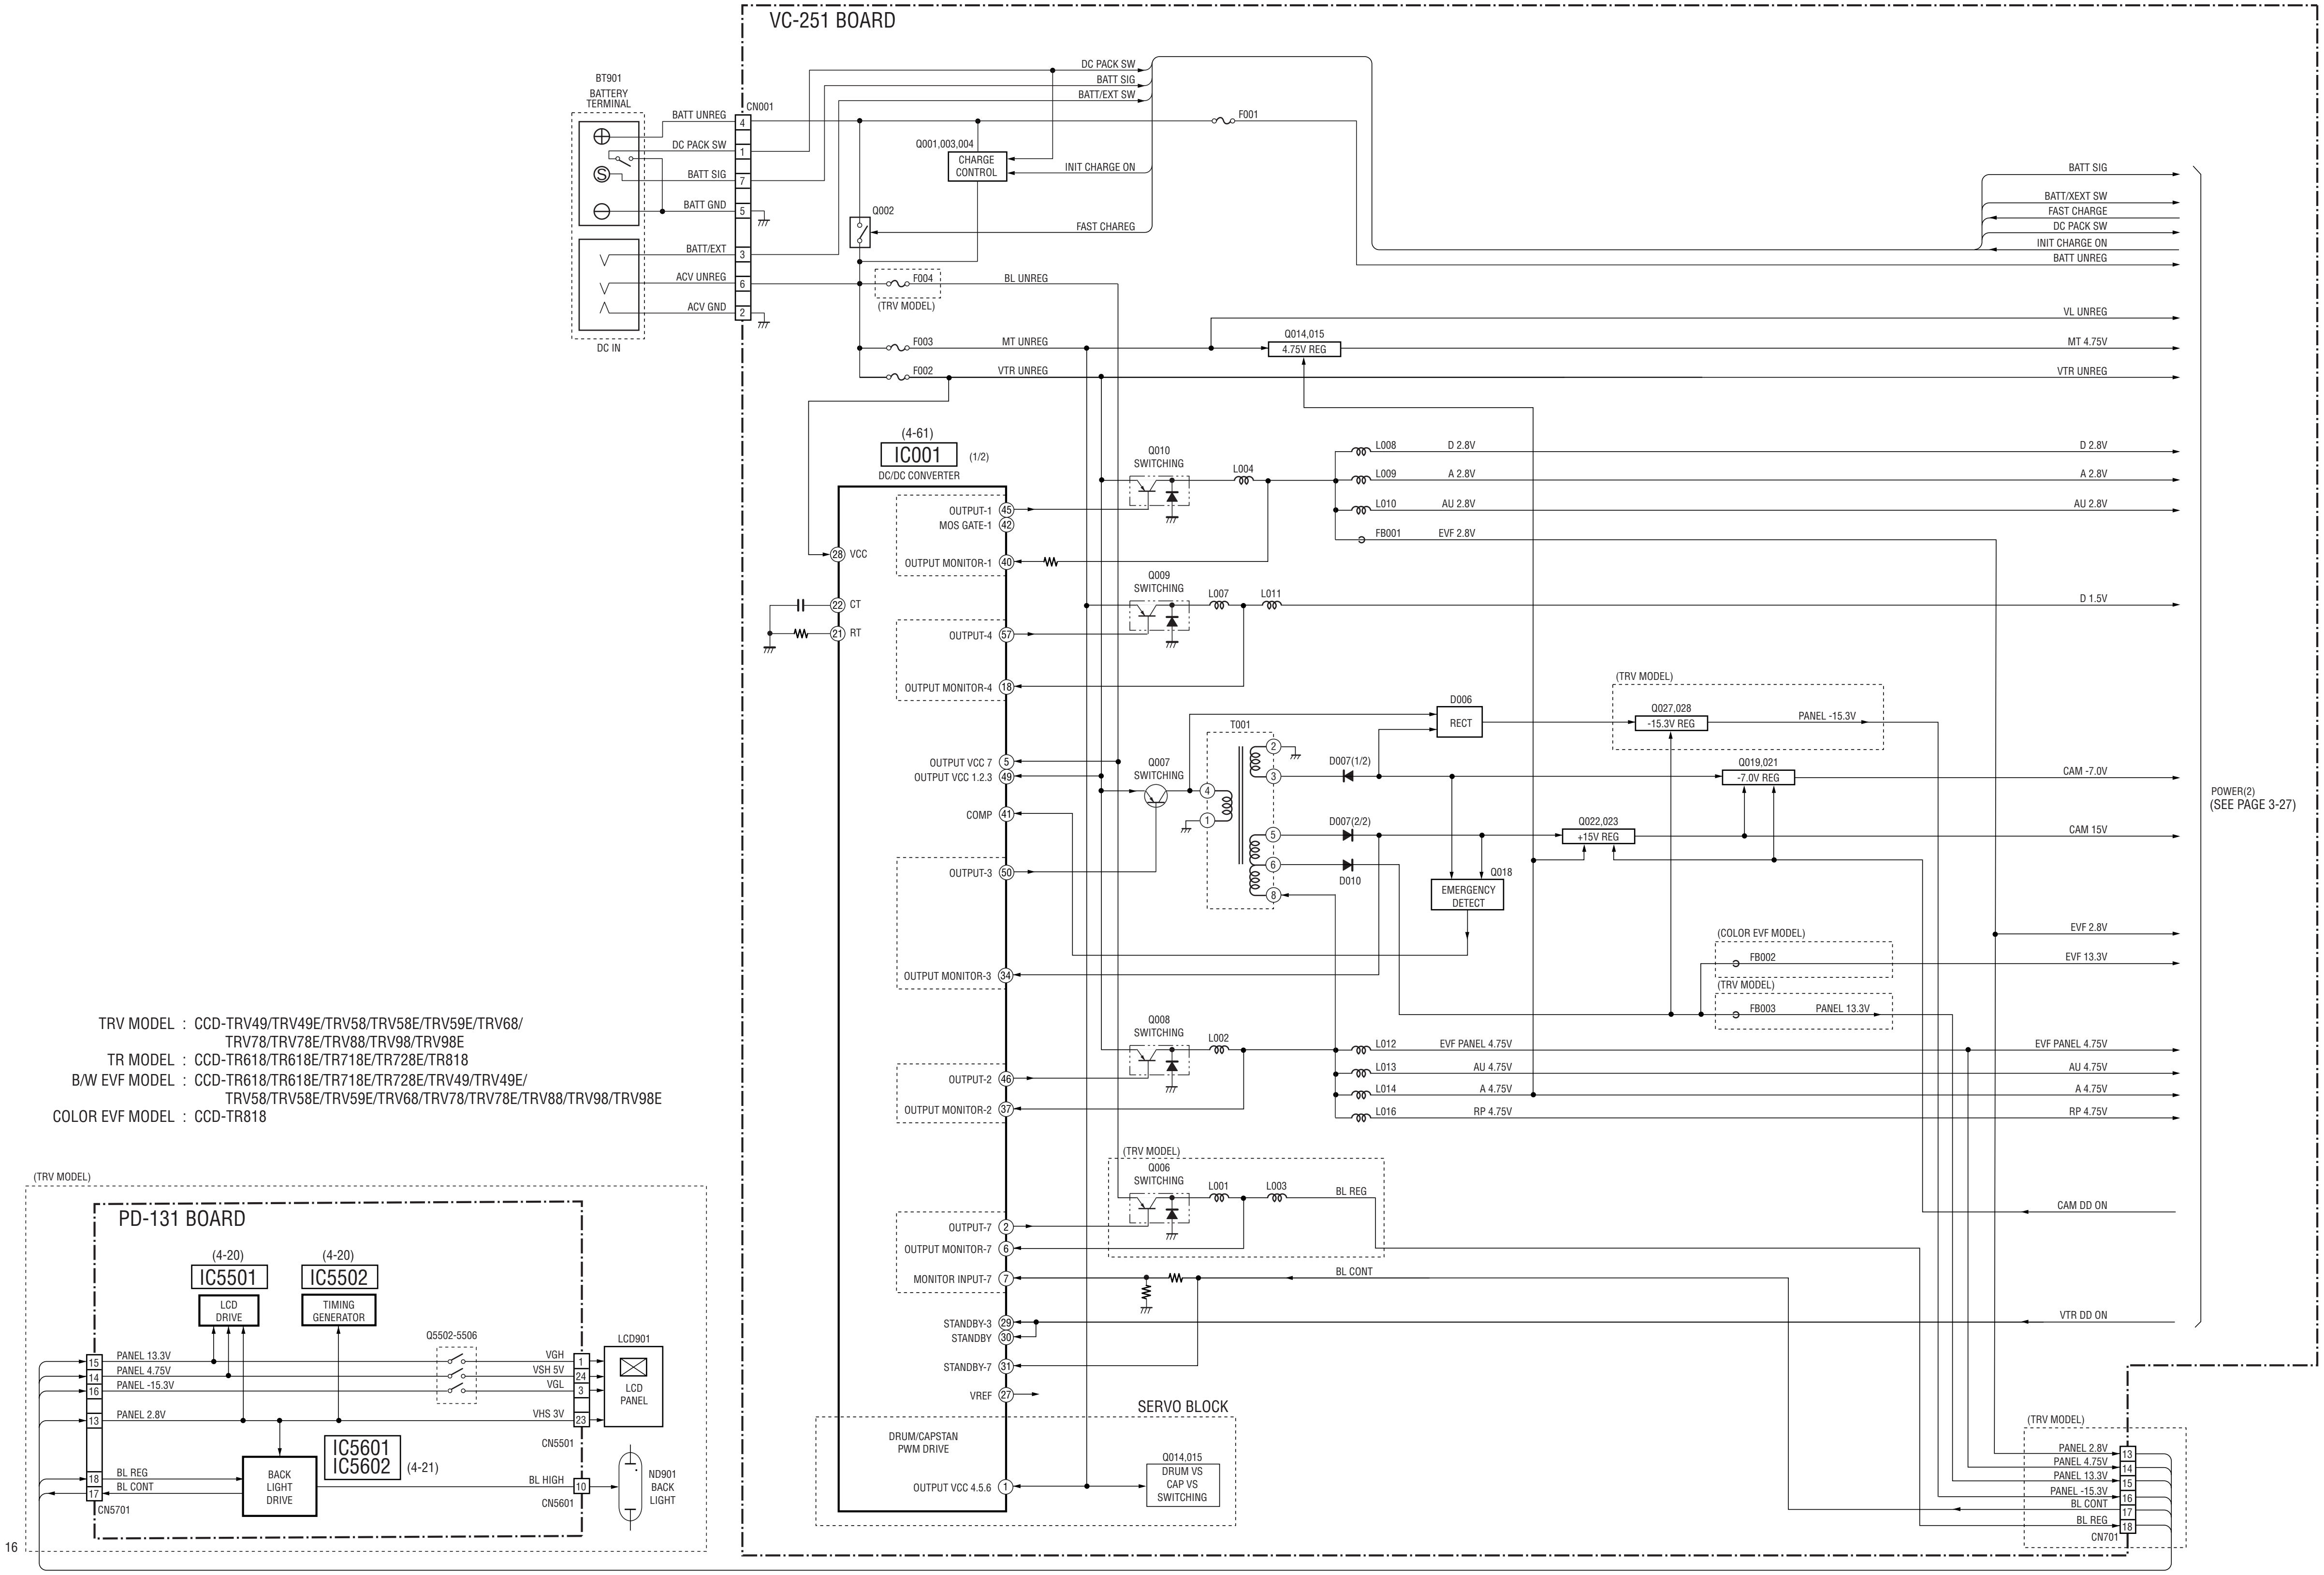
VC-251 BOARD
BT901
BATTERY TERMINAL
DC IN
BATT UNREG
DC PACK SW
BATT SIG
BATT GND
BATT/EXT
ACV UNREG
ACV GND
CN001
DC PACK SW
BATT SIG
BATT/EXT SW
Q001,003,004
CHARGE CONTROL
INIT CHARGE ON
Q002
FAST CHAREG
F001
F004
(TRV MODEL)
BL UNREG
F003
MT UNREG
F002
VTR UNREG
Q014,015
4.75V REG
BATT SIG
BATT/XEXT SW
FAST CHARGE
DC PACK SW
INIT CHARGE ON
BATT UNREG
VL UNREG
MT 4.75V
VTR UNREG
(4-61)
IC001
(1/2)
DC/DC CONVERTER
OUTPUT-1
MOS GATE-1
VCC
OUTPUT MONITOR-1
CT
RT
OUTPUT-4
OUTPUT MONITOR-4
OUTPUT VCC 7
OUTPUT VCC 1.2.3
COMP
OUTPUT-3
OUTPUT MONITOR-3
OUTPUT-2
OUTPUT MONITOR-2
OUTPUT-7
OUTPUT MONITOR-7
MONITOR INPUT-7
STANDBY-3
STANDBY
STANDBY-7
VREF
DRUM/CAPSTAN PWM DRIVE
OUTPUT VCC 4.5.6
SERVO BLOCK
Q014,015
DRUM VS CAP VS SWITCHING
Q010 SWITCHING
L004
L008 D 2.8V
L009 A 2.8V
L010 AU 2.8V
FB001 EVF 2.8V
D 2.8V
A 2.8V
AU 2.8V
Q009 SWITCHING
L007
L011
D 1.5V
(TRV MODEL)
D006
RECT
Q027,028
-15.3V REG
PANEL -15.3V
T001
Q007 SWITCHING
D007(1/2)
D007(2/2)
D010
Q019,021
-7.0V REG
CAM -7.0V
Q022,023
+15V REG
CAM 15V
Q018
EMERGENCY DETECT
POWER(2)
(SEE PAGE 3-27)
(COLOR EVF MODEL)
FB002
EVF 2.8V
EVF 13.3V
(TRV MODEL)
FB003
PANEL 13.3V
Q008 SWITCHING
L002
L012 EVF PANEL 4.75V
L013 AU 4.75V
L014 A 4.75V
L016 RP 4.75V
EVF PANEL 4.75V
AU 4.75V
A 4.75V
RP 4.75V
(TRV MODEL)
Q006 SWITCHING
L001
L003
BL REG
CAM DD ON
BL CONT
VTR DD ON
(TRV MODEL)
PANEL 2.8V
PANEL 4.75V
PANEL 13.3V
PANEL -15.3V
BL CONT
BL REG
CN701
(TRV MODEL)
PD-131 BOARD
(4-20)
IC5501
LCD DRIVE
(4-20)
IC5502
TIMING GENERATOR
Q5502-5506
LCD901
LCD PANEL
PANEL 13.3V
PANEL 4.75V
PANEL -15.3V
PANEL 2.8V
VGH
VSH 5V
VGL
VHS 3V
CN5501
IC5601
IC5602
(4-21)
BACK LIGHT DRIVE
BL REG
BL CONT
BL HIGH
CN5601
ND901
BACK LIGHT
CN5701
16

TRV MODEL : CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/
TRV78/TRV78E/TRV88/TRV98/TRV98E
TR MODEL : CCD-TR618/TR618E/TR718E/TR728E/TR818
B/W EVF MODEL : CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/
TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
COLOR EVF MODEL : CCD-TR818

## 3-13. POWER BLOCK DIAGRAM (2/2)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

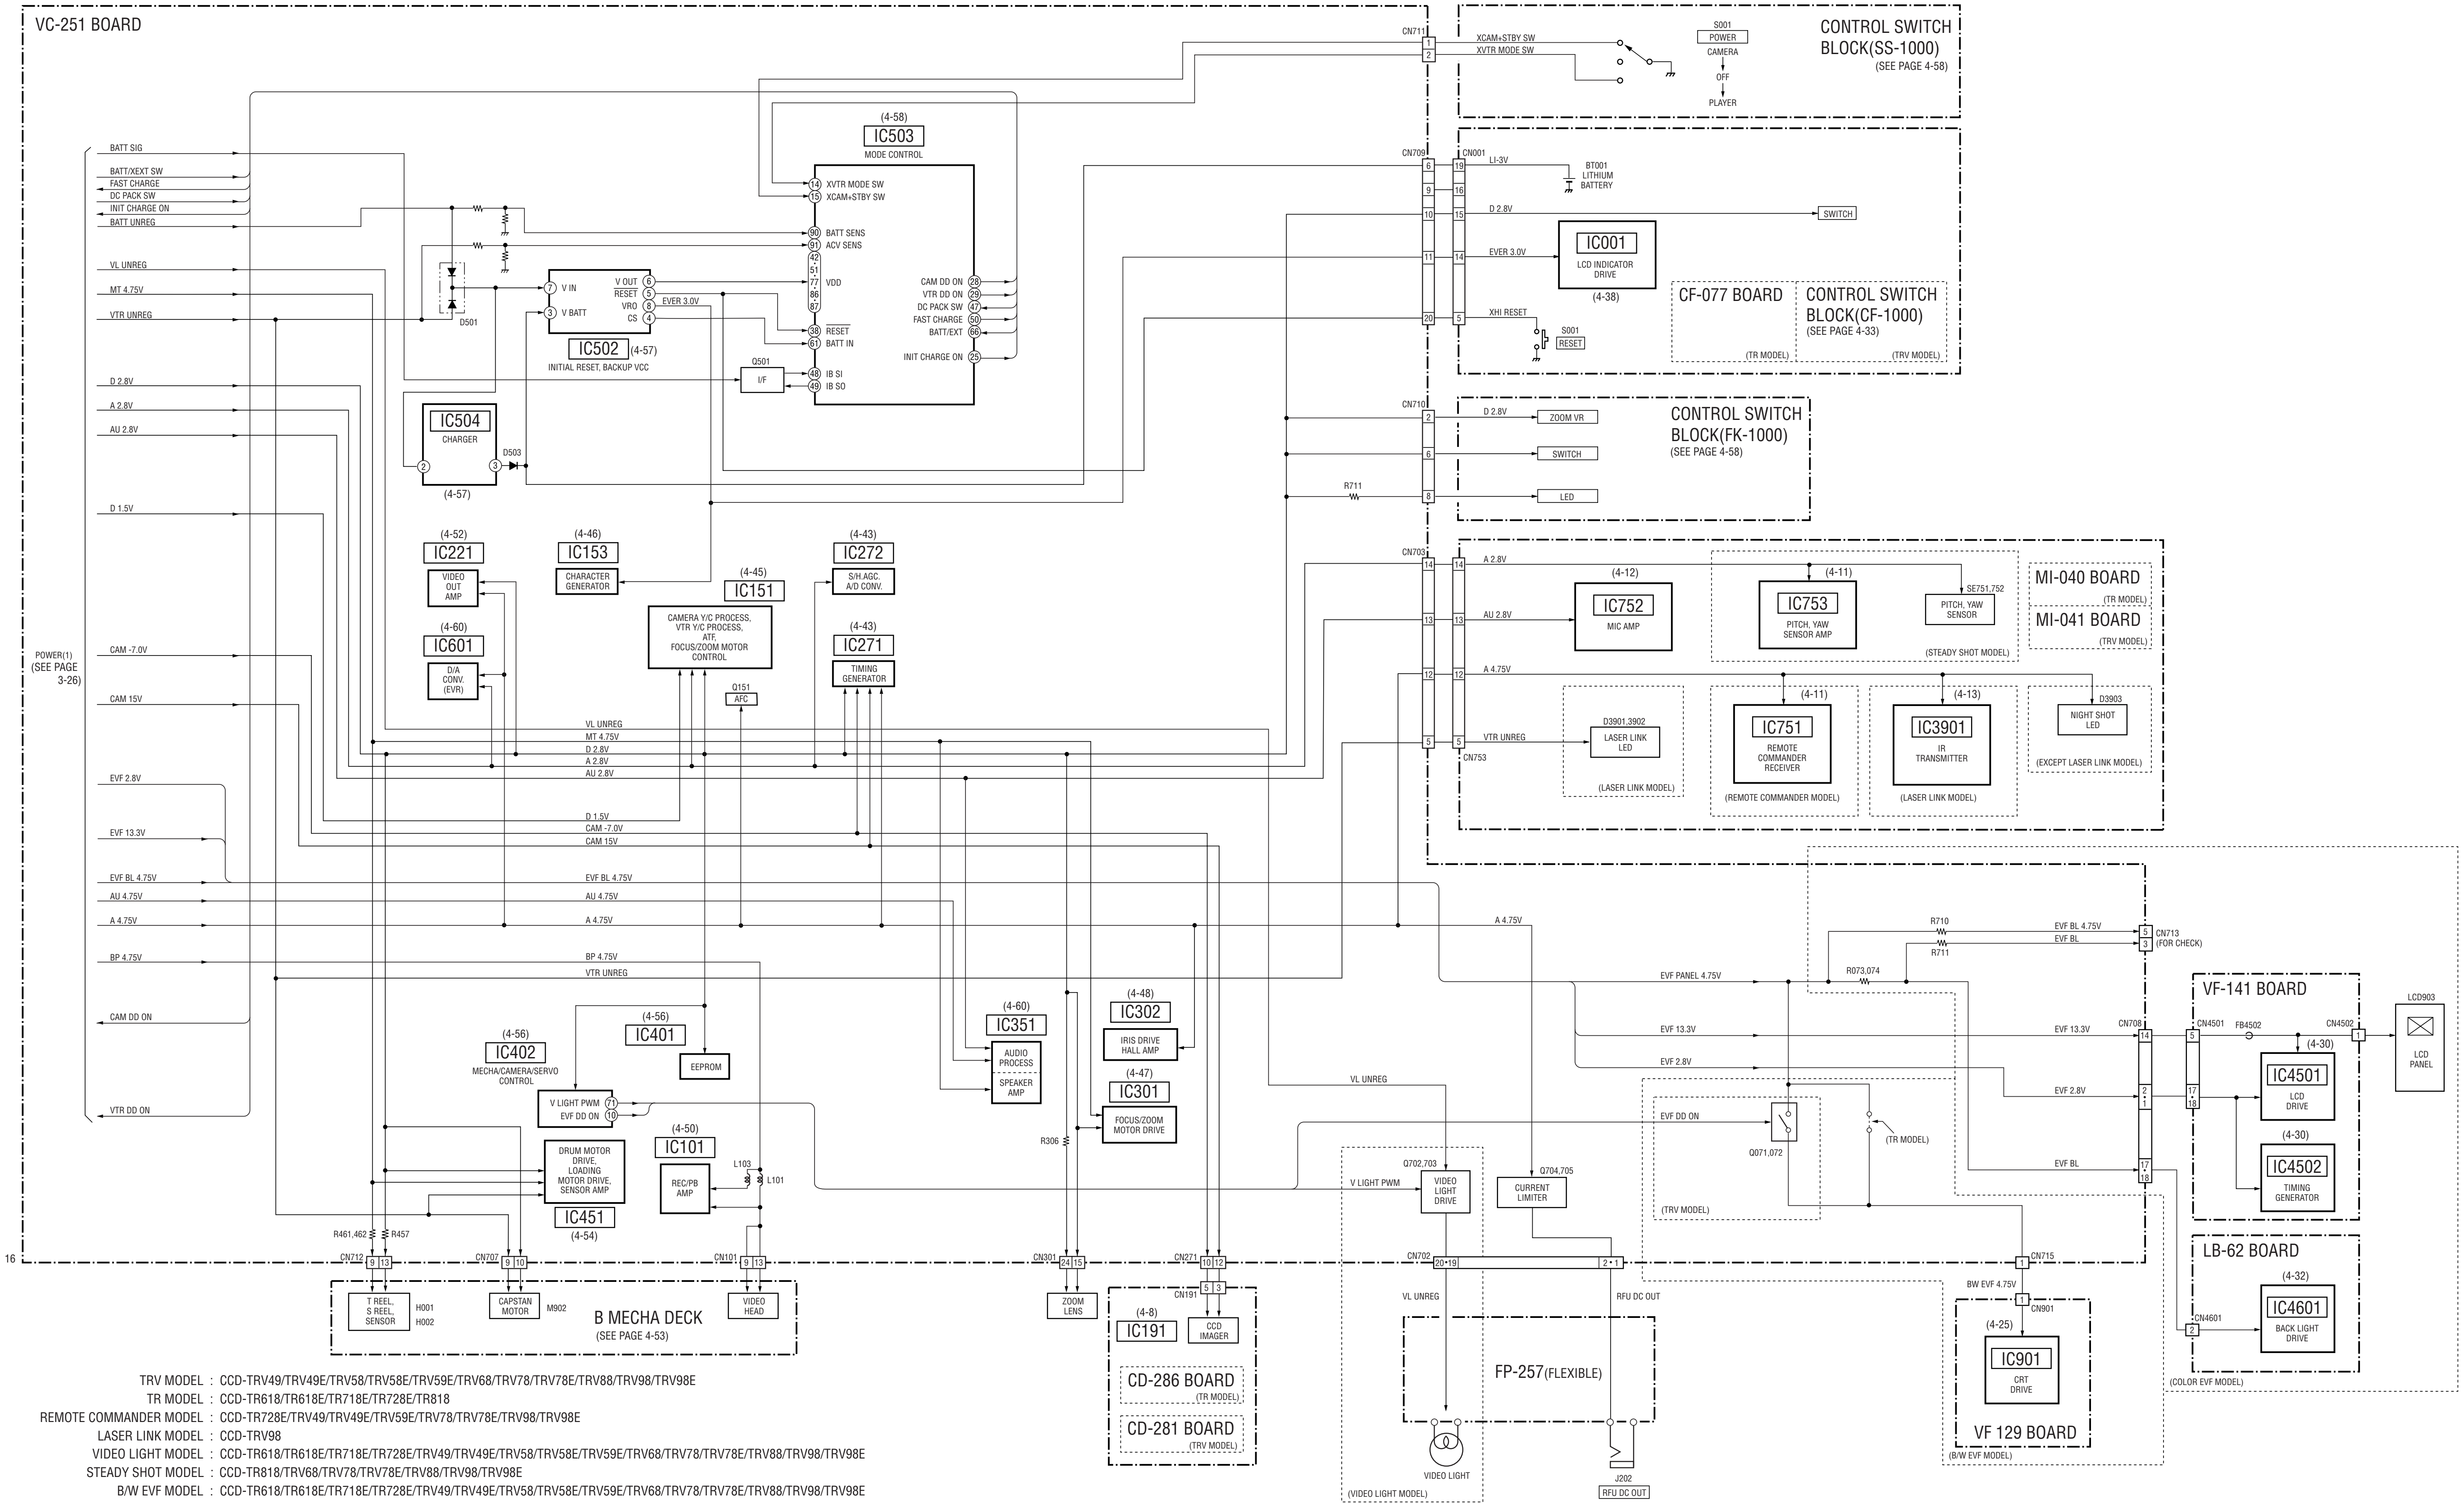
VC-251 BOARD
IC503 (4-58) MODE CONTROL
XVTR MODE SW
XCAM+STBY SW
BATT SENS
ACV SENS
VDD
RESET
BATT IN
IB SI
IB SO
CAM DD ON
VTR DD ON
DC PACK SW
FAST CHARGE
BATT/EXT
INIT CHARGE ON
IC502 (4-57) INITIAL RESET, BACKUP VCC
V IN
V BATT
V OUT
RESET
VRO
CS
EVER 3.0V
Q501 I/F
D501
IC504 CHARGER (4-57)
D503
BATT SIG
BATT/XEXT SW
FAST CHARGE
DC PACK SW
INIT CHARGE ON
BATT UNREG
VL UNREG
MT 4.75V
VTR UNREG
D 2.8V
A 2.8V
AU 2.8V
D 1.5V
POWER(1) (SEE PAGE 3-26)
CAM -7.0V
CAM 15V
EVF 2.8V
EVF 13.3V
EVF BL 4.75V
AU 4.75V
A 4.75V
BP 4.75V
VTR UNREG
CAM DD ON
VTR DD ON
IC221 (4-52) VIDEO OUT AMP
IC153 (4-46) CHARACTER GENERATOR
IC151 (4-45) CAMERA Y/C PROCESS, VTR Y/C PROCESS, ATF, FOCUS/ZOOM MOTOR CONTROL
Q151 AFC
IC272 (4-43) S/H.AGC. A/D CONV.
IC601 (4-60) D/A CONV. (EVR)
IC271 (4-43) TIMING GENERATOR
IC402 (4-56) MECHA/CAMERA/SERVO CONTROL
V LIGHT PWM
EVF DD ON
IC401 (4-56) EEPROM
IC101 (4-50) REC/PB AMP
L103
L101
DRUM MOTOR DRIVE, LOADING MOTOR DRIVE, SENSOR AMP
IC451 (4-54)
IC351 (4-60) AUDIO PROCESS SPEAKER AMP
IC302 (4-48) IRIS DRIVE HALL AMP
IC301 (4-47) FOCUS/ZOOM MOTOR DRIVE
R306
R461,462
R457
CN712
CN707
CN101
CN301
CN271
T REEL, S REEL, SENSOR
H001
H002
CAPSTAN MOTOR
M902
VIDEO HEAD
B MECHA DECK (SEE PAGE 4-53)
ZOOM LENS
CN191
IC191 (4-8)
CCD IMAGER
CD-286 BOARD (TR MODEL)
CD-281 BOARD (TRV MODEL)
CN711
XCAM+STBY SW
XVTR MODE SW
S001 POWER CAMERA OFF PLAYER
CONTROL SWITCH BLOCK(SS-1000) (SEE PAGE 4-58)
CN709
CN001
LI-3V
BT001 LITHIUM BATTERY
D 2.8V
SWITCH
EVER 3.0V
IC001 LCD INDICATOR DRIVE (4-38)
XHI RESET
S001 RESET
CF-077 BOARD (TR MODEL)
CONTROL SWITCH BLOCK(CF-1000) (SEE PAGE 4-33) (TRV MODEL)
CN710
ZOOM VR
SWITCH
LED
R711
CONTROL SWITCH BLOCK(FK-1000) (SEE PAGE 4-58)
CN703
A 2.8V
AU 2.8V
A 4.75V
VTR UNREG
CN753
IC752 (4-12) MIC AMP
IC753 (4-11) PITCH, YAW SENSOR AMP
SE751,752 PITCH, YAW SENSOR
(STEADY SHOT MODEL)
MI-040 BOARD (TR MODEL)
MI-041 BOARD (TRV MODEL)
D3901,3902 LASER LINK LED (LASER LINK MODEL)
IC751 (4-11) REMOTE COMMANDER RECEIVER (REMOTE COMMANDER MODEL)
IC3901 (4-13) IR TRANSMITTER (LASER LINK MODEL)
D3903 NIGHT SHOT LED (EXCEPT LASER LINK MODEL)
A 4.75V
R710
R711
EVF BL 4.75V
EVF BL
CN713 (FOR CHECK)
R073,074
EVF PANEL 4.75V
EVF 13.3V
EVF 2.8V
EVF DD ON
Q071,072
(TR MODEL)
(TRV MODEL)
EVF BL
CN708
VF-141 BOARD
CN4501
FB4502
CN4502
LCD903 LCD PANEL
IC4501 (4-30) LCD DRIVE
IC4502 (4-30) TIMING GENERATOR
LB-62 BOARD
CN4601
IC4601 (4-32) BACK LIGHT DRIVE
(COLOR EVF MODEL)
VL UNREG
V LIGHT PWM
Q702,703 VIDEO LIGHT DRIVE
Q704,705 CURRENT LIMITER
CN702
CN715
BW EVF 4.75V
CN901
IC901 (4-25) CRT DRIVE
VF 129 BOARD (B/W EVF MODEL)
RFU DC OUT
FP-257 (FLEXIBLE)
VIDEO LIGHT (VIDEO LIGHT MODEL)
J202 RFU DC OUT

TRV MODEL : CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
TR MODEL : CCD-TR618/TR618E/TR718E/TR728E/TR818
REMOTE COMMANDER MODEL : CCD-TR728E/TRV49/TRV49E/TRV59E/TRV78/TRV78E/TRV98/TRV98E
LASER LINK MODEL : CCD-TRV98
VIDEO LIGHT MODEL : CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
STEADY SHOT MODEL : CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
B/W EVF MODEL : CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
COLOR EVF MODEL : CCD-TR818

# SECTION 4
# PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

## 4-1. FRAME SCHEMATIC DIAGRAM (1/2)

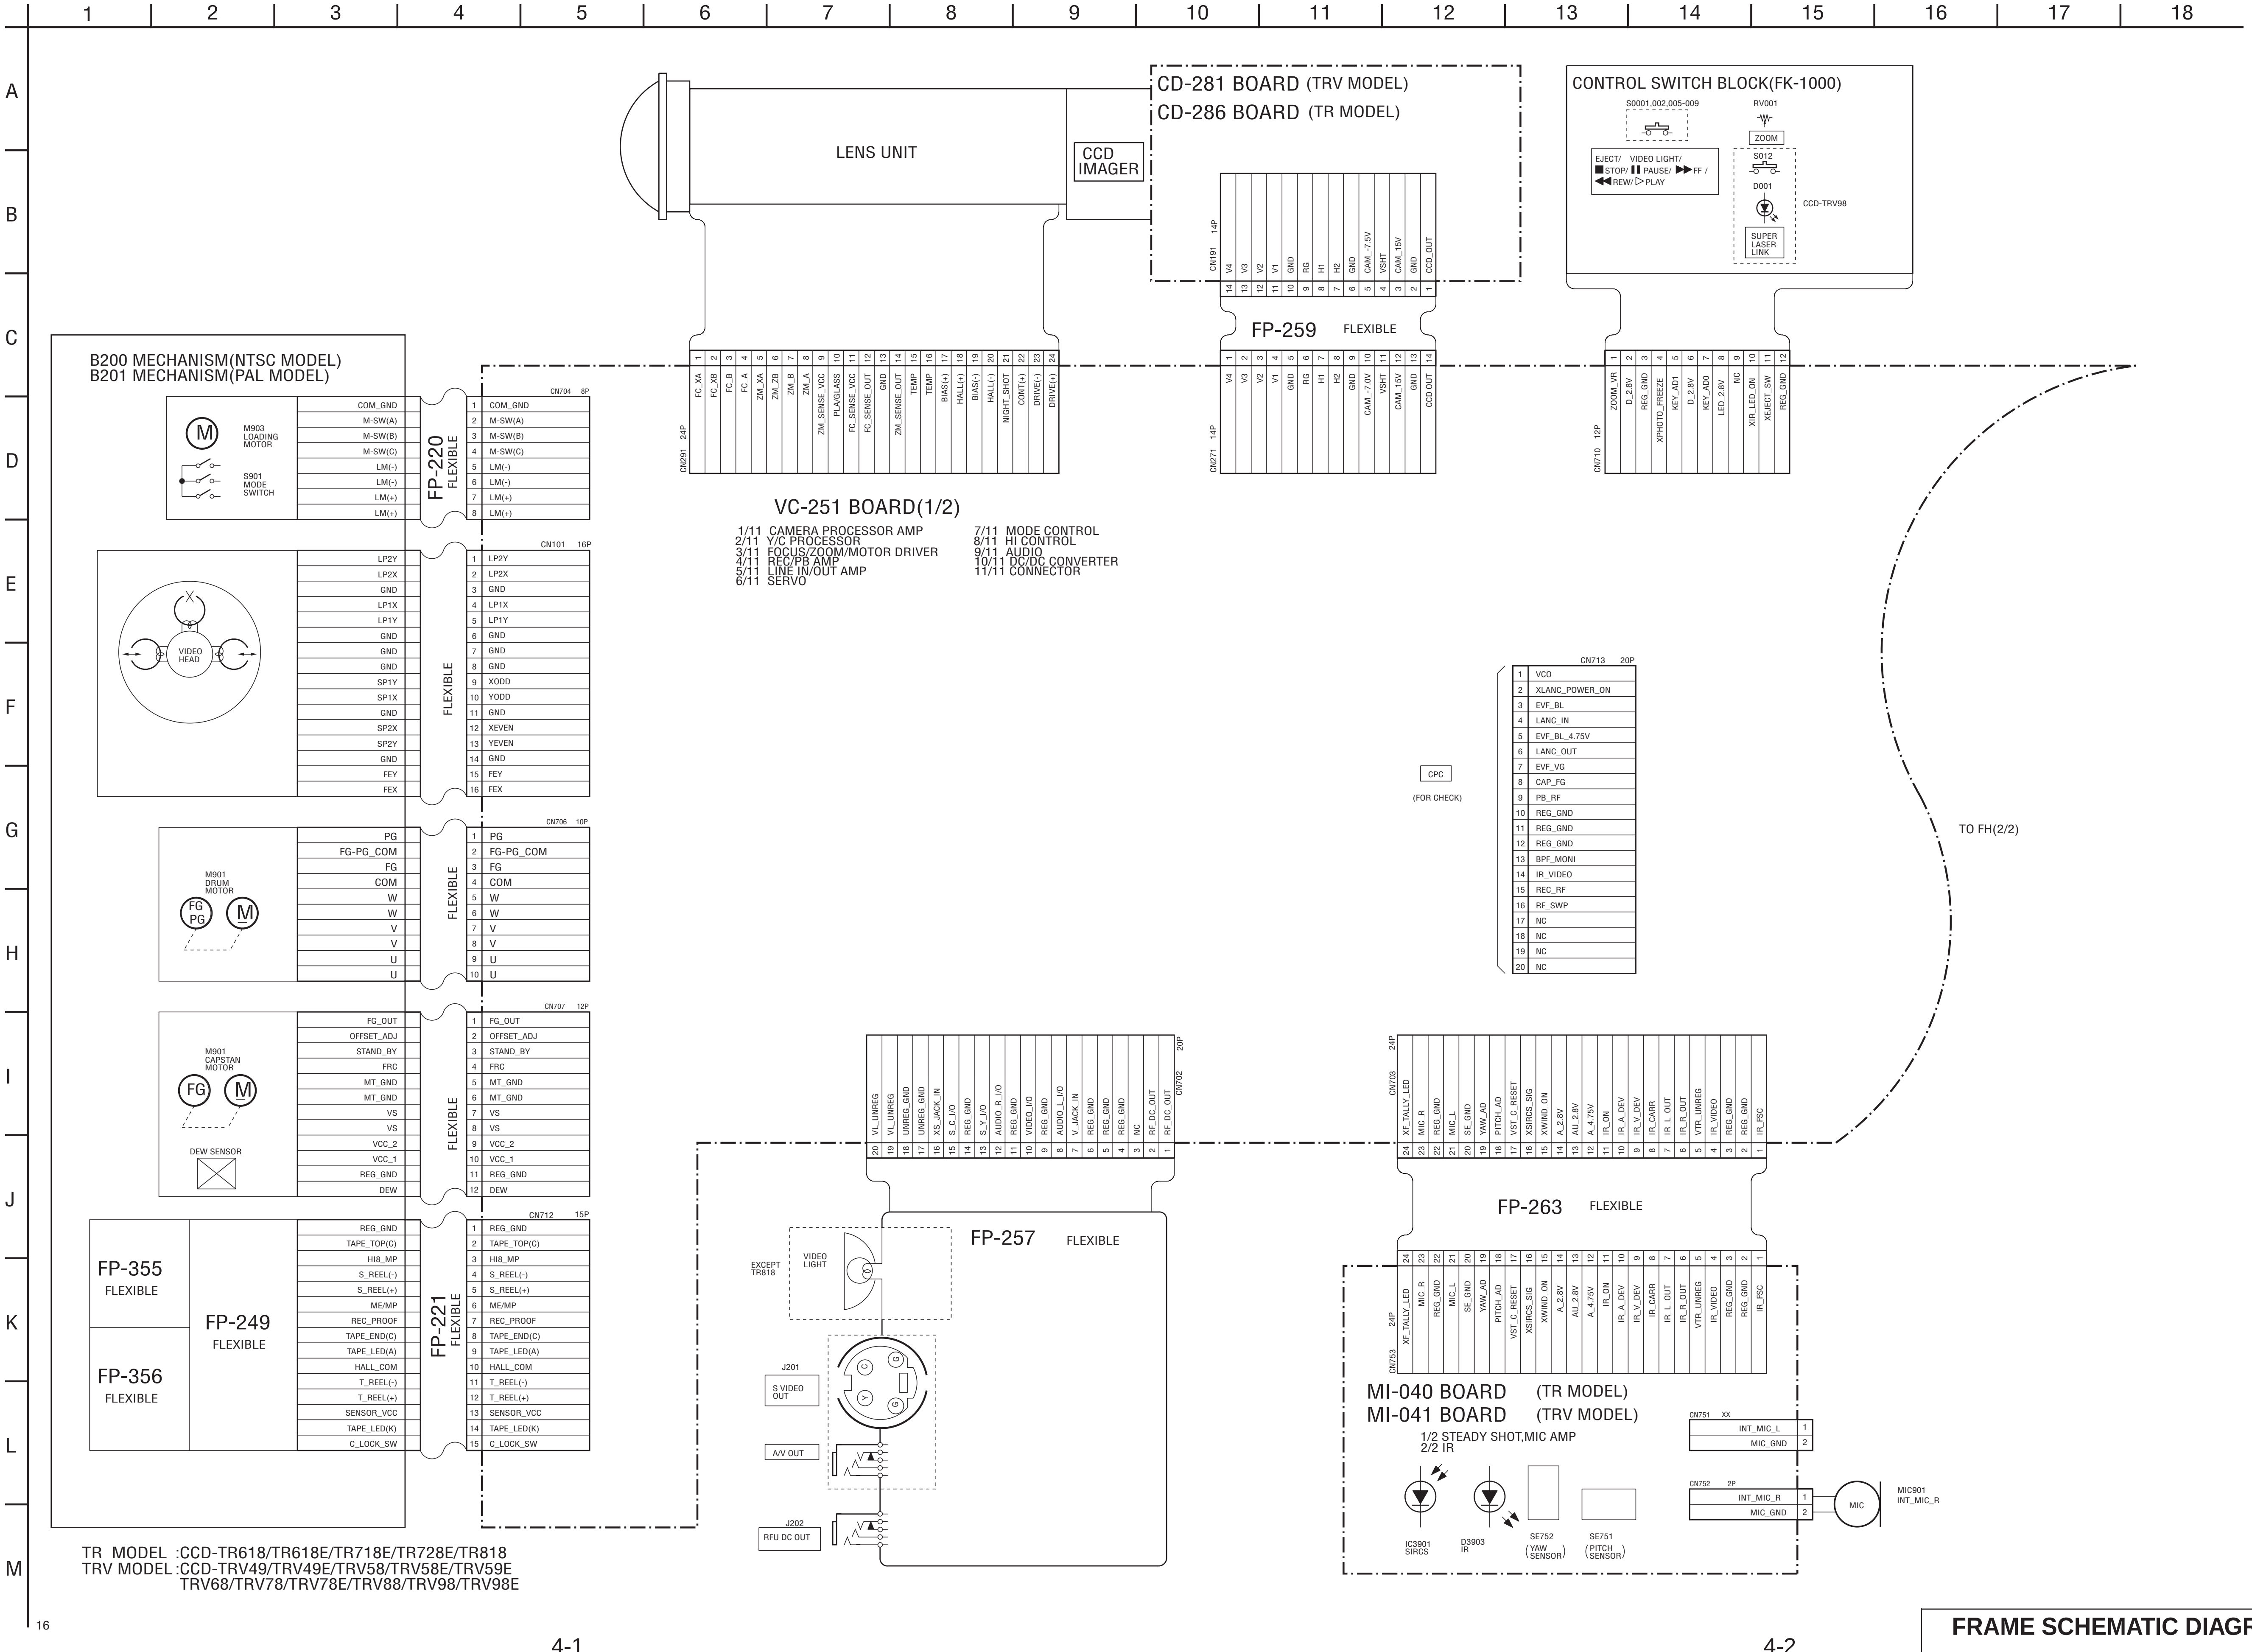
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18
A B C D E F G H I J K L M
LENS UNIT
CCD IMAGER
CD-281 BOARD (TRV MODEL)
CD-286 BOARD (TR MODEL)
CN191 14P
V4 V3 V2 V1 GND RG H1 H2 GND CAM_-7.5V VSHT CAM_15V GND CCD_OUT
FP-259 FLEXIBLE
CN271 14P
CONTROL SWITCH BLOCK(FK-1000)
S0001,002,005-009
RV001
ZOOM
S012
D001
CCD-TRV98
SUPER LASER LINK
EJECT/ VIDEO LIGHT/ STOP/ PAUSE/ FF / REW/ PLAY
CN710 12P
ZOOM_VR D_2.8V REG_GND XPHOTO_FREEZE KEY_AD1 D_2.8V KEY_AD0 LED_2.8V NC XIR_LED_ON XEJECT_SW REG_GND
CN291 24P
FC_XA FC_XB FC_B FC_A ZM_XA ZM_ZB ZM_B ZM_A ZM_SENSE_VCC PLAYGLASS FC_SENSE_VCC FC_SENSE_OUT GND ZM_SENSE_OUT TEMP TEMP BIAS(+) HALL(+) BIAS(-) HALL(-) NIGHT_SHOT CONT(+) DRIVE(-) DRIVE(+)
B200 MECHANISM(NTSC MODEL)
B201 MECHANISM(PAL MODEL)
M903 LOADING MOTOR
S901 MODE SWITCH
COM_GND M-SW(A) M-SW(B) M-SW(C) LM(-) LM(-) LM(+) LM(+)
FP-220 FLEXIBLE
CN704 8P
VC-251 BOARD(1/2)
1/11 CAMERA PROCESSOR AMP
2/11 Y/C PROCESSOR
3/11 FOCUS/ZOOM/MOTOR DRIVER
4/11 REC/PB AMP
5/11 LINE IN/OUT AMP
6/11 SERVO
7/11 MODE CONTROL
8/11 HI CONTROL
9/11 AUDIO
10/11 DC/DC CONVERTER
11/11 CONNECTOR
VIDEO HEAD
CN101 16P
LP2Y LP2X GND LP1X LP1Y GND GND GND SP1Y SP1X GND SP2X SP2Y GND FEY FEX
XODD YODD XEVEN YEVEN
FLEXIBLE
M901 DRUM MOTOR
FG PG M
CN706 10P
PG FG-PG_COM FG COM W W V V U U
M901 CAPSTAN MOTOR
DEW SENSOR
CN707 12P
FG_OUT OFFSET_ADJ STAND_BY FRC MT_GND MT_GND VS VS VCC_2 VCC_1 REG_GND DEW
FP-355 FLEXIBLE
FP-356 FLEXIBLE
FP-249 FLEXIBLE
FP-221 FLEXIBLE
CN712 15P
REG_GND TAPE_TOP(C) HI8_MP S_REEL(-) S_REEL(+) ME/MP REC_PROOF TAPE_END(C) TAPE_LED(A) HALL_COM T_REEL(-) T_REEL(+) SENSOR_VCC TAPE_LED(K) C_LOCK_SW
CN713 20P
VCO XLANC_POWER_ON EVF_BL LANC_IN EVF_BL_4.75V LANC_OUT EVF_VG CAP_FG PB_RF REG_GND REG_GND REG_GND BPF_MONI IR_VIDEO REC_RF RF_SWP NC NC NC NC
CPC
(FOR CHECK)
TO FH(2/2)
CN702 20P
VL_UNREG VL_UNREG UNREG_GND UNREG_GND XS_JACK_IN S_C_I/O REG_GND S_Y_I/O AUDIO_R_I/O REG_GND VIDEO_I/O REG_GND AUDIO_L_I/O V_JACK_IN REG_GND REG_GND REG_GND NC RF_DC_OUT RF_DC_OUT
FP-257 FLEXIBLE
EXCEPT TR818
VIDEO LIGHT
J201
S VIDEO OUT
A/V OUT
J202
RFU DC OUT
CN703 24P
XF_TALLY_LED MIC_R REG_GND MIC_L SE_GND YAW_AD PITCH_AD VST_C_RESET XSIRCS_SIG XWIND_ON A_2.8V AU_2.8V A_4.75V IR_ON IR_A_DEV IR_V_DEV IR_CARR IR_L_OUT IR_R_OUT VTR_UNREG IR_VIDEO REG_GND REG_GND IR_FSC
FP-263 FLEXIBLE
CN753 24P
MI-040 BOARD (TR MODEL)
MI-041 BOARD (TRV MODEL)
1/2 STEADY SHOT,MIC AMP
2/2 IR
CN751 XX
INT_MIC_L MIC_GND
CN752 2P
INT_MIC_R MIC_GND
MIC
MIC901 INT_MIC_R
IC3901 SIRCS
D3903 IR
SE752 (YAW SENSOR)
SE751 (PITCH SENSOR)

TR MODEL :CCD-TR618/TR618E/TR718E/TR728E/TR818
TRV MODEL :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E
TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

## FRAME SCHEMATIC DIAGRAM (2/2)

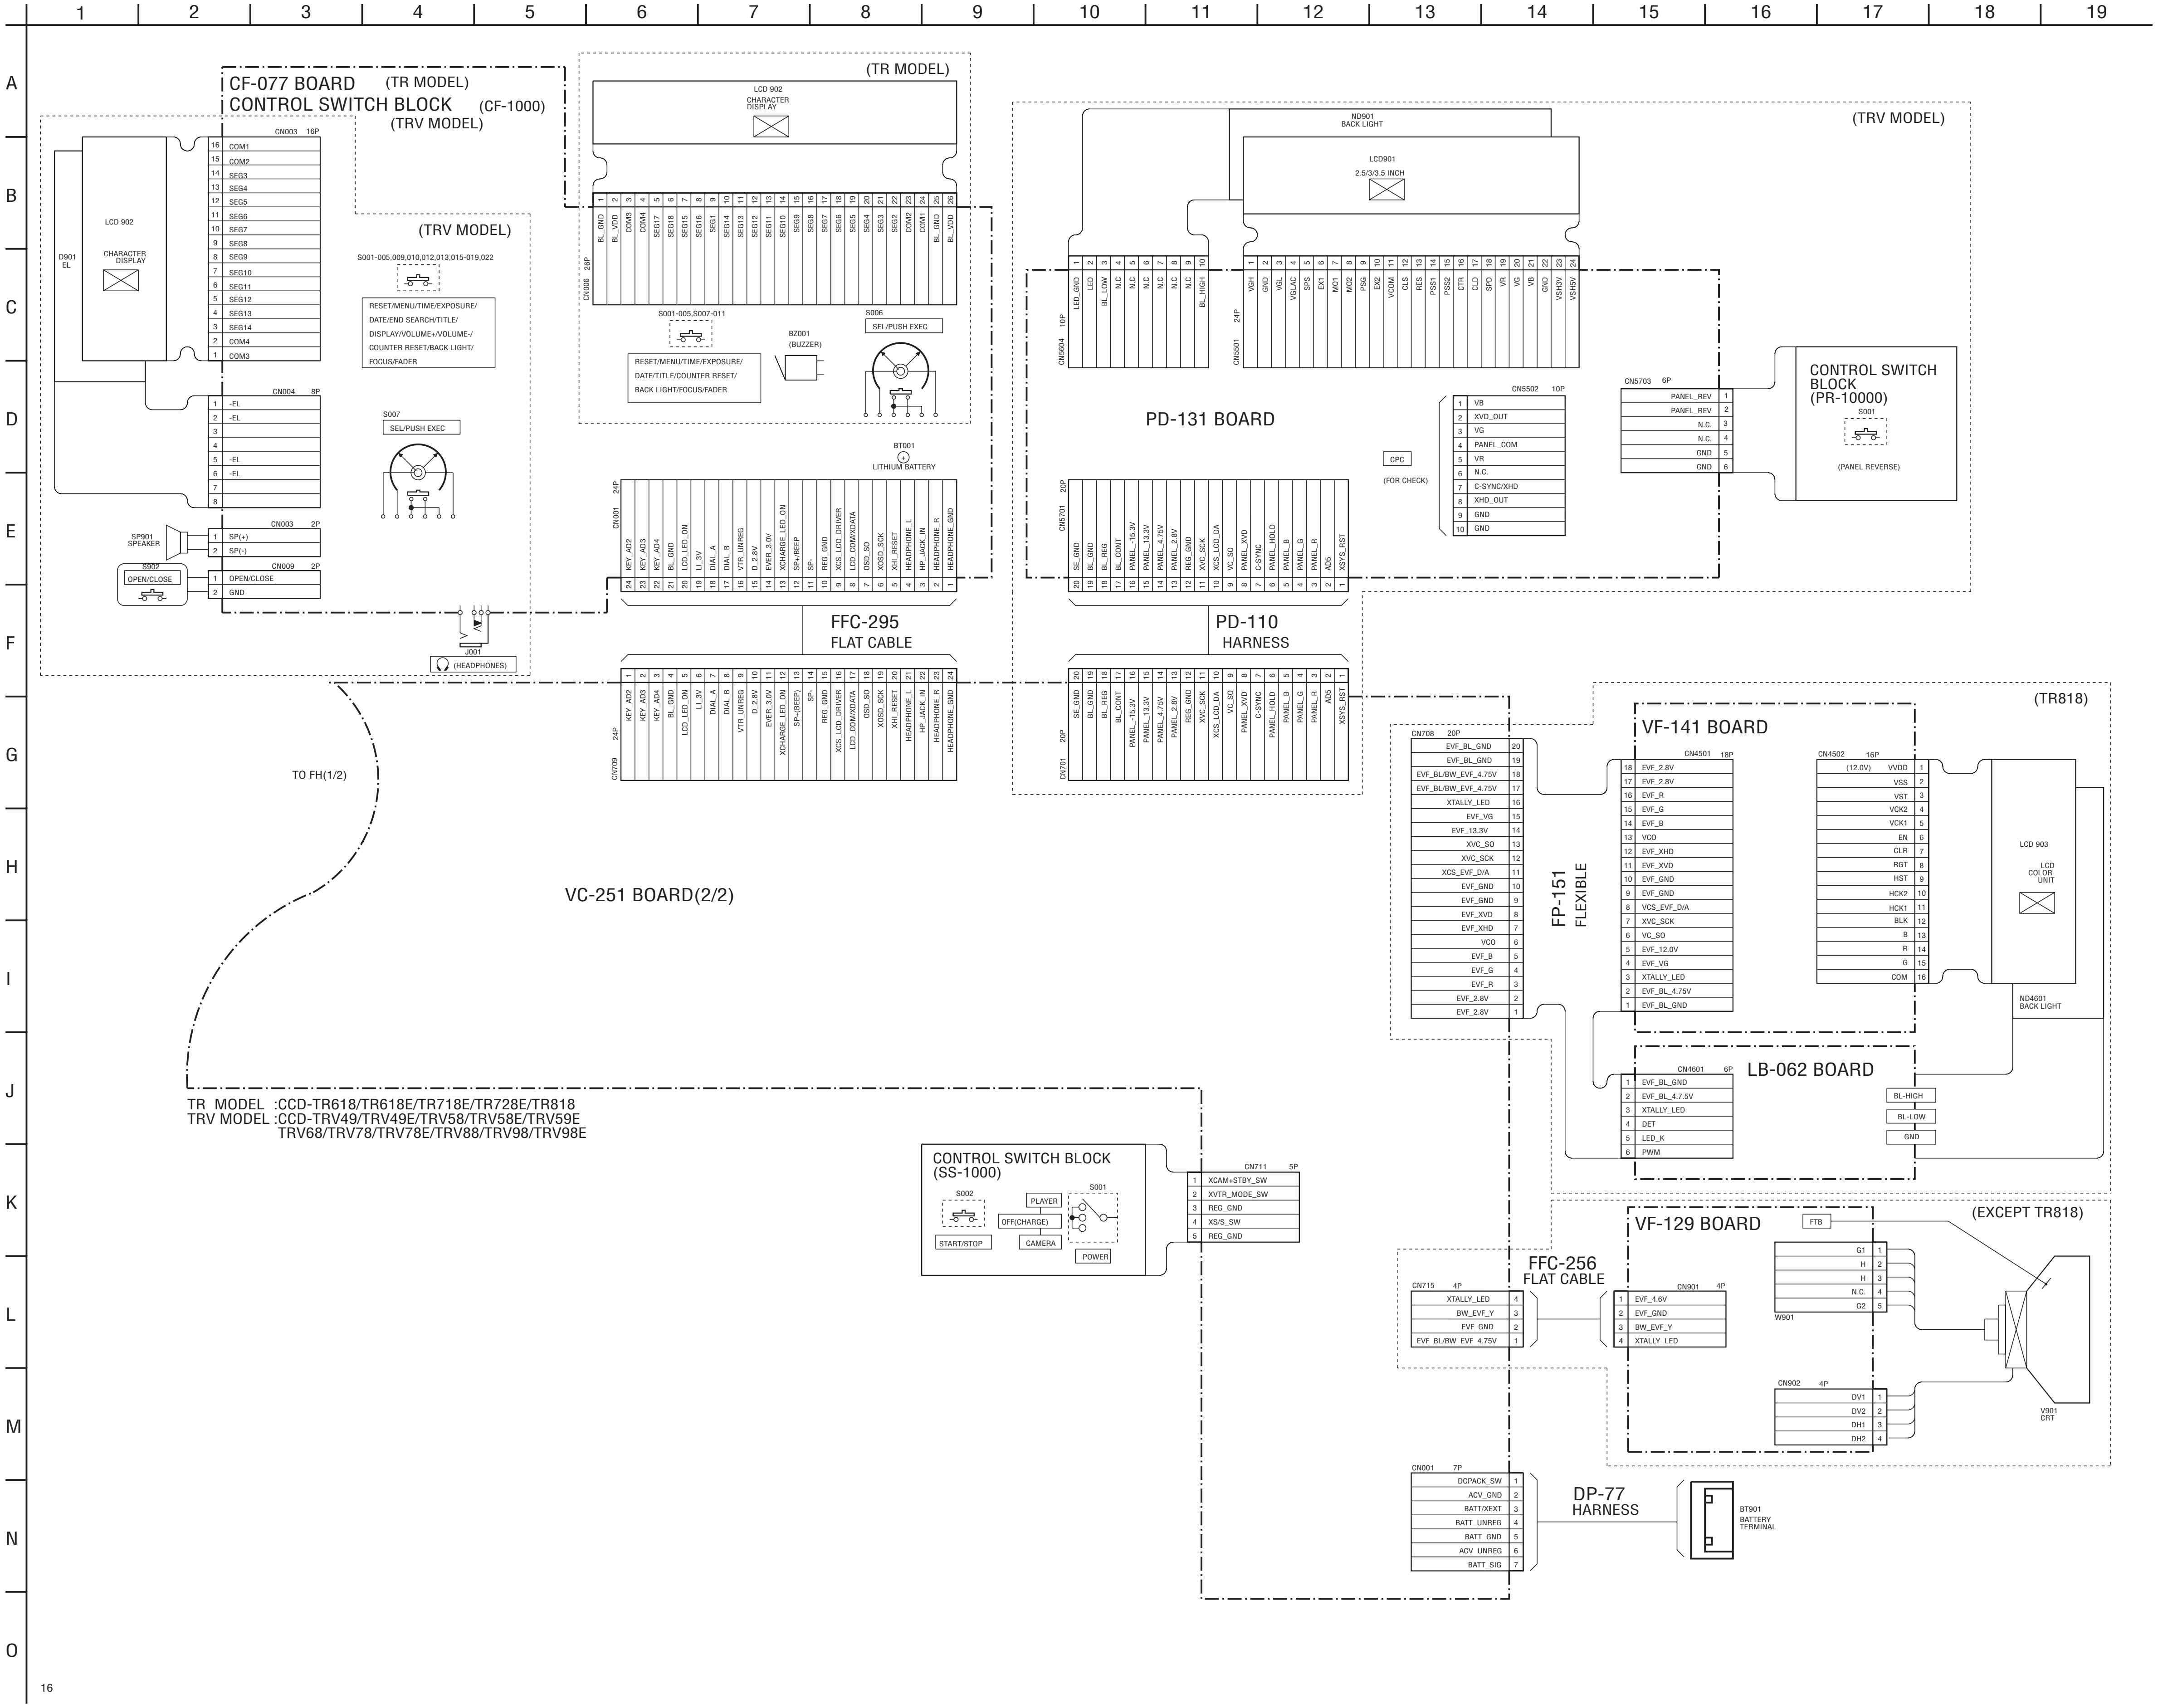
CF-077 BOARD (TR MODEL)
CONTROL SWITCH BLOCK (CF-1000)
(TRV MODEL)
LCD 902
CHARACTER DISPLAY
D901 EL
CN003 16P
CN004 8P
SP901 SPEAKER
S902 OPEN/CLOSE
CN009 2P
S001-005,009,010,012,013,015-019,022
RESET/MENU/TIME/EXPOSURE/DATE/END SEARCH/TITLE/DISPLAY/VOLUME+/VOLUME-/COUNTER RESET/BACK LIGHT/FOCUS/FADER
S007 SEL/PUSH EXEC
J001 (HEADPHONES)
(TR MODEL)
S001-005,S007-011
RESET/MENU/TIME/EXPOSURE/DATE/TITLE/COUNTER RESET/BACK LIGHT/FOCUS/FADER
BZ001 (BUZZER)
S006 SEL/PUSH EXEC
CN006 26P
BT001 LITHIUM BATTERY
CN001 24P
FFC-295 FLAT CABLE
CN709 24P
TO FH(1/2)
VC-251 BOARD(2/2)
(TRV MODEL)
ND901 BACK LIGHT
LCD901 2.5/3/3.5 INCH
CN5604 10P
CN5501 24P
PD-131 BOARD
CN5502 10P
CPC (FOR CHECK)
CN5703 6P
CONTROL SWITCH BLOCK (PR-10000)
S001 (PANEL REVERSE)
CN5701 20P
PD-110 HARNESS
CN701 20P
(TR818)
CN708 20P
FP-151 FLEXIBLE
VF-141 BOARD
CN4501 18P
CN4502 16P
LCD 903 LCD COLOR UNIT
ND4601 BACK LIGHT
CN4601 6P
LB-062 BOARD
BL-HIGH
BL-LOW
GND
TR MODEL :CCD-TR618/TR618E/TR718E/TR728E/TR818
TRV MODEL :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E
TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
CONTROL SWITCH BLOCK (SS-1000)
S002 START/STOP
S001 PLAYER OFF(CHARGE) CAMERA POWER
CN711 5P
(EXCEPT TR818)
VF-129 BOARD
FTB
FFC-256 FLAT CABLE
CN715 4P
CN901 4P
W901
CN902 4P
V901 CRT
CN001 7P
DP-77 HARNESS
BT901 BATTERY TERMINAL
16

## 4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

### THIS NOTE IS COMMON FOR WIRING BOARDS AND SCHEMATIC DIAGRAMS (In addition to this, the necessary note is printed in each block)

**(For printed wiring boards)**

- ░░░: Pattern from the side which enables seeing.
  (The other layers' patterns are not indicated.)
- Through hole is omitted.
- Circled numbers refer to waveforms.
- There are few cases that the part printed on diagram isn't mounted in this model.
- Chip parts.

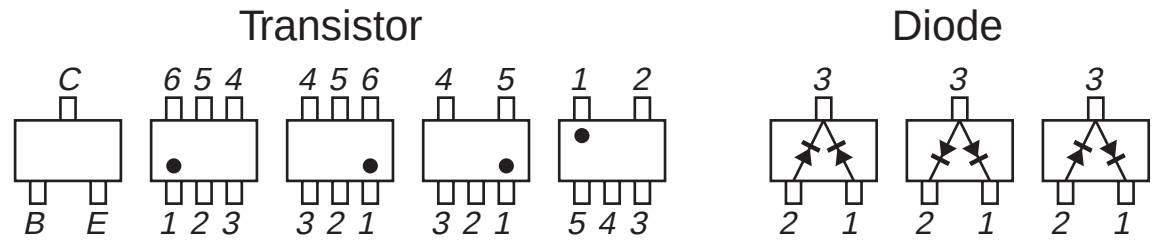

**(For schematic diagrams)**

- All capacitors are in mF unless otherwise noted. pF : m mF. 50V or less are not indicated except for electrolytics and tantalums.
- Chip resistors are 1/10W unless otherwise noted.
  kW=1000W, MW=1000kW.
- Caution when replacing chip parts.
  New parts must be attached after removal of chip.
  Be careful not to heat the minus side of tantalum capacitor, Because it is damaged by the heat.
- Some chip part will be indicated as follows.

Example C541 L452
22U 10UH
TA A 2520

Kinds of capacitor

Temperature characteristics

External dimensions (mm)

- Constants of resistors, capacitors, ICs and etc with XX indicate that they are not used.
  In such cases, the unused circuits may be indicated.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Signal name
  XEDIT → $\overline{\text{EDIT}}$ PB/XREC → PB/$\overline{\text{REC}}$
- ─▨─ : non flammable resistor
- ─∿─ : fusible resistor
- ▭ : panel designation
- ━━ : B+ Line *
- ━ ━ : B– Line *
- ⇨ : IN/OUT direction of (+,–) B LINE. *
- ▭ : adjustment for repair. *
- Circled numbers refer to waveforms. *

* Indicated by the color red.

| Note : | Note : |
|---|---|
| The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.<br>Replace only with part number specified. | Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.<br>Ne les remplacer que par une pièce portant le numéro spécifié. |

**(Measuring conditions voltage and waveform)**

- Voltages and waveforms are measured between the measurement points and ground when camera shoots color bar chart of pattern box. They are reference values and reference waveforms. *
  (VOM of DC 10 MΩ input impedance is used.).
- Voltage values change depending upon input impedance of VOM used.) *

1. Connection

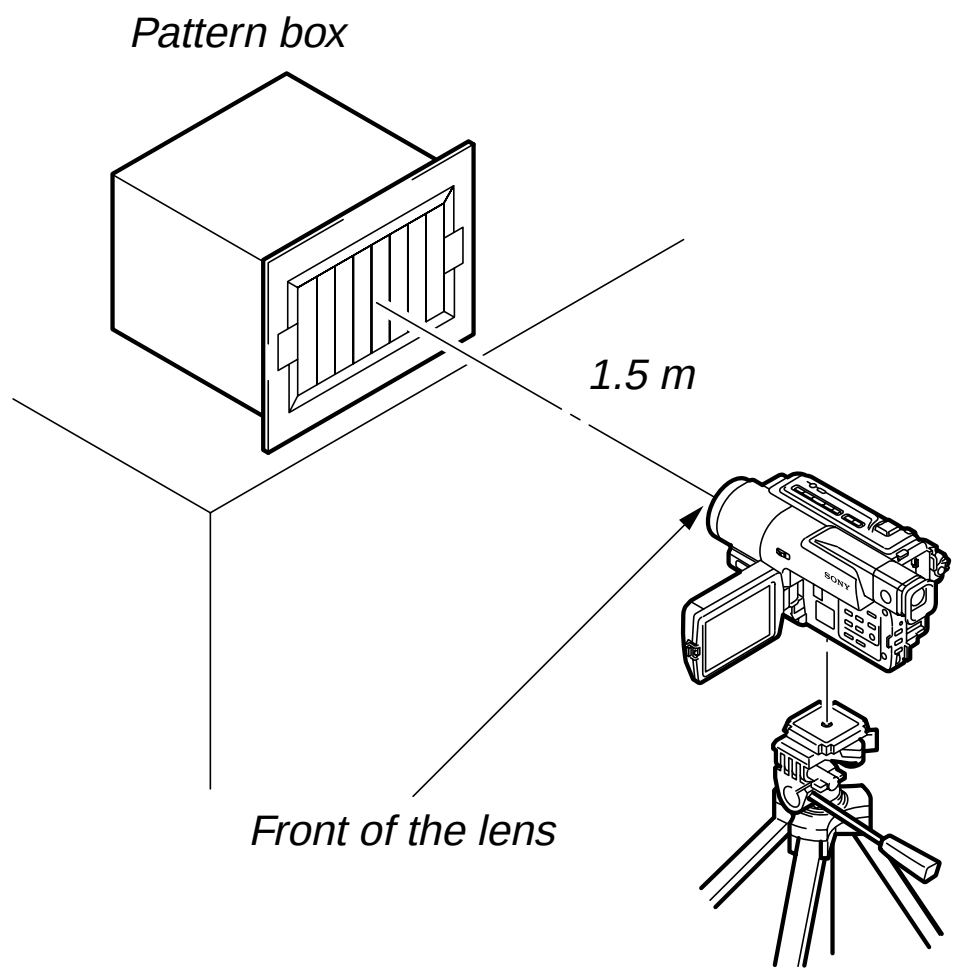

2. Adjust the distance so that the output waveform of Fig. a and the Fig. b can be obtain.

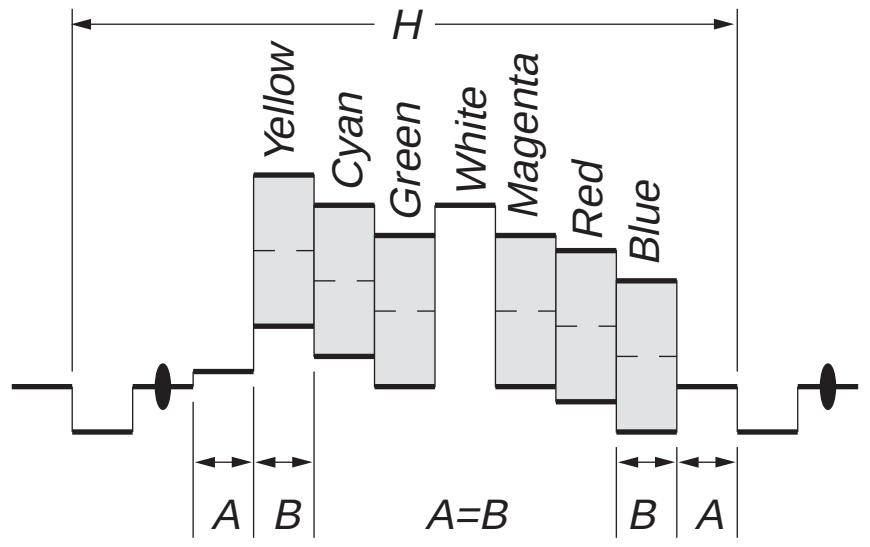

Fig. a (Video output terminal output waveform)

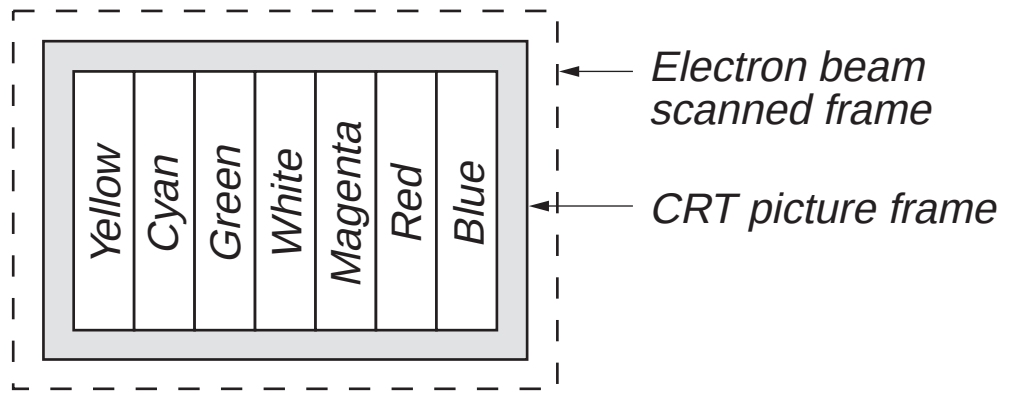

Fig.b (Picture on monitor TV)

When indicating parts by reference number, pleas include the board name.

## CD-281/286 (CCD IMAGER) PRINTED WIRING BOARD

— Ref. No. CD-281/286 Board; 1,000 Series —

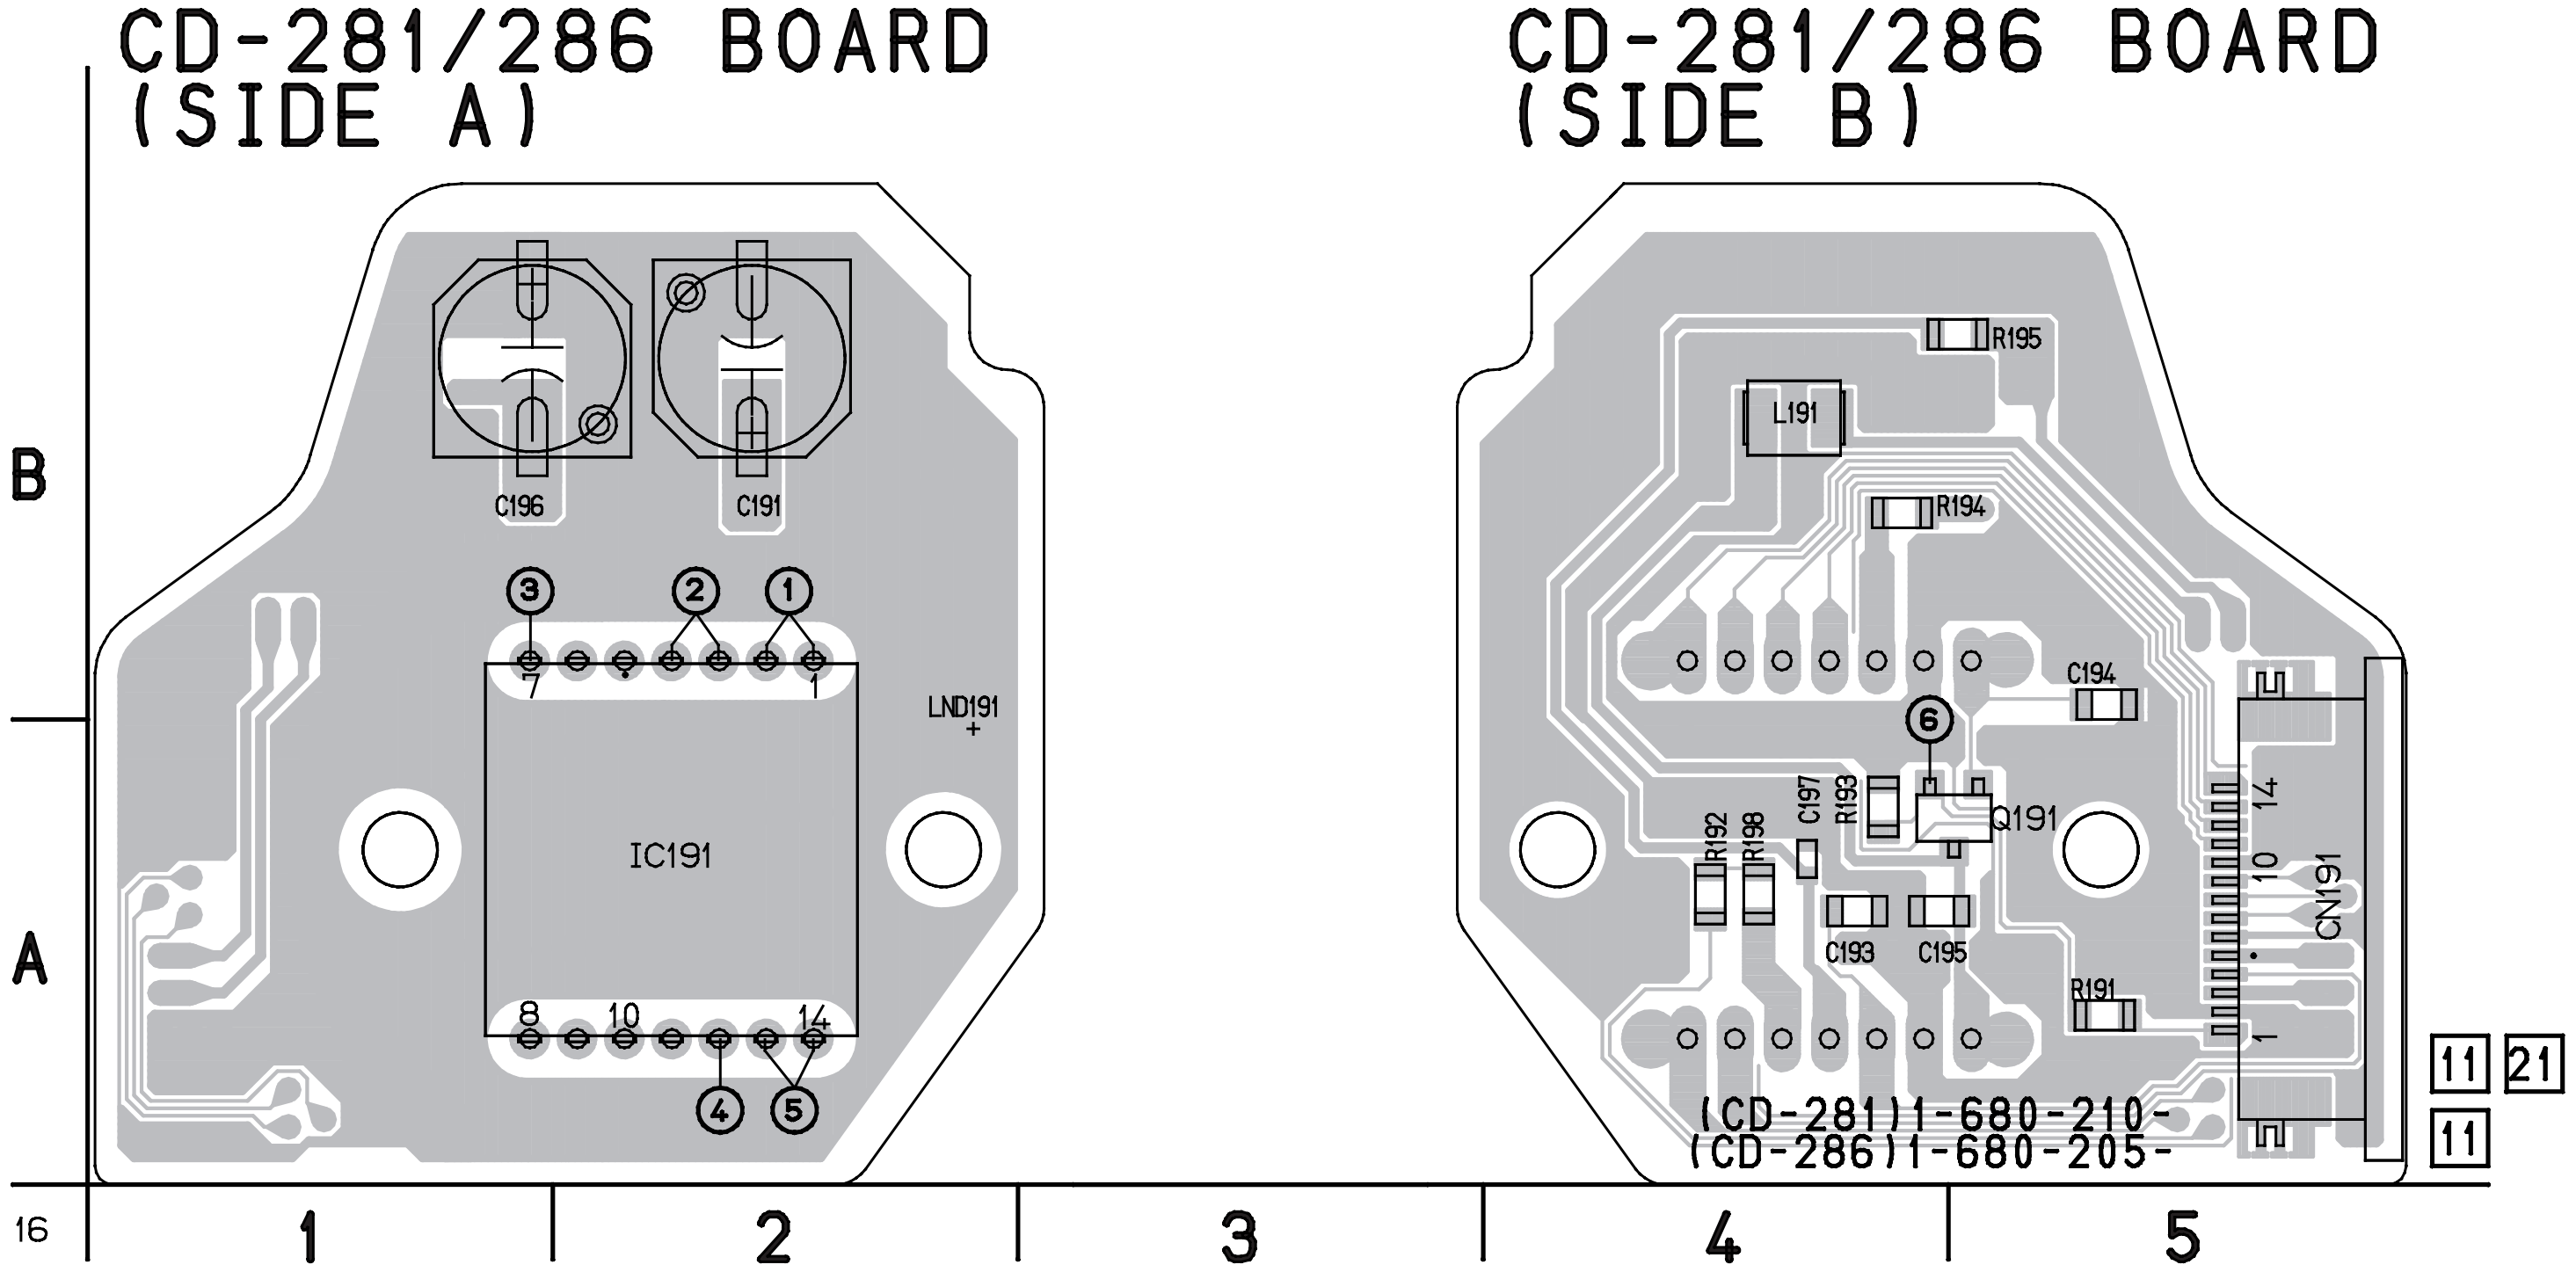
CD-281/286 BOARD (SIDE A)
CD-281/286 BOARD (SIDE B)
C196
C191
IC191
LND191
7
1
8
10
14
①
②
③
④
⑤
⑥
B
A
16
1
2
3
4
5
R195
L191
R194
C194
Q191
R192
R198
C197
R193
C193
C195
R191
CN191
14
10
1
(CD-281)1-680-210-
(CD-286)1-680-205-
11
21
11

**For printed wiring board**

- Refer to page 4-70 for parts location.
- CD-281/286 board consists of multiple layers. However, only the sides (layers) A and B are shown.
- Chip parts

Transistor



There are a few cases that the part printed on this diagram isn't mounted in this model.

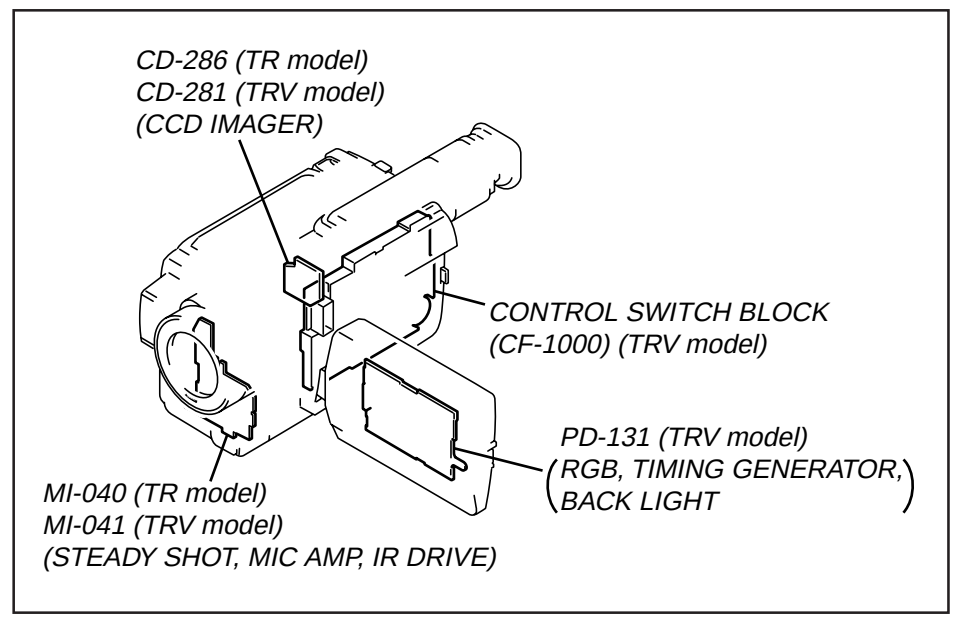
CD-286 (TR model)
CD-281 (TRV model)
(CCD IMAGER)
CONTROL SWITCH BLOCK
(CF-1000) (TRV model)
PD-131 (TRV model)
(RGB, TIMING GENERATOR, BACK LIGHT)
MI-040 (TR model)
MI-041 (TRV model)
(STEADY SHOT, MIC AMP, IR DRIVE)

**For Schematic Diagram**

- Refer to page 4-66 for waveforms.

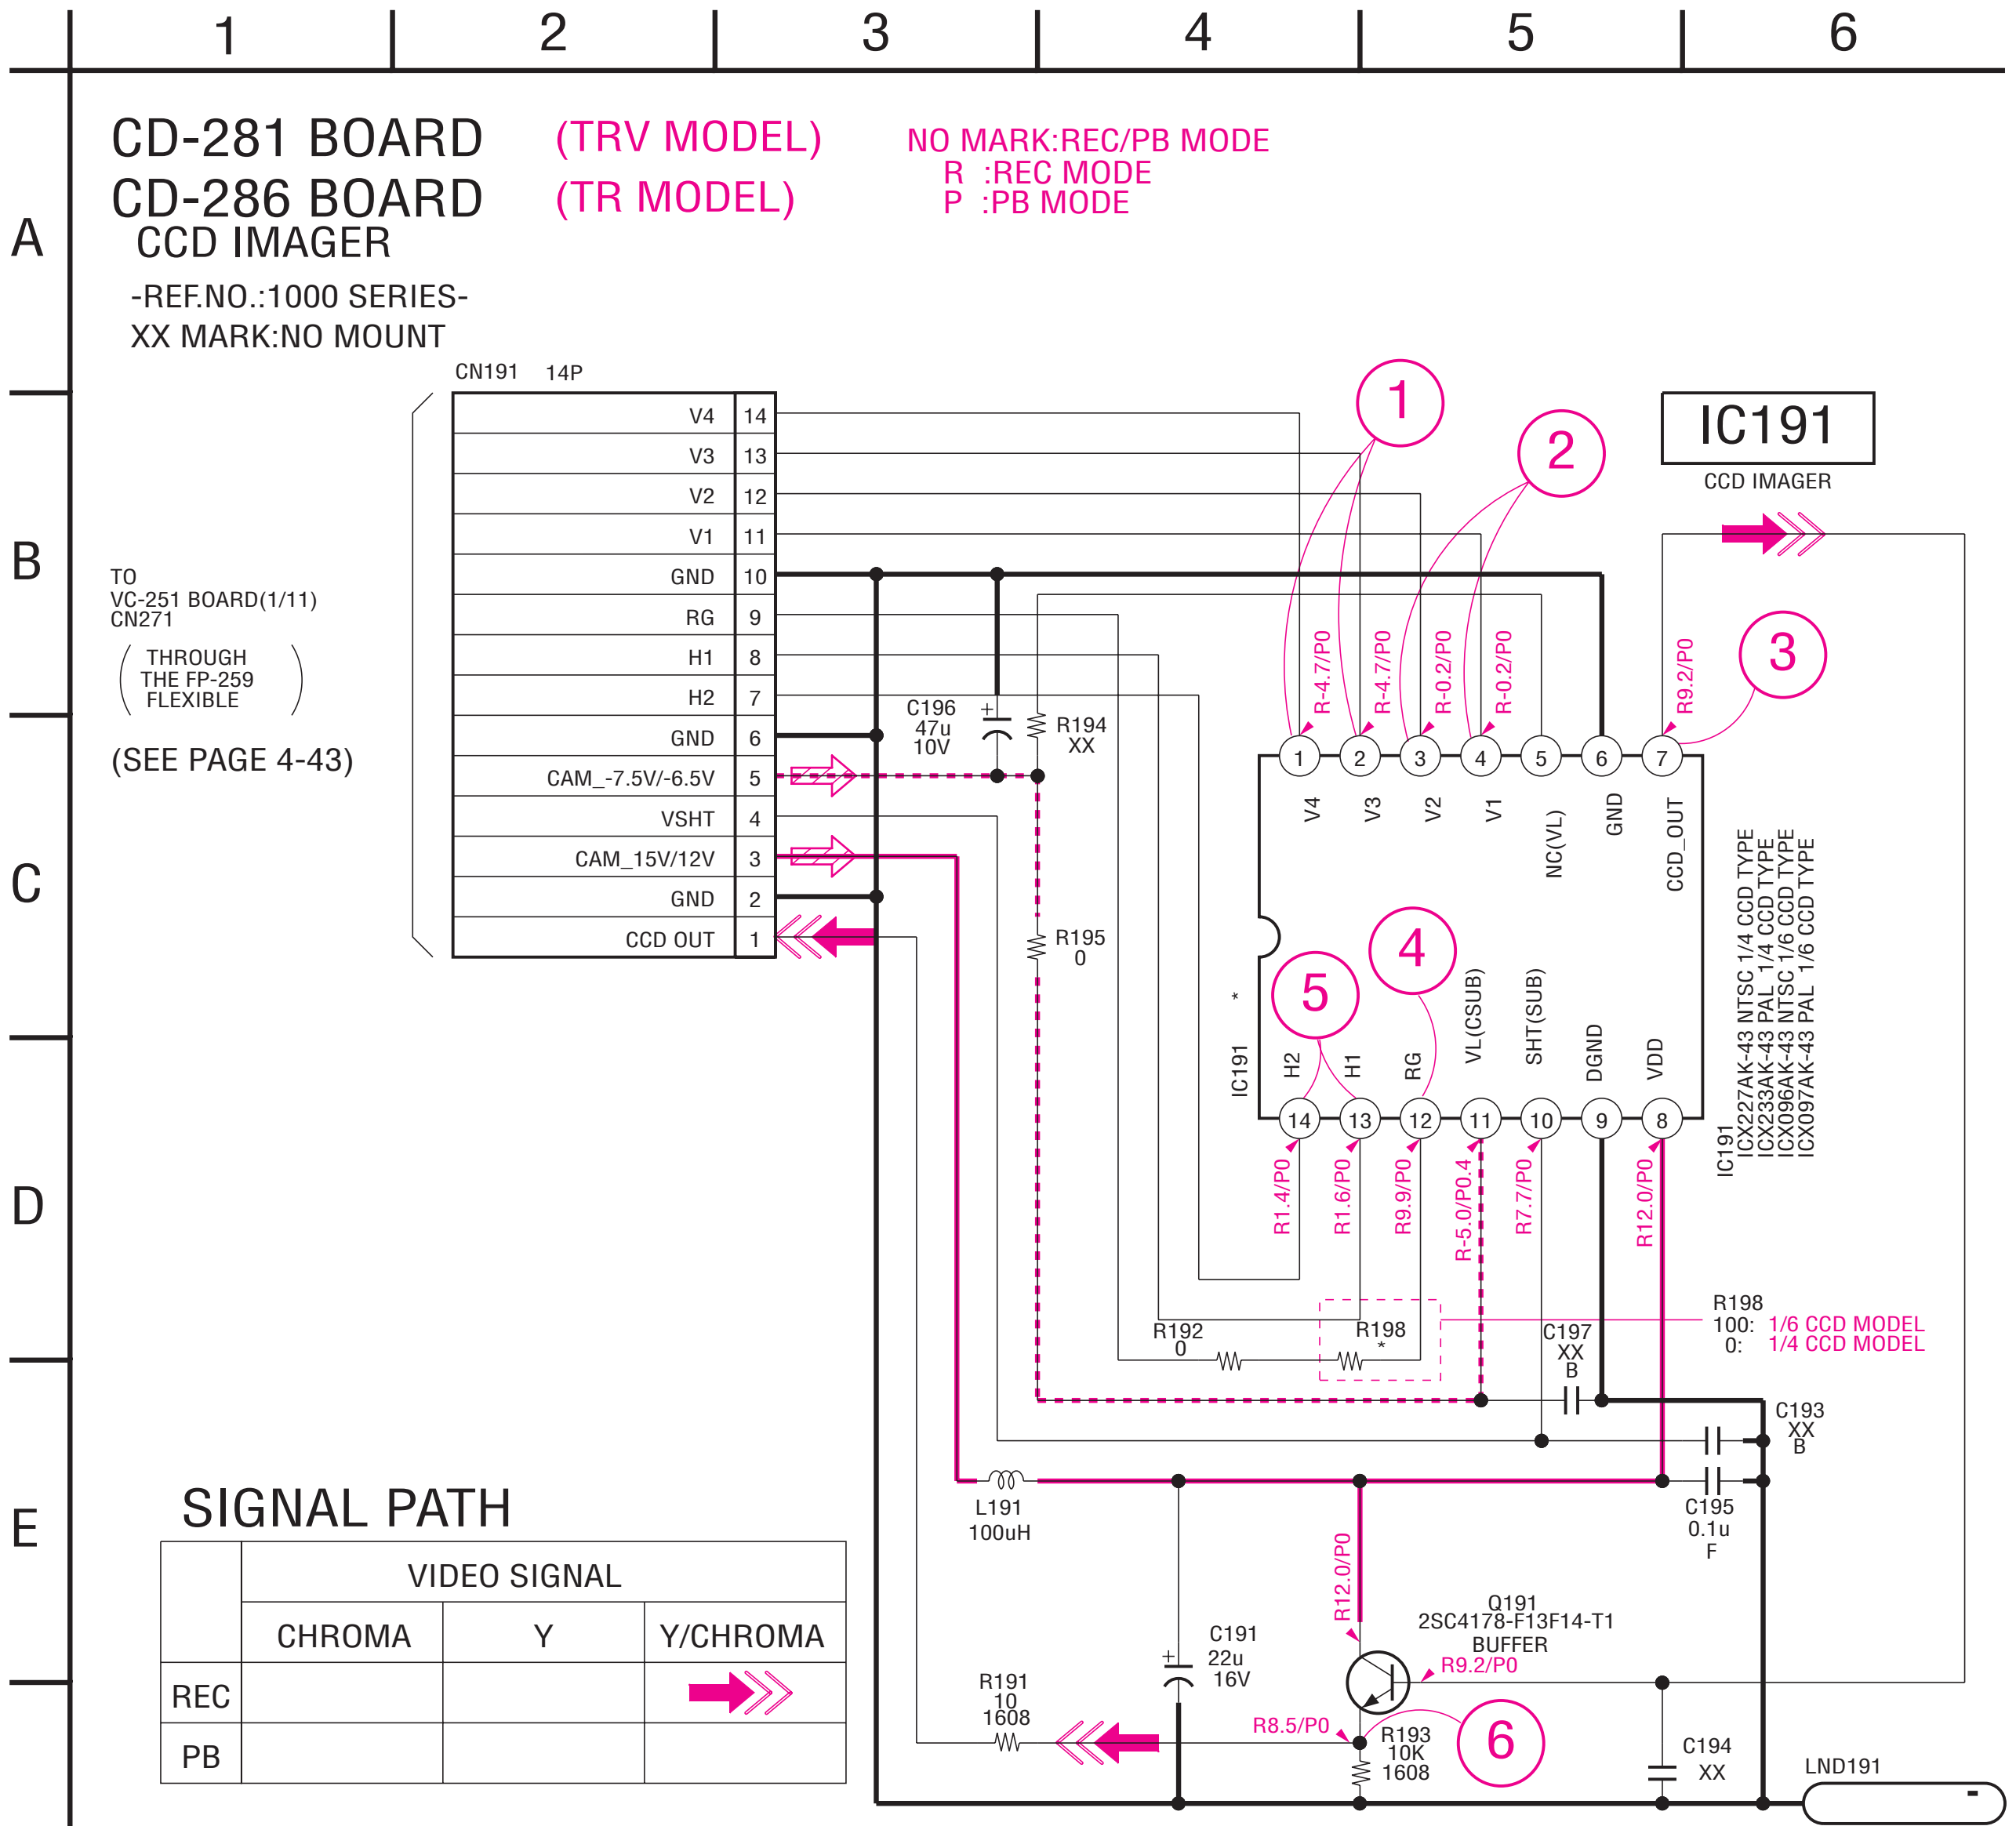
1
2
3
4
5
6
A
B
C
D
E
F
CD-281 BOARD (TRV MODEL)
CD-286 BOARD (TR MODEL)
CCD IMAGER
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
CN191 14P
V4 14
V3 13
V2 12
V1 11
GND 10
RG 9
H1 8
H2 7
GND 6
CAM_-7.5V/-6.5V 5
VSHT 4
CAM_15V/12V 3
GND 2
CCD OUT 1
TO VC-251 BOARD(1/11) CN271
THROUGH THE FP-259 FLEXIBLE
(SEE PAGE 4-43)
IC191
CCD IMAGER
V4
V3
V2
V1
NC(VL)
GND
CCD_OUT
H2
H1
RG
VL(CSUB)
SHT(SUB)
DGND
VDD
IC191
ICX227AK-43 NTSC 1/4 CCD TYPE
ICX233AK-43 PAL 1/4 CCD TYPE
ICX098AK-43 NTSC 1/6 CCD TYPE
ICX097AK-43 PAL 1/6 CCD TYPE
R-4.7/P0
R-4.7/P0
R-0.2/P0
R-0.2/P0
R9.2/P0
R1.4/P0
R1.6/P0
R9.9/P0
R-5.0/P0.4
R7.7/P0
R12.0/P0
①
②
③
④
⑤
⑥
C196 47u 10V
R194 XX
R195 0
R192 0
R198 *
C197 XX B
R198 100: 1/6 CCD MODEL 0: 1/4 CCD MODEL
C193 XX B
C195 0.1u F
L191 100uH
R12.0/P0
C191 22u 16V
Q191 2SC4178-F13F14-T1 BUFFER
R9.2/P0
R191 10 1608
R8.5/P0
R193 10K 1608
C194 XX
LND191

SIGNAL PATH

| | VIDEO SIGNAL | | |
|---|---|---|---|
| | CHROMA | Y | Y/CHROMA |
| REC | | | ⇒ |
| PB | | | |

NTSC MODEL :CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98
PAL MODEL :CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E
1/6 CCD MODEL :CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E
1/4 CCD MODEL :CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
TRV MODEL :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
TR MODEL :CCD-TR618/TR618E/TR718E/TR728E/TR818

G

H

16

**Precautions Upon Replacing CCD imager**

- The CD-281/286 board mounted as a repair part is not equipped with a CCD imager.
  When replacing this board, remove the CCD imager from the old one and mount it onto the new one.
- If the CCD imager has been replaced, carry out all the adjustments for the camera section.
- As the CCD imager may be damaged by static electricity from its structure, handle it carefully like for the MOS IC.
  In addition, ensure that the receiver is not covered with dusts nor exposed to strong light.

## MI-040/041 (STEADY SHOT, MIC AMP, IR DRIVE) PRINTED WIRING BOARD

— Ref. No. MI-040/041 Board; 10,000 Series —

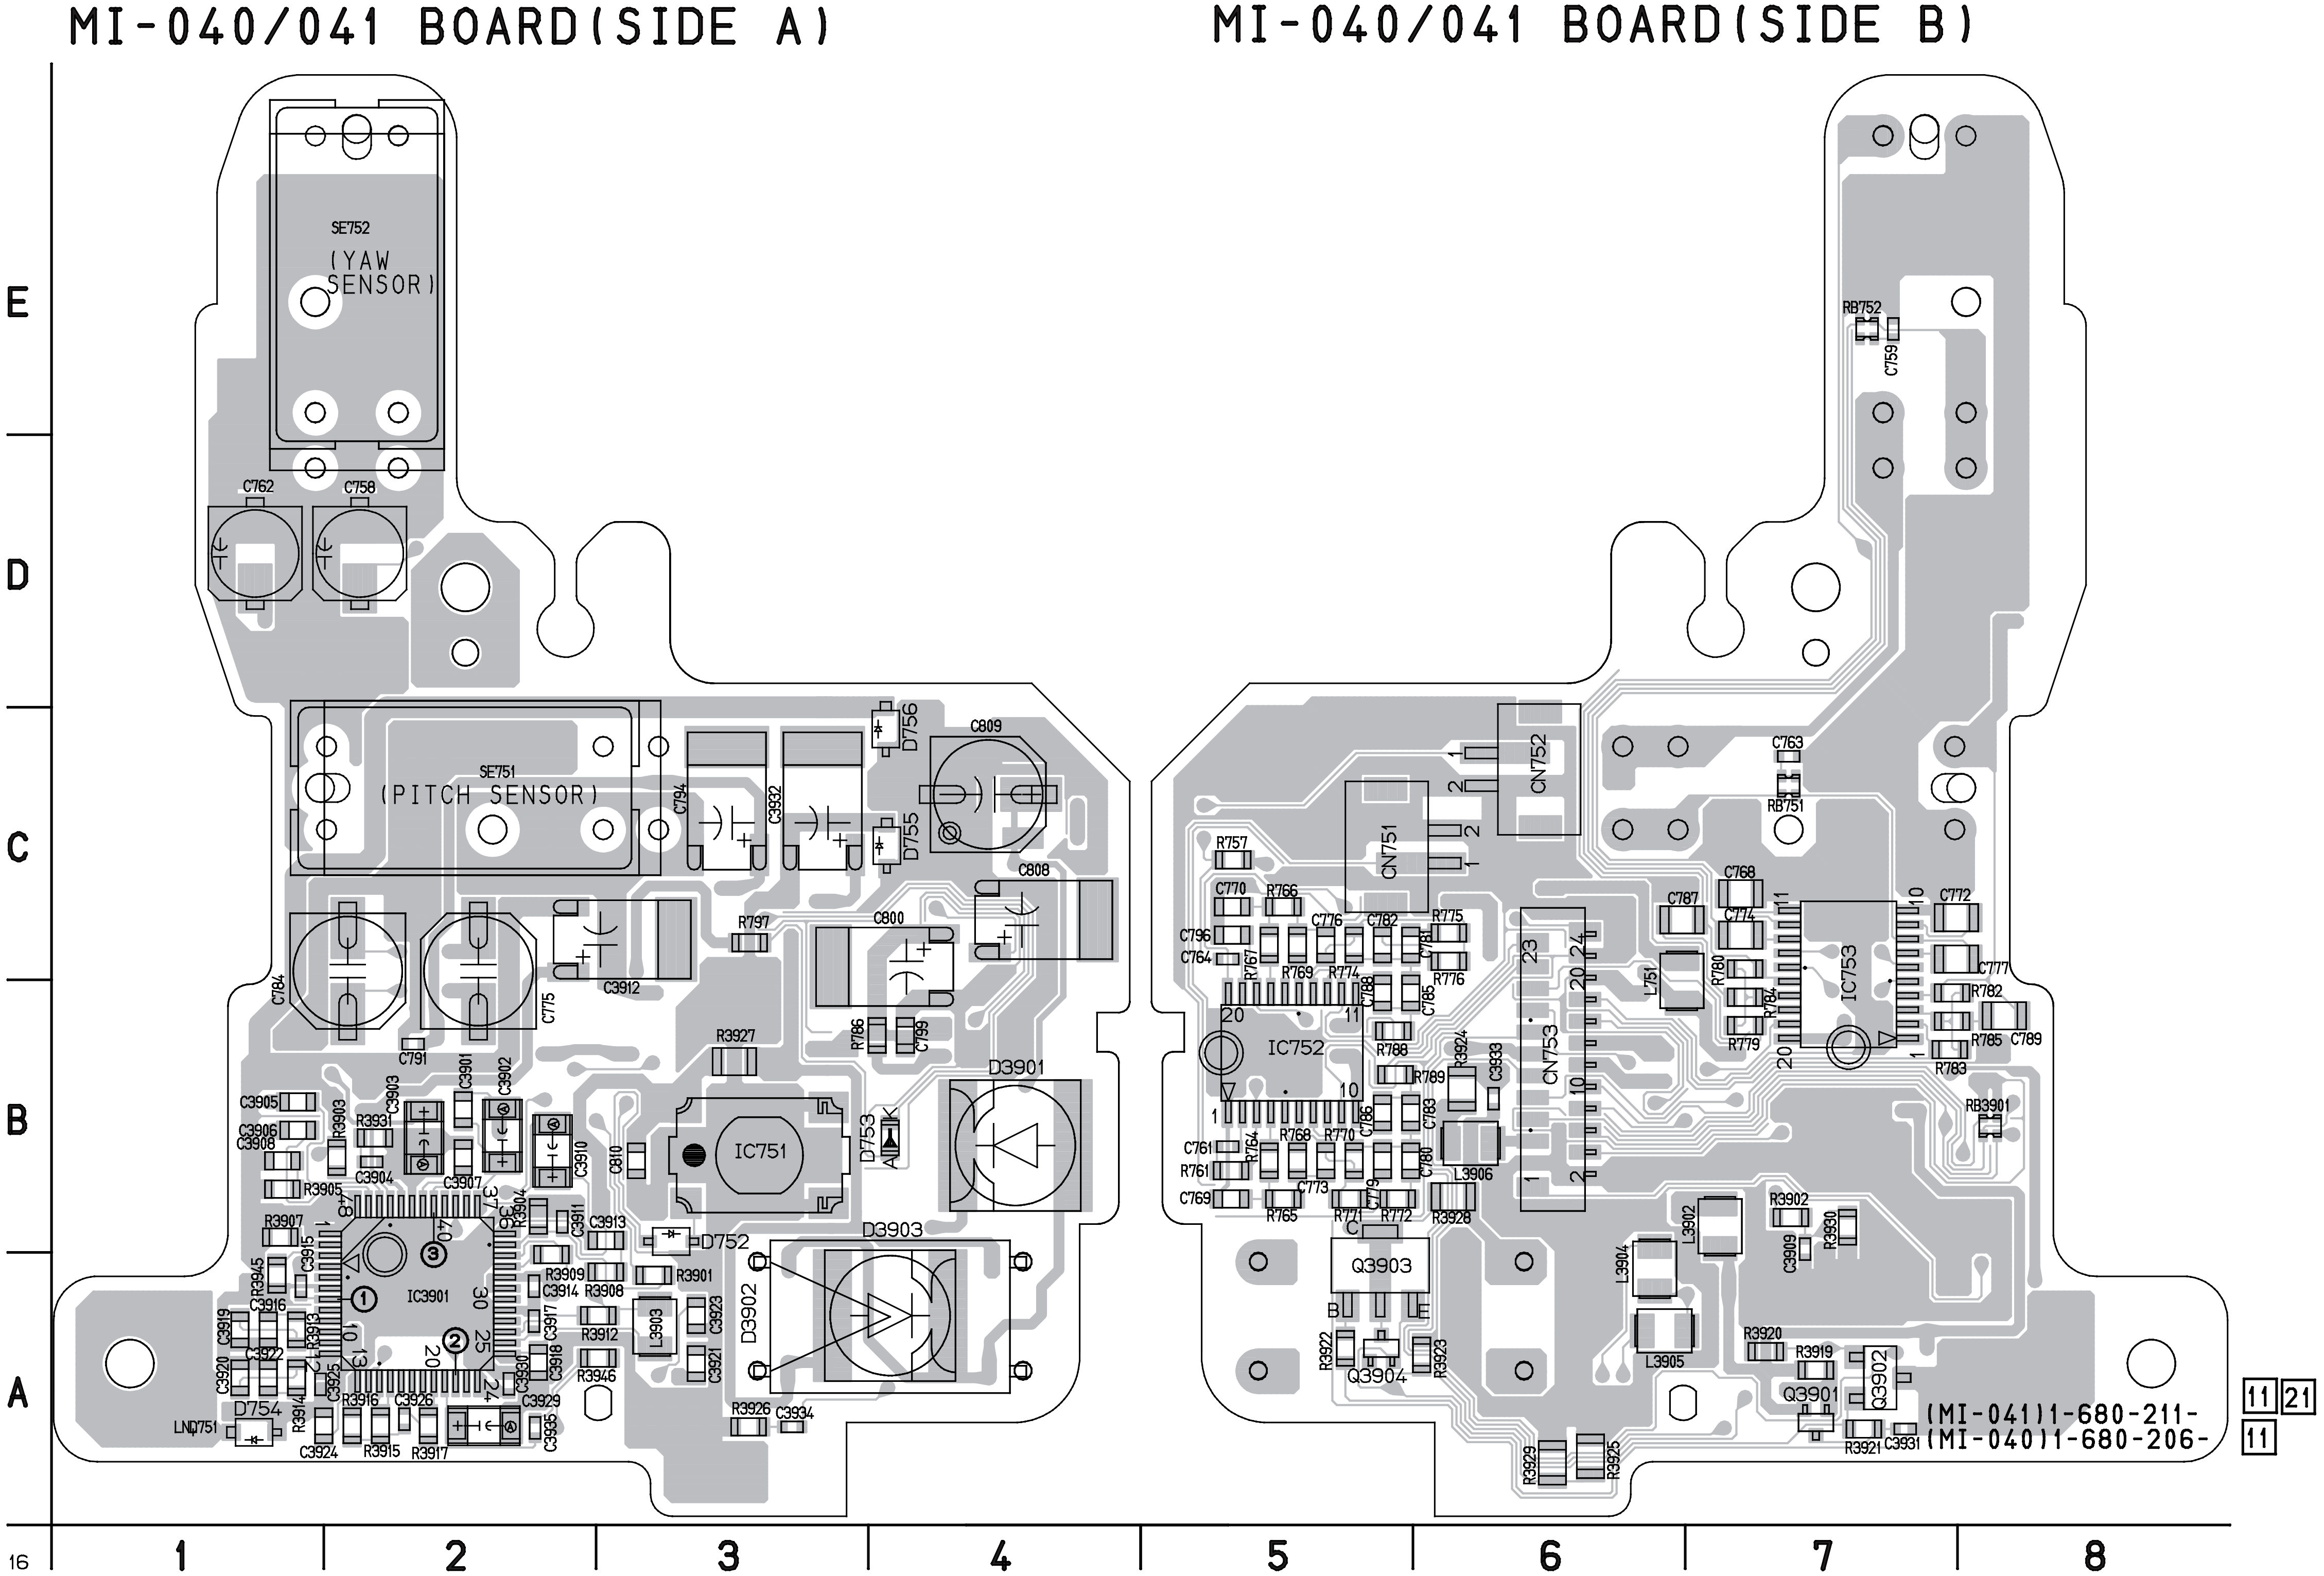
MI-040/041 BOARD(SIDE A)
MI-040/041 BOARD(SIDE B)
SE752
(YAW SENSOR)
SE751
(PITCH SENSOR)
C762
C758
C809
C808
C800
C794
C3932
D756
D755
C784
C775
C3912
R797
R3927
R786
C799
D3901
D753
IC751
C810
C791
C3901
C3902
C3903
C3905
C3906
C3908
R3903
R3931
C3904
C3907
C3910
R3905
R3907
R3904
C3911
C3913
D752
IC3901
C3915
R3945
C3916
C3919
C3920
C3922
R3913
C3925
C3909
C3914
R3909
R3908
R3901
C3917
R3912
L3903
C3923
C3921
R3946
C3918
C3930
C3929
C3935
D3902
D3903
R3926
C3934
D754
LND751
R3914
R3916
C3926
R3915
R3917
C3924
RB752
C759
C763
RB751
CN752
CN751
R757
C770
R766
C796
C764
C776
C782
R775
R767
R769
R774
C788
C778
C785
R776
IC752
R788
R3924
C3933
R789
C761
R761
R764
R768
R770
C783
C780
C769
R765
R771
R772
L3906
R3928
C773
Q3903
R3922
Q3904
R3923
R3929
R3925
CN753
C787
C768
C774
L751
R780
R784
R779
IC753
C772
C777
R782
R785
C789
R783
RB3901
R3902
L3902
C3909
R3930
L3904
L3905
R3920
R3919
Q3902
Q3901
R3921
C3931
(MI-041)1-680-211-
(MI-040)1-680-206-
11 21
11
E
D
C
B
A
16
1
2
3
4
5
6
7
8

**For printed wiring board**

- Refer to page 4-70 for parts location.
- MI-040/041 board consists of multiple layers. However, only the sides (layers) A and B are shown.
- Chip parts

Transistor



There are a few cases that the part printed on this diagram isn't mounted in this model.

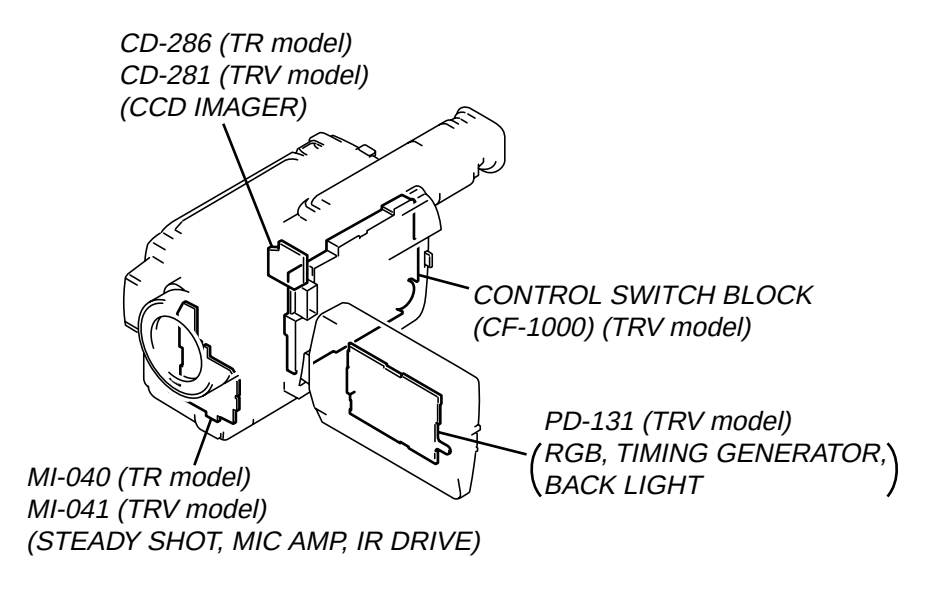
CD-286 (TR model)
CD-281 (TRV model)
(CCD IMAGER)
CONTROL SWITCH BLOCK
(CF-1000) (TRV model)
PD-131 (TRV model)
(RGB, TIMING GENERATOR, BACK LIGHT)
MI-040 (TR model)
MI-041 (TRV model)
(STEADY SHOT, MIC AMP, IR DRIVE)

**For Schematic Diagram**
- Refer to page 4-9 for printed wiring board.

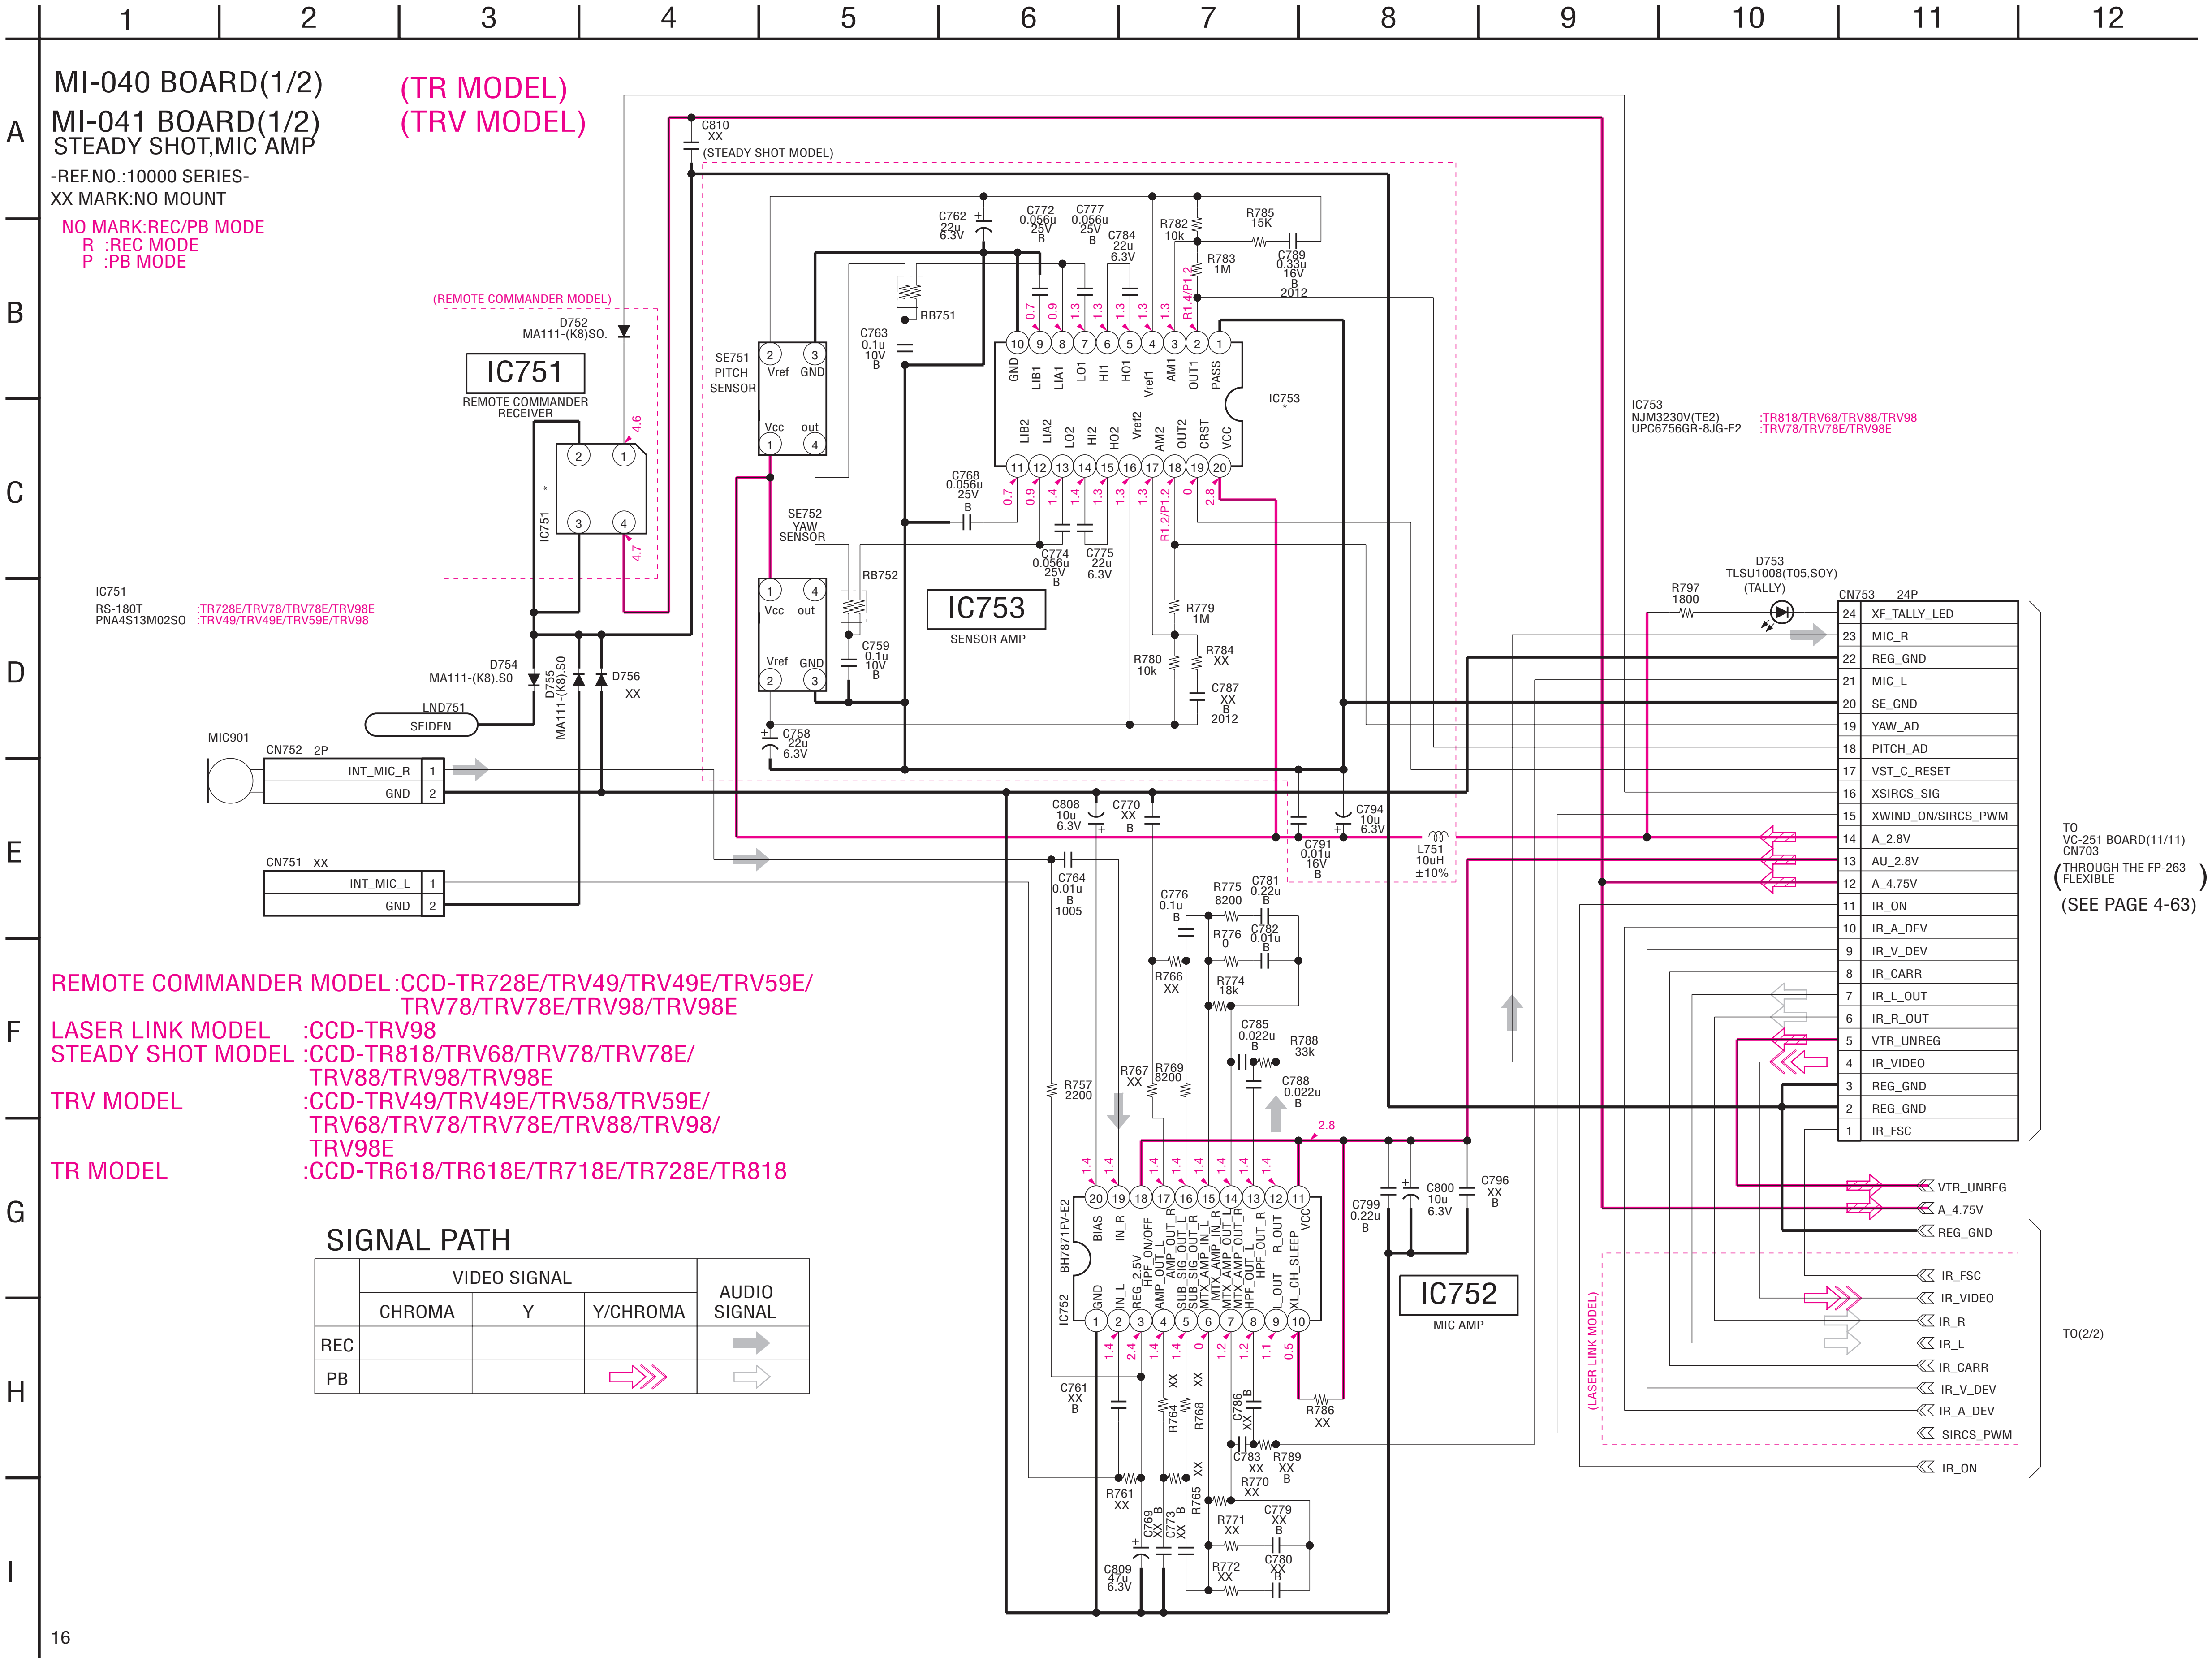
MI-040 BOARD(1/2) (TR MODEL)
MI-041 BOARD(1/2) (TRV MODEL)
STEADY SHOT,MIC AMP
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
(REMOTE COMMANDER MODEL)
(STEADY SHOT MODEL)
IC751 REMOTE COMMANDER RECEIVER
IC751 RS-180T :TR728E/TRV78/TRV78E/TRV98E
PNA4S13M02SO :TRV49/TRV49E/TRV59E/TRV98
D752 MA111-(K8)SO.
D754 MA111-(K8).SO
D755 MA111-(K8).SO
D756 XX
LND751 SEIDEN
MIC901
CN752 2P INT_MIC_R GND
CN751 XX INT_MIC_L GND
SE751 PITCH SENSOR
SE752 YAW SENSOR
RB751
RB752
IC753 SENSOR AMP
IC753 NJM3230V(TE2) :TR818/TRV68/TRV88/TRV98
UPC6756GR-8JG-E2 :TRV78/TRV78E/TRV98E
IC752 MIC AMP
IC752 BH7871FV-E2
D753 TLSU1008(T05,SOY) (TALLY)
L751 10uH ±10%
CN753 24P
24 XF_TALLY_LED
23 MIC_R
22 REG_GND
21 MIC_L
20 SE_GND
19 YAW_AD
18 PITCH_AD
17 VST_C_RESET
16 XSIRCS_SIG
15 XWIND_ON/SIRCS_PWM
14 A_2.8V
13 AU_2.8V
12 A_4.75V
11 IR_ON
10 IR_A_DEV
9 IR_V_DEV
8 IR_CARR
7 IR_L_OUT
6 IR_R_OUT
5 VTR_UNREG
4 IR_VIDEO
3 REG_GND
2 REG_GND
1 IR_FSC
TO VC-251 BOARD(11/11) CN703 (THROUGH THE FP-263 FLEXIBLE)
(SEE PAGE 4-63)
VTR_UNREG
A_4.75V
REG_GND
(LASER LINK MODEL)
IR_FSC
IR_VIDEO
IR_R
IR_L
IR_CARR
IR_V_DEV
IR_A_DEV
SIRCS_PWM
IR_ON
TO(2/2)
16

REMOTE COMMANDER MODEL :CCD-TR728E/TRV49/TRV49E/TRV59E/
TRV78/TRV78E/TRV98/TRV98E
LASER LINK MODEL :CCD-TRV98
STEADY SHOT MODEL :CCD-TR818/TRV68/TRV78/TRV78E/
TRV88/TRV98/TRV98E
TRV MODEL :CCD-TRV49/TRV49E/TRV58/TRV59E/
TRV68/TRV78/TRV78E/TRV88/TRV98/
TRV98E
TR MODEL :CCD-TR618/TR618E/TR718E/TR728E/TR818

## SIGNAL PATH

| | VIDEO SIGNAL | | | AUDIO SIGNAL |
|---|---|---|---|---|
| | CHROMA | Y | Y/CHROMA | |
| REC | | | | ➡ |
| PB | | | ⇨ | ⇨ |

**For Schematic Diagram**
- Refer to page 4-9 for printed wiring board.
- Refer to page 4-66 for waveforms.

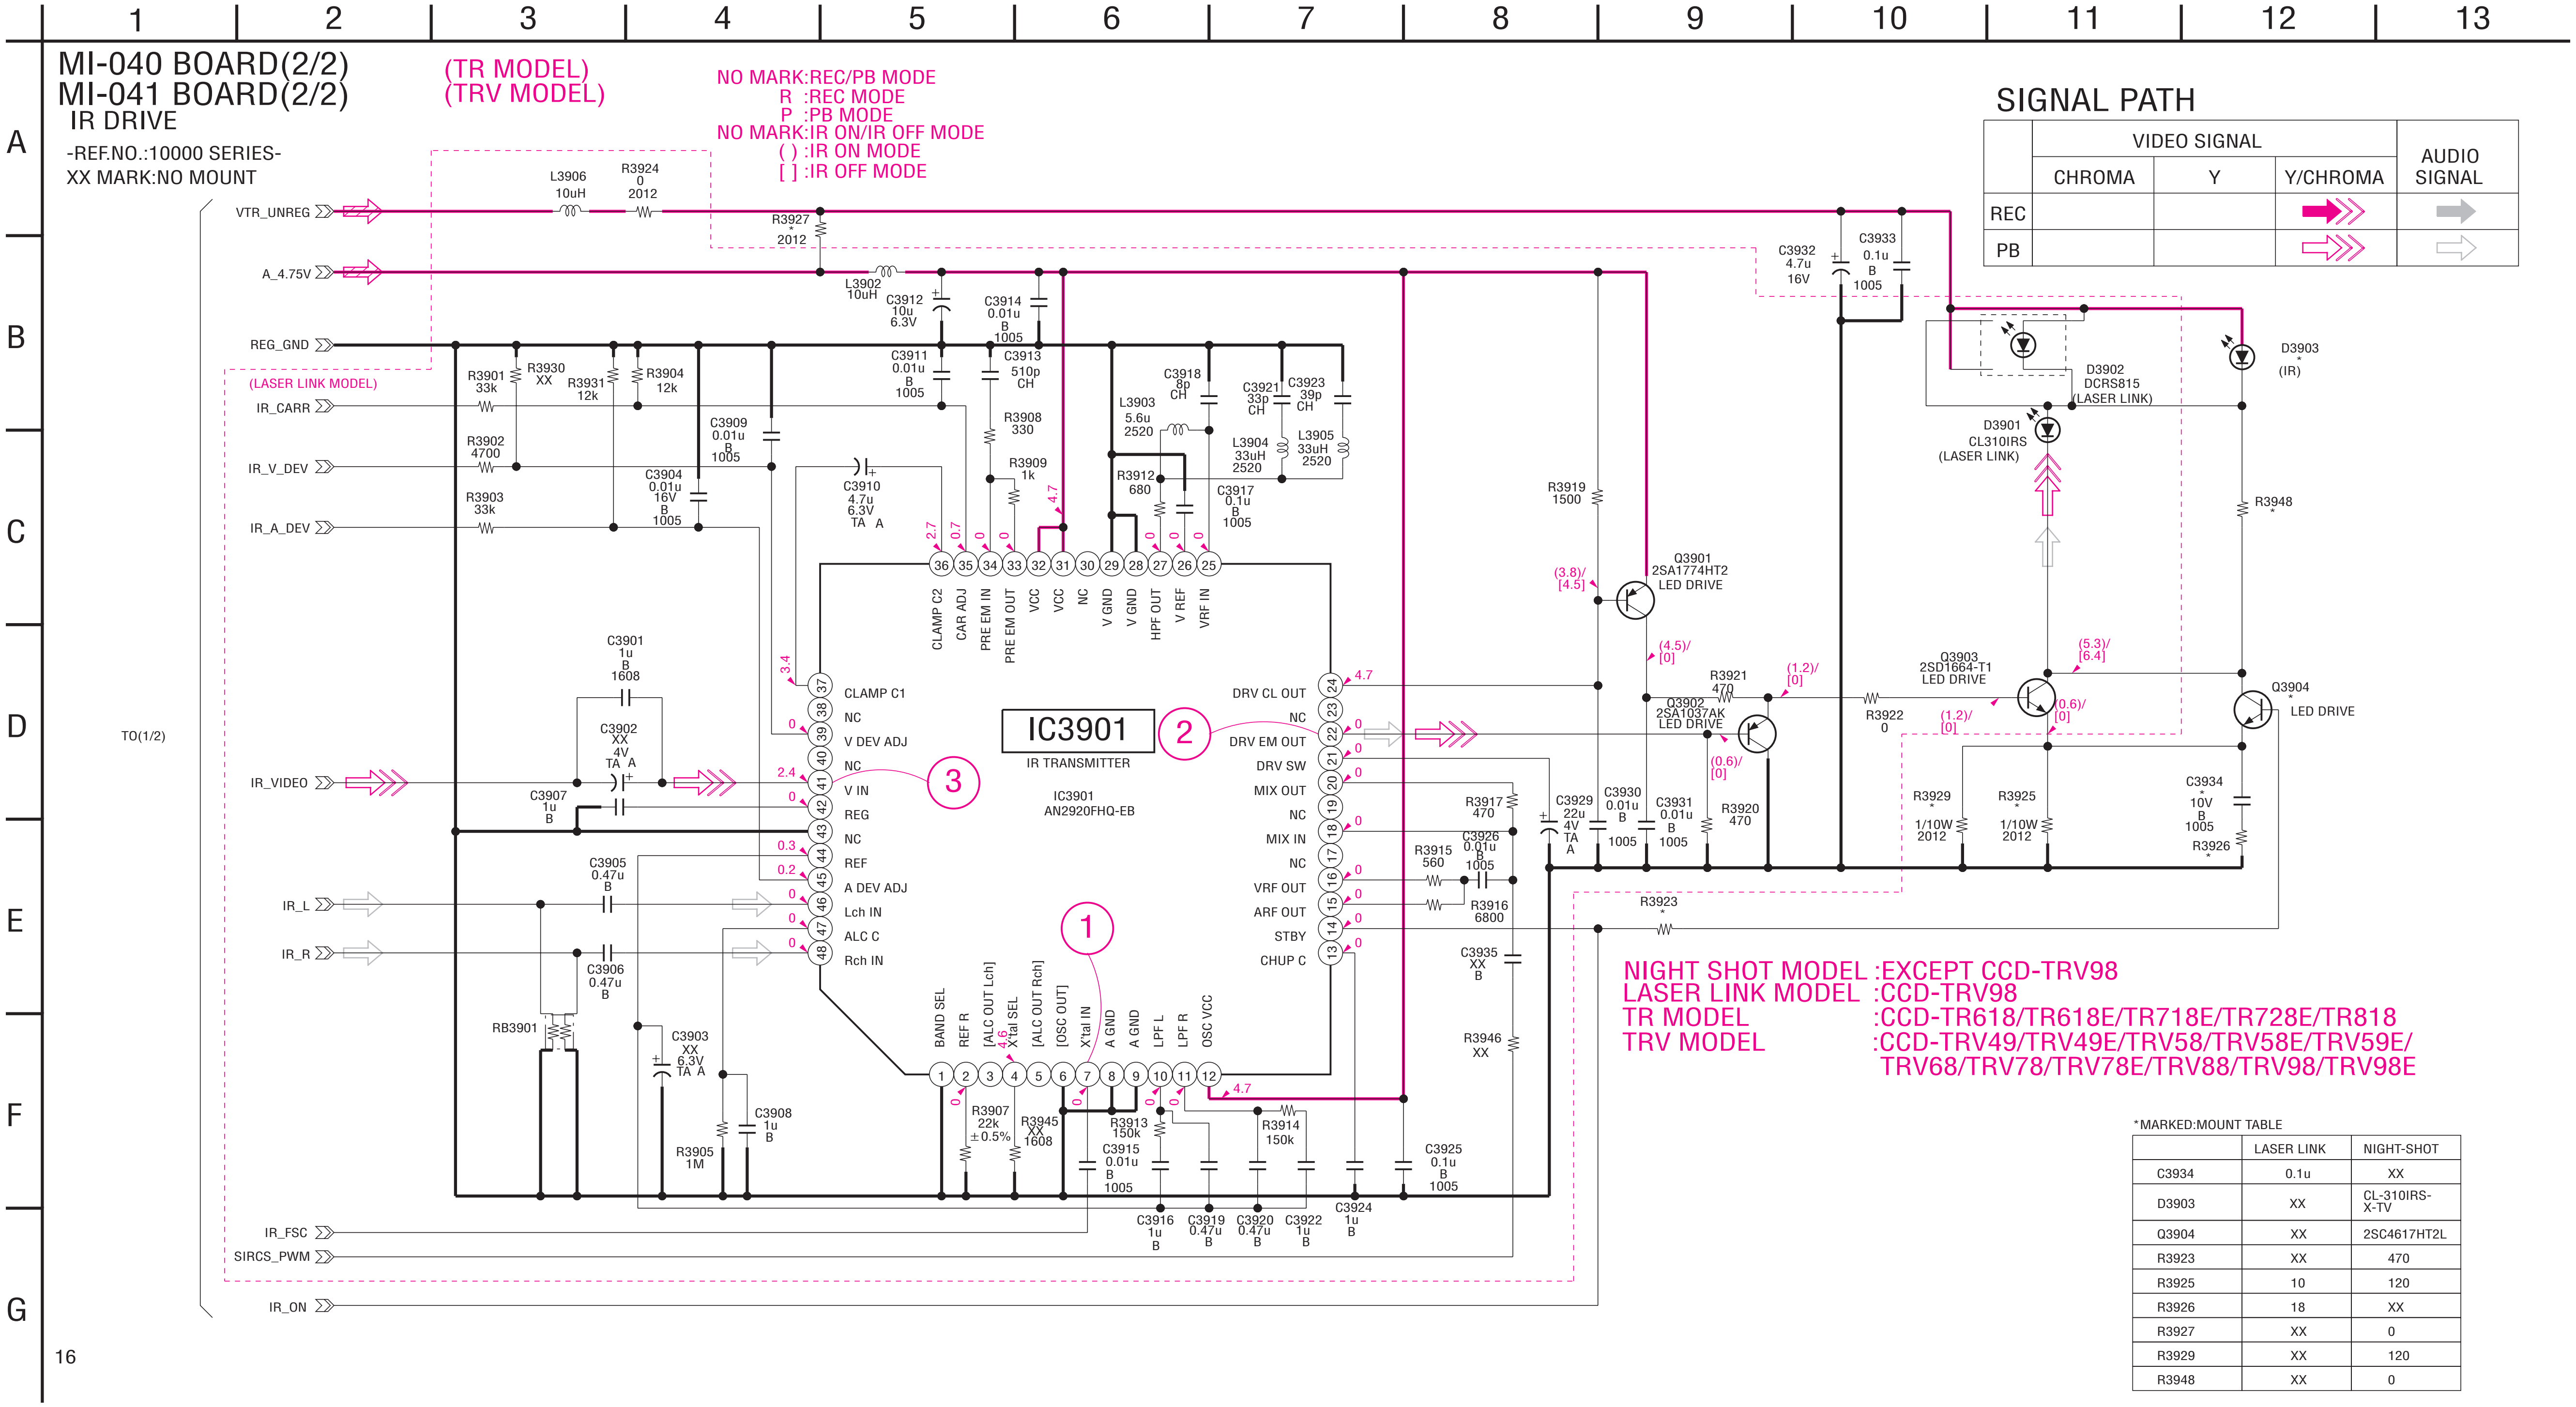
1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
G
MI-040 BOARD(2/2)
MI-041 BOARD(2/2)
IR DRIVE
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
(TR MODEL)
(TRV MODEL)
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
NO MARK:IR ON/IR OFF MODE
( ) :IR ON MODE
[ ] :IR OFF MODE
VTR_UNREG
A_4.75V
REG_GND
(LASER LINK MODEL)
IR_CARR
IR_V_DEV
IR_A_DEV
IR_VIDEO
IR_L
IR_R
IR_FSC
SIRCS_PWM
IR_ON
TO(1/2)
L3906 10uH
R3924 0 2012
R3927 * 2012
L3902 10uH
C3912 10u 6.3V
C3914 0.01u B 1005
C3911 0.01u B 1005
C3913 510p CH
R3908 330
R3909 1k
C3918 8p CH
L3903 5.6u 2520
R3912 680
C3921 33p CH
C3923 39p CH
L3904 33uH 2520
L3905 33uH 2520
C3917 0.1u B 1005
R3901 33k
R3930 XX
R3931 12k
R3904 12k
R3902 4700
R3903 33k
C3909 0.01u B 1005
C3904 0.01u 16V B 1005
C3910 4.7u 6.3V TA A
C3901 1u B 1608
C3902 XX 4V TA A
C3907 1u B
C3905 0.47u B
C3906 0.47u B
RB3901
C3903 XX 6.3V TA A
R3905 1M
C3908 1u B
R3907 22k ±0.5%
R3945 XX 1608
R3913 150k
C3915 0.01u B 1005
R3914 150k
C3916 1u B
C3919 0.47u B
C3920 0.47u B
C3922 1u B
C3924 1u B
C3925 0.1u B 1005
IC3901
IR TRANSMITTER
IC3901 AN2920FHQ-EB
CLAMP C2
CAR ADJ
PRE EM IN
PRE EM OUT
VCC
VCC
NC
V GND
V GND
HPF OUT
V REF
VRF IN
CLAMP C1
NC
V DEV ADJ
NC
V IN
REG
NC
REF
A DEV ADJ
Lch IN
ALC C
Rch IN
DRV CL OUT
NC
DRV EM OUT
DRV SW
MIX OUT
NC
MIX IN
NC
VRF OUT
ARF OUT
STBY
CHUP C
BAND SEL
REF R
[ALC OUT Lch]
X'tal SEL
[ALC OUT Rch]
[OSC OUT]
X'tal IN
A GND
A GND
LPF L
LPF R
OSC VCC
R3919 1500
Q3901 2SA1774HT2 LED DRIVE
(3.8)/ [4.5]
(4.5)/ [0]
R3921 470
(1.2)/ [0]
Q3902 2SA1037AK LED DRIVE
(0.6)/ [0]
R3917 470
R3915 560
C3926 0.01u B 1005
R3916 6800
C3929 22u 4V TA A
C3930 0.01u B 1005
C3931 0.01u B 1005
R3920 470
C3935 XX B
R3946 XX
R3923 *
C3932 4.7u 16V
C3933 0.1u B 1005
D3902 DCRS815 (LASER LINK)
D3901 CL310IRS (LASER LINK)
D3903 * (IR)
R3948 *
Q3903 2SD1664-T1 LED DRIVE
(5.3)/ [6.4]
(0.6)/ [0]
R3922 0
(1.2)/ [0]
Q3904 * LED DRIVE
R3929 * 1/10W 2012
R3925 * 1/10W 2012
C3934 * 10V B 1005
R3926 *
16

## SIGNAL PATH

|  | VIDEO SIGNAL |  |  | AUDIO SIGNAL |
|---|---|---|---|---|
|  | CHROMA | Y | Y/CHROMA |  |
| REC |  |  | ➡ | ➡ |
| PB |  |  | ⇨ | ⇨ |

NIGHT SHOT MODEL :EXCEPT CCD-TRV98
LASER LINK MODEL :CCD-TRV98
TR MODEL :CCD-TR618/TR618E/TR718E/TR728E/TR818
TRV MODEL :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/
TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

*MARKED:MOUNT TABLE

|  | LASER LINK | NIGHT-SHOT |
|---|---|---|
| C3934 | 0.1u | XX |
| D3903 | XX | CL-310IRS-X-TV |
| Q3904 | XX | 2SC4617HT2L |
| R3923 | XX | 470 |
| R3925 | 10 | 120 |
| R3926 | 18 | XX |
| R3927 | XX | 0 |
| R3929 | XX | 120 |
| R3948 | XX | 0 |

## PD-131 (RGB, TIMING GENERATOR, BACK LIGHT) PRINTED WIRING BOARD

— Ref. No. PD-131 Board; 10,000 Series —

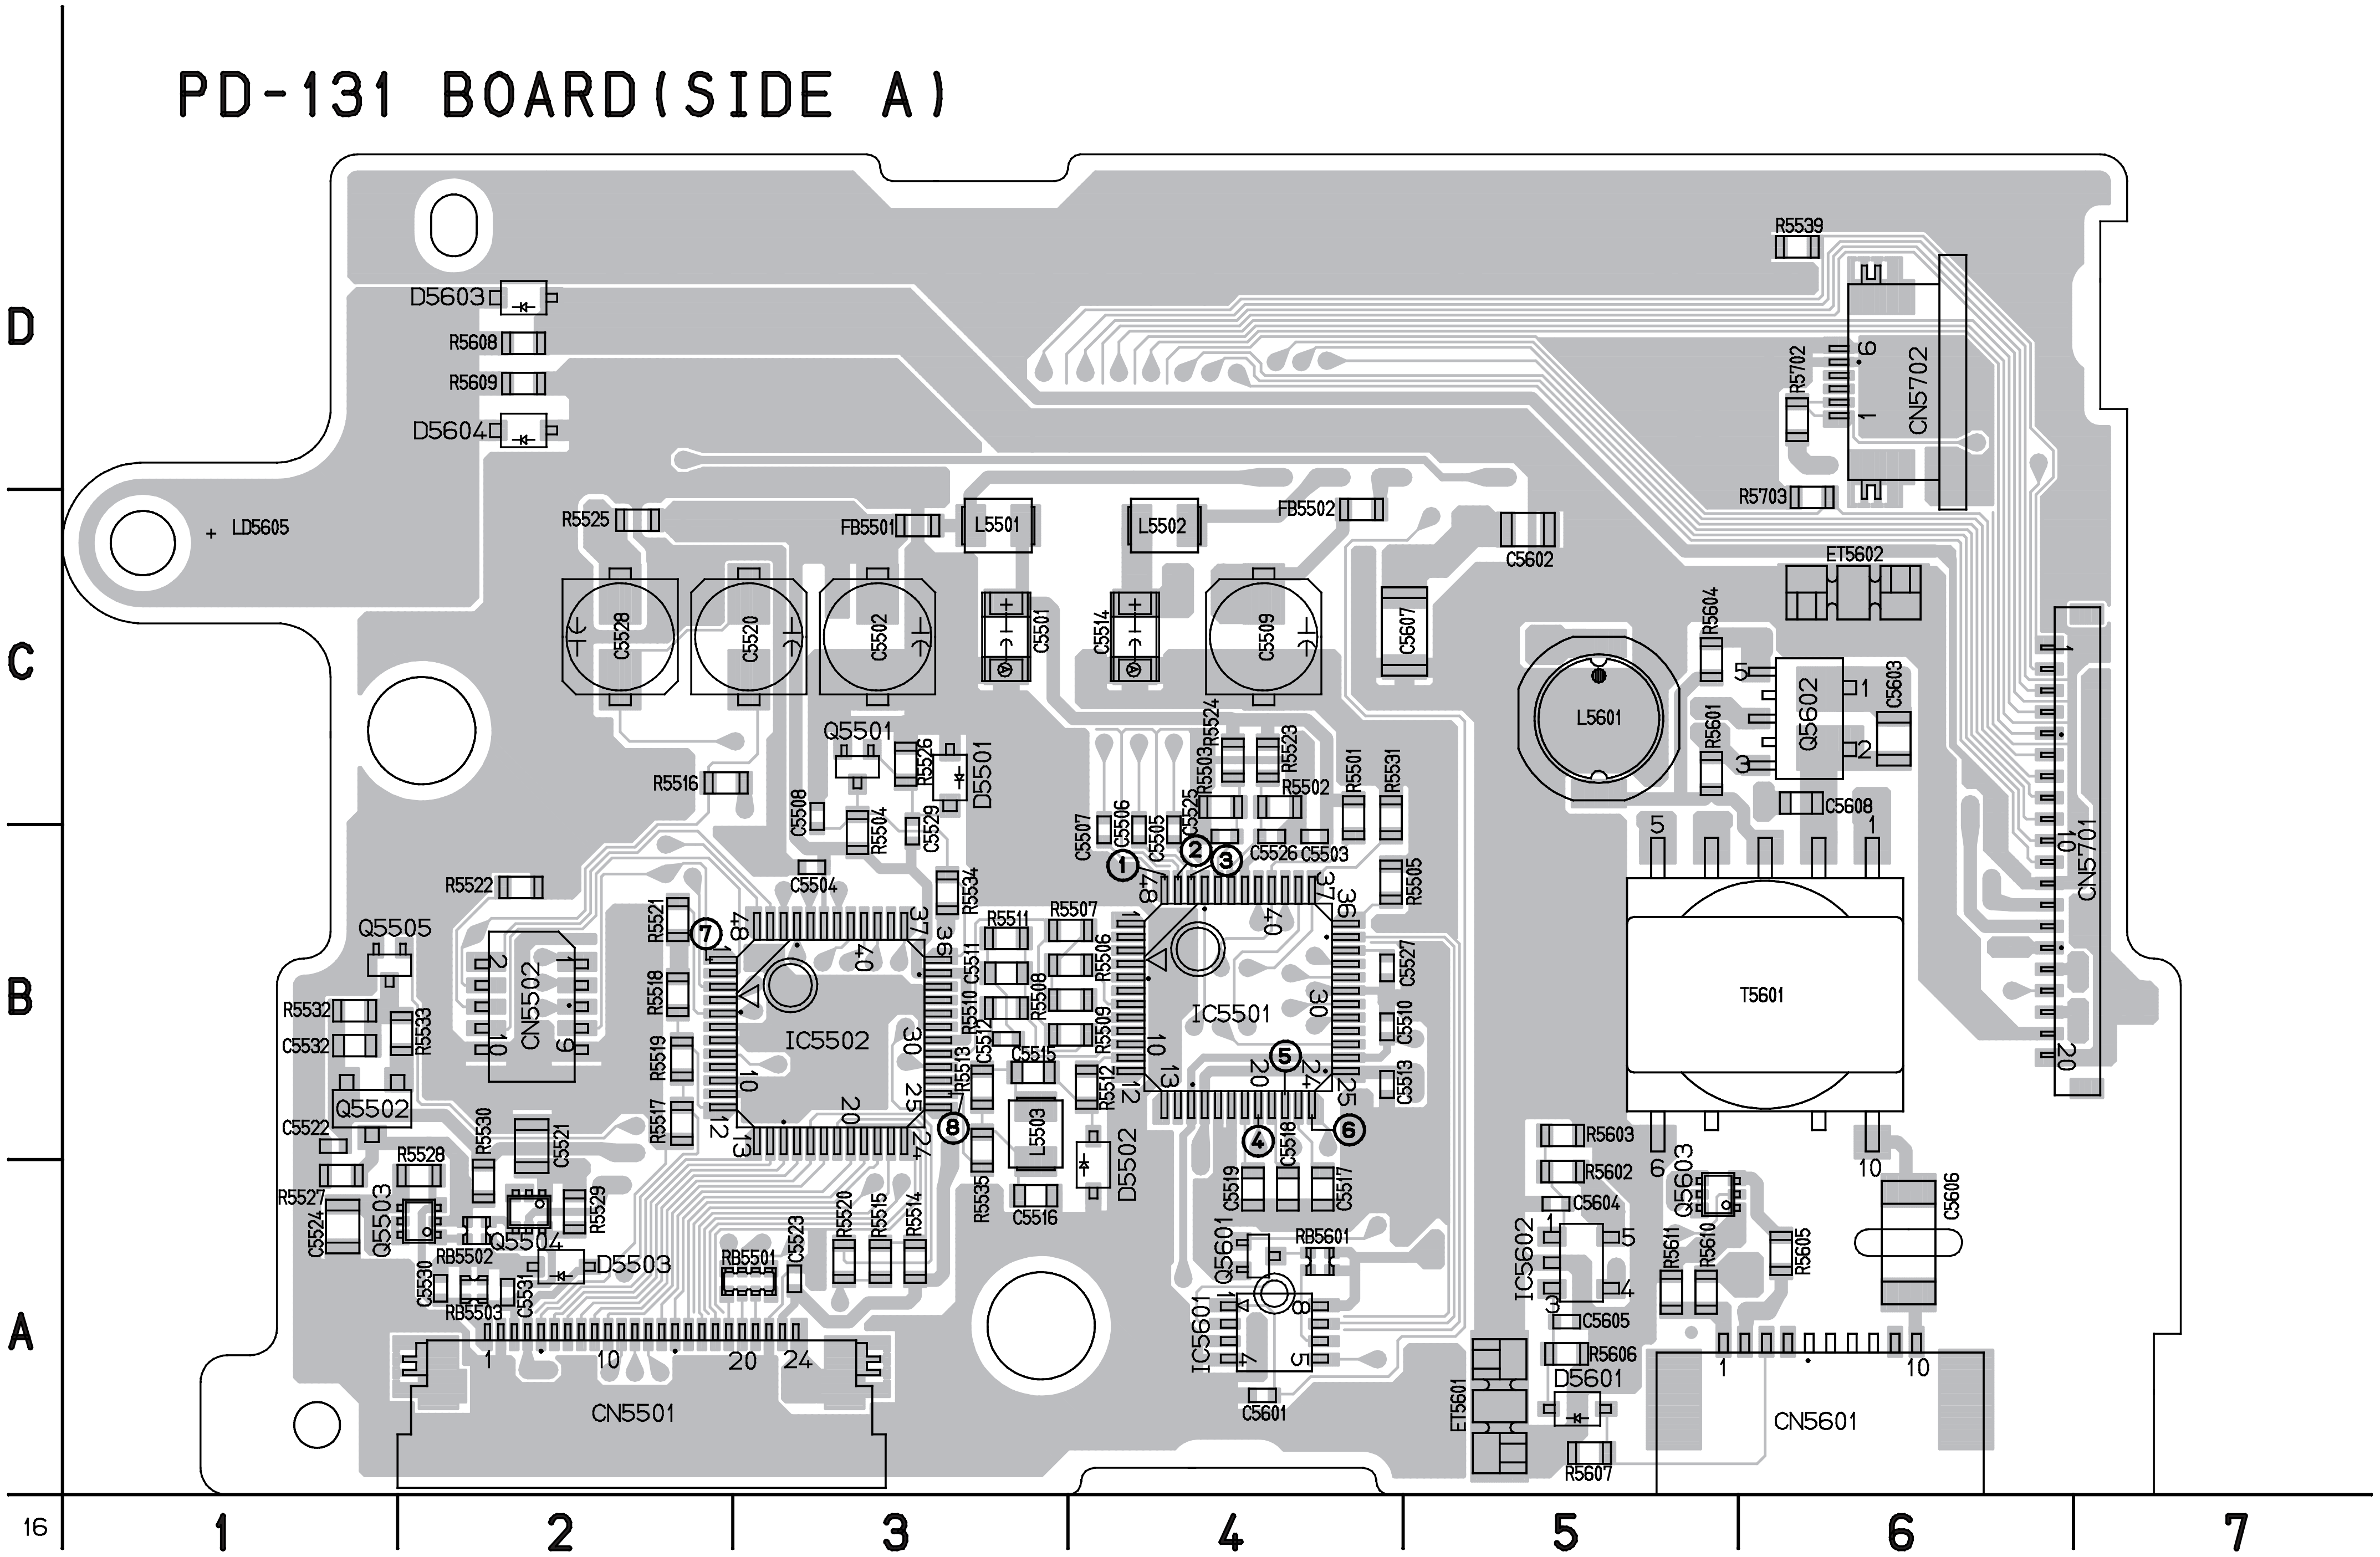
PD-131 BOARD(SIDE A)
D
C
B
A
1
2
3
4
5
6
7
16
D5603
R5608
R5609
D5604
LD5605
R5525
FB5501
L5501
L5502
FB5502
C5602
R5539
R5702
CN5702
R5703
ET5602
C5528
C5520
C5502
C5501
C5514
C5509
C5607
L5601
R5604
Q5602
C5603
R5601
C5608
Q5501
R5526
D5501
R5516
C5508
R5504
C5529
C5504
R5524
R5503
R5523
R5502
R5501
R5531
C5507
C5506
C5505
C5525
C5526
C5503
R5505
R5522
Q5505
CN5502
R5532
C5532
R5533
Q5502
R5521
R5518
R5519
R5517
IC5502
R5534
R5511
R5507
C5511
C5510
R5508
R5506
C5515
R5509
R5510
R5513
R5512
IC5501
C5527
C5510
C5513
T5601
CN5701
L5503
D5502
C5518
C5519
C5517
C5522
R5528
R5530
C5521
R5527
C5524
Q5503
R5529
Q5504
RB5502
D5503
C5530
RB5503
C5531
RB5501
C5523
R5520
R5515
R5514
R5535
C5516
Q5601
RB5601
IC5601
C5601
IC5602
C5604
C5605
R5603
R5602
Q5603
R5611
R5610
R5605
C5606
R5606
D5601
ET5601
R5607
CN5501
CN5601

**For printed wiring board**

- Refer to page 4-70 for parts location.
- PD-131 board consists of multiple layers. However, only the sides (layers) A and B are shown.
- Chip parts

Transistor



There are a few cases that the part printed on this diagram isn't mounted in this model.

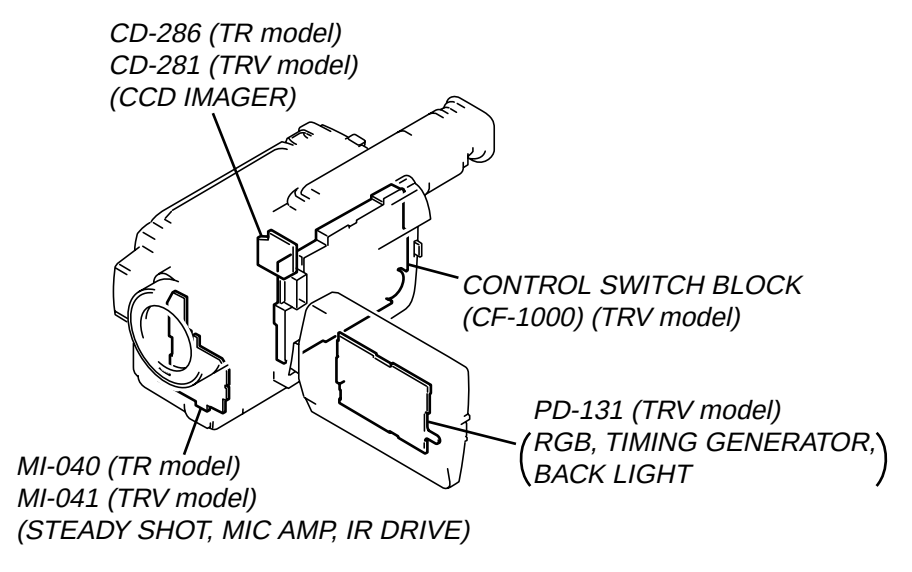
CD-286 (TR model)
CD-281 (TRV model)
(CCD IMAGER)
CONTROL SWITCH BLOCK
(CF-1000) (TRV model)
PD-131 (TRV model)
(RGB, TIMING GENERATOR, BACK LIGHT)
MI-040 (TR model)
MI-041 (TRV model)
(STEADY SHOT, MIC AMP, IR DRIVE)

## PD-131 BOARD(SIDE B)

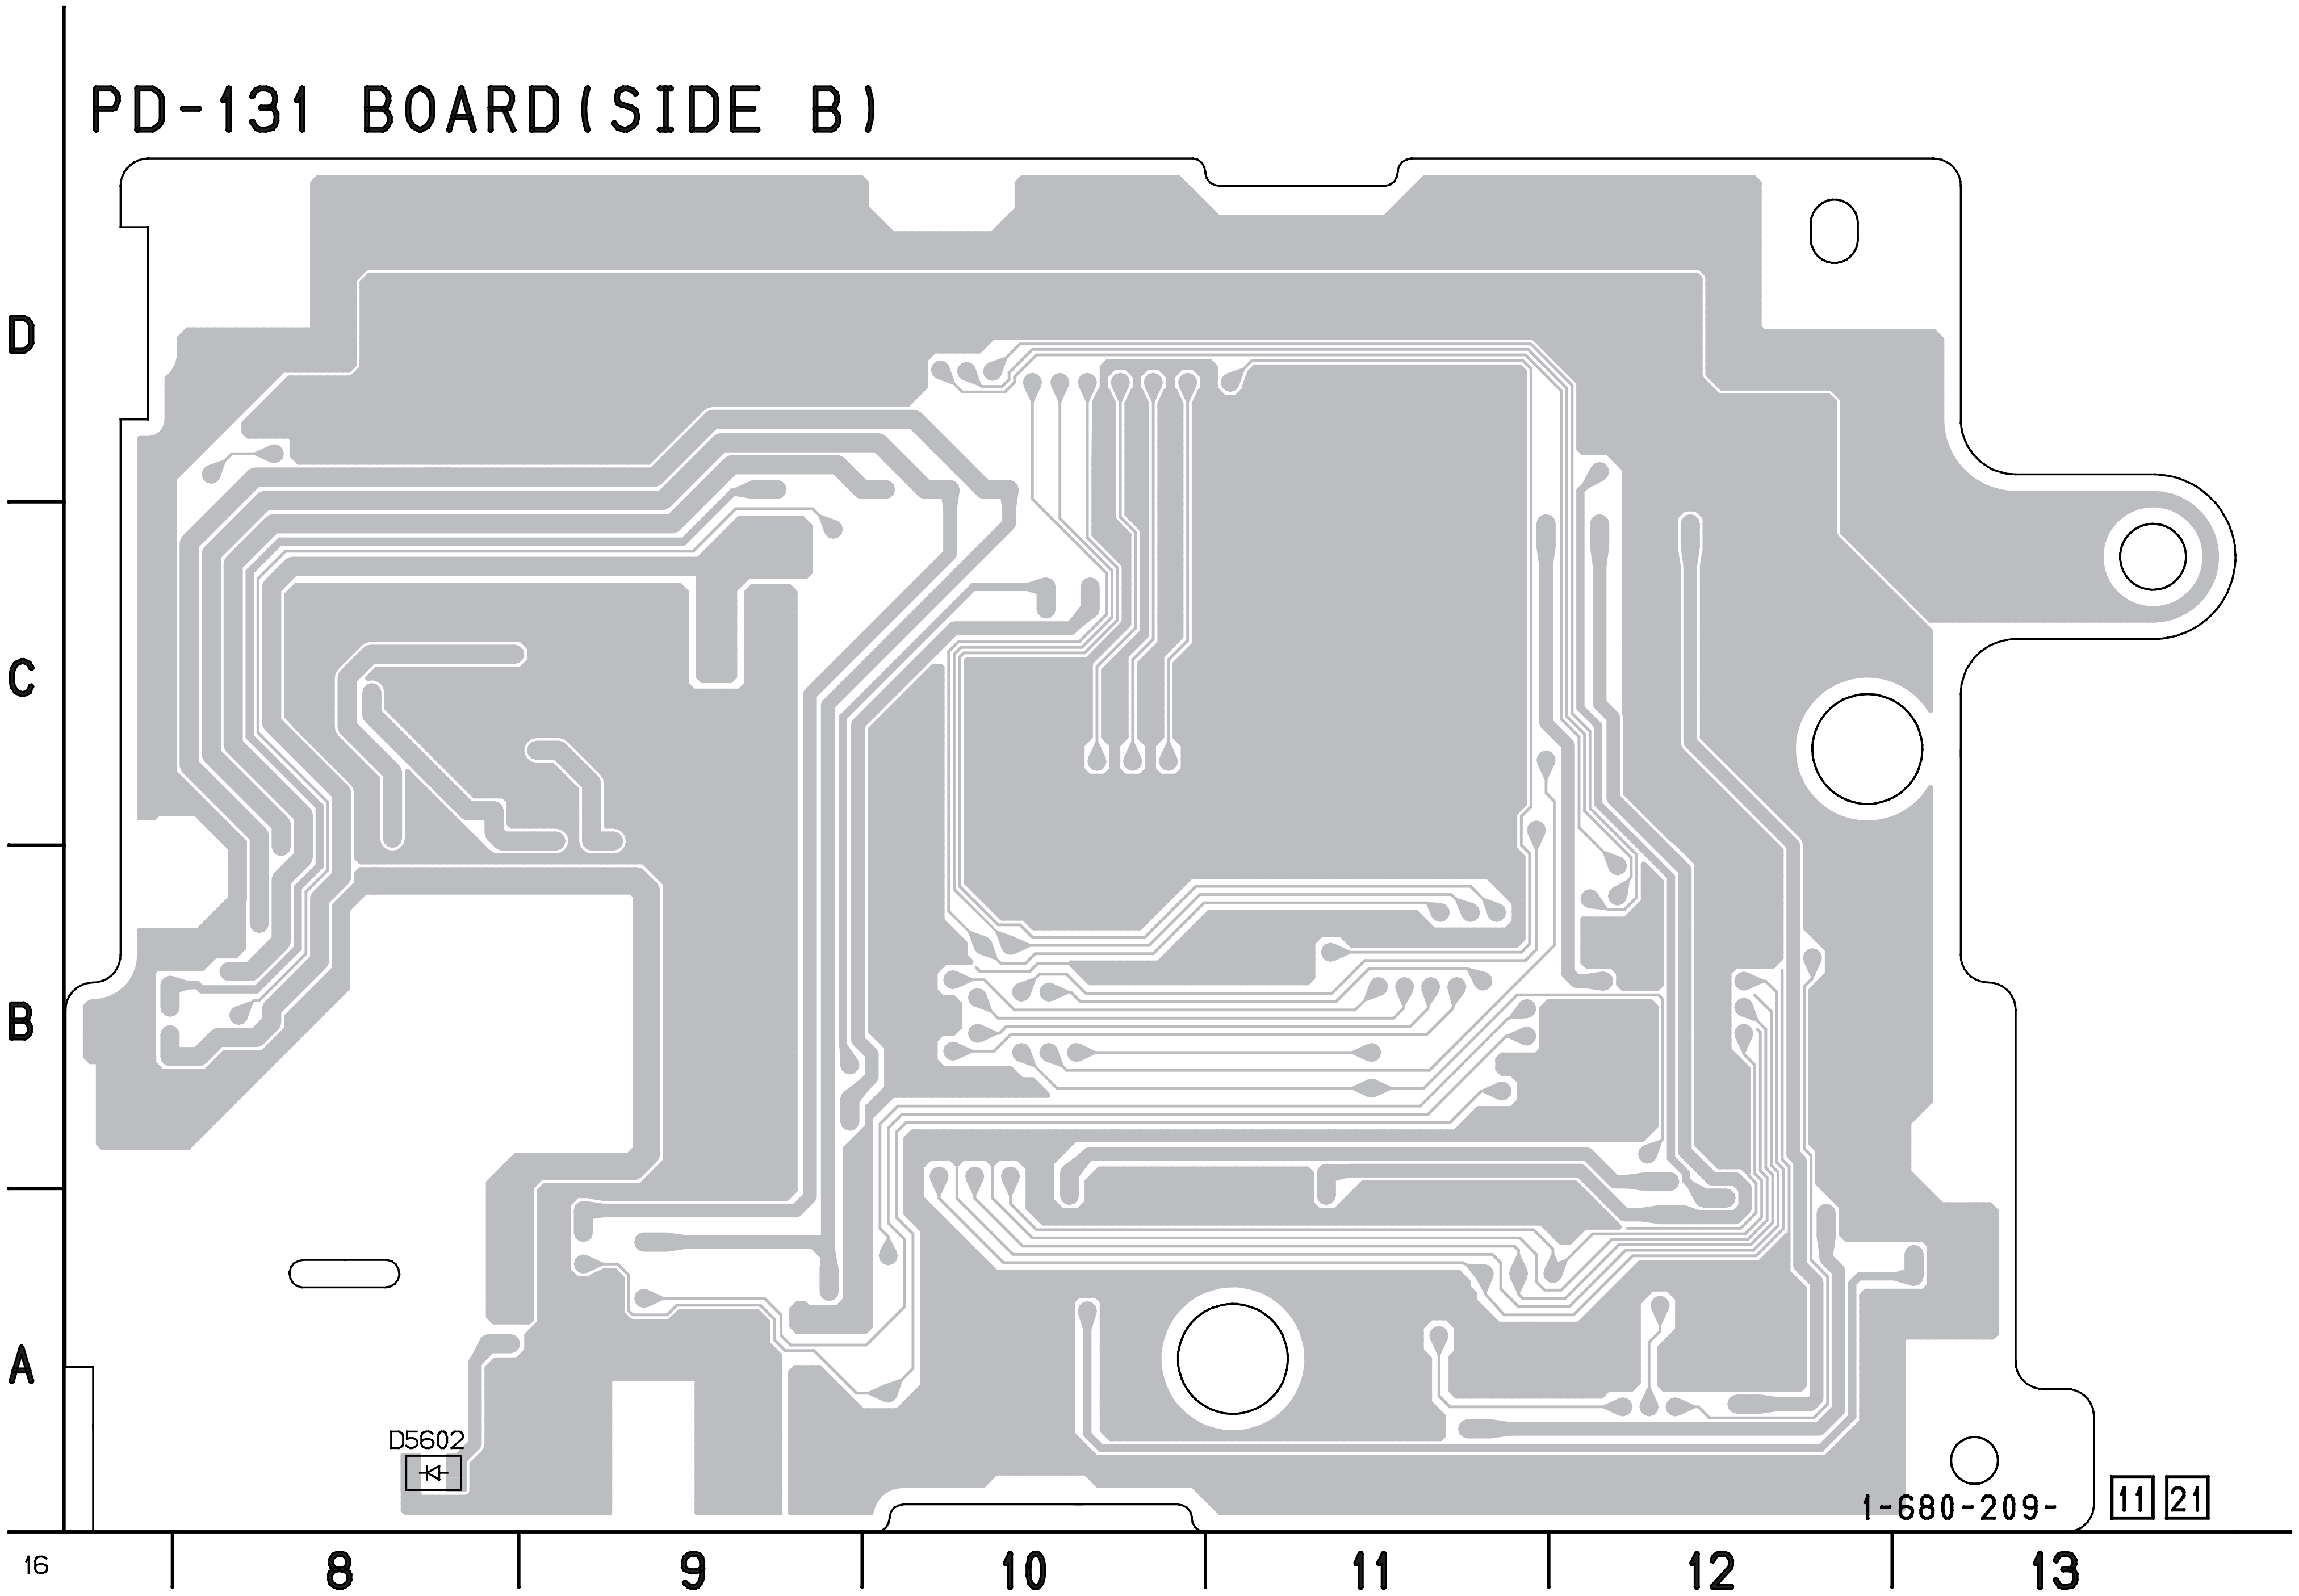
D
C
B
A
D5602
1-680-209-
11
21
16
8
9
10
11
12
13

**For Schematic Diagram**

- Refer to page 4-15 for printed wiring board.
- Refer to page 4-66 for waveforms.

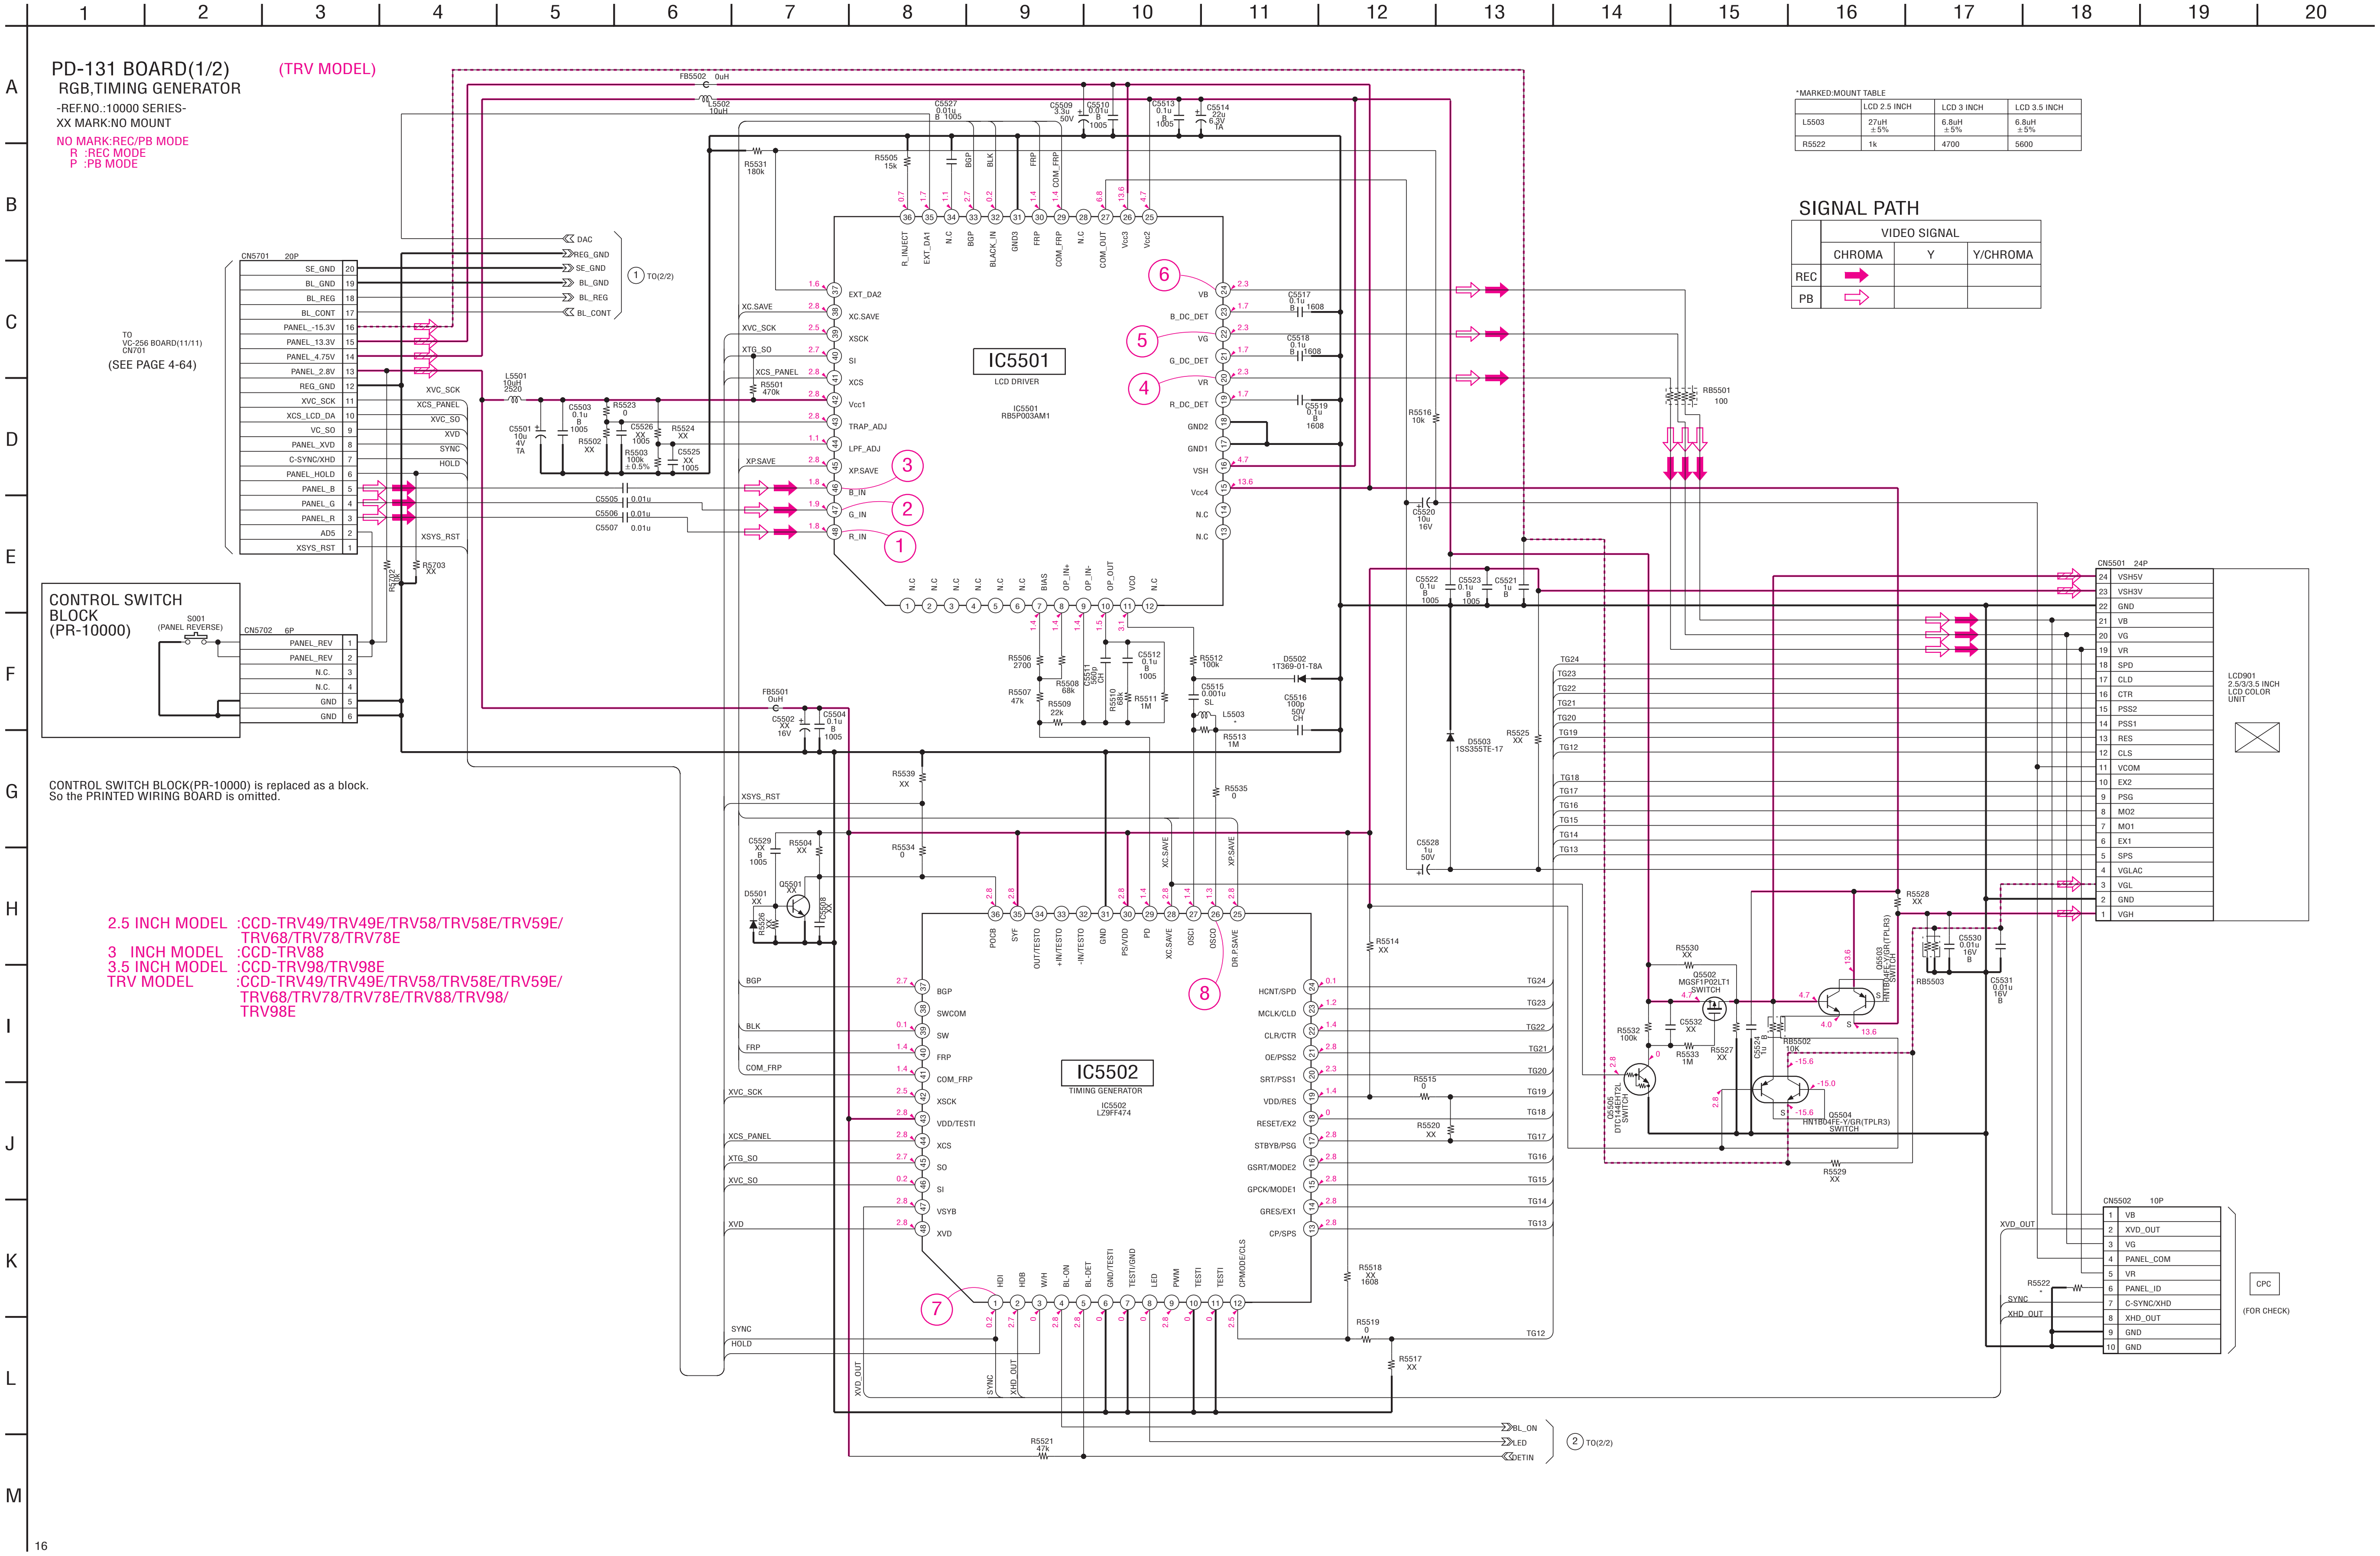
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
A
B
C
D
E
F
G
H
I
J
K
L
M
CN5701 20P
SE_GND 20
BL_GND 19
BL_REG 18
BL_CONT 17
PANEL_-15.3V 16
PANEL_13.3V 15
PANEL_4.75V 14
PANEL_2.8V 13
REG_GND 12
XVC_SCK 11
XCS_LCD_DA 10
VC_SO 9
PANEL_XVD 8
C-SYNC/XHD 7
PANEL_HOLD 6
PANEL_B 5
PANEL_G 4
PANEL_R 3
AD5 2
XSYS_RST 1
TO
VC-256 BOARD(11/11)
CN701
(SEE PAGE 4-64)
DAC
REG_GND
SE_GND
BL_GND
BL_REG
BL_CONT
① TO(2/2)
XVC_SCK
XCS_PANEL
XVC_SO
XVD
SYNC
HOLD
XSYS_RST
R5702 10k
R5703 XX
L5501 10uH 2520
CONTROL SWITCH
BLOCK
(PR-10000)
S001
(PANEL REVERSE)
CN5702 6P
PANEL_REV 1
PANEL_REV 2
N.C. 3
N.C. 4
GND 5
GND 6
IC5501
LCD DRIVER
IC5501
RB5P003AM1
R_INJECT
EXT_DA1
N.C
BGP
BLACK_IN
GND3
FRP
COM_FRP
N.C
COM_OUT
Vcc3
Vcc2
EXT_DA2
XC.SAVE
XSCK
SI
XCS
Vcc1
TRAP_ADJ
LPF_ADJ
XP.SAVE
B_IN
G_IN
R_IN
VB
B_DC_DET
VG
G_DC_DET
VR
R_DC_DET
GND2
GND1
VSH
Vcc4
N.C
N.C
BIAS
OP_IN+
OP_IN-
OP_OUT
VCO
①
②
③
④
⑤
⑥
⑦
⑧
IC5502
TIMING GENERATOR
IC5502
LZ9FF474
POCB
SYF
OUT/TESTO
+IN/TESTO
-IN/TESTO
GND
PS/VDD
PD
XC.SAVE
OSCI
OSCO
DR.P.SAVE
BGP
SWCOM
SW
FRP
COM_FRP
XSCK
VDD/TESTI
XCS
SO
SI
VSYB
XVD
HCNT/SPD
MCLK/CLD
CLR/CTR
OE/PSS2
SRT/PSS1
VDD/RES
RESET/EX2
STBYB/PSG
GSRT/MODE2
GPCK/MODE1
GRES/EX1
CP/SPS
HDI
HDB
W/H
BL-ON
BL-DET
GND/TESTI
TESTI/GND
LED
PWM
TESTI
TESTI
CPMODE/CLS
BL_ON
LED
DETIN
② TO(2/2)
D5502 1T369-01-T8A
D5503 1SS355TE-17
Q5501
Q5502 MGSF1P02LT1 SWITCH
Q5503
Q5504 HN1B04FE-Y/GR(TPLR3) SWITCH
Q5505 DTC144EH-T2L SWITCH
RB5501 100
RB5502 10K
RB5503
CN5501 24P
24 VSH5V
23 VSH3V
22 GND
21 VB
20 VG
19 VR
18 SPD
17 CLD
16 CTR
15 PSS2
14 PSS1
13 RES
12 CLS
11 VCOM
10 EX2
9 PSG
8 MO2
7 MO1
6 EX1
5 SPS
4 VGLAC
3 VGL
2 GND
1 VGH
LCD901
2.5/3/3.5 INCH
LCD COLOR
UNIT
CN5502 10P
1 VB
2 XVD_OUT
3 VG
4 PANEL_COM
5 VR
6 PANEL_ID
7 C-SYNC/XHD
8 XHD_OUT
9 GND
10 GND
R5522 *
SYNC
XHD_OUT
XVD_OUT
CPC
(FOR CHECK)
16

PD-131 BOARD(1/2) (TRV MODEL)
RGB,TIMING GENERATOR
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE

CONTROL SWITCH BLOCK(PR-10000) is replaced as a block.
So the PRINTED WIRING BOARD is omitted.

2.5 INCH MODEL :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E
3 INCH MODEL :CCD-TRV88
3.5 INCH MODEL :CCD-TRV98/TRV98E
TRV MODEL :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

*MARKED:MOUNT TABLE

| | LCD 2.5 INCH | LCD 3 INCH | LCD 3.5 INCH |
|---|---|---|---|
| L5503 | 27uH ±5% | 6.8uH ±5% | 6.8uH ±5% |
| R5522 | 1k | 4700 | 5600 |

SIGNAL PATH

| | VIDEO SIGNAL | | |
|---|---|---|---|
| | CHROMA | Y | Y/CHROMA |
| REC | ➡ | | |
| PB | ⇨ | | |

**RGB, TIMING GENERATOR**
PD-131 (1/2)

**For Schematic Diagram**
- Refer to page 4-15 for printed wiring board.

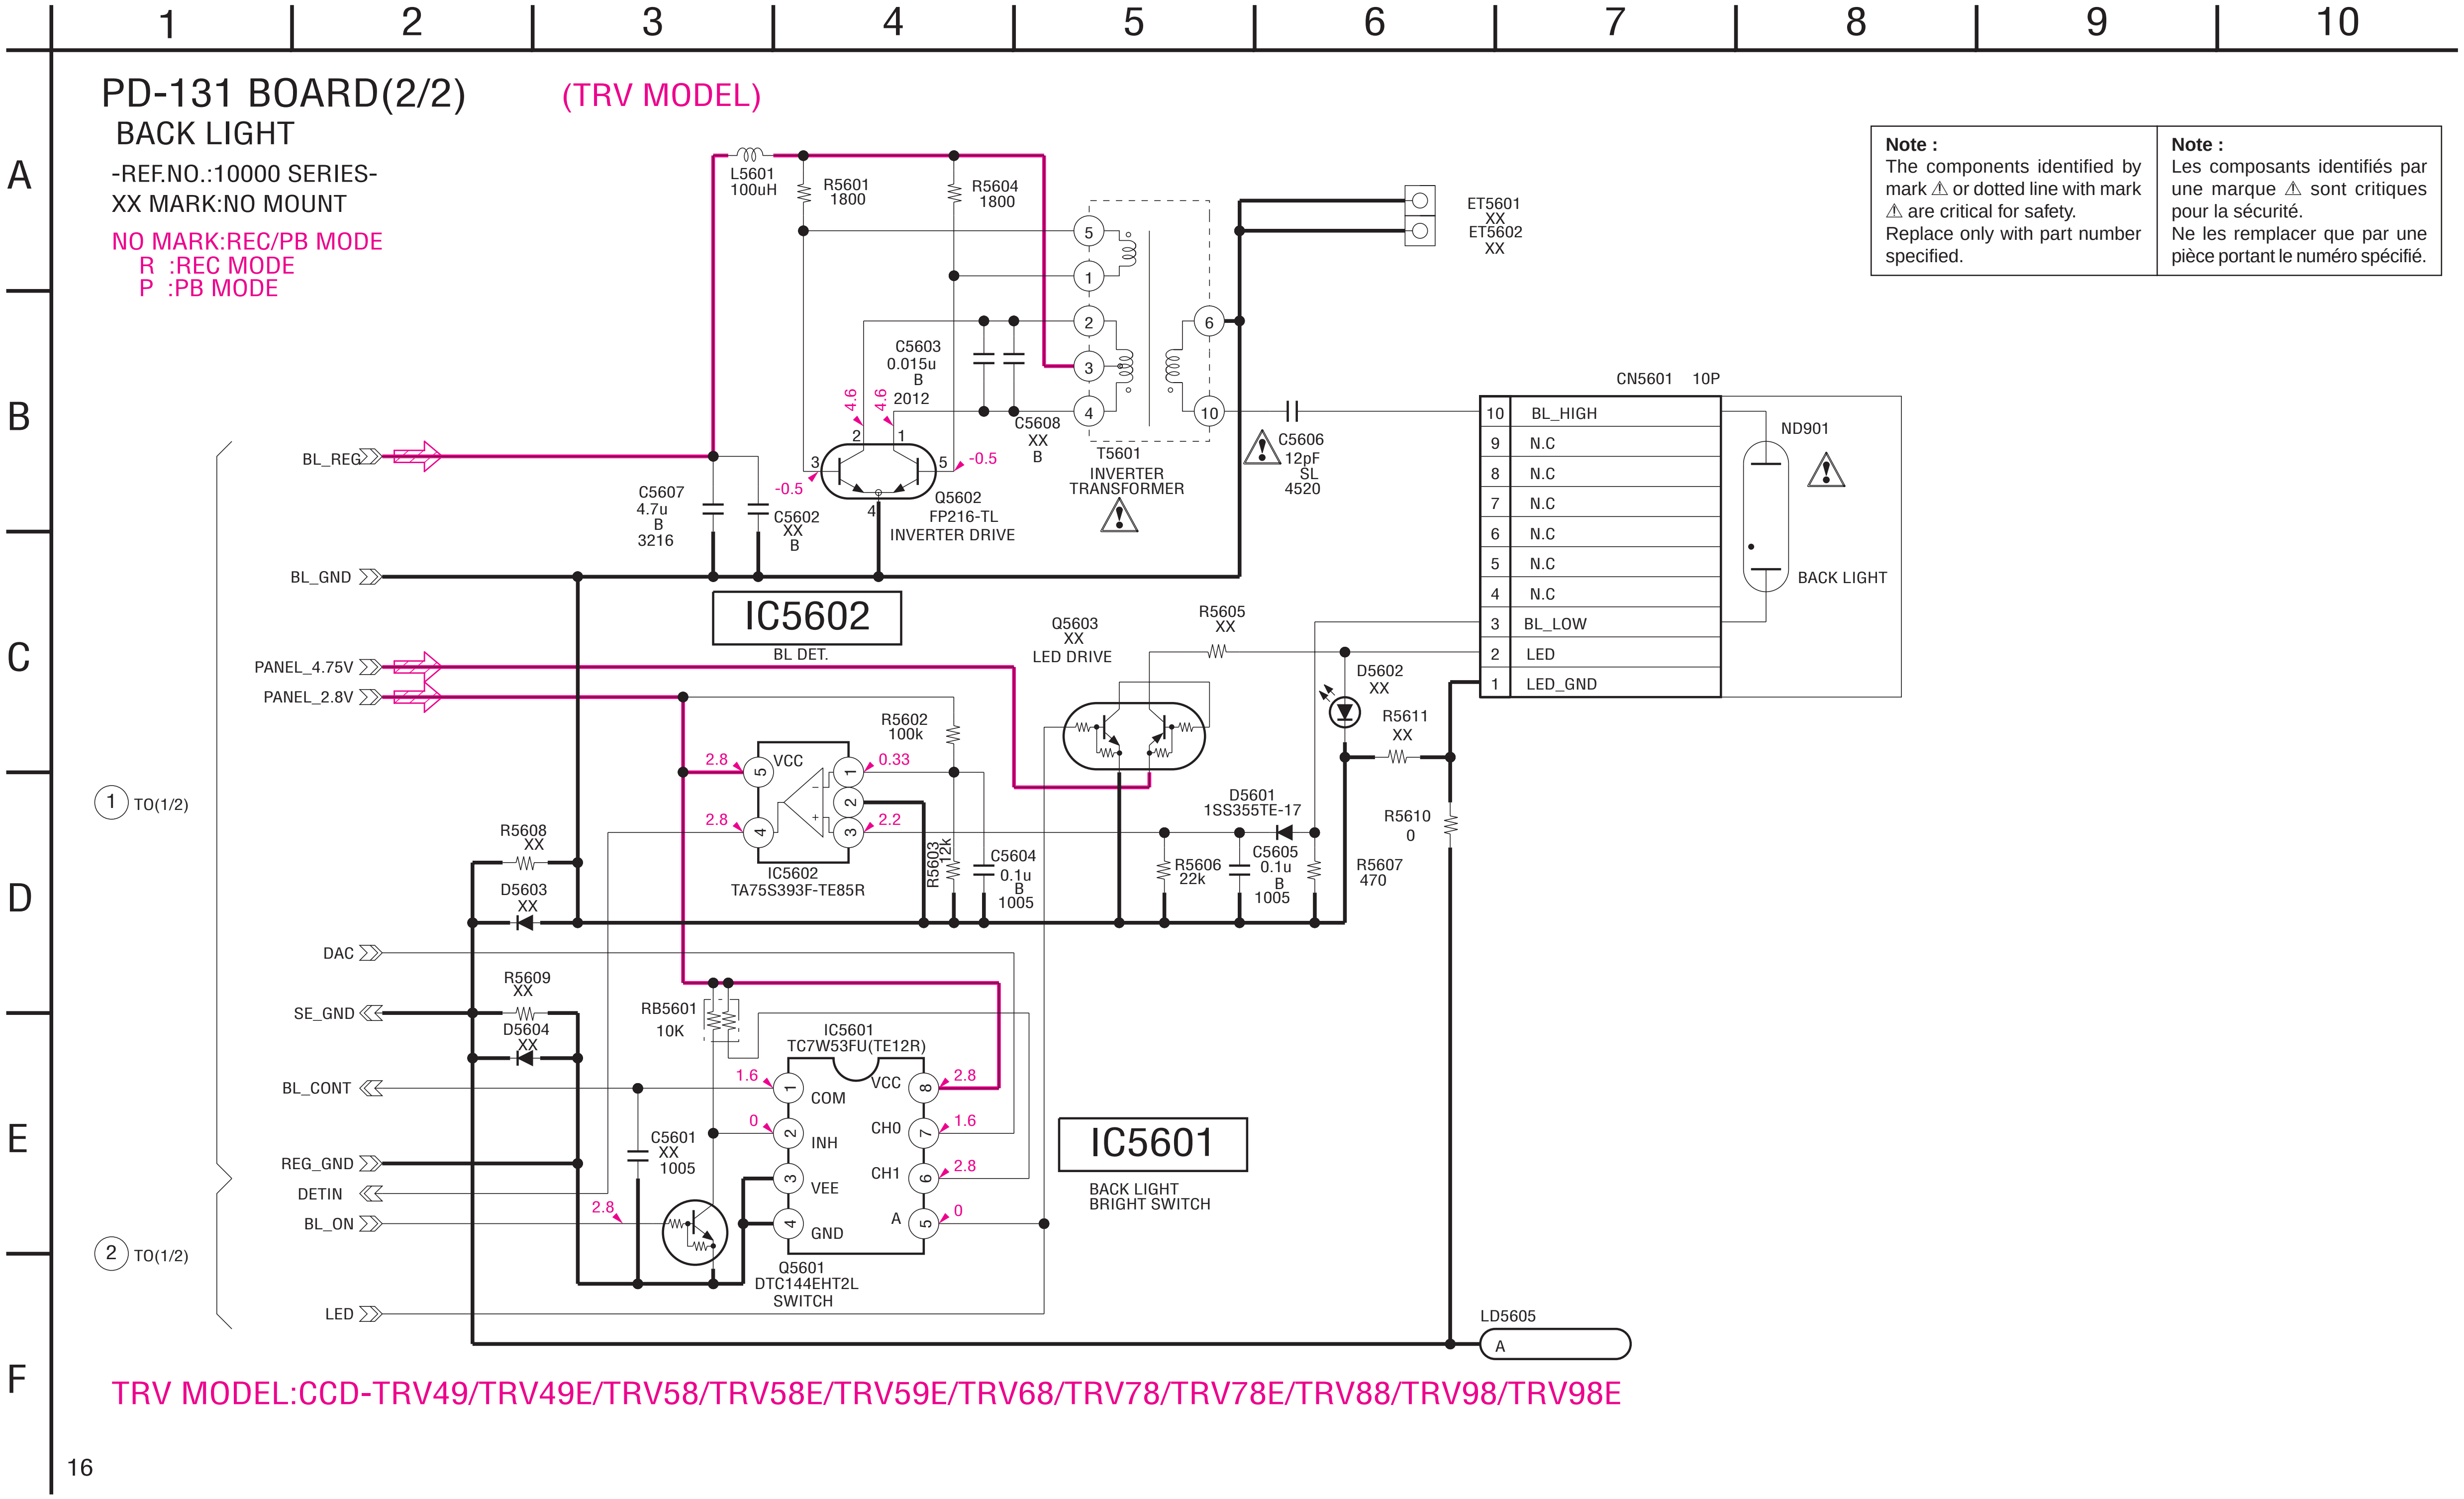
1
2
3
4
5
6
7
8
9
10
A
B
C
D
E
F
PD-131 BOARD(2/2)
BACK LIGHT
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
(TRV MODEL)
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
L5601 100uH
R5601 1800
R5604 1800
ET5601 XX
ET5602 XX
C5603 0.015u B 2012
C5608 XX B
T5601 INVERTER TRANSFORMER
C5606 12pF SL 4520
CN5601 10P
10 BL_HIGH
9 N.C
8 N.C
7 N.C
6 N.C
5 N.C
4 N.C
3 BL_LOW
2 LED
1 LED_GND
ND901
BACK LIGHT
BL_REG
BL_GND
C5607 4.7u B 3216
C5602 XX B
Q5602 FP216-TL INVERTER DRIVE
4.6
4.6
-0.5
-0.5
IC5602
BL DET.
Q5603 XX LED DRIVE
R5605 XX
D5602 XX
R5611 XX
PANEL_4.75V
PANEL_2.8V
R5602 100k
VCC
2.8
0.33
2.8
2.2
IC5602 TA75S393F-TE85R
R5603 12k
C5604 0.1u B 1005
D5601 1SS355TE-17
R5606 22k
C5605 0.1u B 1005
R5607 470
R5610 0
① TO(1/2)
R5608 XX
D5603 XX
DAC
SE_GND
R5609 XX
D5604 XX
BL_CONT
RB5601 10K
IC5601 TC7W53FU(TE12R)
1.6
COM
VCC
2.8
0
INH
CH0
1.6
C5601 XX 1005
REG_GND
VEE
CH1
2.8
DETIN
2.8
BL_ON
GND
A
0
IC5601
BACK LIGHT BRIGHT SWITCH
Q5601 DTC144EHT2L SWITCH
② TO(1/2)
LED
LD5605
A
16

**Note :**
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

**Note :**
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

TRV MODEL:CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

### VF-129 (B/W EVF) PRINTED WIRING BOARD

— Ref. No. VF-129 Board; 1,000 Series —

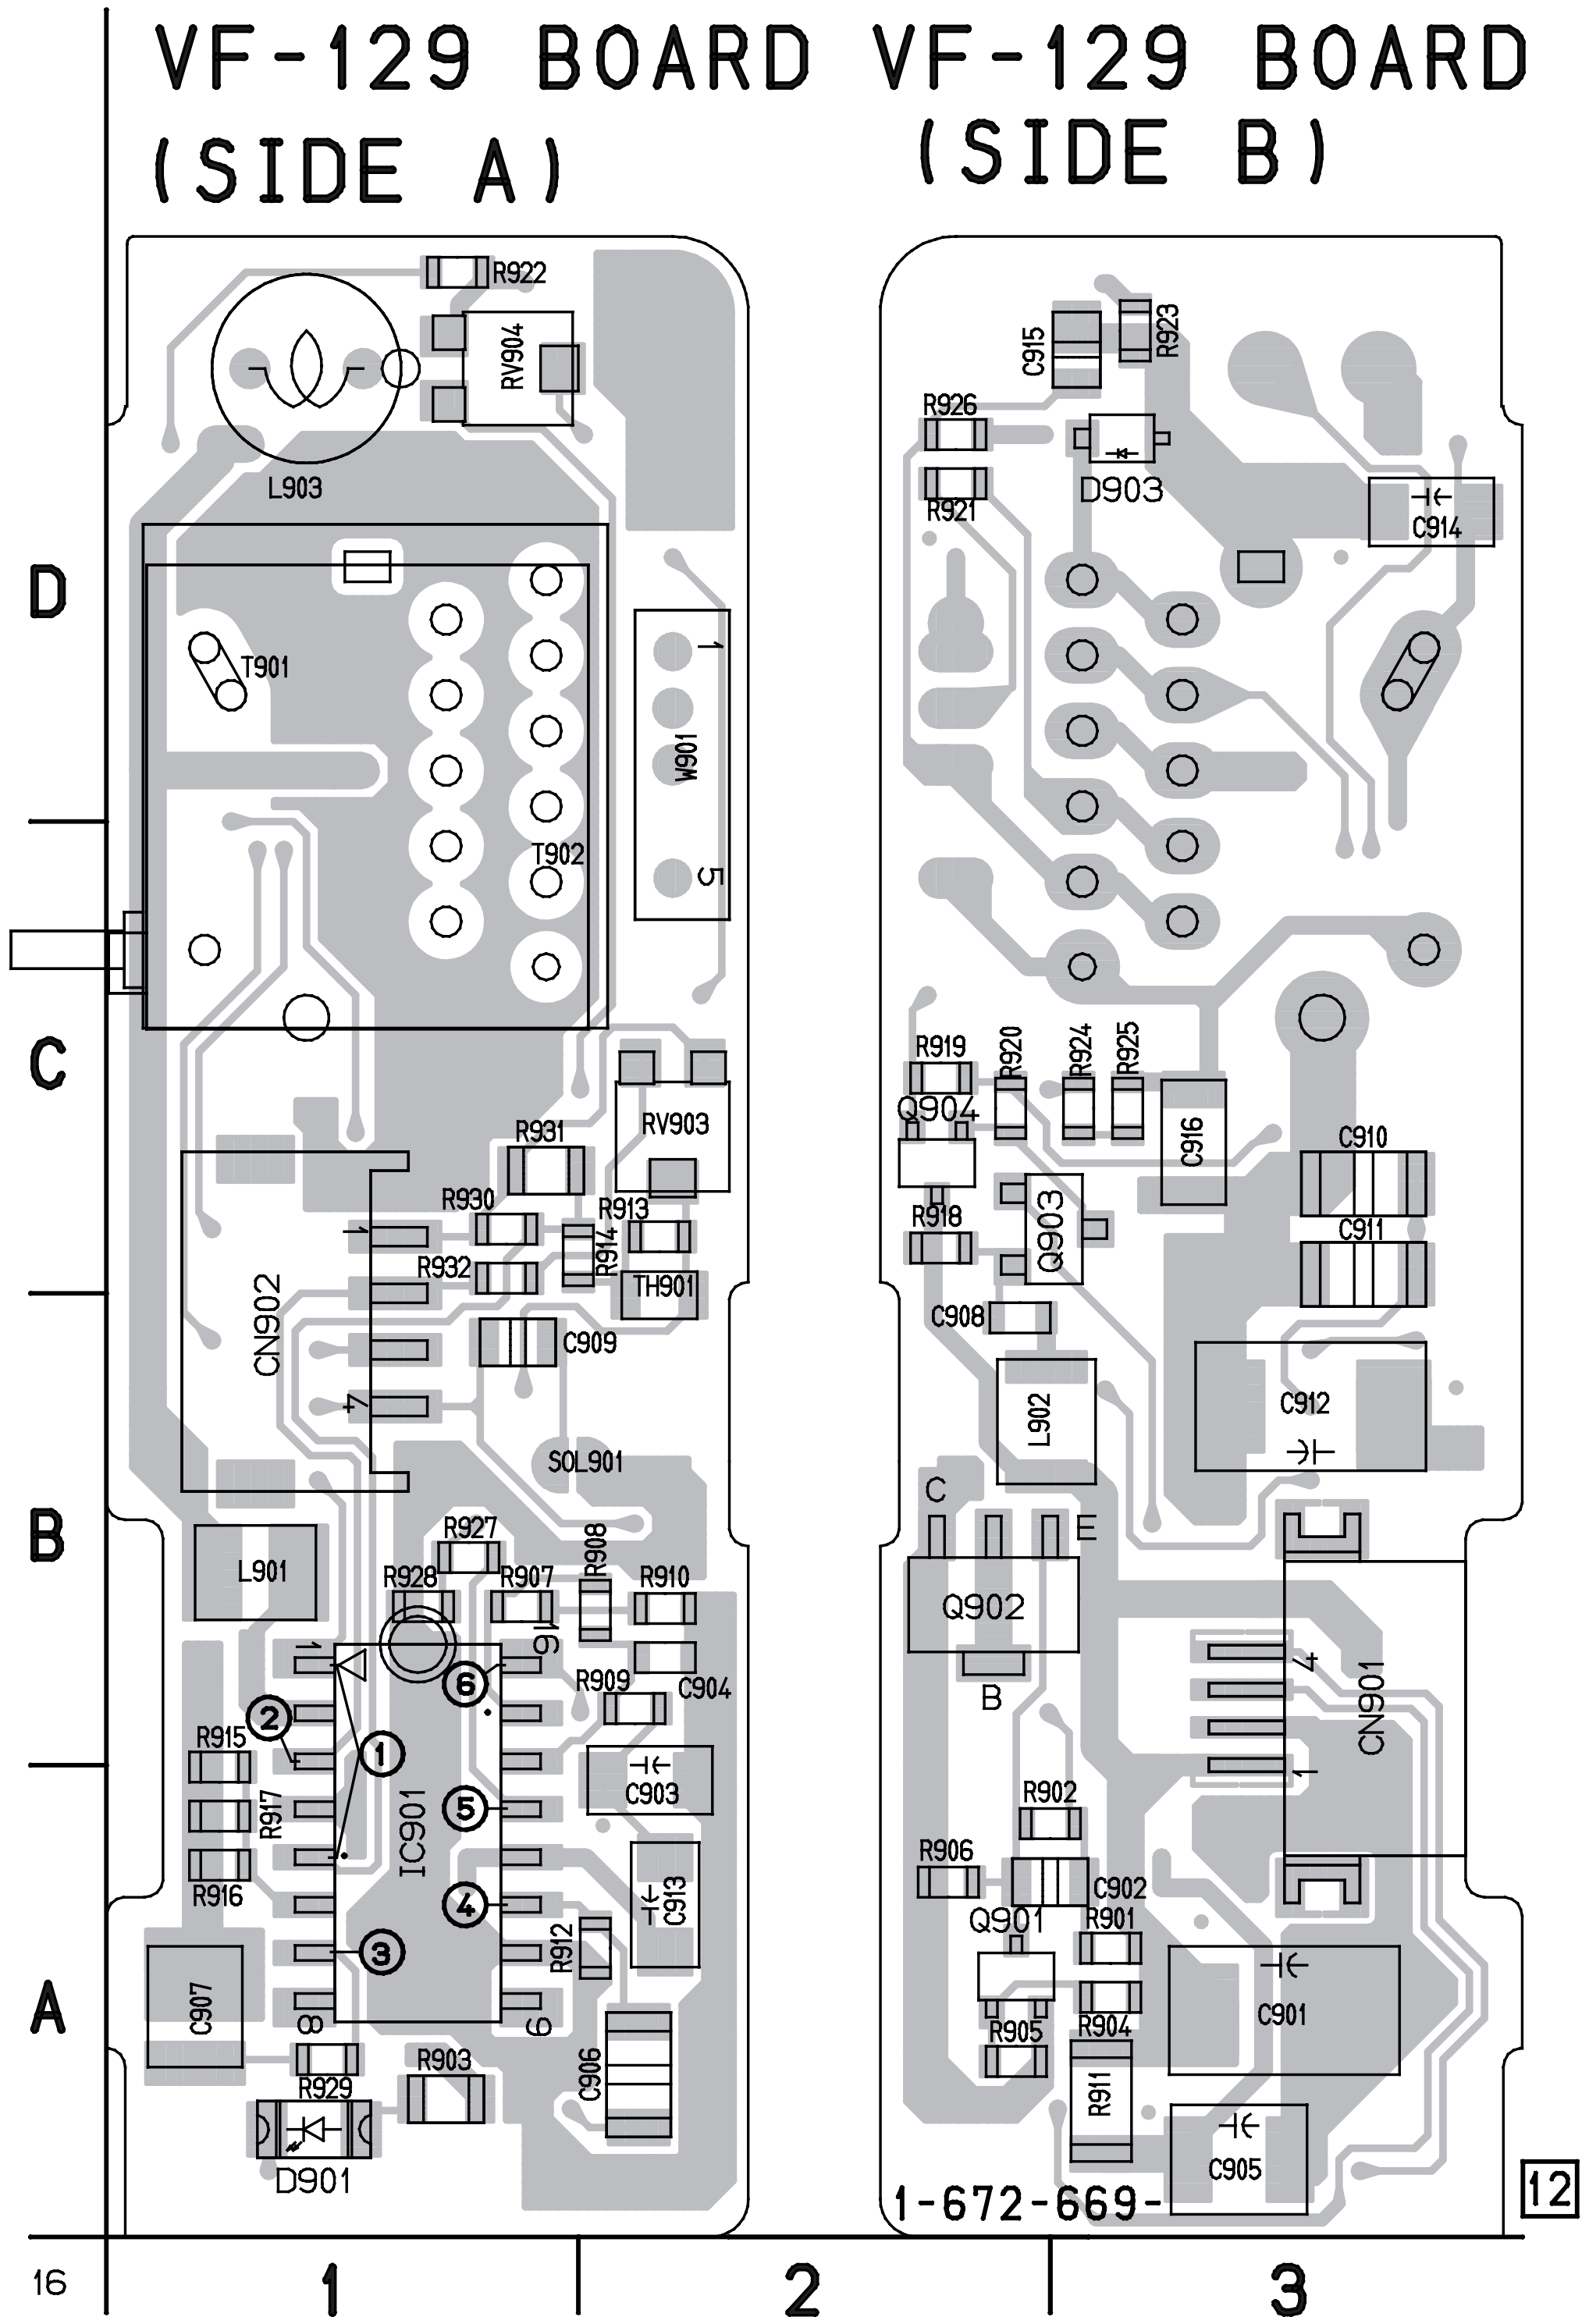
VF-129 BOARD (SIDE A)
VF-129 BOARD (SIDE B)
D
C
B
A
16
1
2
3
12
R922
RV904
L903
T901
T902
W901
1
5
RV903
R931
R930
R913
R914
R932
TH901
CN902
C909
SOL901
L901
R927
R928
R907
R908
R910
R909
C904
R915
R917
R916
IC901
C903
C913
R912
C907
C906
R929
R903
D901
1
8
9
16
①
②
③
④
⑤
⑥
C915
R923
R926
D903
R921
C914
R919
R920
R924
R925
Q904
C916
C910
R918
Q903
C911
C908
L902
C912
C
E
B
Q902
CN901
R902
R906
C902
Q901
R901
R905
R904
C901
R911
C905
1-672-669-

**For printed wiring board**

- Refer to page 4-71 for parts location.
- VF-129 board consists of multiple layers. However, only the sides (layers) A and B are shown.
- Chip parts

Transistor



There are a few cases that the part printed on this diagram isn't mounted in this model.

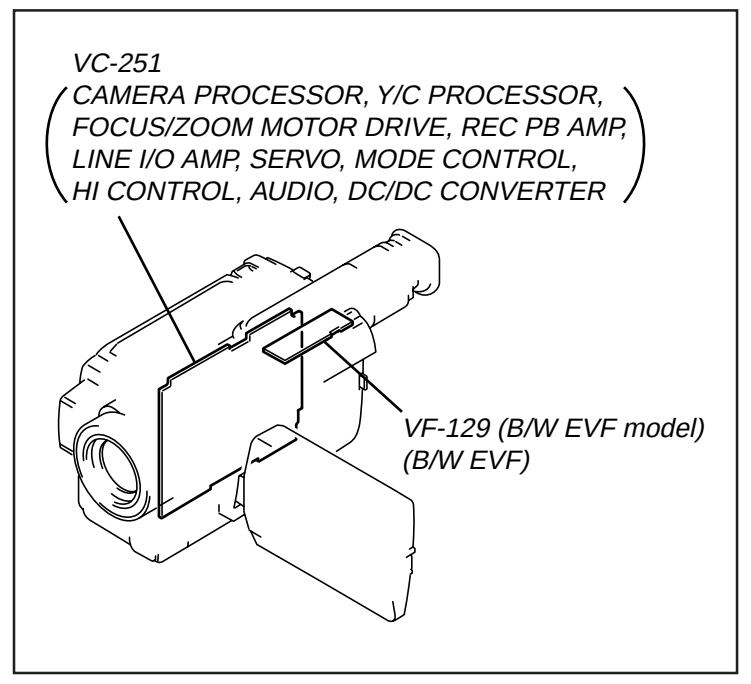
VC-251
(CAMERA PROCESSOR, Y/C PROCESSOR, FOCUS/ZOOM MOTOR DRIVE, REC PB AMP, LINE I/O AMP, SERVO, MODE CONTROL, HI CONTROL, AUDIO, DC/DC CONVERTER)
VF-129 (B/W EVF model) (B/W EVF)

**For Schematic Diagram**
- Refer to page 4-66 for waveforms.

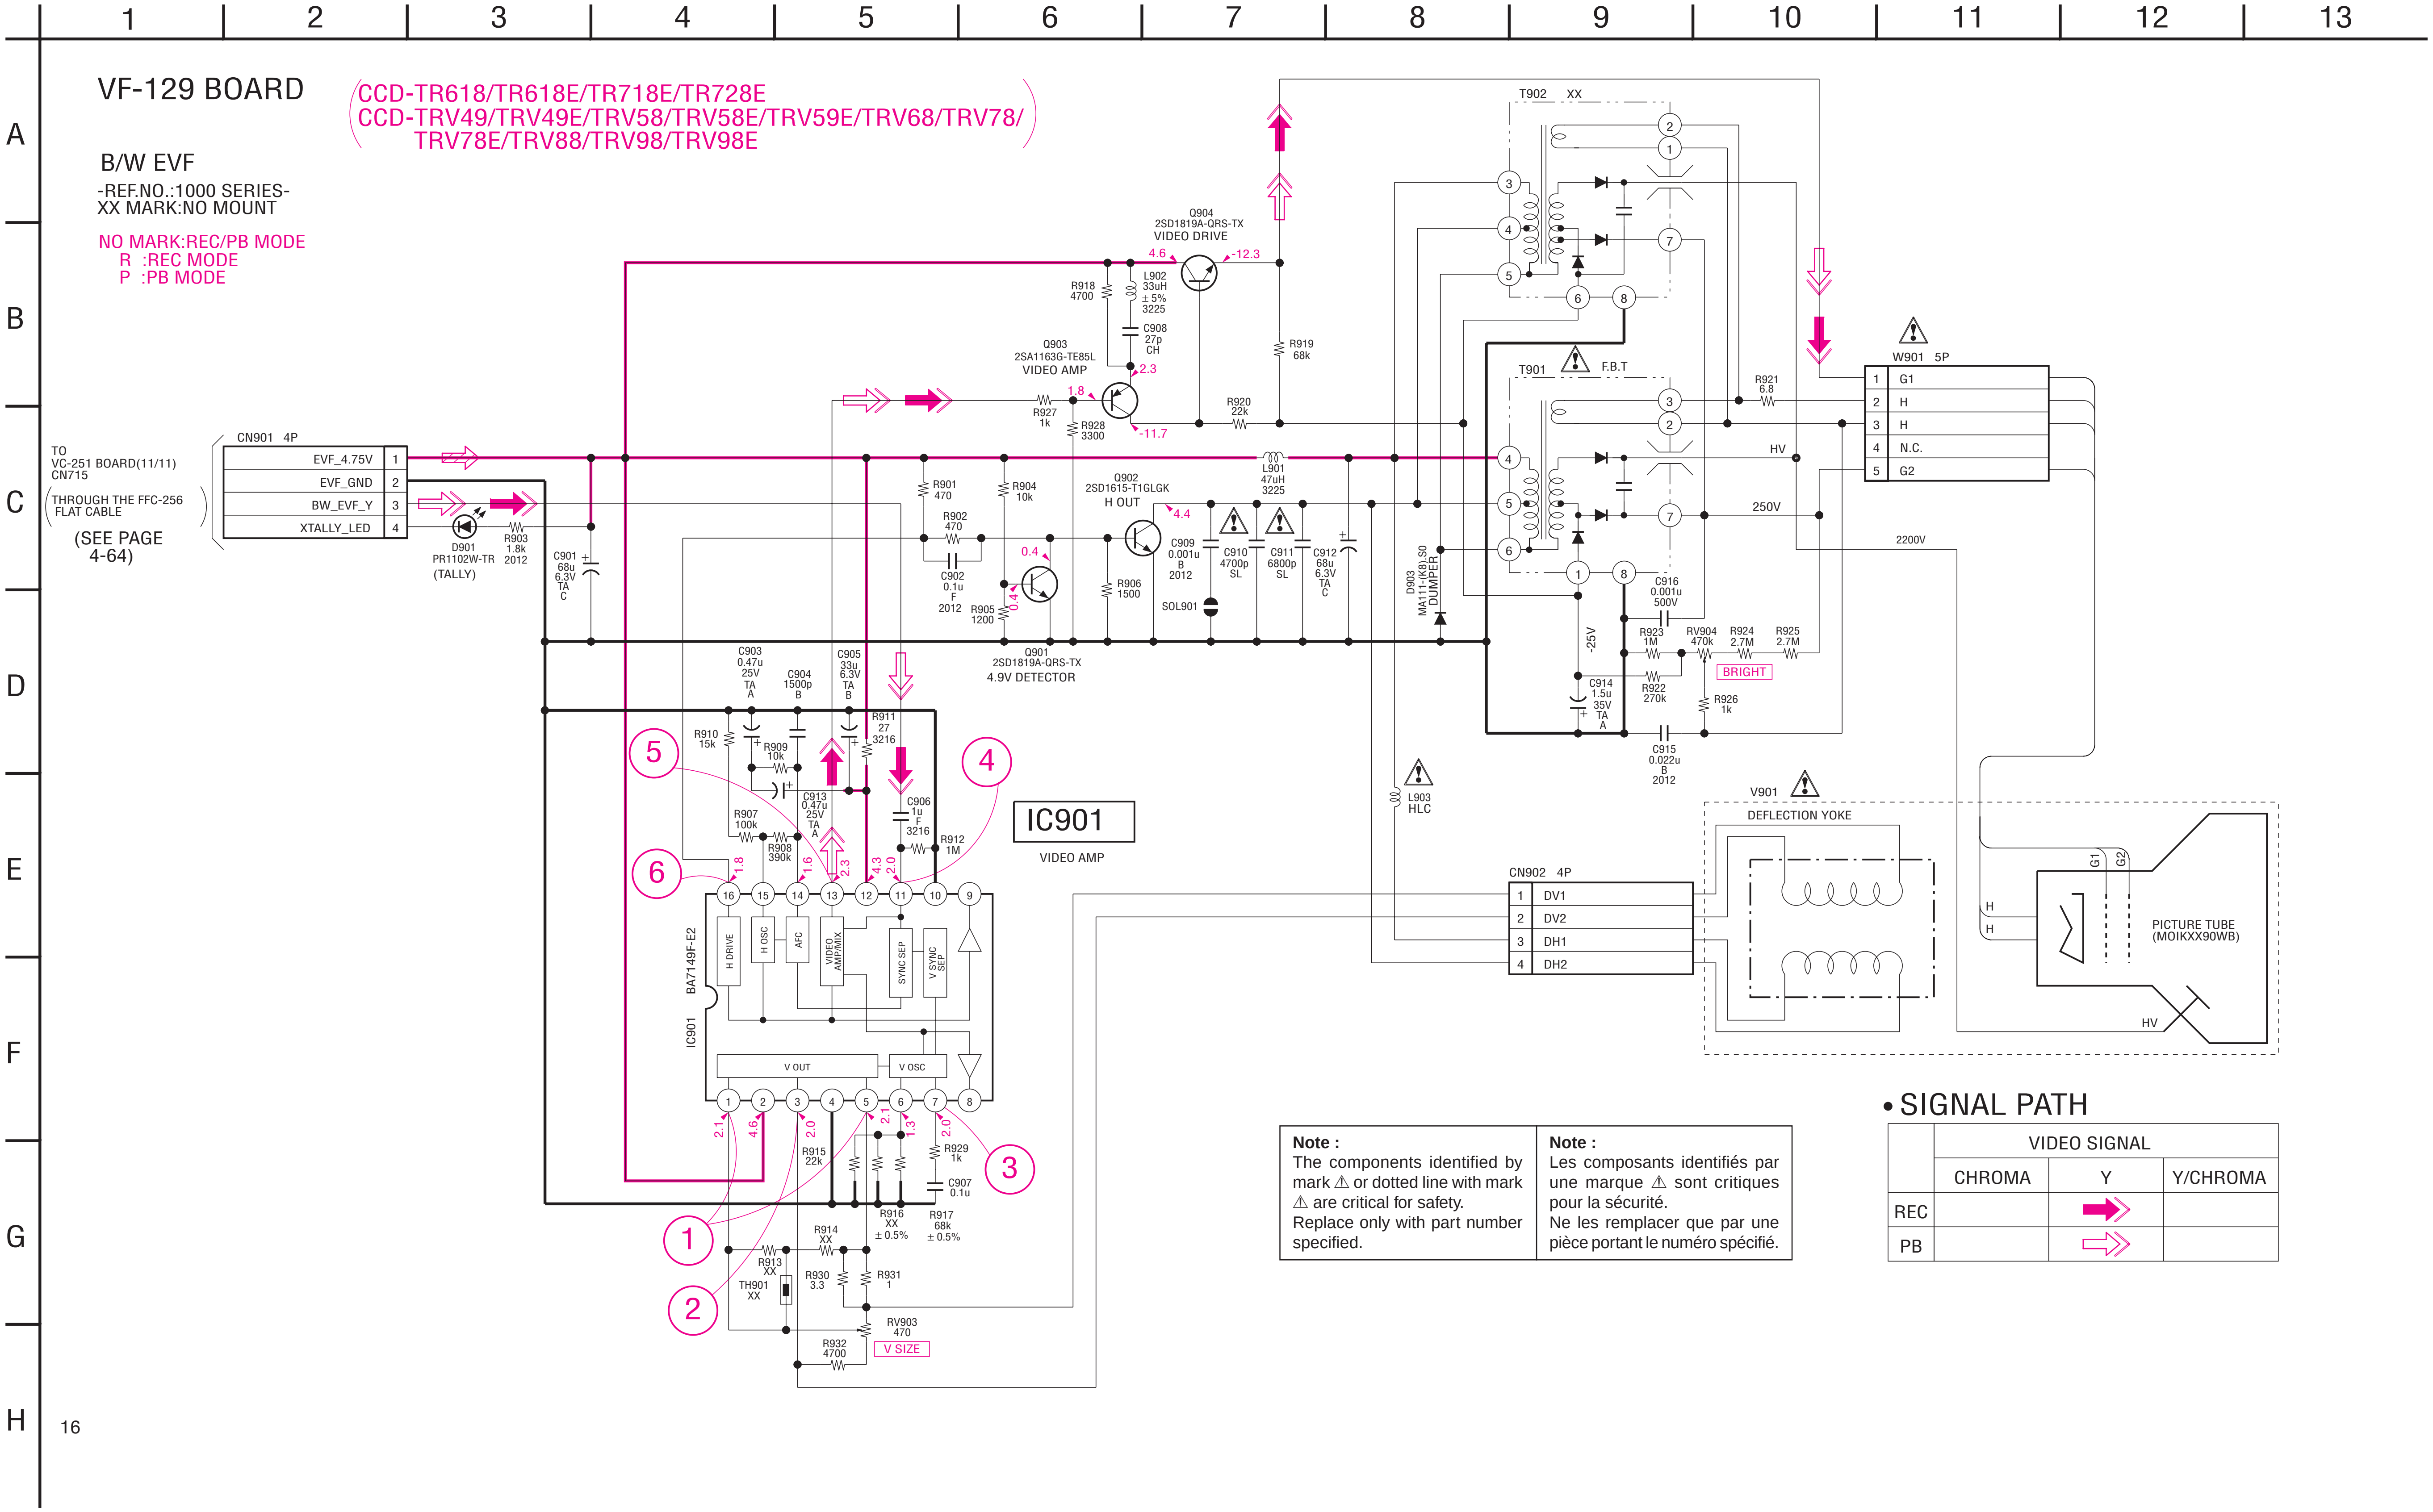
1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
G
H
VF-129 BOARD
(CCD-TR618/TR618E/TR718E/TR728E
CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/
TRV78E/TRV88/TRV98/TRV98E)
B/W EVF
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
TO VC-251 BOARD(11/11) CN715
THROUGH THE FFC-256 FLAT CABLE
(SEE PAGE 4-64)
CN901 4P
EVF_4.75V 1
EVF_GND 2
BW_EVF_Y 3
XTALLY_LED 4
D901 PR1102W-TR (TALLY)
R903 1.8k 2012
C901 68u 6.3V TA C
Q904 2SD1819A-QRS-TX VIDEO DRIVE
Q903 2SA1163G-TE85L VIDEO AMP
Q902 2SD1615-T1GLGK H OUT
Q901 2SD1819A-QRS-TX 4.9V DETECTOR
R918 4700
L902 33uH ±5% 3225
C908 27p CH
R919 68k
R920 22k
R927 1k
R928 3300
R901 470
R904 10k
R902 470
C902 0.1u F 2012
R905 1200
R906 1500
C909 0.001u B 2012
C910 4700p SL
C911 6800p SL
C912 68u 6.3V TA C
SOL901
L901 47uH 3225
D903 MA111-(K8).S0 DUMPER
L903 HLC
4.6
-12.3
2.3
1.8
-11.7
4.4
0.4
0.4
T902 XX
T901 F.B.T
W901 5P
1 G1
2 H
3 H
4 N.C.
5 G2
R921 6.8
HV
250V
2200V
-25V
C916 0.001u 500V
R923 1M
RV904 470k
R924 2.7M
R925 2.7M
BRIGHT
R922 270k
R926 1k
C914 1.5u 35V TA A
C915 0.022u B 2012
V901 DEFLECTION YOKE
CN902 4P
1 DV1
2 DV2
3 DH1
4 DH2
G1
G2
H
H
HV
PICTURE TUBE (MOIKXX90WB)
C903 0.47u 25V TA A
C904 1500p B
C905 33u 6.3V TA B
R911 27 3216
R910 15k
R909 10k
C913 0.47u 25V TA A
R907 100k
R908 390k
C906 1u F 3216
R912 1M
IC901
VIDEO AMP
BA7149F-E2
IC901
H DRIVE
H OSC
AFC
VIDEO AMP/MIX
SYNC SEP
V SYNC SEP
V OUT
V OSC
1.8
1.6
2.3
4.3
2.0
2.1
4.6
2.0
2.1
1.3
2.0
R915 22k
R929 1k
C907 0.1u
R916 XX ±0.5%
R917 68k ±0.5%
R914 XX
R913 XX
TH901 XX
R930 3.3
R931 1
RV903 470
V SIZE
R932 4700
16

| **Note :** | **Note :** |
|---|---|
| The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.<br>Replace only with part number specified. | Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.<br>Ne les remplacer que par une pièce portant le numéro spécifié. |

- SIGNAL PATH

| | VIDEO SIGNAL | | |
|---|---|---|---|
| | CHROMA | Y | Y/CHROMA |
| REC | | ➡ | |
| PB | | ⇨ | |

## VF-141 (COLOR EVF) PRINTED WIRING BOARD

— Ref. No. VF-141 Board; 10,000 Series —

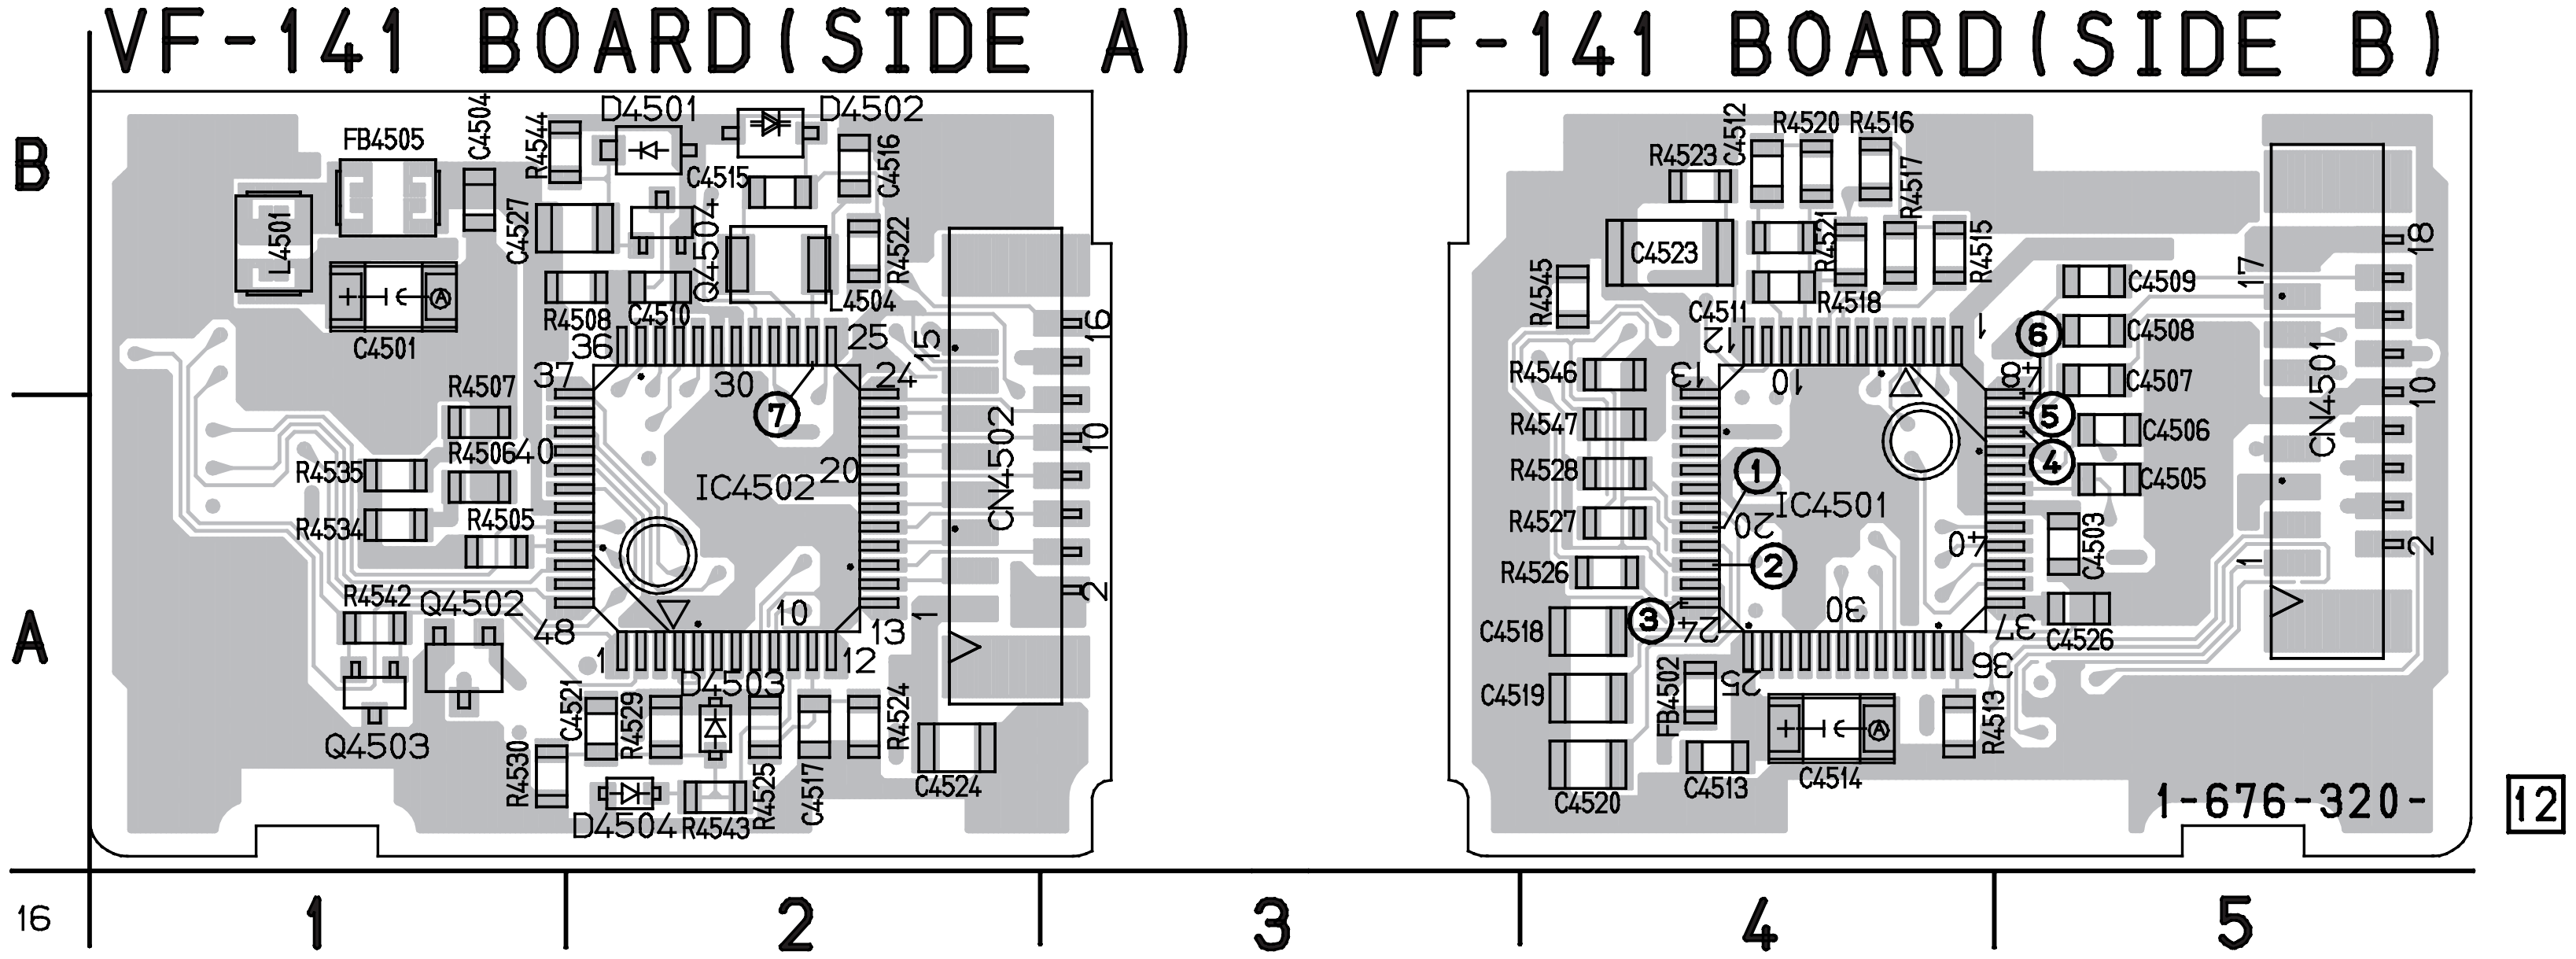
VF-141 BOARD(SIDE A)
VF-141 BOARD(SIDE B)
B
A
16
1
2
3
4
5
FB4505
L4501
C4501
C4504
C4527
R4544
D4501
D4502
C4515
Q4504
C4516
R4522
L4504
R4508
C4510
R4507
R4506
R4505
R4535
R4534
R4542
Q4502
Q4503
IC4502
CN4502
D4503
C4521
R4529
R4530
D4504
R4543
R4525
C4517
R4524
C4524
R4523
C4512
R4520
R4516
R4517
C4523
R4521
R4515
R4518
R4545
C4511
R4546
R4547
R4528
R4527
R4526
C4518
C4519
C4520
FB4502
C4513
C4514
R4519
IC4501
C4509
C4508
C4507
C4506
C4505
C4503
C4526
CN4501
1-676-320-
12

**For printed wiring board**

- Refer to page 4-71 for parts location.
- VF-141 board consists of multiple layers. However, only the sides (layers) A and B are shown.
- Chip parts

Transistor



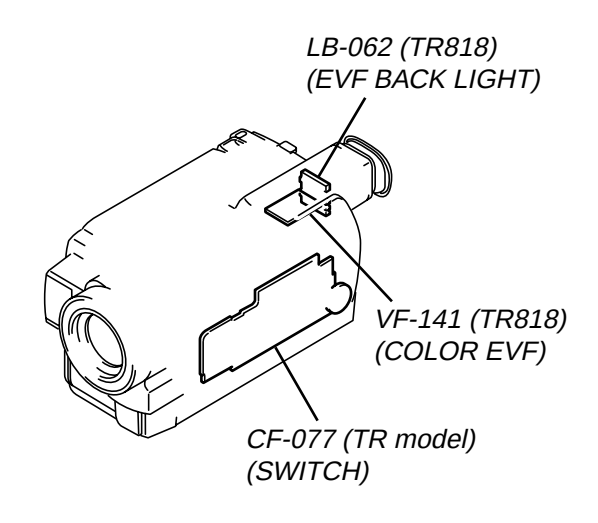
LB-062 (TR818)
(EVF BACK LIGHT)
VF-141 (TR818)
(COLOR EVF)
CF-077 (TR model)
(SWITCH)

There are a few cases that the part printed on this diagram isn't mounted in this model.

**For Schematic Diagram**
- Refer to page 4-27 for printed wiring board.
- Refer to page 4-67 for waveforms.

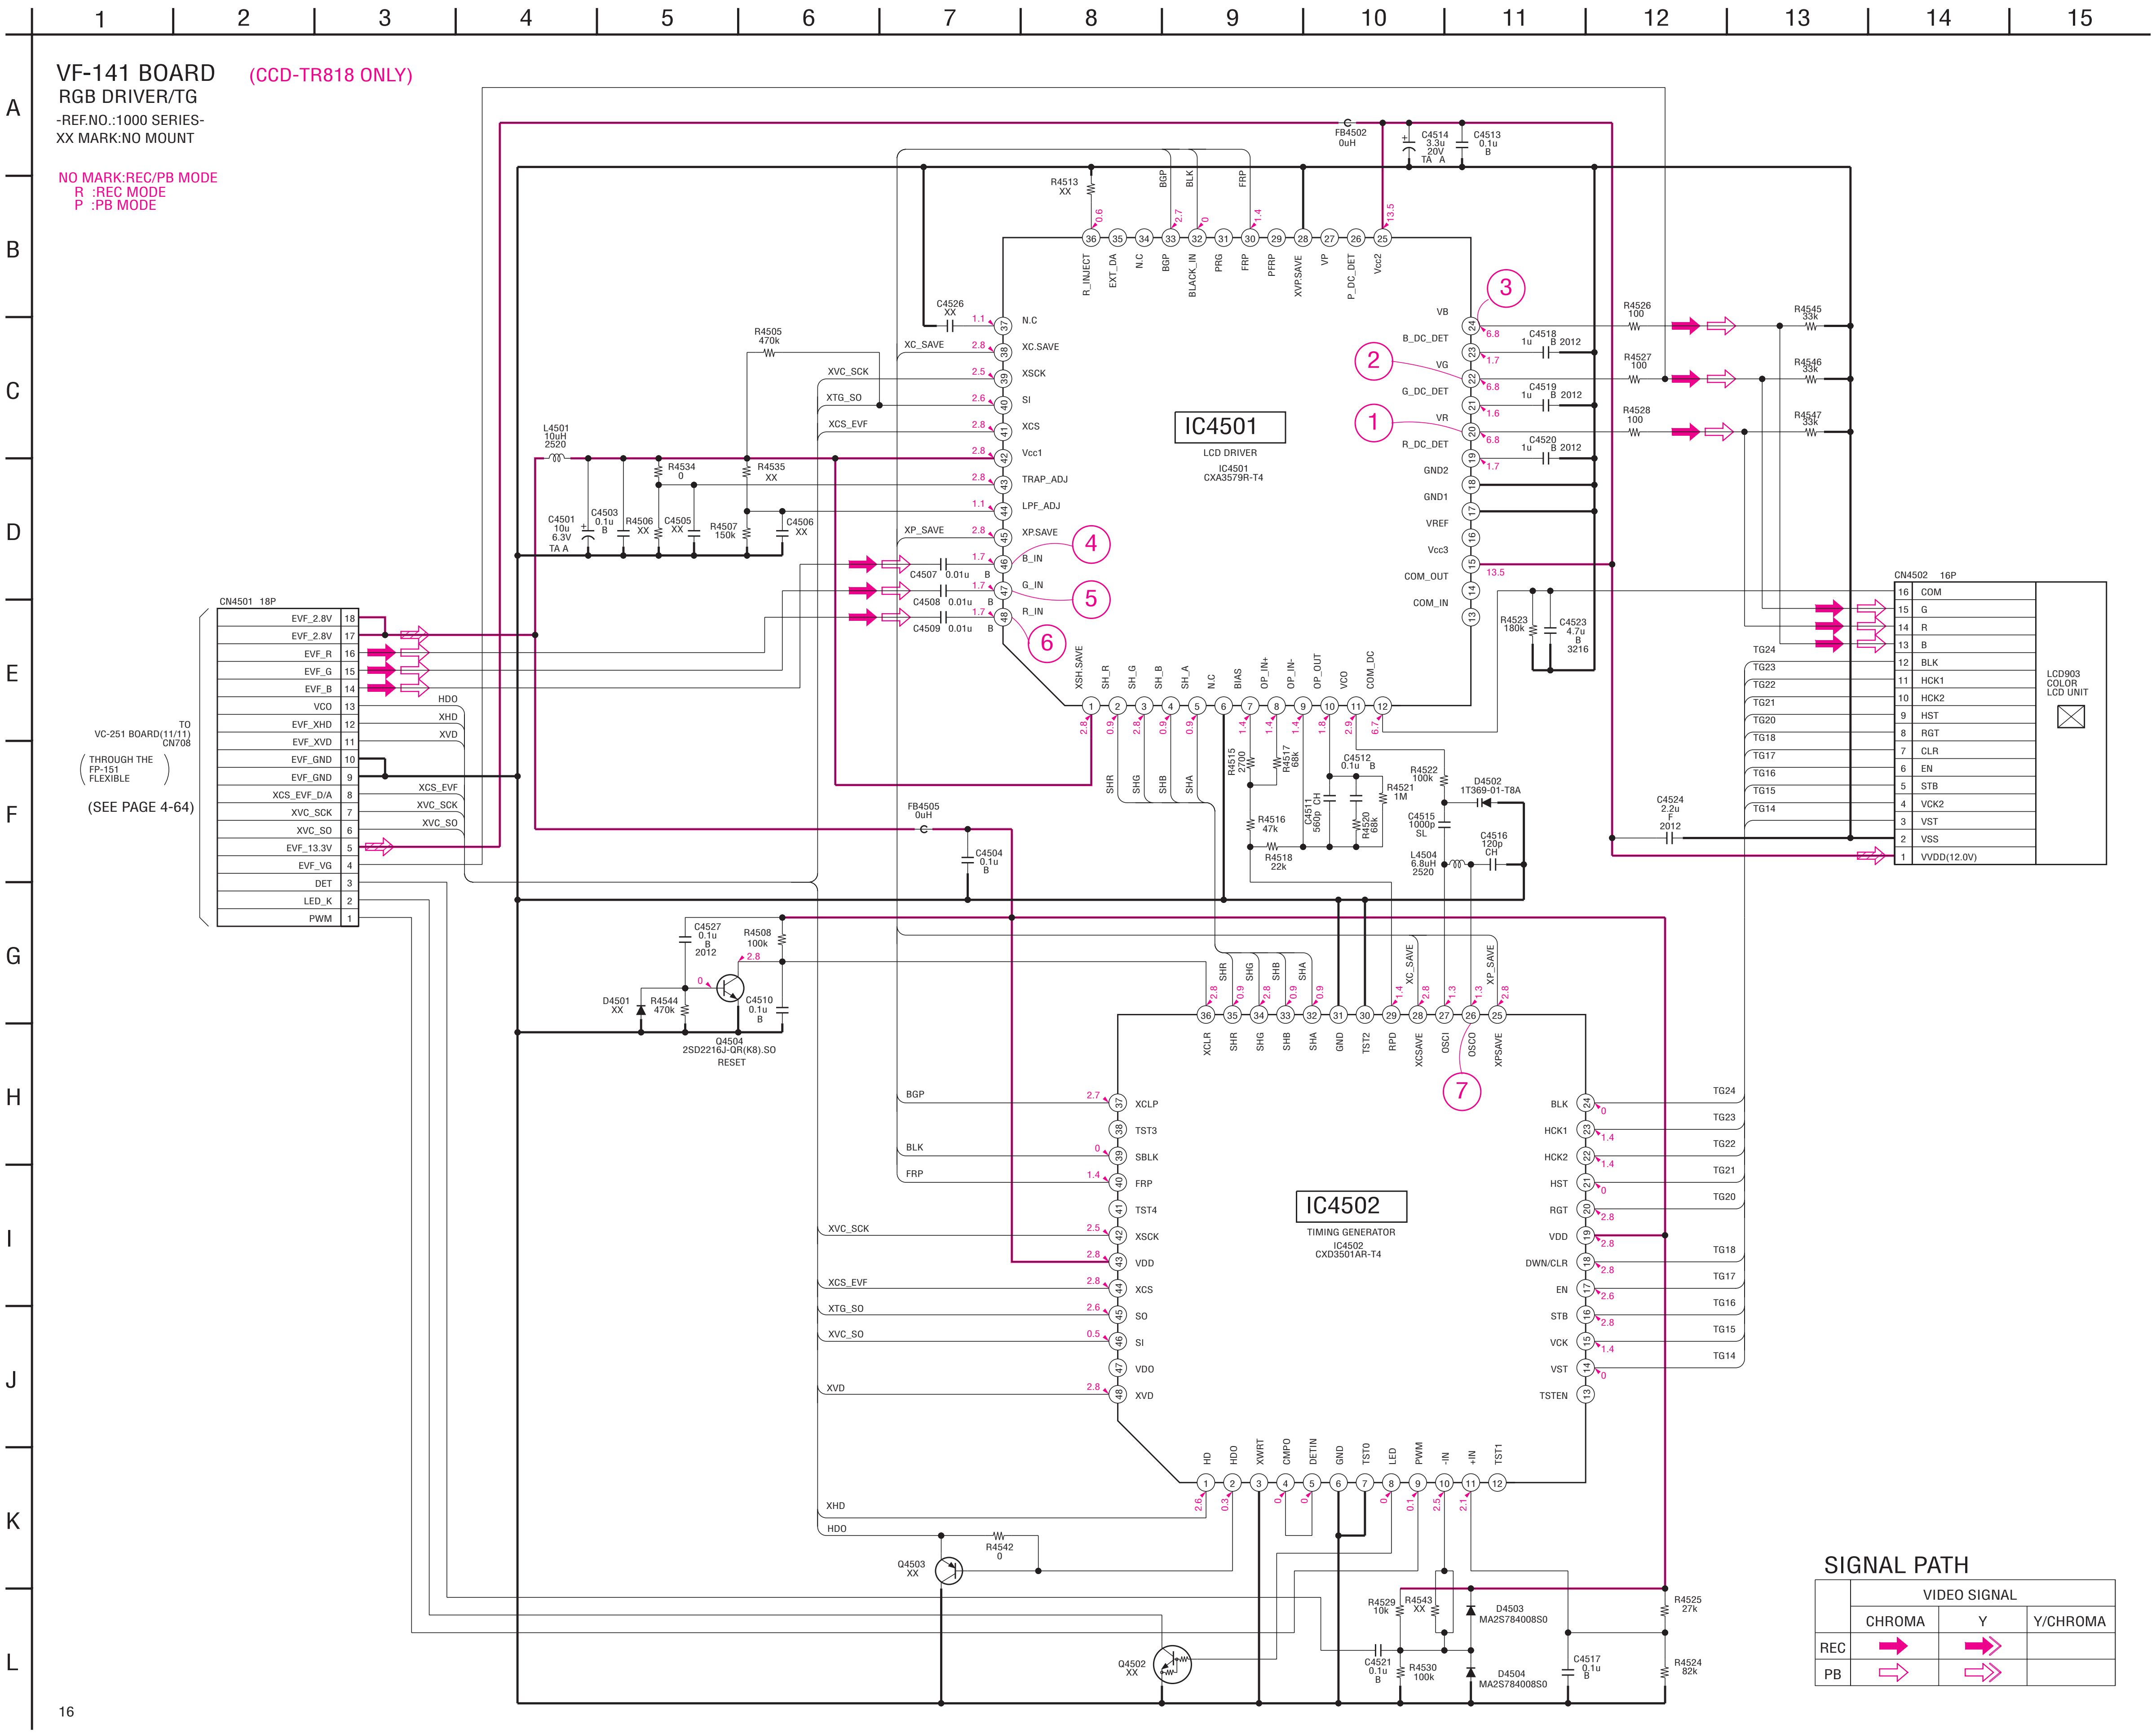
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
A B C D E F G H I J K L
VF-141 BOARD
RGB DRIVER/TG
(CCD-TR818 ONLY)
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
IC4501
LCD DRIVER
IC4501
CXA3579R-T4
IC4502
TIMING GENERATOR
IC4502
CXD3501AR-T4
CN4501 18P
EVF_2.8V
EVF_2.8V
EVF_R
EVF_G
EVF_B
VCO
EVF_XHD
EVF_XVD
EVF_GND
EVF_GND
XCS_EVF_D/A
XVC_SCK
XVC_SO
EVF_13.3V
EVF_VG
DET
LED_K
PWM
TO
VC-251 BOARD(11/11)
CN708
THROUGH THE
FP-151
FLEXIBLE
(SEE PAGE 4-64)
CN4502 16P
COM
G
R
B
BLK
HCK1
HCK2
HST
RGT
CLR
EN
STB
VCK2
VST
VSS
VVDD(12.0V)
LCD903
COLOR
LCD UNIT
FB4502 0uH
C4514 3.3u 20V TA A
C4513 0.1u B
R4513 XX
C4526 XX
R4505 470k
L4501 10uH 2520
C4501 10u 6.3V TA A
C4503 0.1u B
R4506 XX
C4505 XX
R4534 0
R4507 150k
R4535 XX
C4506 XX
C4507 0.01u B
C4508 0.01u B
C4509 0.01u B
R4526 100
R4527 100
R4528 100
R4545 33k
R4546 33k
R4547 33k
C4518 1u B 2012
C4519 1u B 2012
C4520 1u B 2012
R4523 180k
C4523 4.7u B 3216
C4524 2.2u F 2012
R4515 2700
R4517 68k
C4512 0.1u B
R4522 100k
R4521 1M
D4502 1T369-01-T8A
R4516 47k
C4511 560p CH
R4520 68k
C4515 1000p SL
C4516 120p CH
R4518 22k
L4504 6.8uH 2520
FB4505 0uH
C4504 0.1u B
C4527 0.1u B 2012
R4508 100k
D4501 XX
R4544 470k
C4510 0.1u B
Q4504 2SD2216J-QR(K8).SO RESET
Q4503 XX
R4542 0
Q4502 XX
R4529 10k
R4543 XX
D4503 MA2S784008SO
C4521 0.1u B
R4530 100k
D4504 MA2S784008SO
C4517 0.1u B
R4525 27k
R4524 82k
R_INJECT EXT_DA N.C BGP BLACK_IN PRG FRP PFRP XVP.SAVE VP P_DC_DET Vcc2
N.C XC.SAVE XSCK SI XCS Vcc1 TRAP_ADJ LPF_ADJ XP.SAVE B_IN G_IN R_IN
VB B_DC_DET VG G_DC_DET VR R_DC_DET GND2 GND1 VREF Vcc3 COM_OUT COM_IN
XSH.SAVE SH_R SH_G SH_B SH_A N.C BIAS OP_IN+ OP_IN- OP_OUT VCO COM_DC
XCLR SHR SHG SHB SHA GND TST2 RPD XCSAVE OSCI OSCO XPSAVE
XCLP TST3 SBLK FRP TST4 XSCK VDD XCS SO SI VDO XVD
BLK HCK1 HCK2 HST RGT VDD DWN/CLR EN STB VCK VST TSTEN
HD HDO XWRT CMPO DETIN GND TSTO LED PWM -IN +IN TST1
XC_SAVE XVC_SCK XTG_SO XCS_EVF XP_SAVE HDO XHD XVD XCS_EVF XVC_SCK XVC_SO
BGP BLK FRP XVC_SCK XCS_EVF XTG_SO XVC_SO XVD XHD HDO
TG24 TG23 TG22 TG21 TG20 TG18 TG17 TG16 TG15 TG14
① ② ③ ④ ⑤ ⑥ ⑦

SIGNAL PATH

| | VIDEO SIGNAL | | |
|---|---|---|---|
| | CHROMA | Y | Y/CHROMA |
| REC | ➡ | ➡ | |
| PB | ⇨ | ⇨ | |

## LB-062 (EVF BACK LIGHT) PRINTED WIRING BOARD

— Ref. No. LB-062 Board; 10,000 Series —

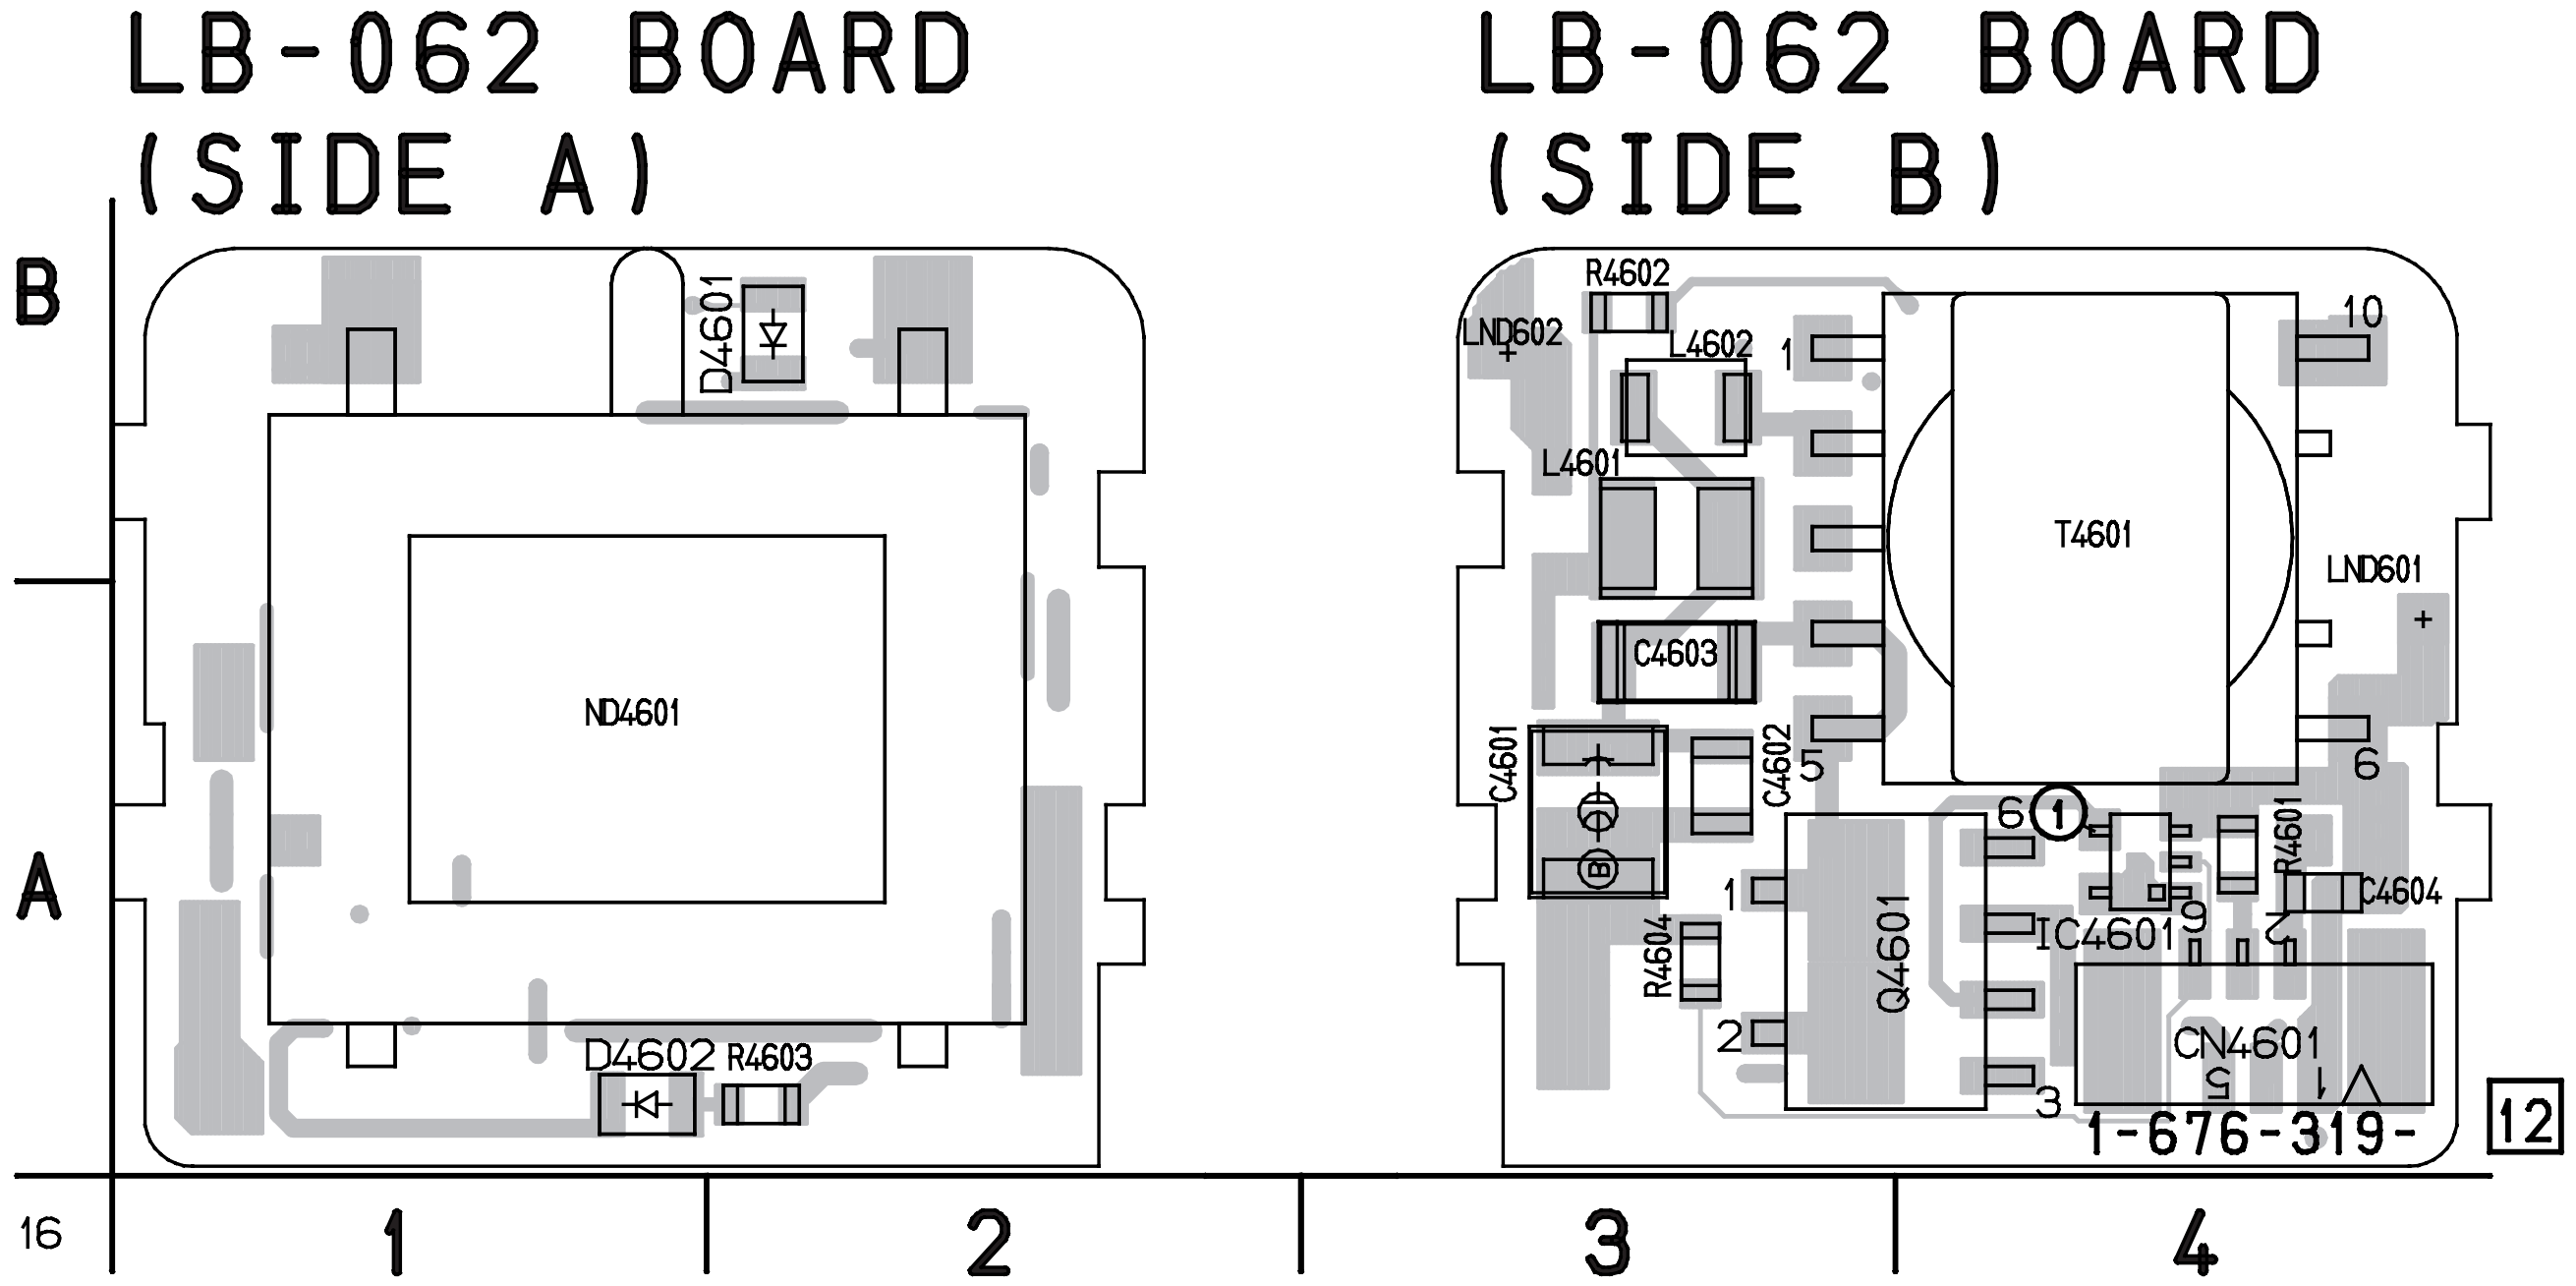
LB-062 BOARD
(SIDE A)
LB-062 BOARD
(SIDE B)
B
A
D4601
ND4601
D4602
R4603
R4602
LND602
L4602
L4601
T4601
LND601
C4603
C4601
C4602
Q4601
R4604
IC4601
R4601
C4604
CN4601
1-676-319-
12
10
6
5
1
2
3
16
1
2
3
4

### For printed wiring board

- Refer to page 4-71 for parts location.
- LB-062 board consists of multiple layers. However, only the sides (layers) A and B are shown.

There are a few cases that the part printed on this diagram isn't mounted in this model.

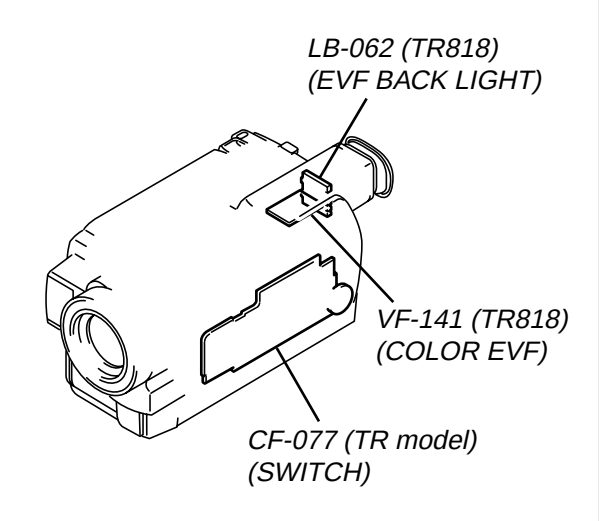
LB-062 (TR818)
(EVF BACK LIGHT)
VF-141 (TR818)
(COLOR EVF)
CF-077 (TR model)
(SWITCH)

### For Schematic Diagram

- Refer to page 4-67 for waveform.

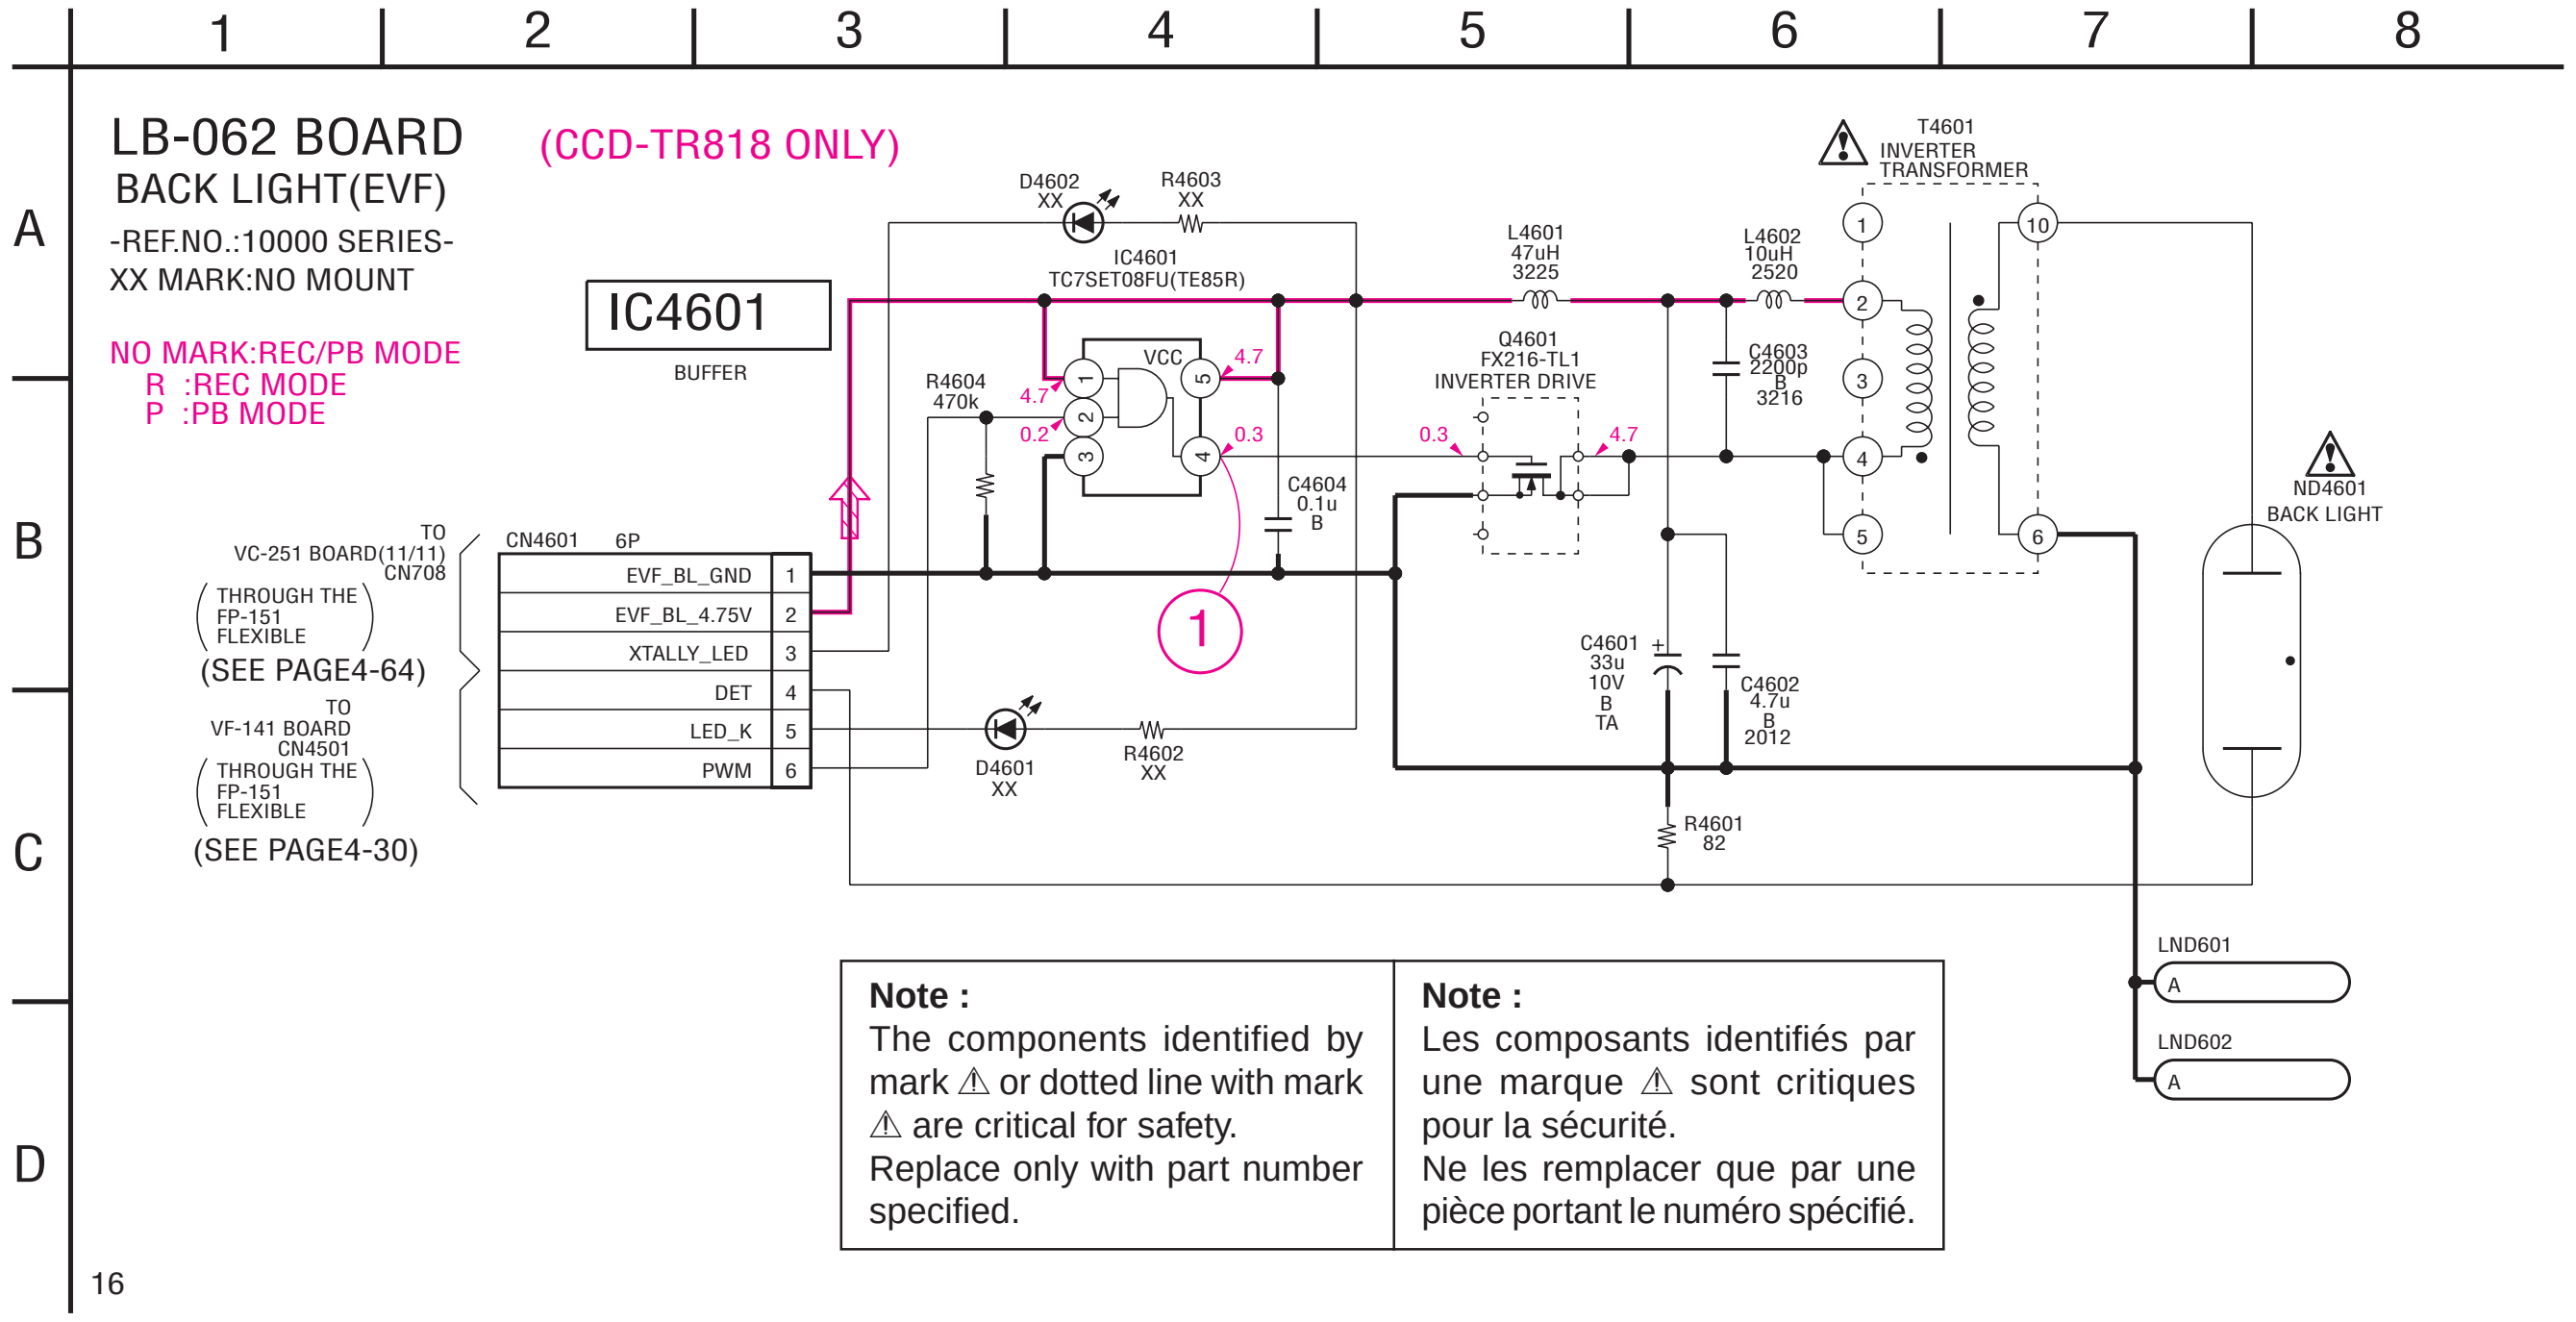
1
2
3
4
5
6
7
8
A
B
C
D
16
LB-062 BOARD
BACK LIGHT(EVF)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
(CCD-TR818 ONLY)
IC4601
BUFFER
TO
VC-251 BOARD(11/11)
CN708
THROUGH THE
FP-151
FLEXIBLE
(SEE PAGE4-64)
TO
VF-141 BOARD
CN4501
THROUGH THE
FP-151
FLEXIBLE
(SEE PAGE4-30)
CN4601 6P
EVF_BL_GND 1
EVF_BL_4.75V 2
XTALLY_LED 3
DET 4
LED_K 5
PWM 6
D4602
XX
R4603
XX
IC4601
TC7SET08FU(TE85R)
VCC
R4604
470k
4.7
4.7
0.2
0.3
C4604
0.1u
B
1
D4601
XX
R4602
XX
L4601
47uH
3225
L4602
10uH
2520
Q4601
FX216-TL1
INVERTER DRIVE
0.3
4.7
C4603
2200p
B
3216
C4601
33u
10V
B
TA
C4602
4.7u
B
2012
R4601
82
T4601
INVERTER
TRANSFORMER
ND4601
BACK LIGHT
LND601
A
LND602
A

| **Note :** | **Note :** |
|---|---|
| The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.<br>Replace only with part number specified. | Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.<br>Ne les remplacer que par une pièce portant le numéro spécifié. |

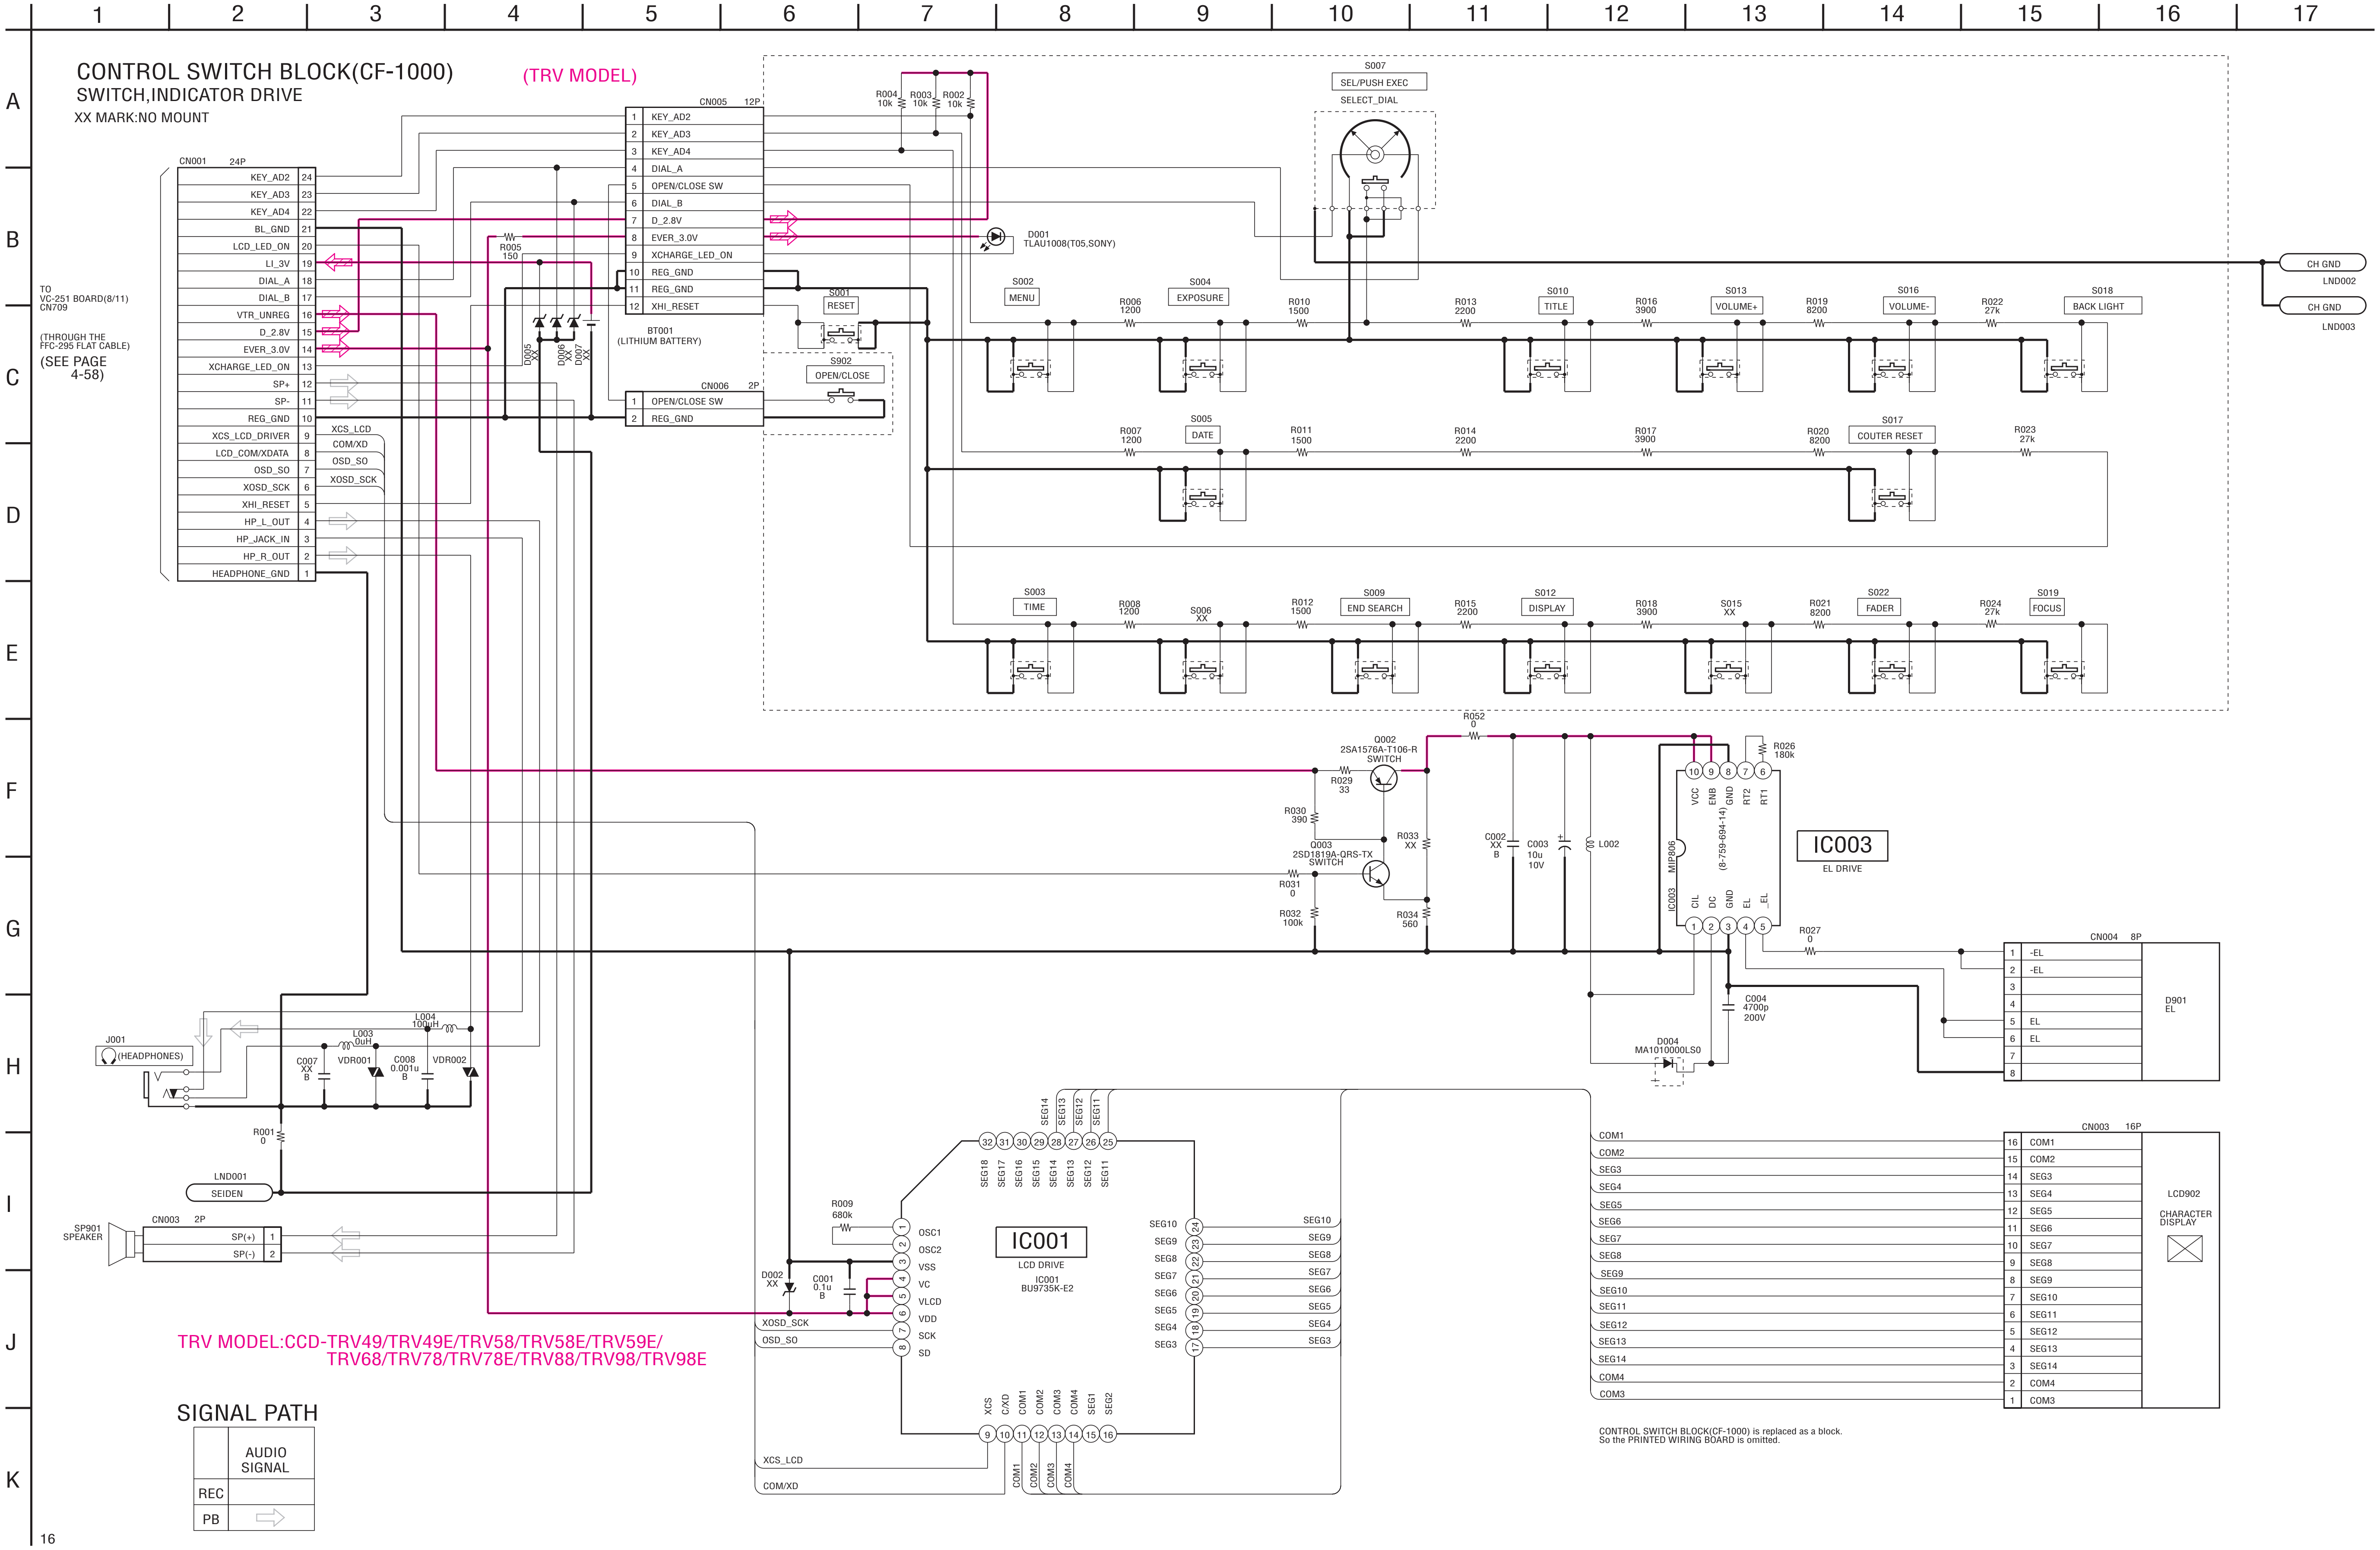
CONTROL SWITCH BLOCK(CF-1000)
SWITCH,INDICATOR DRIVE
XX MARK:NO MOUNT
(TRV MODEL)
CN001 24P
KEY_AD2 24
KEY_AD3 23
KEY_AD4 22
BL_GND 21
LCD_LED_ON 20
LI_3V 19
DIAL_A 18
DIAL_B 17
VTR_UNREG 16
D_2.8V 15
EVER_3.0V 14
XCHARGE_LED_ON 13
SP+ 12
SP- 11
REG_GND 10
XCS_LCD_DRIVER 9
LCD_COM/XDATA 8
OSD_SO 7
XOSD_SCK 6
XHI_RESET 5
HP_L_OUT 4
HP_JACK_IN 3
HP_R_OUT 2
HEADPHONE_GND 1
TO VC-251 BOARD(8/11) CN709
(THROUGH THE FFC-295 FLAT CABLE)
(SEE PAGE 4-58)
CN005 12P
KEY_AD2
KEY_AD3
KEY_AD4
DIAL_A
OPEN/CLOSE SW
DIAL_B
D_2.8V
EVER_3.0V
XCHARGE_LED_ON
REG_GND
REG_GND
XHI_RESET
CN006 2P
OPEN/CLOSE SW
REG_GND
BT001 (LITHIUM BATTERY)
R005 150
D005 XX
D006 XX
D007 XX
R004 10k
R003 10k
R002 10k
D001 TLAU1008(T05,SONY)
S007 SEL/PUSH EXEC
SELECT_DIAL
S001 RESET
S902 OPEN/CLOSE
S002 MENU
S004 EXPOSURE
S010 TITLE
S013 VOLUME+
S016 VOLUME-
S018 BACK LIGHT
R006 1200
R010 1500
R013 2200
R016 3900
R019 8200
R022 27k
CH GND LND002
CH GND LND003
S005 DATE
S017 COUTER RESET
R007 1200
R011 1500
R014 2200
R017 3900
R020 8200
R023 27k
S003 TIME
S006 XX
S009 END SEARCH
S012 DISPLAY
S015 XX
S022 FADER
S019 FOCUS
R008 1200
R012 1500
R015 2200
R018 3900
R021 8200
R024 27k
R052 0
Q002 2SA1576A-T106-R SWITCH
R029 33
R030 390
R026 180k
Q003 2SD1819A-QRS-TX SWITCH
R031 0
R032 100k
R033 XX
R034 560
C002 XX B
C003 10u 10V
L002
IC003 MIP806 (8-759-694-14)
VCC ENB GND RT2 RT1
C/L DC GND EL _EL
IC003 EL DRIVE
R027 0
C004 4700p 200V
D004 MA1010000LS0
CN004 8P
-EL
-EL
EL
EL
D901 EL
J001 (HEADPHONES)
L003 10uH
L004 100uH
C007 XX B
VDR001
C008 0.001u B
VDR002
R001 0
LND001 SEIDEN
SP901 SPEAKER
CN003 2P
SP(+)
SP(-)
R009 680k
D002 XX
C001 0.1u B
IC001 LCD DRIVE IC001 BU9735K-E2
OSC1 OSC2 VSS VC VLCD VDD SCK SD
XOSD_SCK
OSD_SO
XCS_LCD
COM/XD
SEG18 SEG17 SEG16 SEG15 SEG14 SEG13 SEG12 SEG11
SEG10 SEG9 SEG8 SEG7 SEG6 SEG5 SEG4 SEG3
XCS C/XD COM1 COM2 COM3 COM4 SEG1 SEG2
CN003 16P
COM1 COM2 SEG3 SEG4 SEG5 SEG6 SEG7 SEG8 SEG9 SEG10 SEG11 SEG12 SEG13 SEG14 COM4 COM3
LCD902 CHARACTER DISPLAY
CONTROL SWITCH BLOCK(CF-1000) is replaced as a block.
So the PRINTED WIRING BOARD is omitted.
TRV MODEL:CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/
TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
SIGNAL PATH
AUDIO SIGNAL
REC
PB
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17
A B C D E F G H I J K
16

## CF-077 (SWITCH) PRINTED WIRING BOARD

— Ref. No. CF-077 Board; 1,000 Series —

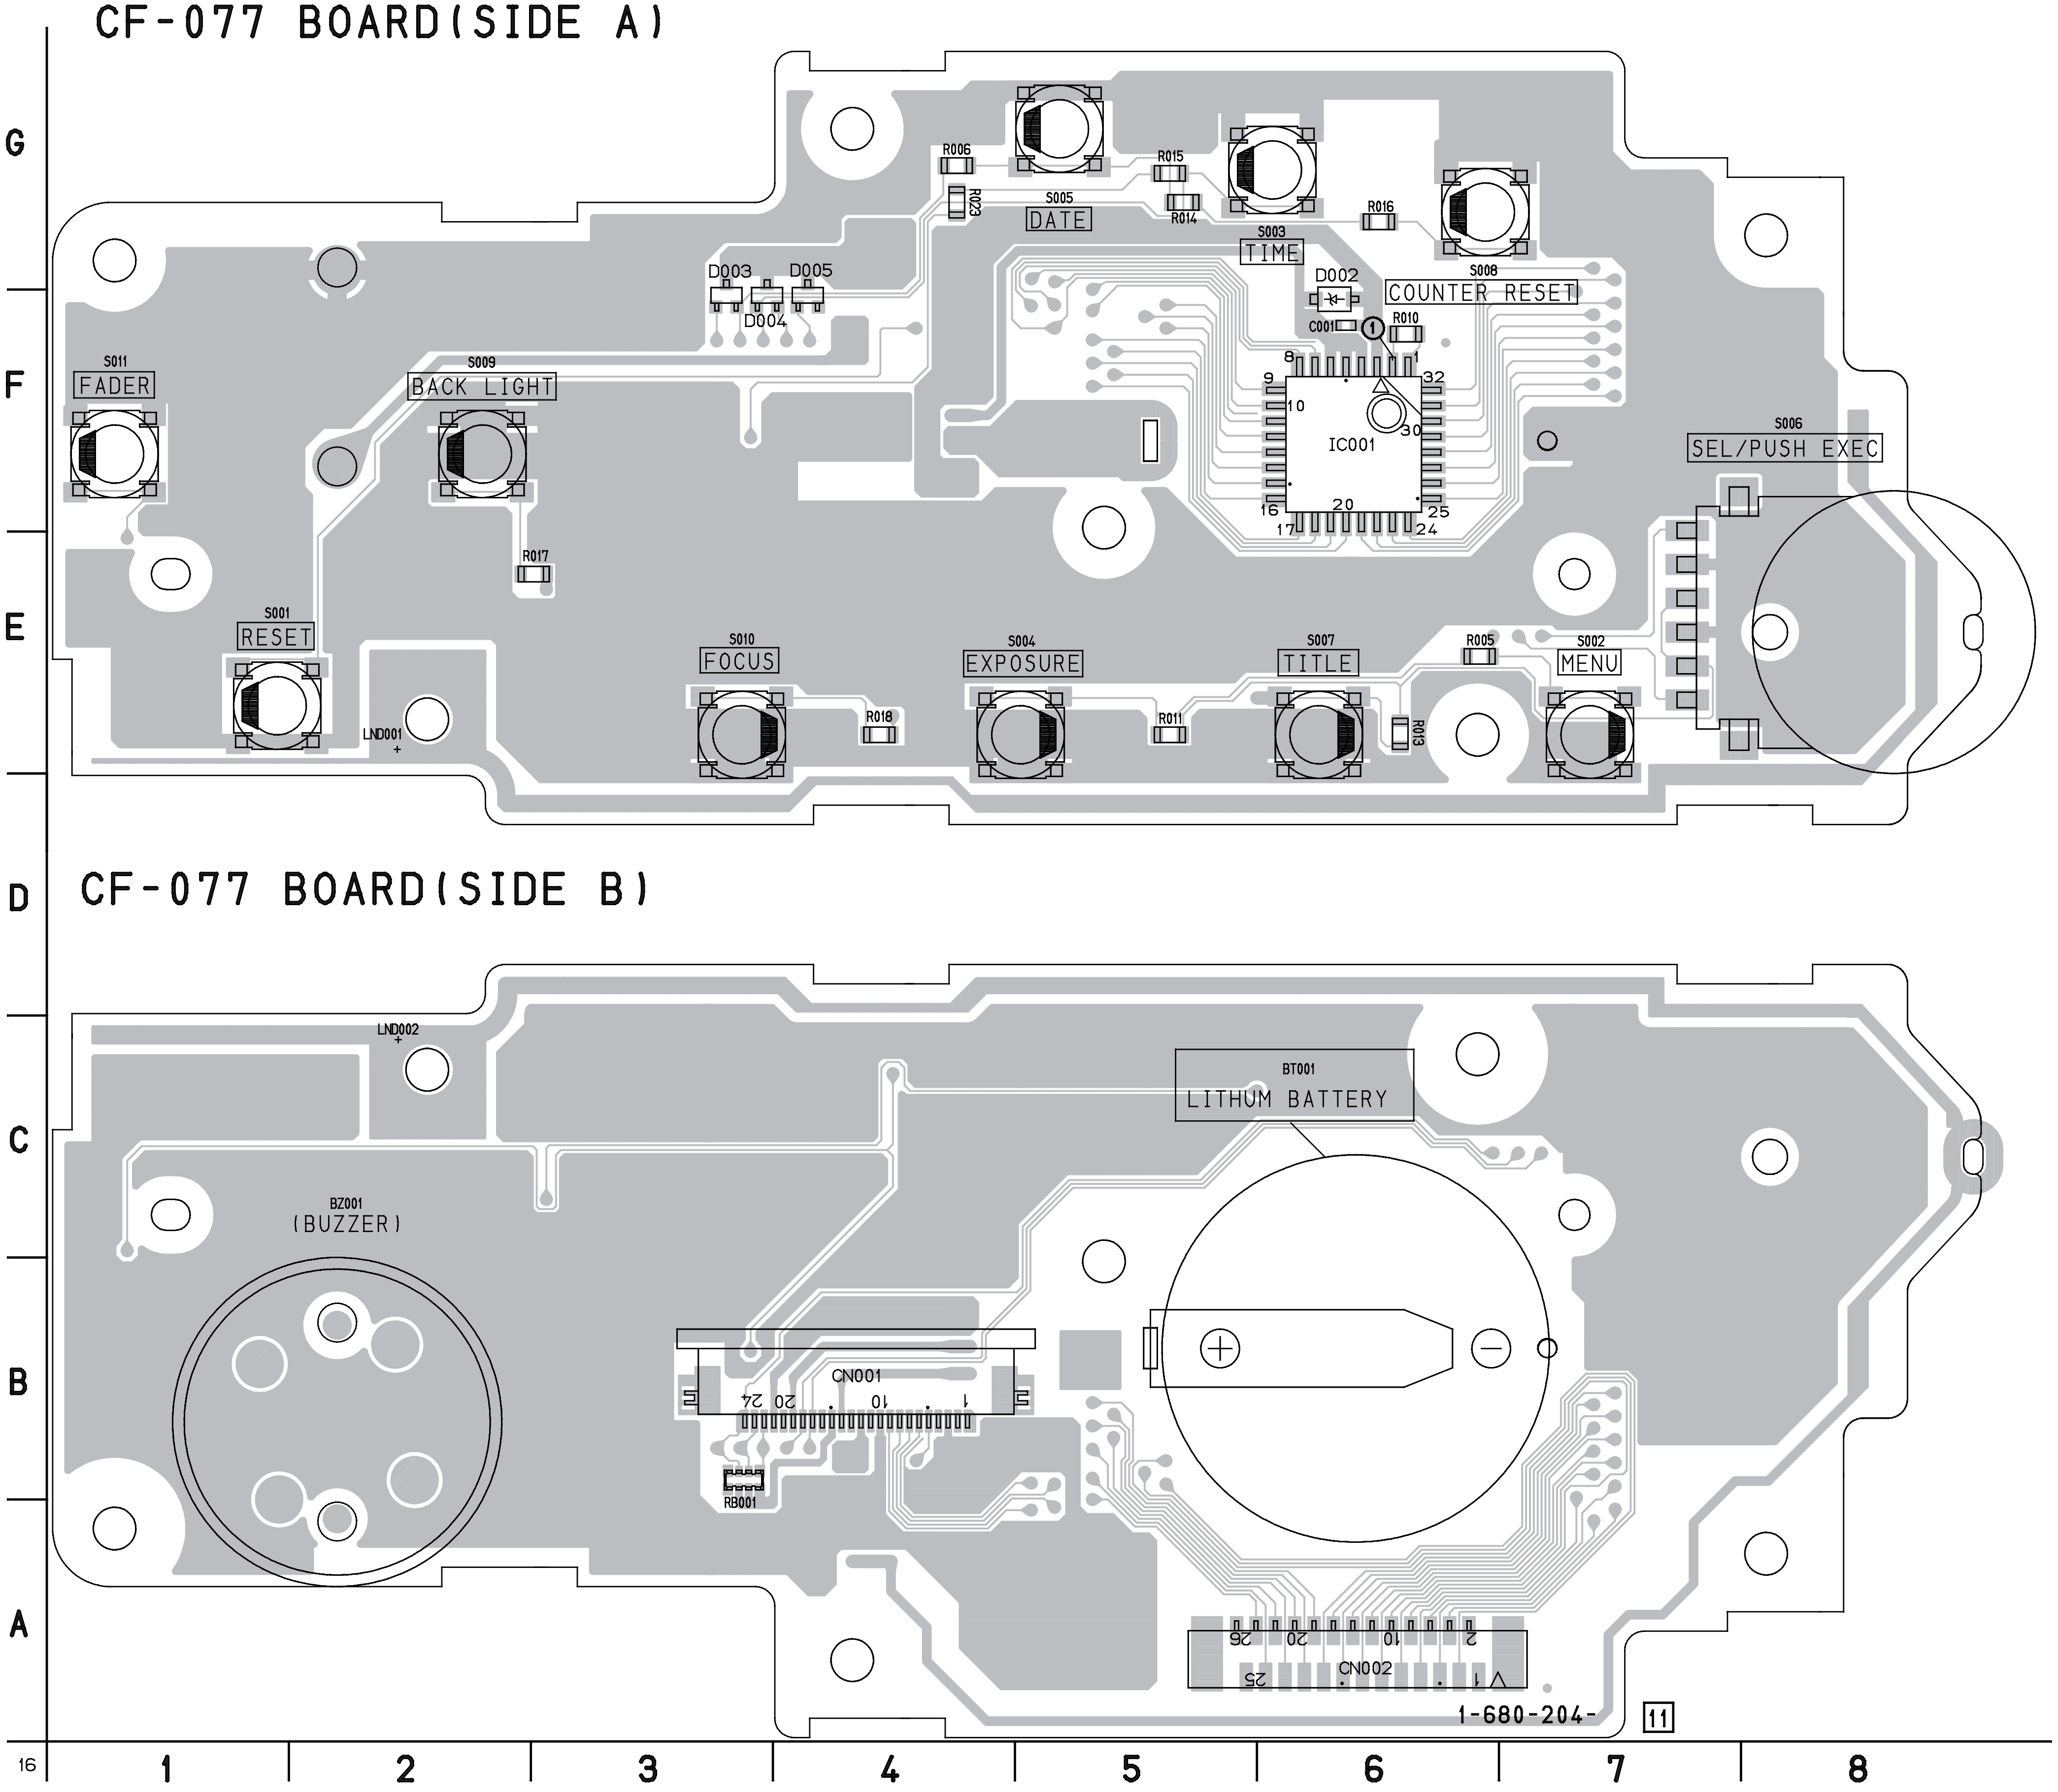
CF-077 BOARD(SIDE A)
G
F
E
D
C
B
A
R006
R023
S005
DATE
R015
R014
S003
TIME
R016
S008
COUNTER RESET
D003
D005
D004
D002
C001
R010
S011
FADER
S009
BACK LIGHT
8
9
32
10
30
IC001
16
20
25
17
24
S006
SEL/PUSH EXEC
R017
S001
RESET
LND001
S010
FOCUS
R018
S004
EXPOSURE
R011
S007
TITLE
R013
R005
S002
MENU
CF-077 BOARD(SIDE B)
LND002
BT001
LITHUM BATTERY
BZ001
(BUZZER)
CN001
24
20
10
1
RB001
26
20
10
2
25
CN002
1
1-680-204-
11
16
1
2
3
4
5
6
7
8

**For printed wiring board**

- Refer to page 4-71 for parts location.
- CF-077 board consists of multiple layers. However, only the sides (layers) A and B are shown.

There are a few cases that the part printed on this diagram isn't mounted in this model.

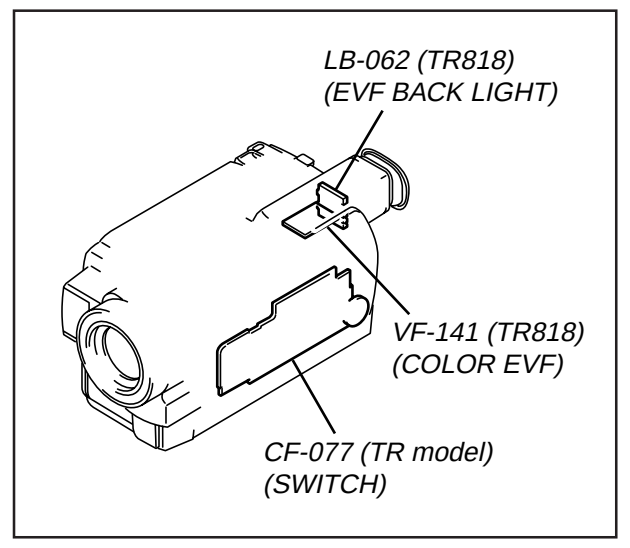
LB-062 (TR818)
(EVF BACK LIGHT)
VF-141 (TR818)
(COLOR EVF)
CF-077 (TR model)
(SWITCH)

**For Schematic Diagram**
- Refer to page 4-67 for waveform.

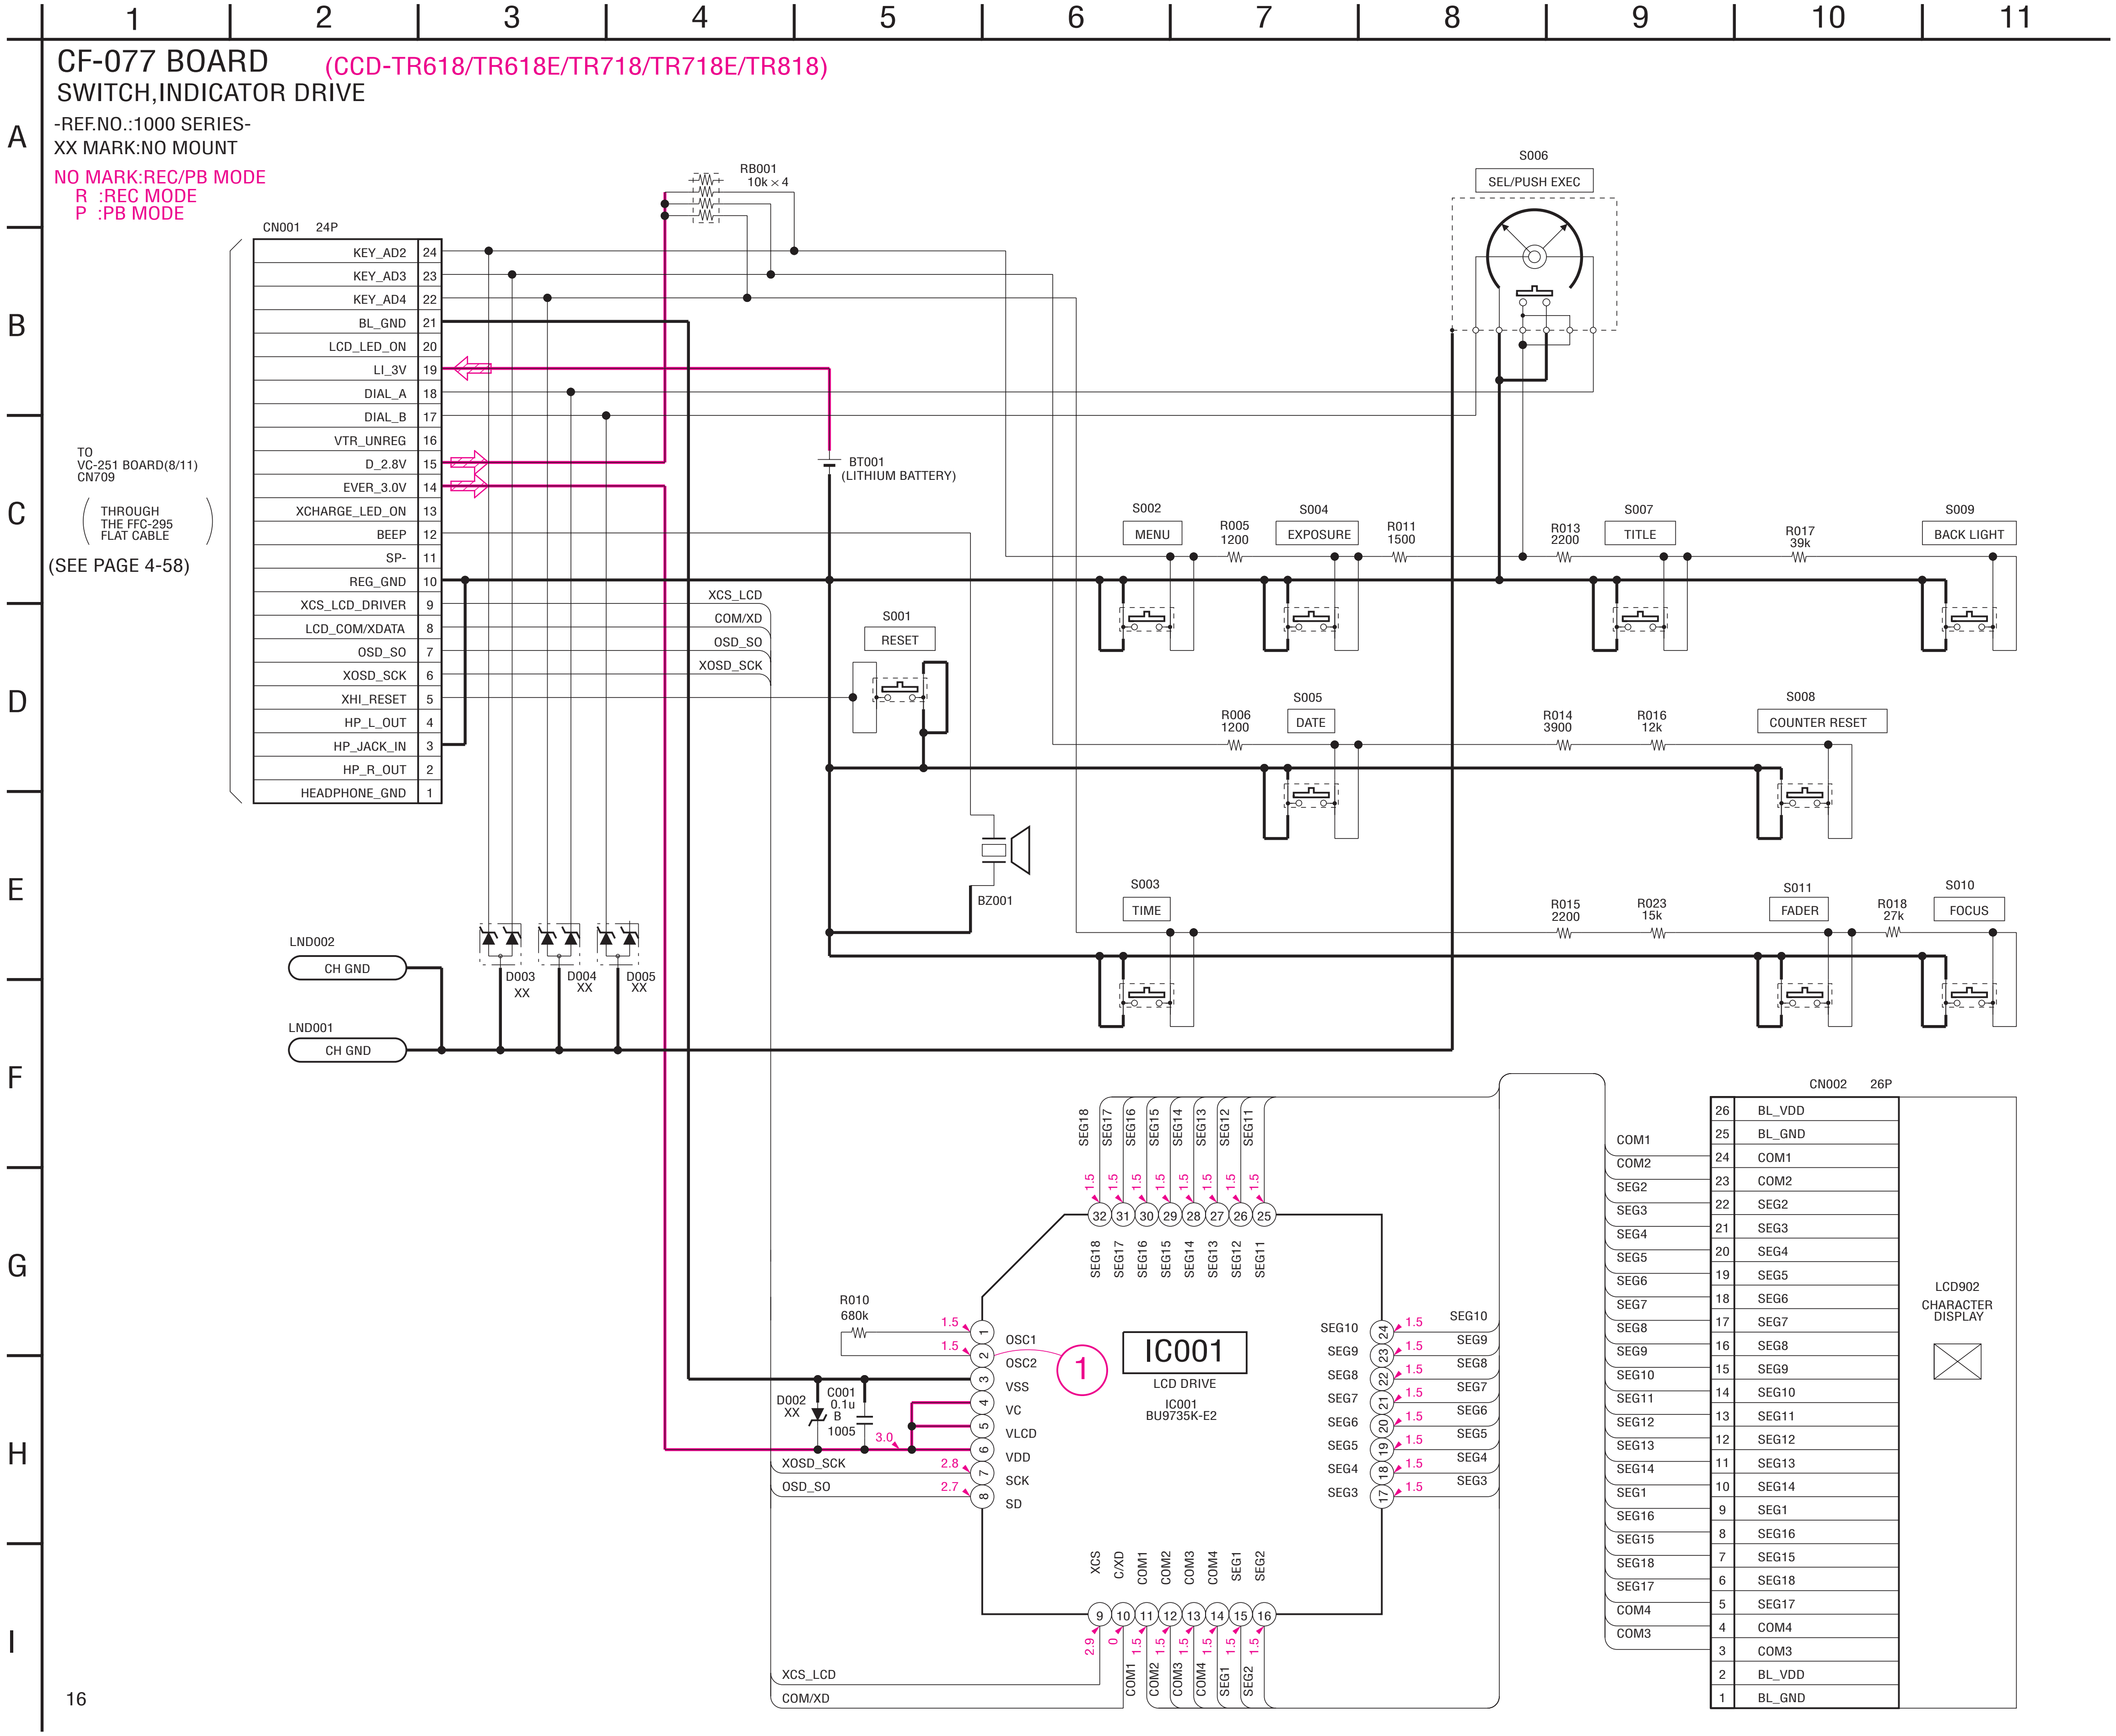
CF-077 BOARD
(CCD-TR618/TR618E/TR718/TR718E/TR818)
SWITCH,INDICATOR DRIVE
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
1 2 3 4 5 6 7 8 9 10 11
A B C D E F G H I
CN001 24P
KEY_AD2 24
KEY_AD3 23
KEY_AD4 22
BL_GND 21
LCD_LED_ON 20
LI_3V 19
DIAL_A 18
DIAL_B 17
VTR_UNREG 16
D_2.8V 15
EVER_3.0V 14
XCHARGE_LED_ON 13
BEEP 12
SP- 11
REG_GND 10
XCS_LCD_DRIVER 9
LCD_COM/XDATA 8
OSD_SO 7
XOSD_SCK 6
XHI_RESET 5
HP_L_OUT 4
HP_JACK_IN 3
HP_R_OUT 2
HEADPHONE_GND 1
TO VC-251 BOARD(8/11) CN709
THROUGH THE FFC-295 FLAT CABLE
(SEE PAGE 4-58)
RB001 10k × 4
BT001 (LITHIUM BATTERY)
S001 RESET
S002 MENU
S003 TIME
S004 EXPOSURE
S005 DATE
S006 SEL/PUSH EXEC
S007 TITLE
S008 COUNTER RESET
S009 BACK LIGHT
S010 FOCUS
S011 FADER
R005 1200
R006 1200
R011 1500
R013 2200
R014 3900
R015 2200
R016 12k
R017 39k
R018 27k
R023 15k
XCS_LCD
COM/XD
OSD_SO
XOSD_SCK
BZ001
LND002 CH GND
LND001 CH GND
D003 XX
D004 XX
D005 XX
R010 680k
C001 0.1u B 1005
D002 XX
IC001 LCD DRIVE IC001 BU9735K-E2
OSC1 OSC2 VSS VC VLCD VDD SCK SD
XCS C/XD COM1 COM2 COM3 COM4 SEG1 SEG2
SEG3 SEG4 SEG5 SEG6 SEG7 SEG8 SEG9 SEG10
SEG11 SEG12 SEG13 SEG14 SEG15 SEG16 SEG17 SEG18
1.5 3.0 2.8 2.7 2.9 0
CN002 26P
26 BL_VDD
25 BL_GND
24 COM1
23 COM2
22 SEG2
21 SEG3
20 SEG4
19 SEG5
18 SEG6
17 SEG7
16 SEG8
15 SEG9
14 SEG10
13 SEG11
12 SEG12
11 SEG13
10 SEG14
9 SEG1
8 SEG16
7 SEG15
6 SEG18
5 SEG17
4 COM4
3 COM3
2 BL_VDD
1 BL_GND
LCD902 CHARACTER DISPLAY
16

## VC-251 (CAMERA PROCESSOR, Y/C PROCESSOR, FOCUS/ZOOM MOTOR DRIVE, REC/PB AMP, LINE I/O AMP, SERVO, MODE CONTROL, HI CONTROL, AUDIO, DC/DC CONVERTER, CONNECTOR) PRINTED WIRING BOARD

— Ref. No. VC-251 Board; 10,000 Series —

### VC-251 BOARD(SIDE A)

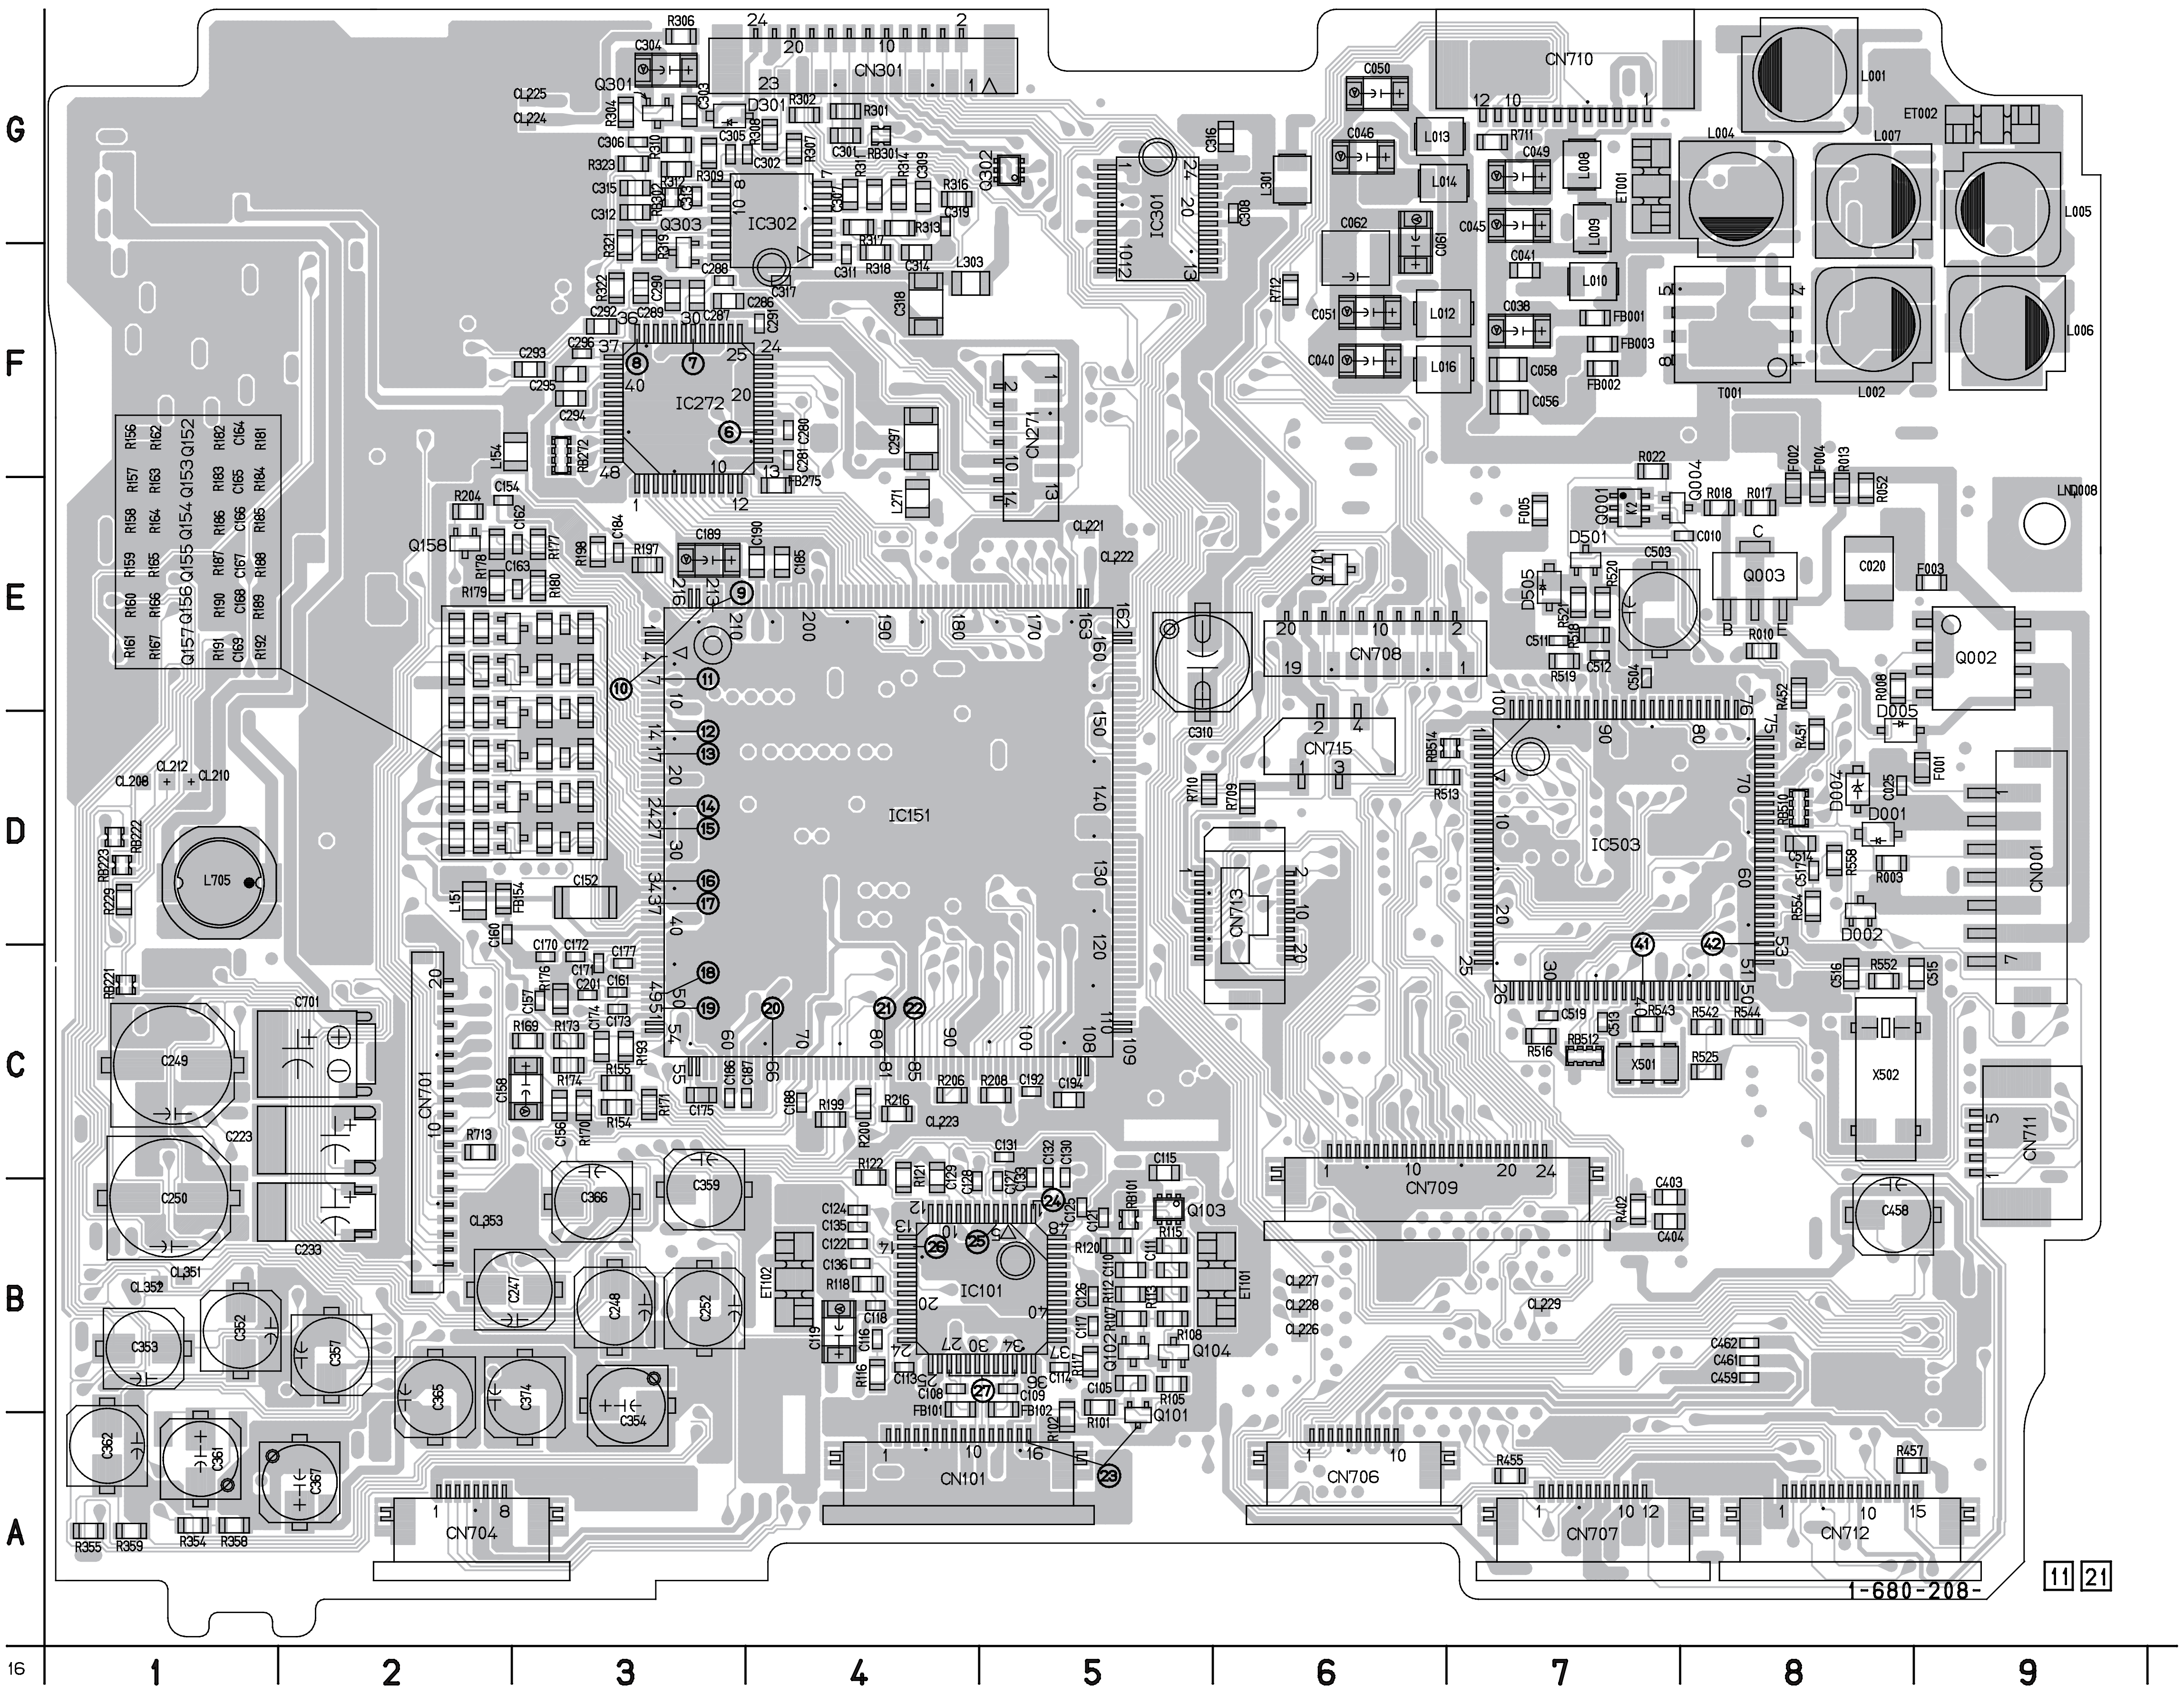
G
F
E
D
C
B
A
1
2
3
4
5
6
7
8
9
16
CN301
CN710
IC302
IC301
IC272
CN271
Q301
Q302
Q303
D301
IC151
CN708
CN715
IC503
CN713
CN001
CN701
L705
C249
C250
C701
C223
C233
C366
C359
C247
C248
C252
C353
C352
C357
C365
C374
C354
C362
C361
C367
IC101
Q103
Q104
Q101
Q102
CN709
CN711
CN101
CN706
CN704
CN707
CN712
X501
X502
C458
Q001
Q002
Q003
Q004
D501
D505
D005
D001
D002
D004
L001
L002
L004
L005
L006
L007
T001
Q158
Q152
Q153
Q154
Q155
Q156
Q157
1-680-208-
11
21

**For printed wiring board**
- Refer to pages 4-72,4-73 for parts location.
- VC-251 board consists of multiple layers. However, only the sides (layers) A and B are shown.
- Chip parts

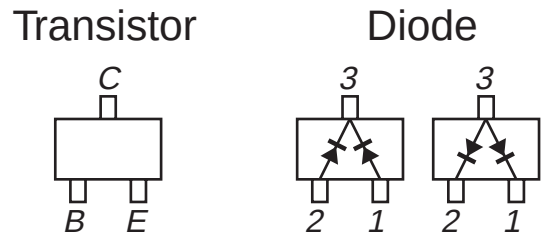
Transistor
C
B
E
Diode
3
2
1
3
2
1

There are a few cases that the part printed on this diagram isn't mounted in this model.

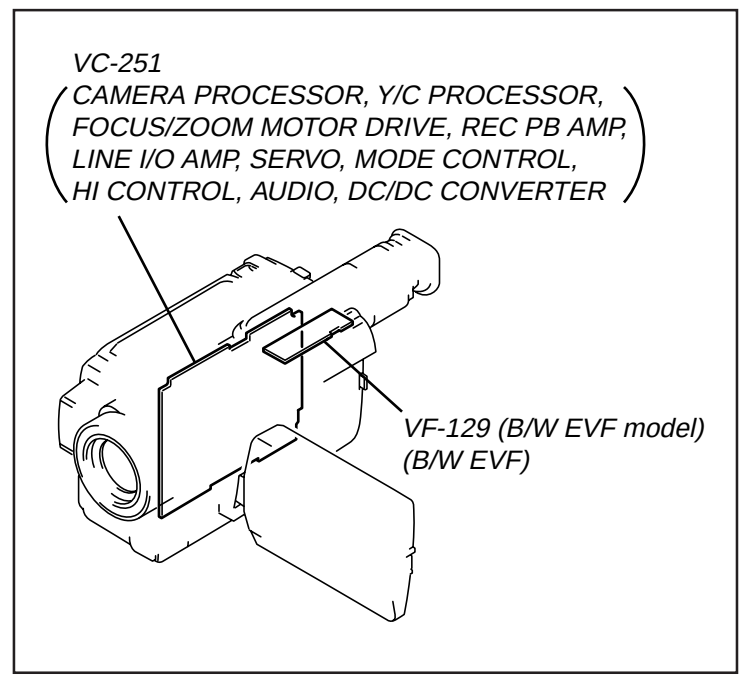
VC-251
CAMERA PROCESSOR, Y/C PROCESSOR, FOCUS/ZOOM MOTOR DRIVE, REC PB AMP, LINE I/O AMP, SERVO, MODE CONTROL, HI CONTROL, AUDIO, DC/DC CONVERTER
VF-129 (B/W EVF model) (B/W EVF)

## VC-251 BOARD(SIDE B)

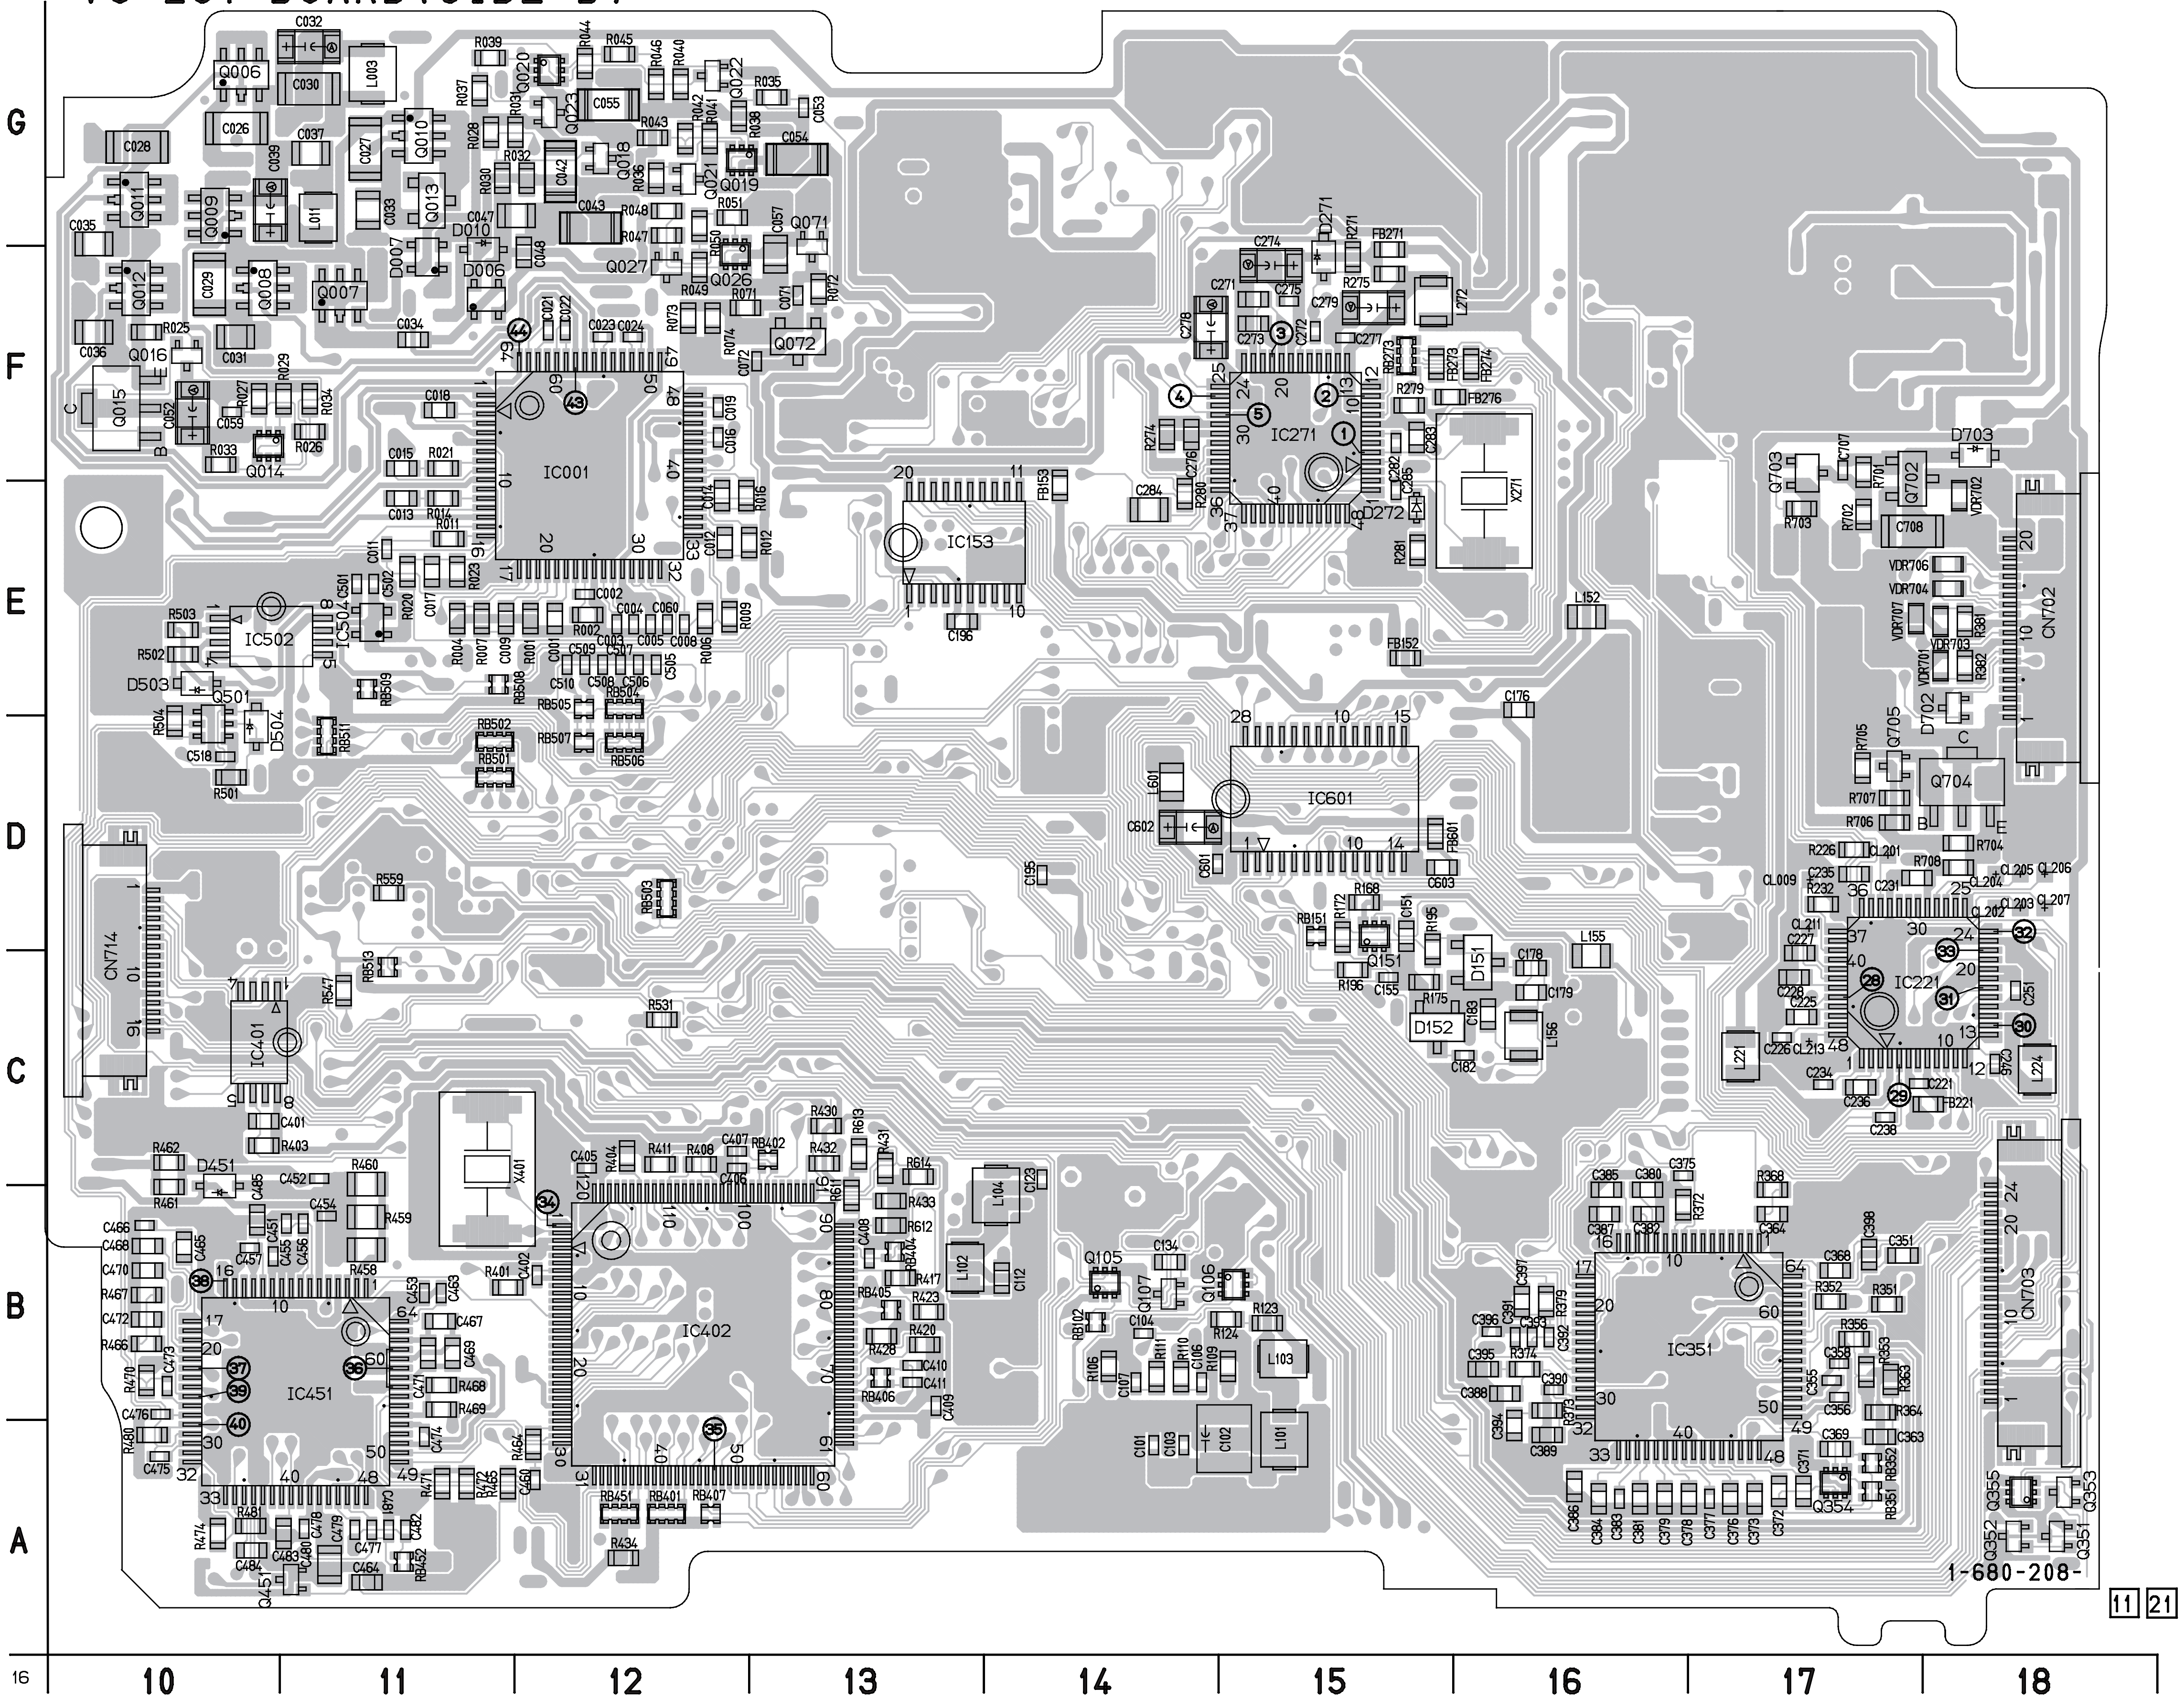
G
F
E
D
C
B
A
10
11
12
13
14
15
16
17
18
16
IC001
IC153
IC271
IC502
IC601
IC221
IC401
IC451
IC402
IC351
CN702
CN703
CN714
X271
X401
Q006
Q007
Q008
Q009
Q010
Q011
Q012
Q013
Q014
Q015
Q016
Q018
Q019
Q020
Q021
Q022
Q023
Q026
Q027
Q071
Q072
Q105
Q106
Q107
Q151
Q351
Q352
Q353
Q354
Q355
Q451
Q501
Q702
Q703
Q704
Q705
D006
D007
D010
D151
D152
D271
D272
D451
D503
D504
D702
D703
L003
L011
L101
L102
L103
L104
L152
L155
L156
L221
L224
1-680-208-
11
21

**For Schematic Diagram**
- Refer to page 4-39 for printed wiring board.
- Refer to page 4-68 for waveforms.

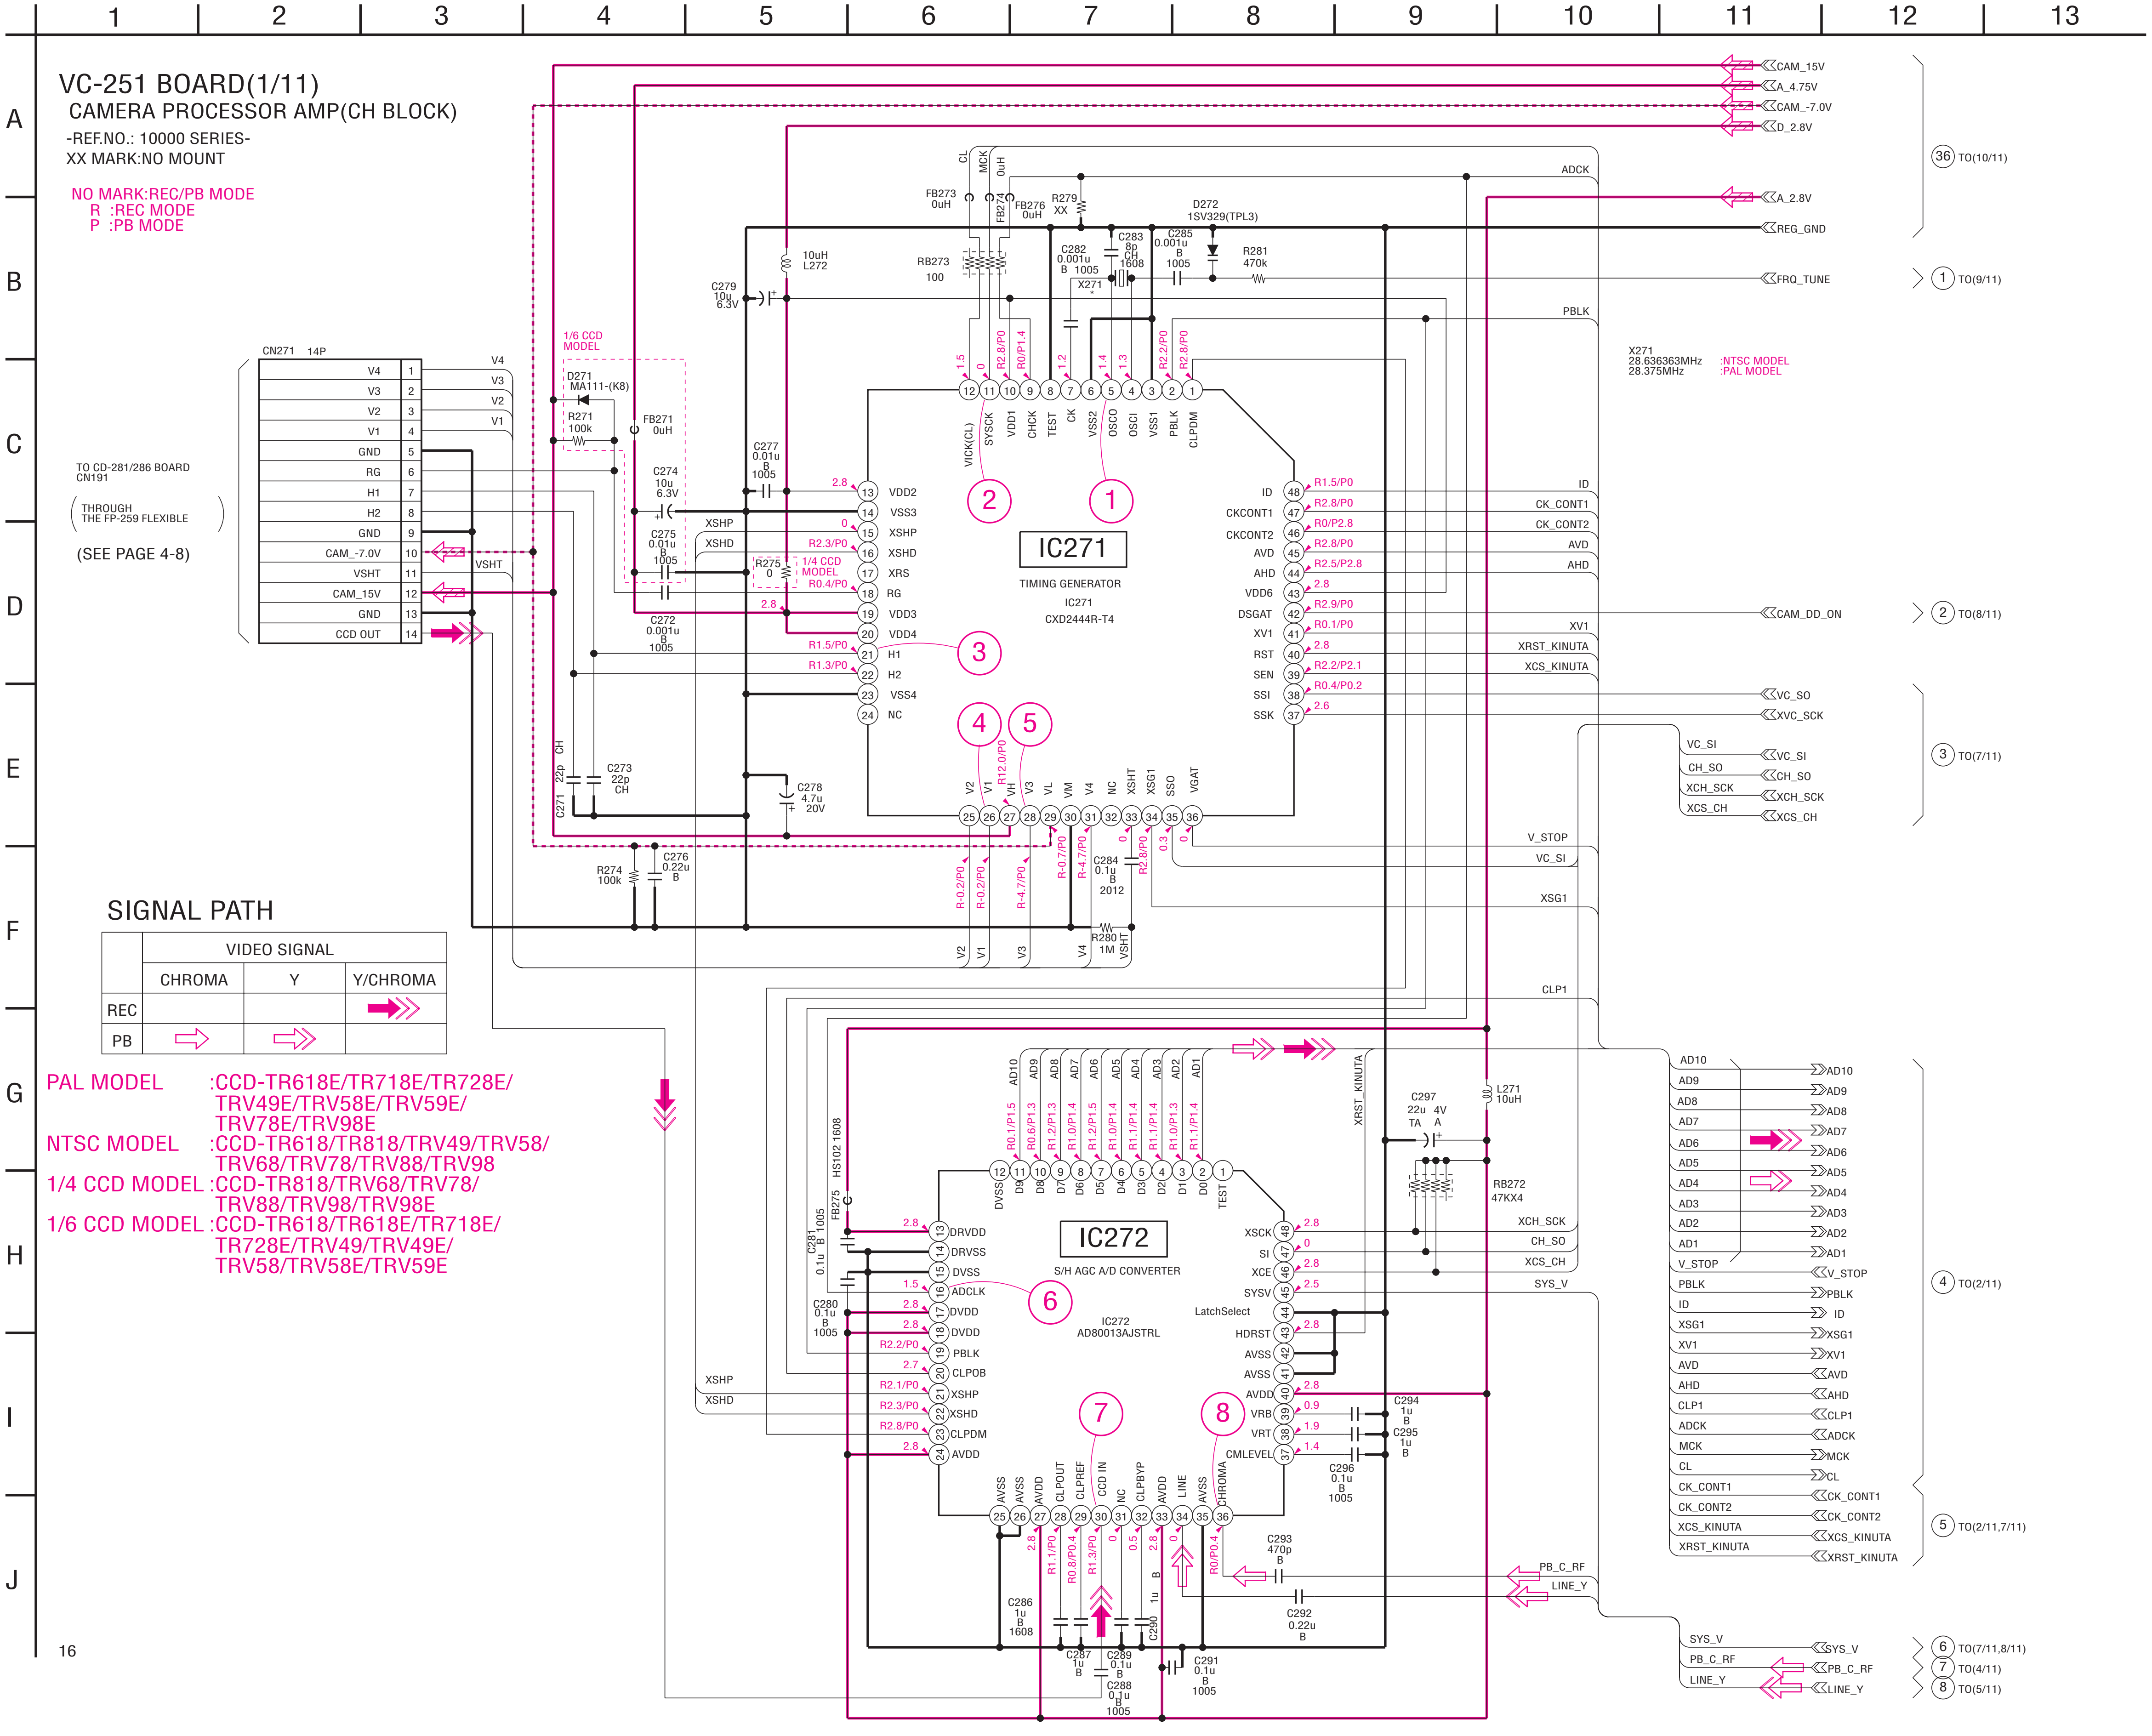
1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
G
H
I
J
VC-251 BOARD(1/11)
CAMERA PROCESSOR AMP(CH BLOCK)
-REF.NO.: 10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
IC271
TIMING GENERATOR
IC271
CXD2444R-T4
IC272
S/H AGC A/D CONVERTER
IC272
AD80013AJSTRL
CN271 14P
TO CD-281/286 BOARD CN191
THROUGH THE FP-259 FLEXIBLE
(SEE PAGE 4-8)
V4
V3
V2
V1
GND
RG
H1
H2
GND
CAM_-7.0V
VSHT
CAM_15V
GND
CCD OUT
1/6 CCD MODEL
D271 MA111-(K8)
R271 100k
FB271 0uH
C274 10u 6.3V
C275 0.01u B 1005
C272 0.001u B 1005
C277 0.01u B 1005
C279 10u 6.3V
10uH L272
RB273 100
FB273 0uH
FB274 0uH
FB276 0uH
R279 XX
C282 0.001u B 1005
C283 8p CH 1608
C285 0.001u B 1005
X271
D272 1SV329(TPL3)
R281 470k
X271 28.636363MHz :NTSC MODEL
28.375MHz :PAL MODEL
R275 0
1/4 CCD MODEL
C271 22p CH
C273 22p CH
C278 4.7u 20V
R274 100k
C276 0.22u B
C284 0.1u B 2012
R280 1M
ADCK
PBLK
ID
CK_CONT1
CK_CONT2
AVD
AHD
XV1
XRST_KINUTA
XCS_KINUTA
V_STOP
VC_SI
XSG1
CLP1
CAM_15V
A_4.75V
CAM_-7.0V
D_2.8V
A_2.8V
REG_GND
FRQ_TUNE
CAM_DD_ON
VC_SO
XVC_SCK
VC_SI
CH_SO
XCH_SCK
XCS_CH
36 TO(10/11)
1 TO(9/11)
2 TO(8/11)
3 TO(7/11)
4 TO(2/11)
5 TO(2/11,7/11)
6 TO(7/11,8/11)
7 TO(4/11)
8 TO(5/11)
L271 10uH
C297 22u 4V TA A
RB272 47KX4
C294 1u B
C295 1u B
C296 0.1u B 1005
C293 470p B
C292 0.22u B
C291 0.1u B 1005
C286 1u B 1608
C287 1u B
C289 0.1u B
C288 0.1u B 1005
C290
C281 0.1u B 1005
C280 0.1u B 1005
FB275 HS102 1608
XSHP
XSHD
SYS_V
PB_C_RF
LINE_Y
AD10
AD9
AD8
AD7
AD6
AD5
AD4
AD3
AD2
AD1
MCK
CL
16

VC-251 BOARD(1/11)
CAMERA PROCESSOR AMP(CH BLOCK)

-REF.NO.: 10000 SERIES-
XX MARK:NO MOUNT

NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE

SIGNAL PATH

| | VIDEO SIGNAL | | |
|---|---|---|---|
| | CHROMA | Y | Y/CHROMA |
| REC | | | ➡ |
| PB | ⇨ | ⇨ | |

PAL MODEL :CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E
NTSC MODEL :CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98
1/4 CCD MODEL :CCD-TR818/TRV68/TRV78/TRV88/TRV98/TRV98E
1/6 CCD MODEL :CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E

**CAMERA PROCESSOR AMP**
VC-251 (1/11)

**For Schematic Diagram**

- Refer to page 4-39 for printed wiring board.
- Refer to page 4-68 for waveforms.

## VC-251 BOARD(2/11)

Y/C PROCESSOR (CL BLOCK)

-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT

NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE

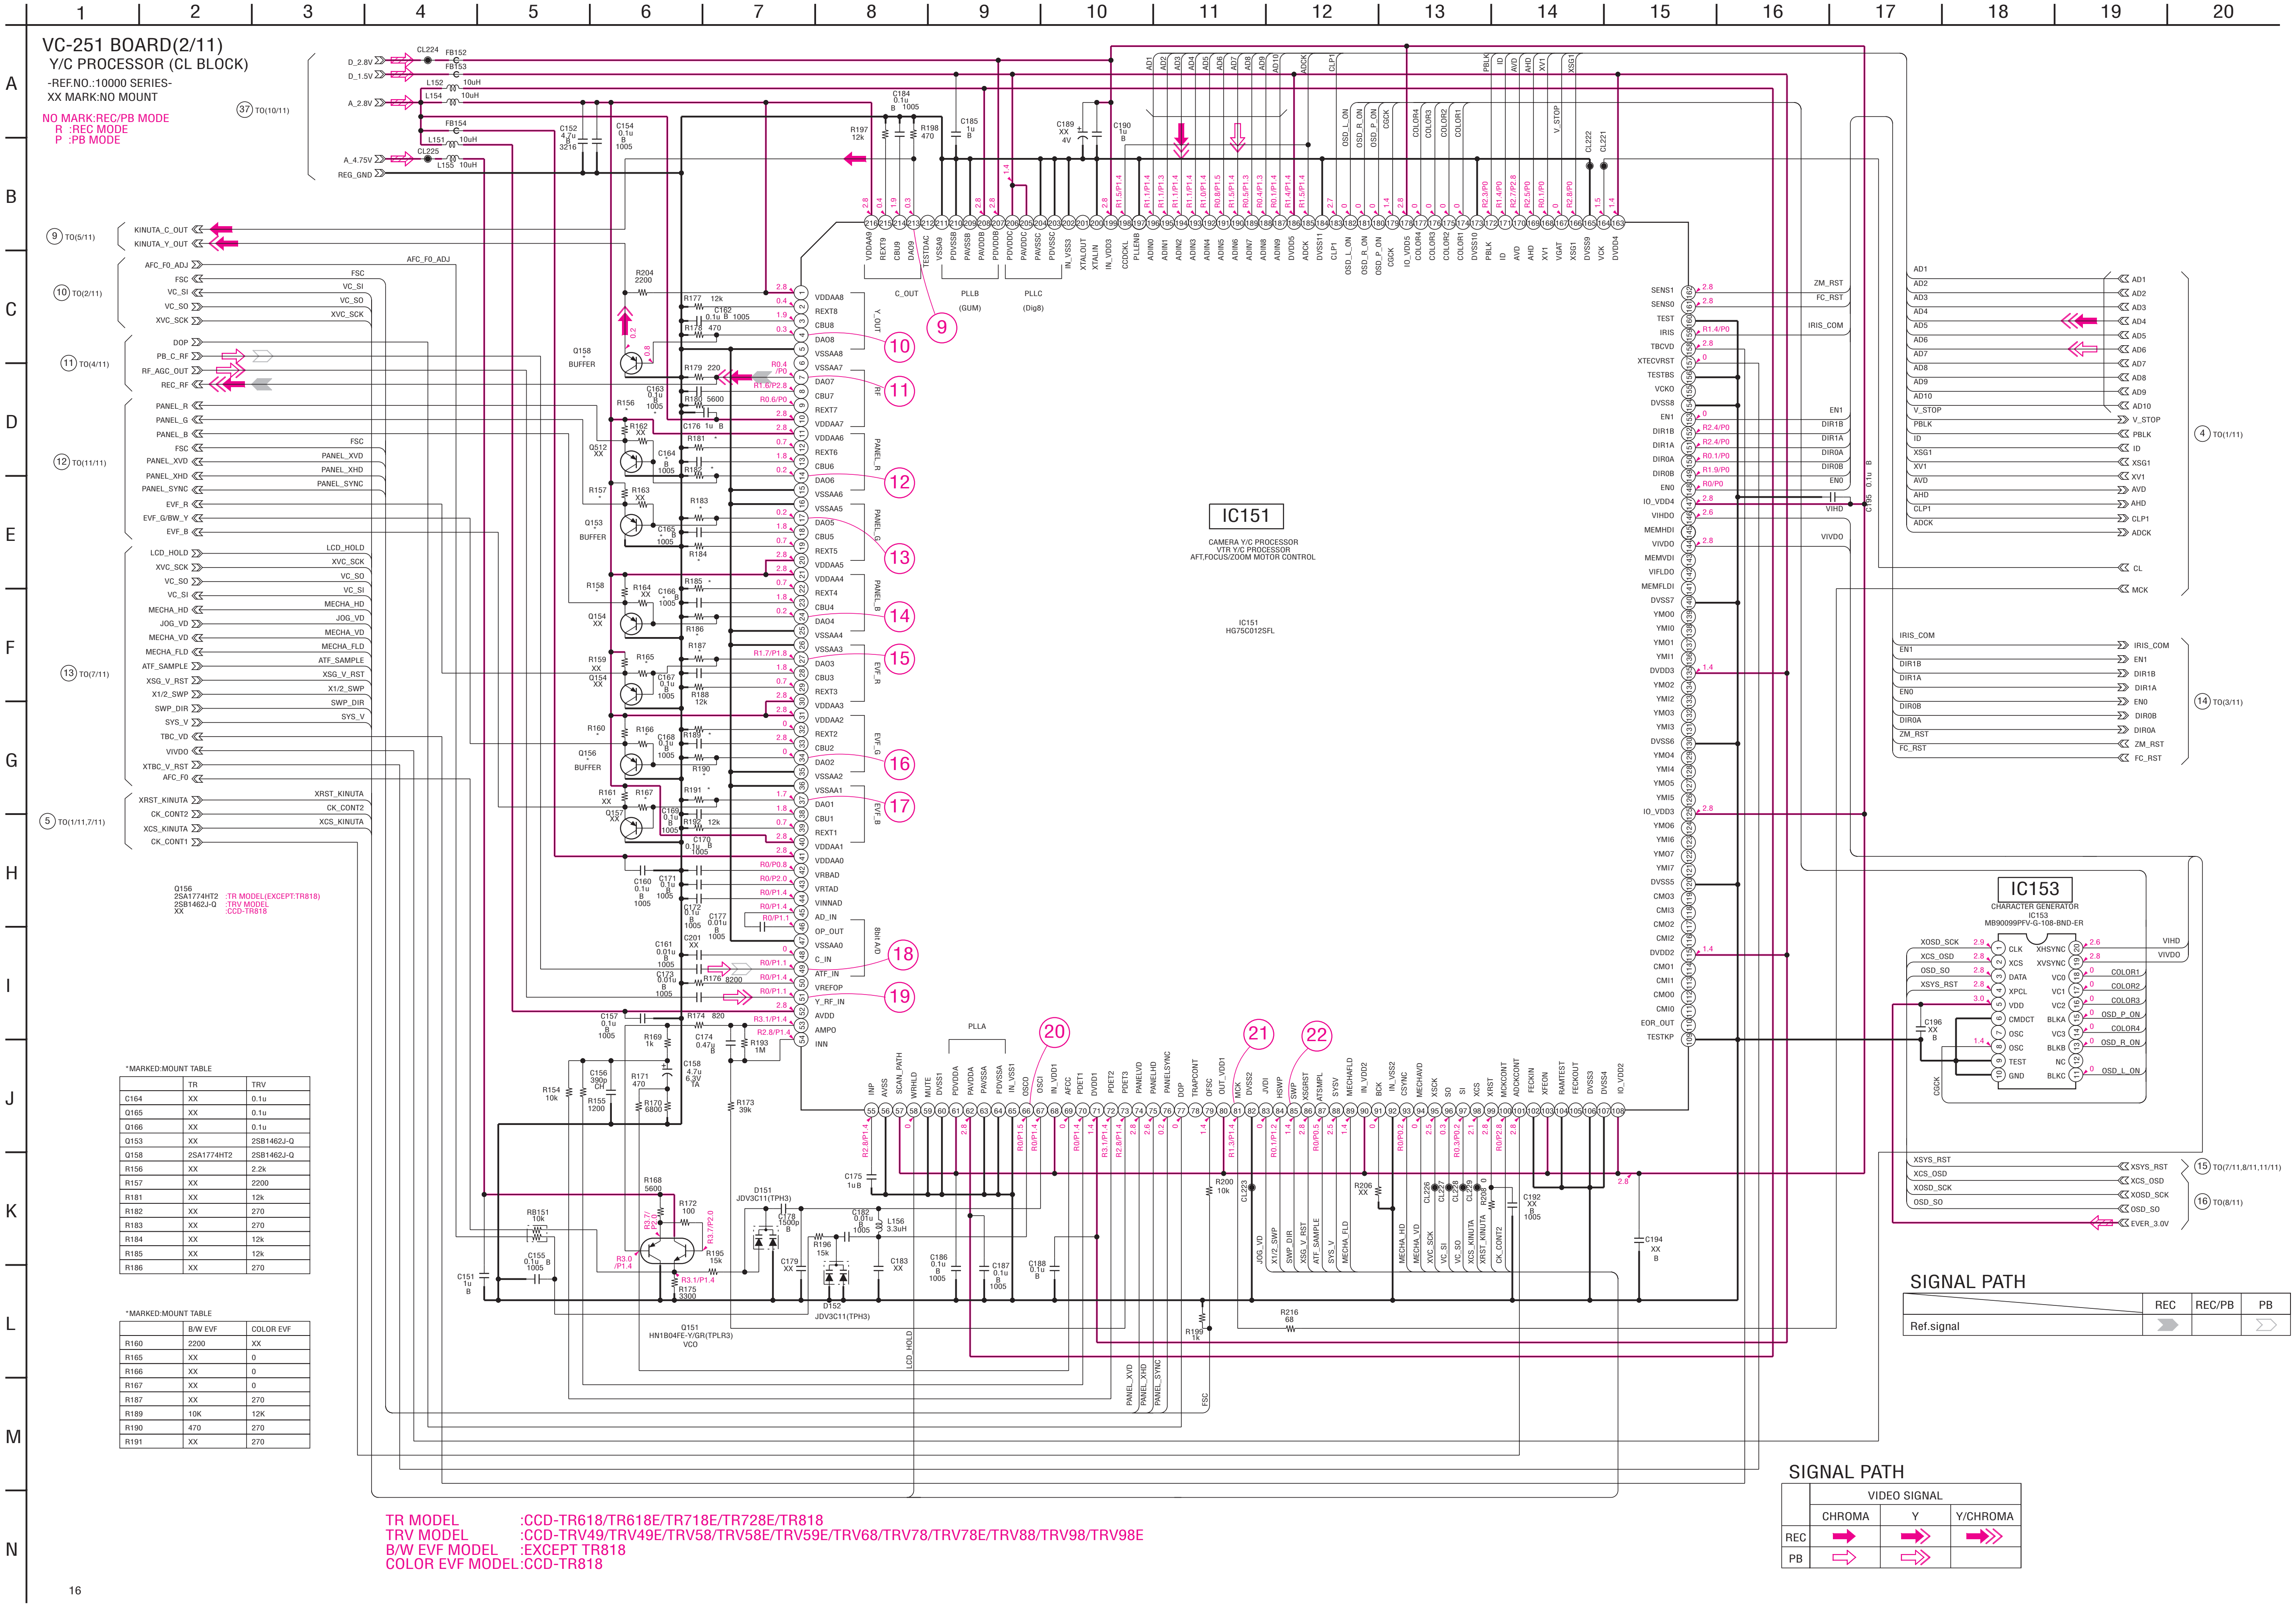
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
A
B
C
D
E
F
G
H
I
J
K
L
M
N
37 TO(10/11)
D_2.8V
D_1.5V
A_2.8V
A_4.75V
REG_GND
9 TO(5/11)
KINUTA_C_OUT
KINUTA_Y_OUT
10 TO(2/11)
AFC_F0_ADJ
FSC
VC_SI
VC_SO
XVC_SCK
11 TO(4/11)
DOP
PB_C_RF
RF_AGC_OUT
REC_RF
12 TO(11/11)
PANEL_R
PANEL_G
PANEL_B
PANEL_XVD
PANEL_XHD
PANEL_SYNC
EVF_R
EVF_G/BW_Y
EVF_B
13 TO(7/11)
LCD_HOLD
MECHA_HD
JOG_VD
MECHA_VD
MECHA_FLD
ATF_SAMPLE
XSG_V_RST
X1/2_SWP
SWP_DIR
SYS_V
TBC_VD
VIVDO
XTBC_V_RST
AFC_F0
5 TO(1/11,7/11)
XRST_KINUTA
CK_CONT2
XCS_KINUTA
CK_CONT1
Q156
2SA1774HT2 :TR MODEL(EXCEPT:TR818)
2SB1462J-Q :TRV MODEL
XX :CCD-TR818
Q158 BUFFER
Q153 BUFFER
Q156 BUFFER
Q151
HN1B04FE-Y/GR(TPLR3)
VCO
D151
JDV3C11(TPH3)
D152
JDV3C11(TPH3)
IC151
CAMERA Y/C PROCESSOR
VTR Y/C PROCESSOR
AFT,FOCUS/ZOOM MOTOR CONTROL
IC151
HG75C012SFL
PLLA
PLLB
(GUM)
PLLC
(Dig8)
C_OUT
Y_OUT
IC153
CHARACTER GENERATOR
IC153
MB90099PFV-G-108-BND-ER
4 TO(1/11)
AD1
AD2
AD3
AD4
AD5
AD6
AD7
AD8
AD9
AD10
V_STOP
PBLK
ID
XSG1
XV1
AVD
AHD
CLP1
ADCK
CL
MCK
14 TO(3/11)
IRIS_COM
EN1
DIR1B
DIR1A
EN0
DIR0B
DIR0A
ZM_RST
FC_RST
15 TO(7/11,8/11,11/11)
XSYS_RST
XCS_OSD
XOSD_SCK
OSD_SO
16 TO(8/11)
EVER_3.0V
9
10
11
12
13
14
15
16
17
18
19
20
21
22

*MARKED:MOUNT TABLE

| | TR | TRV |
|---|---|---|
| C164 | XX | 0.1u |
| Q165 | XX | 0.1u |
| Q166 | XX | 0.1u |
| Q153 | XX | 2SB1462J-Q |
| Q158 | 2SA1774HT2 | 2SB1462J-Q |
| R156 | XX | 2.2k |
| R157 | XX | 2200 |
| R181 | XX | 12k |
| R182 | XX | 270 |
| R183 | XX | 270 |
| R184 | XX | 12k |
| R185 | XX | 12k |
| R186 | XX | 270 |

*MARKED:MOUNT TABLE

| | B/W EVF | COLOR EVF |
|---|---|---|
| R160 | 2200 | XX |
| R165 | XX | 0 |
| R166 | XX | 0 |
| R167 | XX | 0 |
| R187 | XX | 270 |
| R189 | 10K | 12K |
| R190 | 470 | 270 |
| R191 | XX | 270 |

TR MODEL :CCD-TR618/TR618E/TR718E/TR728E/TR818
TRV MODEL :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
B/W EVF MODEL :EXCEPT TR818
COLOR EVF MODEL:CCD-TR818

SIGNAL PATH

| | REC | REC/PB | PB |
|---|---|---|---|
| Ref.signal | ➡ | | ⇨ |

SIGNAL PATH

| | VIDEO SIGNAL | | |
|---|---|---|---|
| | CHROMA | Y | Y/CHROMA |
| REC | ➡ | ➡» | ➡»» |
| PB | ⇨ | ⇨» | |

**Y/C PROCESSOR**
**VC-251 (2/11)**

**For Schematic Diagram**
- Refer to page 4-39 for printed wiring board.

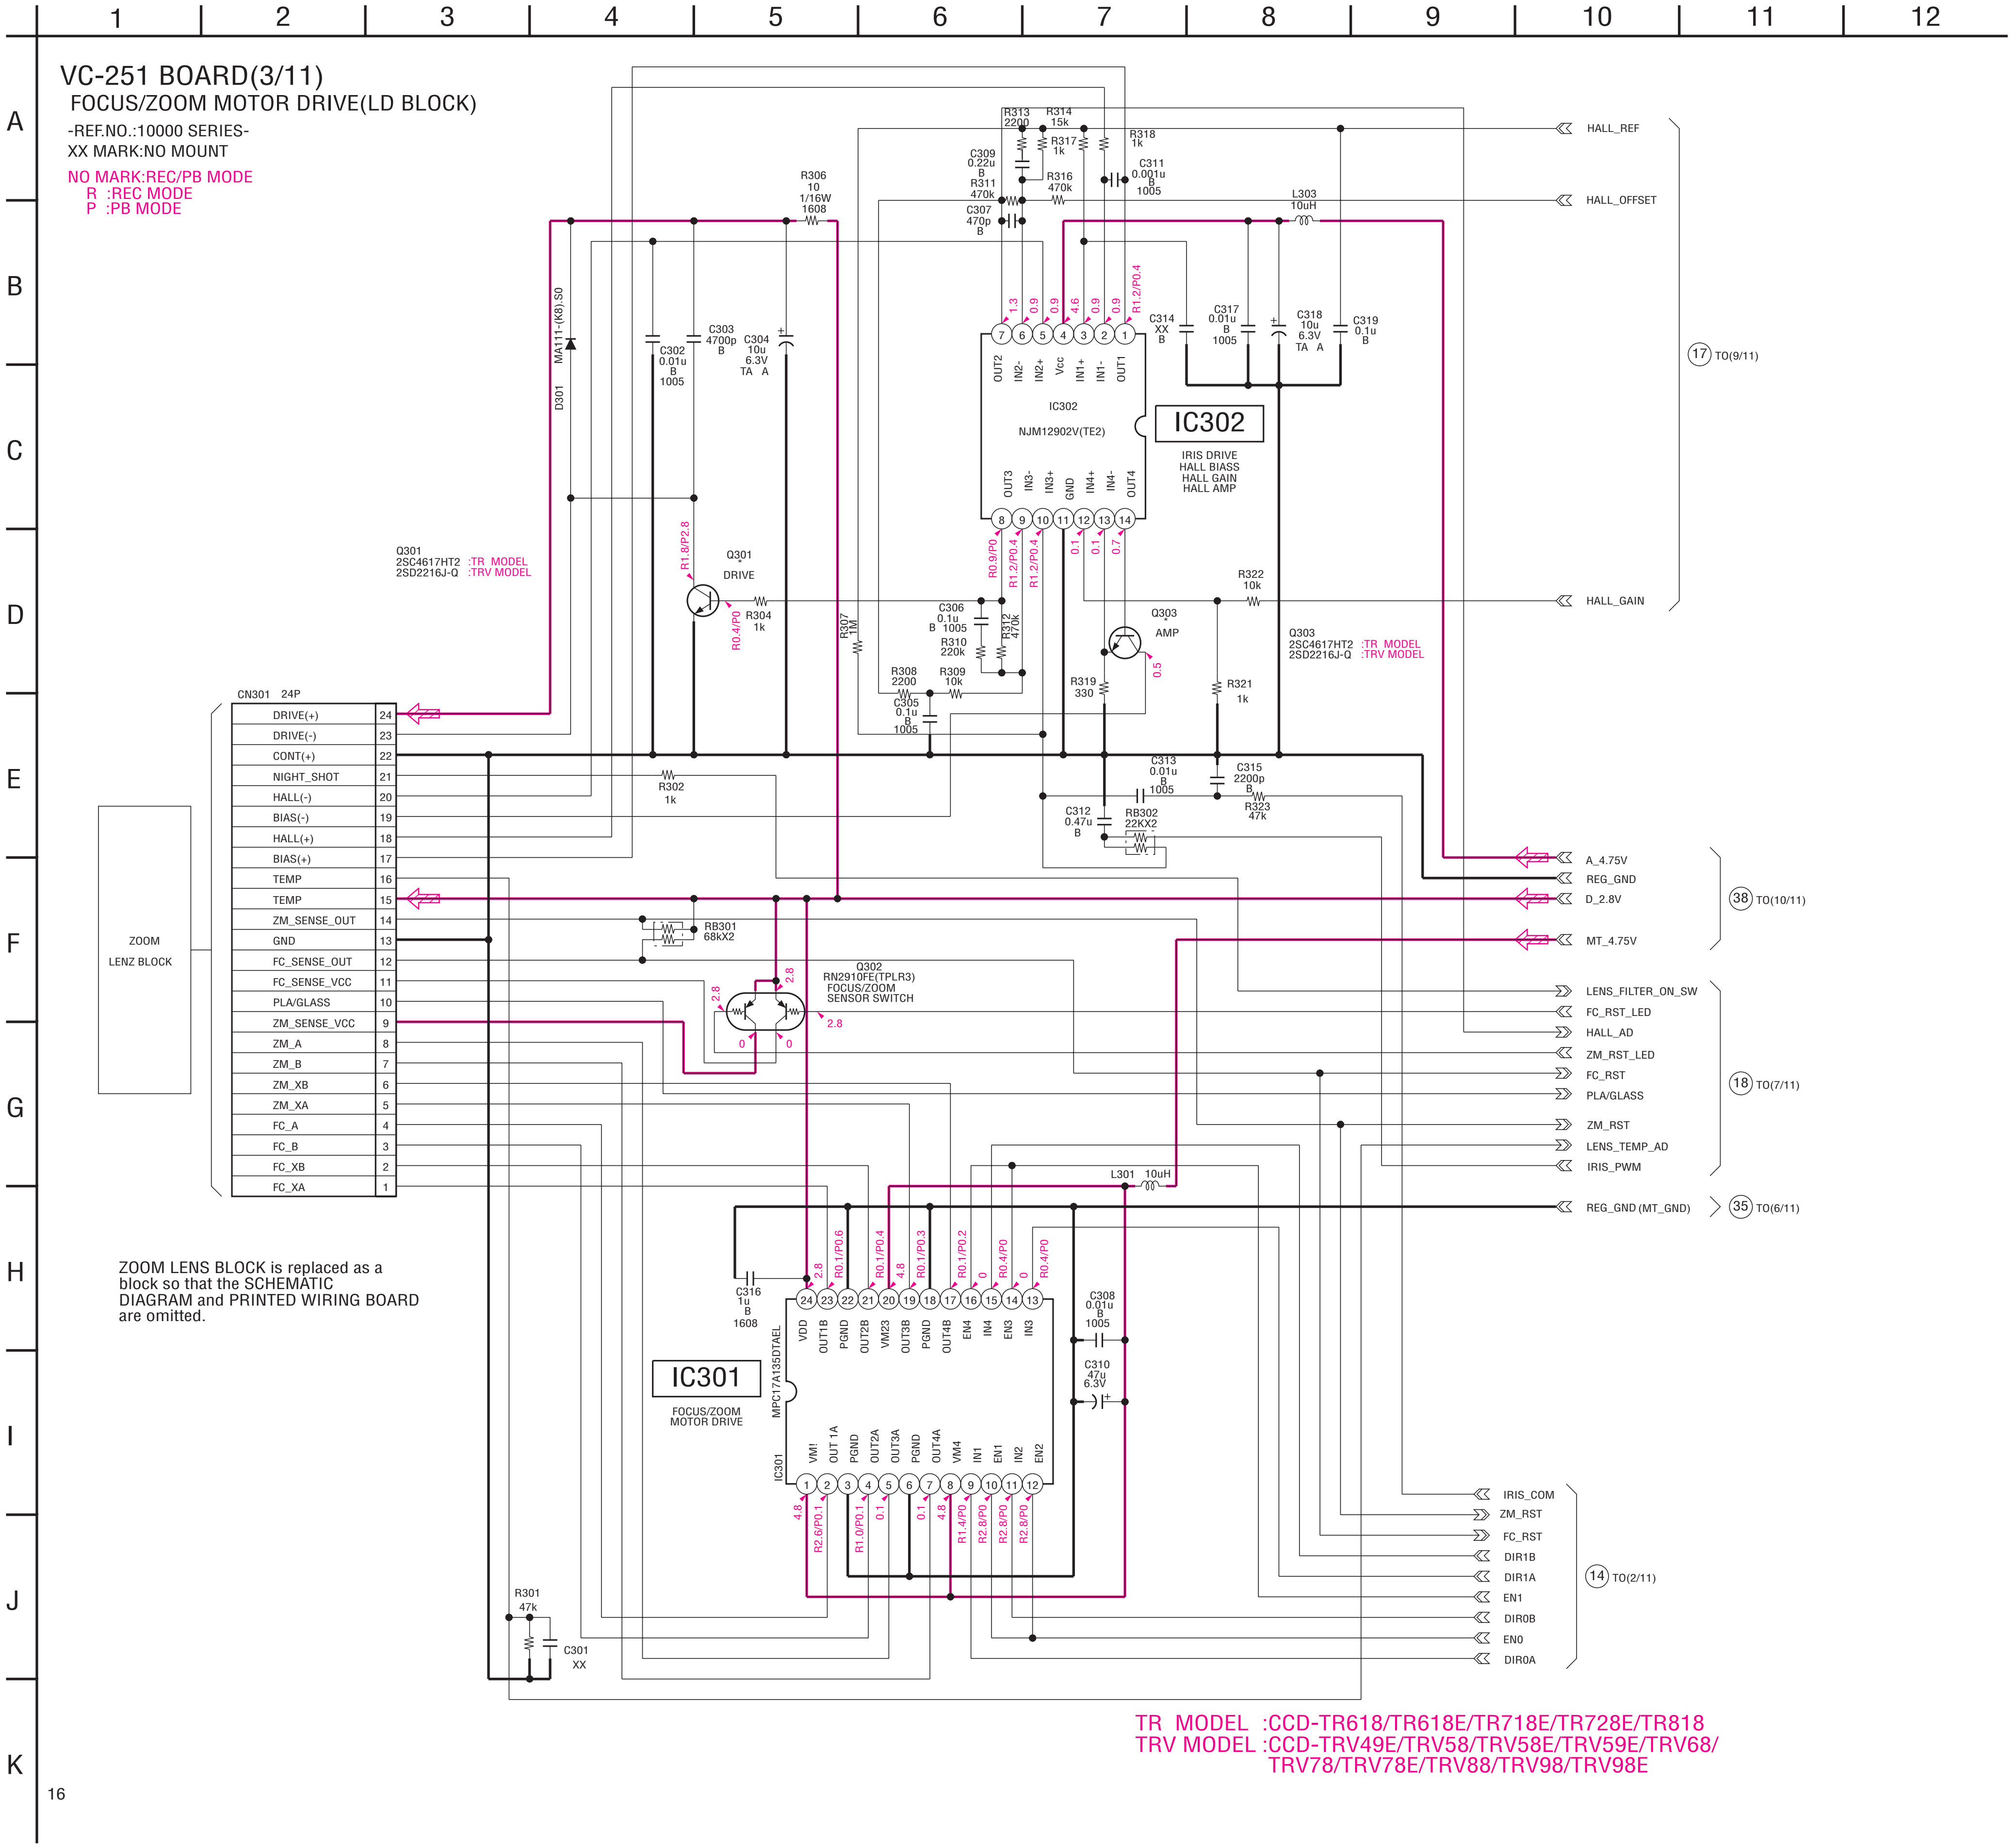
1
2
3
4
5
6
7
8
9
10
11
12
A
B
C
D
E
F
G
H
I
J
K
VC-251 BOARD(3/11)
FOCUS/ZOOM MOTOR DRIVE(LD BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
IC302
NJM12902V(TE2)
IRIS DRIVE
HALL BIASS
HALL GAIN
HALL AMP
OUT2
IN2-
IN2+
Vcc
IN1+
IN1-
OUT1
OUT3
IN3-
IN3+
GND
IN4+
IN4-
OUT4
HALL_REF
HALL_OFFSET
HALL_GAIN
17 TO(9/11)
A_4.75V
REG_GND
D_2.8V
MT_4.75V
38 TO(10/11)
LENS_FILTER_ON_SW
FC_RST_LED
HALL_AD
ZM_RST_LED
FC_RST
PLA/GLASS
ZM_RST
LENS_TEMP_AD
IRIS_PWM
18 TO(7/11)
REG_GND (MT_GND)
35 TO(6/11)
IRIS_COM
ZM_RST
FC_RST
DIR1B
DIR1A
EN1
DIR0B
EN0
DIR0A
14 TO(2/11)
Q301
2SC4617HT2 :TR MODEL
2SD2216J-Q :TRV MODEL
DRIVE
Q303
AMP
2SC4617HT2 :TR MODEL
2SD2216J-Q :TRV MODEL
Q302
RN2910FE(TPLR3)
FOCUS/ZOOM
SENSOR SWITCH
D301
MA111-(K8).SO
CN301 24P
DRIVE(+) 24
DRIVE(-) 23
CONT(+) 22
NIGHT_SHOT 21
HALL(-) 20
BIAS(-) 19
HALL(+) 18
BIAS(+) 17
TEMP 16
TEMP 15
ZM_SENSE_OUT 14
GND 13
FC_SENSE_OUT 12
FC_SENSE_VCC 11
PLA/GLASS 10
ZM_SENSE_VCC 9
ZM_A 8
ZM_B 7
ZM_XB 6
ZM_XA 5
FC_A 4
FC_B 3
FC_XB 2
FC_XA 1
ZOOM
LENZ BLOCK
IC301
FOCUS/ZOOM
MOTOR DRIVE
IC301 MPC17A135DTAEL
VDD
OUT1B
PGND
OUT2B
VM23
OUT3B
PGND
OUT4B
EN4
IN4
EN3
IN3
VM1
OUT 1A
PGND
OUT2A
OUT3A
PGND
OUT4A
VM4
IN1
EN1
IN2
EN2
R301 47k
C301 XX
C302 0.01u B 1005
C303 4700p B
C304 10u 6.3V TA A
R302 1k
R304 1k
R306 10 1/16W 1608
R307 1M
R308 2200
R309 10k
C305 0.1u B 1005
C306 0.1u B 1005
R310 220k
R312 470k
R313 2200
R314 15k
R317 1k
R318 1k
C309 0.22u B
R311 470k
C307 470p B
R316 470k
C311 0.001u B 1005
L303 10uH
C314 XX B
C317 0.01u B 1005
C318 10u 6.3V TA A
C319 0.1u B
R322 10k
R319 330
R321 1k
C313 0.01u B 1005
C315 2200p B
C312 0.47u B
RB302 22KX2
R323 47k
RB301 68kX2
L301 10uH
C316 1u B 1608
C308 0.01u B 1005
C310 47u 6.3V
16

ZOOM LENS BLOCK is replaced as a block so that the SCHEMATIC DIAGRAM and PRINTED WIRING BOARD are omitted.

TR MODEL :CCD-TR618/TR618E/TR718E/TR728E/TR818
TRV MODEL :CCD-TRV49E/TRV58/TRV58E/TRV59E/TRV68/
TRV78/TRV78E/TRV88/TRV98/TRV98E

**For Schematic Diagram**
- Refer to page 4-39 for printed wiring board.
- Refer to page 4-68 for waveforms.

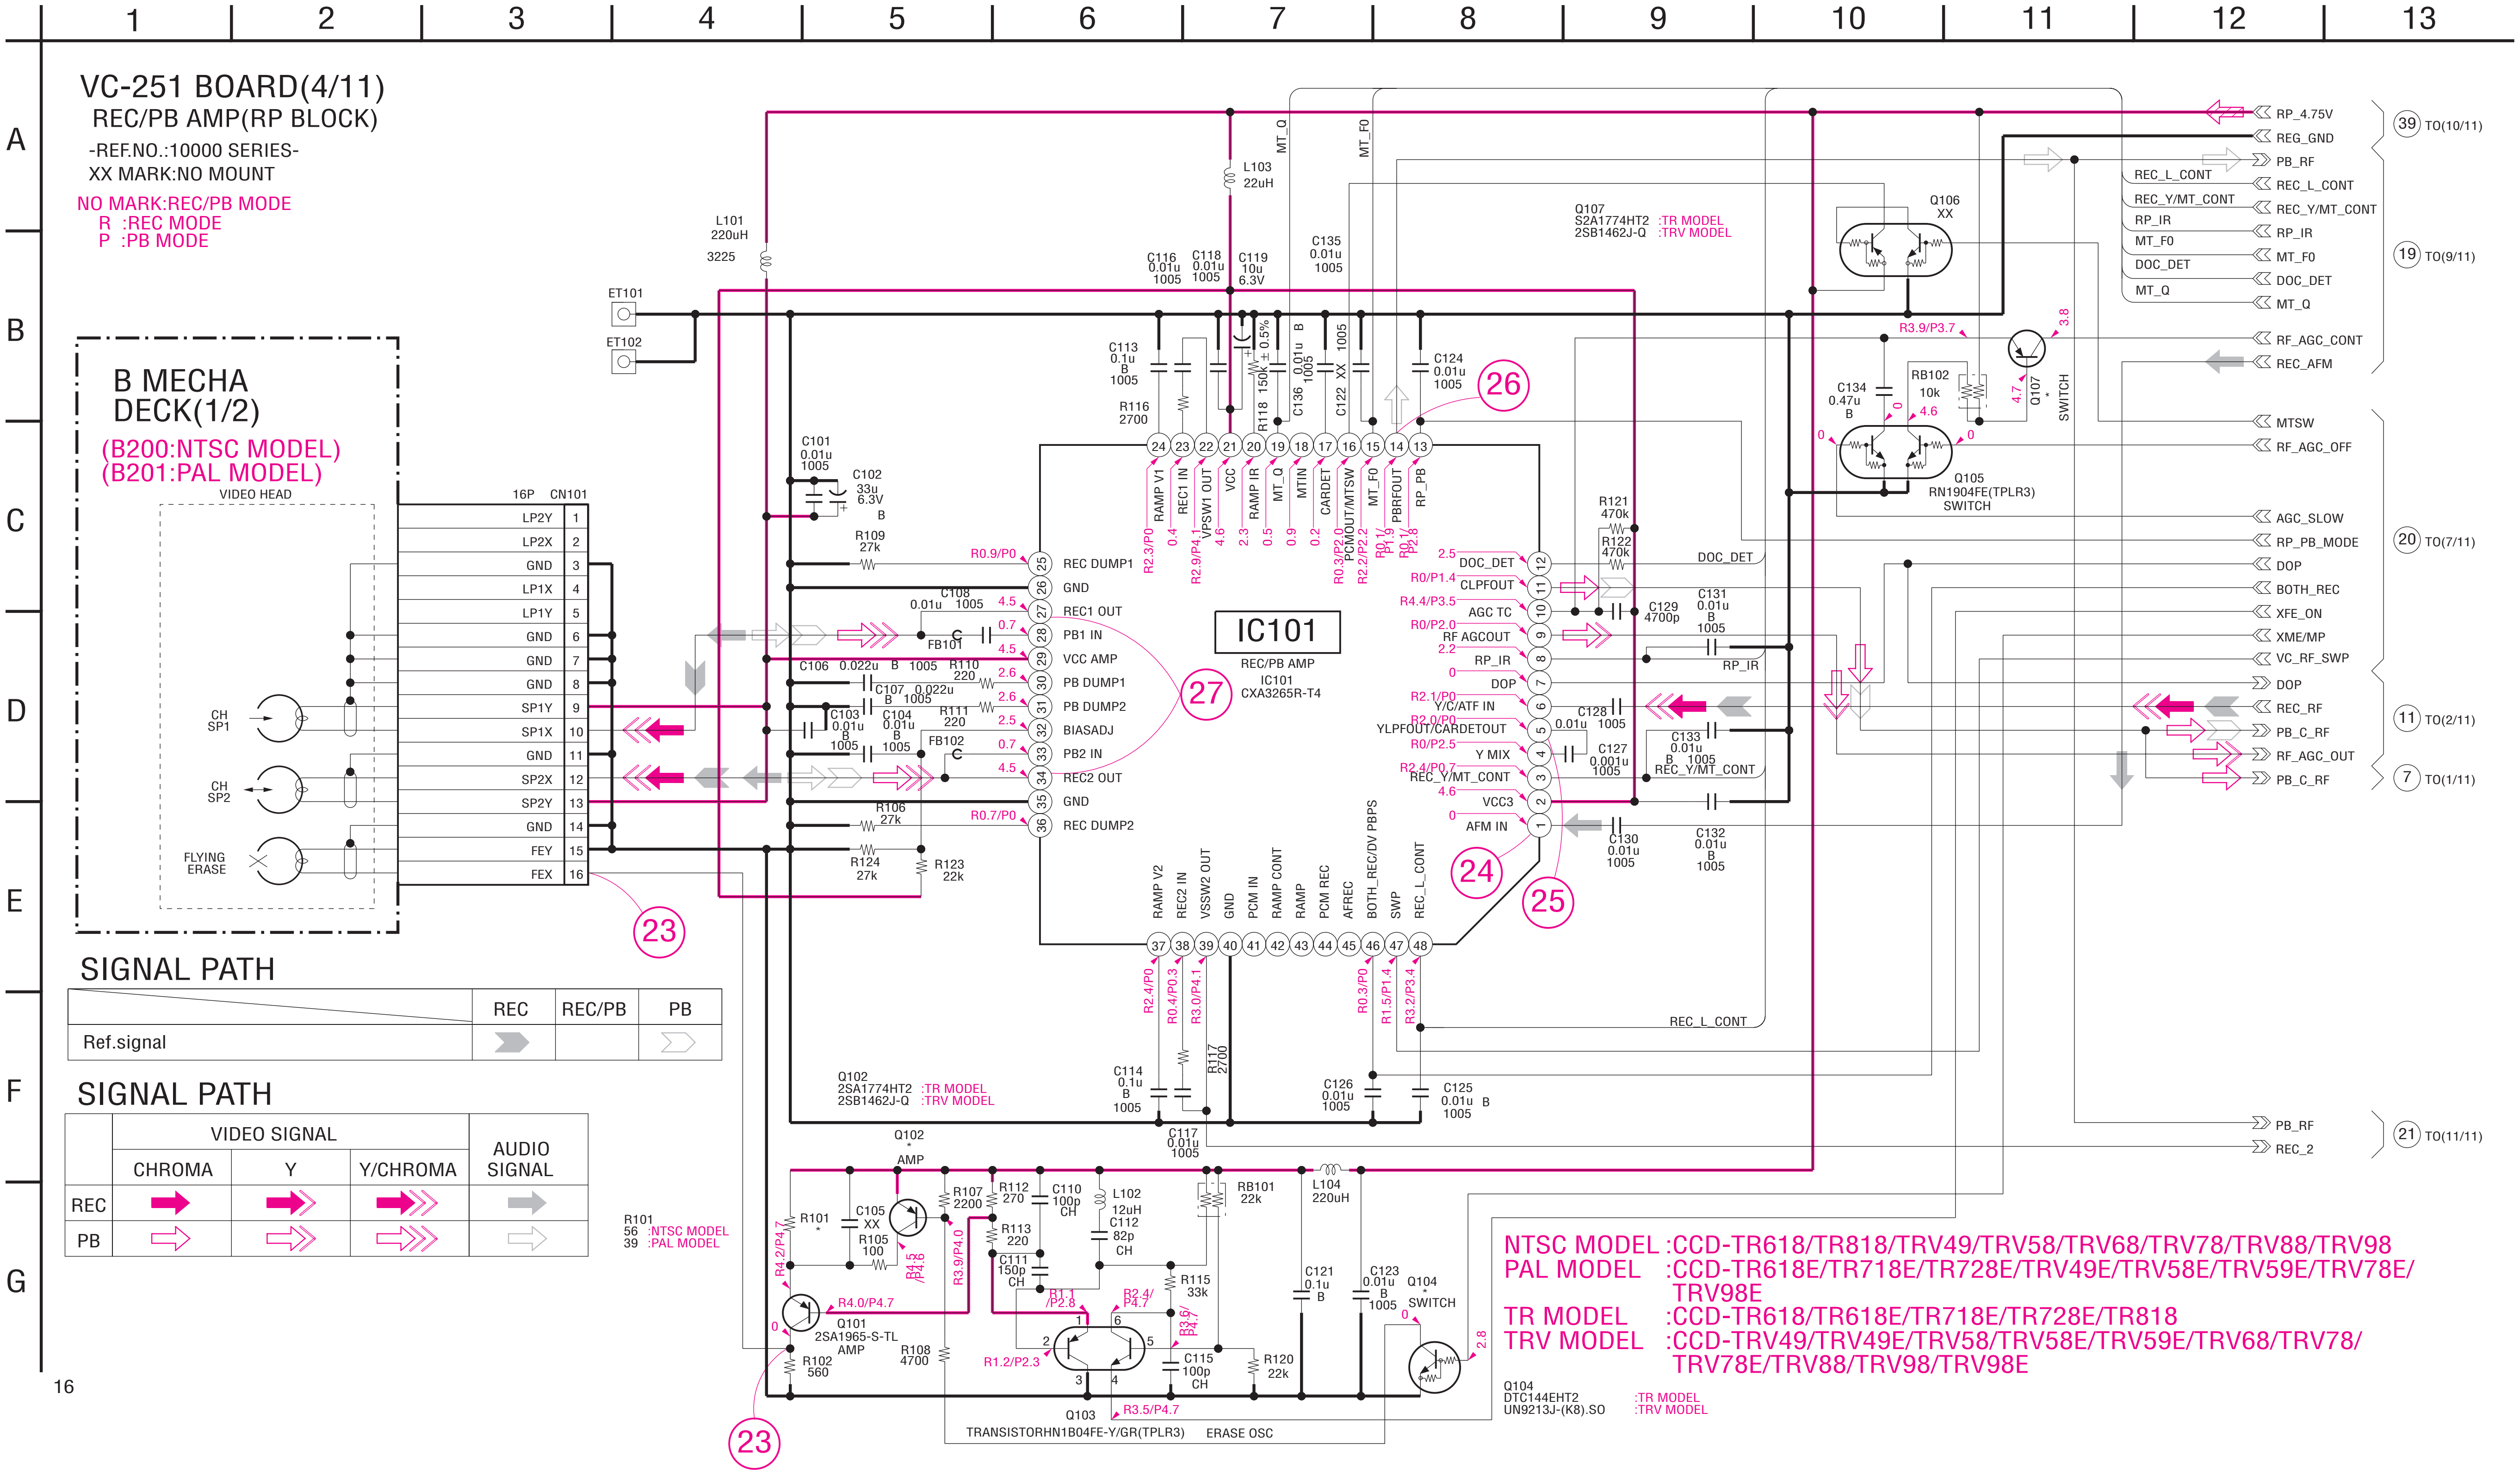
1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
G
VC-251 BOARD(4/11)
REC/PB AMP(RP BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
B MECHA DECK(1/2)
(B200:NTSC MODEL)
(B201:PAL MODEL)
VIDEO HEAD
CH SP1
CH SP2
FLYING ERASE
16P CN101
LP2Y
LP2X
GND
LP1X
LP1Y
SP1Y
SP1X
SP2X
SP2Y
FEY
FEX
ET101
ET102
L101 220uH 3225
L103 22uH
MT_Q
MT_F0
IC101
REC/PB AMP
IC101 CXA3265R-T4
RAMP V1
REC1 IN
VPSW1 OUT
VCC
RAMP IR
MT_Q
MTIN
CARDET
PCMOUT/MTSW
MT_FO
PBRFOUT
RP_PB
REC DUMP1
GND
REC1 OUT
PB1 IN
VCC AMP
PB DUMP1
PB DUMP2
BIASADJ
PB2 IN
REC2 OUT
GND
REC DUMP2
DOC_DET
CLPFOUT
AGC TC
RF AGCOUT
RP_IR
DOP
Y/C/ATF IN
YLPFOUT/CARDETOUT
Y MIX
REC_Y/MT_CONT
VCC3
AFM IN
RAMP V2
REC2 IN
VSSW2 OUT
GND
PCM IN
RAMP CONT
RAMP
PCM REC
AFREC
BOTH_REC/DV PBPS
SWP
REC_L_CONT
Q107 S2A1774HT2 :TR MODEL 2SB1462J-Q :TRV MODEL
Q106 XX
Q105 RN1904FE(TPLR3) SWITCH
Q107 SWITCH
RB102 10k
Q102 2SA1774HT2 :TR MODEL 2SB1462J-Q :TRV MODEL
Q102 AMP
Q101 2SA1965-S-TL AMP
Q103 TRANSISTORHN1B04FE-Y/GR(TPLR3) ERASE OSC
Q104 SWITCH
Q104 DTC144EHT2 :TR MODEL UN9213J-(K8).SO :TRV MODEL
R101 56 :NTSC MODEL 39 :PAL MODEL
L104 220uH
L102 12uH
RB101 22k
RP_4.75V
REG_GND
PB_RF
REC_L_CONT
REC_Y/MT_CONT
RP_IR
MT_F0
DOC_DET
MT_Q
RF_AGC_CONT
REC_AFM
MTSW
RF_AGC_OFF
AGC_SLOW
RP_PB_MODE
DOP
BOTH_REC
XFE_ON
XME/MP
VC_RF_SWP
REC_RF
PB_C_RF
RF_AGC_OUT
REC_2
(39) TO(10/11)
(19) TO(9/11)
(20) TO(7/11)
(11) TO(2/11)
(7) TO(1/11)
(21) TO(11/11)
(23)
(24)
(25)
(26)
(27)
16

## SIGNAL PATH

| | REC | REC/PB | PB |
|---|---|---|---|
| Ref.signal | ➡ | | ⇨ |

## SIGNAL PATH

| | VIDEO SIGNAL | | | AUDIO SIGNAL |
|---|---|---|---|---|
| | CHROMA | Y | Y/CHROMA | |
| REC | ➡ | ➡➡ | ➡➡➡ | ➡ |
| PB | ⇨ | ⇨⇨ | ⇨⇨⇨ | ⇨ |

NTSC MODEL :CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98
PAL MODEL :CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E
TR MODEL :CCD-TR618/TR618E/TR718E/TR728E/TR818
TRV MODEL :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

**For Schematic Diagram**

- Refer to page 4-39 for printed wiring board.
- Refer to pages 4-68,69 for waveforms.

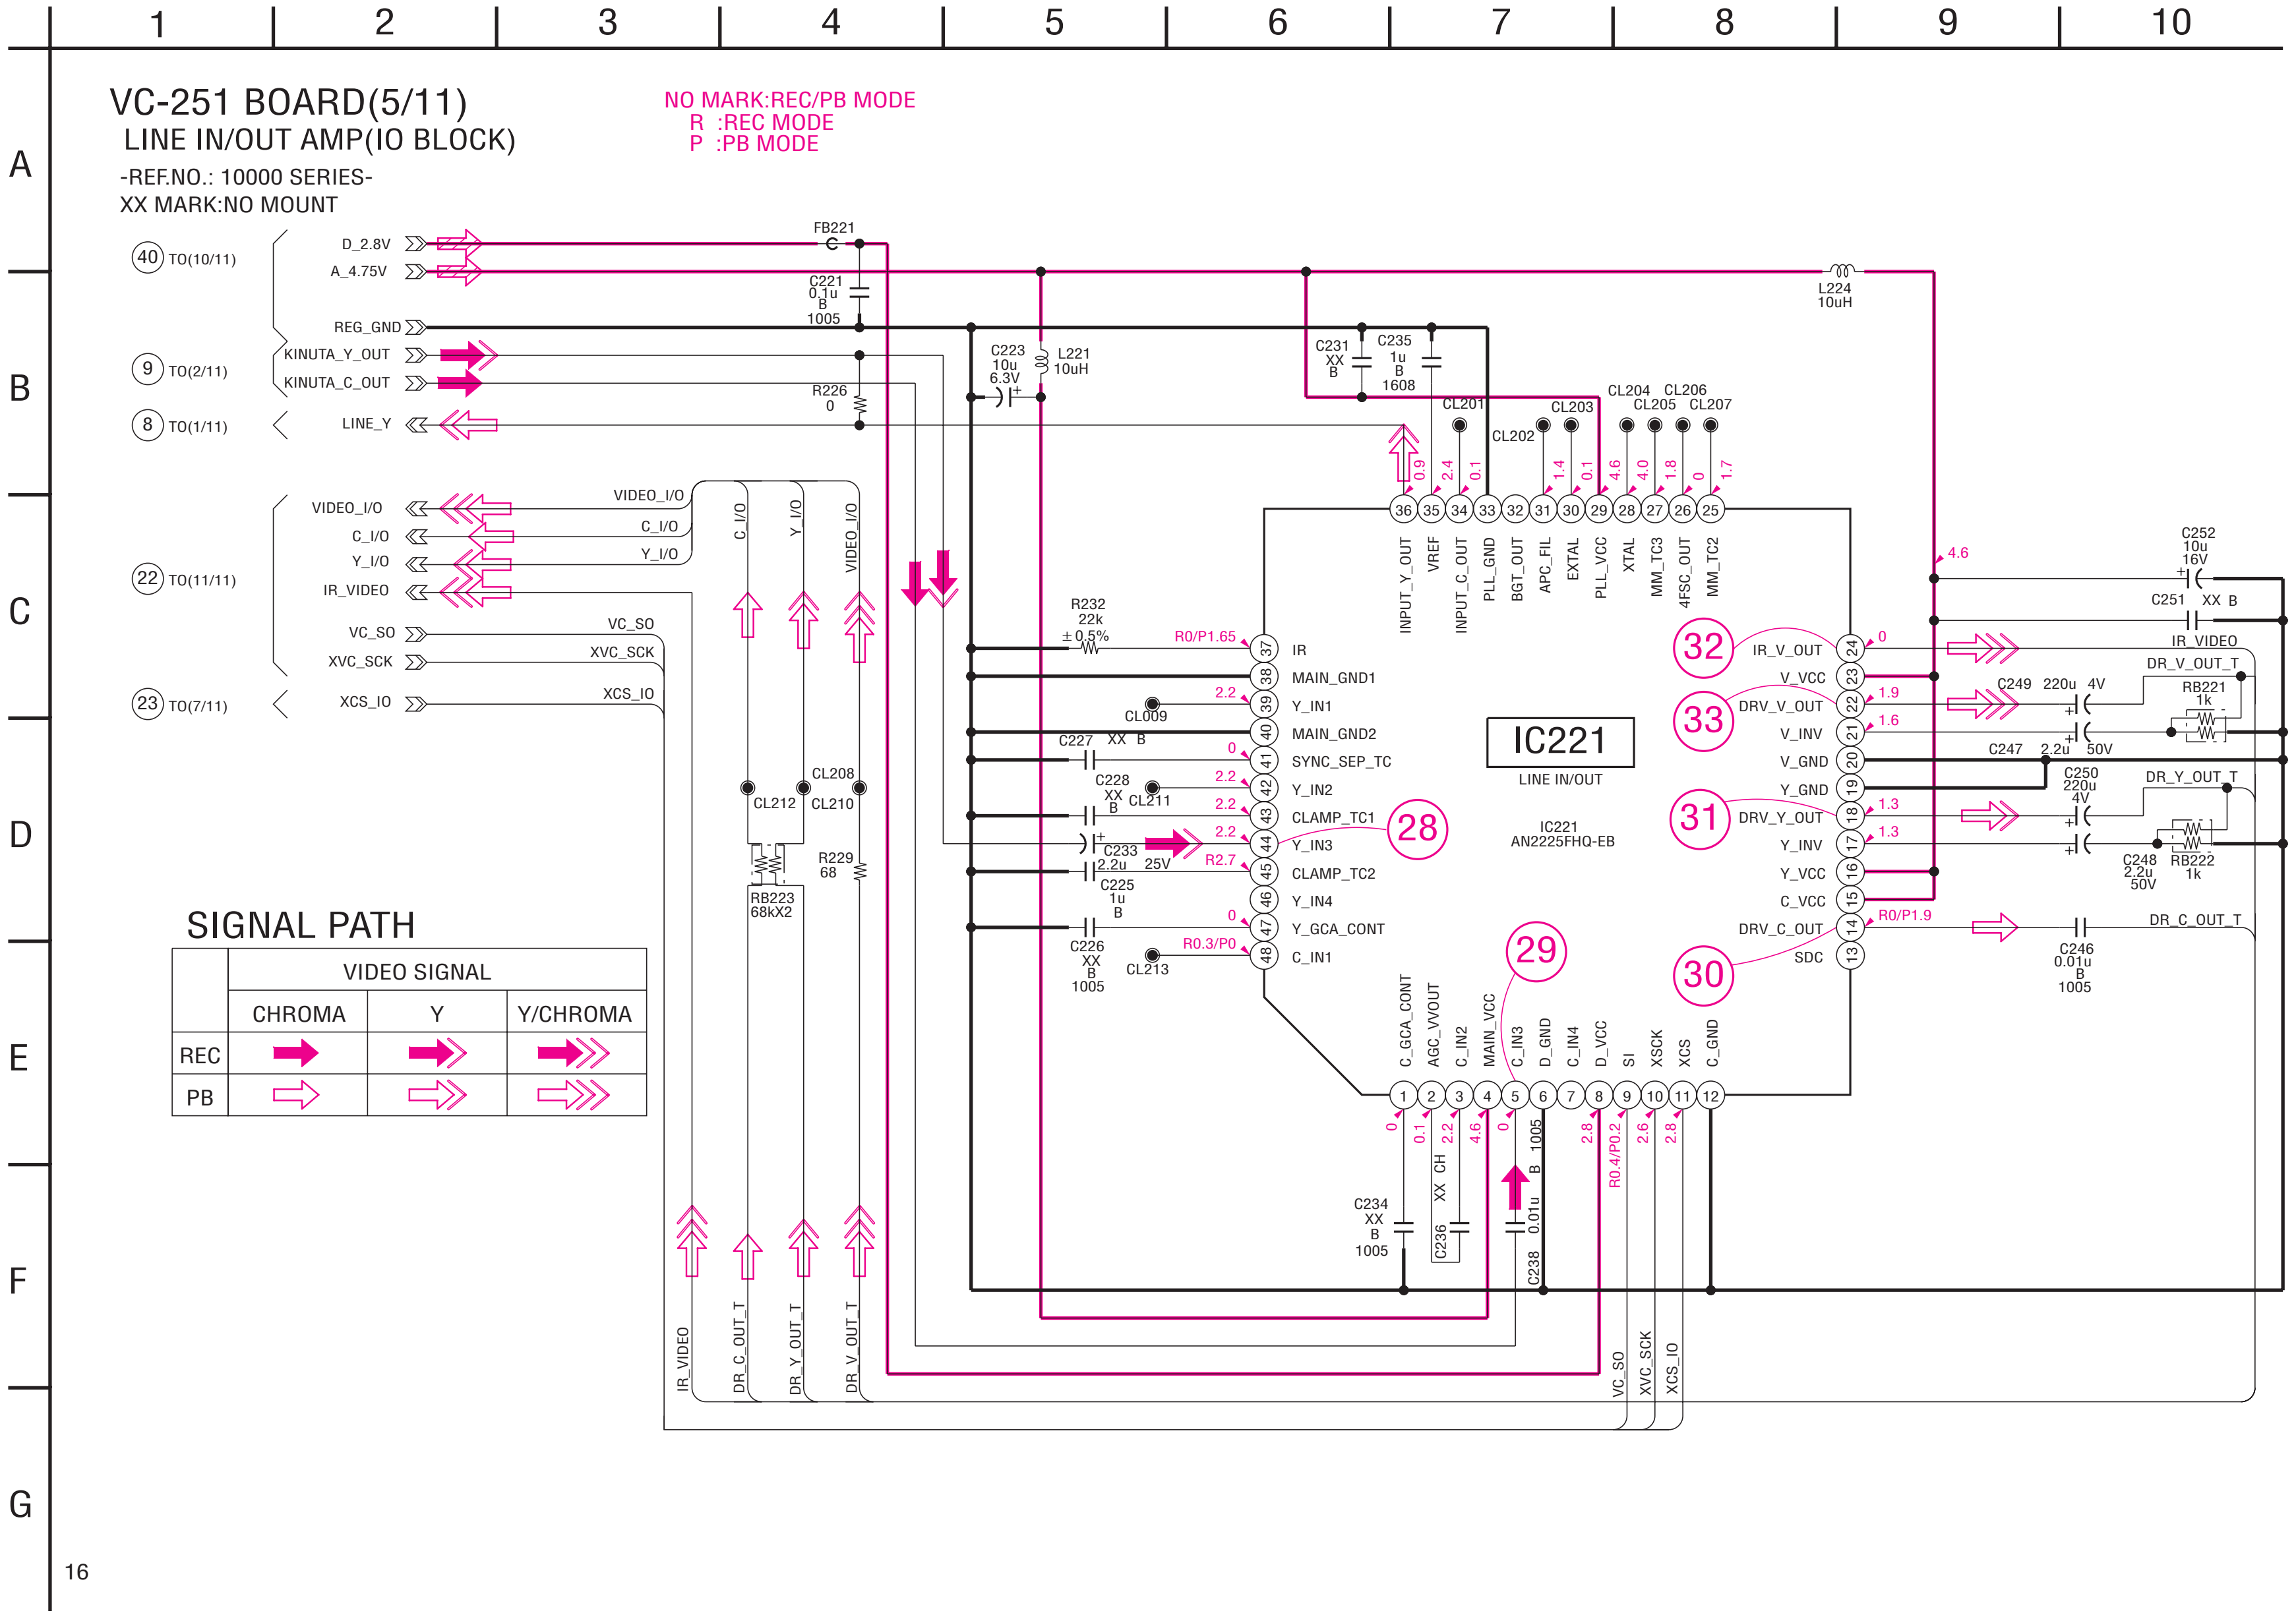
1
2
3
4
5
6
7
8
9
10
A
B
C
D
E
F
G
VC-251 BOARD(5/11)
LINE IN/OUT AMP(IO BLOCK)
-REF.NO.: 10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
(40) TO(10/11)
D_2.8V
A_4.75V
REG_GND
(9) TO(2/11)
KINUTA_Y_OUT
KINUTA_C_OUT
(8) TO(1/11)
LINE_Y
VIDEO_I/O
C_I/O
Y_I/O
(22) TO(11/11)
IR_VIDEO
VC_SO
XVC_SCK
(23) TO(7/11)
XCS_IO
FB221
C221 0.1u B 1005
R226 0
C223 10u 6.3V
L221 10uH
C231 XX B
C235 1u B 1608
L224 10uH
CL201
CL202
CL203
CL204
CL205
CL206
CL207
C252 10u 16V
C251 XX B
R232 22k ±0.5%
CL009
C227 XX B
C228 XX B
CL211
C233 2.2u 25V
C225 1u B
C226 XX B 1005
CL213
CL208
CL210
CL212
R229 68
RB223 68KX2
IC221
LINE IN/OUT
IC221 AN2225FHQ-EB
INPUT_Y_OUT
VREF
INPUT_C_OUT
PLL_GND
BGT_OUT
APC_FIL
EXTAL
PLL_VCC
XTAL
MM_TC3
4FSC_OUT
MM_TC2
IR
MAIN_GND1
Y_IN1
MAIN_GND2
SYNC_SEP_TC
Y_IN2
CLAMP_TC1
Y_IN3
CLAMP_TC2
Y_IN4
Y_GCA_CONT
C_IN1
IR_V_OUT
V_VCC
DRV_V_OUT
V_INV
V_GND
Y_GND
DRV_Y_OUT
Y_INV
Y_VCC
C_VCC
DRV_C_OUT
SDC
C_GCA_CONT
AGC_VVOUT
C_IN2
MAIN_VCC
C_IN3
D_GND
C_IN4
D_VCC
SI
XSCK
XCS
C_GND
(28)
(29)
(30)
(31)
(32)
(33)
R0/P1.65
R0/P1.9
R0.3/P0
R2.7
R0.4/P0.2
C249 220u 4V
C247 2.2u 50V
C250 220u 4V
C248 2.2u 50V
RB221 1k
RB222 1k
C246 0.01u B 1005
IR_VIDEO
DR_V_OUT_T
DR_Y_OUT_T
DR_C_OUT_T
C234 XX B 1005
C236 XX CH
C238 0.01u B 1005
DR_C_OUT_T
DR_Y_OUT_T
DR_V_OUT_T
VC_SO
XVC_SCK
XCS_IO
16
SIGNAL PATH
VIDEO SIGNAL
CHROMA
Y
Y/CHROMA
REC
PB

## FP-249 (S/T REEL SENSOR, TAPE TOP), FP-356 (TAPE END), FP-355 (TAPE LED) FLEXIBLE BOARD

— Ref. No. FP-249, 356, 355 Flexible board; 5,000 series —

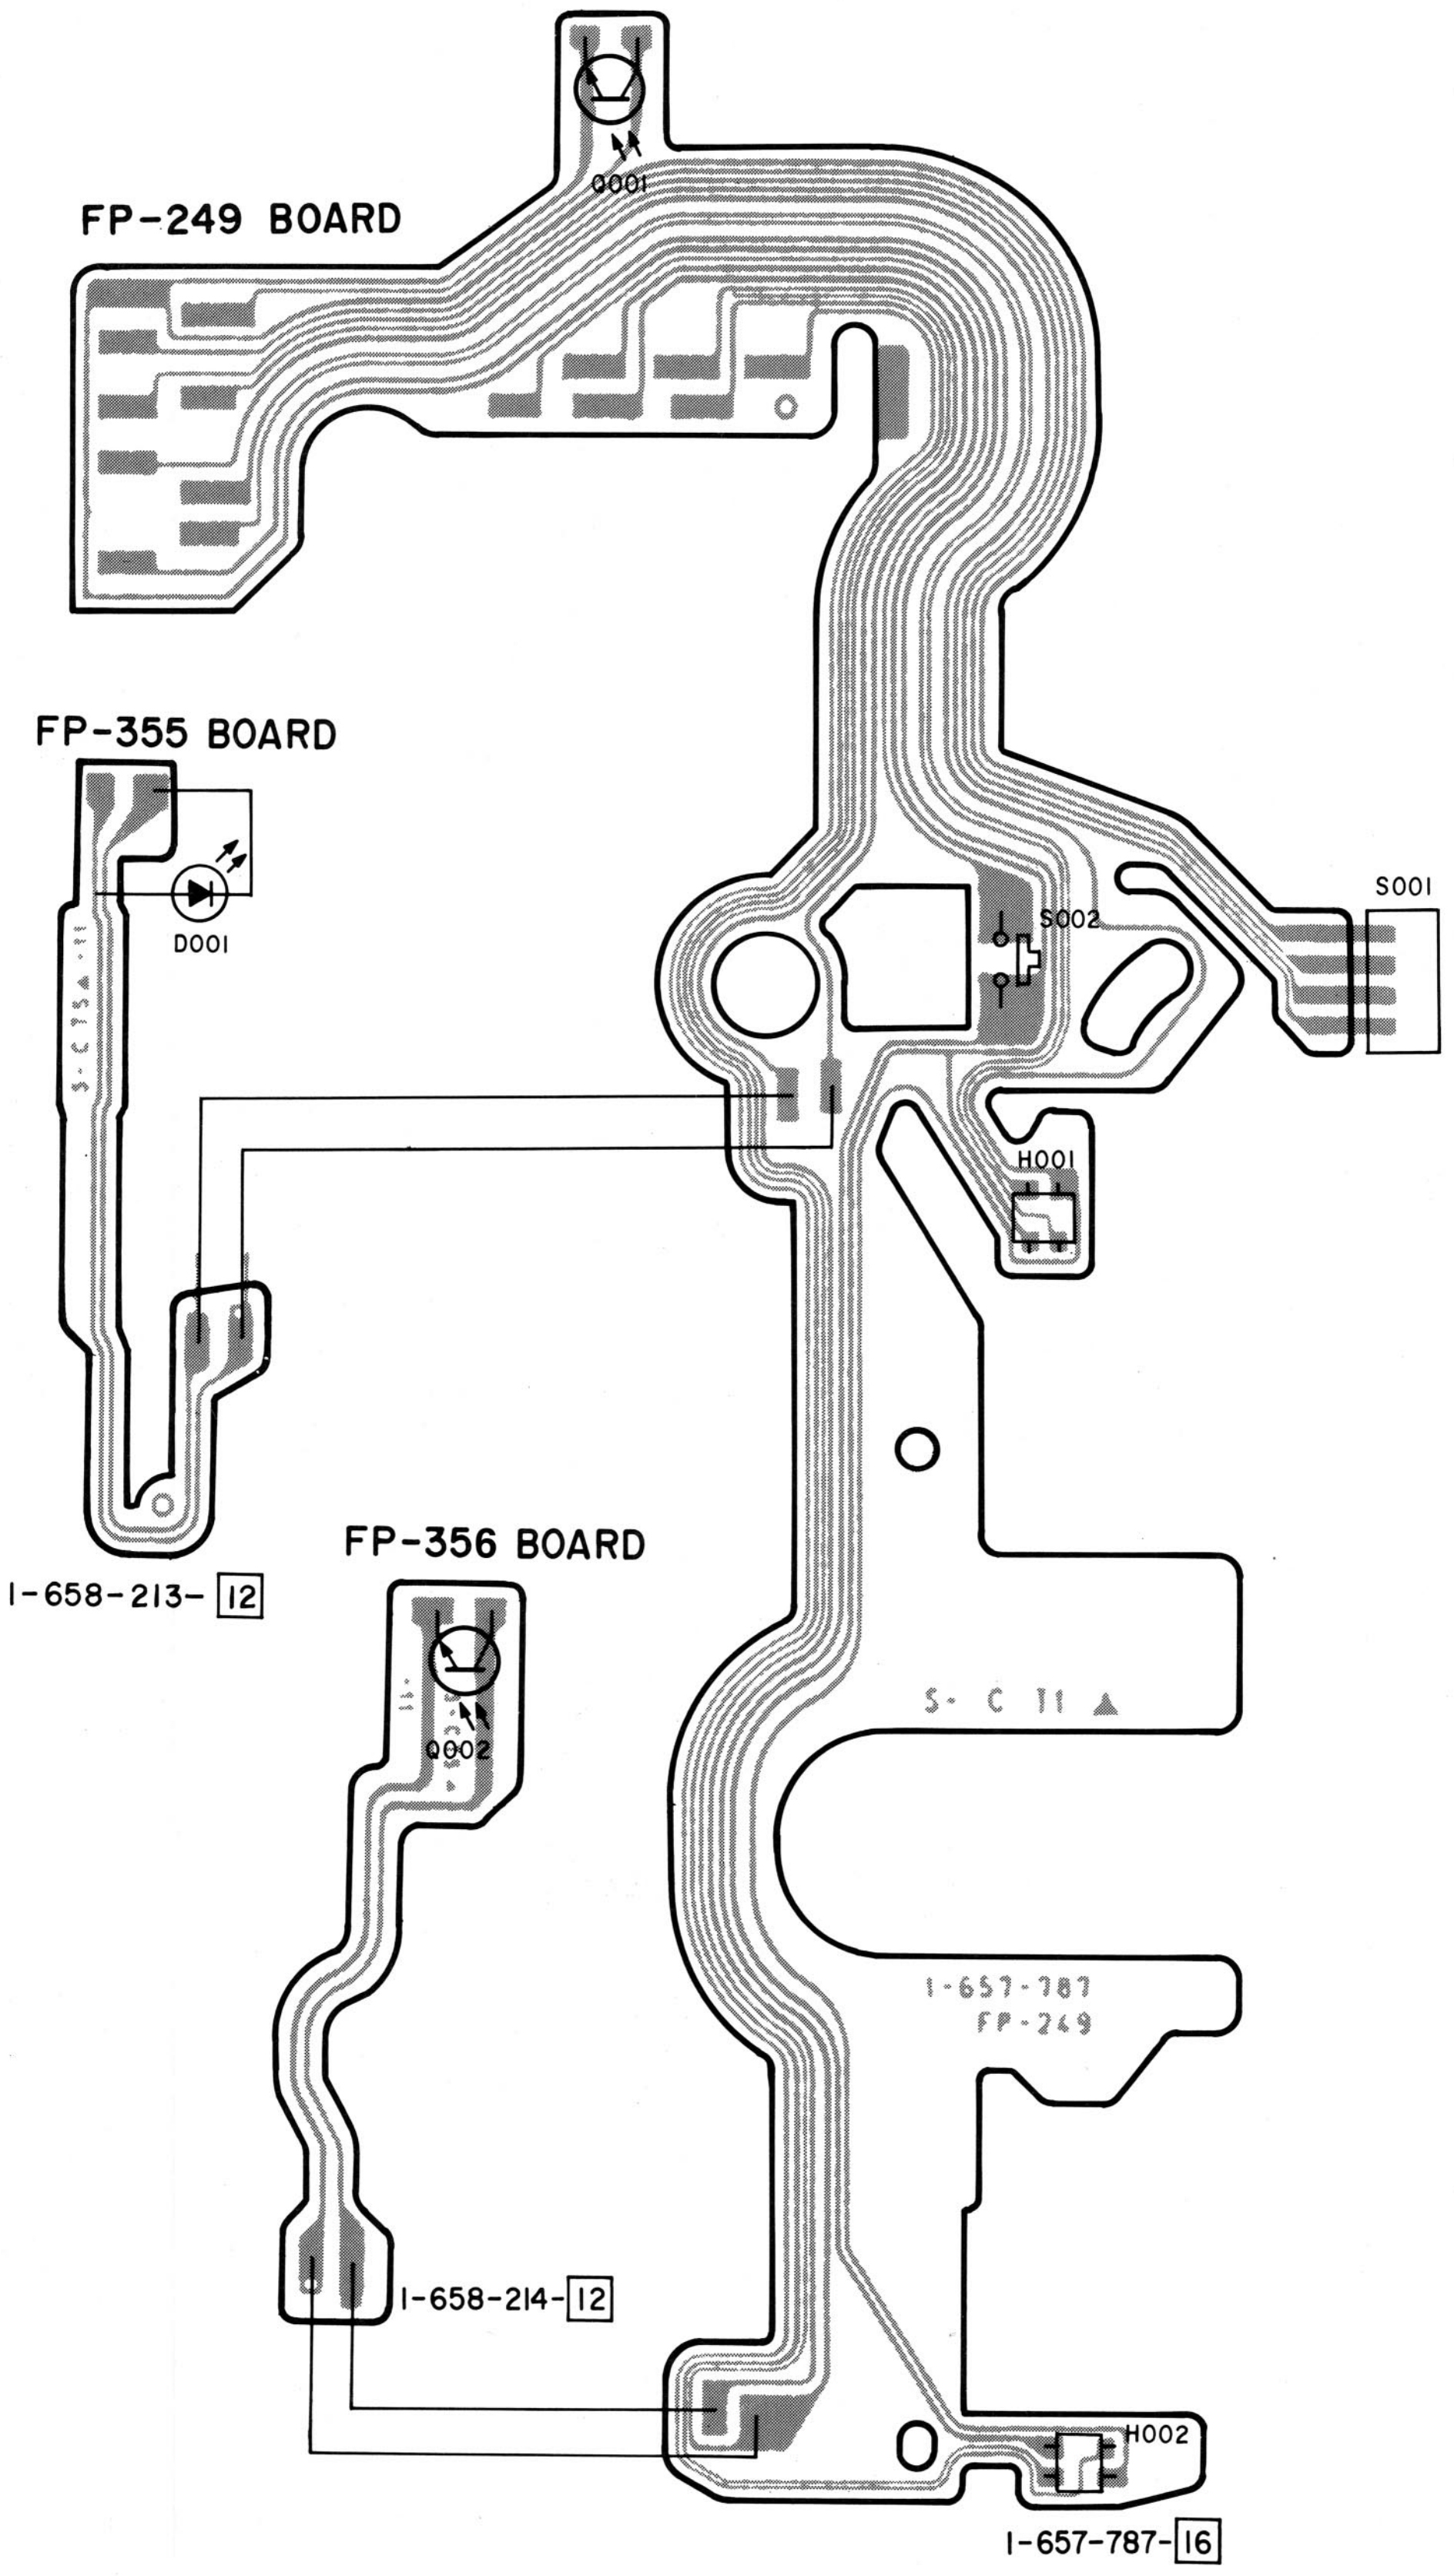
FP-249 BOARD
Q001
FP-355 BOARD
D001
S002
S001
H001
1-658-213-12
FP-356 BOARD
Q002
S- C 11
1-657-787
FP-249
1-658-214-12
H002
1-657-787-16

**For Schematic Diagram**

- Refer to page 4-39 for printed wiring board.
- Refer to page 4-69 for waveforms.

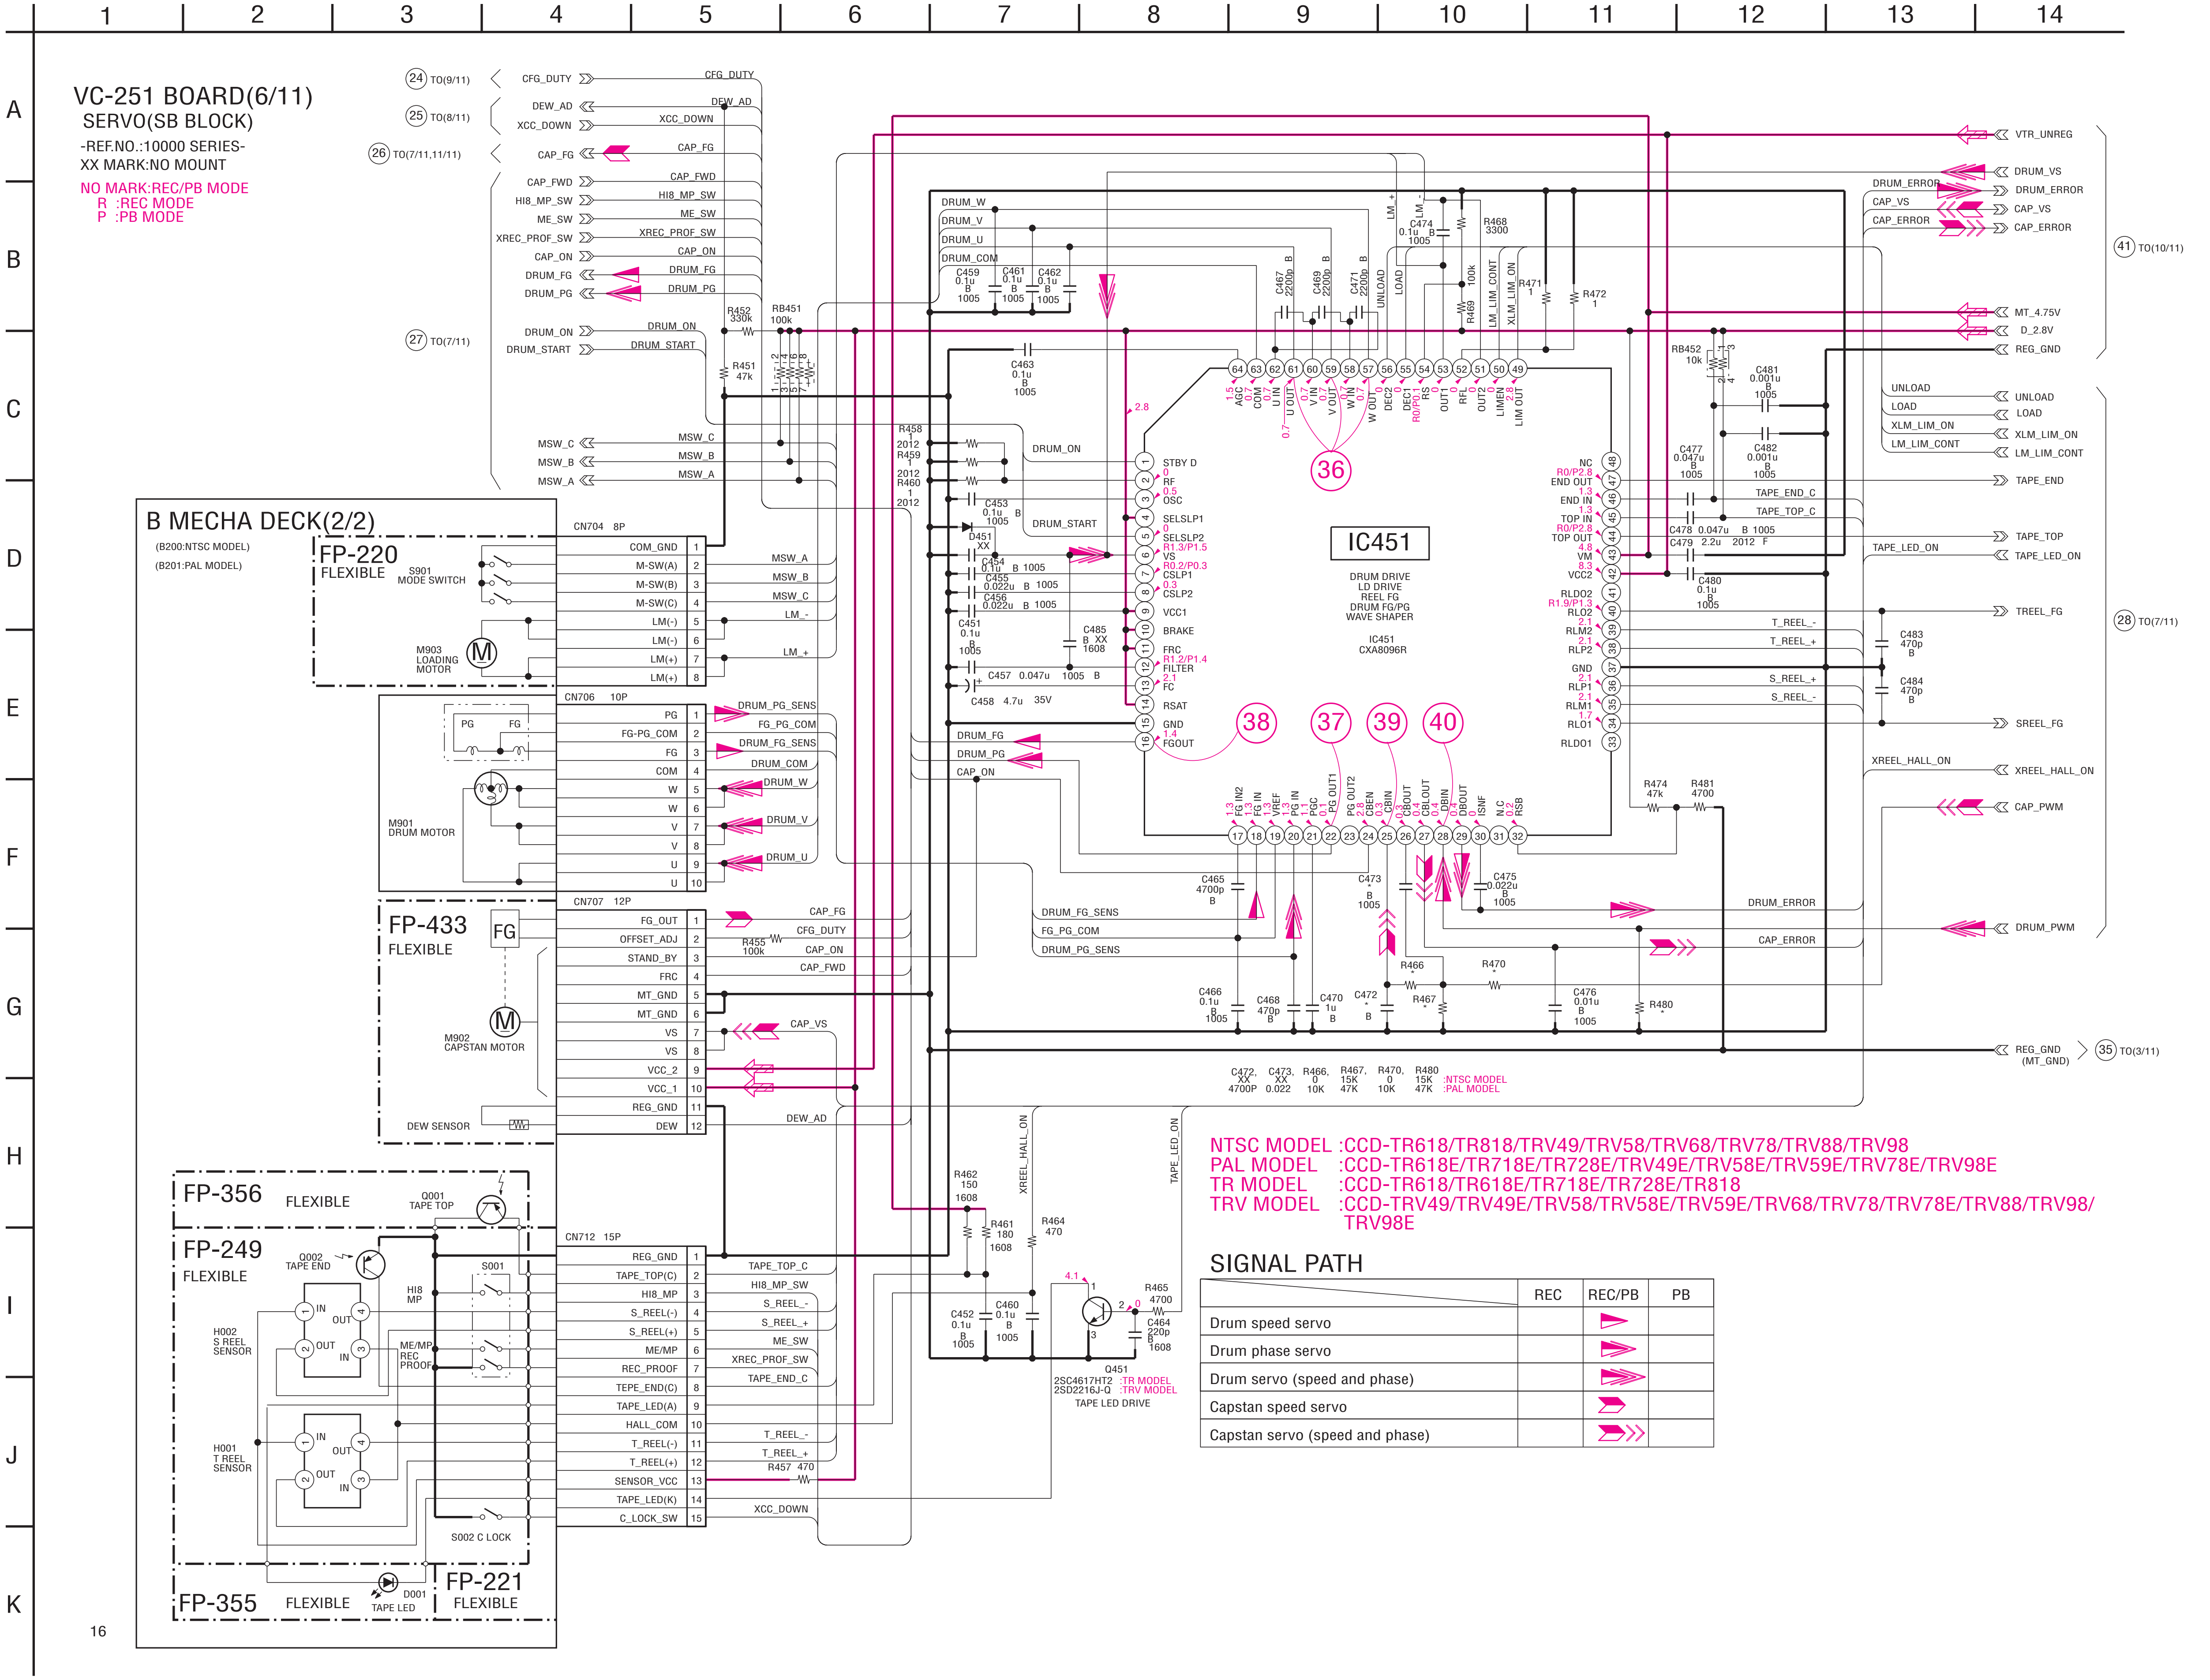
VC-251 BOARD(6/11)
SERVO(SB BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
B MECHA DECK(2/2)
(B200:NTSC MODEL)
(B201:PAL MODEL)
FP-220 FLEXIBLE
S901 MODE SWITCH
M903 LOADING MOTOR
M901 DRUM MOTOR
FP-433 FLEXIBLE
M902 CAPSTAN MOTOR
DEW SENSOR
FP-356 FLEXIBLE
Q001 TAPE TOP
FP-249 FLEXIBLE
Q002 TAPE END
H002 S REEL SENSOR
H001 T REEL SENSOR
S001
S002 C LOCK
FP-355 FLEXIBLE
D001 TAPE LED
FP-221 FLEXIBLE
CN704 8P
CN706 10P
CN707 12P
CN712 15P
IC451
DRUM DRIVE
LD DRIVE
REEL FG
DRUM FG/PG
WAVE SHAPER
IC451 CXA8096R
Q451 2SC4617HT2 :TR MODEL 2SD2216J-Q :TRV MODEL TAPE LED DRIVE
TO(9/11)
TO(8/11)
TO(7/11,11/11)
TO(7/11)
TO(10/11)
TO(3/11)
VTR_UNREG
DRUM_VS
DRUM_ERROR
CAP_VS
CAP_ERROR
MT_4.75V
D_2.8V
REG_GND
UNLOAD
LOAD
XLM_LIM_ON
LM_LIM_CONT
TAPE_END
TAPE_TOP
TAPE_LED_ON
TREEL_FG
SREEL_FG
XREEL_HALL_ON
CAP_PWM
DRUM_PWM
REG_GND (MT_GND)
C472, XX 4700P; C473, XX 0.022; R466, 0 10K; R467, 15K 47K; R470, 0 10K; R480 15K 47K; :NTSC MODEL :PAL MODEL
16

NTSC MODEL :CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98
PAL MODEL :CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E
TR MODEL :CCD-TR618/TR618E/TR718E/TR728E/TR818
TRV MODEL :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

## SIGNAL PATH

| | REC | REC/PB | PB |
|---|---|---|---|
| Drum speed servo | | ▷ | |
| Drum phase servo | | ▶ | |
| Drum servo (speed and phase) | | ▷▷ | |
| Capstan speed servo | | ➡ | |
| Capstan servo (speed and phase) | | ➡≫ | |

**For Schematic Diagram**
- Refer to page 4-39 for printed wiring board.
- Refer to page 4-69 for waveforms.

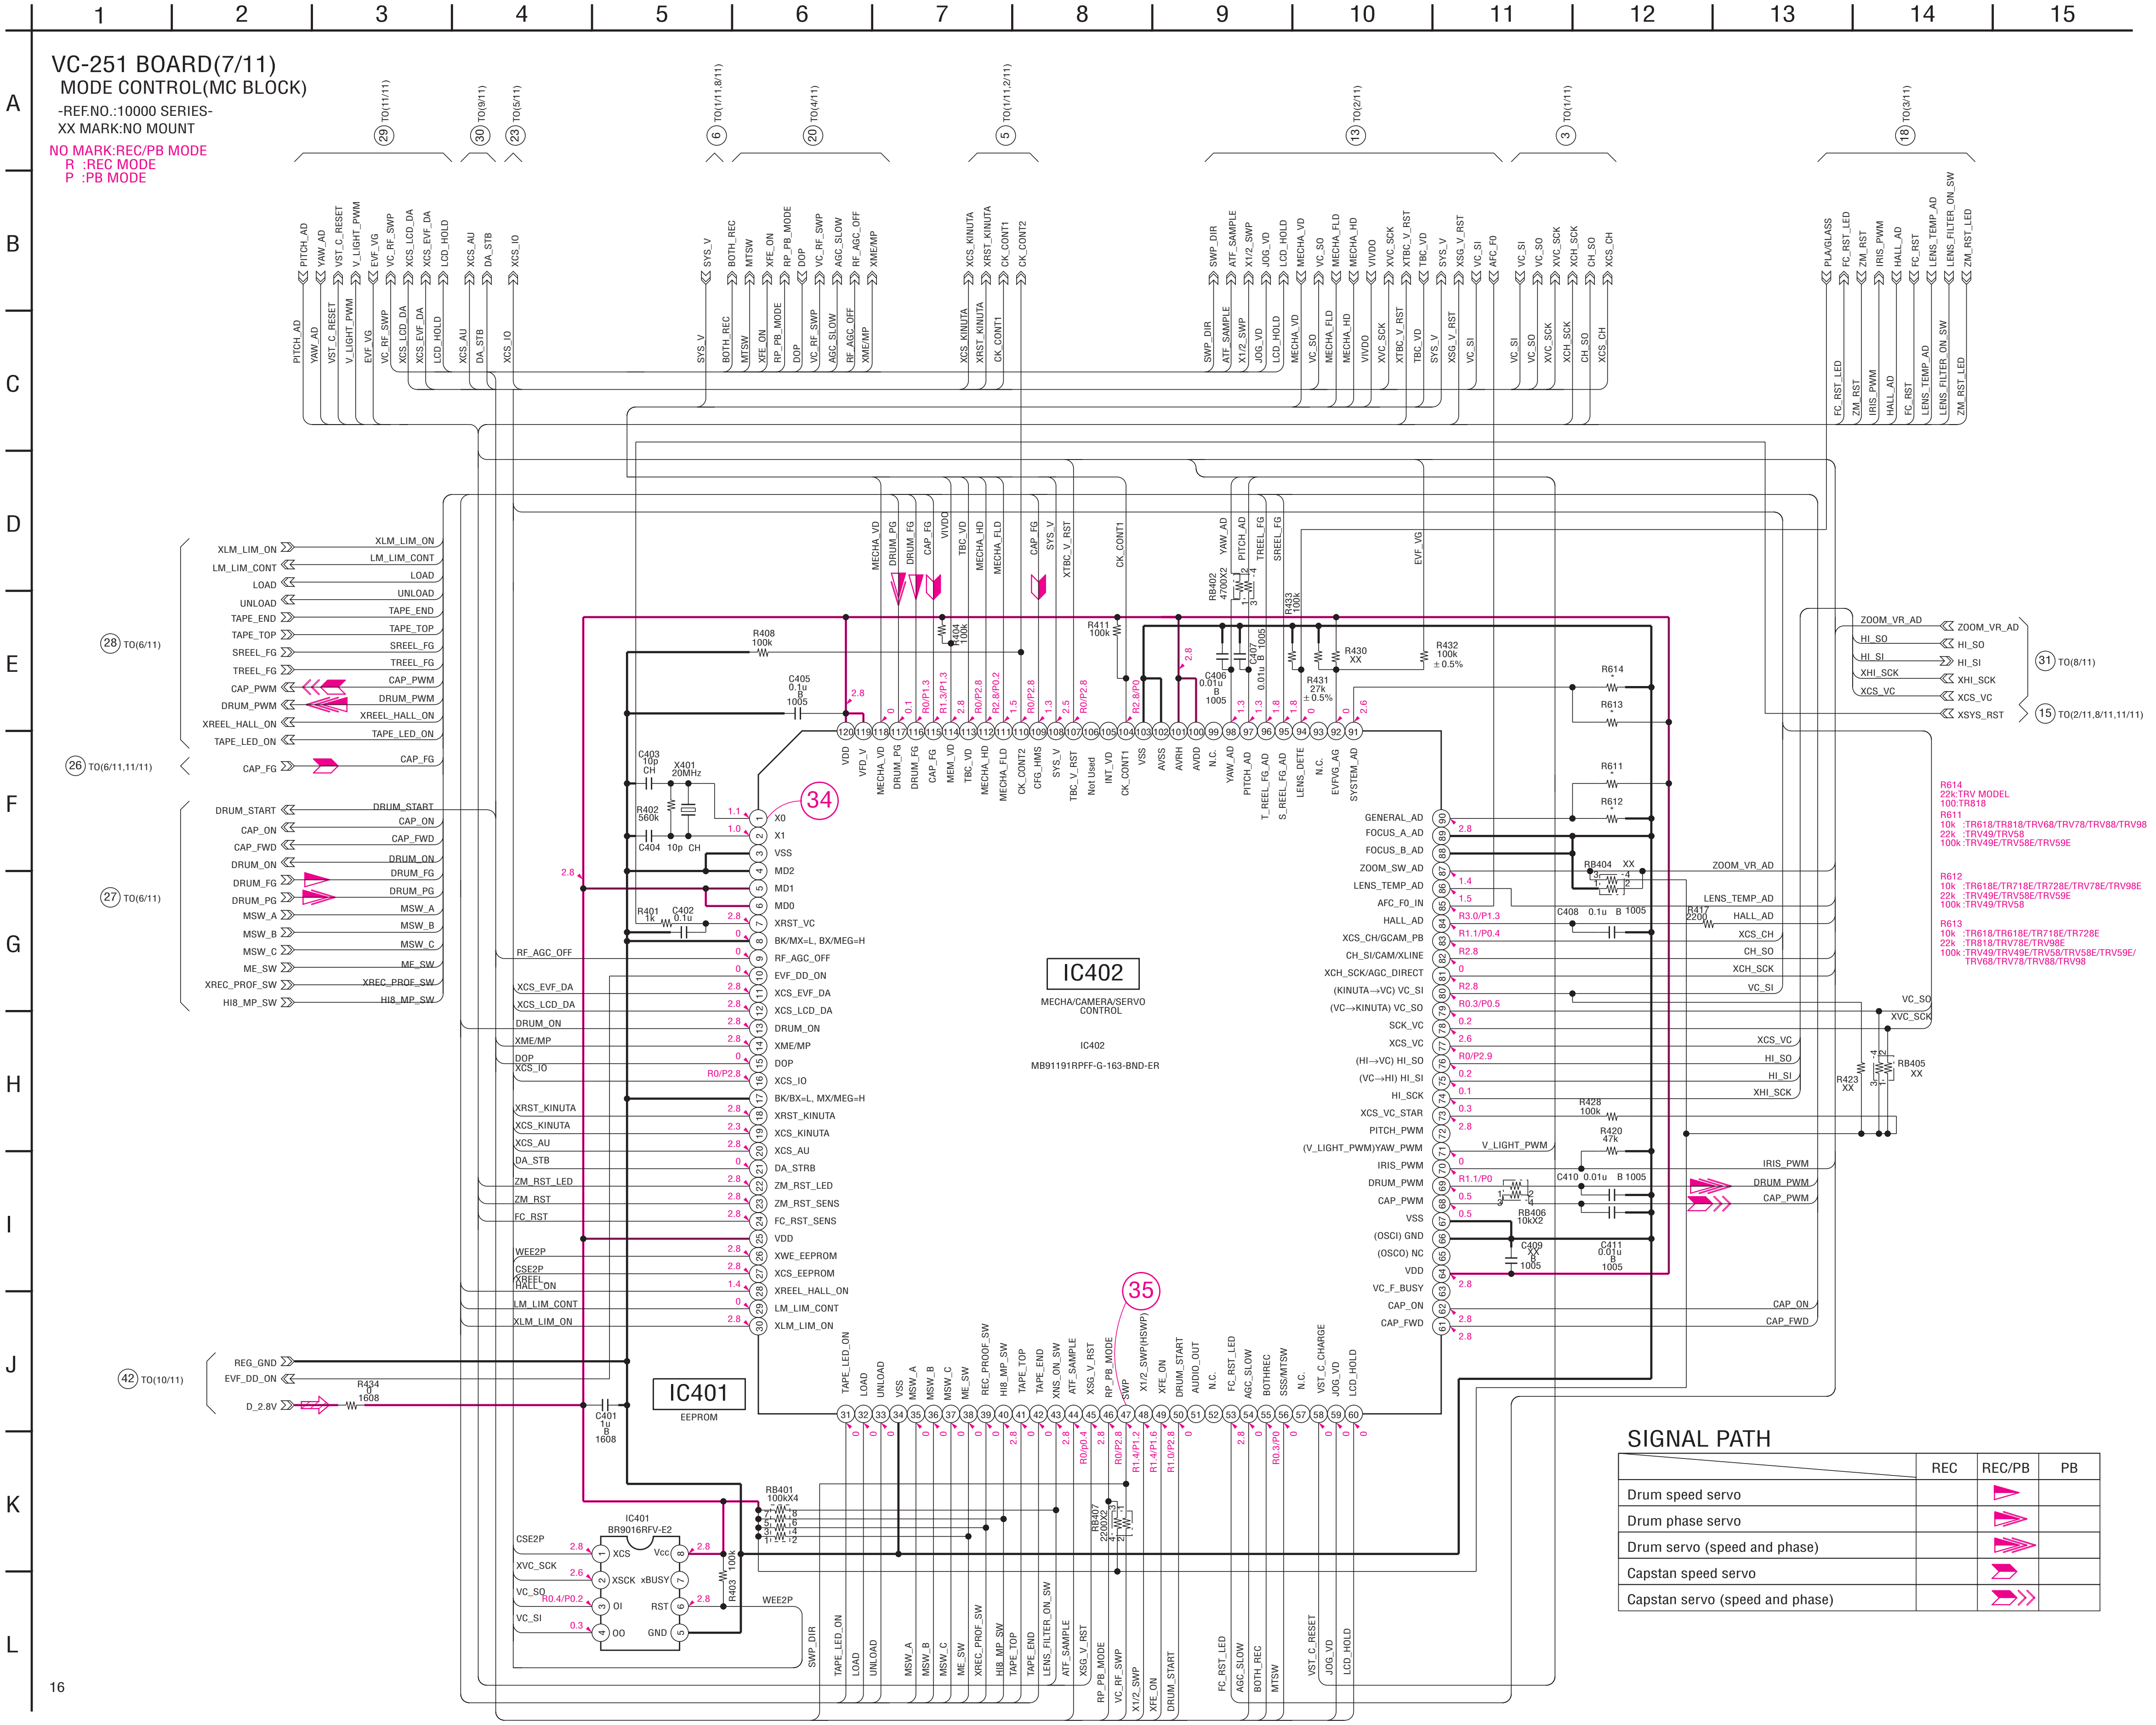
VC-251 BOARD(7/11)
MODE CONTROL(MC BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
IC402
MECHA/CAMERA/SERVO CONTROL
MB91191RPFF-G-163-BND-ER
IC401
EEPROM
BR9016RFV-E2
X401 20MHz
34
35
TO(1/11)
TO(3/11)
TO(2/11)
TO(4/11)
TO(5/11)
TO(6/11)
TO(8/11)
TO(9/11)
TO(10/11)
TO(2/11,8/11,11/11)
TO(6/11,11/11)
R614
22k:TRV MODEL
100:TR818
R611
10k :TR618/TR818/TRV68/TRV78/TRV88/TRV98
22k :TRV49/TRV58
100k :TRV49E/TRV58E/TRV59E
R612
10k :TR618E/TR718E/TR728E/TRV78E/TRV98E
22k :TRV49E/TRV58E/TRV59E
100k :TRV49/TRV58
R613
10k :TR618/TR618E/TR718E/TR728E
22k :TR818/TRV78E/TRV98E
100k :TRV49/TRV49E/TRV58/TRV58E/TRV59E/
TRV68/TRV78/TRV88/TRV98
16

## SIGNAL PATH

| | REC | REC/PB | PB |
|---|---|---|---|
| Drum speed servo | | ▶ | |
| Drum phase servo | | ▶> | |
| Drum servo (speed and phase) | | ▶>> | |
| Capstan speed servo | | ➤ | |
| Capstan servo (speed and phase) | | ➤» | |

**MODE CONTROL**
VC-251 (7/11)

**For Schematic Diagram**

- Refer to page 4-39 for printed wiring board.
- Refer to page 4-69 for waveforms.

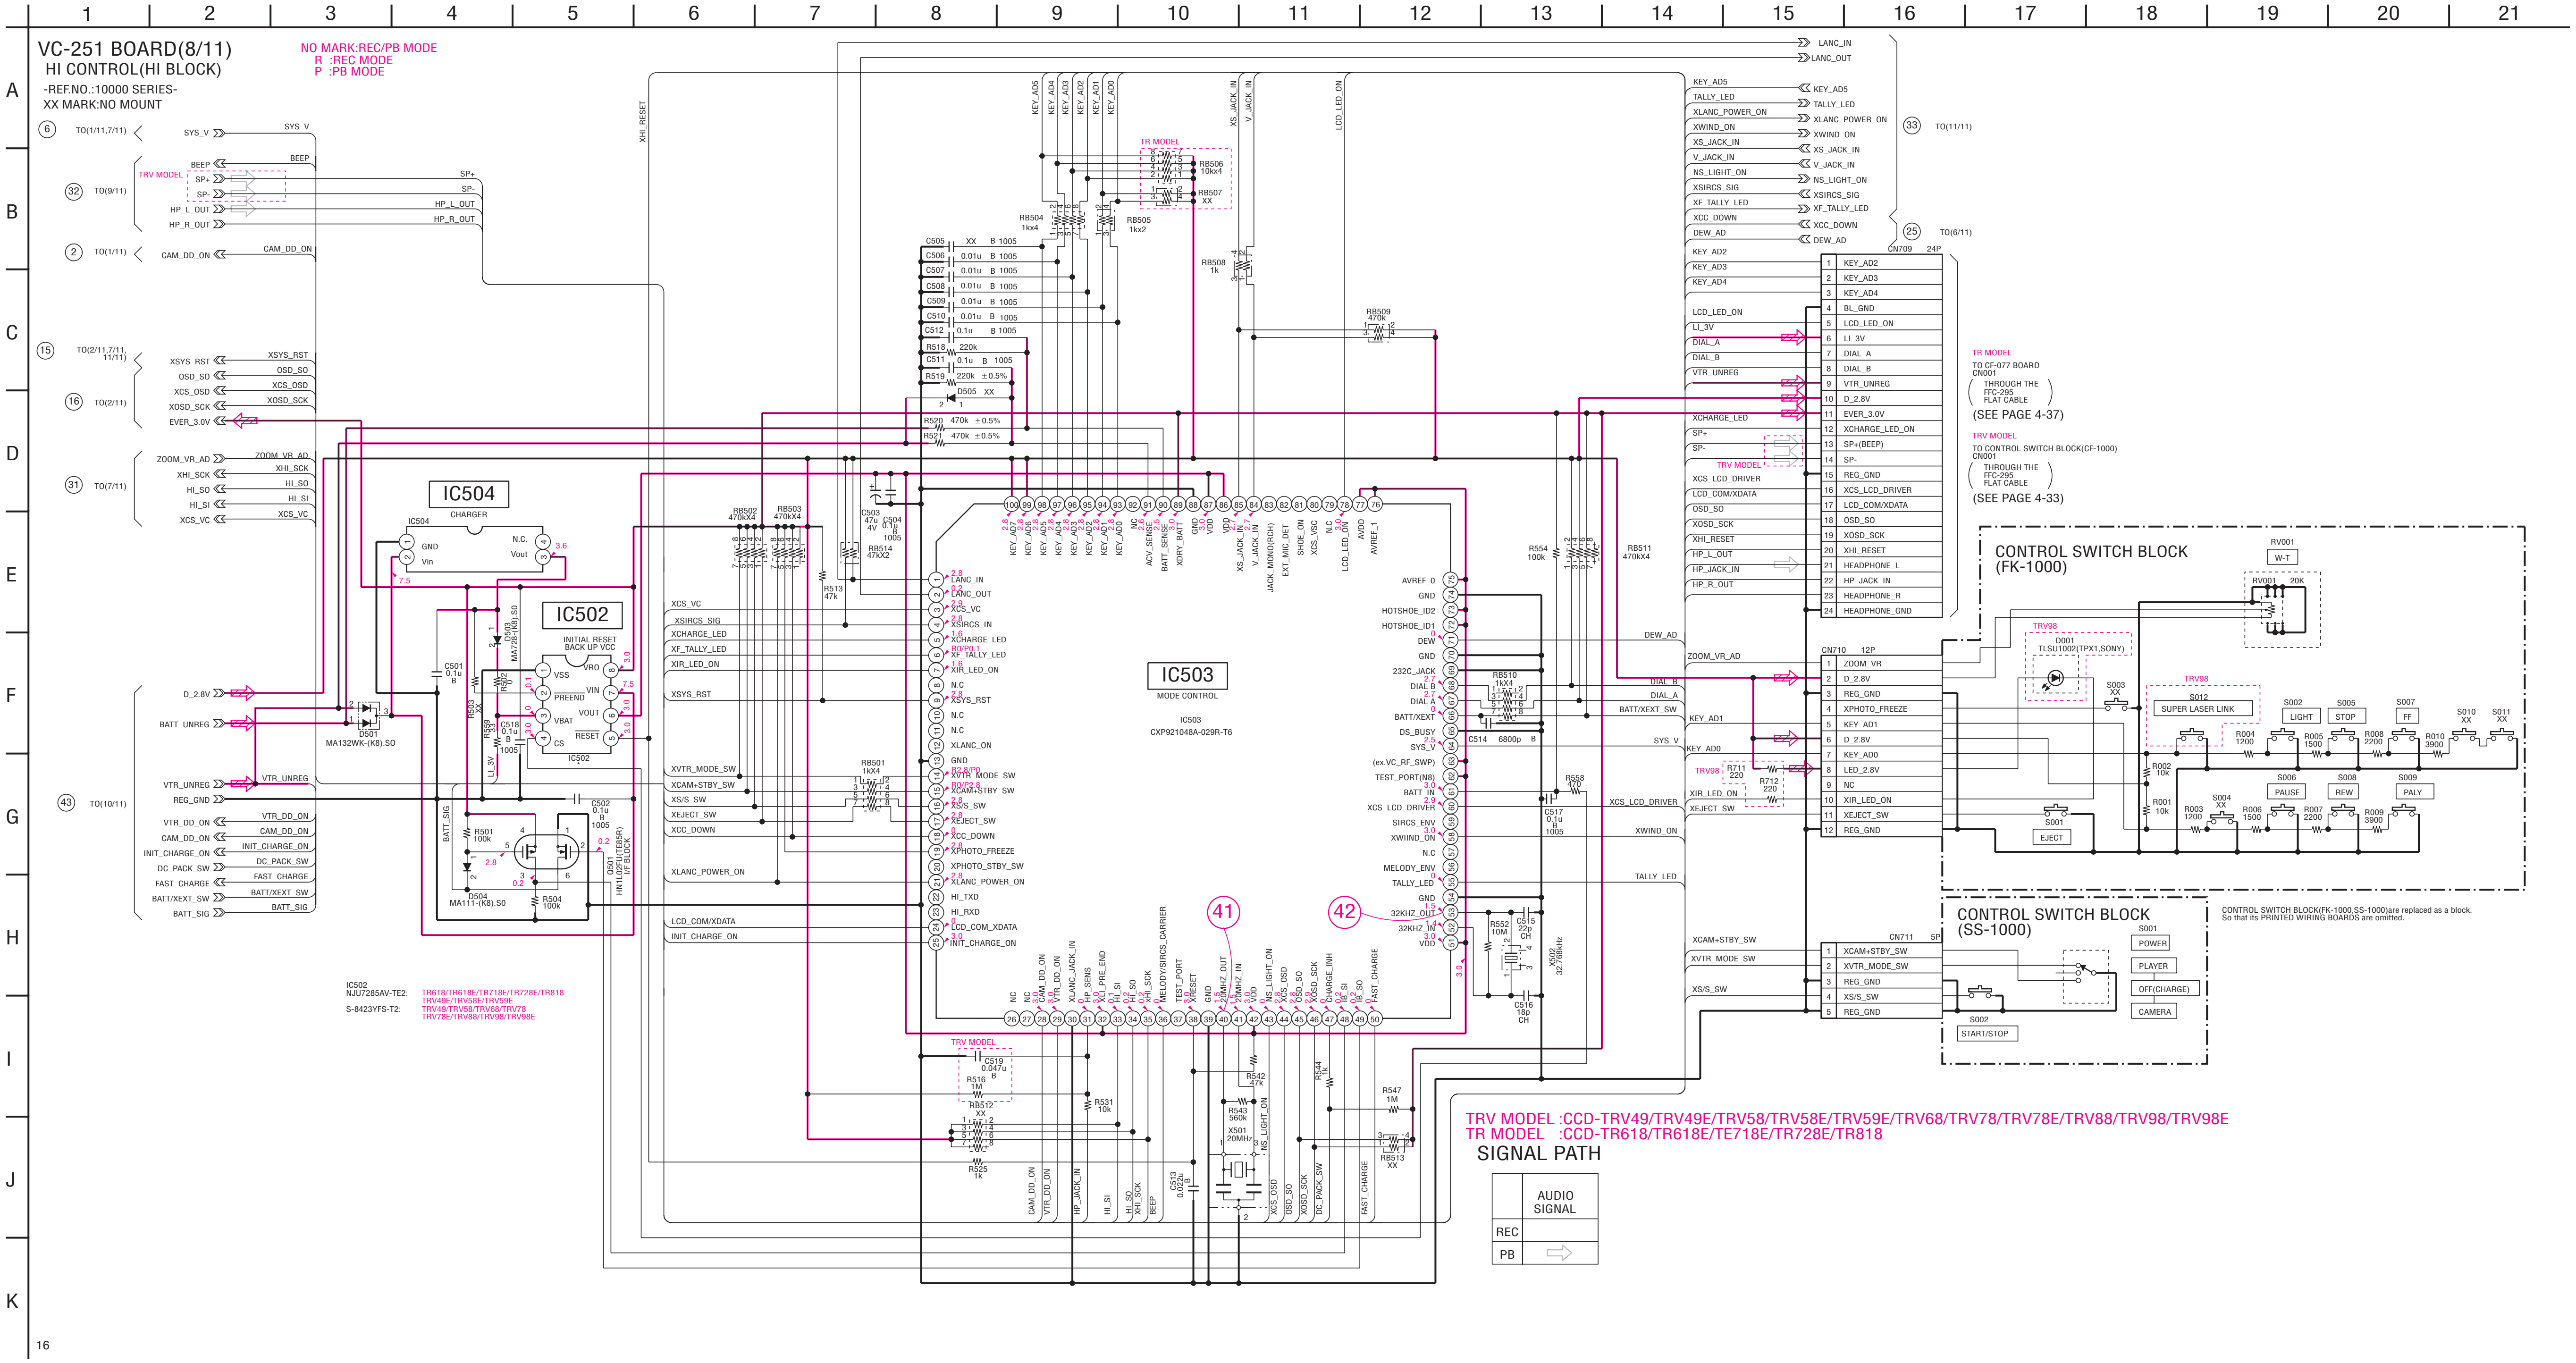
VC-251 BOARD(8/11)
HI CONTROL(HI BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
IC504
CHARGER
IC502
INITIAL RESET
BACK UP VCC
IC503
MODE CONTROL
IC503
CXP921048A-029R-T6
CN709 24P
CN710 12P
CN711 5P
TR MODEL
TO CF-077 BOARD
CN001
THROUGH THE
FFC-295
FLAT CABLE
(SEE PAGE 4-37)
TRV MODEL
TO CONTROL SWITCH BLOCK(CF-1000)
CN001
THROUGH THE
FFC-295
FLAT CABLE
(SEE PAGE 4-33)
CONTROL SWITCH BLOCK
(FK-1000)
CONTROL SWITCH BLOCK
(SS-1000)
CONTROL SWITCH BLOCK(FK-1000,SS-1000)are replaced as a block.
So that its PRINTED WIRING BOARDS are omitted.
IC502
NJU7285AV-TE2: TR618/TR618E/TR718E/TR728E/TR818
TRV49E/TRV58E/TRV59E
S-8423YFS-T2: TRV49/TRV58/TRV68/TRV78
TRV78E/TRV88/TRV98/TRV98E
41
42
TRV MODEL :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
TR MODEL :CCD-TR618/TR618E/TE718E/TR728E/TR818
SIGNAL PATH
AUDIO
SIGNAL
REC
PB
16

**For Schematic Diagram**

- Refer to page 4-39 for printed wiring board.

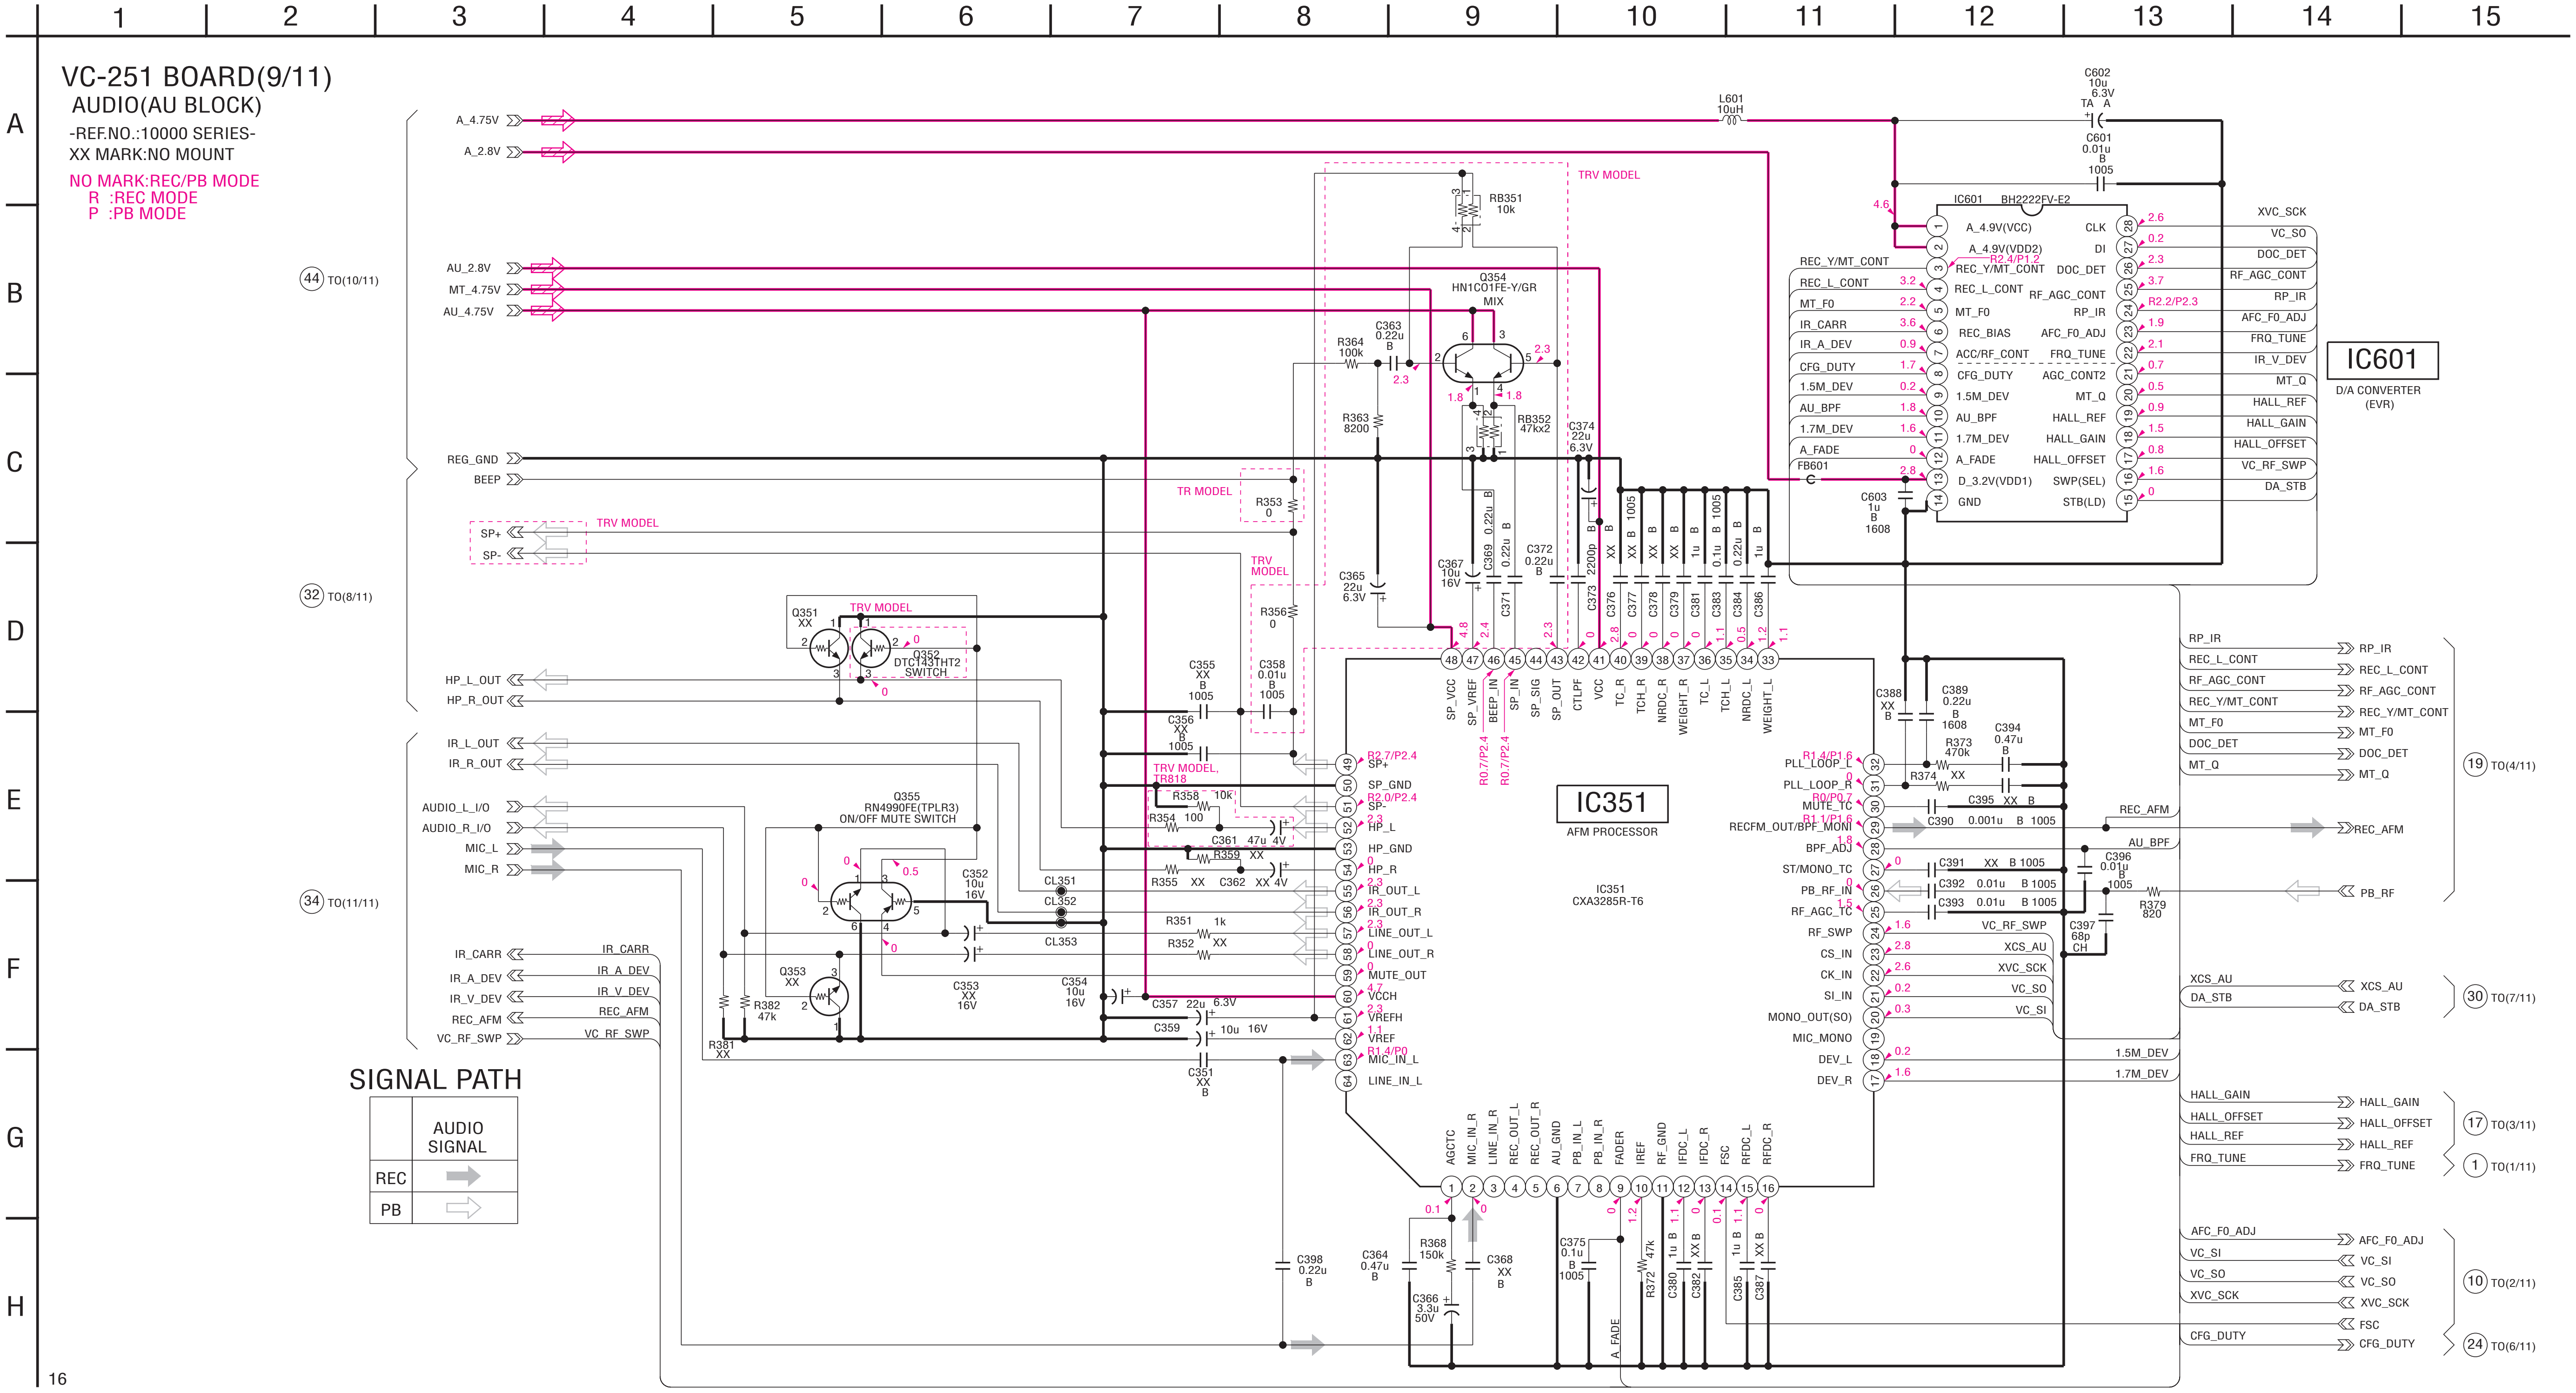
VC-251 BOARD(9/11)
AUDIO(AU BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
A_4.75V
A_2.8V
AU_2.8V
MT_4.75V
AU_4.75V
TO(10/11)
REG_GND
BEEP
SP+
SP-
TRV MODEL
TR MODEL
TO(8/11)
HP_L_OUT
HP_R_OUT
IR_L_OUT
IR_R_OUT
AUDIO_L_I/O
AUDIO_R_I/O
MIC_L
MIC_R
TO(11/11)
IR_CARR
IR_A_DEV
IR_V_DEV
REC_AFM
VC_RF_SWP
Q351 XX
Q352 DTC143THT2 SWITCH
Q353 XX
Q354 HN1C01FE-Y/GR MIX
Q355 RN4990FE(TPLR3) ON/OFF MUTE SWITCH
RB351 10k
RB352 47kx2
L601 10uH
IC351
AFM PROCESSOR
IC351 CXA3285R-T6
IC601 BH2222FV-E2
IC601
D/A CONVERTER (EVR)
SP_VCC
SP_VREF
BEEP_IN
SP_IN
SP_SIG
SP_OUT
CTLPF
VCC
TC_R
TCH_R
NRDC_R
WEIGHT_R
TC_L
TCH_L
NRDC_L
WEIGHT_L
SP_GND
HP_L
HP_GND
HP_R
IR_OUT_L
IR_OUT_R
LINE_OUT_L
LINE_OUT_R
MUTE_OUT
VCCH
VREFH
VREF
MIC_IN_L
LINE_IN_L
AGCTC
MIC_IN_R
LINE_IN_R
REC_OUT_L
REC_OUT_R
AU_GND
PB_IN_L
PB_IN_R
FADER
IREF
RF_GND
IFDC_L
IFDC_R
FSC
RFDC_L
RFDC_R
PLL_LOOP_L
PLL_LOOP_R
MUTE_TC
RECFM_OUT/BPF_MONI
BPF_AD
ST/MONO_TC
PB_RF_IN
RF_AGC_TC
RF_SWP
CS_IN
CK_IN
SI_IN
MONO_OUT(SO)
MIC_MONO
DEV_L
DEV_R
A_4.9V(VCC)
A_4.9V(VDD2)
REC_Y/MT_CONT
REC_L_CONT
MT_F0
REC_BIAS
ACC/RF_CONT
CFG_DUTY
1.5M_DEV
AU_BPF
1.7M_DEV
A_FADE
D_3.2V(VDD1)
GND
CLK
DI
DOC_DET
RF_AGC_CONT
RP_IR
AFC_F0_ADJ
FRQ_TUNE
AGC_CONT2
MT_Q
HALL_REF
HALL_GAIN
HALL_OFFSET
SWP(SEL)
STB(LD)
XVC_SCK
VC_SO
IR_V_DEV
VC_RF_SWP
DA_STB
FB601
TO(4/11)
REC_AFM
PB_RF
XCS_AU
TO(7/11)
TO(3/11)
TO(1/11)
AFC_F0_ADJ
VC_SI
FSC
TO(2/11)
TO(6/11)
SIGNAL PATH
AUDIO SIGNAL
REC
PB
16

TR MODEL :CCD-TR618/TR618E/TR718E/TR728E/TR818
TRV MODEL :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

**For Schematic Diagram**

- Refer to page 4-39 for printed wiring board.
- Refer to page 4-69 for waveforms.

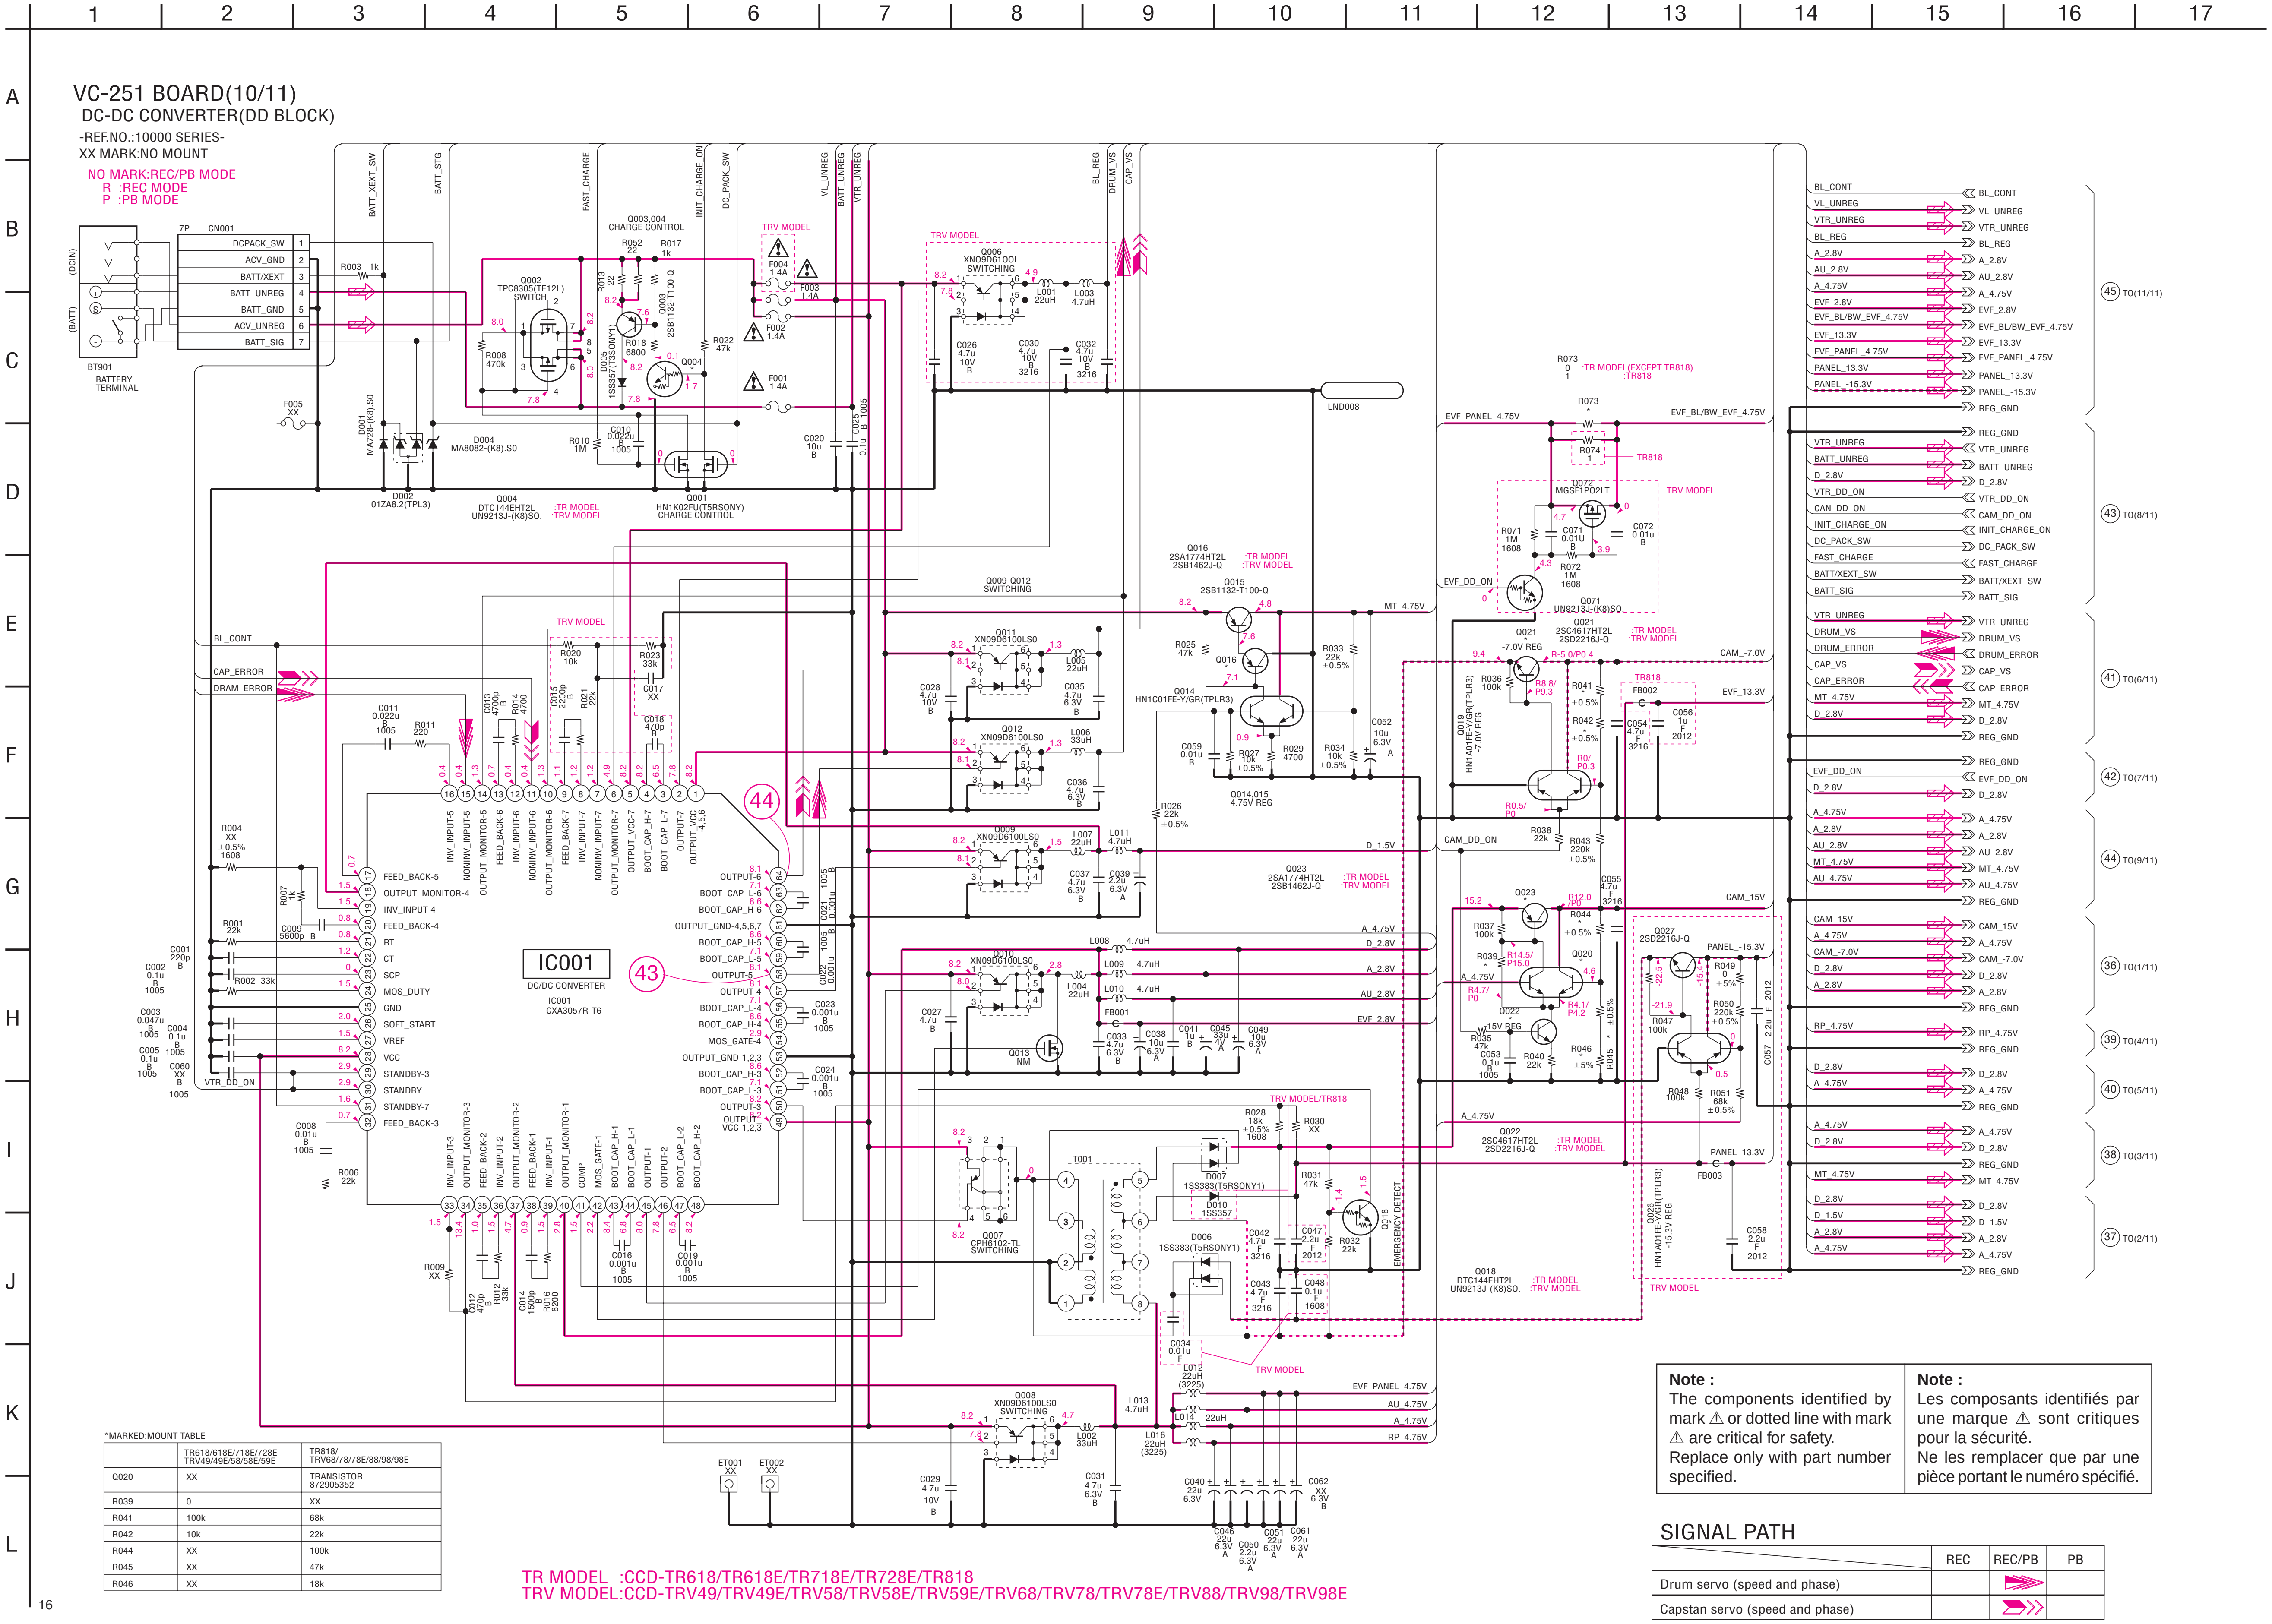
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
A
B
C
D
E
F
G
H
I
J
K
L
VC-251 BOARD(10/11)
DC-DC CONVERTER(DD BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
BT901
BATTERY TERMINAL
(DCIN)
(BATT)
CN001
7P
DCPACK_SW
ACV_GND
BATT/XEXT
BATT_UNREG
BATT_GND
ACV_UNREG
BATT_SIG
Q002
TPC8305(TE12L)
SWITCH
Q003,004
CHARGE CONTROL
Q001
HN1K02FU(T5RSONY)
CHARGE CONTROL
D001
MA728-(K8).S0
D002
01ZA8.2(TPL3)
D004
MA8082-(K8).S0
Q004
DTC144EHT2L :TR MODEL
UN9213J-(K8)SO. :TRV MODEL
TRV MODEL
F001 1.4A
F002 1.4A
F003 1.4A
F004 1.4A
F005 XX
Q006
XN09D61OOL
SWITCHING
Q009-Q012
SWITCHING
Q011
XN09D6100LS0
Q012
XN09D6100LS0
Q009
XN09D6100LS0
Q010
XN09D6100LS0
Q013 NM
Q007
CPH6102-TL
SWITCHING
Q008
XN09D6100LS0
SWITCHING
T001
D007
1SS383(T5RSONY1)
D010
1SS357
D006
1SS383(T5RSONY1)
Q018
EMERGENCY DETECT
Q016
2SA1774HT2L :TR MODEL
2SB1462J-Q :TRV MODEL
Q015
2SB1132-T100-Q
Q014
HN1C01FE-Y/GR(TPLR3)
Q014,015
4.75V REG
Q023
2SA1774HT2L :TR MODEL
2SB1462J-Q :TRV MODEL
Q071
UN9213J-(K8)SO.
Q072
MGSF1P02LT
Q021
-7.0V REG
2SC4617HT2L :TR MODEL
2SD2216J-Q :TRV MODEL
Q019
HN1A01FE-Y/GR(TPLR3)
-7.0V REG
Q020
Q022
15V REG
2SC4617HT2L :TR MODEL
2SD2216J-Q :TRV MODEL
Q027
2SD2216J-Q
Q026
HN1A01FE-Y/GR(TPLR3)
-15.3V REG
Q018
DTC144EHT2L :TR MODEL
UN9213J-(K8)SO. :TRV MODEL
TRV MODEL/TR818
TR818
LND008
IC001
DC/DC CONVERTER
IC001
CXA3057R-T6
43
44
ET001 XX
ET002 XX
(45) TO(11/11)
(43) TO(8/11)
(41) TO(6/11)
(42) TO(7/11)
(44) TO(9/11)
(36) TO(1/11)
(39) TO(4/11)
(40) TO(5/11)
(38) TO(3/11)
(37) TO(2/11)
BL_CONT
VL_UNREG
VTR_UNREG
BL_REG
A_2.8V
AU_2.8V
A_4.75V
EVF_2.8V
EVF_BL/BW_EVF_4.75V
EVF_13.3V
EVF_PANEL_4.75V
PANEL_13.3V
PANEL_-15.3V
REG_GND
BATT_UNREG
D_2.8V
VTR_DD_ON
CAM_DD_ON
INIT_CHARGE_ON
DC_PACK_SW
FAST_CHARGE
BATT/XEXT_SW
BATT_SIG
DRUM_VS
DRUM_ERROR
CAP_VS
CAP_ERROR
MT_4.75V
EVF_DD_ON
CAM_15V
CAM_-7.0V
RP_4.75V
D_1.5V
MT_4.75V
CAM_-7.0V
EVF_13.3V
CAM_15V
PANEL_-15.3V
PANEL_13.3V

*MARKED:MOUNT TABLE

| | TR618/618E/718E/728E TRV49/49E/58/58E/59E | TR818/ TRV68/78/78E/88/98/98E |
|---|---|---|
| Q020 | XX | TRANSISTOR 872905352 |
| R039 | 0 | XX |
| R041 | 100k | 68k |
| R042 | 10k | 22k |
| R044 | XX | 100k |
| R045 | XX | 47k |
| R046 | XX | 18k |

TR MODEL :CCD-TR618/TR618E/TR718E/TR728E/TR818
TRV MODEL:CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

| Note : | Note : |
|---|---|
| The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.<br>Replace only with part number specified. | Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.<br>Ne les remplacer que par une pièce portant le numéro spécifié. |

## SIGNAL PATH

| | REC | REC/PB | PB |
|---|---|---|---|
| Drum servo (speed and phase) | | ➤ | |
| Capstan servo (speed and phase) | | ➤ | |

**For Schematic Diagram**

- Refer to page 4-39 for printed wiring board.

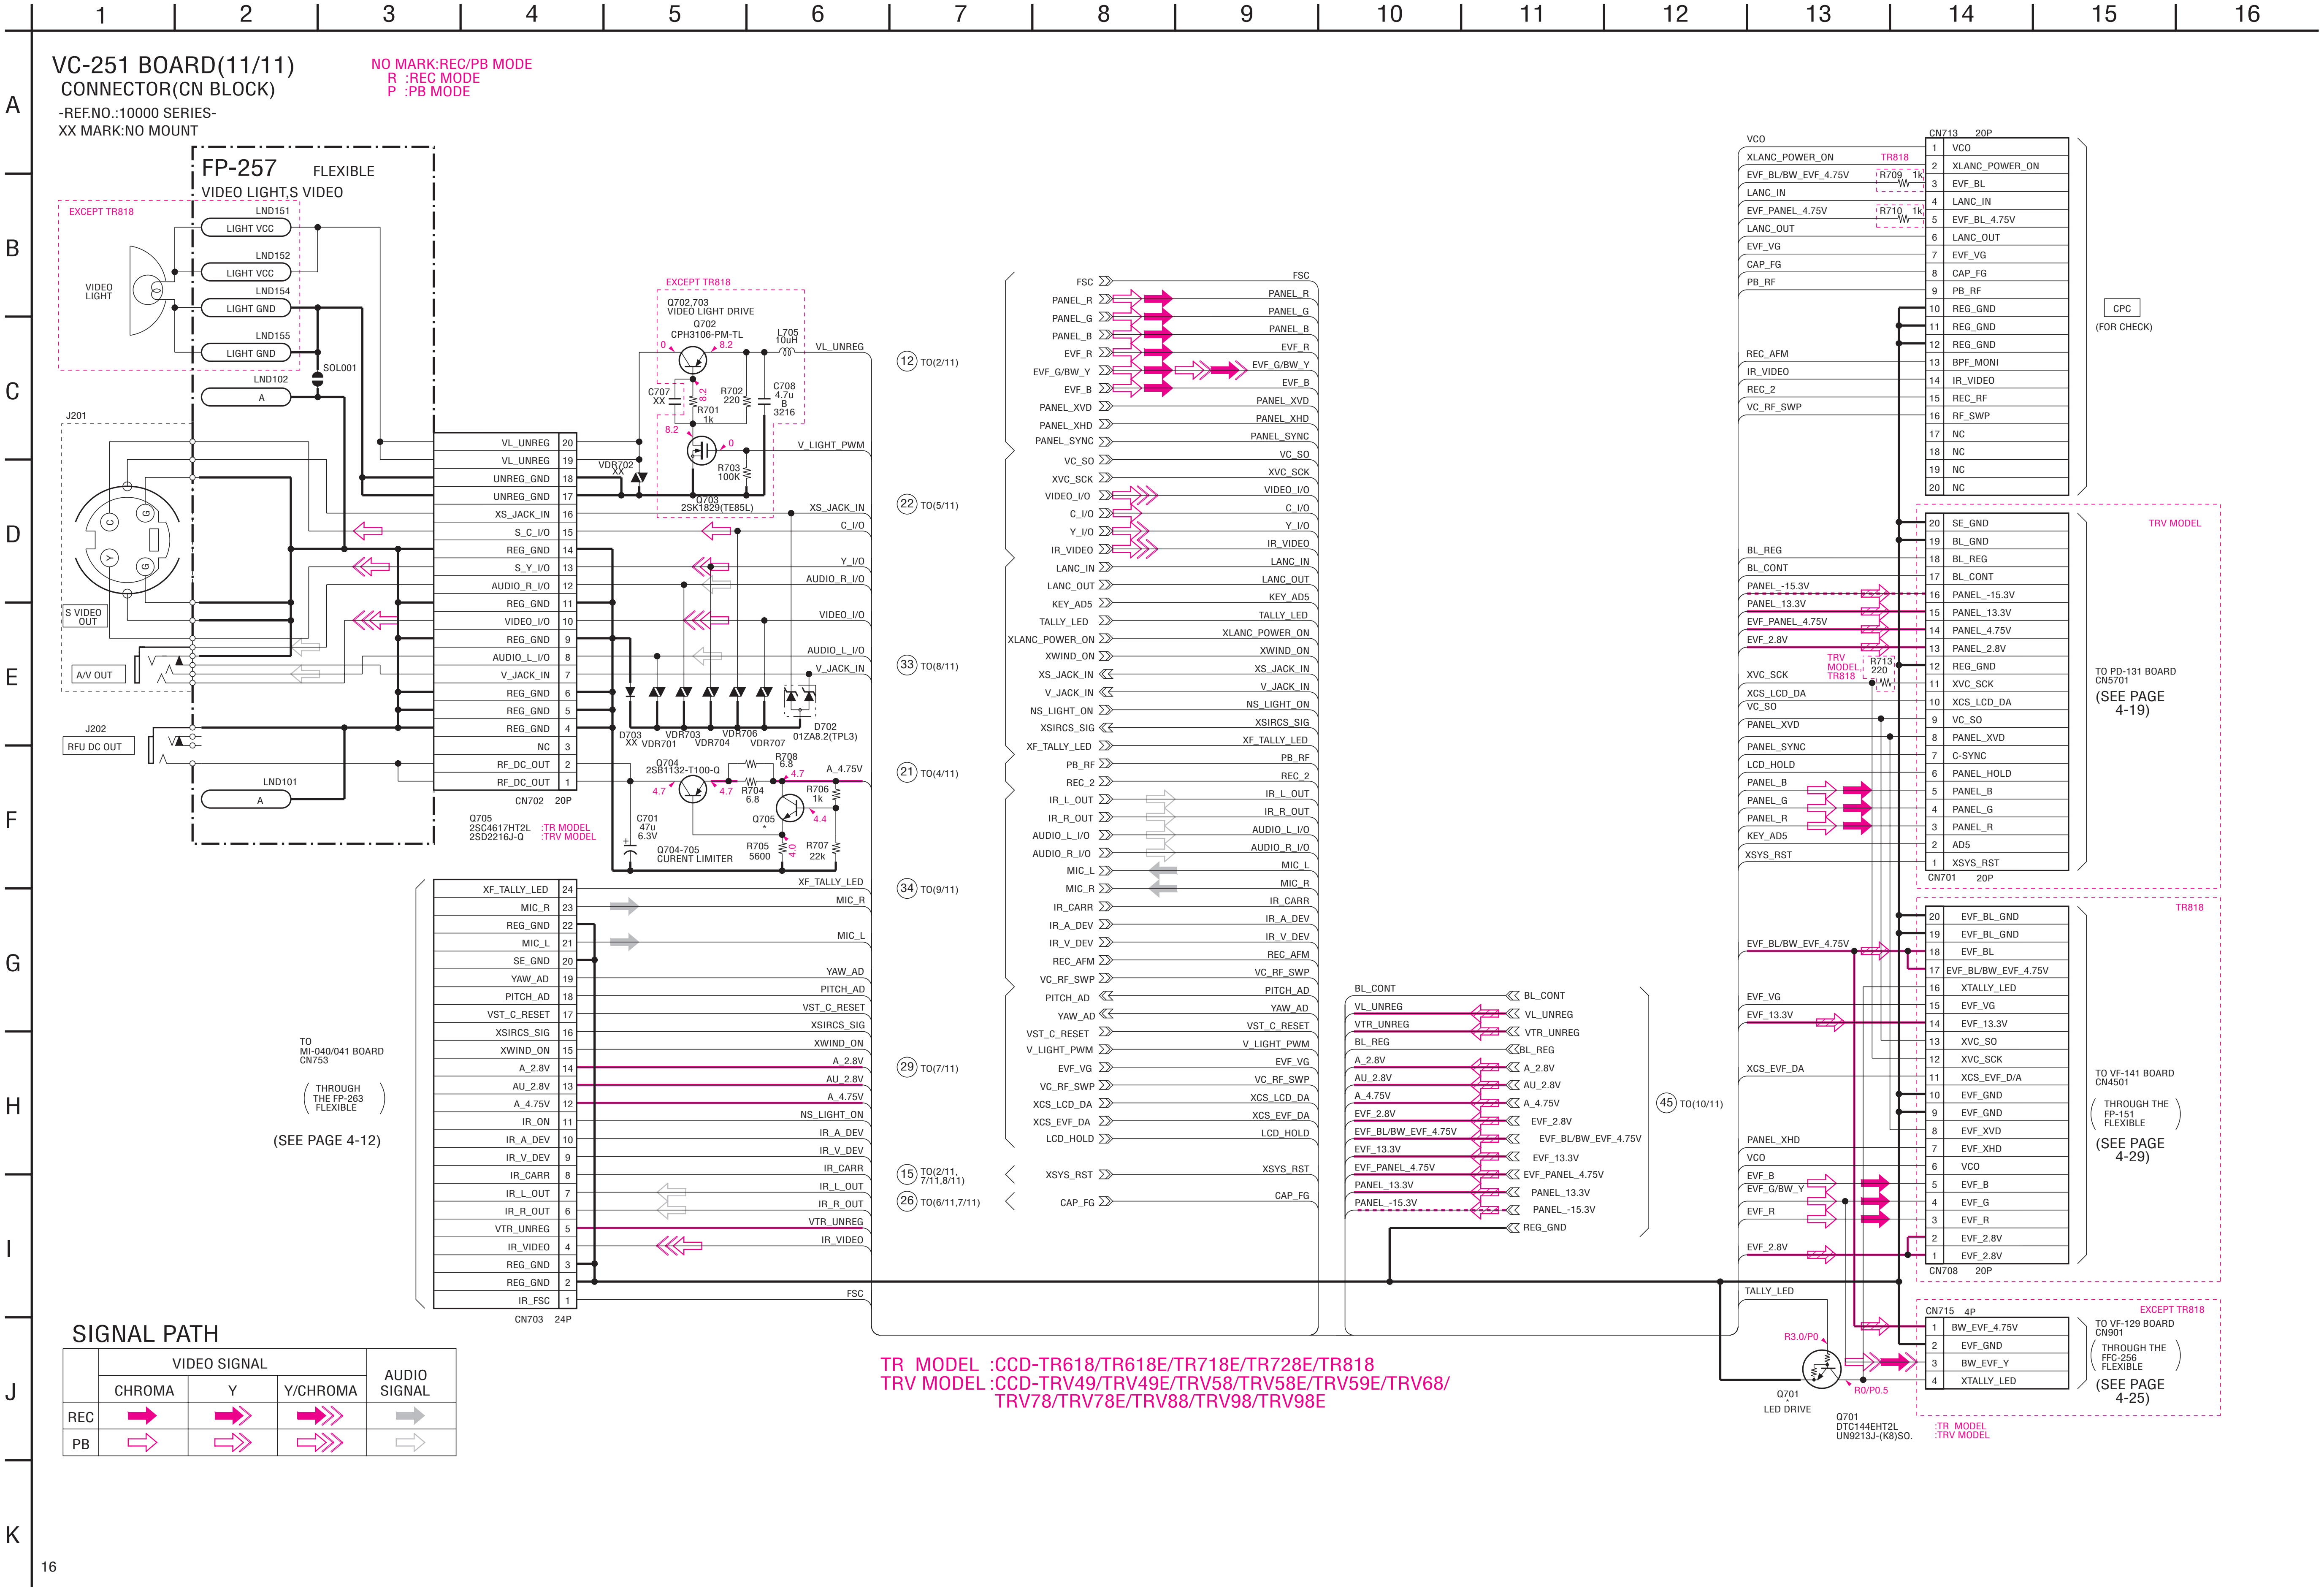
VC-251 BOARD(11/11)
CONNECTOR(CN BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
FP-257 FLEXIBLE
VIDEO LIGHT,S VIDEO
EXCEPT TR818
VIDEO LIGHT
LND151 LIGHT VCC
LND152 LIGHT VCC
LND154 LIGHT GND
LND155 LIGHT GND
LND102 A
SOL001
J201
S VIDEO OUT
A/V OUT
J202
RFU DC OUT
LND101 A
CN702 20P
VL_UNREG
UNREG_GND
XS_JACK_IN
S_C_I/O
REG_GND
S_Y_I/O
AUDIO_R_I/O
VIDEO_I/O
AUDIO_L_I/O
V_JACK_IN
NC
RF_DC_OUT
Q702,703 VIDEO LIGHT DRIVE
Q702 CPH3106-PM-TL
Q703 2SK1829(TE85L)
L705 10uH
C707 XX
R701 1k
R702 220
C708 4.7u B 3216
R703 100K
VDR702 XX
V_LIGHT_PWM
D703 XX
VDR701 VDR703 VDR704 VDR706 VDR707
D702 01ZA8.2(TPL3)
Q704 2SB1132-T100-Q
R704 6.8
R708 6.8
R706 1k
Q705
A_4.75V
C701 47u 6.3V
R705 5600
R707 22k
Q704-705 CURENT LIMITER
Q705 2SC4617HT2L :TR MODEL
2SD2216J-Q :TRV MODEL
CN703 24P
XF_TALLY_LED
MIC_R
MIC_L
SE_GND
YAW_AD
PITCH_AD
VST_C_RESET
XSIRCS_SIG
XWIND_ON
A_2.8V
AU_2.8V
IR_ON
IR_A_DEV
IR_V_DEV
IR_CARR
IR_L_OUT
IR_R_OUT
VTR_UNREG
IR_VIDEO
IR_FSC
TO MI-040/041 BOARD CN753
THROUGH THE FP-263 FLEXIBLE
(SEE PAGE 4-12)
⑫ TO(2/11)
㉒ TO(5/11)
㉝ TO(8/11)
㉑ TO(4/11)
㉞ TO(9/11)
㉙ TO(7/11)
⑮ TO(2/11, 7/11,8/11)
㉖ TO(6/11,7/11)
㊺ TO(10/11)
FSC
PANEL_R
PANEL_G
PANEL_B
EVF_R
EVF_G/BW_Y
EVF_B
PANEL_XVD
PANEL_XHD
PANEL_SYNC
VC_SO
XVC_SCK
C_I/O
Y_I/O
IR_VIDEO
LANC_IN
LANC_OUT
KEY_AD5
TALLY_LED
XLANC_POWER_ON
XWIND_ON
XS_JACK_IN
NS_LIGHT_ON
XSIRCS_SIG
XF_TALLY_LED
PB_RF
REC_2
AUDIO_L_I/O
AUDIO_R_I/O
IR_CARR
REC_AFM
VC_RF_SWP
EVF_VG
XCS_LCD_DA
XCS_EVF_DA
LCD_HOLD
XSYS_RST
CAP_FG
BL_CONT
VL_UNREG
VTR_UNREG
BL_REG
A_2.8V
AU_2.8V
A_4.75V
EVF_2.8V
EVF_BL/BW_EVF_4.75V
EVF_13.3V
EVF_PANEL_4.75V
PANEL_13.3V
PANEL_-15.3V
REG_GND
CN713 20P
VCO
XLANC_POWER_ON
EVF_BL
LANC_IN
EVF_BL_4.75V
LANC_OUT
EVF_VG
CAP_FG
PB_RF
REG_GND
BPF_MONI
IR_VIDEO
REC_RF
RF_SWP
NC
TR818
R709 1k
R710 1k
CPC
(FOR CHECK)
TRV MODEL
CN701 20P
SE_GND
BL_GND
BL_REG
BL_CONT
PANEL_-15.3V
PANEL_13.3V
PANEL_4.75V
PANEL_2.8V
REG_GND
XVC_SCK
XCS_LCD_DA
VC_SO
PANEL_XVD
C-SYNC
PANEL_HOLD
PANEL_B
PANEL_G
PANEL_R
AD5
XSYS_RST
TRV MODEL R713 220
TR818
TO PD-131 BOARD CN5701
(SEE PAGE 4-19)
CN708 20P
EVF_BL_GND
EVF_BL
EVF_BL/BW_EVF_4.75V
XTALLY_LED
EVF_VG
EVF_13.3V
XVC_SO
XVC_SCK
XCS_EVF_D/A
EVF_GND
EVF_XVD
EVF_XHD
VCO
EVF_B
EVF_G
EVF_R
EVF_2.8V
TO VF-141 BOARD CN4501
THROUGH THE FP-151 FLEXIBLE
(SEE PAGE 4-29)
CN715 4P
EXCEPT TR818
BW_EVF_4.75V
EVF_GND
BW_EVF_Y
XTALLY_LED
TO VF-129 BOARD CN901
THROUGH THE FFC-256 FLEXIBLE
(SEE PAGE 4-25)
TALLY_LED
R3.0/P0
R0/P0.5
Q701 LED DRIVE
Q701 DTC144EHT2L :TR MODEL
UN9213J-(K8)SO. :TRV MODEL
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
A B C D E F G H I J K

SIGNAL PATH

| | VIDEO SIGNAL | | | AUDIO SIGNAL |
|---|---|---|---|---|
| | CHROMA | Y | Y/CHROMA | |
| REC | ➡ | ➡➡ | ➡➡➡ | ➡ |
| PB | ⇨ | ⇨⇨ | ⇨⇨⇨ | ⇨ |

TR MODEL :CCD-TR618/TR618E/TR718E/TR728E/TR818
TRV MODEL :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/
TRV78/TRV78E/TRV88/TRV98/TRV98E

16

**CONNECTOR**
**VC-251 (11/11)**

## FP-257 (VIDEO LIGHT, S VIDEO) FLEXIBLE BOARD

— Ref. No. FP-257 Flexible board; 10,000 Series —

FP-257 FLEXIBLE

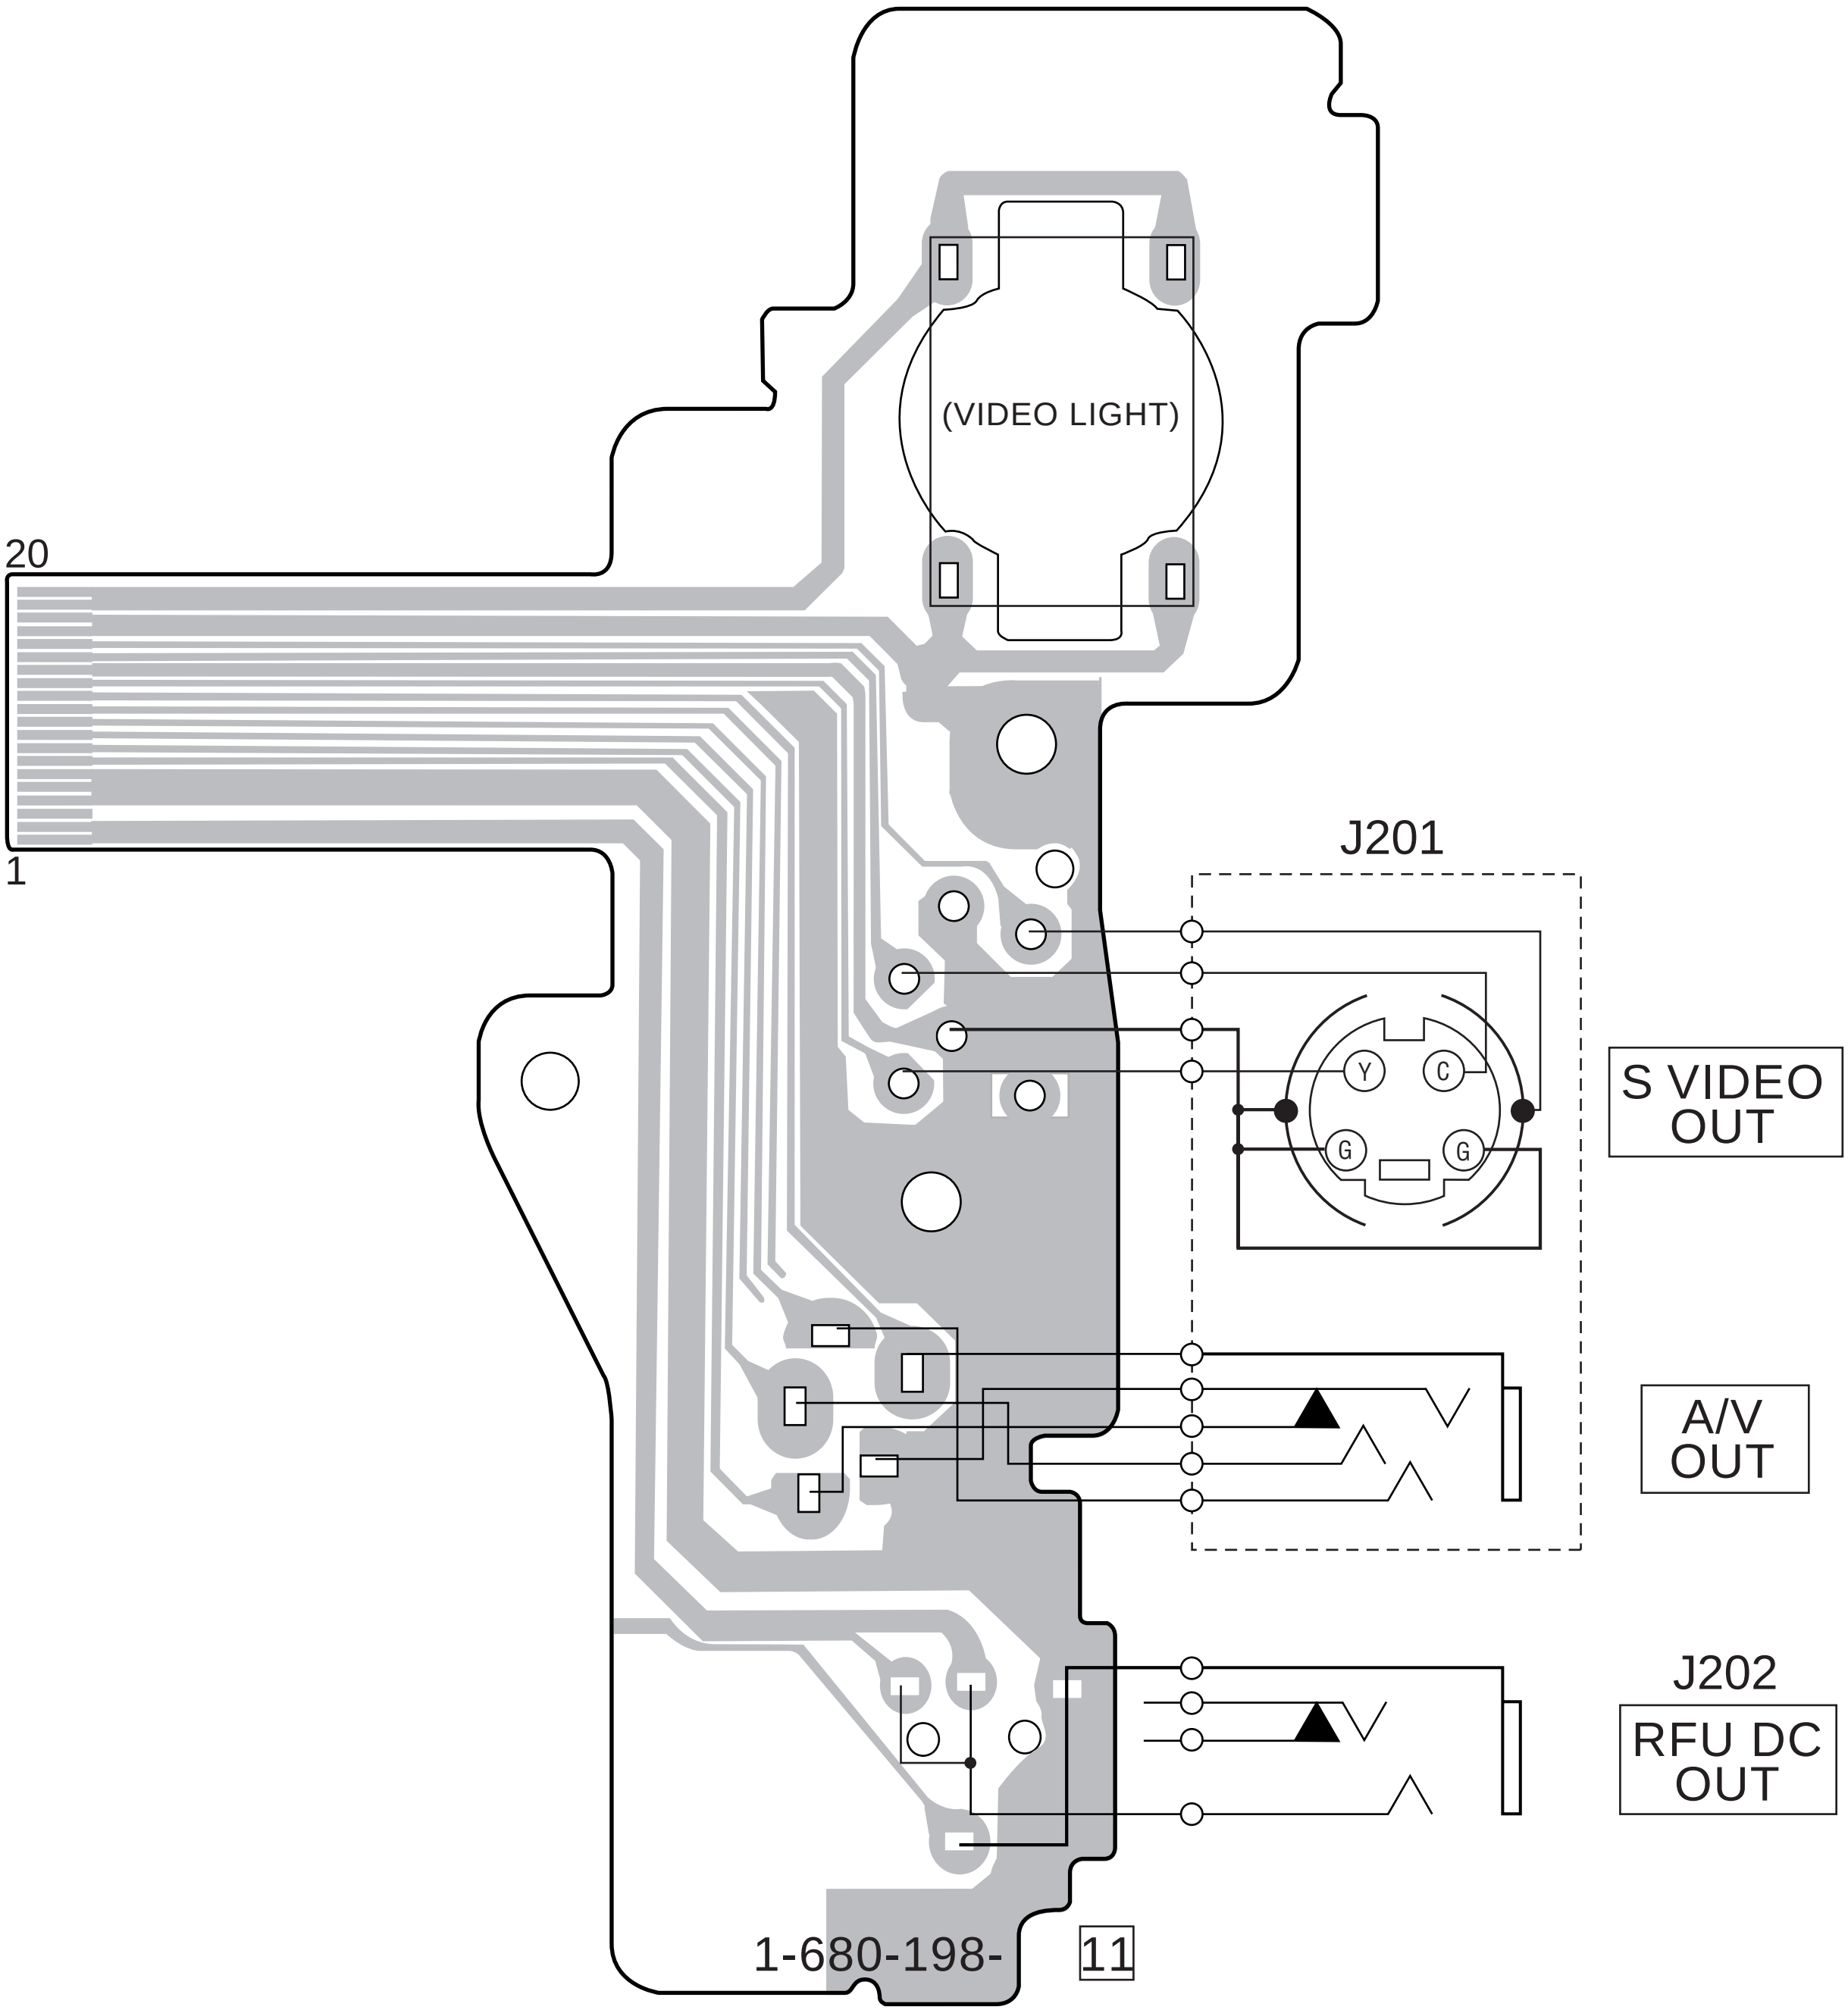
(VIDEO LIGHT)
20
1
J201
Y
C
G
G
S VIDEO OUT
A/V OUT
J202
RFU DC OUT
1-680-198- 11

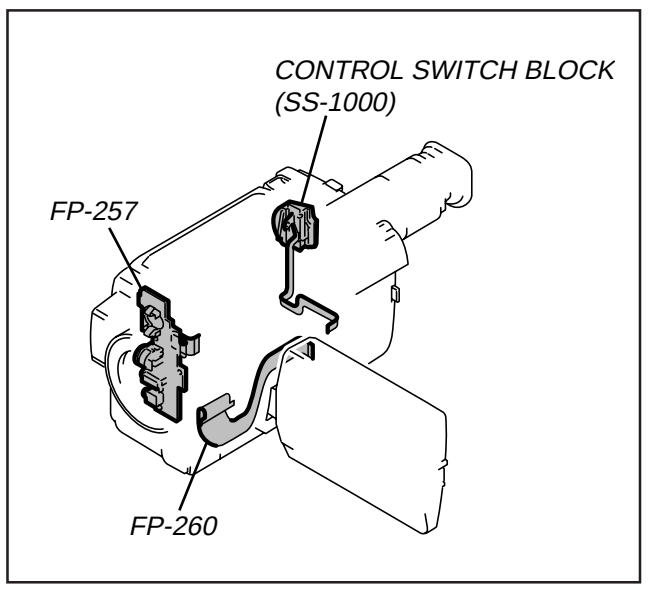
CONTROL SWITCH BLOCK (SS-1000)
FP-257
FP-260

## 4-3. WAVEFORMS

### **CD-281/286** BOARD

REC

① IC191 ①,②



② IC191 ③,④



③ IC191 ⑦

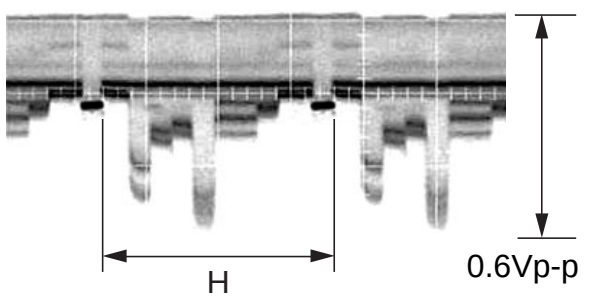

④ IC191 ⑫

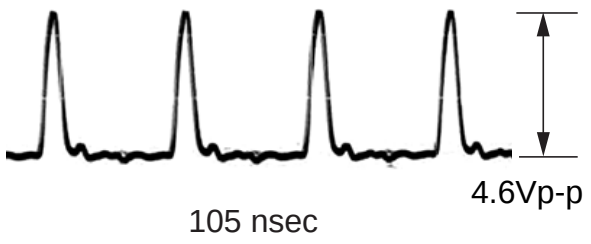

⑤ IC191 ⑬,⑭

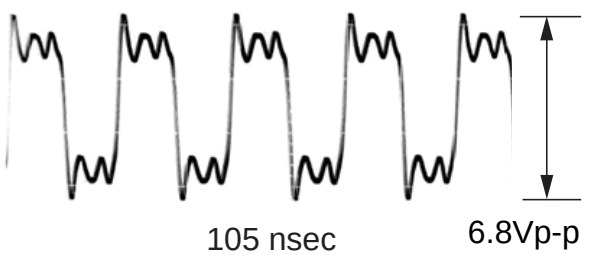

⑥ Q191 Ⓔ

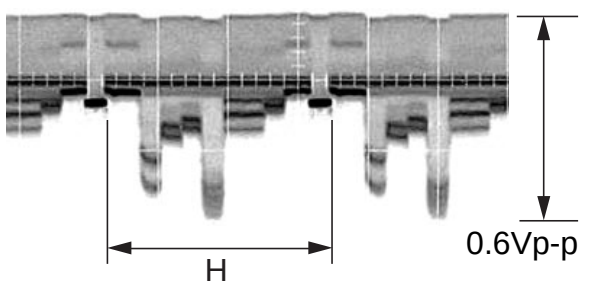

### **MI-040/041** BOARD

REC/PB

① IC3901 ⑦
IR ON



② IC3901 ㉒
IR ON



③ IC3901 ㊶
IR ON

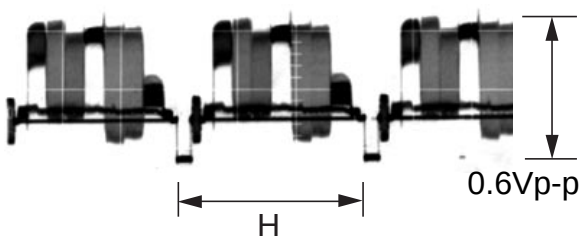

### **PD-131** BOARD

① IC5501 ㊽

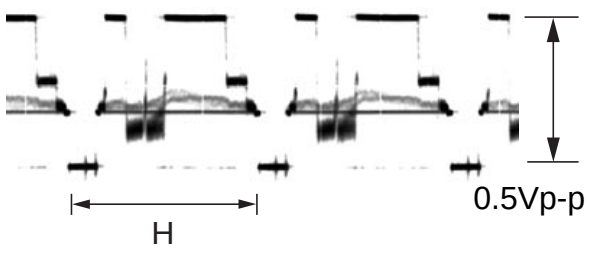

② IC5501 ㊼

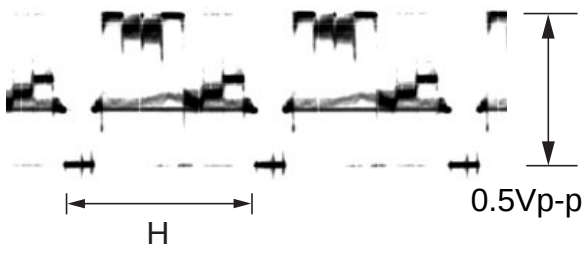

③ IC5501 ㊻

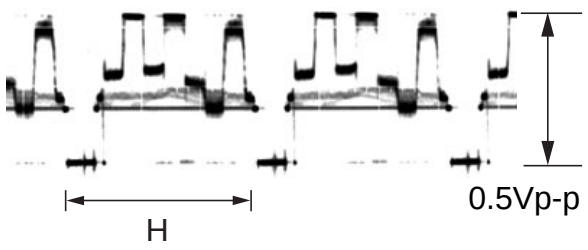

④ IC5501 ⑳

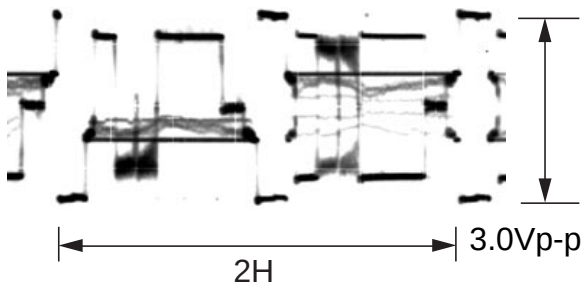

⑤ IC5501 ㉒

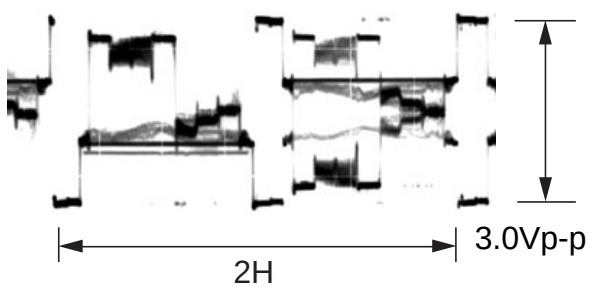

⑥ IC5501 ㉔

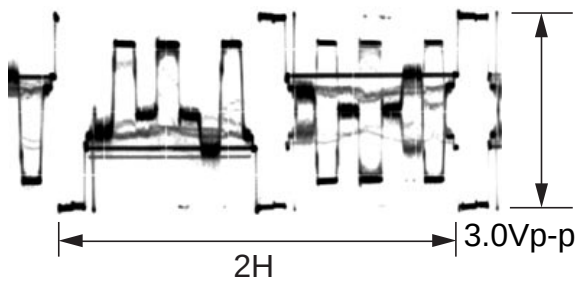

⑦ IC5502 ①



⑧ IC5502 ㉖

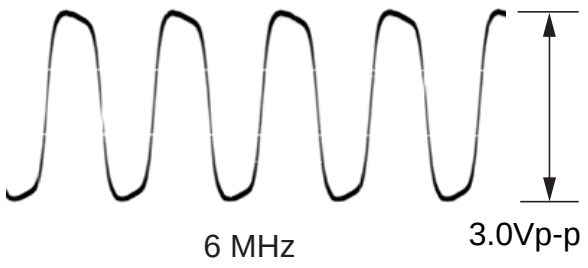

### **VF-129** BOARD

REC/PB

① IC901 ①,⑤



② IC901 ③

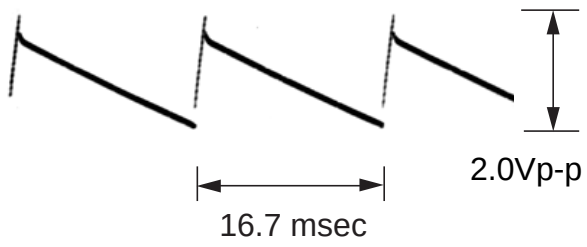

③ IC901 ⑦

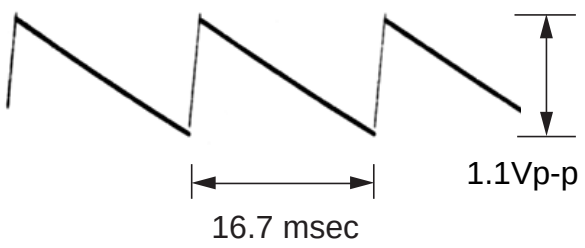

④ IC901 ⑪



⑤ IC901 ⑬

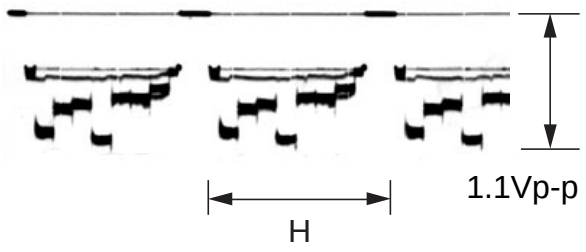

⑥ IC901 ⑯

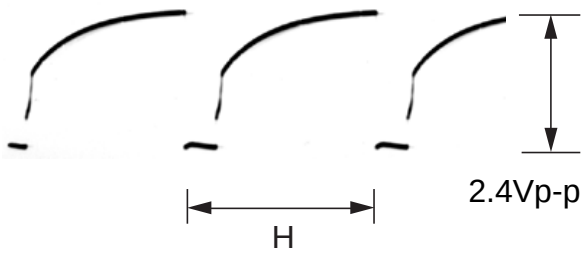

## **VF-141** BOARD

① IC4501 ⑳

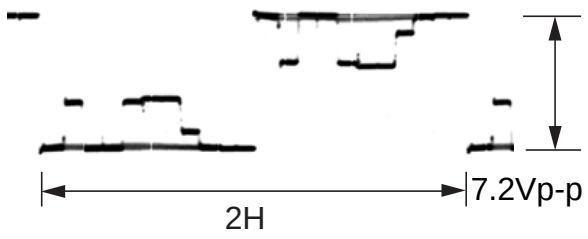

② IC4501 ㉒

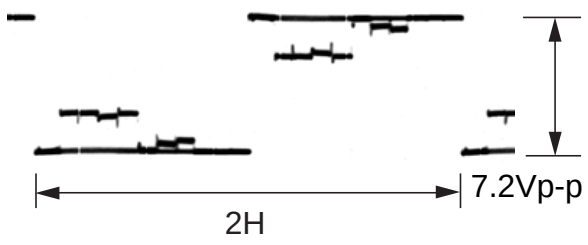

③ IC4501 ㉔

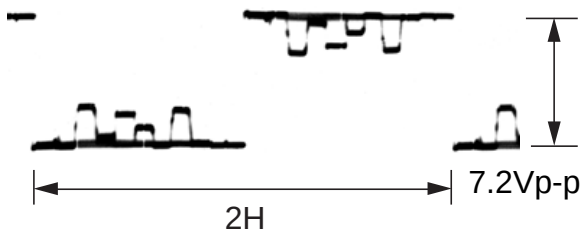

④ IC4501 ㊻

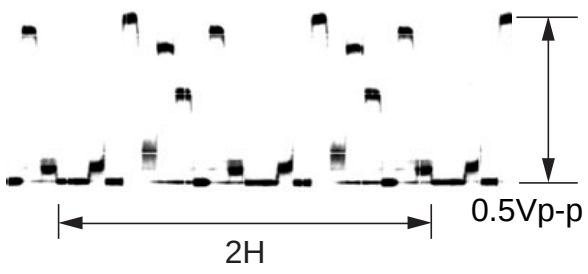

⑤ IC4501 ㊼

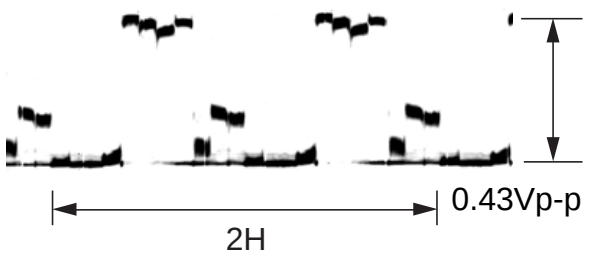

⑥ IC4501 ㊽

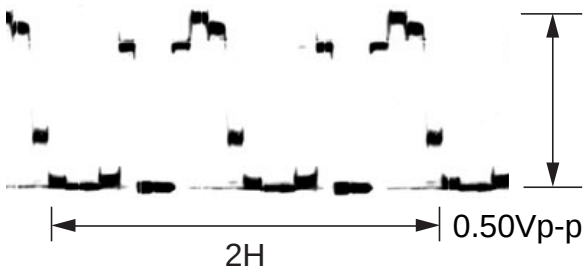

⑦ IC4502 ㉖



## **LB-062** BOARD

① IC4601 ④

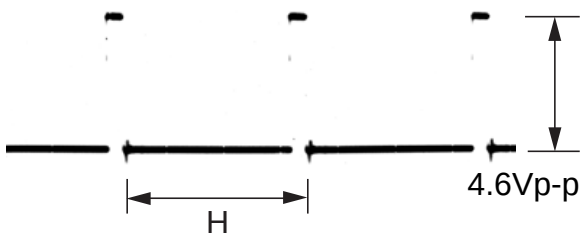

## **CF-077** BOARD

① IC001 ②

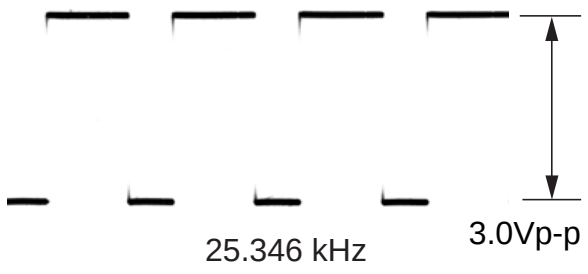

## **VC-251** BOARD

| | | | |
|---|---|---|---|
| ① IC271 ⑤<br>REC/PB<br>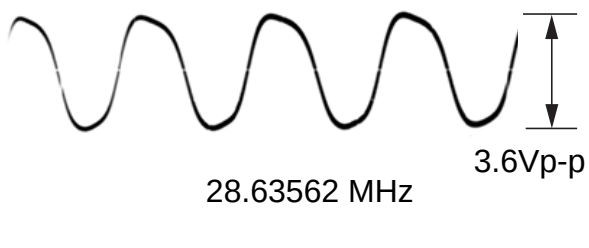 | ⑨ IC151 (213)<br>REC/PB<br>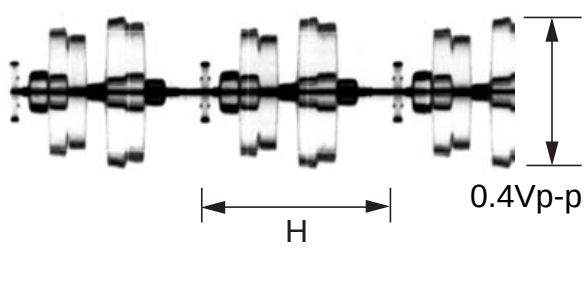 | ⑯ IC151 ㉞<br>REC<br>(COLOR EVF MODEL)<br>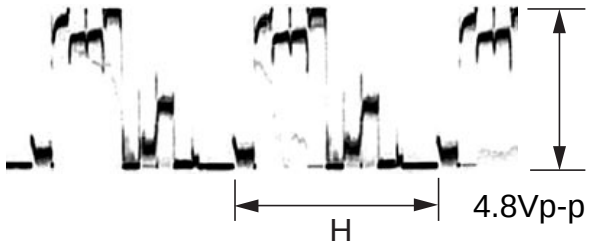 | ㉔ IC101 ①<br>REC<br>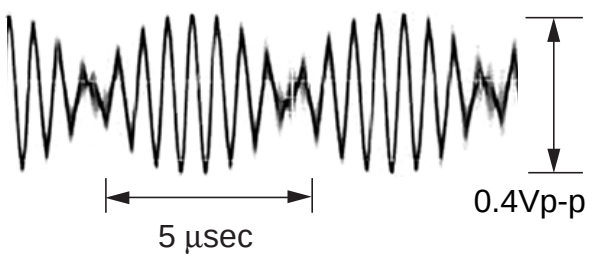 |
| ② IC271 ⑪<br>REC/PB<br>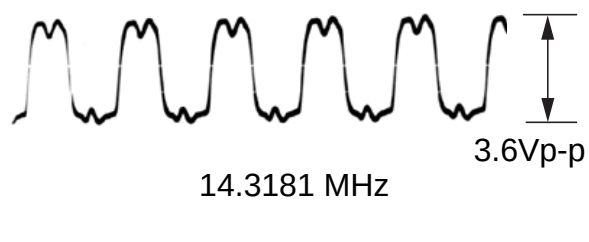 | ⑩ IC151 ④<br>REC/PB<br>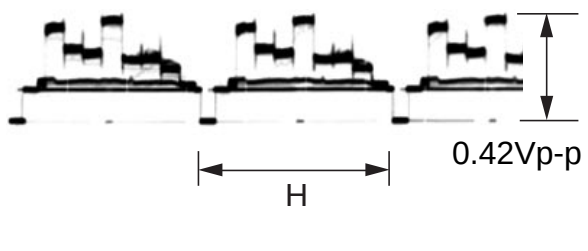 | ⑰ IC151 ㊲<br>REC<br>(COLOR EVF MODEL)<br>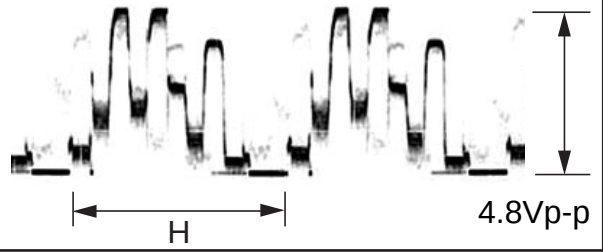 | ㉕ IC101 ⑤<br>REC<br>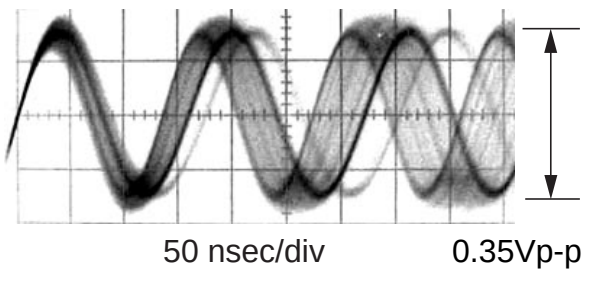 |
| ③ IC271 ㉑<br>REC<br>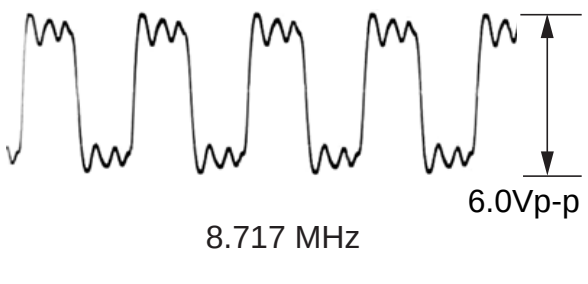 | ⑪ IC151 ⑦<br>REC/PB<br>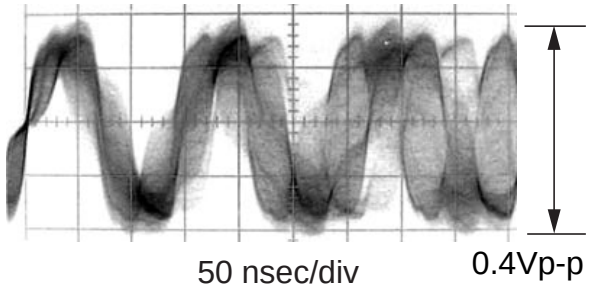 | ⑱ IC151 ㊾<br>PB<br>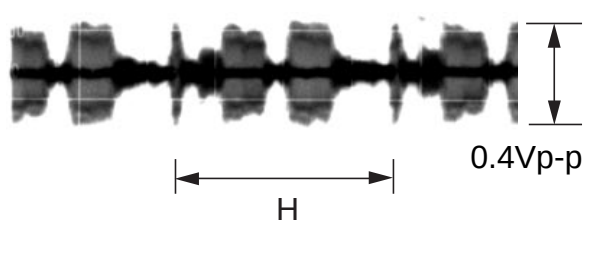 | ㉖ IC101 ⑭<br>PB<br>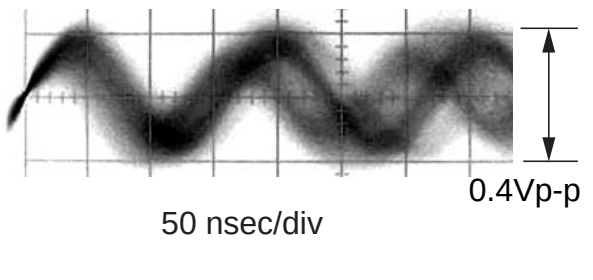 |
| ④ IC271 ㉖<br>REC<br>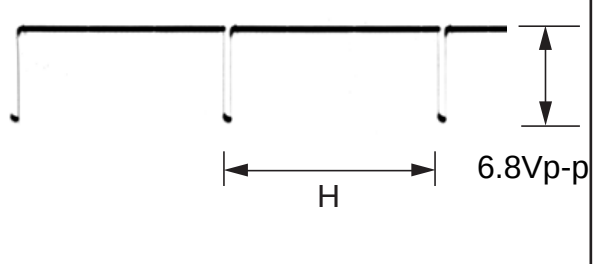 | ⑫ IC151 ⑭<br>REC/PB<br>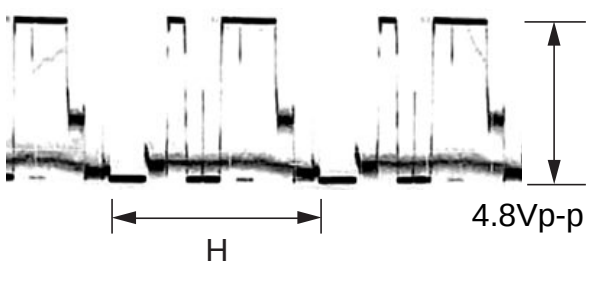 | ⑲ IC151 (51)<br>PB<br>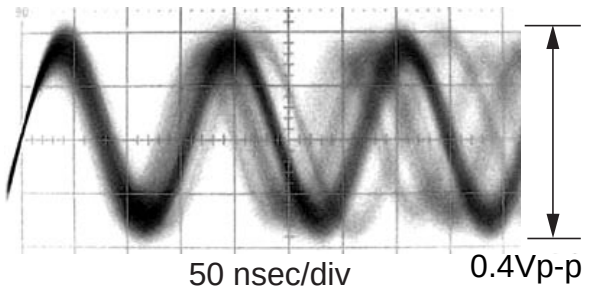 | ㉗ IC101 ㉗,㉞<br>REC<br>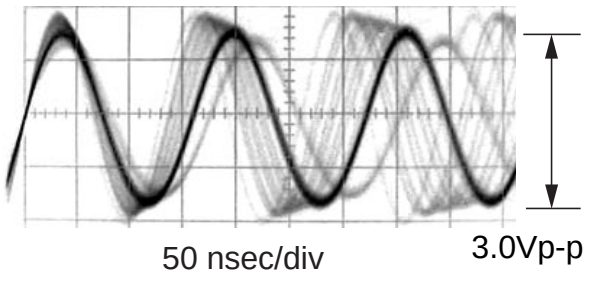 |
| ⑤ IC271 ㉘<br>REC<br>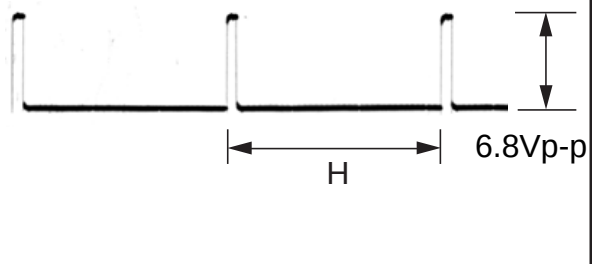 | ⑬ IC151 ⑰<br>REC/PB<br>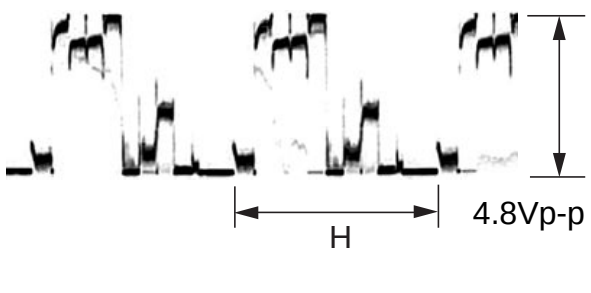 | ⑳ IC151 (66)<br>PB<br>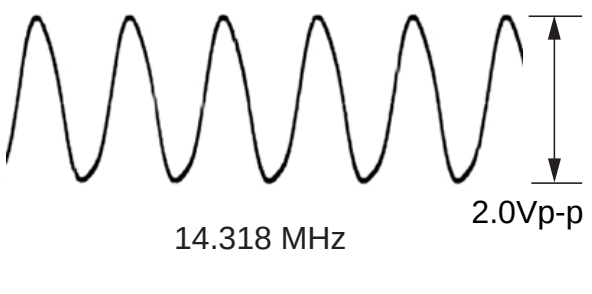 | ㉘ IC221 (44)<br>REC/PB<br>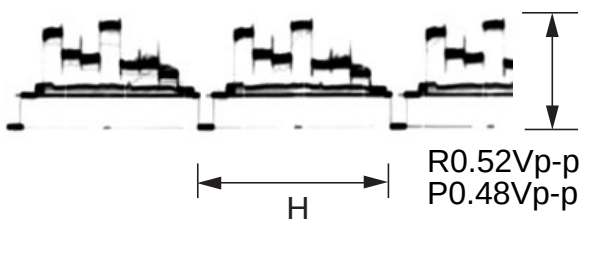 |
| ⑥ IC272 ⑯<br>REC/PB<br>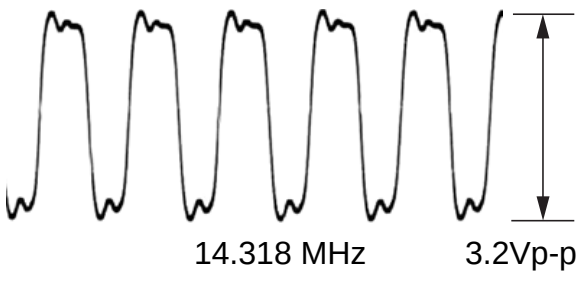 | ⑭ IC151 ㉔<br>REC/PB<br>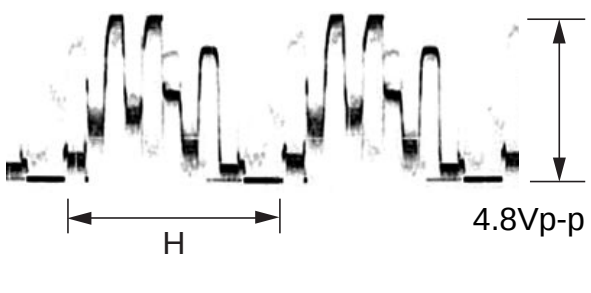 | ㉑ IC151 (81)<br>REC/PB<br>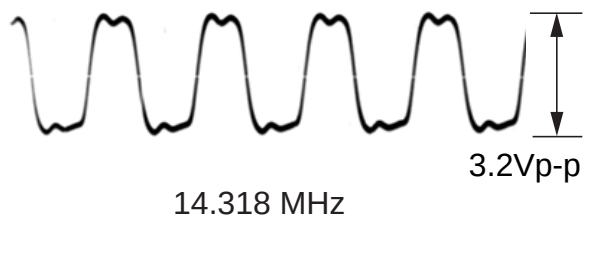 | ㉙ IC221 ⑤<br>REC/PB<br>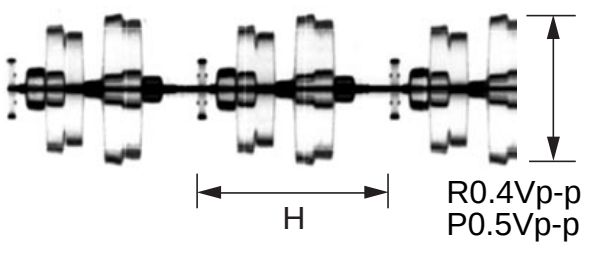 |
| ⑦ IC272 ㉚<br>REC<br>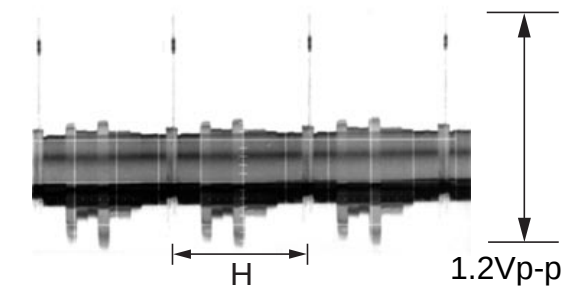 | ⑮ IC151 ㉗<br>REC<br>(COLOR EVF MODEL)<br>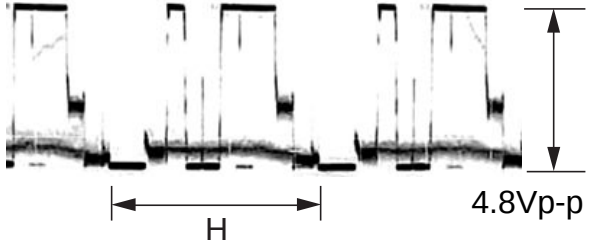 | ㉒ IC151 (85)<br>REC/PB<br>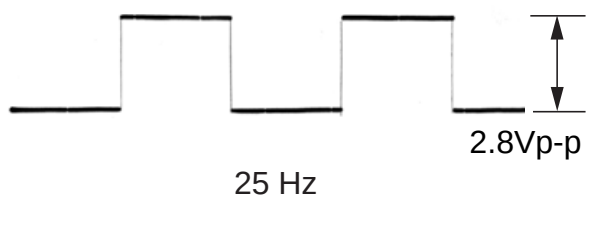 | ㉚ IC221 ⑭<br>REC/PB<br>(S-C OUT)<br>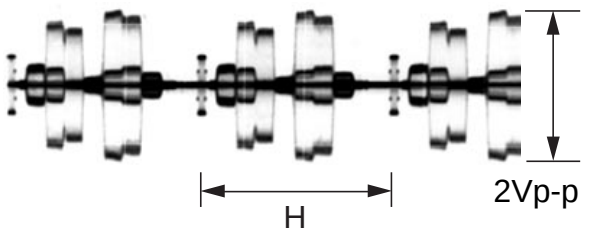 |
| ⑧ IC272 ㊱<br>PB<br> | ⑯ IC151 ㉞<br>REC<br>(B/W EVF MODEL)<br>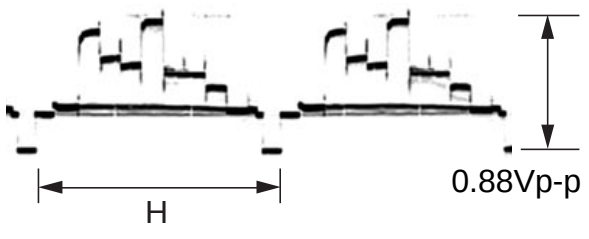 | ㉓ CN101 ⑯, Q101 Ⓒ<br>REC<br>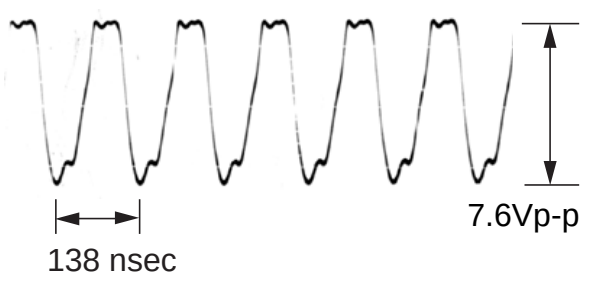 | ㉛ IC221 ⑱<br>REC/PB<br>(S-Y OUT)<br>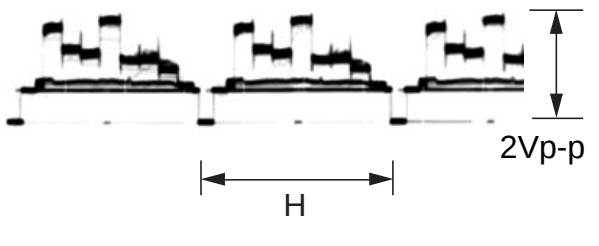 |

## **VC-251** BOARD

㉜ IC221 ㉔
REC/PB
IR ON



㉝ IC221 ㉒
REC/PB



㉞ IC402 ①
REC/PB



㉟ IC402 ㊼
REC/PB



㊱ IC451 (57),(59),(61)
REC/PB



㊲ IC451 ㉒
REC/PB



㊳ IC451 ⑯
REC/PB

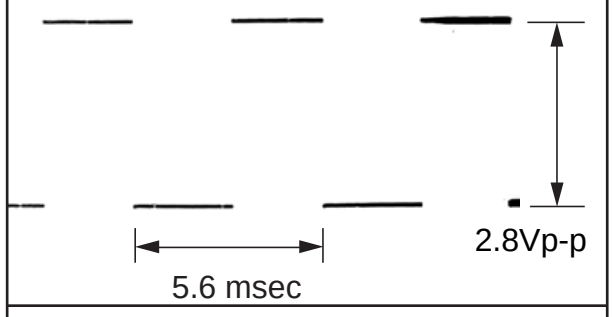

㊴ IC451 ㉕
REC/PB



㊵ IC451 ㉘
REC/PB

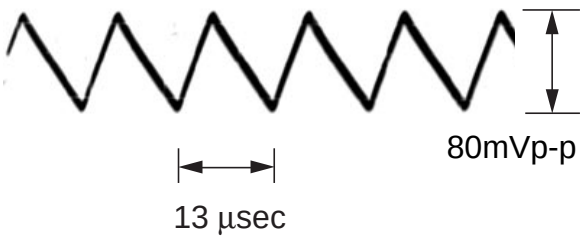

㊶ IC503 ㊵
REC/PB



㊷ IC503 (53)
REC/PB



㊸ IC001 (58)
REC/PB

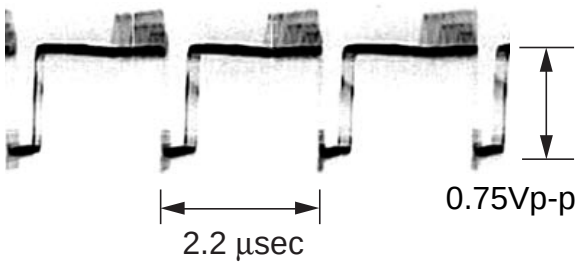

㊹ IC001 (64)
REC/PB

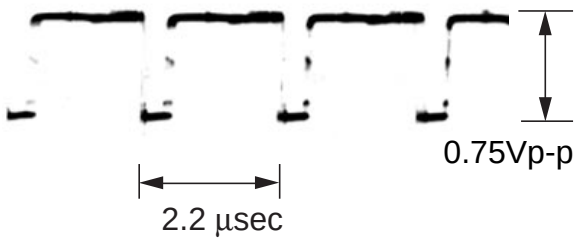

## 4-4. MOUNTED PARTS LOCATION

### CD-281/286 BOARD (SIDE A)

| | |
|---|---|
| C191 | B-2 |
| C196 | B-1 |
| IC191 | A-2 |

### CD-281/286 BOARD (SIDE B)

| | |
|---|---|
| C194 | B-5 |
| C195 | A-4 |
| C197 | A-4 |
| CN191 | A-5 |
| L191 | B-4 |
| Q191 | A-5 |
| R191 | A-5 |
| R192 | A-4 |
| R193 | A-4 |
| R194 | B-4 |
| R195 | B-5 |
| R198 | A-4 |

### MI-040/041 BOARD (SIDE A)

| | |
|---|---|
| C758 | D-2 |
| C762 | D-1 |
| C775 | B-2 |
| C784 | C-2 |
| C791 | B-2 |
| C794 | C-3 |
| C799 | B-4 |
| C800 | C-4 |
| C808 | C-4 |
| C809 | C-4 |
| C810 | B-3 |
| C3901 | B-2 |
| C3902 | B-2 |
| C3903 | B-2 |
| C3904 | B-2 |
| C3905 | B-1 |
| C3906 | B-1 |
| C3907 | B-2 |
| C3908 | B-1 |
| C3910 | B-2 |
| C3911 | B-2 |
| C3912 | C-3 |
| C3913 | B-3 |
| C3914 | A-2 |
| C3915 | A-1 |
| C3916 | A-1 |
| C3917 | A-2 |
| C3918 | A-2 |
| C3919 | A-1 |
| C3920 | A-1 |
| C3921 | A-3 |
| C3922 | A-1 |
| C3923 | A-3 |
| C3924 | A-1 |
| C3925 | A-1 |
| C3926 | A-2 |
| C3929 | A-2 |
| C3930 | A-2 |
| C3932 | C-3 |
| C3934 | A-3 |
| C3935 | A-2 |
| D752 | B-3 |
| D753 | B-4 |
| D754 | A-1 |
| D755 | C-4 |
| D756 | C-4 |
| D3901 | B-4 |
| D3902 | A-3 |
| D3903 | A-4 |
| IC751 | B-3 |
| IC3901 | A-2 |
| L3903 | A-3 |
| R786 | B-4 |
| R797 | C-3 |
| R3901 | A-3 |
| R3903 | B-2 |
| R3904 | B-2 |
| R3905 | B-1 |
| R3907 | B-1 |
| R3908 | A-3 |
| R3909 | A-2 |
| R3912 | A-3 |
| R3913 | A-1 |
| R3914 | A-1 |
| R3915 | A-2 |
| R3916 | A-2 |
| R3917 | A-2 |
| R3926 | A-3 |
| R3927 | B-3 |
| R3931 | B-2 |
| R3945 | A-1 |
| R3946 | A-3 |
| SE751 | C-2 |
| SE752 | E-2 |

### MI-040/041 BOARD (SIDE B)

| | |
|---|---|
| C759 | E-7 |
| C761 | B-5 |
| C763 | C-7 |
| C764 | C-5 |
| C768 | C-7 |
| C769 | B-5 |
| C770 | C-5 |
| C772 | C-7 |
| C773 | B-5 |
| C774 | C-7 |
| C776 | C-5 |
| C777 | C-7 |
| C779 | B-5 |
| C780 | B-5 |
| C781 | C-5 |
| C782 | C-5 |
| C783 | B-5 |
| C785 | B-5 |
| C786 | B-5 |
| C787 | C-6 |
| C788 | B-5 |
| C789 | B-8 |
| C796 | C-5 |
| C3909 | B-7 |
| C3931 | A-7 |
| C3933 | B-6 |
| CN751 | C-5 |
| CN752 | C-6 |
| CN753 | B-6 |
| IC752 | B-5 |
| IC753 | B-7 |
| L751 | B-6 |
| L3902 | B-7 |
| L3904 | A-6 |
| L3905 | A-6 |
| L3906 | B-6 |
| Q3901 | A-7 |
| Q3902 | A-7 |
| Q3903 | A-5 |
| Q3904 | A-5 |
| R757 | C-5 |
| R761 | B-5 |
| R764 | B-5 |
| R765 | B-5 |
| R766 | C-5 |
| R767 | C-5 |
| R768 | B-5 |
| R769 | C-5 |
| R770 | B-5 |
| R771 | B-5 |
| R772 | B-5 |
| R774 | C-5 |
| R775 | C-6 |
| R776 | C-6 |
| R779 | B-7 |
| R780 | C-7 |
| R782 | B-7 |
| R783 | B-7 |
| R784 | B-7 |
| R785 | B-7 |
| R788 | B-5 |
| R789 | B-5 |
| R3902 | B-7 |
| R3919 | A-7 |
| R3920 | A-7 |
| R3921 | A-7 |
| R3922 | A-5 |
| R3923 | A-6 |
| R3924 | B-6 |
| R3925 | A-6 |
| R3928 | B-6 |
| R3929 | A-6 |
| R3930 | B-7 |
| RB751 | C-7 |
| RB752 | E-7 |
| RB3901 | B-8 |

### PD-131 BOARD (SIDE A)

| | |
|---|---|
| C5501 | C-3 |
| C5502 | C-3 |
| C5503 | B-4 |
| C5504 | B-3 |
| C5505 | B-4 |
| C5506 | B-4 |
| C5507 | B-4 |
| C5508 | C-3 |
| C5509 | C-4 |
| C5510 | B-4 |
| C5511 | B-3 |
| C5512 | B-3 |
| C5513 | B-4 |
| C5514 | C-4 |
| C5515 | B-3 |
| C5516 | A-3 |
| C5517 | A-4 |
| C5518 | A-4 |
| C5519 | A-4 |
| C5520 | C-3 |
| C5521 | B-2 |
| C5522 | B-1 |
| C5523 | A-3 |
| C5524 | A-1 |
| C5525 | B-4 |
| C5526 | B-4 |
| C5527 | B-4 |
| C5528 | C-2 |
| C5529 | B-3 |
| C5530 | A-2 |
| C5531 | A-2 |
| C5532 | B-1 |
| C5601 | A-4 |
| C5602 | C-5 |
| C5603 | C-6 |
| C5604 | A-5 |
| C5605 | A-5 |
| C5606 | A-6 |
| C5607 | C-5 |
| C5608 | C-6 |
| CN5501 | A-2 |
| CN5502 | B-2 |
| CN5601 | A-6 |
| CN5701 | B-6 |
| CN5702 | D-6 |
| D5501 | C-3 |
| D5502 | A-4 |
| D5503 | A-2 |
| D5601 | A-5 |
| D5603 | D-2 |
| D5604 | D-2 |
| ET5601 | A-5 |
| ET5602 | C-6 |
| FB5501 | C-3 |
| FB5502 | C-4 |
| IC5501 | B-4 |
| IC5502 | B-3 |
| IC5601 | A-4 |
| IC5602 | A-5 |
| L5501 | C-3 |
| L5502 | C-4 |
| L5503 | B-3 |
| L5601 | C-5 |
| Q5501 | C-3 |
| Q5502 | B-1 |
| Q5503 | A-2 |
| Q5504 | A-2 |
| Q5505 | B-1 |
| Q5601 | A-4 |
| Q5602 | C-6 |
| Q5603 | A-5 |
| R5501 | C-4 |
| R5502 | C-4 |
| R5503 | C-4 |
| R5504 | B-3 |
| R5505 | B-4 |
| R5506 | B-4 |
| R5507 | B-4 |
| R5508 | B-4 |
| R5509 | B-4 |
| R5510 | B-3 |
| R5511 | B-3 |
| R5512 | B-4 |
| R5513 | B-3 |
| R5514 | A-3 |
| R5515 | A-3 |
| R5516 | C-2 |
| R5517 | B-2 |
| R5518 | B-2 |
| R5519 | B-2 |
| R5520 | A-3 |
| R5521 | B-2 |
| R5522 | B-2 |
| R5523 | C-4 |
| R5524 | C-4 |
| R5525 | C-2 |
| R5526 | C-3 |
| R5527 | A-1 |
| R5528 | A-2 |
| R5529 | A-2 |
| R5530 | A-2 |
| R5531 | C-4 |
| R5532 | B-1 |
| R5533 | B-2 |
| R5534 | B-3 |
| R5535 | B-3 |
| R5539 | D-6 |
| R5601 | C-5 |
| R5602 | A-5 |
| R5603 | B-5 |
| R5604 | C-5 |
| R5605 | A-6 |
| R5606 | A-5 |
| R5607 | A-5 |
| R5608 | D-2 |
| R5609 | D-2 |
| R5610 | A-5 |
| R5611 | A-5 |
| R5702 | D-6 |
| R5703 | C-6 |
| RB5501 | A-3 |
| RB5502 | A-2 |
| RB5503 | A-2 |
| RB5601 | A-4 |
| T5601 | B-6 |

### PD-131 BOARD (SIDE B)

| | |
|---|---|
| D5602 | A-8 |

## VF-129 BOARD (SIDE A)

| | |
|---|---|
| C903 | A-2 |
| C904 | B-2 |
| C906 | A-2 |
| C907 | A-1 |
| C909 | B-1 |
| C913 | A-2 |
| CN902 | B-1 |
| D901 | A-1 |
| IC901 | A-1 |
| L901 | B-1 |
| L903 | D-1 |
| R903 | A-1 |
| R907 | B-1 |
| R908 | B-2 |
| R909 | B-2 |
| R910 | B-2 |
| R912 | A-2 |
| R913 | C-2 |
| R914 | C-1 |
| R915 | A-1 |
| R916 | A-1 |
| R917 | A-1 |
| R922 | D-1 |
| R927 | B-1 |
| R928 | B-1 |
| R929 | A-1 |
| R930 | C-1 |
| R931 | C-1 |
| R932 | C-1 |
| RV903 | C-2 |
| RV904 | D-1 |
| T901 | D-1 |
| T902 | D-1 |
| TH901 | C-2 |
| W901 | D-2 |

## VF-141 BOARD (SIDE A)

| | |
|---|---|
| C4501 | B-1 |
| C4504 | B-1 |
| C4510 | B-2 |
| C4515 | B-2 |
| C4516 | B-2 |
| C4517 | A-2 |
| C4521 | A-2 |
| C4524 | A-2 |
| C4527 | B-2 |
| CN4502 | A-2 |
| D4501 | B-2 |
| D4502 | B-2 |
| D4503 | A-2 |
| D4504 | A-2 |
| FB4505 | B-1 |
| IC4502 | A-2 |
| L4501 | B-1 |
| L4504 | B-2 |
| Q4502 | A-1 |
| Q4503 | A-1 |
| Q4504 | B-2 |
| R4505 | A-1 |
| R4506 | A-1 |
| R4507 | A-1 |
| R4508 | B-2 |
| R4522 | B-2 |
| R4524 | A-2 |
| R4525 | A-2 |
| R4529 | A-2 |
| R4530 | A-1 |
| R4534 | A-1 |
| R4535 | A-1 |
| R4542 | A-1 |
| R4543 | A-2 |
| R4544 | B-1 |

## LB-062 BOARD (SIDE A)

| | |
|---|---|
| D4601 | B-2 |
| D4602 | A-1 |
| ND4601 | A-1 |
| R4603 | A-2 |

## LB-062 BOARD (SIDE B)

| | |
|---|---|
| C4601 | A-3 |
| C4602 | A-3 |
| C4603 | A-3 |
| C4604 | A-4 |
| CN4601 | A-4 |
| IC4601 | A-4 |
| L4601 | B-3 |
| L4602 | B-3 |
| Q4601 | A-3 |
| R4601 | A-4 |
| R4602 | B-3 |
| R4604 | A-3 |
| T4601 | B-4 |

## CF-077 BOARD (SIDE A)

| | |
|---|---|
| C001 | F-6 |
| D002 | F-6 |
| D003 | F-3 |
| D004 | F-3 |
| D005 | F-4 |
| IC001 | F-6 |
| R005 | E-6 |
| R006 | G-4 |
| R010 | F-6 |
| R011 | E-5 |
| R013 | E-6 |
| R014 | G-5 |
| R015 | G-5 |
| R016 | G-6 |
| R017 | E-3 |
| R018 | E-4 |
| R023 | G-4 |
| S001 | E-1 |
| S002 | E-7 |
| S003 | G-6 |
| S004 | E-5 |
| S005 | G-5 |
| S006 | E-8 |
| S007 | E-6 |
| S008 | G-6 |
| S009 | F-2 |
| S010 | E-3 |
| S011 | F-1 |

## CF-077 BOARD (SIDE B)

| | |
|---|---|
| BT001 | B-6 |
| BZ001 | B-2 |
| CN001 | B-4 |
| CN002 | A-6 |
| RB001 | B-3 |

## VF-129 BOARD (SIDE B)

| | |
|---|---|
| C901 | A-3 |
| C902 | A-2 |
| C905 | A-3 |
| C908 | B-2 |
| C910 | C-3 |
| C911 | C-3 |
| C912 | B-3 |
| C914 | D-3 |
| C915 | D-3 |
| C916 | C-3 |
| CN901 | B-3 |
| D903 | D-3 |
| L902 | B-2 |
| Q901 | A-2 |
| Q902 | B-2 |
| Q903 | C-3 |
| Q904 | C-2 |
| R901 | A-3 |
| R902 | A-2 |
| R904 | A-3 |
| R905 | A-2 |
| R906 | A-2 |
| R911 | A-3 |
| R918 | C-2 |
| R919 | C-2 |
| R920 | C-2 |
| R921 | D-2 |
| R923 | D-3 |
| R924 | C-3 |
| R925 | C-3 |
| R926 | D-2 |

## VF-141 BOARD (SIDE B)

| | |
|---|---|
| C4503 | A-5 |
| C4505 | A-5 |
| C4506 | A-5 |
| C4507 | A-5 |
| C4508 | B-5 |
| C4509 | B-5 |
| C4511 | B-4 |
| C4512 | B-4 |
| C4513 | A-4 |
| C4514 | A-4 |
| C4518 | A-4 |
| C4519 | A-4 |
| C4520 | A-4 |
| C4523 | B-4 |
| C4526 | A-5 |
| CN4501 | A-5 |
| FB4502 | A-4 |
| IC4501 | A-4 |
| R4515 | B-4 |
| R4516 | B-4 |
| R4517 | B-4 |
| R4518 | A-4 |
| R4520 | B-4 |
| R4521 | B-4 |
| R4523 | B-4 |
| R4526 | A-4 |
| R4527 | A-4 |
| R4528 | A-4 |
| R4545 | B-4 |
| R4546 | B-4 |
| R4547 | A-4 |

## VC-251 BOARD (SIDE A)

| | |
|---|---|
| C010 | E-8 |
| C020 | E-8 |
| C025 | D-8 |
| C038 | F-7 |
| C040 | F-6 |
| C041 | F-7 |
| C045 | F-7 |
| C046 | G-6 |
| C049 | G-7 |
| C050 | G-6 |
| C051 | F-6 |
| C056 | F-7 |
| C058 | F-7 |
| C061 | F-6 |
| C062 | F-6 |
| C105 | B-5 |
| C108 | B-4 |
| C109 | B-5 |
| C110 | B-5 |
| C111 | B-5 |
| C113 | B-4 |
| C114 | B-5 |
| C115 | B-5 |
| C116 | B-4 |
| C117 | B-5 |
| C118 | B-4 |
| C119 | B-4 |
| C121 | B-5 |
| C122 | B-4 |
| C124 | B-4 |
| C125 | B-5 |
| C126 | B-5 |
| C127 | B-5 |
| C128 | B-4 |
| C129 | B-4 |
| C130 | B-5 |
| C131 | C-5 |
| C132 | B-5 |
| C133 | B-5 |
| C135 | B-4 |
| C136 | B-4 |
| C152 | D-3 |
| C154 | E-2 |
| C156 | C-3 |
| C157 | C-3 |
| C158 | C-3 |
| C160 | D-2 |
| C161 | C-3 |
| C162 | E-3 |
| C163 | E-3 |
| C164 | E-3 |
| C165 | E-3 |
| C166 | D-3 |
| C167 | D-3 |
| C168 | D-3 |
| C169 | D-3 |
| C170 | C-3 |
| C171 | C-3 |
| C172 | C-3 |
| C173 | C-3 |
| C174 | C-3 |
| C175 | C-3 |
| C177 | C-3 |
| C184 | E-3 |
| C185 | E-4 |
| C186 | C-3 |
| C187 | C-4 |
| C188 | C-4 |
| C189 | E-3 |
| C190 | E-4 |
| C192 | C-5 |
| C194 | C-5 |
| C201 | C-3 |
| C223 | C-2 |
| C233 | B-2 |
| C247 | B-2 |
| C248 | B-3 |
| C249 | C-1 |
| C250 | B-1 |
| C252 | B-3 |
| C280 | F-4 |
| C281 | F-4 |
| C286 | F-3 |
| C287 | F-3 |
| C288 | F-3 |
| C289 | F-3 |

| | |
|---|---|
| C290 | F-3 |
| C291 | F-4 |
| C292 | F-3 |
| C293 | F-3 |
| C294 | F-3 |
| C295 | F-3 |
| C296 | F-3 |
| C297 | F-4 |
| C301 | G-4 |
| C302 | G-4 |
| C303 | G-3 |
| C304 | G-3 |
| C305 | G-3 |
| C306 | G-3 |
| C307 | G-4 |
| C308 | G-6 |
| C309 | G-4 |
| C310 | E-5 |
| C311 | F-4 |
| C312 | G-3 |
| C313 | G-3 |
| C314 | F-4 |
| C315 | G-3 |
| C316 | G-6 |
| C317 | F-4 |
| C318 | F-4 |
| C319 | G-4 |
| C352 | B-1 |
| C353 | B-1 |
| C354 | A-3 |
| C357 | B-2 |
| C359 | B-3 |
| C361 | A-1 |
| C362 | A-1 |
| C365 | A-2 |
| C366 | B-3 |
| C367 | A-2 |
| C374 | A-3 |
| C403 | B-7 |
| C404 | B-7 |
| C458 | B-8 |
| C459 | B-8 |
| C461 | B-8 |
| C462 | B-8 |
| C503 | E-7 |
| C504 | E-7 |
| C511 | E-7 |
| C512 | E-7 |
| C513 | C-7 |
| C514 | D-8 |
| C515 | C-9 |
| C516 | C-8 |
| C517 | D-8 |
| C519 | C-7 |
| C701 | C-2 |
| | |
| CN001 | D-9 |
| CN101 | A-4 |
| CN271 | F-5 |
| CN301 | G-4 |
| CN701 | C-2 |
| CN704 | A-2 |
| CN706 | A-6 |
| CN707 | A-7 |
| CN708 | E-6 |
| CN709 | B-6 |
| CN710 | G-7 |
| CN711 | C-9 |
| CN712 | A-8 |
| CN713 | D-6 |
| CN715 | D-6 |
| | |
| D001 | D-8 |
| D002 | D-8 |
| D004 | D-8 |
| D005 | D-8 |
| D301 | G-3 |
| D501 | E-7 |
| D505 | E-7 |
| | |
| ET001 | G-7 |
| ET002 | G-9 |
| ET101 | B-5 |
| ET102 | B-4 |
| | |
| F001 | D-9 |

| | |
|---|---|
| F002 | E-8 |
| F003 | E-9 |
| F004 | E-8 |
| F005 | E-7 |
| | |
| FB001 | F-7 |
| FB002 | F-7 |
| FB003 | F-7 |
| FB101 | A-4 |
| FB102 | A-5 |
| FB154 | D-2 |
| FB275 | E-4 |
| FB301 | G-4 |
| | |
| IC101 | B-4 |
| IC151 | D-4 |
| IC272 | F-3 |
| IC301 | G-5 |
| IC302 | G-4 |
| IC503 | D-7 |
| | |
| L001 | G-8 |
| L002 | F-8 |
| L004 | G-8 |
| L005 | G-9 |
| L006 | F-9 |
| L007 | G-8 |
| L008 | G-7 |
| L009 | F-7 |
| L010 | F-7 |
| L012 | F-7 |
| L013 | G-7 |
| L014 | G-7 |
| L016 | F-7 |
| L151 | D-2 |
| L154 | F-3 |
| L271 | E-4 |
| L301 | G-6 |
| L303 | F-4 |
| L705 | D-1 |
| | |
| Q001 | E-7 |
| Q002 | E-9 |
| Q003 | E-8 |
| Q004 | E-8 |
| Q101 | A-5 |
| Q102 | B-5 |
| Q103 | B-5 |
| Q104 | B-5 |
| Q152 | E-3 |
| Q153 | E-3 |
| Q154 | D-3 |
| Q155 | D-3 |
| Q156 | D-3 |
| Q157 | D-3 |
| Q158 | E-2 |
| Q301 | G-3 |
| Q302 | G-5 |
| Q303 | F-3 |
| Q701 | E-6 |
| | |
| R003 | D-8 |
| R008 | E-8 |
| R010 | E-8 |
| R013 | E-8 |
| R017 | E-8 |
| R018 | E-8 |
| R022 | E-7 |
| R052 | E-8 |
| R101 | A-5 |
| R102 | A-5 |
| R105 | B-5 |
| R107 | B-5 |
| R108 | B-5 |
| R112 | B-5 |
| R113 | B-5 |
| R115 | B-5 |
| R116 | B-4 |
| R117 | B-5 |
| R118 | B-4 |
| R120 | B-5 |
| R121 | B-4 |
| R122 | B-4 |
| R154 | C-3 |
| R155 | C-3 |
| R156 | E-2 |

| | |
|---|---|
| R157 | E-2 |
| R158 | D-2 |
| R159 | D-2 |
| R160 | D-2 |
| R161 | D-2 |
| R162 | E-2 |
| R163 | E-2 |
| R164 | D-2 |
| R165 | D-2 |
| R166 | D-2 |
| R167 | D-2 |
| R169 | C-3 |
| R170 | C-3 |
| R171 | C-3 |
| R173 | C-3 |
| R174 | C-3 |
| R176 | C-3 |
| R177 | E-3 |
| R178 | E-2 |
| R179 | E-2 |
| R180 | E-3 |
| R181 | E-3 |
| R182 | E-3 |
| R183 | E-3 |
| R184 | E-3 |
| R185 | D-3 |
| R186 | D-3 |
| R187 | D-3 |
| R188 | D-3 |
| R189 | D-3 |
| R190 | D-3 |
| R191 | D-3 |
| R192 | D-3 |
| R193 | C-3 |
| R197 | E-3 |
| R198 | E-3 |
| R199 | C-4 |
| R200 | C-4 |
| R204 | E-2 |
| R206 | C-4 |
| R208 | C-5 |
| R218 | C-4 |
| R229 | D-1 |
| R301 | G-4 |
| R302 | G-4 |
| R304 | G-3 |
| R306 | G-3 |
| R307 | G-4 |
| R308 | G-4 |
| R309 | G-3 |
| R310 | G-3 |
| R311 | G-4 |
| R312 | G-3 |
| R313 | G-4 |
| R314 | G-4 |
| R316 | G-4 |
| R317 | G-4 |
| R318 | F-4 |
| R319 | F-3 |
| R321 | F-3 |
| R322 | F-3 |
| R323 | G-3 |
| R354 | A-1 |
| R355 | A-1 |
| R358 | A-1 |
| R359 | A-1 |
| R402 | B-7 |
| R451 | D-8 |
| R452 | E-8 |
| R455 | A-7 |
| R457 | A-8 |
| R513 | D-7 |
| R516 | C-7 |
| R518 | E-7 |
| R519 | E-7 |
| R520 | E-7 |
| R521 | E-7 |
| R525 | C-8 |
| R542 | C-8 |
| R543 | C-7 |
| R544 | C-8 |
| R552 | C-8 |
| R554 | D-8 |
| R558 | D-8 |
| R709 | D-6 |
| R710 | D-6 |

| | |
|---|---|
| R711 | G-7 |
| R712 | F-6 |
| R713 | C-2 |
| | |
| RB101 | B-5 |
| RB221 | C-1 |
| RB222 | D-1 |
| RB223 | D-1 |
| RB272 | F-3 |
| RB302 | G-3 |
| RB510 | D-8 |
| RB512 | C-7 |
| RB514 | D-7 |
| | |
| T001 | F-8 |
| | |
| X501 | C-7 |
| X502 | C-8 |

## VC-251 BOARD (SIDE B)

| | |
|---|---|
| C001 | E-12 |
| C002 | E-12 |
| C003 | E-12 |
| C004 | E-12 |
| C005 | E-12 |
| C008 | E-12 |
| C009 | E-12 |
| C011 | E-11 |
| C012 | E-13 |
| C013 | E-11 |
| C014 | E-13 |
| C015 | E-11 |
| C016 | F-11 |
| C017 | E-11 |
| C018 | F-13 |
| C019 | F-13 |
| C021 | F-12 |
| C022 | F-12 |
| C023 | F-12 |
| C024 | F-12 |
| C026 | G-11 |
| C027 | G-11 |
| C028 | G-10 |
| C029 | F-10 |
| C030 | G-11 |
| C031 | F-11 |
| C032 | G-11 |
| C033 | G-11 |
| C034 | F-11 |
| C035 | F-10 |
| C036 | F-10 |
| C037 | G-11 |
| C039 | G-11 |
| C042 | G-12 |
| C043 | F-12 |
| C047 | G-12 |
| C048 | F-12 |
| C052 | F-10 |
| C053 | G-13 |
| C054 | G-13 |
| C055 | G-12 |
| C057 | F-13 |
| C059 | F-10 |
| C060 | E-12 |
| C071 | F-13 |
| C072 | F-13 |
| C101 | A-14 |
| C102 | A-15 |
| C103 | A-15 |
| C104 | B-14 |
| C106 | B-15 |
| C107 | B-14 |
| C112 | B-14 |
| C123 | B-14 |
| C134 | B-14 |
| C151 | C-16 |
| C155 | C-15 |
| C176 | D-16 |
| C178 | C-16 |
| C179 | C-16 |
| C182 | C-16 |
| C183 | C-16 |
| C195 | D-14 |
| C196 | E-14 |
| C221 | C-18 |
| C225 | C-17 |
| C226 | C-17 |
| C227 | C-17 |
| C228 | C-17 |
| C231 | D-18 |
| C234 | C-17 |
| C235 | D-17 |
| C236 | C-17 |
| C238 | C-18 |
| C246 | C-18 |
| C251 | C-18 |
| C271 | F-15 |
| C272 | F-15 |
| C273 | F-15 |
| C274 | F-15 |
| C275 | F-15 |
| C276 | F-15 |
| C277 | F-15 |
| C278 | F-15 |
| C279 | F-15 |
| C282 | F-15 |
| C283 | F-16 |
| C284 | E-14 |
| C285 | E-15 |
| C351 | B-18 |
| C355 | B-17 |
| C356 | B-17 |
| C358 | B-17 |
| C363 | A-18 |
| C364 | B-17 |
| C368 | B-17 |
| C369 | A-17 |
| C371 | A-17 |
| C372 | A-17 |
| C373 | A-17 |
| C375 | B-17 |
| C376 | A-17 |
| C377 | A-17 |
| C378 | A-17 |
| C379 | A-17 |
| C380 | B-17 |
| C381 | A-17 |
| C382 | B-17 |
| C383 | A-16 |
| C384 | A-16 |
| C385 | B-16 |
| C386 | A-16 |
| C387 | B-16 |
| C388 | B-16 |
| C389 | A-16 |
| C390 | B-16 |
| C391 | B-16 |
| C392 | B-16 |
| C393 | B-16 |
| C394 | A-16 |
| C395 | B-16 |
| C396 | B-16 |
| C397 | B-16 |
| C398 | B-17 |
| C401 | C-11 |
| C402 | B-12 |
| C405 | C-12 |
| C406 | C-13 |
| C407 | C-13 |
| C408 | B-13 |
| C409 | A-13 |
| C410 | B-13 |
| C411 | B-13 |
| C451 | B-11 |
| C452 | B-11 |
| C453 | B-11 |
| C454 | B-11 |
| C455 | B-11 |
| C456 | B-11 |
| C457 | B-11 |
| C460 | A-12 |
| C463 | B-11 |
| C464 | A-11 |
| C465 | B-10 |
| C466 | B-10 |
| C467 | B-11 |
| C468 | B-10 |
| C469 | B-11 |
| C470 | B-10 |
| C471 | B-11 |
| C472 | B-10 |
| C473 | B-10 |
| C474 | A-11 |
| C475 | A-10 |
| C476 | A-10 |
| C477 | A-11 |
| C478 | A-11 |
| C479 | A-11 |
| C480 | A-11 |
| C481 | A-11 |
| C482 | A-11 |
| C483 | A-11 |
| C484 | A-11 |
| C485 | B-11 |
| C501 | E-11 |
| C502 | E-11 |
| C505 | E-12 |
| C506 | E-12 |
| C507 | E-12 |
| C508 | E-12 |
| C509 | E-12 |
| C510 | E-12 |
| C518 | D-10 |
| C601 | D-15 |
| C602 | D-15 |
| C603 | D-16 |
| C707 | E-17 |
| C708 | E-18 |
| CN702 | E-18 |
| CN703 | B-18 |
| CN714 | C-10 |
| D006 | F-12 |
| D007 | F-11 |
| D010 | F-12 |
| D151 | C-16 |
| D152 | C-16 |
| D271 | F-15 |
| D272 | E-16 |
| D451 | B-10 |
| D503 | E-10 |
| D504 | D-11 |
| D702 | D-18 |
| D703 | F-18 |
| FB152 | E-16 |
| FB153 | E-14 |
| FB221 | C-18 |
| FB271 | F-15 |
| FB273 | F-16 |
| FB274 | F-16 |
| FB276 | F-16 |
| FB601 | D-16 |
| IC001 | E-12 |
| IC153 | E-14 |
| IC221 | C-18 |
| IC271 | F-15 |
| IC351 | B-17 |
| IC401 | C-11 |
| IC402 | B-12 |
| IC451 | B-11 |
| IC502 | E-11 |
| IC504 | E-11 |
| IC601 | D-15 |
| L003 | G-11 |
| L011 | G-11 |
| L101 | A-15 |
| L102 | B-14 |
| L103 | B-15 |
| L104 | B-14 |
| L152 | E-16 |
| L155 | C-16 |
| L156 | C-16 |
| L221 | C-17 |
| L224 | C-18 |
| L272 | F-16 |
| L601 | D-15 |
| Q006 | G-11 |
| Q007 | F-11 |
| Q008 | F-11 |
| Q009 | G-10 |
| Q010 | G-11 |
| Q011 | G-10 |
| Q012 | F-10 |
| Q013 | G-11 |
| Q014 | F-11 |
| Q015 | F-10 |
| Q016 | F-10 |
| Q018 | G-12 |
| Q019 | G-13 |
| Q020 | G-12 |
| Q021 | G-12 |
| Q022 | G-13 |
| Q023 | G-12 |
| Q026 | F-13 |
| Q027 | F-12 |
| Q071 | F-13 |
| Q072 | F-13 |
| Q105 | B-14 |
| Q106 | B-15 |
| Q107 | B-14 |
| Q151 | C-15 |
| Q351 | A-18 |
| Q352 | A-18 |
| Q353 | A-18 |
| Q354 | A-17 |
| Q355 | A-18 |
| Q451 | A-11 |
| Q501 | D-10 |
| Q702 | E-18 |
| Q703 | E-17 |
| Q704 | D-18 |
| Q705 | D-18 |
| R001 | E-12 |
| R002 | E-12 |
| R004 | E-11 |
| R006 | E-13 |
| R007 | E-12 |
| R009 | E-13 |
| R011 | E-11 |
| R012 | E-13 |
| R014 | E-11 |
| R016 | E-13 |
| R020 | E-11 |
| R021 | E-11 |
| R023 | E-11 |
| R025 | F-10 |
| R026 | F-11 |
| R027 | F-11 |
| R028 | G-12 |
| R029 | F-11 |
| R030 | G-12 |
| R031 | G-12 |
| R032 | G-12 |
| R033 | F-10 |
| R034 | F-11 |
| R035 | G-13 |
| R036 | G-12 |
| R037 | G-12 |
| R038 | G-13 |
| R039 | G-12 |
| R040 | G-12 |
| R041 | G-13 |
| R042 | G-12 |
| R043 | G-12 |
| R044 | G-12 |
| R045 | G-12 |
| R046 | G-12 |
| R047 | F-12 |
| R048 | G-12 |
| R049 | F-12 |
| R050 | G-13 |
| R051 | G-13 |
| R071 | F-13 |
| R072 | F-13 |
| R073 | F-12 |
| R074 | F-13 |
| R106 | B-14 |
| R109 | B-15 |
| R110 | B-15 |
| R111 | B-14 |
| R123 | B-15 |
| R124 | B-15 |
| R168 | D-15 |
| R172 | C-15 |
| R175 | C-16 |
| R195 | C-16 |
| R196 | C-15 |
| R226 | D-17 |
| R232 | D-17 |
| R271 | F-15 |
| R274 | F-14 |
| R275 | F-15 |
| R279 | F-16 |
| R280 | E-15 |
| R281 | E-16 |
| R351 | B-18 |
| R352 | B-17 |
| R353 | B-17 |
| R356 | B-17 |
| R363 | B-18 |
| R364 | A-18 |
| R368 | B-17 |
| R372 | B-17 |
| R373 | A-16 |
| R374 | B-16 |
| R379 | B-16 |
| R381 | E-18 |
| R382 | E-18 |
| R401 | B-12 |
| R403 | C-11 |
| R404 | C-12 |
| R408 | C-12 |
| R411 | C-12 |
| R417 | B-13 |
| R420 | B-13 |
| R423 | B-13 |
| R428 | B-13 |
| R430 | C-13 |
| R431 | B-13 |
| R432 | C-13 |
| R433 | B-13 |
| R434 | A-12 |
| R458 | B-11 |
| R459 | B-11 |
| R460 | B-11 |
| R461 | B-10 |
| R462 | C-10 |
| R464 | A-12 |
| R465 | A-12 |
| R466 | B-10 |
| R467 | B-10 |
| R468 | B-11 |
| R469 | A-11 |
| R470 | B-10 |
| R471 | A-11 |
| R472 | A-11 |
| R474 | A-10 |
| R480 | A-10 |
| R481 | A-11 |
| R501 | D-10 |
| R502 | E-10 |
| R503 | E-10 |
| R504 | D-10 |
| R531 | C-12 |
| R547 | C-11 |
| R559 | D-11 |
| R611 | B-13 |
| R612 | B-13 |
| R613 | C-13 |
| R614 | B-13 |
| R701 | E-17 |
| R702 | E-17 |
| R703 | E-17 |
| R704 | D-18 |
| R705 | D-17 |
| R706 | D-18 |
| R707 | D-18 |
| R708 | D-18 |
| RB102 | B-14 |
| RB151 | C-15 |
| RB273 | F-16 |
| RB351 | A-17 |
| RB352 | A-17 |
| RB401 | A-12 |
| RB402 | C-13 |
| RB404 | B-13 |
| RB405 | B-13 |
| RB406 | B-13 |
| RB407 | A-13 |
| RB451 | A-12 |
| RB452 | A-11 |
| RB501 | D-12 |
| RB502 | D-12 |
| RB503 | D-12 |
| RB504 | D-12 |
| RB505 | D-12 |
| RB506 | D-12 |
| RB507 | D-12 |
| RB508 | E-12 |
| RB509 | E-11 |
| RB511 | D-11 |
| RB513 | C-11 |
| VDR701 | E-18 |
| VDR702 | E-18 |
| VDR703 | E-18 |
| VDR704 | E-18 |
| VDR706 | E-18 |
| VDR707 | E-18 |
| X271 | E-16 |
| X401 | B-12 |

# SECTION 5
# ADJUSTMENTS

# 1. Before starting adjustment

## 1-1. Adjusting items when replacing main parts and boards.

When replacing main parts, adjust the items indicated by ● in the following table.

| Adjustment Section | Adjustment | Replaced parts | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | Block replacement | | | | | | | | | Parts replacement | | | | | | | | | | | | | | | | |
| | | Lens device | Video light *8 | LCD block ND901 (Fluorescent tube) *4 | LCD block LCD901 (LCD panel) *4 | B/W EVF block V901 (Picture tube) *3 | Color EVF block LCD903 (LCD panel) *2 | Mechanism deck *1 | Mechanism deck M901 (Drum assy.) *1 | Mechanism deck M902 (Capstan motor) | CD-286/281 board IC191 (CCD imager) | VC-251 board IC271, X271 (Timing generator) | VC-251 board IC272 (S/H, AGC) | VC-251 board IC151 (Camera, video process) | VC-251 board IC101 (REC/PB AMP) | VC-251 board IC221 (Video out) | VC-251 board IC601 (EVR) | VC-251 board IC351 (Audio process) | MI-040/041 board SE751,752 (PITCH,YAW sensor) *6 | MI-040/041 board IC3901 (IR transmitter) *5 | PD-131 board IC5501 (RGB driver (LCD)) *4 | PD-131 board IC5502 (Timing generator (LCD)) *4 | VF-129 board IC901 (CRT drive (EVF)) *3 | VF-129 board T901 (FBT (EVF)) *3 | VF-141 board IC4501 (RGB driver (EVF)) *2 | VF-141 board IC4502 (Timing generator (EVF)) *2 | LB-62 board ND4601 (Fluorescent tube (EVF)) *2 |
| Initialization of D, E, F, 7 page data | Initialization of D, E, F, 7 page data | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Modification of D, E, F, 7 page data | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Camera | Lens type input | ● | | | | | | | | | | | | | | | | | | | | | | | | | |
| | HALL adj. | ● | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Flange back adj. | ● | | | | | | | | | ● | | | | | | | | | | | | | | | | |
| | Color reproduction adj. | | | | | | | | | | ● | | ● | | | | | | | | | | | | | | |
| | AWB & LV standard data input | | | | | | | | | | ● | | ● | | | | | | | | | | | | | | |
| | Auto white balance adj. | | | | | | | | | | ● | | ● | | | | | | | | | | | | | | |
| | Angular velocity sensor sens. adj. *6 | | | | | | | | | | | | | | | | | | ● | | | | | | | | |
| Color EVF *2 | RGB AMP adj. | | | | | | | | | | | | | | | | | | | | | | | | ● | | |
| | Contrast adj. | | | | | | | | | | | | | | | | | | | | | | | | ● | | |
| | Backlight consumption current adj. | | | | | | | | | | | | | | | | | | | | | | | | | | ● |
| | White balance adj. | | | | | | ● | | | | | | | | | | | | | | | | | | ● | | ● |
| B/W EVF *3 | Centering adj. | | | | | ● | | | | | | | | | | | | | | | | | ● | ● | | | |
| | Focus adj. | | | | | ● | | | | | | | | | | | | | | | | | ● | ● | | | |
| | Aberration adj. | | | | | ● | | | | | | | | | | | | | | | | | ● | ● | | | |
| | Horizontal amplitude adj. | | | | | ● | | | | | | | | | | | | | | | | | ● | ● | | | |
| | Vertical amplitude adj. | | | | | ● | | | | | | | | | | | | | | | | | ● | ● | | | |
| | Brightness adj. | | | | | ● | | | | | | | | | | | | | | | | | ● | ● | | | |
| LCD *4 | VCO adj. | | | | | | | | | | | | | | | | | | | | | ● | | | | | |
| | RGB AMP adj. | | | | | | | | | | | | | | | | | | | | ● | | | | | | |
| | Contrast adj. | | | | | | | | | | | | | | | | | | | | ● | | | | | | |
| | COM-AMP adj. | | | | | | | | | | | | | | | | | | | | ● | | | | | | |
| | V-COM adj. | | | | ● | | | | | | | | | | | | | | | | ● | | | | | | |
| | White balance adj. | | | ● | ● | | | | | | | | | | | | | | | | ● | | | | | | |
| Servo | CAP FG offset adj. | | | | | | | ● | | ● | | | | | | | | | | | | | | | | | |
| | Switching position adj. | | | | | | | ● | ● | | | | | | | | | | | | | | | | | | |
| Video | 28MHz origin oscillation adj. | | | | | | | | | | | ● | | | | | ● | | | | | | | | | | |
| | AFC fo adj. | | | | | | | | | | | | | ● | | | | | | | | | | | | | |
| | Filter fo adj. | | | | | | | | | | | | | | | ● | | | | | | | | | | | |
| | Y OUT level adj. | | | | | | | | | | | | | ● | | ● | | | | | | | | | | | |
| | C OUT level adj. | | | | | | | | | | | | | ● | | ● | | | | | | | | | | | |
| | REC Y current adj. | | | | | | | | | | | | | ● | ● | | | | | | | | | | | | |
| | REC C/AFM current adj. | | | | | | | | | | | | | ● | ● | | | | | | | | | | | | |
| IR *5 | IR video carrier frequency adj. | | | | | | | | | | | | | | | ● | | | | ● | | | | | | | |
| | IR video deviation adj. | | | | | | | | | | | | | | | ● | | | | ● | | | | | | | |
| | IR audio deviation adj. | | | | | | | | | | | | | | | | | ● | | ● | | | | | | | |
| Audio | 1.5MHz deviation adj. | | | | | | | | | | | | | | | | | ● | | | | | | | | | |
| | BPF fo adj. | | | | | | | | | | | | | | | | | ● | | | | | | | | | |
| Mechanism | Tape path adj. | | | | | | | ● | ● | ● | | | | | | | | | | | | | | | | | |

*Table. 5-1-1(1).*

| Adjustment Section | Adjustment | Board replacement | | | | | EEPROM |
|---|---|---|---|---|---|---|---|
| | | VC-251 board (COMPLETE) | MI-040/041 board (COMPLETE) *7 | PD-131 board (COMPLETE) *4 | VF-129 board (COMPLETE) *3 | VF-141 board (COMPLETE) *2 | VC-251 board IC401 |
| Initialization of D, E, F, 7 page data | Initialization of D, E, F, 7 page data | | | | | | ● |
| | Modification of D, E, F, 7 page data | ● | | | | | ● |
| Camera | Lens type input | ● | | | | | ● |
| | HALL adj. | ● | | | | | ● |
| | Flange back adj. | ● | | | | | ● |
| | Color reproduction adj. | ● | | | | | ● |
| | AWB & LV standard data input | ● | | | | | ● |
| | Auto white balance adj. | ● | | | | | ● |
| | Angular velocity sensor sens. adj. *6 | ● | ● | | | | ● |
| Color EVF *2 | RGB AMP adj. | ● | | | | ● | ● |
| | Contrast adj. | ● | | | | ● | ● |
| | Backlight consumption current adj. | ● | | | | ● | ● |
| | White balance adj. | ● | | | | ● | ● |
| B/W EVF *3 | Centering adj. | | | | ● | | |
| | Focus adj. | | | | ● | | |
| | Aberration adj. | | | | ● | | |
| | Horizontal amplitude adj. | | | | ● | | |
| | Vertical amplitude adj. | | | | ● | | |
| | Brightness adj. | | | | ● | | |
| LCD *4 | VCO adj. | ● | | ● | | | ● |
| | RGB AMP adj. | ● | | ● | | | ● |
| | Contrast adj. | ● | | ● | | | ● |
| | COM-AMP adj. | ● | | ● | | | ● |
| | V-COM adj. | ● | | ● | | | ● |
| | White balance adj. | ● | | ● | | | ● |
| Servo | CAP FG offset adj. | ● | | | | | ● |
| | Switching position adj. | ● | | | | | ● |
| Video | 28MHz origin oscillation adj. | | | | | | ● |
| | AFC fo adj. | | | | | | ● |
| | Filter fo adj. | | | | | | ● |
| | Y OUT level adj. | | | | | | ● |
| | C OUT level adj. | | | | | | ● |
| | REC Y current adj. | | | | | | ● |
| | REC C/AFM current adj. | | | | | | ● |
| IR *5 | IR video carrier frequency adj. | | ● | | | | ● |
| | IR video deviation adj. | | ● | | | | ● |
| | IR audio deviation adj. | | ● | | | | ● |
| Audio | 1.5MHz deviation adj. | | | | | | ● |
| | BPF fo adj. | | | | | | ● |
| Mechanism | Tape path adj. | | | | | | |

Table. 5-1-1(2).

*1: When replacing the drum assy. or mechanism deck, reset the data of page: 2, address: A2 to A4 to “00”. (Refer to “Record of Use check” of “5-4. SERVICE MODE”)

*2: Color EVF model (CCD-TR818)

*3: B/W EVF model (CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

*4: TRV model: (CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

*5: LASER LINK model (CCD-TRV98)

*6: Steady shot model (CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

*7: MI-040 board: TR model
MI-041 board: TRV model

*8: When replacing the video light, reset the data of page: 2, address: E0 to E2 to “00”. (Except for CCD-TR818)

# 5-1. CAMERA SECTION ADJUSTMENT

## 1-1. PREPARATIONS BEFORE ADJUSTMENT (CAMERA SECTION)

### 1-1-1. List of Service Tools

- Oscilloscope
- Regulated power supply
- Color monitor
- Digital voltmeter
- Vectorscope

| Ref. No. | Name | Parts Code | Usage |
|---|---|---|---|
| J-1 | Filter for color temperature correction (C14) | J-6080-058-A | Auto white balance adjustment/check<br>White balance adjustment/check |
| J-2 | ND filter 1.0 | J-6080-808-A | White balance check |
| | ND filter 0.4 | J-6080-806-A | White balance check |
| | ND filter 0.1 | J-6080-807-A | White balance check |
| J-3 | Pattern box PTB-450 | J-6082-200-A | |
| J-4 | Color chart for pattern box | J-6020-250-A | |
| J-5 | Adjustment remote commander (RM-95 upgraded) (Note) | J-6082-053-B | |
| J-6 | Siemens star chart | J-6080-875-A | For checking the flange back |
| J-7 | Clear chart for pattern box | J-6080-621-A | |
| J-8 | Multi CPC jig | J-6082-311-A | For adjusting the LCD block |
| J-9 | CPC jig for BX/BK | J-6082-521-A | For connecting the adjustment remote commander |
| J-10 | IR receiver jig | J-6082-383-A | For adjusting the IR transmitter |
| J-11 | Minipattern box | J-6082-353-B | For adjusting the flange back |
| J-12 | Camera base | J-6082-384-A | For adjusting the flange back |

**Note:** If the micro processor IC in the adjustment remote commander is not the new micro processor (UPD7503G-C56-12), the pages cannot be switched. In this case, replace with the new micro processor (8-759-148-35).

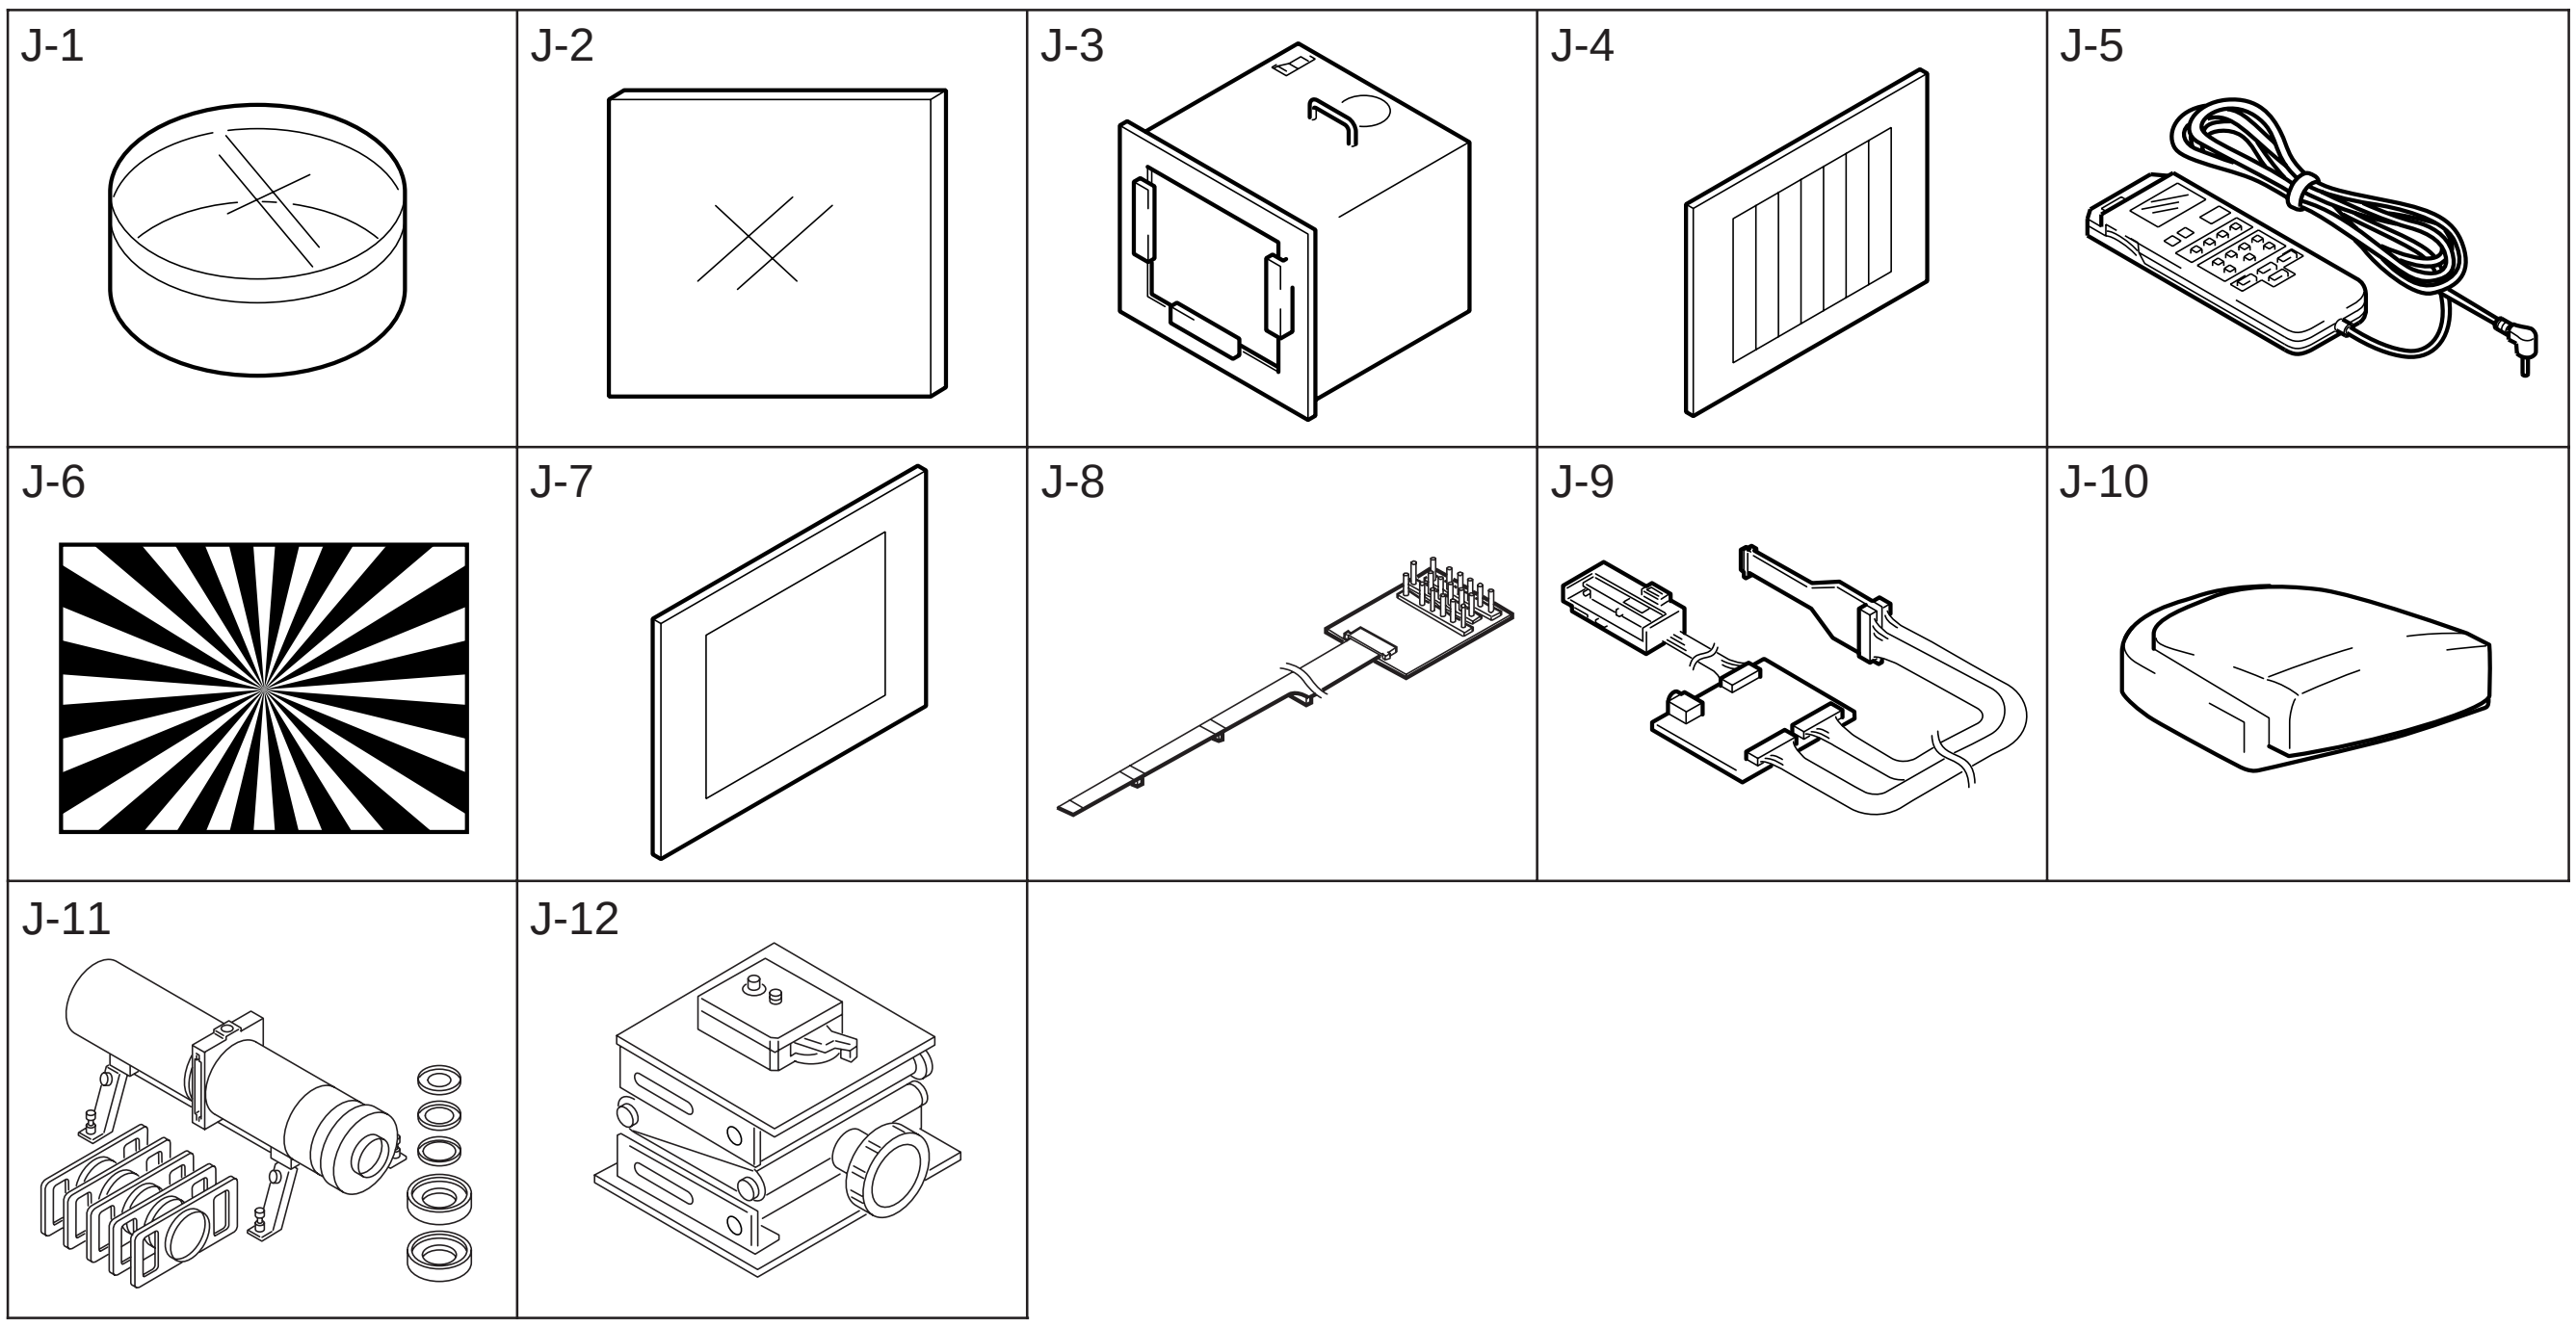

*Fig. 5-1-1.*

### 1-1-2. Preparations

**Note1:** For details of how remove the cabinet and boards, refer to “2. DISASSEMBLY”.

**Note2:** When performing only the adjustments, the lens block and boards need not be disassembled.

**Note3:** CF-077 board, MI-040 board: TR model
CF-1000 block, MI-041 board: TRV model
TR model: CCD-TR618/TR618E/TR718E/TR728E/TR818
TRV model: CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

1) Connect the equipment for adjustments according to Fig. 5-1-4, 5-1-5.
2) Connect the adjustment remote commander to CN713 of VC-251 board or CPC connector of FP-262 flexible via CPC jig for BX/BK (J-6082-521-A). To operate the adjustment remote commander, connect the AC power adapter to the DC IN jack of CPC jig for BX/BK, or connect the L series Info-LITHIUM battery to the battery terminal of CPC jig for BX/BK.
(Fig. 5-1-3.)
3) The front panel block (MI-040/041 board, microphone unit, video light) need not be assembled except during the steady shot operation check.

**Note4:** As removing the cabinet (R) (removing the VC-251 board CN709) means removing the lithium 3V power supply (CF-1000 block/CF-077 board BT101), data such as date, time, user-set menus will be lost. After completing adjustments, reset these data. If the cabinet (R) has been removed, the self-diagnosis data, data on history of use (total drum rotation time etc.) will be lost. Before removing, note down the self-diagnosis data (data of page: 2, address: B0 to C6) and data on history use (data of page: 2, address: A2 to AA and E0 to E2). (Refer to “5-4. Service Mode” for the self-diagnosis data and data on the history use.)

**Note5:** Setting the “Forced Camera Power ON” Mode
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 01, and press the PAUSE button.

The above procedure will enable the camera power to be turned on with the SS-1000 block removed. After completing adjustments, be sure to exit the “Forced Camera Power ON Mode”.

**Note6:** Exiting the “Forced Camera Power ON” Mode
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 00, and press the PAUSE button.
3) Select page: 0, address: 01, and set data: 00.

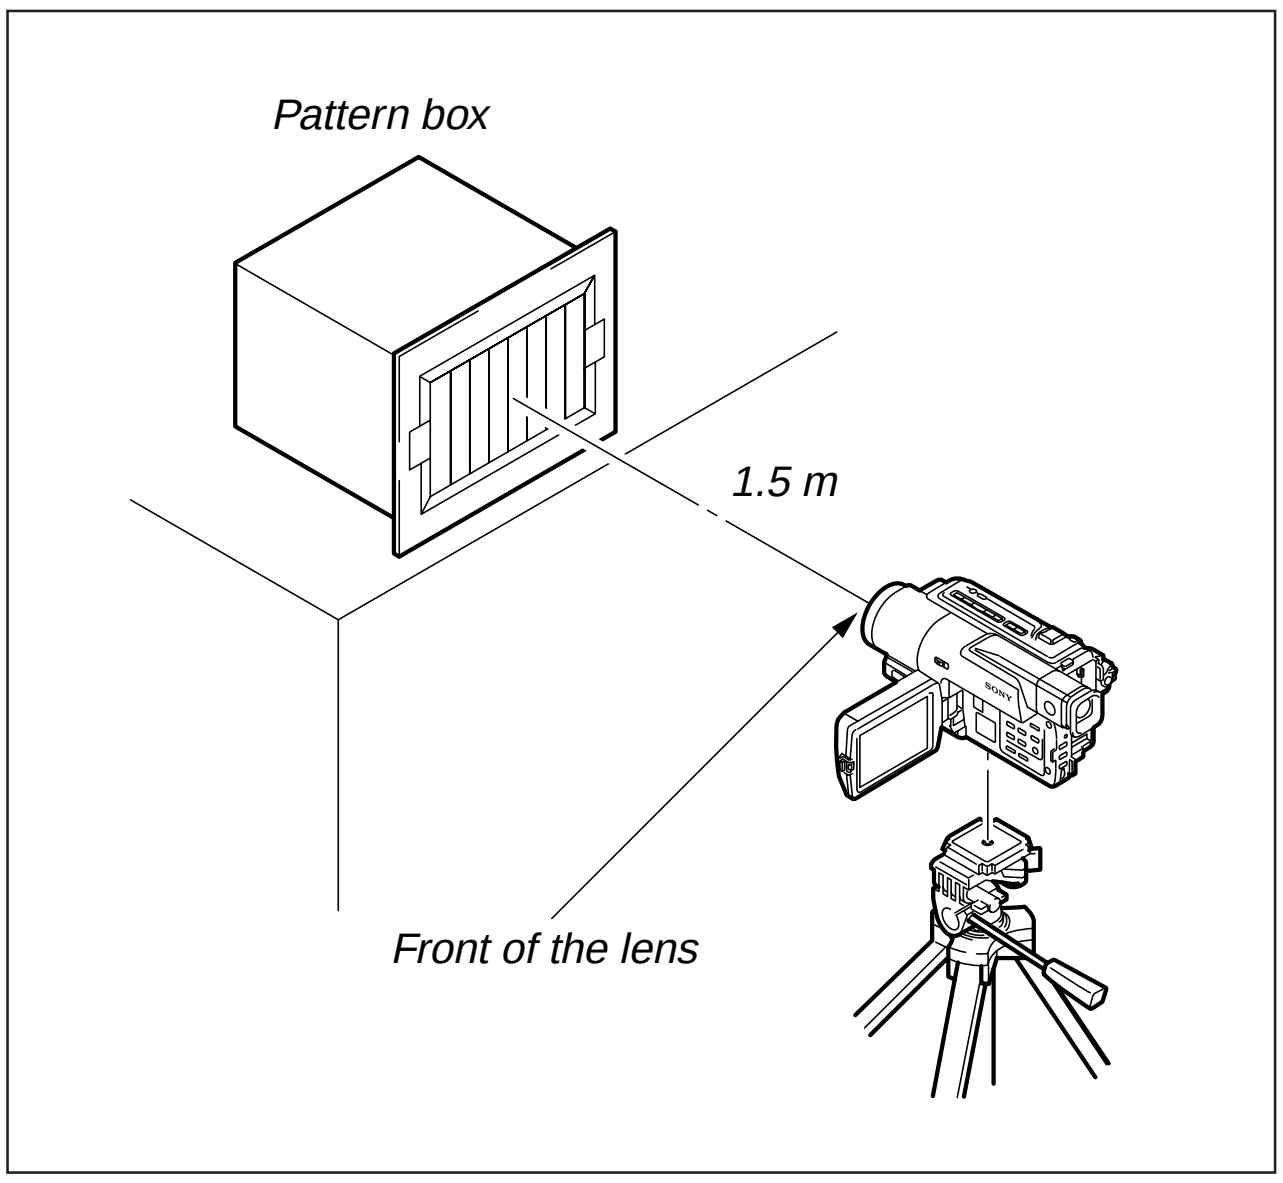

Fig. 5-1-2.

**[TRV model]**

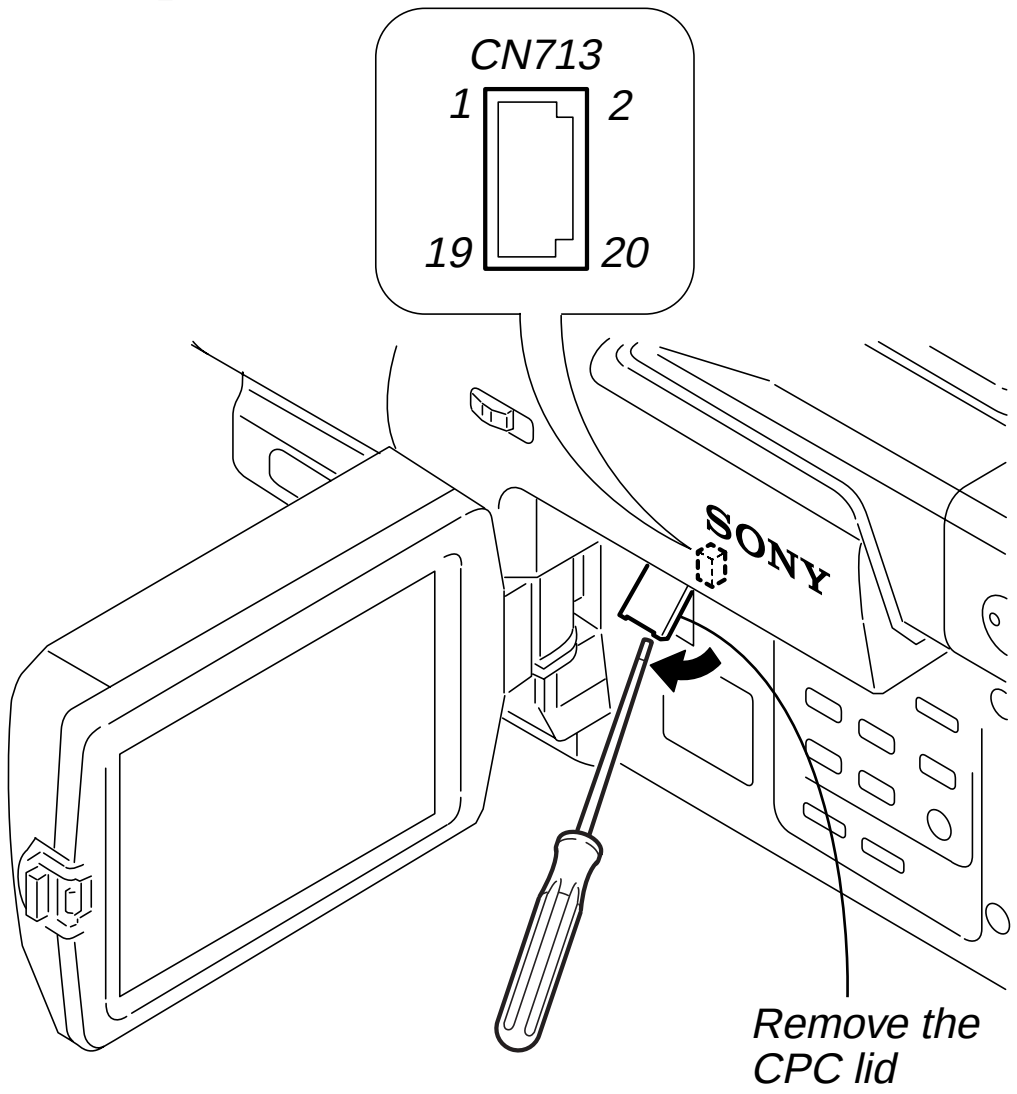

**[TR model]**

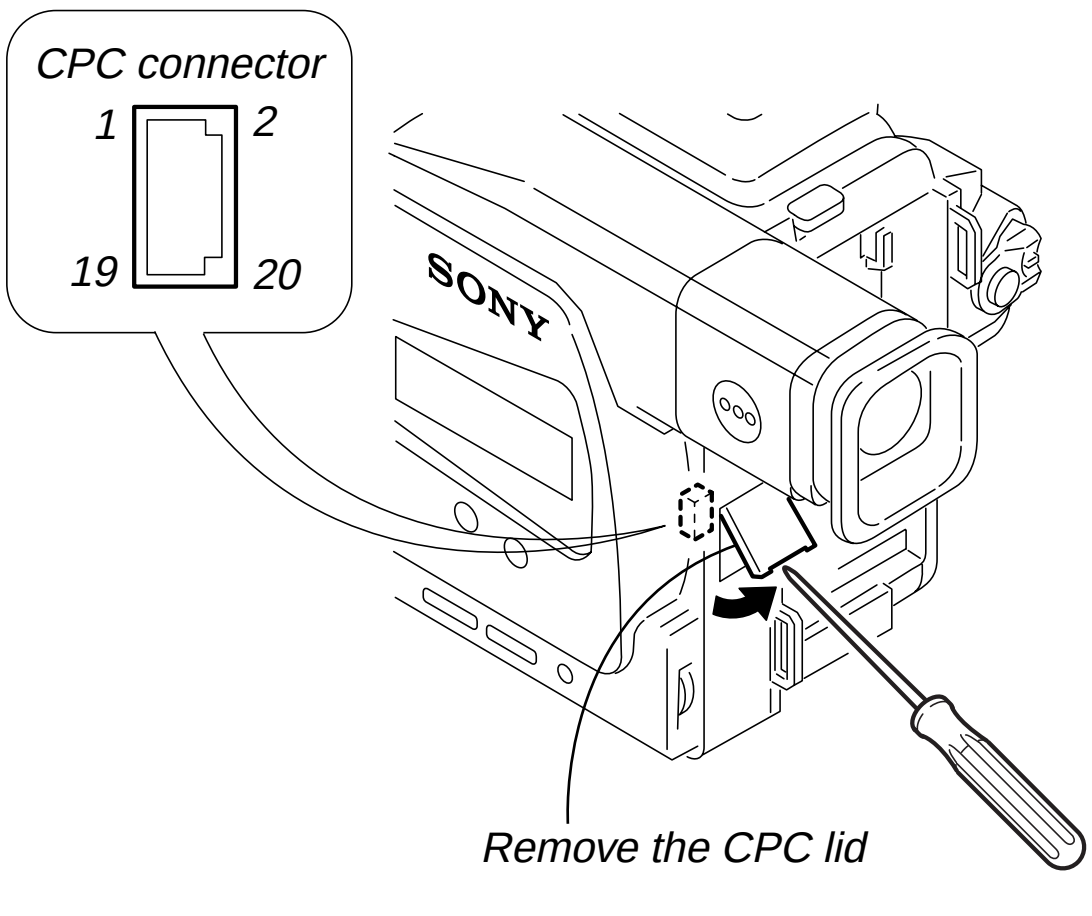

Fig. 5-1-3.

### *TR model (CCD-TR618/TR618E/TR718E/TR728E/TR818)*

**Note:** Use either a AC power adaptor or a Info-LITHIUM battery as the power supply of the CPC jig for BX/BK.

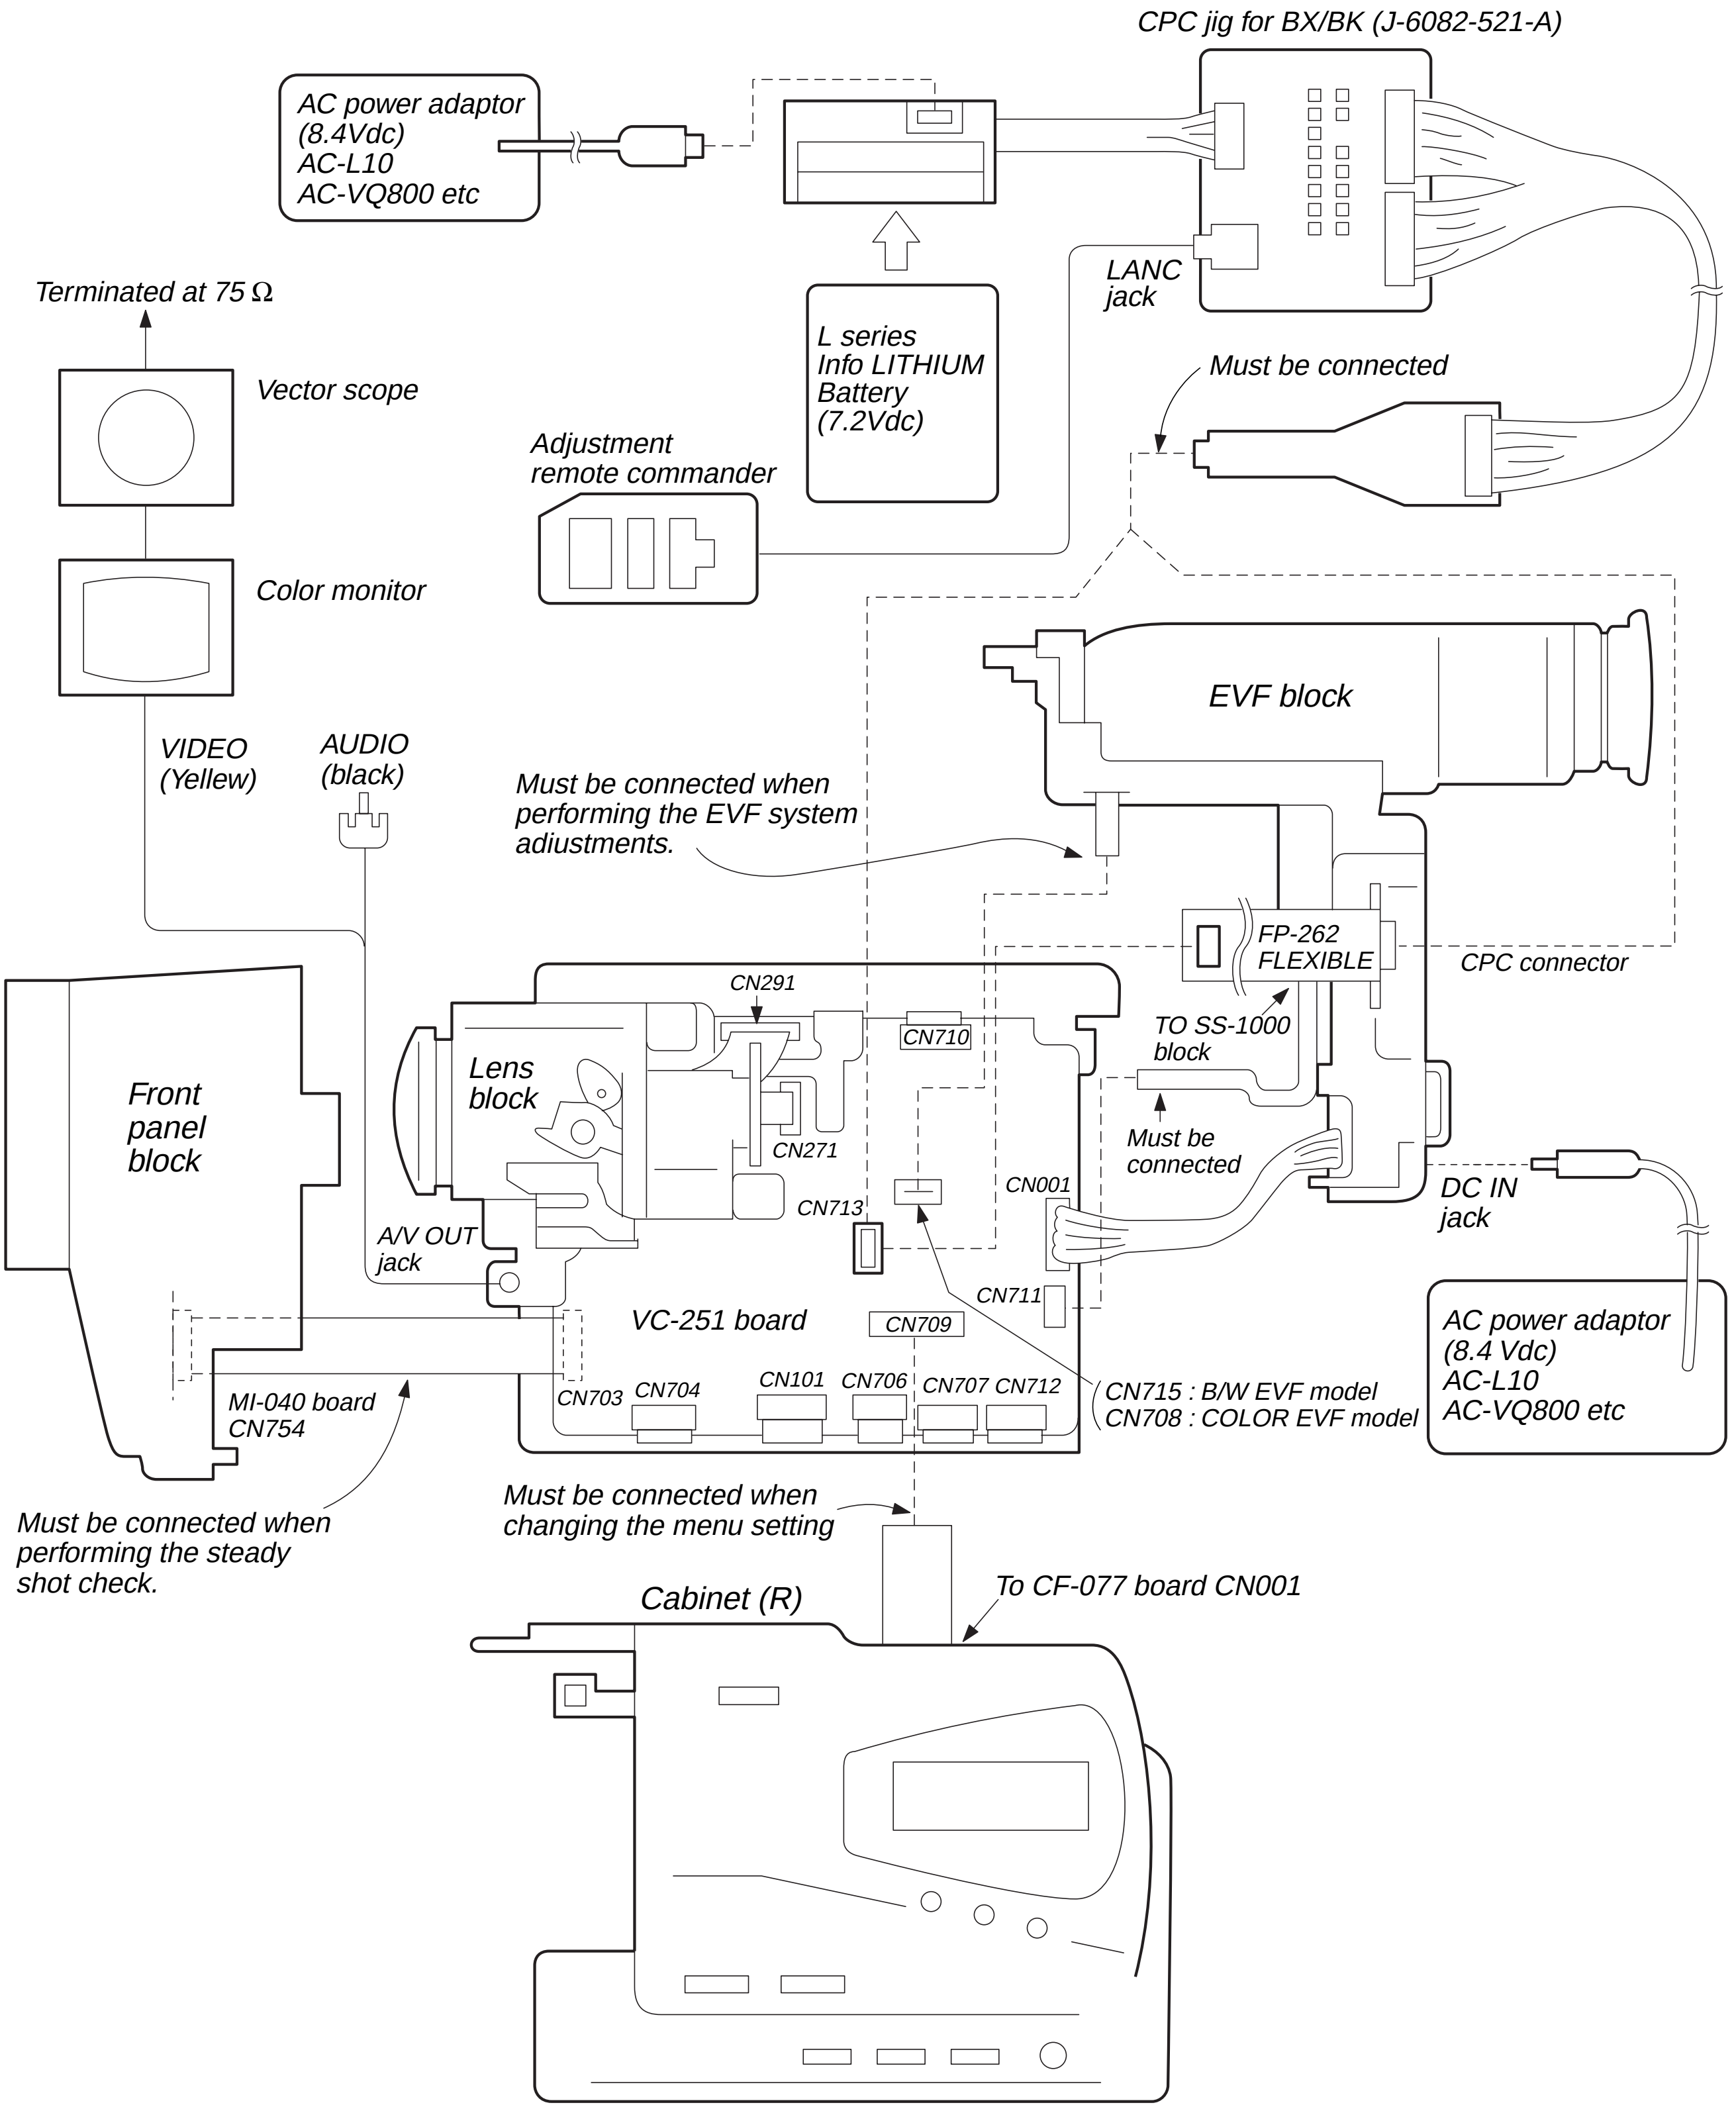
CPC jig for BX/BK (J-6082-521-A)
AC power adaptor (8.4Vdc) AC-L10 AC-VQ800 etc
LANC jack
Terminated at 75 Ω
L series Info LITHIUM Battery (7.2Vdc)
Must be connected
Vector scope
Adjustment remote commander
Color monitor
EVF block
VIDEO (Yellow)
AUDIO (black)
Must be connected when performing the EVF system adiustments.
FP-262 FLEXIBLE
CPC connector
CN291
CN710
TO SS-1000 block
Front panel block
Lens block
CN271
Must be connected
CN001
DC IN jack
CN713
A/V OUT jack
CN711
VC-251 board
CN709
AC power adaptor (8.4 Vdc) AC-L10 AC-VQ800 etc
MI-040 board CN754
CN703
CN704
CN101
CN706
CN707
CN712
CN715 : B/W EVF model
CN708 : COLOR EVF model
Must be connected when performing the steady shot check.
Must be connected when changing the menu setting
Cabinet (R)
To CF-077 board CN001

*Fig. 5-1-4.*

### TRV model (CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

**Note:** Use either a AC power adaptor or a Info-LITHIUM battery as the power supply of the CPC jig for BX/BK.

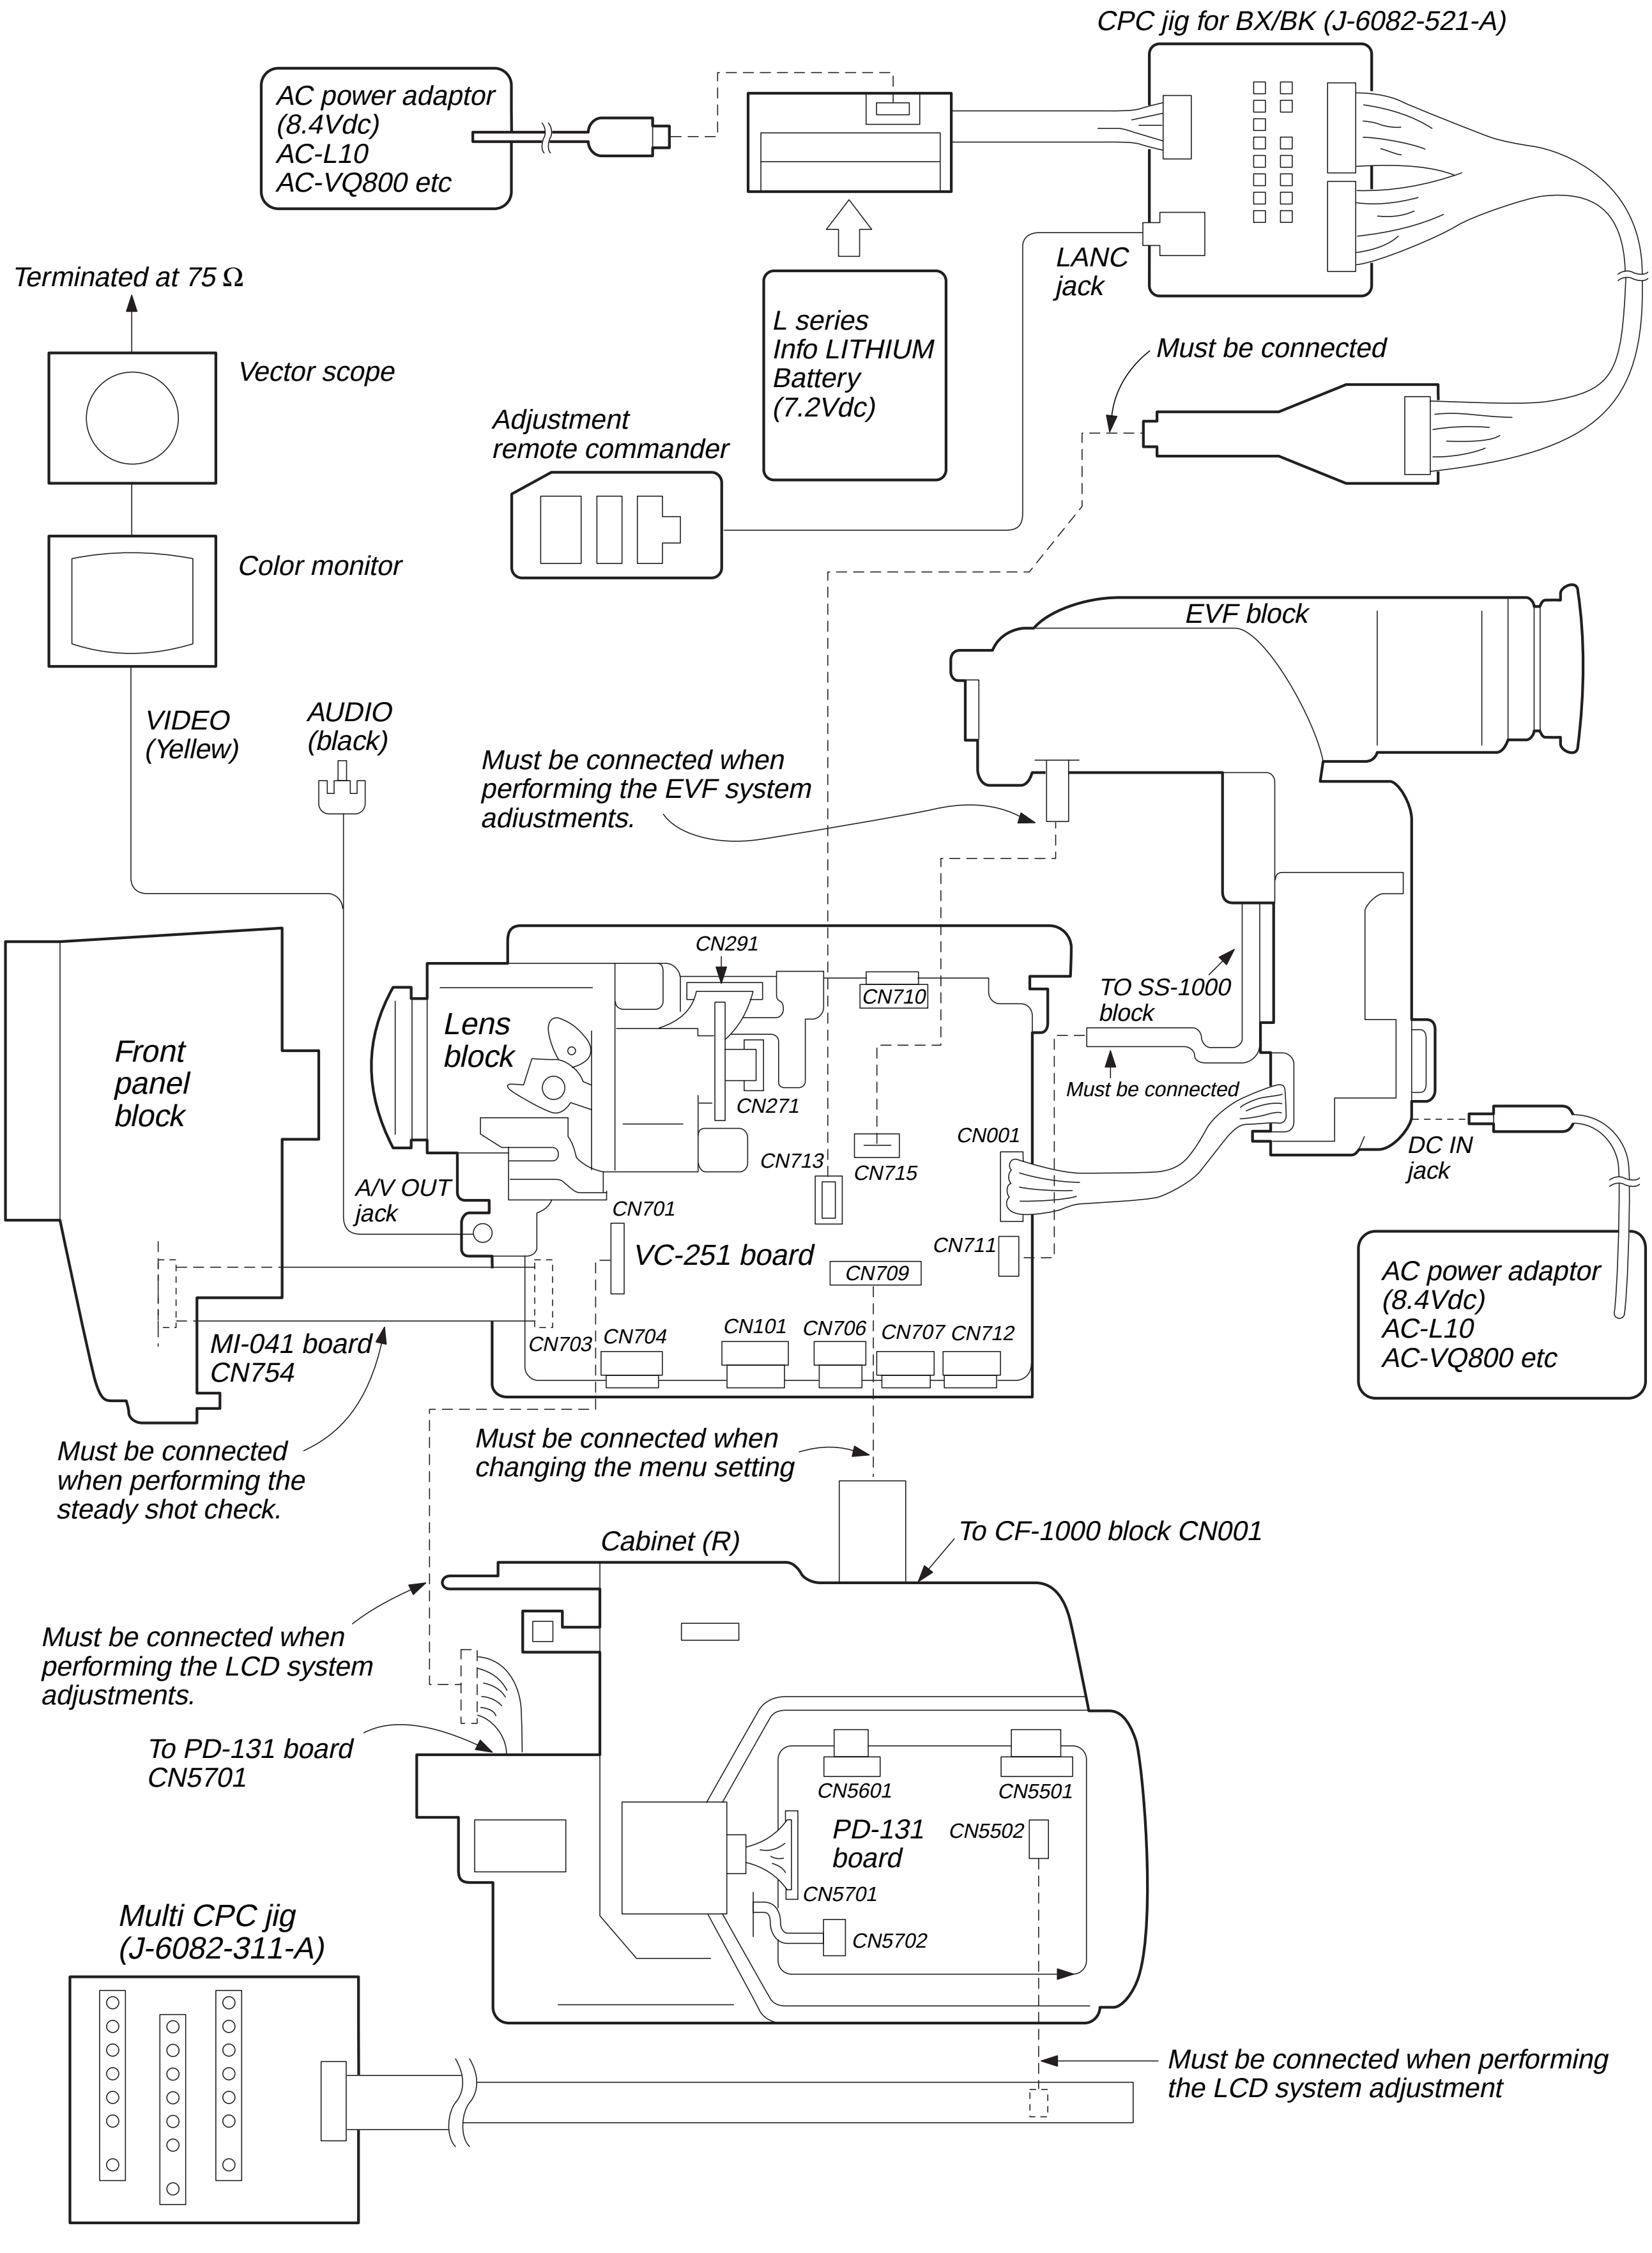

CPC jig for BX/BK (J-6082-521-A)
AC power adaptor (8.4Vdc) AC-L10 AC-VQ800 etc
Terminated at 75 Ω
LANC jack
L series Info LITHIUM Battery (7.2Vdc)
Vector scope
Must be connected
Adjustment remote commander
Color monitor
EVF block
VIDEO (Yellow)
AUDIO (black)
Must be connected when performing the EVF system adiustments.
CN291
Front panel block
Lens block
CN710
TO SS-1000 block
Must be connected
CN271
CN713
CN715
CN001
DC IN jack
A/V OUT jack
CN701
CN711
VC-251 board
CN709
AC power adaptor (8.4Vdc) AC-L10 AC-VQ800 etc
MI-041 board CN754
CN703
CN704
CN101
CN706
CN707
CN712
Must be connected when performing the steady shot check.
Must be connected when changing the menu setting
Cabinet (R)
To CF-1000 block CN001
Must be connected when performing the LCD system adjustments.
To PD-131 board CN5701
CN5601
CN5501
PD-131 board
CN5502
CN5701
CN5702
Multi CPC jig (J-6082-311-A)
Must be connected when performing the LCD system adjustment

Fig. 5-1-5.

### 1-1-3. Precaution

### 1. Setting the Switch

Unless otherwise specified, set the switches as follows and perform adjustments without loading cassette.

1. POWER switch (SS-1000 block) .......................... CAMERA
2. NIGHT SHOT switch (Lens block) ................................ OFF
3. LIGHT switch (FK-1000 block) *1 ................................ OFF
4. DEMO MODE (Menu display) ...................................... OFF
5. DIGITAL ZOOM (Menu display) .................................. OFF
6. STEADY SHOT (Menu display) *2 ............................... OFF
7. DISPLAY (Menu display) *3 ........................... V-OUT/LCD
8. DISPLAY (CF-1000 block) *3 ......................................... ON
9. FOCUS switch (CF-1000 block/CF-077 board) ... MANUAL
10. BACK LIGHT (CF-1000 block/CF-077 board) ............. OFF
11. PROGRAM AE (Menu display) ..................................... OFF
12. PICTURE EFFECT (Menu display) ................................ OFF
13. 16 : 9 WIDE (MENU display) ........................................ OFF

*1: Video light model (CCD-TR618/TR618E/TR718E/TR728E/TR818/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

*2: Steady shot model (CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

*3: TRV model (CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

### 2. Order of Adjustments

Basically carry out adjustments in the order given.

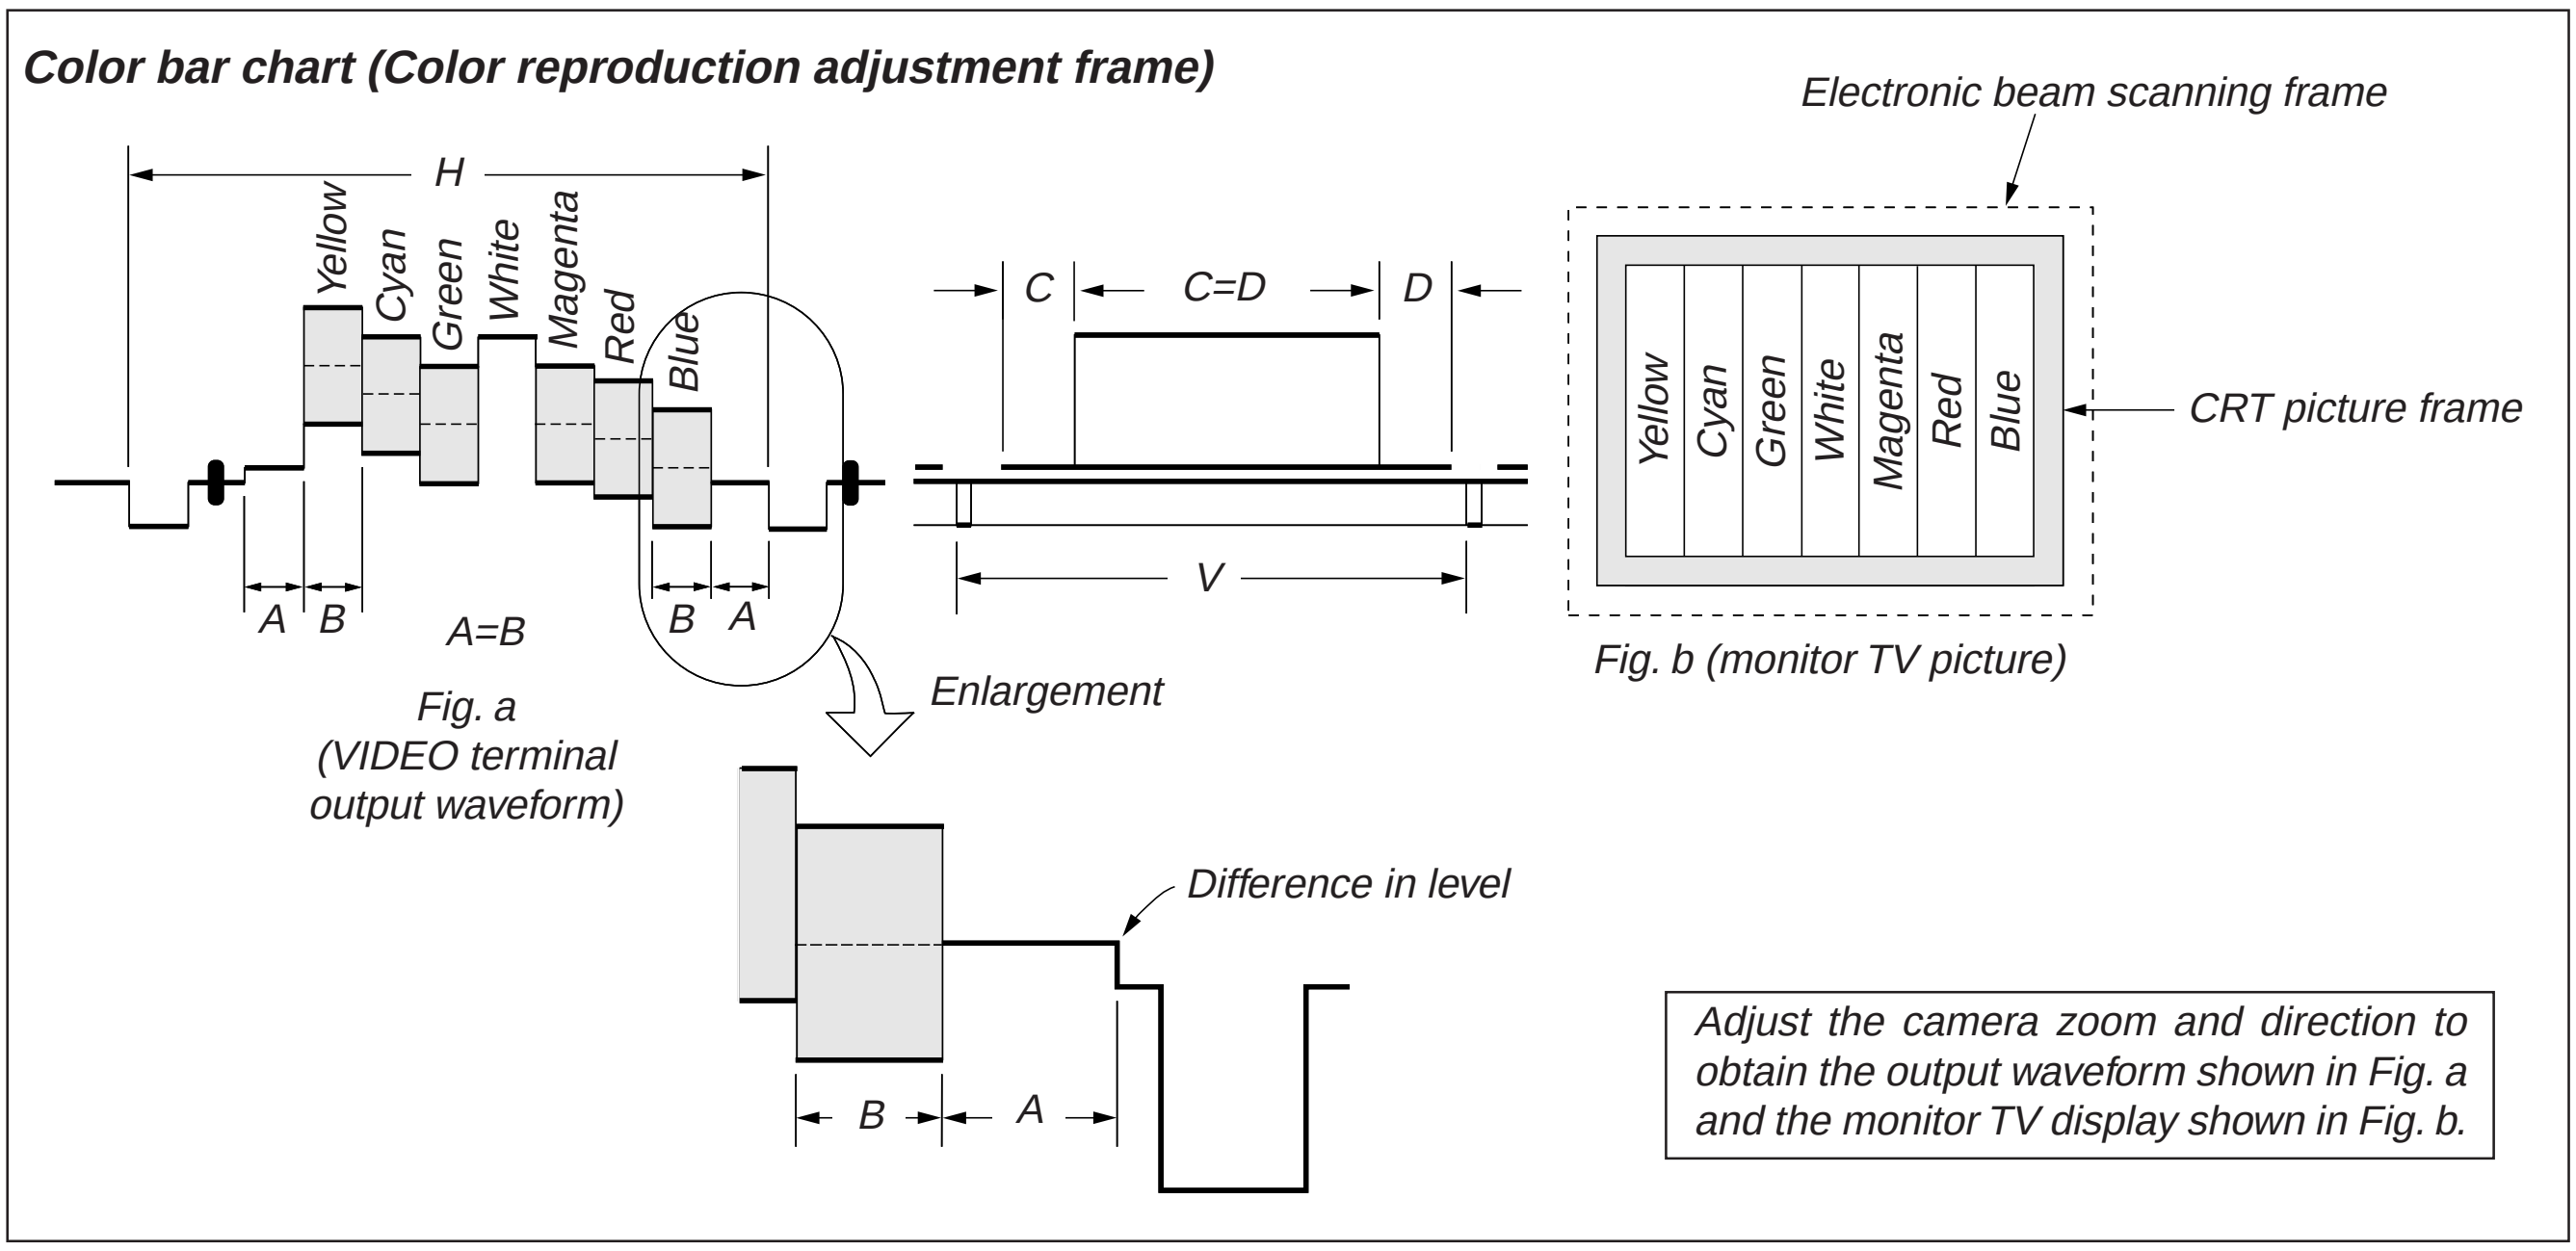

*Color bar chart (Color reproduction adjustment frame)*

H
Yellow
Cyan
Green
White
Magenta
Red
Blue
A
B
A=B
B
A
Fig. a
(VIDEO terminal
output waveform)
C
C=D
D
V
Enlargement
Difference in level
B
A
Electronic beam scanning frame
CRT picture frame
Fig. b (monitor TV picture)

*Adjust the camera zoom and direction to obtain the output waveform shown in Fig. a and the monitor TV display shown in Fig. b.*

*Fig.5-1-6.*

### 3. Subjects

1) Color bar chart (Color reproduction adjustment frame)
   When performing adjustments using the color bar chart, adjust the picture frame as shown in Fig. 5-1-6. (Color reproduction adjustment frame)
2) Clear chart (Color reproduction adjustment frame)
   Remove the color bar chart from the pattern box and insert a clear chart in its place. (Do not perform zoom operations during this time.)
3) Flange back adjustment chart
   Make the chart shown in Fig. 5-1-7 using A0 size (1189mm × 841mm) black and white vellum paper.

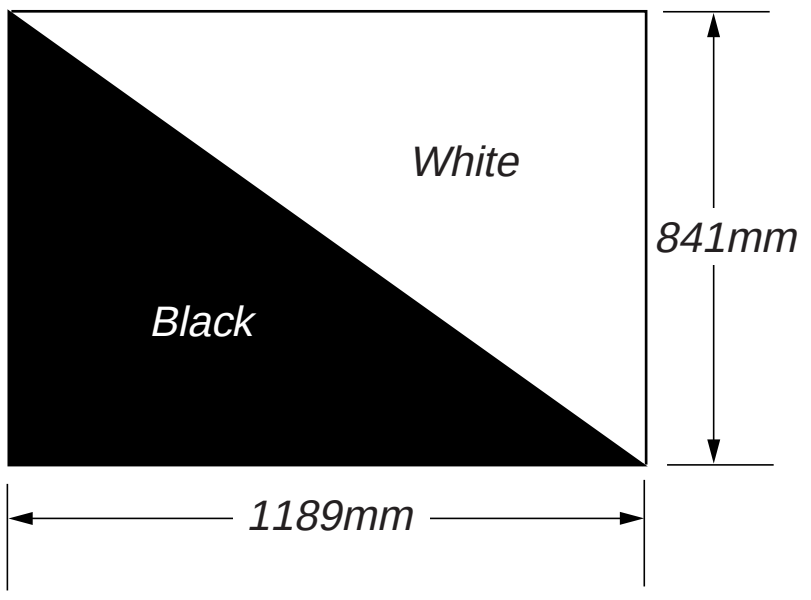

White
Black
841mm
1189mm

*Fig. 5-1-7.*

**Note:** Use matte vellum paper bigger than A0, and make sure the edges of the black and white paper joined together are not rough.

## 1-2. INITIALIZATION OF D, E, F, 7 PAGE DATA

### 1. Initializing the D, E, F, 7 Page Data

**Note1:** If “Initializing the D, E, F, 7 Page Data” is performed, all data of the D page, E page, F page and 7 page will be initialized. (It is impossible to initialize a single page.)

**Note2:** If the D, E, F, 7 page data has been initialized, “Modification of D, E, F, 7 Page Data” and all adjustments need to be performed again.

| | |
|---|---|
| Adjustment page | D |
| Adjustment Address | 10 to FF |
| Adjustment page | F |
| Adjustment Address | 10 to FF |
| Adjustment page | E |
| Adjustment Address | 00 to FF |
| Adjustment page | 7 |
| Adjustment Address | 00 to FF |

**Note:** NTSC model: CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98
PAL model: CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E

**Initializing Method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 6 | 00 | | Set the following data.<br>55: NTSC model<br>51: PAL model |
| 3 | 6 | 01 | | Set the following data, and press PAUSE button.<br>55: NTSC model<br>51: PAL model |
| 4 | 6 | 02 | | Check that the data changes to “01”. |
| 5 | 2 | 00 | 29 | Set the data |
| 6 | 2 | 01 | 29 | Set the data, and press PAUSE button. |
| 7 | | | | Perform “Modification of D, E, F, 7 Page Data”. |

### 2. Modification of D, E, F, 7 Page Data

If the D, E, F, 7 page data has been initialized, change the data of the “Fixed data-2” address shown in the following tables by manual input.

**Modifying Method:**

1) Before changing the data, select page: 0, address: 01, and set data: 01.
2) New data for changing are not shown in the tables because they are different in destination. When changing the data, copy the data built in the same model.
   **Note:** If copy the data built in the different model, the camcorder may not operate.
3) When changing the data, press the PAUSE button of the adjustment remote commander each time when setting new data to write the data in the non-volatile memory.
4) Check that the data of adjustment addresses is the initial value. If not, change the data to the initial value.

**Processing after Completing Modification of D, E, F, 7 Page data**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 2 | 00 | 29 | Set the data |
| 2 | 2 | 01 | 29 | Set the data, and press PAUSE button. |

**Note:** If the following symptoms occur after completing of the “Modification of D, E, F, 7 page data”, check that the data of the “Fixed data-2” addresses of D page are same as those of the same model of the same destination.
1) The battery end mark on the LCD or viewfinder screen is flashing.
2) The power is shut off so that unit cannot operate.

### 3. D Page Table

**Note1:** Fixed data-1: Initialized data. (Refer to “1. Initializing the D, E, F, 7 Page Data”.)
Fixed data-1: Modified data. (Refer to “2. Modification of D, E, F, 7 Page Data”.)

| Address | Initial value | | Remark |
|---|---|---|---|
| | NTSC | PAL | |
| 00 to 0F | | | |
| 10 | 00 | 00 | Test mode |
| 11 to 12 | | | Fixed data-1 |
| 13 | | | Fixed data-2 |
| 14 | | | Fixed data-1 |
| 15 | | | Fixed data-2 |
| 16 to 19 | | | Fixed data-1 |
| 1A | | | Fixed data-2 |
| 1B to 1E | | | Fixed data-1 |
| 1F | | | Fixed data-2<br>(Modified data. Copy the data built in the same model.) |
| 20 | | | |
| 21 | | | |
| 22 | | | |
| 23 | | | |
| 24 to 26 | | | Fixed data-1 |
| 27 | | | Fixed data-2 |
| 28 to 2C | | | Fixed data-1 |
| 2D | | | Fixed data-2<br>(Modified data. Copy the data built in the same model.) |
| 2E | | | |
| 2F | | | |
| 30 | | | |
| 31 to 3F | | | Fixed data-1 |
| 40 | | | Fixed data-2<br>(Modified data. Copy the data built in the same model.) |
| 41 | | | |
| 42 | | | |
| 43 | | | |
| 44 | | | |
| 45 | | | |
| 46 to 47 | | | Fixed data-1 |
| 48 | | | Fixed data-2 |
| 49 | | | |
| 4A to 4C | | | Fixed data-1 |
| 4D | | | Fixed data-2 |
| 4E | | | |
| 4F | | | Fixed data-1 |
| 50 | | | Fixed data-2<br>(Modified data. Copy the data built in the same model.) |
| 51 | | | |
| 52 | | | |

| Address | Initial value | | Remark |
|---|---|---|---|
| | NTSC | PAL | |
| 53 | | | Fixed data-1 |
| 54 | | | Fixed data-2 |
| 55 to 57 | | | Fixed data-1 |
| 58 | | | Fixed data-2<br>(Modified data. Copy the data built in the same model.) |
| 59 | | | |
| 5A | | | |
| 5B | | | |
| 5C | | | |
| 5D to 63 | | | Fixed data-1 |
| 64 | | | Fixed data-2<br>(Modified data. Copy the data built in the same model.) |
| 65 | | | |
| 66 | | | |
| 67 | | | |
| 68 | | | |
| 69 to 87 | | | Fixed data-1 |
| 88 | | | Fixed data-2<br>(Modified data. Copy the data built in the same model.) |
| 89 | | | |
| 8A | | | |
| 8B | | | |
| 8C to FF | | | Fixed data-1 |

*Table. 5-1-2.*

### 4. F Page table

**Note1:** Fixed data-1: Initialized data. (Refer to “1. Initializing the D, E, F, 7 Page Data”.)
Fixed data-2: Modified data. (Refer to “2. Modification of D, E, F, 7 Page Data”.)

| Address | Initial value | | Remark |
|---|---|---|---|
| | NTSC | PAL | |
| 00 to 0F | | | |
| 10 | 00 | 00 | Emergency memory address |
| 11 | 00 | 00 | |
| 12 | 00 | 00 | |
| 13 | 00 | 00 | |
| 14 | 00 | 00 | |
| 15 | 00 | 00 | |
| 16 | 00 | 00 | |
| 17 | 00 | 00 | |
| 18 | 00 | 00 | |
| 19 | 00 | 00 | |
| 1A | 00 | 00 | |
| 1B | 00 | 00 | |
| 1C | | | Fixed data-1 |
| 1D | | | Fixed data-2 |
| 1E to 22 | | | Fixed data-1 |
| 23 | | | Fixed data-2 |
| 24 | | | |
| 25 | | | Fixed data-1 |
| 26 | | | Fixed data-2 |
| 27 to 2B | | | Fixed data-1 |
| 2C | D7 | D7 | Lens type input |
| 2D to 32 | | | Fixed data-1 |
| 33 | | | Fixed data-2 |
| 34 to 37 | | | Fixed data-1 |
| 38 | 68 | 68 | HALL adj. |
| 39 | 80 | 80 | |
| 3A | 8D | 8D | |
| 3B | | | Fixed data-2 |
| 3C | 80 | 80 | AWB & LV standard data input |
| 3D | 7A | 7A | |
| 3E | 2B | 2B | |
| 3F | 80 | 80 | |
| 40 | 65 | 65 | |
| 41 | 80 | 80 | |
| 42 | 8D | 8D | Auto white balance adj. |
| 43 | 87 | 87 | |
| 44 to 46 | | | Fixed data-1 |
| 47 | 33 | 33 | Color reproduction adj. |
| 48 | | | Fixed data-1 |
| 49 | 34 | 34 | Color reproduction adj. |
| 4A | | | Fixed data-1<br>(Initialized data) |
| 4B | | | |
| 4C | | | |
| 4D | 8C | 8C | 28MHz origin osc. Adj. |
| 4E | 28 | 28 | Flange back adj. |
| 4F | 07 | 07 | |
| 50 | 3A | 3A | |
| 51 | 4A | 4A | |
| 52 | 12 | 12 | |

| Address | Initial value | | Remark |
|---|---|---|---|
| | NTSC | PAL | |
| 53 | 0B | 0B | Flange back adj. |
| 54 | 54 | 54 | |
| 55 | 00 | 00 | |
| 56 | 19 | 19 | |
| 57 | 00 | 00 | |
| 58 | 37 | 37 | |
| 59 | 00 | 00 | |
| 5A | 00 | 00 | |
| 5B | 04 | 04 | |
| 5C | 00 | 00 | |
| 5D | 00 | 00 | |
| 5E | 5A | 74 | Angular velocity sensor sens. adj. |
| 5F | 57 | 5D | *1 |
| 60 | | | Fixed data-1 |
| 61 | 00 | 00 | Flange back adj. |
| 62 | 0A | 0A | Switching position adj. |
| 63 | 00 | 00 | |
| 64 | 83 | 83 | CAP FG offset adj. |
| 65 | 50 | 50 | AFC fo adj. |
| 66 | 77 | 77 | Filter fo adj. |
| 67 | 62 | 62 | Y OUT level adj. |
| 68 | 62 | 62 | C OUT level adj. |
| 69 | | | Fixed data-1 |
| 6A | B4 | D7 | REC Y current adj. |
| 6B | B4 | D7 | |
| 6C to 70 | | | Fixed data-1 |
| 71 | A0 | A0 | REC C/AFM current adj. |
| 72 to 7A | | | Fixed data-1 |
| 7B | A6 | A6 | 1.5MHz deviation adj. |
| 7C | | | Fixed data-1 |
| 7D | 80 | 80 | BPF fo adj. |
| 7E | 41 | 41 | IR video deviation Adj. *2 |
| 7F | 33 | 33 | IR audio deviation Adj. *2 |
| 80 | C7 | C7 | IR video carrier freq. Adj. *2 |
| 81 to 89 | | | Fixed data-1 |
| 8A | | | Fixed data-2 |
| 8B to 8D | | | Fixed data-1 |
| 8E | | | Fixed data-2 |
| 8F | | | |
| 90 to 99 | | | Fixed data-1 |
| 9A | | | Fixed data-2 |
| 9B to 9F | | | Fixed data-1 |
| A0 | | | Fixed data-2 |
| A1 to B7 | | | Fixed data-1 |
| B8 | | | Fixed data-2<br>(Modified data. Copy the data built in the same model.) |
| B9 | | | |
| BA | | | |
| BB | | | |
| BC to CC | | | Fixed data-1 |
| CD | | | Fixed data-2 |
| CE to D3 | | | Fixed data-1 |
| D4 | | | Fixed data-2 |
| D5 to D6 | | | Fixed data-1 |
| D7 | FD | FC | Color reproduction adj. |
| D8 | F4 | F2 | |
| D9 | 0F | 11 | |
| DA | 31 | 33 | |
| DB to DD | | | Fixed data-1 |
| DE | | | Fixed data-2 |
| DF | | | |
| F0 to F2 | | | Fixed data-1 |
| F3 | | | Fixed data-2 |
| F4 | | | |
| F5 | | | Fixed data-1 |
| F6 | | | Fixed data-2 |
| F7 to FF | | | Fixed data-1 |

*1: Steady shot model (CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

*2: LASER LINK model (CCD-TRV98)

*Table. 5-1-3.*

### 5. E Page Table

**Note:** Fixed data-1: Initialized data. (Refer to “1. Initializing the D, E, F, 7 Page Data”.)
Fixed data-2: Modified data. (Refer to “2. Modification of D, E, F, 7 Page Data”.)

| Address | Initial value | | Remark |
|---|---|---|---|
| | NTSC | PAL | |
| 00 to 01 | | | Fixed data-1 |
| 02 | | | Fixed data-2 (Modified data. Copy the data built in the same model.) |
| 03 | | | |
| 04 | | | |
| 05 | | | |
| 06 | | | |
| 07 | | | Fixed data-1 |
| 08 | | | Fixed data-2 |
| 09 | | | |
| 0A to 0E | | | Fixed data-1 |
| 0F | | | Fixed data-2 (Modified data. Copy the data built in the same model.) |
| 10 | | | |
| 11 | | | |
| 12 | | | |
| 13 | | | |
| 14 | | | |
| 15 to 17 | | | Fixed data-1 |
| 18 | | | Fixed data-2 |
| 19 | | | |
| 1A to 27 | | | Fixed data-1 |
| 28 | | | Fixed data-2 |
| 29 to 2F | | | Fixed data-1 |
| 30 | | | Fixed data-2 |
| 31 to 33 | | | Fixed data-1 |
| 34 | | | Fixed data-2 |
| 35 | | | Fixed data-1 |
| 36 | | | Fixed data-2 |
| 37 | | | Fixed data-1 |
| 38 | | | Fixed data-2 |
| 39 | | | |
| 3A | | | Fixed data-1 |
| 3B | | | Fixed data-2 |
| 3C | | | |
| 3D to 50 | | | Fixed data-1 |
| 51 | | | Fixed data-2 |
| 52 to 53 | | | Fixed data-1 |
| 54 | | | Fixed data-2 |
| 55 | | | |
| 56 | | | Fixed data-1 |
| 57 | | | Fixed data-2 |
| 58 | | | Fixed data-1 |
| 59 | | | Fixed data-2 |
| 5A to 5B | | | Fixed data-1 |
| 5C | 22 | 22 | Lens type input |
| 5D | 51 | 51 | |
| 5E | FD | FD | |
| 5F | C4 | C4 | |
| 60 to 71 | | | Fixed data-1 |
| 72 | | | Fixed data-2 |
| 73 to 7B | | | Fixed data-1 |
| 7C | | | Fixed data-2 (Modified data. Copy the data built in the same model.) |
| 7D | | | |
| 7E | | | |
| 7F | | | Fixed data-1 |
| 80 | | | Fixed data-2 |
| 81 to 8B | | | Fixed data-1 |
| 8C | | | Fixed data-2 |
| 8D | | | |
| 8E to 8F | | | Fixed data-1 |
| 90 | | | Fixed data-2 |
| 91 to B7 | | | Fixed data-1 |
| B7 | | | Fixed data-2 |
| B8 to BA | | | Fixed data-1 |
| BB | | | Fixed data-2 |
| BC to FB | | | Fixed data-1 |
| FC | | | Fixed data-2 |
| FD | | | |
| FE to FF | | | Fixed data-1 |

*Table. 5-1-4.*

## 6. 7 Page Table

**Note:** Fixed data-1: Initialized data. (Refer to “1. Initializing the D, E, F, 7 Page Data”.)
Fixed data-2: Modified data. (Refer to “2. Modification of D, E, F, 7 Page Data”.)

| Address | Initial value | | Remark |
|---|---|---|---|
| | NTSC | PAL | |
| 00 to B4 | | | Fixed data-1 |
| B5 | | | Fixed data-2 |
| B6 | | | |
| B7 | | | Fixed data-1 |
| B8 | | | Fixed data-2<br>(Modified data. Copy the data built in the same model.) |
| B9 | | | |
| BA | | | |
| BB | | | |
| BC | | | Fixed data-1 |
| BD | | | Fixed data-2<br>(Modified data. Copy the data built in the same model.) |
| BE | | | |
| BF | | | |
| C0 | | | |
| C1 | | | Fixed data-1 |
| C2 | | | Fixed data-2 |
| C3 | | | |
| C4 to D4 | | | Fixed data-1 |
| D5 | | | Fixed data-2 |
| D6 | | | Fixed data-1 |
| D7 | | | Fixed data-2 |
| D8 | A0 | *1 | RGB AMP adj. (Color EVF) *2 |
| D9 | | | Fixed data-1 |
| DA | 8D | *1 | White balance adj. (Color EVF) *2 |
| DB | 83 | *1 | |
| DC | 2F | *1 | Contrast adj. (Color EVF) *2 |
| DD | | | Fixed data-1 |
| DE | | | Fixed data-2 |
| DF | CA | *1 | Back light consumption current adj. (Color EVF) *2 |
| E0 | 07 | *1 | |
| E1 | 91 | *1 | |
| E2 | | | Fixed data-1 |
| E3 | | | Fixed data-2 |
| E4 | | | |
| E5 | 6E | 6E | VCO adj.(LCD) *3 |
| E6 | *1 | 63 | VCO adj.(LCD) (PAL) *3 |
| E7 | 8E | 8E | V-COM adj.(LCD) *3 |
| E8 | 29 | 29 | RGB AMP adj.(LCD) *3 |
| E9 | | | Fixed data-1 |
| EA | C3 | C3 | COM AMP adj.(LCD) *3 |
| EB | 60 | 60 | White balance adj.(LCD) *3 |
| EC | 65 | 65 | |
| ED | 50 | 50 | Contrast adj.(LCD) *3 |
| EE | | | Fixed data-1 |
| EF | | | Fixed data-2 |
| F1 to F8 | | | Fixed data-1 |
| F9 | FF | FF | REC Y current adj. |
| EA to FF | | | Fixed data-1 |

*1: Fixed data-1.
*2: Color EVF model (CCD-TR818)
*3: TRV model (CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

*Table. 5-1-5.*

## 1-3. CAMERA SYSTEM ADJUSTMENTS

Before perform the camera system adjustments, check that the specified values of “VIDEO SYSTEM ADJUSTMENTS” are satisfied.

**Note:** NTSC model: CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98
PAL model: CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E

### 1. Lens Type Input

Distinguish the type of the lens being used for the camcorder, and input data corresponding to the type.

| | | |
|---|---|---|
| Subject | Not required | |
| Measurement Point | Display data of page 1 (Note) | |
| Measuring Instrument | Adjustment remote commander | |
| Adjustment Page | E | F |
| Adjustment Address | 5C, 5D, 5E, 5F | 2C |

**Note:** Displayed data of page 1 of the adjustment remote commander.
1 : XX : XX
Display data

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 6 | 01 | 65 | Set the data, and press PAUSE button. |
| 3 | 0 | 03 | 19 | Set the data. |
| 4 | 1 | | | Check that the data.<br>When the data is “0000”, proceed to step 5.<br>(Glass lens type)<br>When the data is “0001”, proceed to step 11.<br>(Plastic lens type) |
| 5 | E | 5C | 21 | Set the data, and press PAUSE button. |
| 6 | E | 5D | 84 | Set the data, and press PAUSE button. |
| 7 | E | 5E | FC | Set the data, and press PAUSE button. |
| 8 | E | 5F | F7 | Set the data, and press PAUSE button. |
| 9 | F | 2C | D6 | Set the data, and press PAUSE button. |
| 10 | | | | Proceed to step 16. |
| 11 | E | 5C | 22 | Set the data, and press PAUSE button. |
| 12 | E | 5D | 51 | Set the data, and press PAUSE button. |
| 13 | E | 5E | FD | Set the data, and press PAUSE button. |
| 14 | E | 5F | C4 | Set the data, and press PAUSE button. |
| 15 | F | 2C | D7 | Set the data, and press PAUSE button. |
| 16 | 6 | 01 | 00 | Set the data, and press PAUSE button. |
| 17 | 0 | 03 | 00 | Set the data. |
| 18 | 0 | 01 | 00 | Set the data. |

### 2. HALL Adjustment

For detecting the position of the lens iris, adjust AMP gain and offset.

| | |
|---|---|
| Subject | Not required |
| Measurement Point | Display data of page 1 (Note1) |
| Measuring Instrument | Adjustment remote commander |
| Adjustment Page | F |
| Adjustment Address | 38, 39, 3A |
| Specified Value 1 | 86 to 8A |
| Specified Value 2 | 15 to 19 |

**Note1:** Displayed data of page 1 of the adjustment remote commander.
1 : 00 : XX
IRIS display data

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 6 | 94 | 88 | Set the data. |
| 3 | 6 | 95 | 17 | Set the data. |
| 4 | 6 | 01 | 6D | Set the data, and press PAUSE button. |
| 5 | 6 | 02 | | Check that the data changes to “01”. (Note2) |
| 6 | 6 | 01 | 00 | Set the data, and press PAUSE button. |

**Note2:** The adjustment data will be automatically input to page: F, address: 38, 39, 3A.

**Checking method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 03 | 03 | Set the data. |
| 2 | 6 | 01 | 01 | Set the data, and press PAUSE button. |
| 3 | 1 | | | Check that the IRIS display data (Note1) satisfies the specified value 1. |
| 4 | 6 | 01 | 03 | Set the data, and press PAUSE button. |
| 5 | 1 | | | Check that the IRIS display data (Note1) satisfies the specified value.2. |

**Processing after Completing Adjustments:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 6 | 94 | 00 | Set the data. |
| 2 | 6 | 95 | 00 | Set the data. |
| 3 | 6 | 01 | 00 | Set the data, and press PAUSE button. |
| 4 | 0 | 03 | 00 | Set the data. |
| 5 | 0 | 01 | 00 | Set the data. |

### 3. Flange Back Adjustment (Using Minipattern Box)

The inner focus lens flange back adjustment is carried out automatically. In whichever case, the focus will be deviated during auto focusing/manual focusing.

| | |
|---|---|
| Subject | Siemens star chart with ND filter for the minipattern box (Note1) |
| Measuring Instrument | Adjustment remote commander |
| Adjustment Page | F |
| Adjustment Address | 4E to 5D, 61 |

**Note1:** Dark Siemens star chart.
**Note2:** Check that the data of page: 6, address: 02 is “00”. If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.
**Note3:** 1/4 CCD model: CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

**Switch setting:**

NIGHT SHOT (Lens block) ........................................... OFF

**Preparations:**

1) The minipattern box is installed as shown in the following figure.
   **Note:** The attachment lenses are not used.
2) Install the minipattern box so that the distance between it and the front of the lens of the camcorder is less than 3cm.
3) Make the height of the minipattern box and the camcorder equal.
4) Check that the output voltage of the regulated power supply is the specified voltage.
5) Check that at both the zoom lens TELE end and WIDE end, the center of the Siemens star chart and center of the exposure screen coincide.

**Specified voltage:**

The specified voltage varies according to the minipattern box, so adjust the power supply output voltage to the specified voltage written on the sheet which is supplied with the minipattern box.

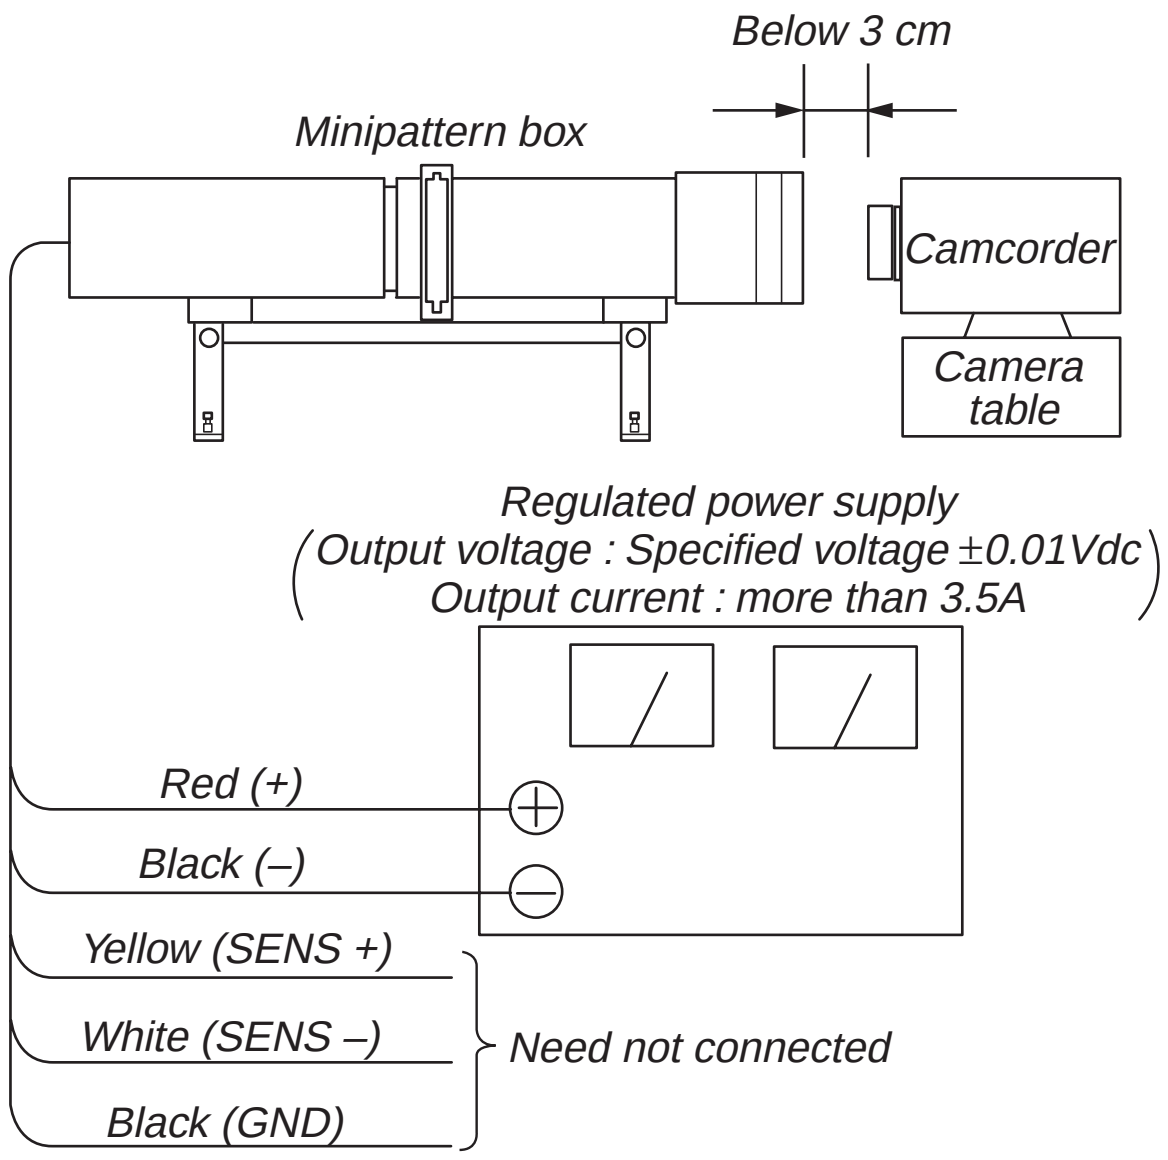

Fig. 5-1-8.

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | F | A0 | | Only for 1/4 CCD model, write down the data. |
| 3 | F | A0 | 00 | Only for 1/4 CCD model, set the data and press PAUSE button. |
| 4 | 6 | 01 | 13 | Set the data, and press PAUSE button. |
| 5 | 6 | 01 | 27 | Set the data, and press PAUSE button. |
| 6 | 6 | 02 | | Check that the data changes to “01”. (Note4) |
| 7 | F | A0 | | Only for 1/4 CCD model, set the data that is written down at step 2 and press PAUSE button. |

**Note4:** The adjustment data will be automatically input to page: F, address: 4E to 5D, 61.

**Processing after Completing Adjustments:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 6 | 01 | 00 | Set the data, and press PAUSE button. |
| 2 | 0 | 01 | 00 | Set the data. |
| 3 | | | | Turn off the power and turn on again. |
| 4 | | | | Perform “Flange Back Check”. |

## 4. Flange Back Adjustment (Using Flange Back Adjustment Chart and Subject More Than 500m Away)

The inner focus lens flange back adjustment is carried out automatically. In whichever case, the focus will be deviated during auto focusing/manual focusing.

### 4-1. Flange Back Adjustment (1)

| | |
|---|---|
| Subject | Flange back adjustment chart<br>(2.0 m from the front of the protection glass)<br>(Luminance: 350 ± 30 lux) |
| Measuring Instrument | Adjustment remote commander |
| Adjustment Page | F |
| Adjustment Address | 4E to 5D, 61 |

**Note1:** Check that the data of page: 6, address: 02 is "00". If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

**Note2:** 1/4 CCD model: CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

**Switch setting:**

NIGHT SHOT (Lens block) ........................................... OFF

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | F | A0 | | Only for 1/4 CCD model, write down the data. |
| 3 | F | A0 | 00 | Only for 1/4 CCD model, set the data and press PAUSE button. |
| 4 | 6 | 01 | 13 | Set the data, and press PAUSE button. |
| 5 | 6 | 01 | 15 | Set the data, and press PAUSE button. |
| 6 | 6 | 02 | | Check that the data changes to "01". (Note3) |
| 7 | F | A0 | | Only for 1/4 CCD model, set the data that is written down at step 2 and press PAUSE button. |

**Note3:** The adjustment data will be automatically input to page: F, address: 4E to 5D, 61.

**Processing after Completing Adjustments:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 6 | 01 | 00 | Set the data, and press PAUSE button. |
| 2 | | | | Turn off the power and turn on again. |
| 3 | | | | Perform "Flange Back Adjustment (2)" |

### 4-2. Flange Back Adjustment (2)

Perform this adjustment after performing "Flange Back Adjustment (1)".

| | |
|---|---|
| Subject | Subject more than 500m away<br>(Subjects with clear contrast such as buildings, etc.) |
| Measurement Point | Check operation on TV monitor |
| Measuring Instrument | |
| Adjustment Page | F |
| Adjustment Address | 4E to 5D, 61 |

**Note1:** Check that the data of page: 6, address: 02 is "00". If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

**Switch setting:**

NIGHT SHOT (Lens block) ........................................... OFF

**Preparations:**

1) Set the zoom lens to the TELE end and expose a subject that is more than 500m away (subject with clear contrast such as building, etc.). (Nearby subjects less than 500m away should not be in the screen.)

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | F | A0 | | Only for 1/4 CCD model, write down the data. |
| 3 | F | A0 | 00 | Only for 1/4 CCD model, set the data and press PAUSE button. |
| 4 | 6 | 01 | 13 | Set the data, and press PAUSE button. |
| 5 | | | | Place a ND filter on the lens so that the optimum image is obtain. |
| 6 | 6 | 01 | 29 | Set the data, and press PAUSE button. |
| 7 | 6 | 02 | | Check that the data changes to "01". (Note2) |
| 8 | F | A0 | | Only for 1/4 CCD model, set the data that is written down at step 2 and press PAUSE button. |

**Note2:** The adjustment data will be automatically input to page: F, address: 4E to 5D, 61.

**Processing after Completing Adjustments:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 6 | 01 | 00 | Set the data, and press PAUSE button. |
| 2 | 0 | 01 | 00 | Set the data. |
| 3 | | | | Turn off the power and turn on again. |
| 4 | | | | Perform "Flange Back Check". |

## 5. Flange Back Check

| | |
|---|---|
| Subject | Siemens star<br>(2.0m from the front of the lens)<br>(Luminance : approx. 200 lux) |
| Measurement Point | Check operation on TV monitor |
| Measuring Instrument | |
| Specified Value | Focused at the TELE end and WIDE end. |

**Note:** When the auto focus is ON, the lens can be checked if it is focused or not by observing the data on the page 1 of the adjustment remote commander.
1) Select page: 0, address: 03, and set data: 0F.
2) Page 1 shows the state of the focus.
1 : 00 : XX
Odd: Focused
Even: Unfocused

**Switch setting:**

NIGHT SHOT (Lens block) ........................................... OFF

**Checking method:**

1) Select page: 6, address: 40, and set data: 02.
2) Select page: 6, address: 41, and set data: 01.
3) Place the Siemens star 2.0m from the front of the lens.
4) To open the IRIS, decrease the luminous intensity to the Siemens star up to a point before noise appear on the image.
5) Shoot the Siemens star with the zoom TELE end.
6) Turn on the auto focus.
7) Check that the lens is focused (Note).
8) Select page: 6, address: 21, and set data: 10.
9) Shoot the Siemens star with the zoom WIDE end.
10) Observe the TV monitor and check that the lens is focused.

**Processing after Completing Adjustments:**

1) Select page: 6, address: 21, and set data: 00.
2) Select page: 6, address: 40, and set data: 00.
3) Select page: 6, address: 41, and set data: 00.
4) Select page: 0, address: 03, and set data: 00.

### 6. Picture Frame Setting

| | |
|---|---|
| Subject | Color bar chart<br>(Color reproduction adjustment frame)<br>(1.5m from the front of the lens) |
| Measurement Point | Video output terminal |
| Measuring Instrument | Oscilloscope and TV monitor |
| Specified Value | A=B, C=D, E=F |

**Switch setting:**

1) NIGHT SHOT (Lens block) ............................................OFF
2) DIGITAL ZOOM (Menu display) ...................................OFF
3) STEADY SHOT (Menu display) .....................................OFF
4) LIGHT (FK-1000 block)..................................................OFF

**Setting method:**

1) Adjust the zoom and the camera direction, and set to the specified position.
2) Mark the position of the picture frame on the monitor display, and adjust the picture frame to this position in following adjustments using “Color reproduction adjustment frame”.

***Check on the oscilloscope***

***1. Horizontal period***

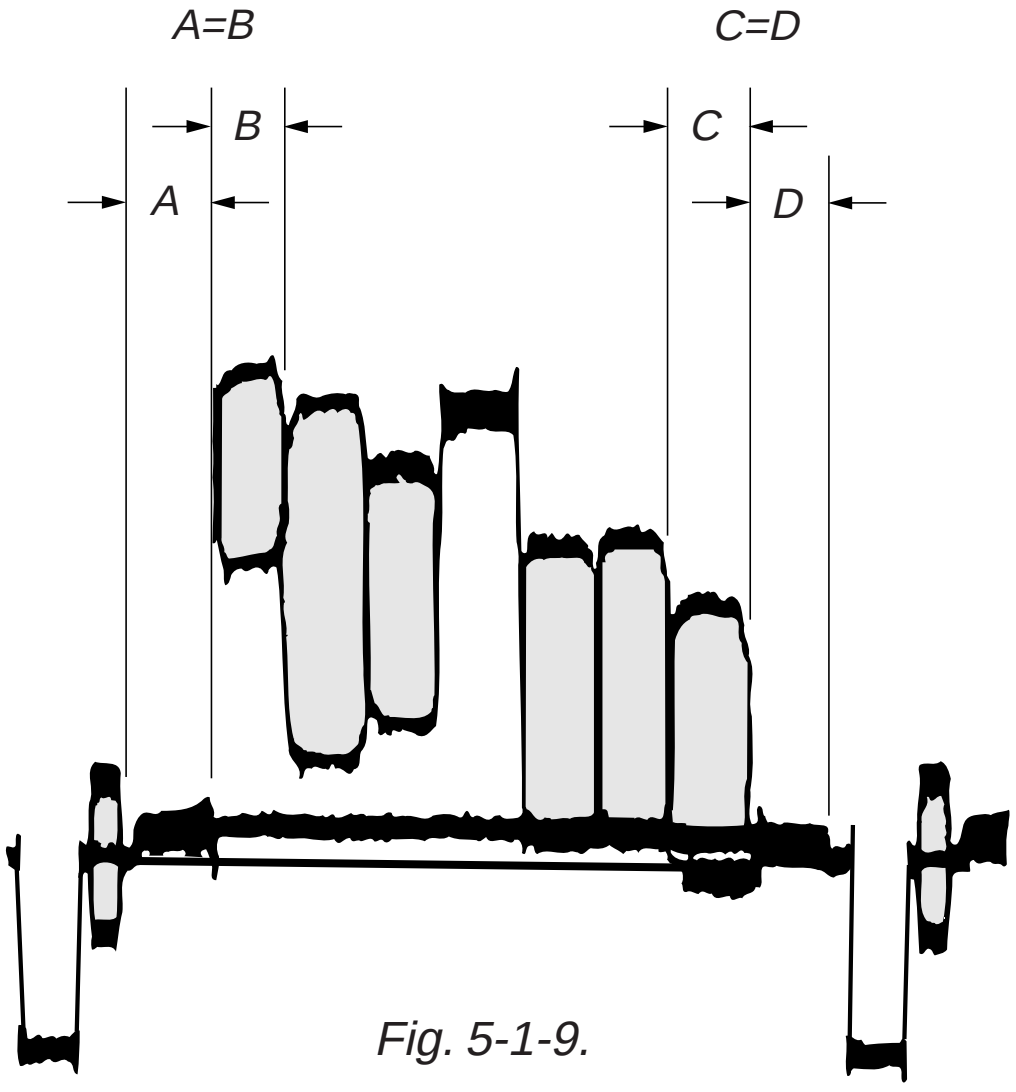

Fig. 5-1-9.

***2. Vertical period***

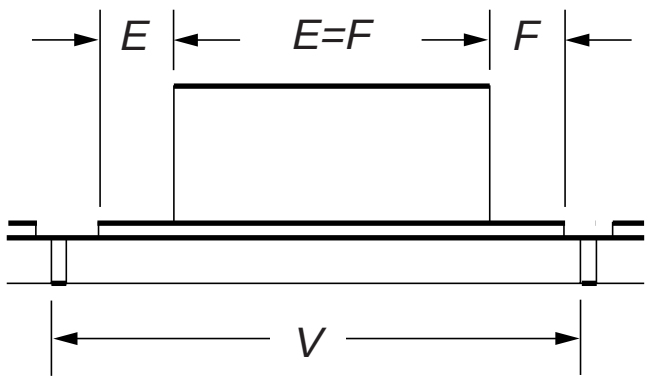

Fig. 5-1-10.

***Check on the monitor TV (Underscanned mode)***

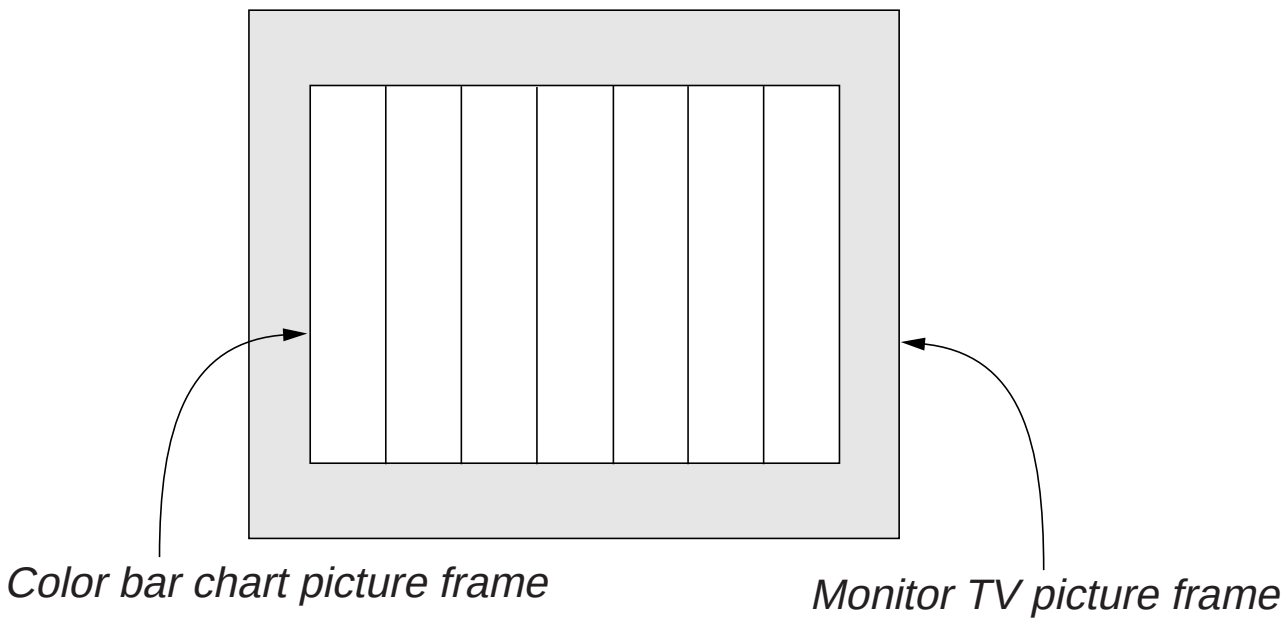

Fig. 5-1-11.

### 7. Color Reproduction Adjustment

Adjust the color Separation matrix coefficient so that proper color reproduction is produced.

| | |
|---|---|
| Subject | Color bar chart<br>(Color reproduction adjustment frame) |
| Measurement Point | Video output terminal |
| Measuring Instrument | Vectorscope |
| Adjustment Page | F |
| Adjustment Address | 47, 49, D7, D8 |
| Specified Value | All color luminance points should settle within each color reproduction frame. |

**Note:** NTSC model: CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98
PAL model: CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E

**Switch setting:**

1) NIGHT SHOT (Lens block) ........................................... OFF
2) DIGITAL ZOOM (Menu display) .................................. OFF
3) STEADY SHOT (Menu display) .................................... OFF
4) LIGHT (FK-1000 block) ................................................. OFF

**Adjusting method:**

1) Select page: 0, address: 01, and set data: 01.
2) Select page: F, address: 8B, and write down the data.
3) Select page: F, address: 8B, set data: 29 and press the PAUSE button.
4) Select page: F, address: 2B, set the following data and press the PAUSE button.
   17: NTSC model
   97: PAL model
5) Select page: 6, address: 01, set data: 3D, and press the PAUSE button.
6) Adjust the GAIN and PHASE of the vectorscope, and adjust the burst luminance point to the burst position of the color reproduction frame.
7) Change the data of page: F, address: 47, 49, D7 and D8, settle each color luminance point in each color reproduction frame.
   **Note:** Be sure to press the PAUSE button of the adjustment remote commander before changing the addresses. If not, the new data will not be written to the memory.

**Processing after Completing Adjustments:**

1) Select page: F, address: 8B, set the data written down at step 2), and press the PAUSE button.
2) Select page: 6, address: 01, set data: 00, and press the PAUSE button.
3) Select page: 0, address: 01, and set data: 00.

*For NTSC model*

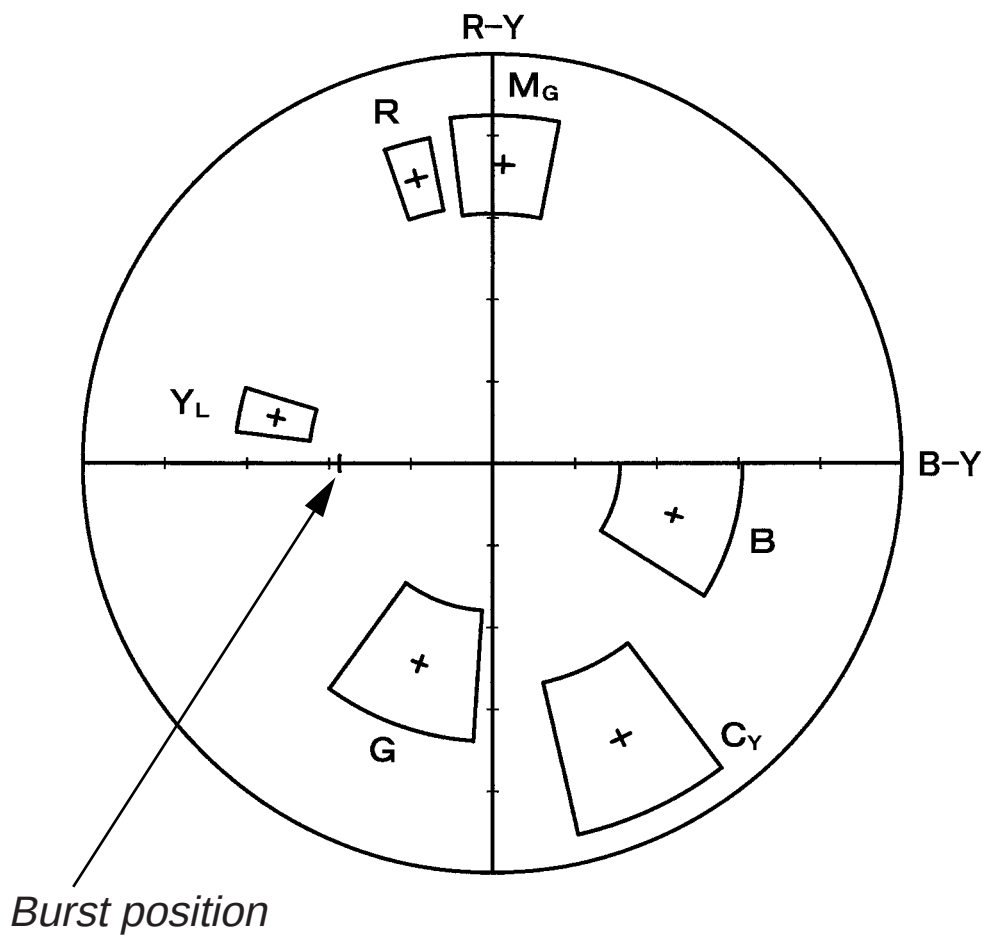

*For PAL model*

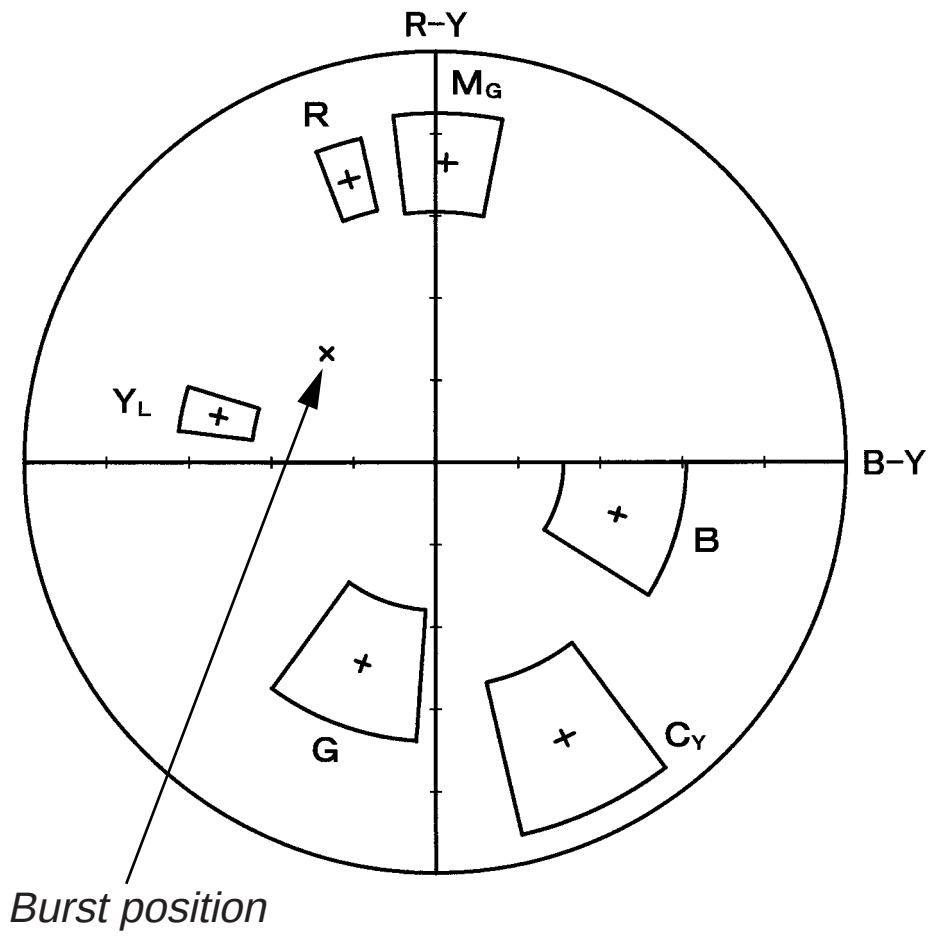

*Fig. 5-1-12.*

## 8. Auto White Balance & LV Standard Data Input

Adjust the white balance reference at 3200K, and adjust the normal coefficient of the light value.

| | |
|---|---|
| Subject | Clear chart<br>(Color reproduction adjustment frame) |
| Measurement Point | Display data of page 1 (Note3) |
| Measuring Instrument | Adjustment remote commander |
| Adjustment Page | F |
| Adjustment Address | 3C to 41 |

**Note1:** This adjustment should be carried out upon completion of "Color reproduction adjustments".

**Note2:** After the power is turned on, this adjustment can be done only once.

**Note3:** Check that the data of page: 6, address: 02 is "00". If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

**Switch setting:**

1) NIGHT SHOT (Lens block) ........................................... OFF
2) DIGITAL ZOOM (Menu display) .................................. OFF
3) STEADY SHOT (Menu display) .................................... OFF
4) LIGHT (FK-1000 block) ................................................. OFF

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | | | | Wait for 2 sec. |
| 3 | 6 | 01 | 11 | Set the data, and press PAUSE button. |
| 4 | 6 | 01 | 0D | Set the data, and press PAUSE button |
| 5 | 6 | 02 | | Check that the data changes to "01". (Note4) |

**Note4:** The adjustment data will be automatically input to page: E, address: 3C to 41.

**Processing after Completing Adjustments**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 6 | 01 | 00 | Set the data, and press PAUSE button. |
| 2 | 0 | 01 | 00 | Set the data. |
| 3 | | | | Perform "Auto White Balance Adjustment". |

### 9. Auto White Balance Adjustment

Adjust to the proper auto white balance output data.
If it is not correct, auto white balance and color reproducibility will be poor.

| | |
|---|---|
| Subject | Clear chart<br>(Color reproduction adjustment frame) |
| Filter | Filter C14 for color temperature correction |
| Measurement Point | Display data of page 1 (Note4) |
| Measuring Instrument | Adjustment remote commander |
| Adjustment Page | F |
| Adjustment Address | 42, 43 |
| Specified Value | 1/6 CCD NTSC model:<br>R ratio: 2AC0 to 2B40<br>B ratio: 5E20 to 5EE0<br>1/6 CCD PAL model:<br>R ratio: 2B40 to 2BC0<br>B ratio: 61A0 to 6260<br>1/4 CCD NTSC model:<br>R ratio: 2D40 to 2DC0<br>B ratio: 5D20 to 5DE0<br>1/4 CCD PAL model:<br>R ratio: 2B40 to 2BC0<br>B ratio: 5D20 to 5DE0 |

**Note1:** 1/6 CCD NTSC model: CCD-TR618/TRV49/TRV58
1/6 CCD PAL model: CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E
1/4 CCD NTSC model: CCD-TR818/TRV68/TRV78/TRV88/TRV98
1/4 CCD PAL model: CCD-TRV78E/TRV98E

**Note2:** After the power is turned on, this adjustment can be done only once.

**Note3:** Perform "Auto White Balance & LV Standard Data Input" before this adjustment.

**Note4:** Displayed data of page 1 of the adjustment remote commander.

1 : XX : XX
Display data

**Switch setting:**

1) NIGHT SHOT (Lens block) ........................................... OFF
2) DIGITAL ZOOM (Menu display) .................................. OFF
3) STEADY SHOT (Menu display) .................................... OFF
4) LIGHT (FK-1000 block) ................................................ OFF

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | | | | Place the C14 filter for color temperature correction on the lens. |
| 2 | 0 | 01 | 01 | Set the data. |
| 3 | F | B8 | | Write down the data. |
| 4 | F | B8 | | Set the following data, and press PAUSE button.<br>2B: 1/6 CCD NTSC model<br>2B: 1/6 CCD PAL model<br>2D: 1/4 CCD NTSC model<br>2B: 1/4 CCD PAL model |
| 5 | F | B9 | | Write down the data. |
| 6 | F | B9 | | Set the following data, and press PAUSE button.<br>00: 1/6 CCD NTSC model<br>80: 1/6 CCD PAL model<br>80: 1/4 CCD NTSC model<br>80: 1/4 CCD PAL model |
| 7 | F | BA | | Write down the data. |
| 8 | F | BA | | Set the following data, and press PAUSE button.<br>5E: 1/6 CCD NTSC model<br>62: 1/6 CCD PAL model<br>5D: 1/4 CCD NTSC model<br>5D: 1/4 CCD PAL model |
| 9 | F | BB | | Write down the data. |
| 10 | F | BB | | Set the following data, and press PAUSE button.<br>80: 1/6 CCD NTSC model<br>00: 1/6 CCD PAL model<br>80: 1/4 CCD NTSC model<br>80: 1/4 CCD PAL model |
| 11 | 6 | 01 | A7 | Set the data, and press PAUSE button. |
| 12 | | | | Wait for 2 sec. |
| 13 | 6 | 01 | A5 | Set the data, and press PAUSE button. |
| 14 | 6 | 02 | | Check that the data changes to "01". (Note5) |
| 15 | 6 | 01 | 3F | Set the data, and press PAUSE button. |
| 16 | 0 | 03 | 04 | Set the data. |
| 17 | 1 | | | Check that the display data (Note4) satisfies the R ratio specified value. |
| 18 | 0 | 03 | 05 | Set the data. |
| 19 | 1 | | | Check that the display data (Note4) satisfies the B ratio specified value. |

**Note5:** The adjustment data will be automatically input to page: F, address: 42,43.

**Processing after Completing Adjustments:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 6 | 01 | 00 | Set the data, and press PAUSE button. |
| 2 | F | B8 | | Set the data that is written down at step 3, and press PAUSE button. |
| 3 | F | B9 | | Set the data that is written down at step 3, and press PAUSE button. |
| 4 | F | BA | | Set the data that is written down at step 3, and press PAUSE button. |
| 5 | F | BB | | Set the data that is written down at step 3, and press PAUSE button. |
| 6 | 0 | 03 | 00 | Set the data. |
| 7 | 0 | 01 | 00 | Set the data. |

### 10. White Balance Check

| | |
|---|---|
| Subject | Clear chart<br>(Color reproduction adjustment frame) |
| Filter | Filter C14 for color temperature correction<br>ND filter 1.0 and 0.4 and 0.1 |
| Measurement Point | Video output terminal |
| Measuring Instrument | Vectorscope |
| Specified Value | Fig. 5-1-13. A to B |

**Switch setting:**

1) NIGHT SHOT (Lens block) ............................................ OFF
2) DIGITAL ZOOM (Menu display) .................................. OFF
3) STEADY SHOT (Menu display) .................................... OFF
4) LIGHT (FK-1000 block) ................................................. OFF

**Checking method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| | | | | **Indoor white balance check** |
| 1 | | | | Check that the lens is not covered with either filter. |
| 2 | 6 | 01 | 0F | Set the data, and press PAUSE button. |
| 3 | | | | Check that the center of the white luminance point is within the circle shown Fig. 5-1-13. A. |
| 4 | 6 | 01 | 00 | Set the data, and press PAUSE button. |
| | | | | **Outdoor white balance check** |
| 5 | | | | Place the C14 filter on the lens. |
| 6 | 6 | 01 | 3F | Set the data, and press PAUSE button. |
| 7 | | | | Check that the center of the white luminance point is within the circle shown Fig. 5-1-13. B. |
| 8 | | | | Remove the C14 filter. |
| | | | | **LV data check** |
| 9 | | | | Place the ND filter 1.5 (1.0+0.1+0.4) on the lens. |
| 10 | 6 | 01 | 0F | Set the data, and press PAUSE button. |
| 11 | | | | Wait for 2 sec. |
| 12 | 0 | 03 | 06 | Set the data. |
| 13 | 1 | | | Check that the display data (Note) satisfies the specified value.<br>Specified value: 0000 to 0BC0 |

**Note:** Displayed data of the adjustment remote commander.

1 : XX : XX

Display data

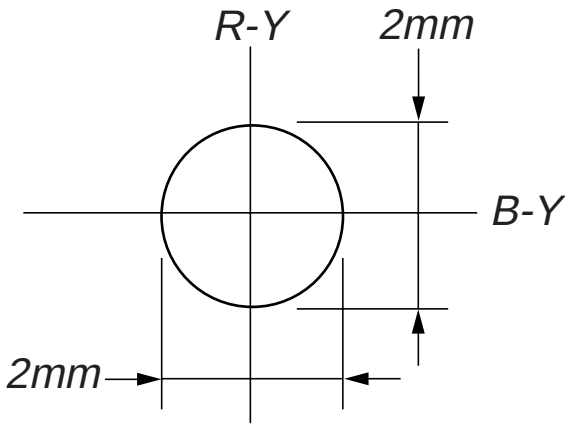

Fig. 5-1-13. (A)

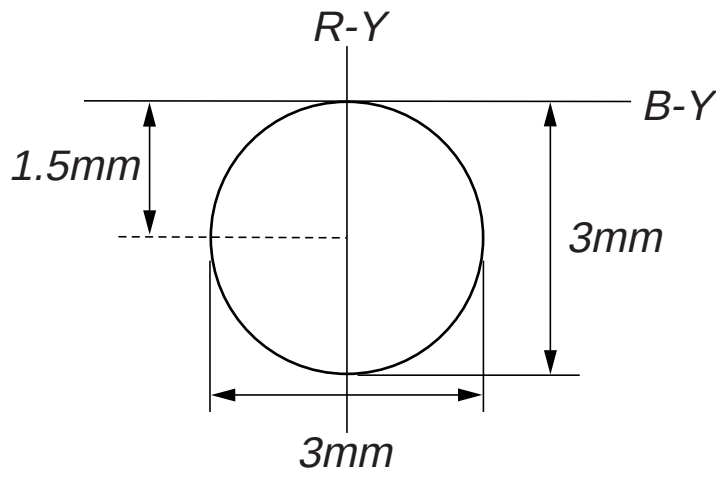

Fig. 5-1-13. (B)

**Processing after Completing Adjustments**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 6 | 01 | 00 | Set the data, and press PAUSE button. |
| 2 | 0 | 03 | 00 | Set the data. |

## 11. Angular Velocity Sensor Sensitivity Adjustment (CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

**Precautions on the Parts Replacement**

There are two types of repair parts.

Type A: ENC03JA
Type B: ENC03JB

Replace the broken sensor with a same type sensor. If replace with other type parts, the image will vibrate up and down or left and right during hand-shake correction operations. After replacing, re-adjust according to the adjusting method after replacement.

**Precautions on Angular Velocity Sensor**

The sensor incorporates a precision oscillator. Handle it with care as if it dropped, the balance of the oscillator will be disrupted and operations will not be performed properly.

| | |
|---|---|
| Subject | Arbitrary |
| Measurement Point | Display data of page 1 (Note1) |
| Measuring Instrument | Adjustment remote commander |
| Adjustment Page | F |
| Adjustment Address | 5E, 5F |
| Specified Value | 2700 to 5100 |

**Note1:** Displayed data of the adjustment remote commander.

1 : XX : XX
Display data

**Note2:** MI-040 board: CCD-TR818
MI-041 board: CCD-TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

**Switch setting:**

1) STEADY SHOT (Menu display) ...................................... ON
2) ZOOM .......................................................................... Center

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | F | 5E | | Set the following data, and press PAUSE button.<br>5A (NTSC), 74 (PAL) |
| 3 | F | 5F | | Set the following data, and press PAUSE button.<br>57 (NTSC), 5D (PAL) |
| | | | | **Pitch sensor check**<br>(MI-040/041 board SE751) |
| 4 | 0 | 03 | 11 | Set the data. |
| 5 | 1 | | | Check that the display data (Note1) satisfies the specified value. |
| | | | | **Yaw sensor check**<br>(MI-040/041 board SE752) |
| 6 | 0 | 03 | 12 | Set the data. |
| 7 | 1 | | | Check that the display data (Note1) satisfies the specified value. |

**Processing after Completing Adjustments**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 00 | Set the data. |
| 2 | 0 | 03 | 00 | Set the data. |
| 3 | | | | Move the camcorder, and check that the steady shot operations have been performed normally |

## 1-4. COLOR ELECTRONIC VIEWFINDER SYSTEM ADJUSTMENT (CCD-TR818)

**Note1:** The back light (fluorescent tube) is driven by a high voltage AC power supply. Therefore, do not touch the back light holder to avoid electrical shock.

**Note2:** When replacing the LCD unit, be careful to prevent damages caused by static electricity.

**[Adjusting connector]**

Most of the measuring points for adjusting the viewfinder system are concentrated in CN713 of VC-251 board or CPC connector of FP-262 flexible.

Connect the Measuring instruments and the adjustment remote commander via the CPC jig for BX/BK (J-6082-521-A) to CN713 or CPC connector. To operate the adjustment remote commander, connect the AC power adapter to the DC IN jack of CPC jig for BX/BK, or connect the L series Info-LITHIUM battery to the battery terminal of CPC jig for BX/BK.

The following table shows the Pin No. and signal name of CN713 or CPC connector.

| Pin No. | Signal Name | Pin No. | Signal Name |
|---|---|---|---|
| 1 | VCO | 2 | XLANC POWER ON |
| 3 | EVF BL | 4 | LANC IN |
| 5 | EVF BL 4.75V | 6 | LANC OUT |
| 7 | EVF VG | 8 | CAP FG |
| 9 | PB RF | 10 | REG GND |
| 11 | REG GND | 12 | REG GND |
| 13 | BPF MONI | 14 | IR VIDEO |
| 15 | REC RF | 16 | RF SWP |
| 17 | NC | 18 | NC |
| 19 | NC | 20 | NC |

*Table. 5-1-6.*

The following table shows the arrangement of the test points of CPC jig for BX/BK. (Pin No. are those of CN713 or CPC connector.)

| Pin No. | Signal Name | Pin No. | Signal Name |
|---|---|---|---|
| 3 | BL | 1 | EVF VCO |
| 7 | EVF VG | 5 | BL 4.75 |
| 9 | PB RF (MON) | | |
| 13 | BPF MONI | 10 | GND |
| 17 | TMS | 15 | REC RF (RF IN) |
| 20 | TDI | 19 | TDO |
| 16 | SWP | 18 | TCK |
| 15 | CAP FG | 14 | IR VIDEO |

*Table. 5-1-7.*

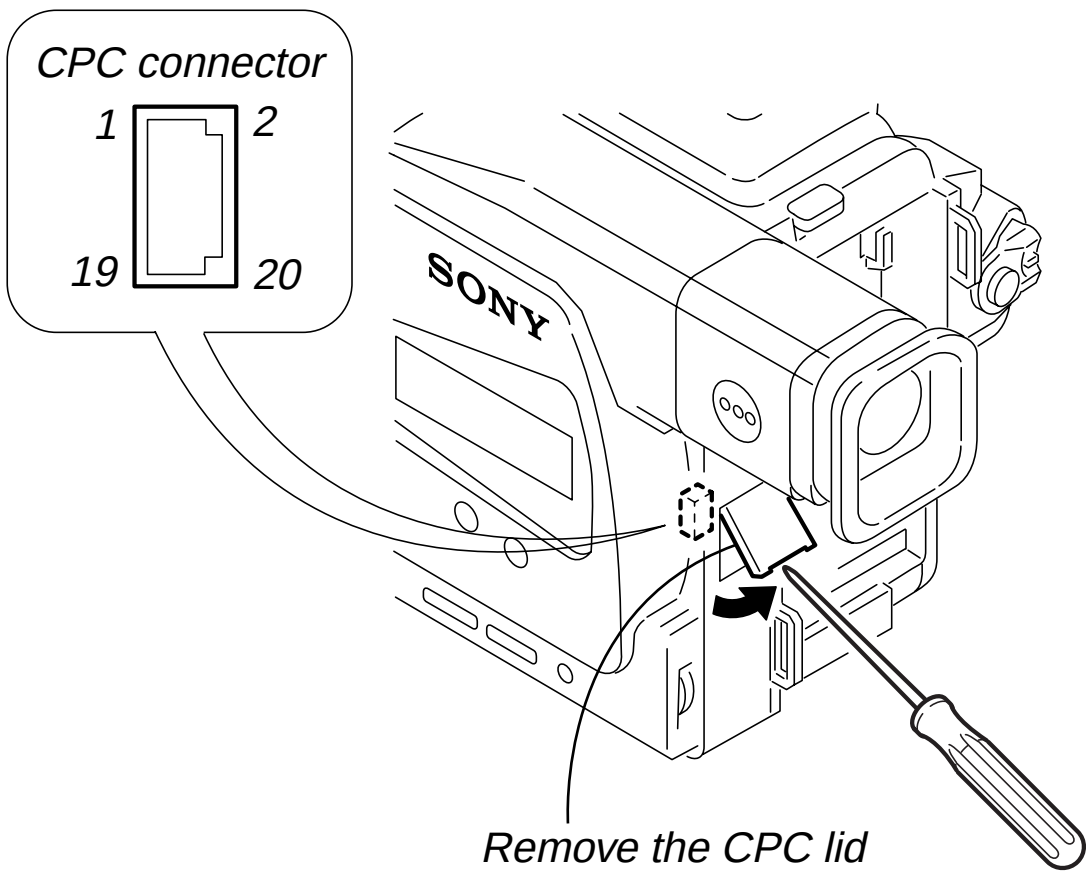

*Fig. 5-1-14.*

## 1. RGB AMP Adjustment (VF-141 board)

Set the D range of the RGB driver used to drive the LCD to the specified value. If deviated, the LCD screen will become blackish or saturated (whitish).

| | |
|---|---|
| Mode | Camera |
| Subject | Arbitrary |
| Measurement Point | EVF VG (Pin ⑦ of CPC connector of FP-262 flexible or Pin ⑦ of CN713 of VC-251 board) |
| Measuring Instrument | Oscilloscope |
| Adjustment Page | 7 |
| Adjustment Address | D8 |
| Specified Value | A = 7.20 ± 0.10V |

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 7 | D8 | | Change the data and set the voltage (A) between the reversed waveform pedestal and non-reversed waveform pedestal to the specified value. |
| 3 | 7 | D8 | | Press PAUSE button. |
| 4 | 0 | 01 | 00 | Set the data. |

## 2. Contrast Adjustment (VF-141 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

| | |
|---|---|
| Mode | Camera |
| Subject | Arbitrary |
| Measurement Point | EVF VG (Pin ⑦ of CPC connector of FP-262 flexible or Pin ⑦ of CN713 of VC-251 board) |
| Measuring Instrument | Oscilloscope |
| Adjustment Page | 7 |
| Adjustment Address | DC |
| Specified Value | A=2.20 ± 0.10V |

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 7 | DC | | Change the data and set the voltage (A) between the 100 IRE and 0 IRE (pedestal) to the specified value.<br>(The data should be “00” to “7F”.) |
| 3 | 7 | DC | | Press PAUSE button. |
| 4 | 0 | 01 | 00 | Set the data. |

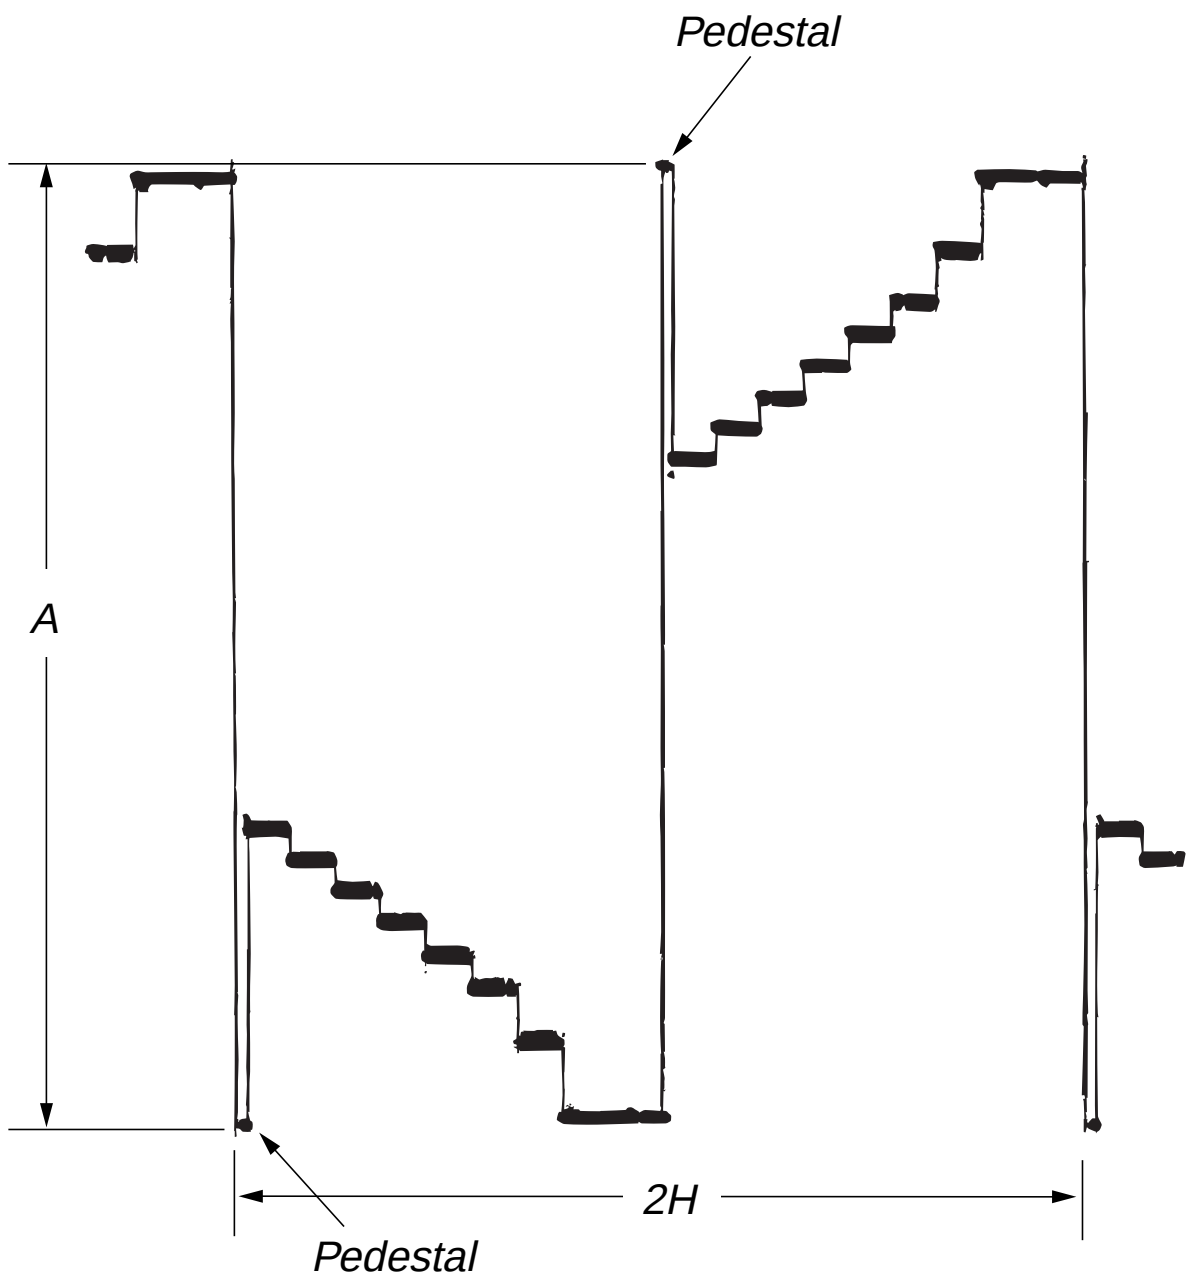

*Fig. 5-1-15.*

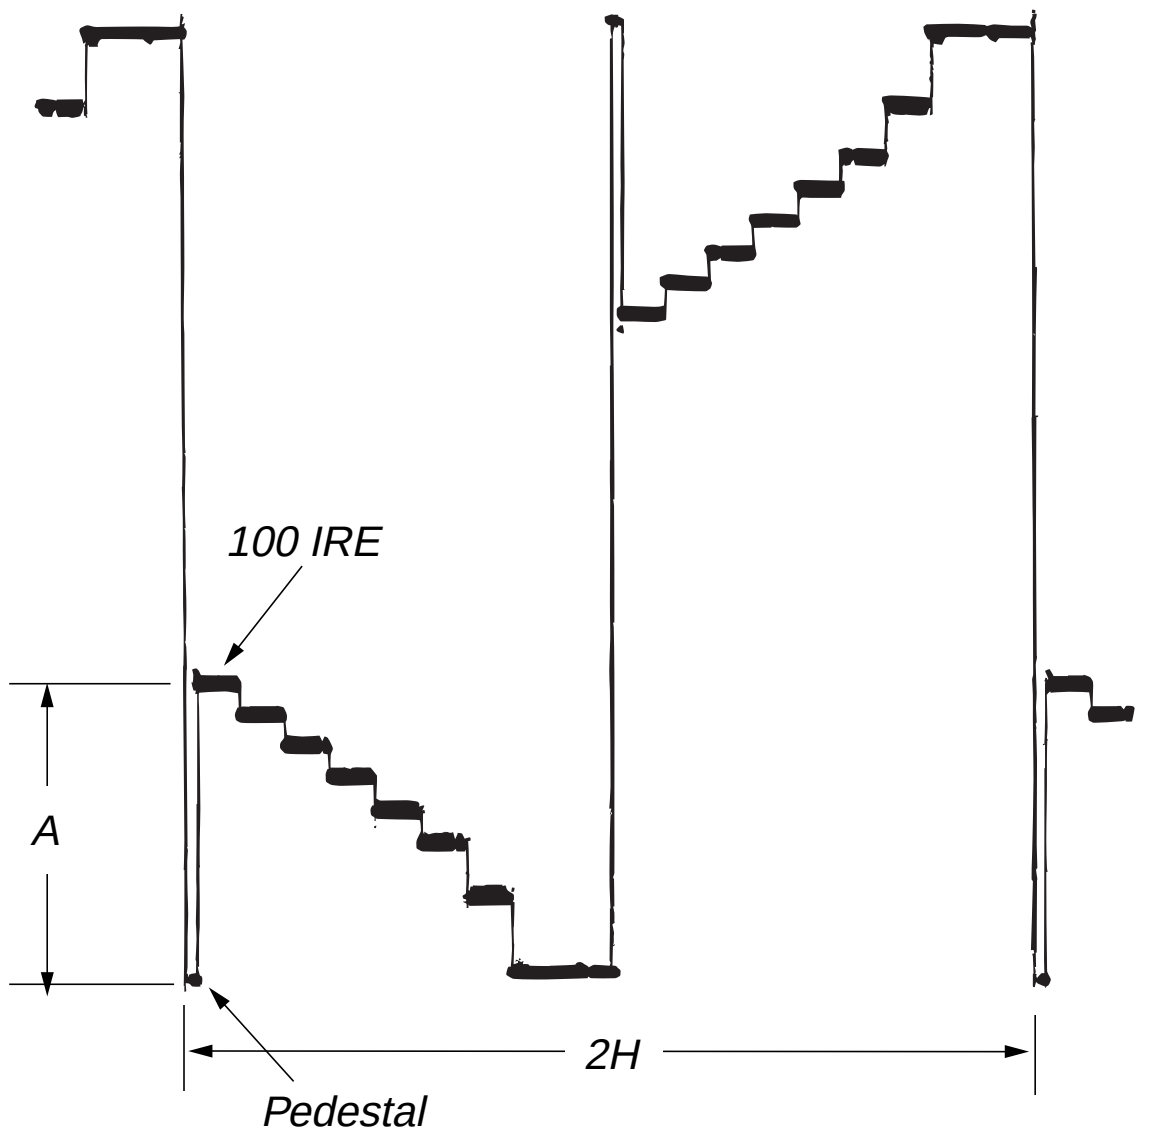

*Fig. 5-1-16.*

### 3. Backlight Consumption Current Adjustment (LB-062 board)

Set the backlight luminance and color temperature.
If deviated, the image may become dark or bright.

| | |
|---|---|
| Mode | Camera |
| Subject | Arbitrary |
| Measurement Point | + Probe: BL 4.75V (Pin ⑤ of CPC connector of FP-262 flexible or Pin ⑤ of CN713 of VC-251 board)<br>– Probe: BL (Pin ③ of CPC connector of FP-262 flexible or Pin ③ of CN713 of VC-251 board) |
| Measuring Instrument | Digital voltmeter |
| Adjustment Page | 7 |
| Adjustment Address | DF, E0, E1 |
| Specified Value | BRIGHT mode : A=15.5 ± 1mVdc<br>NORMAL mode : A=9.5 ± 1mVdc |

**Note1:** Perform the adjustment in the following order.

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 7 | DF | CA | Set the data, and press PAUSE button. |
| 3 | 7 | E0 | 07 | Set the data, and press PAUSE button. |
| 4 | 7 | E1 | 91 | Set the data, and press PAUSE button. |
| 5 | 7 | E0 | | Change the data and set the voltage difference (A) between BL4.75V and BL to the specified value of BRIGHT mode.<br>(The data should be “00” to “3F”.) |
| 6 | 7 | E0 | | Press PAUSE button. |
| 7 | 7 | E0 | | Read the data, and this data is named DE0. |
| 8 | | | | Convert DE0 to decimal notation, and obtain DE0’. (Note2) |
| 9 | | | | Calculate DDF’ using following equations (Decimal calculation)<br>DDF’ = DE0’ + 192 |
| 10 | | | | Convert DDF’ to a hexadecimal number, and obtain DDF. (Note2)<br>(The data should be “C0” to “FF”.) |
| 11 | 7 | DF | DDF | Set the data, and press PAUSE button. |
| 12 | 7 | E1 | | Change the data and set the voltage difference (A) between BL4.75V and BL to the specified value of NORMAL mode.<br>(The data should be “80” to “9F”.) |
| 13 | 7 | E1 | | Press PAUSE button. |
| 14 | 0 | 01 | 00 | Set the data. |

**Note2:** Refer to “Table 5-4-1. Hexadecimal-decimal Conversion Table”.

### 4. White Balance Adjustment (VF-141 board)

Correct the white balance.
If deviated, the reproduction of the EVF screen may degenerate.

| | |
|---|---|
| Mode | Camera |
| Signal | Arbitrary |
| Measurement Point | Check on EVF screen |
| Measuring Instrument | |
| Adjustment Page | 7 |
| Adjustment Address | DA, DB |
| Specified Value | The EVF screen should not be colored. |

**Note1:** Check the white balance only when replacing the following parts. If necessary, adjust them.
1. LCD panel
2. Light induction plate
3. IC4501

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 7 | DA | 8D | Set the data, and press PAUSE button. |
| 3 | 7 | DB | 83 | Set the data, and press PAUSE button. |
| 4 | 7 | DA | | Check that the EVF screen is not colored. If not colored, proceed to step 10. |
| 5 | 7 | DA | | Change the data so that the EVF screen is not colored. |
| 6 | 7 | DA | | Press PAUSE button. |
| 7 | 7 | DB | | Change the data so that the EVF screen is not colored. |
| 8 | 7 | DB | | Press PAUSE button. |
| 9 | 7 | DB | | If the EVF screen is colored, repeat steps 5 to 9. |
| 10 | 0 | 01 | 00 | Set the data. |

## 1-5. MONOCHROME ELECTRONIC VIEWFINEDER SYSTEM ADJUSTMENT (CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

### 1-5-1. Horizontal Slant Check

| Mode | Playback |
|---|---|
| Signal | Alignment tape :<br>For checking operation<br>(WR5-5NSP (NTSC))<br>(WR5-5CSP (PAL))<br>Monoscope section |
| Specified Value | ± 1.5° |

**Adjusting method:**

1) Adjust RV904 (BRIGHT) (VF-129 board) so that the CRT can be seen easily and clearly.
2) Check that the difference between the horizontal line and the tilt of black mask satisfies the specified value.

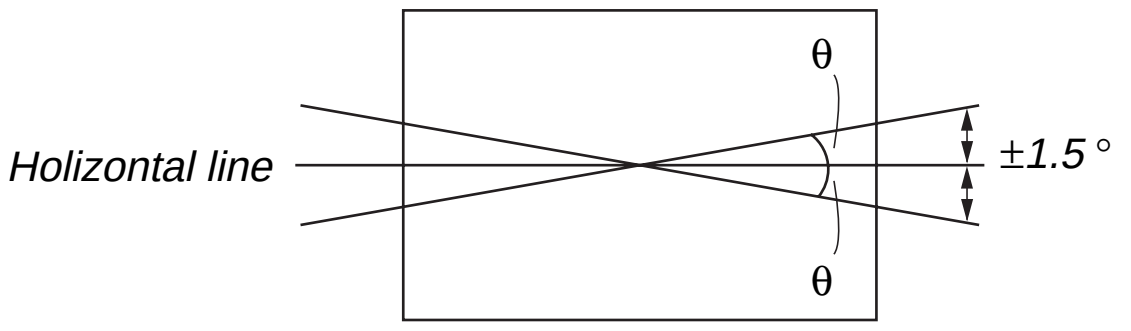
θ
Holizontal line
±1.5 °
θ

*Specified value : The image should be within ± 1.5 ° of the holizontal line.*

*Fig. 5-1-17.*

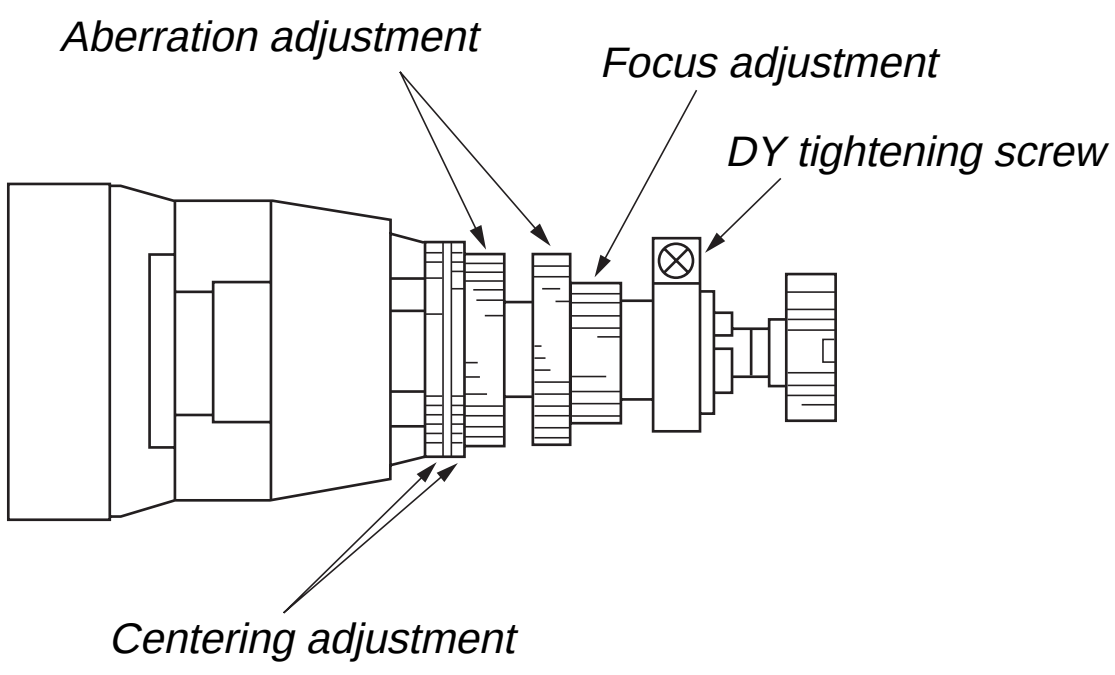
Aberration adjustment
Focus adjustment
DY tightening screw
Centering adjustment

*Fig. 5-1-18.*

**VF-129 BOARD**

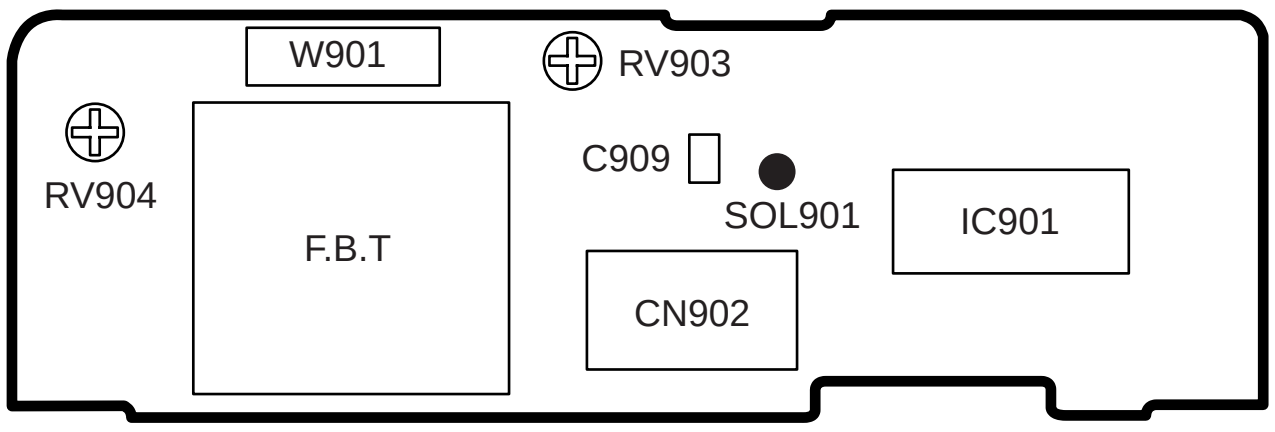
W901
RV903
RV904
C909
SOL901
F.B.T
IC901
CN902

### 1-5-2. Centering Adjustment

| Mode | Playback |
|---|---|
| Signal | Alignment tape :<br>For checking operation<br>(WR5-5NSP (NTSC))<br>(WR5-5CSP (PAL))<br>Monoscope section |
| Specified Value | ± 4% |

**Adjusting method:**

1) Use the centering adjustment ring and adjust so that the left, light, top, and bottom sides of the display are uniform. (Refer to Fig. 5-1-18.)

   **Note:** As the centering position changes due to earth magnetism, rotate it 360° in the horizontal direction, and adjust with the center section of the modifying position.

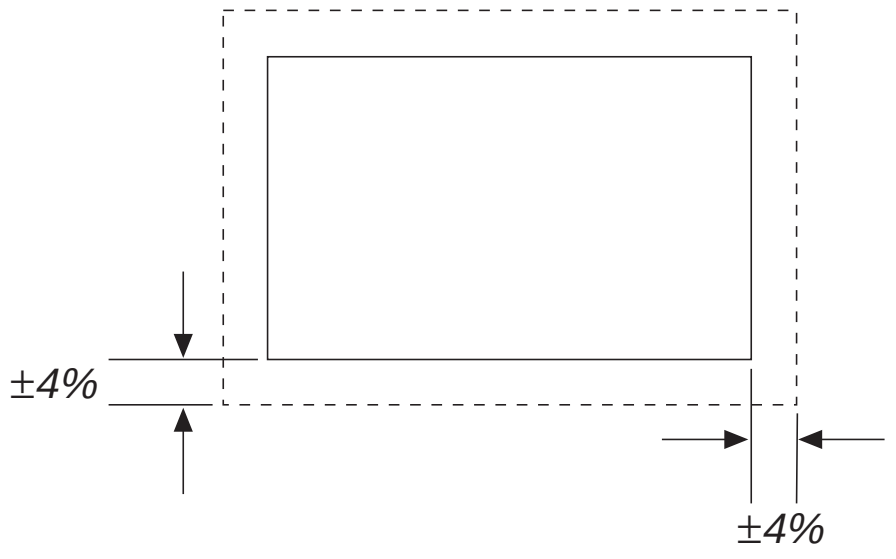

*Adjustment value : ±4%*

*Fig. 5-1-19.*

### 1-5-3. Focus Adjustment

| Mode | Playback |
|---|---|
| Signal | Alignment tape :<br>For checking operation<br>(WR5-5NSP (NTSC))<br>(WR5-5CSP (PAL))<br>Monoscope section |

**Adjusting method:**

1) Adjust the focus ring to obtain the optimum focus. (Refer to Fig. 5-1-18.)

### 1-5-4. Aberration Adjustment

| | |
|---|---|
| Mode | VTR stop |
| Signal | Dot pattern |
| Specified Value | $b1 \leqq 2 \times a1$<br>$b2 \leqq 0.8 \times a2$ |

**Adjusting method:**

1) Adjust the aberration adjustment ring so that the tracing of the dot satisfies the specified value.
2) If the centering becomes displaced here, perform the centering adjustment from the beginning again.

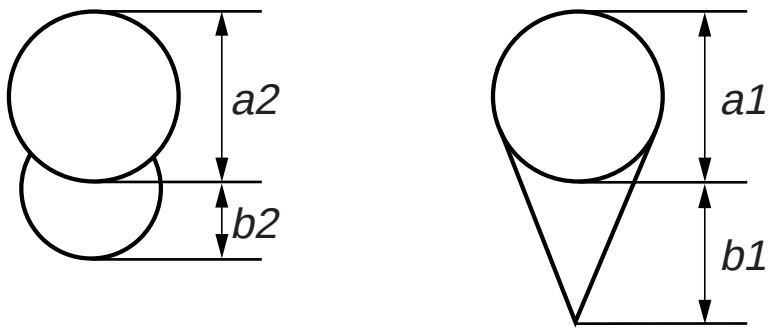

*Fig. 5-1-20.*

### 1-5-5. Horizontal Amplitude Adjustment (VF-129 board)

| | |
|---|---|
| Mode | Playback |
| Signal | Alignment tape :<br>For checking operation<br>(WR5-5NSP (NTSC))<br>(WR5-5CSP (PAL))<br>Monoscope section |
| Adjusting Element | C909 (SOL901) |
| Specified Value | 12 ± 6% |

**Adjusting method:**

1) Rotate RV903, and adjust the top and bottom side of the monoscope image to the top and bottom edges of the display.
2) Rotate RV904 so that the brightness is the normal level.
3) Solder or unsolder SOL901 pattern of the H size adjustment capacitor (C909) to “short” or “open”, so that the horizontal direction over scan becomes 10 ± 6% (Left and right totals).

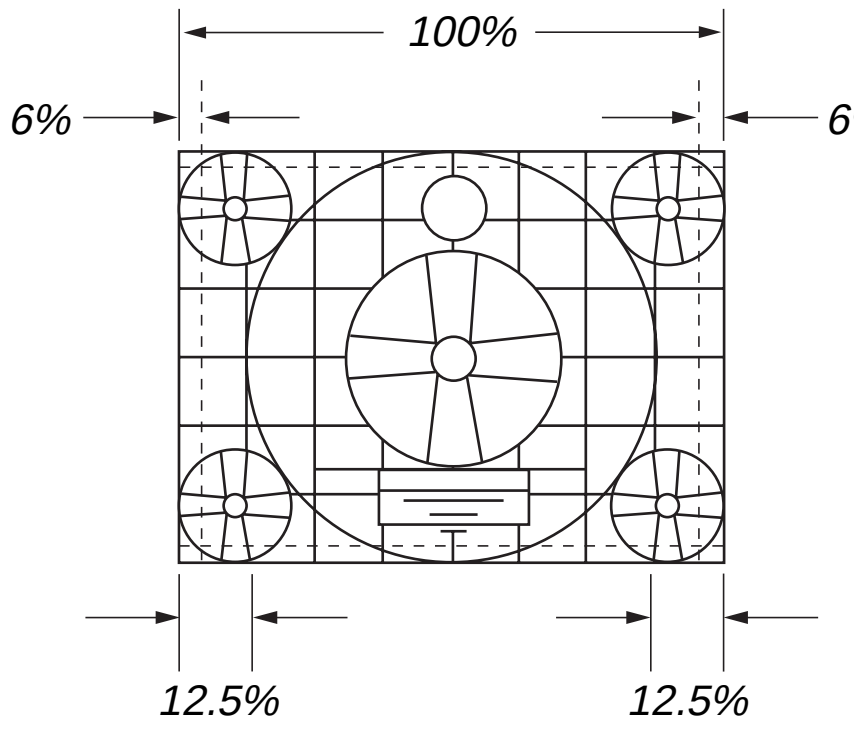

| SOL901 | Size H |
|---|---|
| Open | Small |
| Short | Big |

*Fig. 5-1-21.*

**VF-129 BOARD**

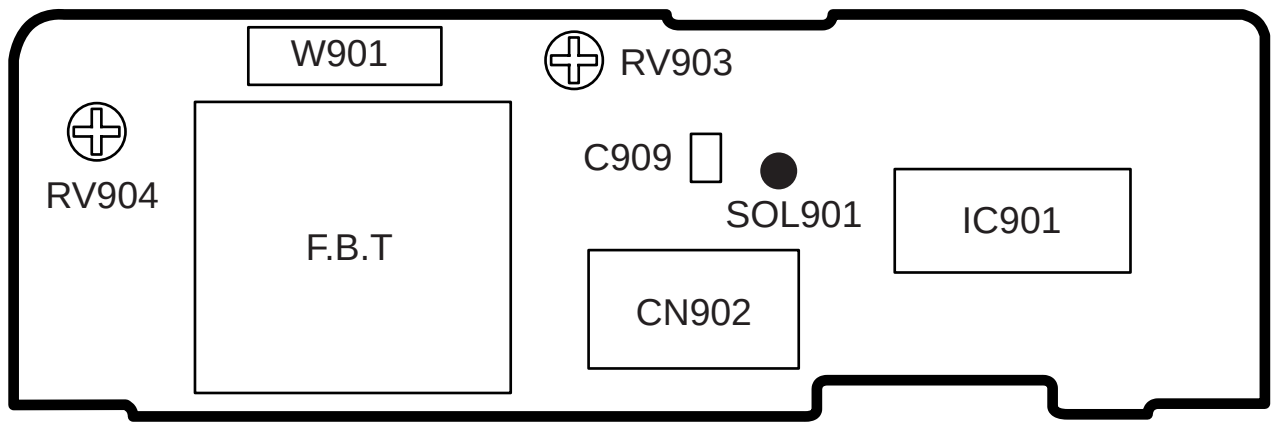

### 1-5-6. Vertical Amplitude Adjustment (VF-129 board)

| | |
|---|---|
| Mode | Playback |
| Signal | Alignment tape :<br>For checking operation<br>(WR5-5NSP (NTSC))<br>(WR5-5CSP (PAL))<br>Monoscope section |
| Adjusting Element | RV903 |
| Specified Value | 10 ± 3% |

**Adjusting method:**

1) Adjust RV903 so that the vertical direction over scan becomes 10 ± 3% (Top and bottom totals).

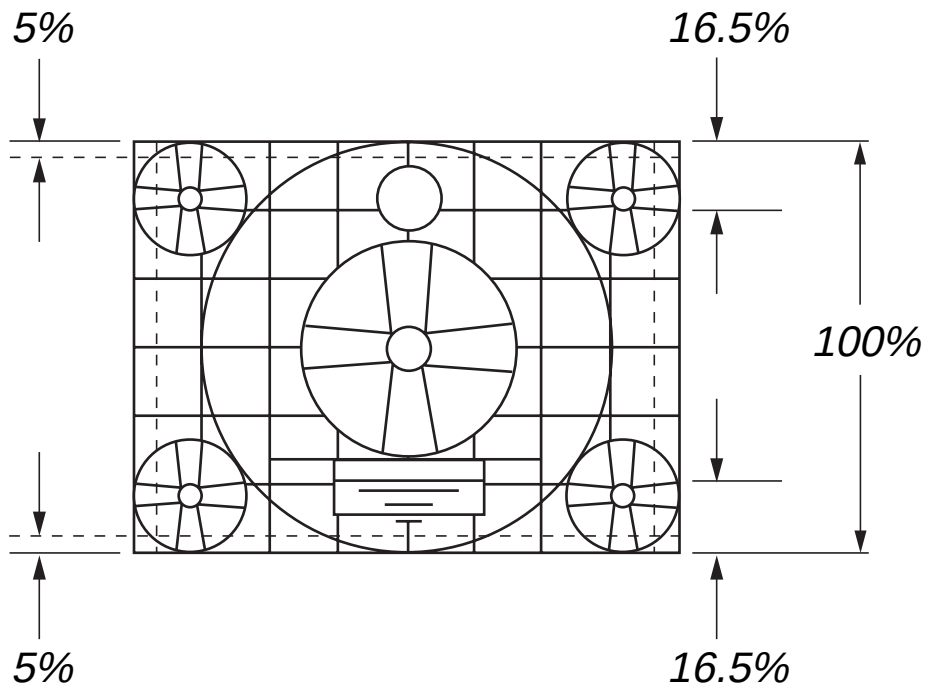

*Fig. 5-1-22.*

### 1-5-7. Brightness Adjustment (VF-129 board)

| | |
|---|---|
| Mode | Playback |
| Signal | Alignment tape :<br>For checking operation<br>(WR5-5NSP (NTSC))<br>(WR5-5CSP (PAL))<br>Monoscope section |
| Adjusting Element | RV904 |

**Adjusting method:**

1) Rotate RV904, and adjust so that the bright/dark sections of gray scale are displayed correctly. (The bright section should be unsatisfactory till the cross hatch appears vague in the monoscope circle. The dark section should be unsatisfactory till the darkest section of the gray scale cannot be differentiate.)

### 1-5-8. Horizontal Amplitude, Vertical Amplitude, Focus Check

“1-5-5. Horizontal Amplitude Adjustment” and “1-5-6. Vertical Amplitude Adjustment” should be both satisfy the specified values. If not, perform the adjustments from the beginning again. In this case, perform “1-5-7. Brightness Adjustment” again.
Moreover, check the focus, and if it found to be vague, perform “1-5-3. Focus Adjustment” and “1-5-4. Aberration Adjustment”.

## 1-6. LCD SYSTEM ADJUSTMENT (CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/ TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

**Note 1:** The back light (fluorescent tube) is driven by a high voltage AC power supply. Therefore, do not touch the back light holder to avoid electrical shock.

**Note 2:** When replacing the LCD unit, be careful to prevent damages caused by static electricity.

**Note 3:** Set the LCD BRIGHT (Menu display) to the center.
Set the LCD COLOR (Menu display) to the center.

**Note 4:** Connect the adjustment remote commander to CN713 of VC-251 board or CPC connector of FP-262 flexible via CPC jig for BX/BK (J-6082-521-A). To operate the adjustment remote commander, connect the AC power adapter (8.4Vdc) to the DC IN jack of CPC jig for BX/BK, or connect the L series Info-LITHIUM battery to the battery terminal of CPC jig for BX/BK.

**[Adjusting connector]**

Most of the measuring points for adjusting the LCD system are concentrated in CN5502 of the PD-131 board. Connect the measuring instruments via the multi CPC jig (J-6082-311-A). The following table shows the Pin No. and signal name of CN5502.

| Pin No. | Signal Name | Pin No. | Signal Name |
|---|---|---|---|
| 1 | VB | 2 | XVD OUT |
| 3 | VG | 4 | PANEL COM/PSIG |
| 5 | VR | 6 | PANEL ID |
| 7 | C-SYNC/XHD | 8 | XHD OUT |
| 9 | GND | 10 | GND |

*Table. 5-1-8.*

**PD-131 board**

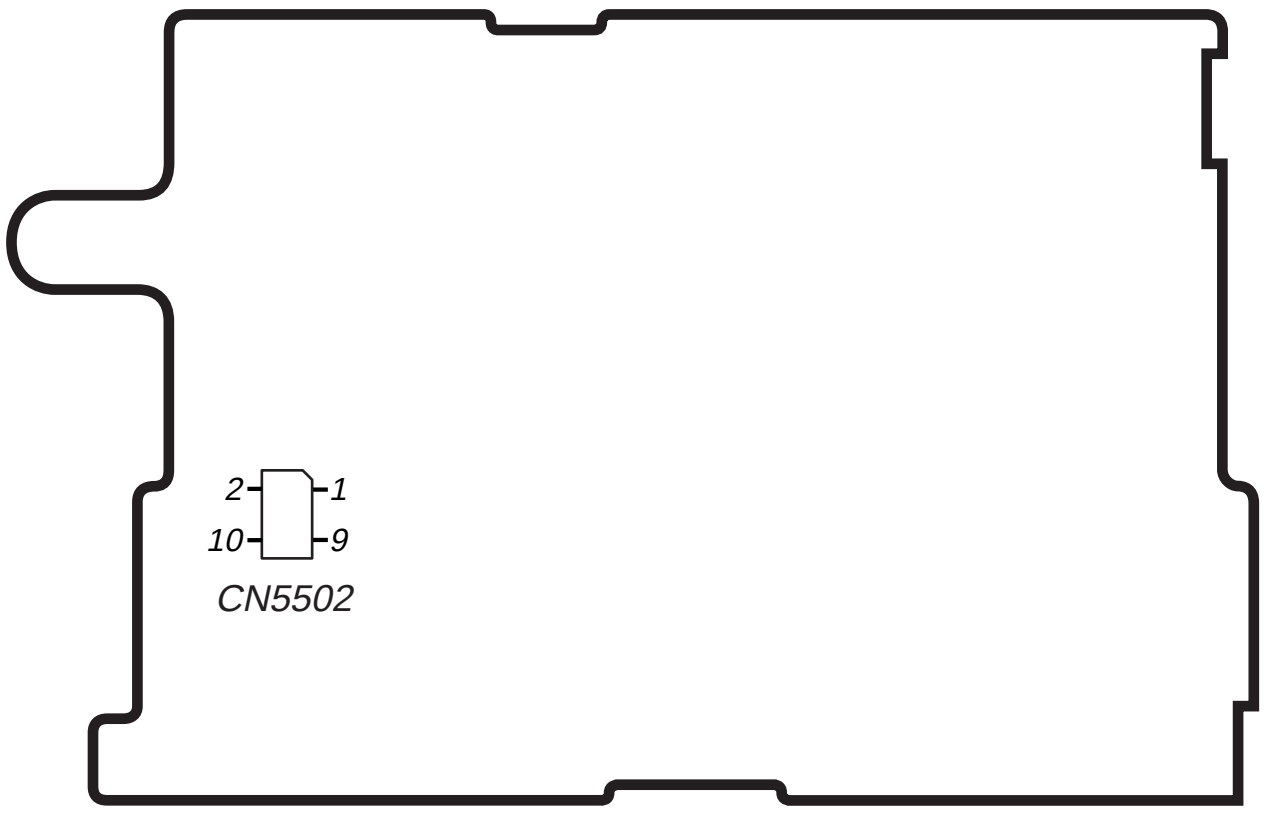

### 1. LCD Type Check

By measuring the resistor value between Pin ⑥ of CN5502 and GND, the type of LCD can be discriminated.

| Resistor value | LCD type | CCD- |
|---|---|---|
| 1.0kΩ | 2.5 LCD TYPE S (61k) | TRV49,TRV49E,TRV58,<br>TRV58E,TRV59E,<br>TRV68,TRV78,TRV78E |
| 4.7kΩ | 3.0 LCD TYPE S (123k) | TRV88 |
| 5.6kΩ | 3.5 LCD TYPE S (123k) | TRV98,TRV98E |

*Table. 5-1-9.*

## 2. VCO Adjustment (PD-131 board)

Set the VCO free-run frequency. If deviated, the LCD screen will be blurred.

| | |
|---|---|
| Mode | VTR stop |
| Signal | No signal |
| Measurement Point | Pin ⑧ of CN5502 (XHD OUT) |
| Measuring Instrument | Frequency counter |
| Adjustment Page | 7 |
| Adjustment Address | E5, E6 |
| Specified Value | f = 15734 ± 30Hz (NTSC)<br>f = 15625 ± 30Hz (PAL) |

**Note1:** NTSC model: CCD-TRV49/TRV58/TRV68/TRV78/TRV88/TRV98
PAL model: CCD-TRV49E/TRV58E/TRV59E/TRV78E/TRV98E

**Note2:** Refer to "1. LCD Type Check" for the discrimination of the LCD type.

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 7 | E5 | | Change the data and set theVCO frequency (f) to the specified value. |
| 3 | 7 | E5 | | Press PAUSE button. |
| 4 | 7 | E5 | | Read the data, and this data is named DE5. |
| 5 | | | | Convert DE5 to decimal notation, and obtain DE5'. (Note3) |
| 6 | | | | Calculate DE6' using following equations (Decimal calculation)<br>[2.5 LCD TYPE S]<br>When DE5' ≧ 20<br>DE6' = DE5' – 20<br>When DE5' < 20<br>DE6' = 00<br>[3.0 LCD TYPE S]<br>When DE5' ≧ 23<br>DE6' = DE5' – 23<br>When DE5' < 23<br>DE6' = 00<br>[3.5 LCD TYPE S]<br>When DE5' ≧ 4<br>DE6' = DE5' – 4<br>When DE5' < 4<br>DE6' = 00 |
| 7 | | | | Convert DE6' to a hexadecimal number, and obtain DE6. (Note3) |
| 8 | 7 | E6 | DE6 | Set the data, and press PAUSE button. |
| 9 | 0 | 01 | 00 | Set the data. |

**Note3:** Refer to "Table 5-4-1. Hexadecimal-decimal Conversion Table".

## 3. RGB AMP Adjustment (PD-131 board)

Set the D range of the RGB decoder used to drive the LCD to the specified value. If deviated, the LCD screen will become blackish or saturated (whitish).

| | |
|---|---|
| Mode | VTR stop |
| Signal | No signal |
| Measurement Point | Pin ③ of CN5502 (VG)<br>External trigger: Pin ④ of CN5502 (PANEL COM) |
| Measuring Instrument | Oscilloscope |
| Adjustment Page | 7 |
| Adjustment Address | E8 |
| Specified Value | A = 3.60 ± 0.05V |

**Note:** Refer to "1. LCD Type Check" for the discrimination of the LCD type.

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 7 | E8 | | Change the data and set the voltage (A) between the reversed waveform pedestal and non-reversed waveform pedestal to the specified value.<br>(The data should be "00" to "3F".) |
| 3 | 7 | E8 | | Press PAUSE button. |
| 4 | 0 | 01 | 00 | Set the data. |

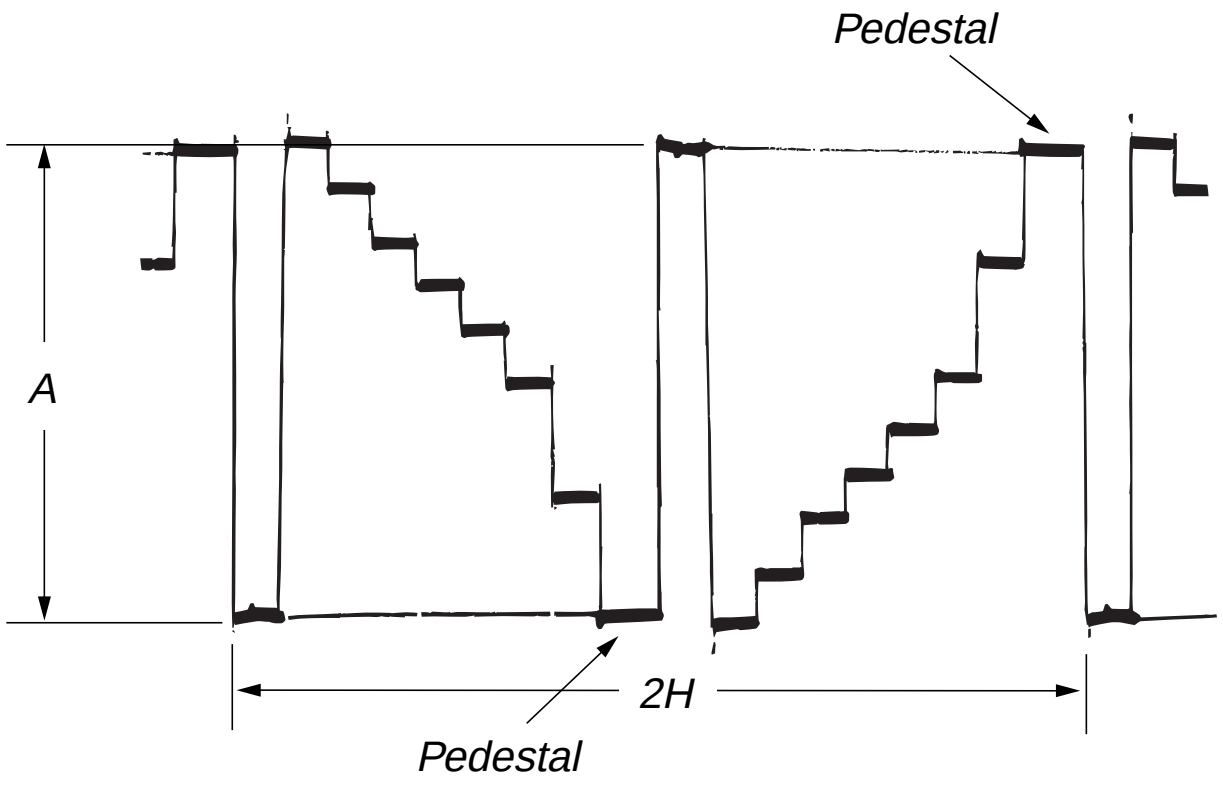

*Fig. 5-1-23.*

## 4. Contrast Adjustment (PD-131 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

| | |
|---|---|
| Mode | VTR stop |
| Signal | No signal |
| Measurement Point | Pin ③ of CN5502 (VG)<br>External trigger: Pin ④ of CN5502 (PANEL COM) |
| Measuring Instrument | Oscilloscope |
| Adjustment Page | 7 |
| Adjustment Address | ED |
| Specified Value | 2.5 LCD TYPE S:<br>A = 3.55 ± 0.07V<br>3.0/3.5 LCD TYPE S:<br>A = 3.35 ± 0.07V |

**Note:** Refer to "1. LCD Type Check" for the discrimination of the LCD type.

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 7 | ED | | Change the data and set the voltage (A) between the 100 IRE and 0 IRE (pedestal) to the specified value.<br>(The data should be "00" to "7F".) |
| 3 | 7 | ED | | Press PAUSE button. |
| 4 | 0 | 01 | 00 | Set the data. |

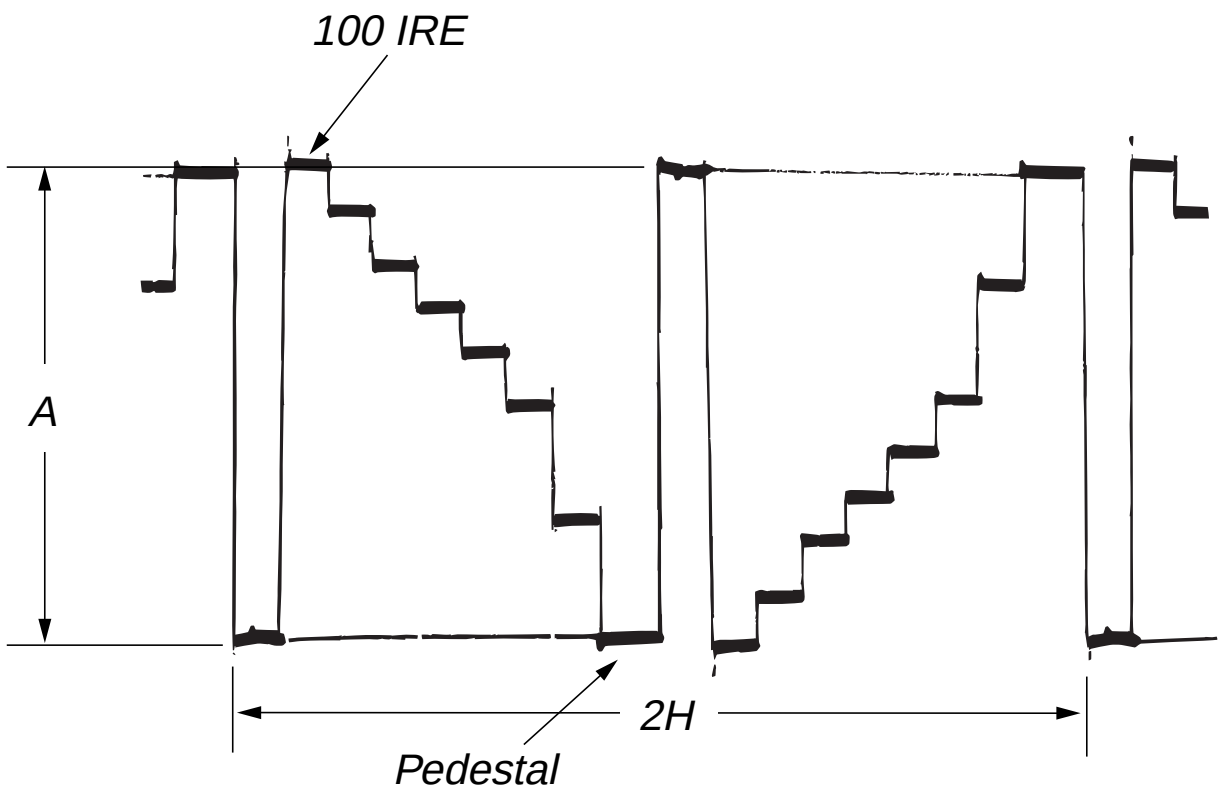

Fig. 5-1-24.

## 5. COM AMP Adjustment (PD-131 board)

Set the common electrode drive signal level of LCD to the specified value.

| | |
|---|---|
| Mode | VTR stop |
| Signal | No signal |
| Measurement Point | Pin ④ of CN5502 (PANEL COM) |
| Measuring Instrument | Oscilloscope |
| Adjustment Page | 7 |
| Adjustment Address | EA |
| Specified Value | 2.5 LCD TYPE S:<br>A = 6.30 ± 0.05V (NTSC)<br>A = 6.10 ± 0.05V (PAL)<br>3.0 LCD TYPE S:<br>A = 6.00 ± 0.05V (NTSC)<br>3.5 LCD TYPE S:<br>A = 5.90 ± 0.05V (NTSC)<br>A = 6.00 ± 0.05V (PAL) |

**Note1:** Refer to "1. LCD Type Check" for the discrimination of the LCD type.

**Note2:** NTSC model: CCD-TRV49/TRV58/TRV68/TRV78/TRV88/TRV98
PAL model: CCD-TRV49E/TRV58E/TRV59E/TRV78E/TRV98E

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 7 | EA | | Change the data and set the PANEL COM signal level (A) to the specified value. |
| 3 | 7 | EA | | Press PAUSE button. |
| 4 | 0 | 01 | 00 | Set the data. |

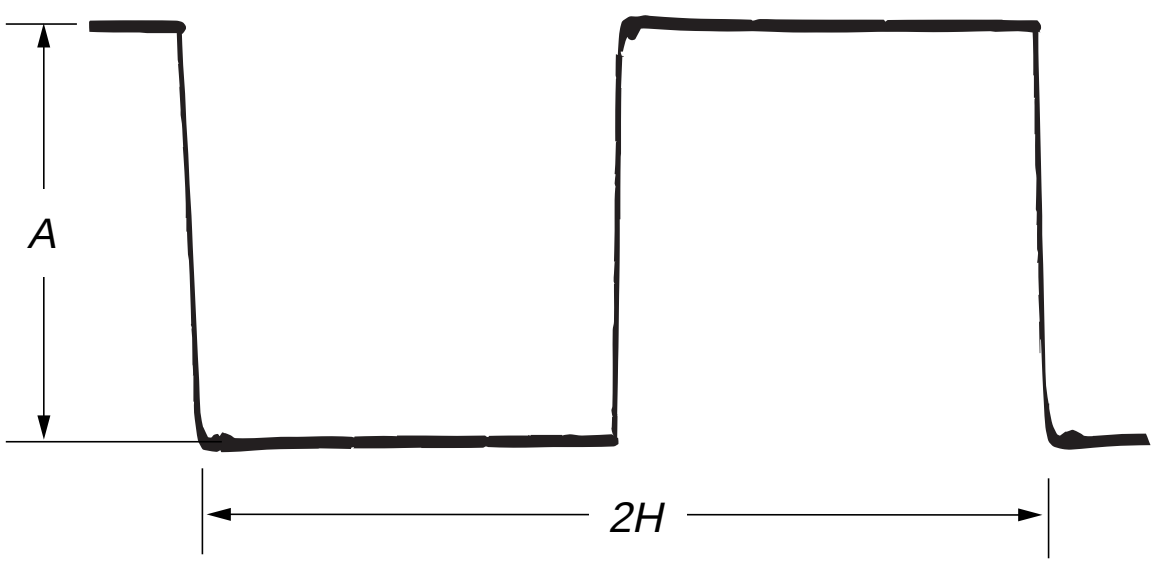

Fig. 5-1-25.

## 6. V-COM Adjustment (PD-131 board)

Set the DC bias of the common electrode drive signal of LCD to the specified value.
If deviated, the LCD display will move, producing flicker and conspicuous vertical lines.

| | |
|---|---|
| Mode | VTR stop |
| Signal | No signal |
| Measurement Point | Check on LCD display |
| Measuring Instrument | |
| Adjustment Page | 7 |
| Adjustment Address | E7 |
| Specified Value | The brightness difference between the section A and section B is minimum. |

**Note:** This adjustment should be carried out upon completion of the following adjustments.
RGB AMP Adjustment
Contrast Adjustment
COM AMP Adjustment

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 7 | E7 | | Change the data so that the brightness of the section A and that of the section B is equal. |
| 3 | 7 | E7 | | Subtract 8 from the data. |
| 4 | 7 | E7 | | Press PAUSE button. |
| 5 | 0 | 01 | 00 | Set the data. |

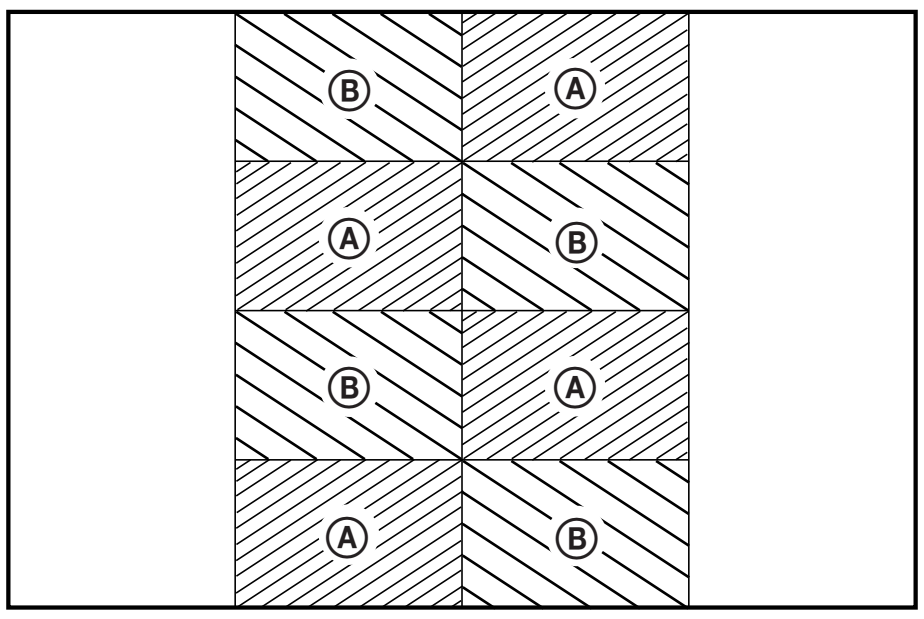

*Fig. 5-1-26.*

## 7. White Balance Adjustment (PD-131 board)

Correct the white balance.
If deviated, the reproduction of the LCD screen may degenerate.

| | |
|---|---|
| Mode | VTR stop |
| Signal | No signal |
| Measurement Point | Check on LCD screen |
| Measuring Instrument | |
| Adjustment Page | 7 |
| Adjustment Address | EB, EC |
| Specified Value | The LCD screen should not be colored. |

**Note1:** Check the white balance only when replacing the following parts. If necessary, adjust them.
1. LCD panel
2. Light induction plate
3. IC5501

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 7 | EB | 60 | Set the data, and press PAUSE button. |
| 3 | 7 | EC | 65 | Set the data, and press PAUSE button. |
| 4 | 7 | EB | | Check that the LCD screen is not colored. If not colored, proceed to step 10. |
| 5 | 7 | EB | | Change the data so that the LCD screen is not colored. |
| 6 | 7 | EB | | Press PAUSE button. |
| 7 | 7 | EC | | Change the data so that the LCD screen is not colored. |
| 8 | 7 | EC | | Press PAUSE button. |
| 9 | 7 | EC | | If the LCD screen is colored, repeat steps 5 to 9. |
| 10 | 0 | 01 | 00 | Set the data. |

# 5-2. MECHANISM SECTION ADJUSTMENT

Mechanism Section adjustments, checks, and replacement of mechanism parts, refer to the separate volume “8mm Video Mechanism Adjustment Manual Ⅶ B Mechanism ”.

## 2-1. ADJUSTMENT REMOTE COMMANDER

Connect the adjustment remote commander to CN713 of VC-251 board or CPC connector of FP-262 flexible via CPC jig for BX/BK (J-6082-521-A). To operate the adjustment remote commander, connect the AC power adapter (8.4Vdc) to the DC IN jack of CPC jig for BX/BK, or connect the L series Info-LITHIUM battery to the battery terminal of CPC jig for BX/BK.

## 2-2. OPERATING WITHOUT CASSETTE

1) Refer to “Section 2. DISASSEMBLY” and supply the power with the cabinet assembly removed. (So that the mechanical deck can be operated.)
2) Connect the adjustment remote commander.
3) Turn on the HOLD switch of the adjustment remote commander.
4) Close the cassette compartment without loading a cassette and complete loading.
5) Select page: 0, address: 01, and set data: 01.
6) Select page: F, address: 22, set data: 81, and press the PAUSE button of the adjustment remote commander.
7) Select page: D, address: 10, set data: 10, and press the PAUSE button of the adjustment remote commander.
8) Disconnect the power supply of the unit.
   By carrying out the above procedure, the unit can be operated without loading a cassette.
   Be sure to carry out “Processing after Operations” after checking the operations.
   Set the data of page: D, address: 10 to the following if the sensor ineffective mode, forced VTR power supply On mode or forced camera power supply ON mode are to be used together.
   Forced VTR power ON mode ........................................ 12
   Forced camera power ON mode .................................... 11

### [Procedure after checking operations]

1) Select page: 0, address: 01, and set data: 01.
2) Select page: F, address: 22, set data: 80, and press the PAUSE button of the adjustment remote commander.
3) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjustment remote commander.
4) Select page: 0, address: 01, and set data: 00.
5) Disconnect the power supply of the unit.

## 2-3. TAPE PATH ADJUSTMENT

### 1. Preparations for Adjustment

1) Clean the tape path face (tape guide, capstan shaft, pinch roller).
2) Connect the adjustment remote commander.
3) Turn on the HOLD switch of the adjustment remote commander.
4) Select page: 0, address: 01, and set data: 01.
5) Select page: F, address: 22, set data: 88, and press the PAUSE button of the adjustment remote commander.
   (Be sure to perform “Processing after operation” after completing adjustments.)
6) Connect the oscilloscope to CPC jig for BX/BK.
   Channel 1: PB RF (MON)
   External trigger: SWP
7) Playback the alignment tape for tracking. (WR5-1NP (NTSC), WR5-1CP (PAL))
8) Check that the oscilloscope RF waveform is normal at the entrance and exit.
   If not normal, adjust according to the separate volume “8mm Video Mechanical Adjustment Manual Ⅶ B Mechanism ”.
9) Perform “Processing after operations”, after completing adjustment.

### Test point of CPC jig for BX/BK

| Pin No. | Signal Name | Pin No. | Signal Name |
|---|---|---|---|
| 3 | BL | 1 | EVF VCO |
| 7 | EVF VG | 5 | BL 4.75 |
| 9 | PB RF (MON) | | |
| 13 | BPF MONI | 10 | GND |
| 17 | TMS | 15 | REC RF (RF IN) |
| 20 | TDI | 19 | TDO |
| 16 | SWP | 18 | TCK |
| 8 | CAP FG | 14 | IR VIDEO |

**Note:** Pin No. are those of CN713 or CPC connector.

*Table 5-2-1.*

### [Procedure after operations]

1) Connect the adjustment remote commander, and turn on the HOLD switch.
2) Select page: 0, address: 01, and set data: 01.
3) Select page: F, address: 22, set data: 80, and press the PAUSE button of the adjustment remote commander.
4) Select page: 0, address: 01, and set data: 00.
5) Remove the power supply from the unit.

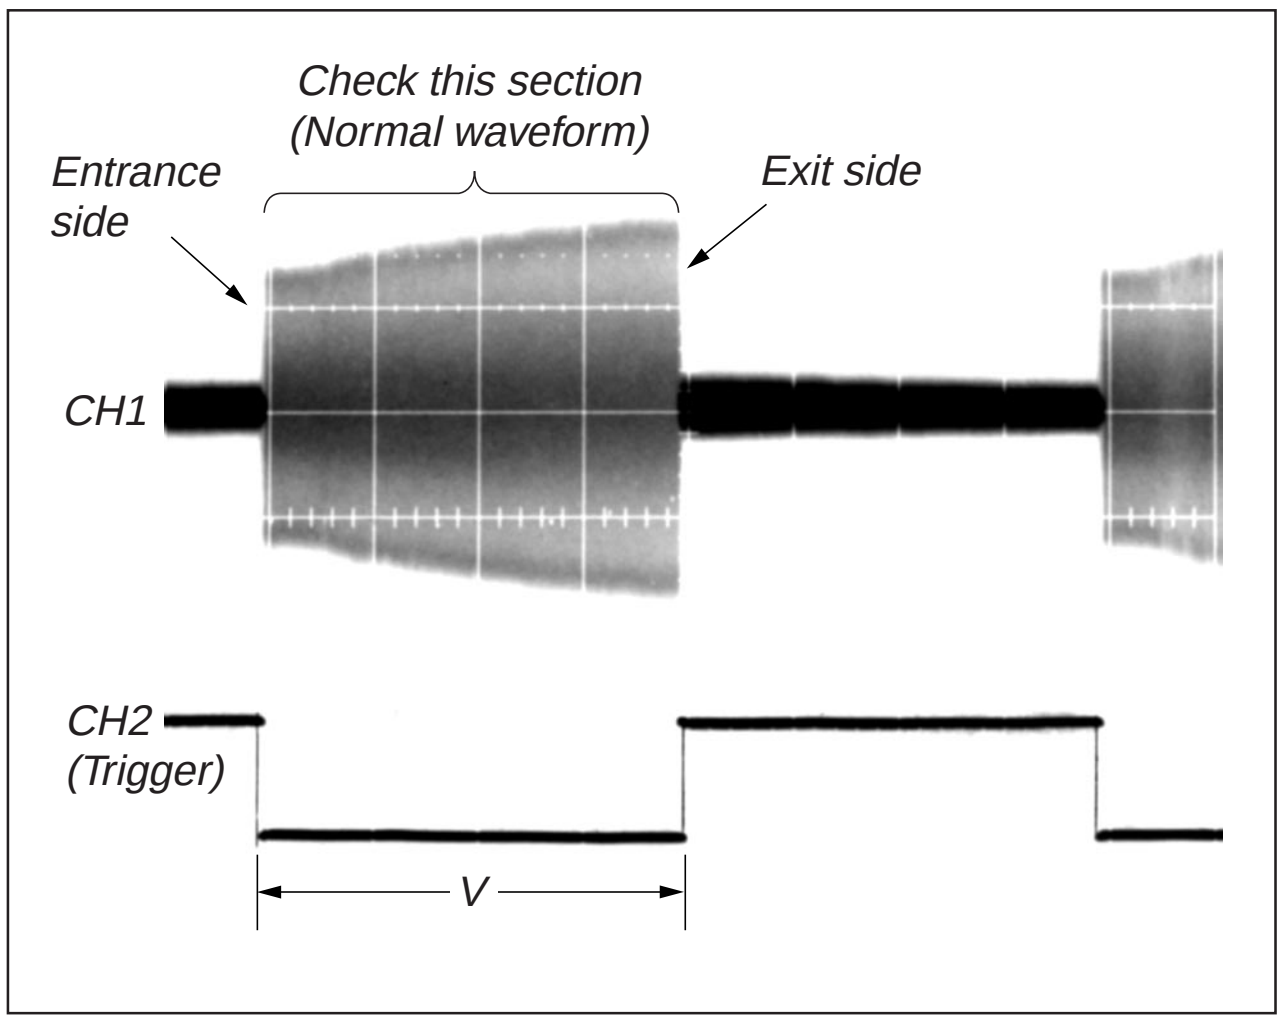

*Fig. 5-2-1.*

## 5-3. VIDEO SECTION ADJUSTMENTS

### 3-1. PREPARATIONS BEFORE ADJUSTMENTS

Use the following measuring instruments for video section adjustments.

**3-1-1. Equipment to Required**

1) TV monitor
2) Oscilloscope (dual-phenomenon, band width above 30 MHz with delay mode) (Unless specified otherwise, use a 10 : 1 probe.)
3) Frequency counter
4) Pattern generator with video output terminal
5) Digital voltmeter
6) Audio generator
7) Audio level meter
8) Audio distortion meter
9) Audio attenuator
10) Regulated power supply
11) NTSC alignment tapes
    - For tracking adjustment (WR5-1NP)
      Parts code : 8-967-995-02
    - For video frequency characteristics adjustment (WR5-7NE)
      Parts code : 8-967-995-13
    - For checking Standard 8 mode operations
    - For LP (WR5-4NL)
      Parts code : 8-967-995-51
    - For SP (WR5-5NSP)
      Parts code : 8-967-995-42

    **Note:** The following alignment tapes can also be used.
    WR5-4NSP (8-967-995-41)
    - For checking Hi8 mode operations
    - For LP (WR5-8NLE)
      Parts code : 8-967-995-52
    - For SP (WR5-8NSE)
      Parts code : 8-967-995-43
    - For BPF adjustment (WR5-11NS)
      Parts code : 8-967-995-71
12) PAL alignment tapes
    - For tracking adjustment (WR5-1CP)
      Parts code : 8-967-995-07
    - For video frequency characteristics adjustment (WR5-7CE)
      Parts code : 8-967-995-18
    - For checking Standard 8 mode operations
    - For LP (WR5-4CL)
      Parts code : 8-967-995-56
    - For SP (WR5-5CSP)
      Parts code : 8-967-995-47

    **Note:** The following alignment tapes can also be used.
    1) WR5-3CL (8-967-995-36)
    2) WR5-4CSP (8-967-995-46)
    - For checking Hi8 mode operations
    - For LP (WR5-8CLE)
      Parts code : 8-967-995-57
    - For SP (WR5-8CSE)
      Parts code : 8-967-995-48
    - For BPF adjustment (WR5-11CS)
      Parts code : 8-967-995-76
13) Adjustment remote commander (J-6082-053-B)
14) CPC jig for BX/BK (J-6082-521-A)
15) IR receiver jig (J-6082-383-A)

### 3-1-2. Precautions on Adjusting

1) Connect the adjustment remote commander to CN713 of VC-251 board or CPC connector of FP-262 flexible via CPC jig for BX/BK (J-6082-521-A). To operate the adjustment remote commander, connect the AC power adapter to the DC IN jack of CPC jig for BX/BK, or connect the L series Info-LITHIUM battery to the battery terminal of CPC jig for BX/BK.
2) The adjustments of this unit are performed in the VTR mode or camera mode.
   To set to the VTR mode, set the power switch to "PLAYER" or set the "Forced VTR Power ON mode" using the adjustment remote commander (Note3).
   To set to the Camera mode, set the power switch to "CAMERA" or set the "Forced Camera Power ON mode" using the adjustment remote commander (Note4).
   After completing adjustments, be sure to exit the "Forced VTR Power ON Mode" or "Forced Camera Power ON Mode". (Note6)
3) The front panel block (MI-040/041 board, microphone unit, video light) need not be connected except during "IR transmitter adjustment (CCD-TRV98)". To remove, disconnect the following connector.
   MI-040/041 board CN754 (24P 0.5mm)
4) As removing the cabinet (R) assembly (removing CN709 of the VC-251 board) means removing the lithium 3V power supply (CF-1000 block/CF-077 board BT101), data such as date, time, user-set menus will be lost. After completing adjustments, reset these data. If the cabinet (R) assembly has been removed, the self-diagnosis data, data on history of use (total drum rotation time etc.) will be lost. Before removing, note down the self-diagnosis data (data of page: 2, address: B0 to C6) and the data on history use (data of page: 2, address: A2 to AA and E0 to E2). (Refer to "5-4.Service Mode".)
5) The cabinet (R) assembly (CF-077 board (TR model), CF-1000 block, LCD block (TRV model)) need not be connected to operate the VTR block. When removing the cabinet (R) assembly, disconnect the following connectors.
   1. VC-251 board CN709 (24P, 0.5mm)
   2. VC-251 board CN701 (20P, 0.8mm) (TRV model)
6) The lens block (CD-281/286 board) need not be connected. To remove, disconnect the following connectors.
   1. VC-251 board CN271 (14P, 0.5mm)
   2. VC-251 board CN291 (24P, 0.5mm)
7) The EVF block (VF-129/144 board) need not be connected. To remove, disconnect the following connectors.
   1. VC-251 board CN715 (4P, 1.0mm) (B/W EVF model)
   2. VC-251 board CN708 (20P, 0.5mm) (Color EVF model)
8) By setting the "Forced VTR Power ON mode" or "Forced Camera Power ON mode", the video section can be operate even if the control switch block (SS-1000) has been removed. When removing the control switch block (SS-1000), disconnect the following connector.
   VC-251 board CN711 (5P 0.8mm)

**Note1:** TRV model:
CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
TR model:
CCD-TR618/TR618E/TR718E/TR728E/TR818
Color EVF model:
CCD-TR818
B/W EVF model:
CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

**Note2:** MI-040 board, CF-1000 block, CD-281 board: TRV model
MI-041 board, CF-077 board, CD-286 board: TR model
VF-129 board: B/W EVF model
VF-141 board: Color EVF model

**Note3:** Setting the "Forced VTR Power ON" mode (VTR mode)
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 02, and press the PAUSE button.

The above procedure will enable the VTR power to be turned on with the control switch block (SS-1000) removed.
After completing adjustments, be sure to exit the "Forced VTR Power ON mode".

**Note4:** Setting the "Forced Camera Power ON" mode (Camera mode)
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 01, and press the PAUSE button.

The above procedure will enable the camera power to be turned on with the control switch block (SS-1000) removed.
After completing adjustments, be sure to exit the "Forced Camera Power ON mode".

**Note5:** Exiting the "Forced Power ON" mode
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 00, and press the PAUSE button.
3) Select page: 0, address: 01, and set data: 00.

### 3-1-3. Adjusting Connectors

Some of the adjusting points of the video section are concentrated in CN713 of VC-251 board or CPC connector of FP-262 flexible. Connect the Measuring instruments and the adjustment remote commander via the CPC jig for BX/BK (J-6082-521-A) to CN713 or CPC connector. To operate the adjustment remote commander, connect the AC power adapter to the DC IN jack of CPC jig for BX/BK, or connect the L series Info-LITHIUM battery to the battery terminal of CPC jig for BX/BK.

The following table shows the Pin No. and signal name of CN713 or CPC connector.

| Pin No. | Signal Name | Pin No. | Signal Name |
|---|---|---|---|
| 1 | VCO | 2 | XLANC POWER ON |
| 3 | EVF BL | 4 | LANC IN |
| 5 | EVF BL 4.75V | 6 | LANC OUT |
| 7 | EVF VG | 8 | CAP FG |
| 9 | PB RF | 10 | REG GND |
| 11 | REG GND | 12 | REG GND |
| 13 | BPF MONI | 14 | IR VIDEO |
| 15 | REC RF | 16 | RF SWP |
| 17 | NC | 18 | NC |
| 19 | NC | 20 | NC |

*Table 5-3-1.*

The following table shows the arrangement of the test points of CPC jig for BX/BK. (Pin No. are those of CN713 or CPC connector.)

| Pin No. | Signal Name | Pin No. | Signal Name |
|---|---|---|---|
| 3 | BL | 1 | EVF VCO |
| 7 | EVF VG | 5 | BL 4.75 |
| 9 | PB RF (MON) | | |
| 13 | BPF MONI | 10 | GND |
| 17 | TMS | 15 | REC RF (RF IN) |
| 20 | TDI | 19 | TDO |
| 16 | SWP | 18 | TCK |
| 8 | CAP FG | 14 | IR VIDEO |

*Table 5-3-2.*

### 3-1-4. Connecting the Equipment

Connect the measuring instruments as shown in Fig. 5-3-2 and perform the adjustments.

***[TRV model]***

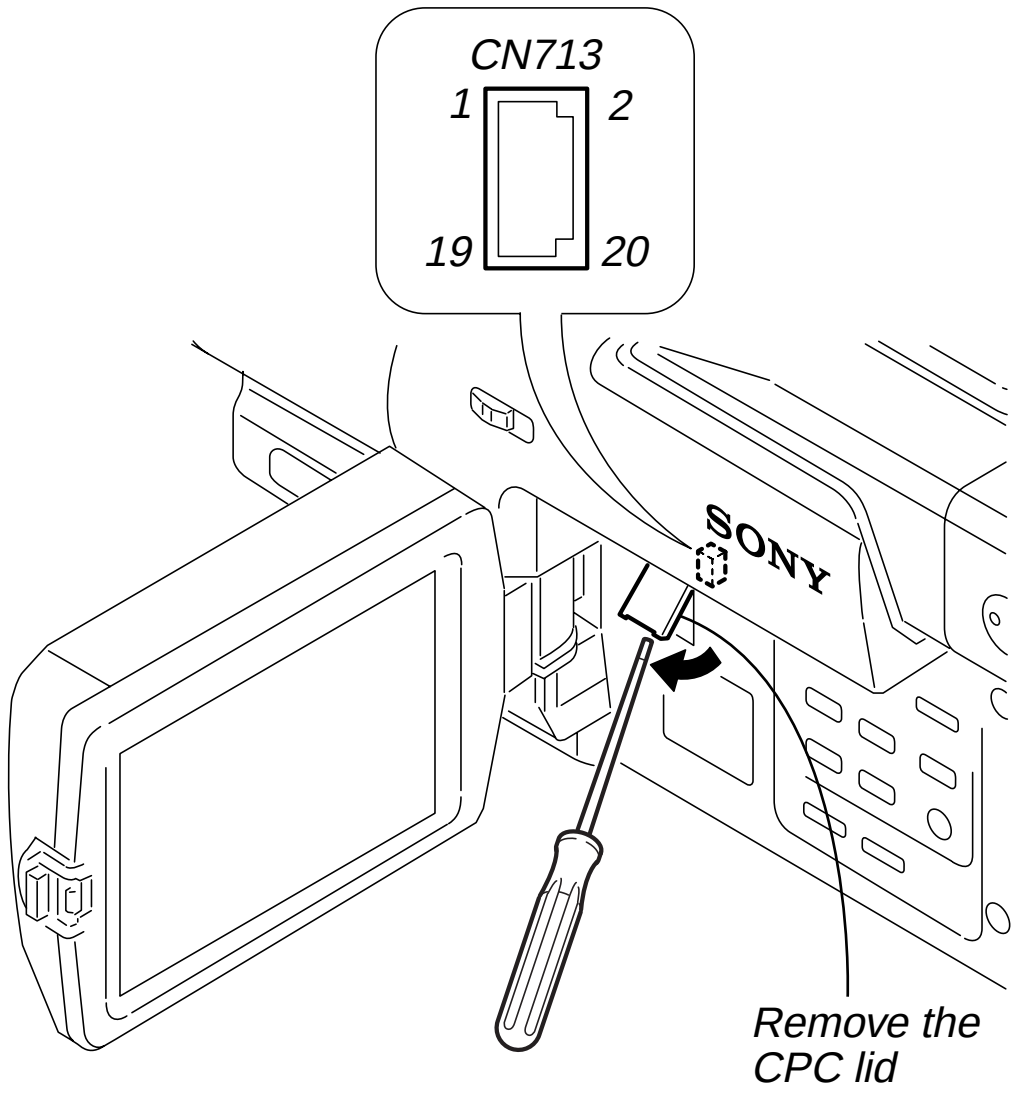
CN713
1
2
19
20
SONY
Remove the CPC lid

***[TR model]***

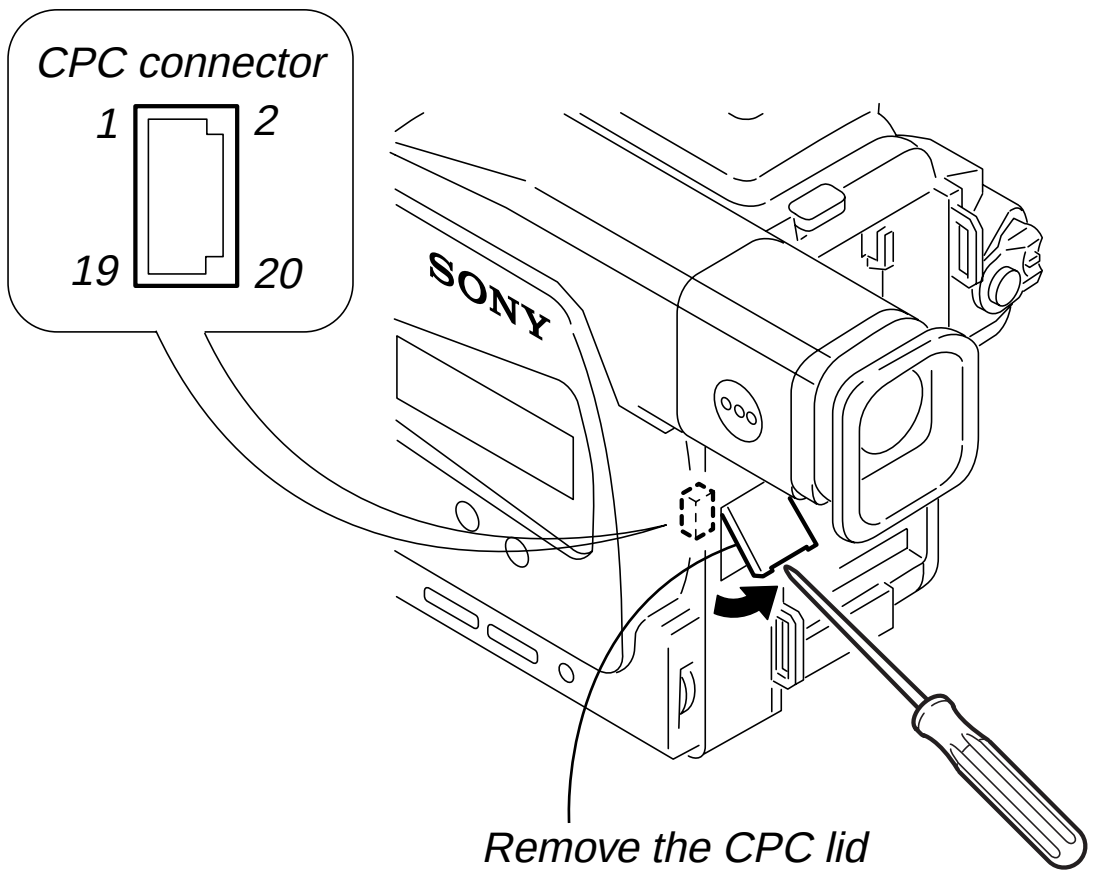
CPC connector
1
2
19
20
SONY
Remove the CPC lid

*Fig. 5-3-1.*

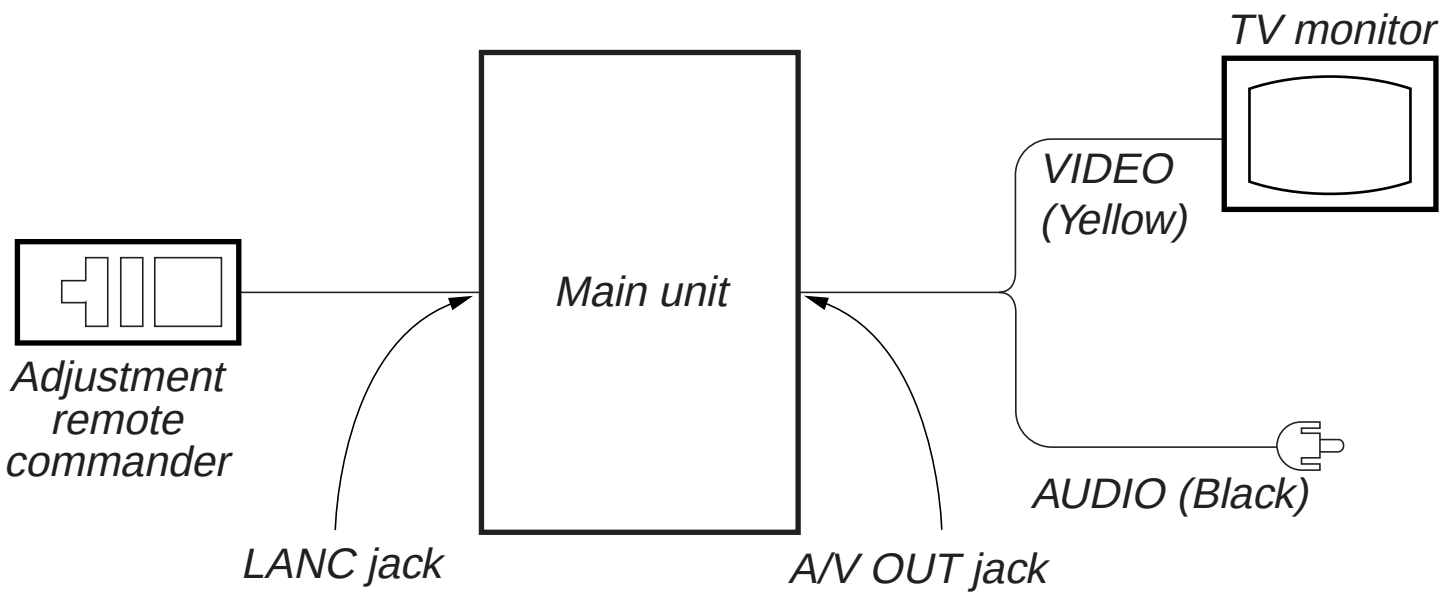
TV monitor
VIDEO (Yellow)
Main unit
Adjustment remote commander
AUDIO (Black)
LANC jack
A/V OUT jack

*Fig. 5-3-2.*

### 3-1-5. Alignment Tape

The following table lists alignment tapes which are available.
Use the tape specified in the signal column for each adjustment. If the type of tape to be used for checking operations is not specified, use whichever type.

**Alignment tape**

| Name | Recording mode | Tape type | Tape speed | Usage |
|---|---|---|---|---|
| Tracking<br>(WR5-1NP(NTSC), WR5-1CP(PAL)) | Standard 8 | MP | SP | Tape path adjustment, Switching position adjustment |
| Video frequency characteristics<br>(WR5-7NE(NTSC), WR5-7CE(PAL)) | Hi8 | ME | SP (NTSC)<br>LP (PAL) | Frequency characteristics adjustment |
| Operation check<br>(WR5-5NSP(NTSC), WR5-5CSP(PAL)) | Standard 8 | MP | SP | Operation check |
| Operation check<br>(WR5-8NSE(NTSC), WR5-8CSE(PAL)) | Hi8 | ME | SP | |
| Operation check<br>(WR5-4NL(NTSC), WR5-4CL(PAL)) | Standard 8 | MP | LP | |
| Operation check<br>(WR5-8NLE(NTSC), WR5-8CLE(PAL)) | Hi8 | ME | LP | |
| BPF adjustment<br>(WR5-11NS(NTSC), WR5-11CS(PAL)) | Standard 8 | MP | SP | BPF adjustment |

Tape type:

ME .................................. Particle type metal tape
MP .................................. Evaporated type metal tape

*Table. 5-3-3.*

Fig.5-3-3. shows the 75% color bar signals recorded on the alignment tape.
**Note:** Measure using the VIDEO terminal (Terminated at 75Ω).

***For NTSC model***

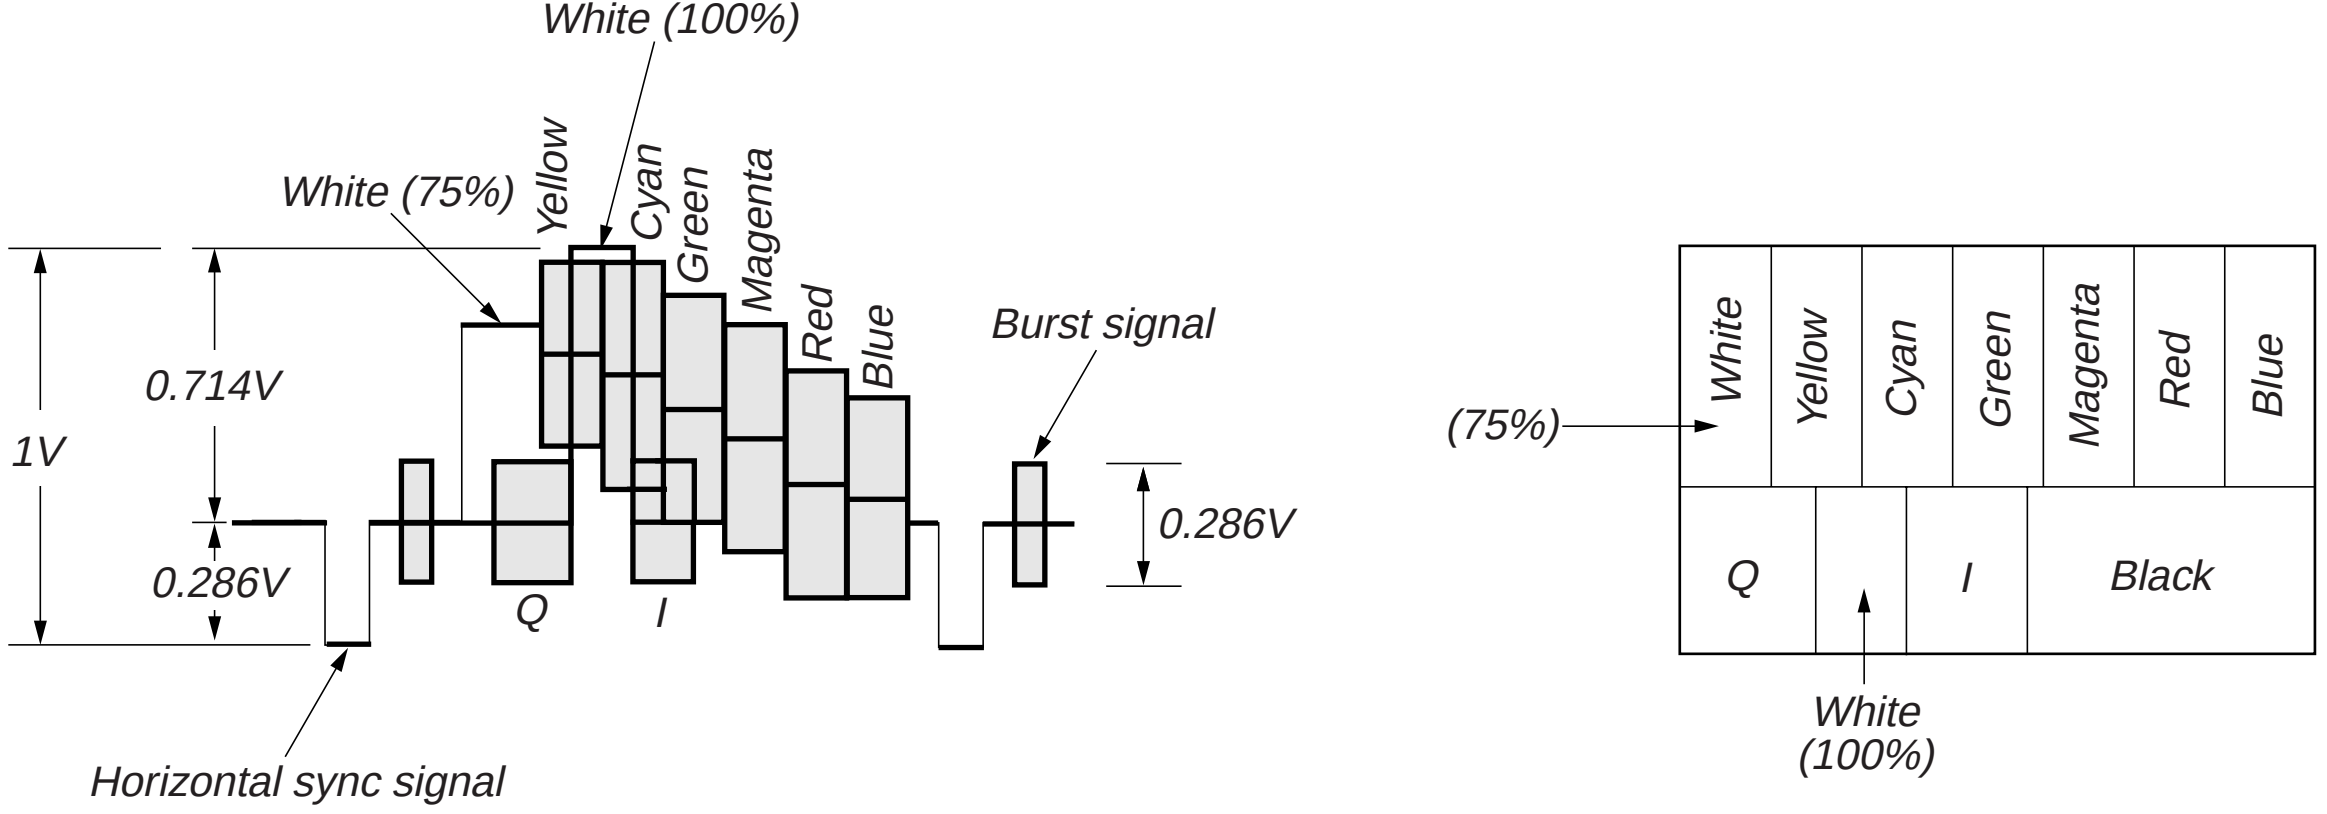
White (100%)
White (75%)
Yellow
Cyan
Green
Magenta
Red
Blue
Burst signal
0.714V
1V
0.286V
Q
I
0.286V
Horizontal sync signal
White
Yellow
Cyan
Green
Magenta
Red
Blue
(75%)
Q
I
Black
White
(100%)

*Color bar signal waveform*

*Color bar pattern*

***For PAL model***

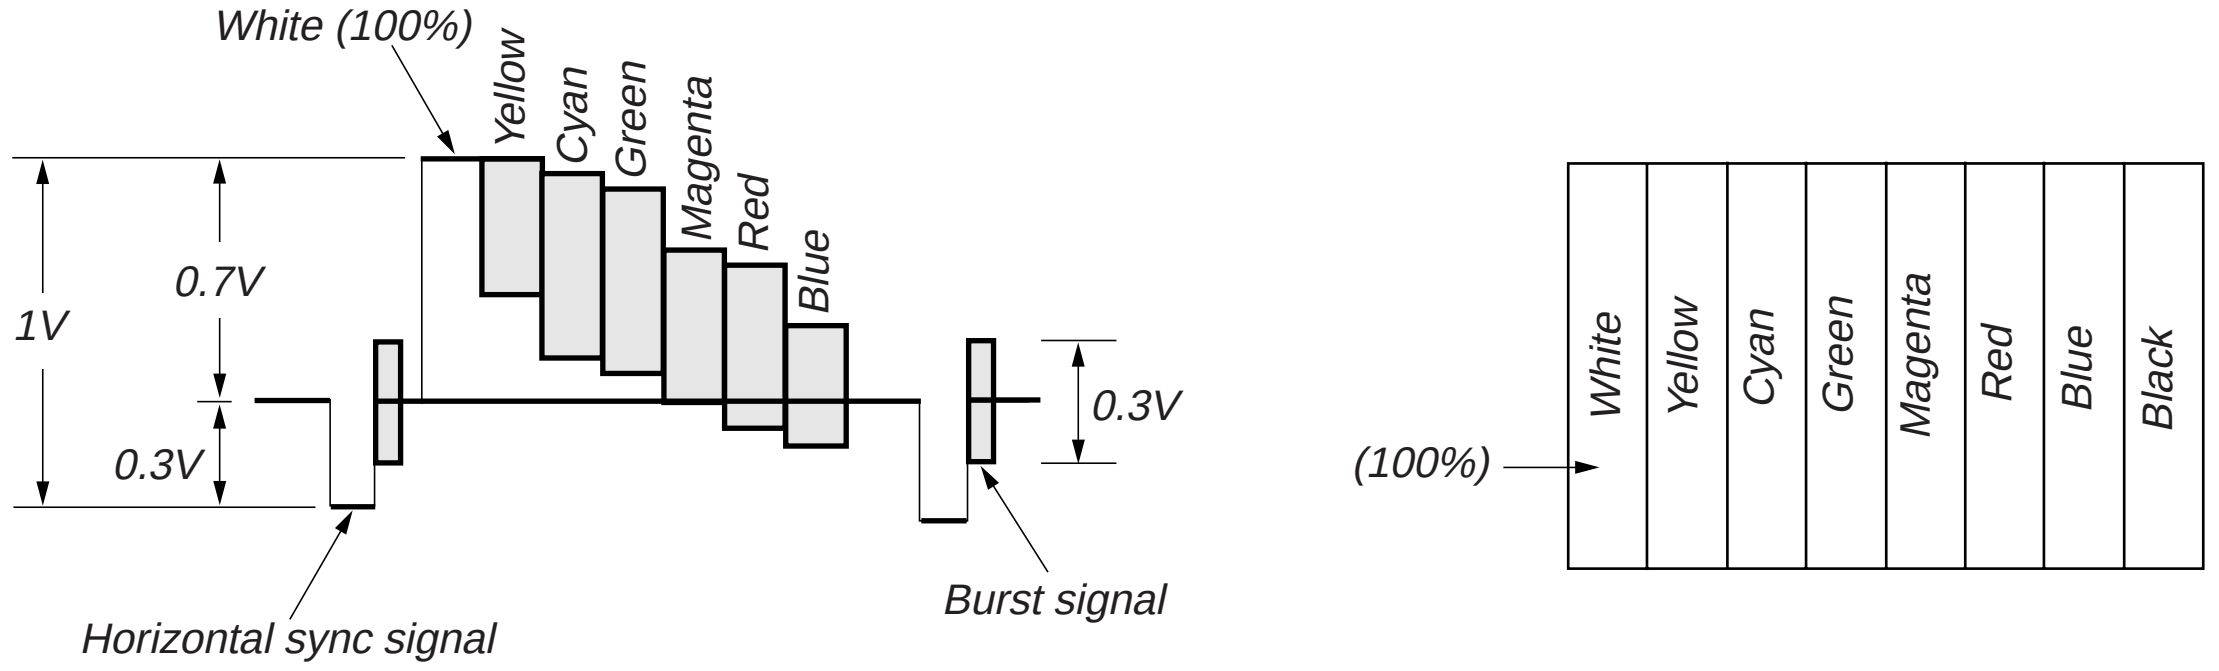
White (100%)
Yellow
Cyan
Green
Magenta
Red
Blue
1V
0.7V
0.3V
0.3V
Horizontal sync signal
Burst signal
White
Yellow
Cyan
Green
Magenta
Red
Blue
Black
(100%)

*Color bar signal waveform*

*Color bar pattern*

*Fig. 5-3-3. Color bar signal of alignment tapes*

### 3-1-6. Output Level and Impedance

Video output

Stereo minijack,

1Vp-p, 75Ω, unbalanced, sync negative

S video output

4-pin mini DIN

Luminance signal:

1Vp-p, 75Ω, unbalanced, sync negative

Chrominance signal:

0.286Vp-p, 75Ω, unbalanced (NTSC)

0.300Vp-p, 75Ω, unbalanced (PAL)

Audio output

Stereo minijack:

–7.5dBs, (at load impedance 47kΩ), impedance less than 2.2kΩ

### 3-1-7. Recording Mode (Standard 8/Hi8) switching

The record mode (Standard 8/Hi8) of this unit switches as shown in the following table. The playback mode (Standard 8/Hi8) switches automatically according to the recording mode of the tape played back.

| Tape Used | Recording Mode |
|---|---|
| ME | Hi8 |
| Hi8 MP | |
| MP | Standard 8 |

## 3-2. SYSTEM CONTROL SYSTEM ADJUSTMENT

### 1. Initialization of D, E, F, 7 Page Data

If the D, E, F, 7 page data is erased due to some reason, perform "1-2. INITIALIZATION OF D, E, F, 7 PAGE DATA", of "5-1. CAMERA SECTION ADJUSTMENT"

## 3-3. SERVO SYSTEM ADJUSTMENT

### 1. CAP FG Offset Adjustment (VC-251 board)

Set the Cap FG signal duty cycle to 50% to establish an appropriate capstan servo. If deviated, the uneven rotation of capstan and noise can occur in the LP mode.

| | |
|---|---|
| Mode | Camera recording (SP mode) |
| Subject | Arbitrary |
| Measurement Point | CAP FG (Pin ⑧ of CN713 or Pin ⑧ of CPC connector of FP-262 flexible) |
| Measuring Instrument | Oscilloscope |
| Adjustment Page | F |
| Adjustment Address | 64 |
| Specified value | Duty = 50 ± 1 % |

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 6 | 01 | 81 | Set the data, and press PAUSE button. |
| 3 | 6 | 02 | | Check that the data changes to "01". |
| 4 | 6 | 01 | 00 | Set the data, and press PAUSE button. |
| 5 | | | | Check that Duty of CAP FG signal satisfies the specified value. If not, repeat steps 2 to 5. |
| 6 | 0 | 01 | 00 | Set the data. |

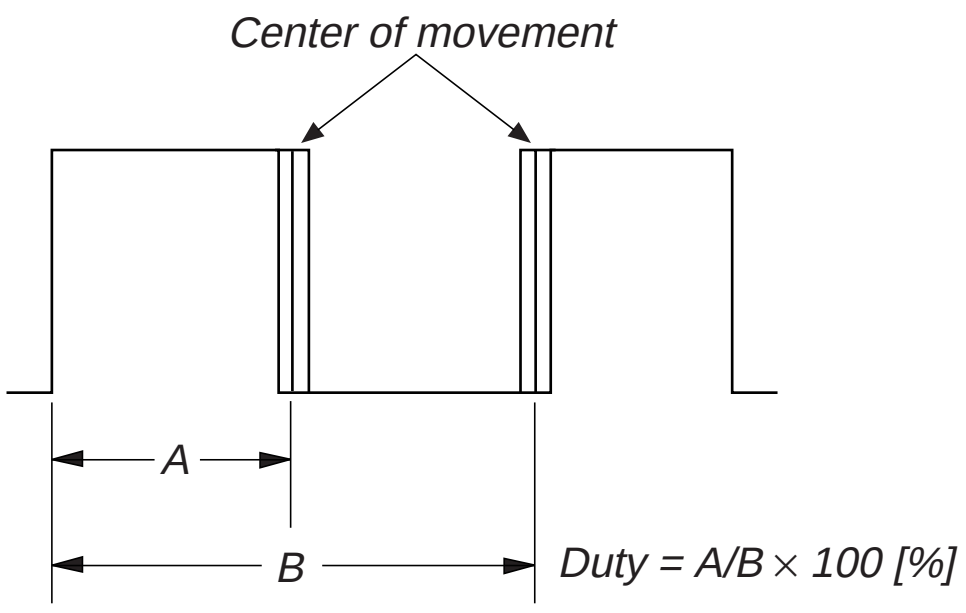

Fig. 5-3-4.

### 2. Switching Position Adjustment (VC-251 Board)

If deviated in this case causes switching noise or jitter on the played back screen.

| | |
|---|---|
| Mode | Playback |
| Signal | Alignment tape:<br>For tracking adjustment<br>(WR5-1NP (NTSC))<br>(WR5-1CP (PAL)) |
| Measurement Point | CH1: SWP (Pin ⑯ of CN713 or Pin ⑯ of CPC connector of FP-262 flexible)<br>CH2: PB RF (Pin ⑨ of CN713 or Pin ⑨ of CPC connector of FP-262 flexible) |
| Measuring Instrument | Oscilloscope |
| Adjustment Page | F |
| Adjustment Address | 62, 63 |
| Specified Value | t1= 0 ± 10μ sec |

**Note:** NTSC model: CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98
PAL model: CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E

**Adjusting Method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | F | 22 | C0 | Set the data, and press PAUSE button. |
| 3 | F | 62 | | Change the data and minimize "t1". (Coarse adjustment) |
| 4 | F | 62 | | Press PAUSE button |
| 5 | F | 63 | | Change the data and adjust so that the switching position (t1) becomes the specified value. (Fine adjustment) |
| 6 | F | 63 | | Press PAUSE button |
| 7 | F | 22 | 80 | Set the data, and press PAUSE button. |
| 8 | 0 | 01 | 00 | Set the data. |

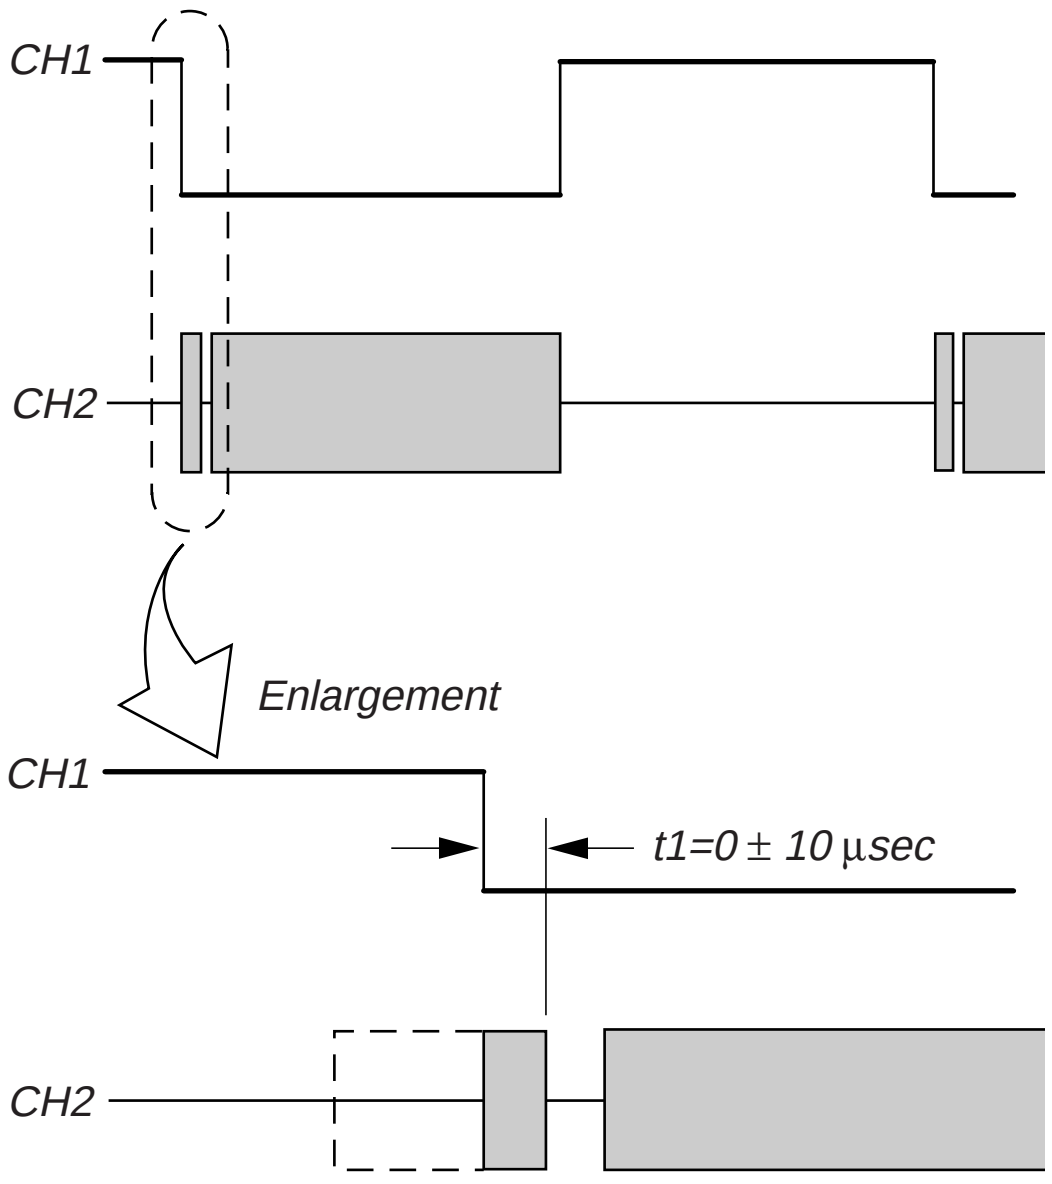

Fig. 5-3-5.

## 3-4. VIDEO SYSTEM ADJUSTMENTS

Video system adjustments must be performed in the following order.

**Note:** NTSC model: CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98
PAL model: CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E

### [Adjusting Order]

1. 28MHz origin oscillation adjustment
2. AFC fo adjustment
3. Filter fo adjustment
4. Y OUT level adjustment
5. C OUT level adjustment
6. REC Y current adjustment
7. REC C/REC AFM current adjustment

### 1. 28 MHz Origin Oscillation Adjustment (VC-251 board)

Set the frequency of the clock for synchronization.
If deviated, the synchronization will be disrupted and the color will become inconsistent.

| | |
|---|---|
| Mode | VTR stop |
| Signal | No signal |
| Measurement Point | R200 (Pin ⑲ of IC151) |
| Measuring Instrument | Frequency counter |
| Adjustment Page | F |
| Adjustment Address | 4D |
| Specified Value | f=3579545 ± 17Hz (NTSC)<br>f=4433594 ± 17Hz (PAL) |

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 6 | 61 | 30 | Set the data. |
| 3 | 2 | 01 | 41 | Set the data, and press PAUSE button. |
| 4 | F | 4D | | Change the data and set the frequency (f) to the specified value. |
| 5 | F | 4D | | Press PAUSE button. |
| 6 | 2 | 01 | 00 | Set the data, and press PAUSE button. |
| 7 | 6 | 61 | 10 | Set the data. |
| 8 | 0 | 01 | 00 | Set the data. |

**VC-251 BOARD**

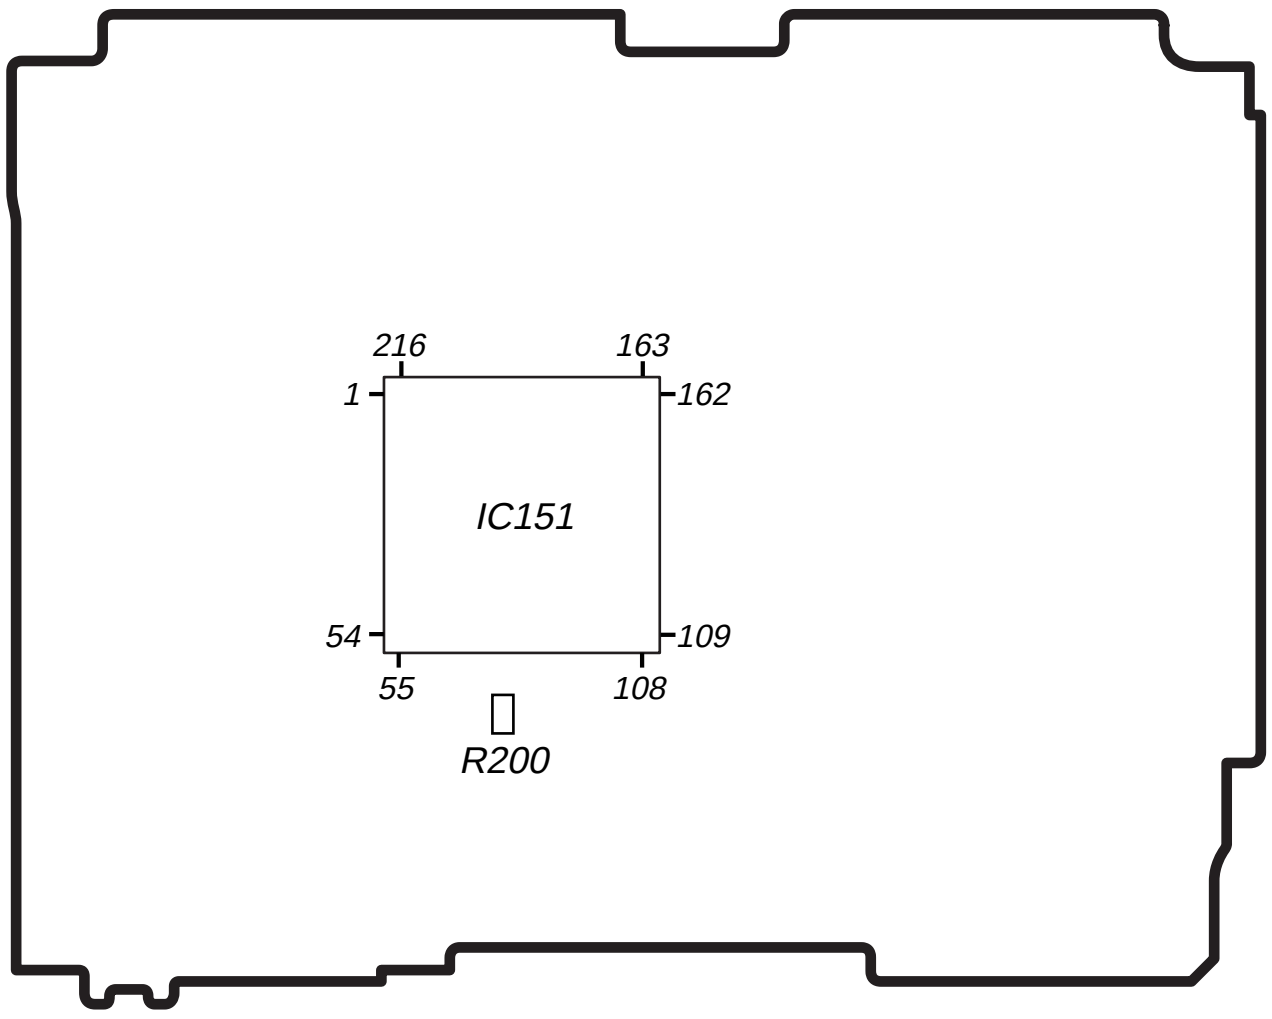

## 2. AFC fo Adjustment (VC-251 board)

Adjust the pull-in range of the A/D converted clock generator during playback.

| | |
|---|---|
| Mode | VTR stop |
| Signal | No signal |
| Adjustment Page | F |
| Adjustment Address | 65 |

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | F | 65 | 50 | Set the data, and press PAUSE button. |
| 3 | 2 | 01 | 4D | Set the data, and press PAUSE button. |
| 4 | | | | Wait for 0.5 sec. |
| 5 | 6 | 01 | C5 | Set the data, and press PAUSE button. |
| 6 | 6 | 02 | | Check that the data changes to “01”. (Note) |
| 7 | 2 | 01 | 00 | Set the data, and press PAUSE button. |
| 8 | 6 | 01 | 00 | Set the data, and press PAUSE button. |
| 9 | 0 | 01 | 00 | Set the data. |

**Note:** The adjustment data will be automatically input to page: F, address: 65.

## 3. Filter fo Adjustment (VC-251 board)

Adjust the fo frequency of the IC151 built-in filter.

| | |
|---|---|
| Mode | VTR stop |
| Signal | No signal |
| Measurement Point | IR VIDEO (Pin ⑭ of CN713 or Pin ⑭ of CPC connector of FP-262 flexible) |
| Measuring Instrument | Oscilloscope |
| Adjustment Page | F |
| Adjustment Address | 66 |
| Specified Value | Minimum residual chroma signal components (A= Bellow 35mV) |

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 2 | 01 | 4F | Set the data, and press PAUSE button. |
| 3 | 2 | 05 | 40 | Set the data,. |
| 4 | F | 66 | | Change the data and minimize the residual chroma signal components (A).<br>(The data should be “70” to “7F”.) |
| 5 | F | 66 | | Press PAUSE button. |
| 6 | 2 | 01 | 00 | Set the data, and press PAUSE button. |
| 7 | 2 | 05 | 00 | Set the data,. |
| 8 | 0 | 01 | 00 | Set the data. |

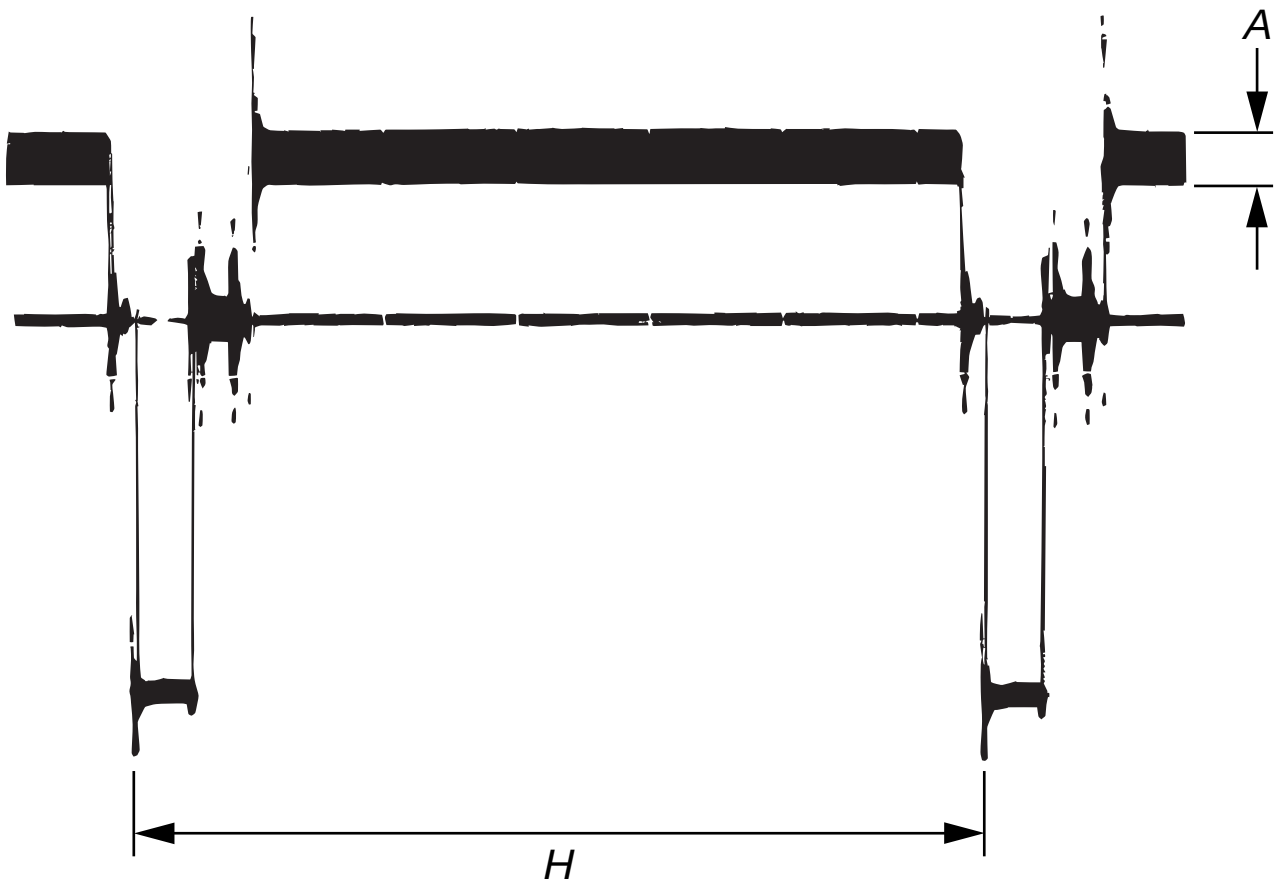

Fig. 5-3-6.

### 4. Y OUT Level Adjustment (VC-251 board)

Set the Y signal output level. (Adjust the D/A converter out put level of IC151.)

| | |
|---|---|
| Mode | VTR stop |
| Signal | No signal |
| Measurement Point | Y signal terminal of S VIDEO terminal (75Ω terminated ) |
| Measuring Instrument | Oscilloscope |
| Adjustment Page | F |
| Adjustment Address | 67 |
| Specified Value | A=286 ± 5mV (NTSC)<br>A=300 ± 5mV (PAL) |

**Note1:** Insert a plug into the S video terminal.

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 2 | 01 | 41 | Set the data, and press PAUSE button. |
| 3 | 6 | 61 | 30 | Set the data,. |
| 4 | F | 67 | | Change the data and set the SYNC level (A) to the specified value. |
| 5 | F | 67 | | Press PAUSE button. |
| 6 | 2 | 01 | 00 | Set the data, and press PAUSE button. |
| 7 | 6 | 61 | 10 | Set the data. |
| 8 | 0 | 01 | 00 | Set the data. |

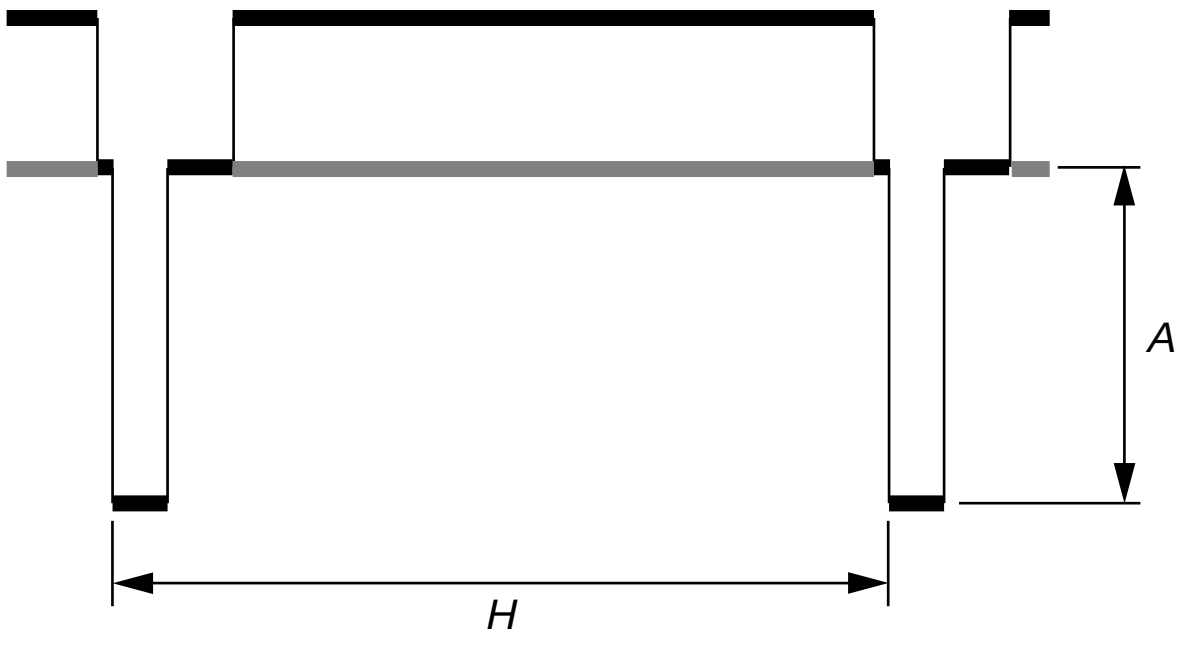

Fig. 5-3-7.

### 5. C OUT Level Adjustment (VC-251 board)

Set the chroma signal output level. (Adjust the D/A converter out put level of IC151.)

| | |
|---|---|
| Mode | VTR stop |
| Signal | No signal |
| Measurement Point | Chroma signal terminal of S VIDEO terminal (75Ω terminated ) |
| Measuring Instrument | Oscilloscope |
| Adjustment Page | F |
| Adjustment Address | 68 |
| Specified Value | A=286 ± 5mV (NTSC)<br>A=300 ± 5mV (PAL) |

**Note1:** Insert a plug into the S video terminal.

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 2 | 01 | 41 | Set the data, and press PAUSE button. |
| 3 | 6 | 61 | 30 | Set the data,. |
| 4 | F | 68 | | Change the data and set the burst level (A) to the specified value. |
| 5 | F | 68 | | Press PAUSE button. |
| 6 | 2 | 01 | 00 | Set the data, and press PAUSE button. |
| 7 | 6 | 61 | 10 | Set the data,. |
| 8 | 0 | 01 | 00 | Set the data. |

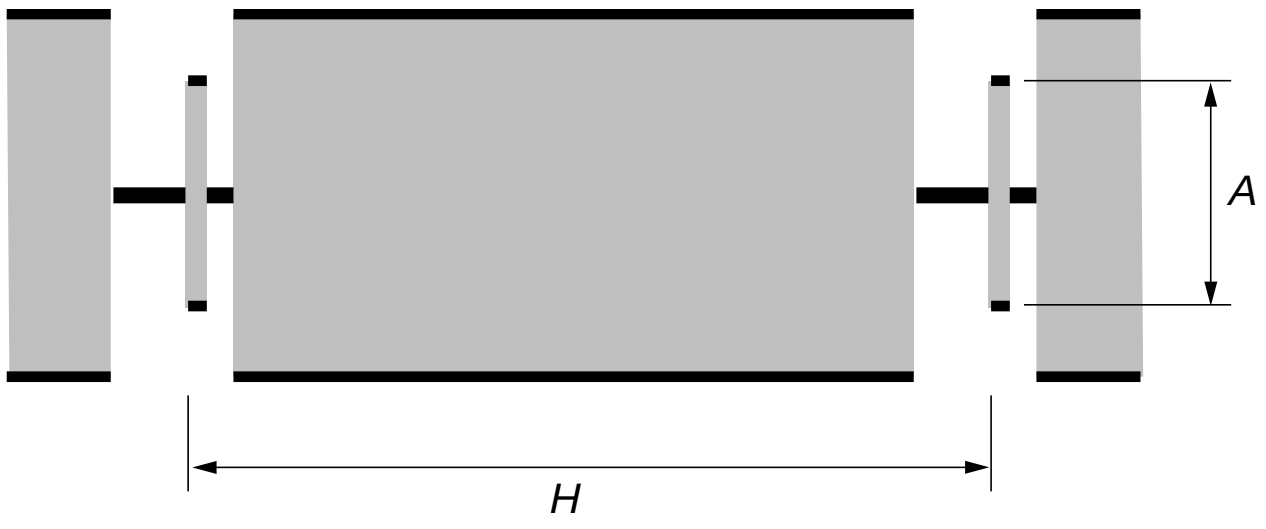

Fig. 5-3-8.

### 6. REC Y Current Adjustment (VC-251 board)

Adjust the Y FM signal recording current.

| | | |
|---|---|---|
| Mode | VTR recording (SP mode) | |
| Signal | No signal | |
| Measurement Point | REC RF (Pin ⑮ of CN713 or Pin ⑮ of CPC connector of FP-262 flexible) | |
| Measuring Instrument | Oscilloscope<br>(20 MHz BW LIMIT: OFF) | |
| Adjustment Page | F | 7 |
| Adjustment Address | 6A, 6B | F9 |
| Specified Value | A=235 ± 5mV (NTSC)<br>A=280 ± 5mV (PAL) | |

**Note1:** Don’t disconnect the DC power supply of the camcorder during the following adjustments.
When the following symptom occurs, reset the data of D page to the values written down.
1) The power is shut off so that unit cannot operate.

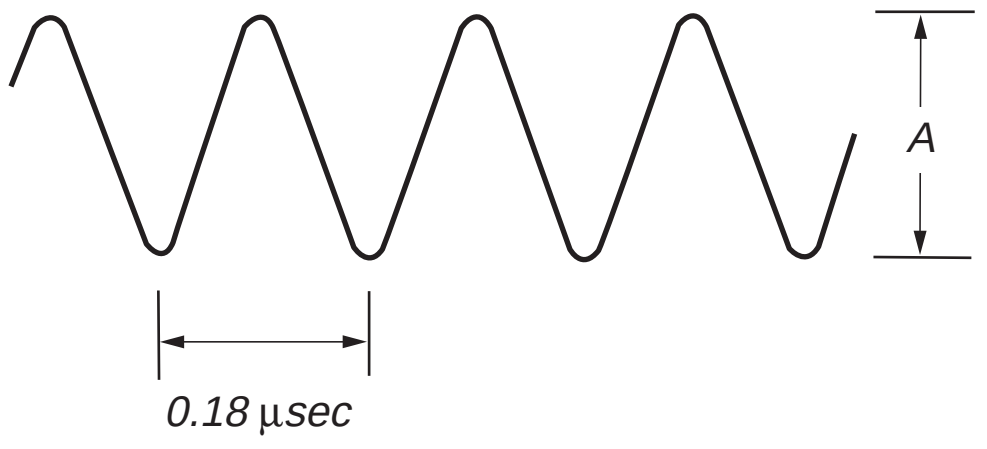

Fig. 5-3-9.

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | | | | Set to the stop mode. |
| 2 | 0 | 01 | 01 | Set the data. |
| 3 | D | 14 | | Write down the data. |
| 4 | D | 14 | | Set the following data, and press PAUSE button.<br>06 (NTSC), 26 (PAL) |
| 5 | D | 15 | | Write down the data. |
| 6 | D | 15 | | Set the following data, and press PAUSE button.<br>6D (NTSC), 6F (PAL) |
| 7 | | | | Set to VTR recording mode. (Note2) |
| 8 | E | FB | | Write down the data. |
| 9 | E | FB | 06 | Set the data, and press PAUSE button. |
| 10 | F | 71 | | Write down the data. |
| 11 | F | 71 | 00 | Set the data, and press PAUSE button. |
| 12 | 2 | 01 | 41 | Set the data, and press PAUSE button. |
| 13 | 6 | 63 | 01 | Set the data. |
| 14 | F | 6B | | Change the data and set the Y signal level (A) to the specified value, and press PAUSE button. |
| 15 | F | 6B | | Read the data, and this data is named $D_{6B}$. |
| 16 | F | 6A | $D_{6B}$ | Set the data, and press PAUSE button. |
| 17 | | | | Convert $D_{6B}$ to decimal notation, and obtain $D_{6B}$’. (Note3) |
| 18 | | | | Calculate $D_{F9}$’ using following equations (Decimal calculation)<br>When $D_{6B}' \leqq 243$<br>$D_{F9}' = D_{6B}' + 12$<br>When $D_{6B}' > 243$<br>$D_{F9}' = 255$ |
| 19 | | | | Convert $D_{F9}$’ to a hexadecimal number, and obtain $D_{F9}$. (Note3) |
| 20 | 7 | F9 | $D_{F9}$ | Set the data, and press PAUSE button. |
| 21 | 6 | 63 | 00 | Set the data. |
| 22 | 2 | 01 | 00 | Set the data, and press PAUSE button. |
| 23 | F | 71 | | Set the data written down at step 10, and press PAUSE button. |
| 24 | E | FB | | Set the data written down at step 8, and press PAUSE button. |
| 25 | D | 14 | | Set the data written down at step 3, and press PAUSE button. |
| 26 | D | 15 | | Set the data written down at step 5, and press PAUSE button. |
| 27 | 0 | 01 | 00 | Set the data. |

**Note2:** Use the REC buttons of the adjustment remote commander (with the HOLD switch set in the OFF position).

**Note3:** Refer to “Table 5-4-1. Hexadecimal-decimal Conversion Table”.

## 7. REC C/AFM Current Adjustment

### 7-1. Preparations

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | D | 14 | | Write down the data. |
| 3 | D | 14 | | Set the following data, and press PAUSE button.<br>06 (NTSC), 26 (PAL) |
| 4 | D | 15 | | Write down the data. |
| 5 | D | 15 | | Set the following data, and press PAUSE button.<br>6D (NTSC), 6F (PAL) |

**Note:** Don’t disconnect the DC power supply of the camcorder during the following adjustments.
When the following symptom occurs, reset the data of D page to the values written down.
1) The power is shut off so that unit cannot operate.

### 7-2. REC C Current Check (VC-251 board)

Check the recording current level of the REC Chroma signal. If it is too low, chroma signal noise in played back picture will be increased. If too high, Y signal noises will increase and white modulation noises will be produced.

| | |
|---|---|
| Mode | VTR recording (SP mode) |
| Signal | No signal |
| Measurement Point | REC RF (Pin ⑮ of CN713 or Pin ⑮ of CPC connector of FP-262 flexible) |
| Measuring Instrument | Oscilloscope<br>(20 MHz BW LIMIT: OFF) |
| Specified Value | A=50.8 ± 3.0mV (NTSC)<br>A=54.0 ± 3.0mV (PAL) |

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | | | | Insert a Hi8 ME tape, and set to VTR recording mode. (Note) |
| 2 | 0 | 01 | 01 | Set the data. |
| 3 | 2 | 01 | 41 | Set the data, and press PAUSE button. |
| 4 | 6 | 61 | 30 | Set the data. |
| 5 | E | FB | | Write down the data. |
| 6 | E | FB | 05 | Set the data, and press PAUSE button. |
| 7 | F | 71 | | Write down the data. |
| 8 | F | 71 | 00 | Set the data, and press PAUSE button. |
| 9 | | | | Check that the REC chroma signal level (A) satisfies the specified value, and write down the signal level. |
| 10 | F | 71 | | Set the data written down at step 7, and press PAUSE button. |
| 11 | E | FB | | Set the data written down at step 5, and press PAUSE button. |
| 12 | 6 | 61 | 10 | Set the data. |
| 13 | 2 | 01 | 00 | Set the data, and press PAUSE button. |
| 14 | 0 | 01 | 00 | Set the data. |
| 15 | | | | Perform “REC AFM Current Adjustment” and “Processing after completed adjustment”. |

**Note:** Use the REC buttons of the adjustment remote commander (with the HOLD switch set in the OFF position).

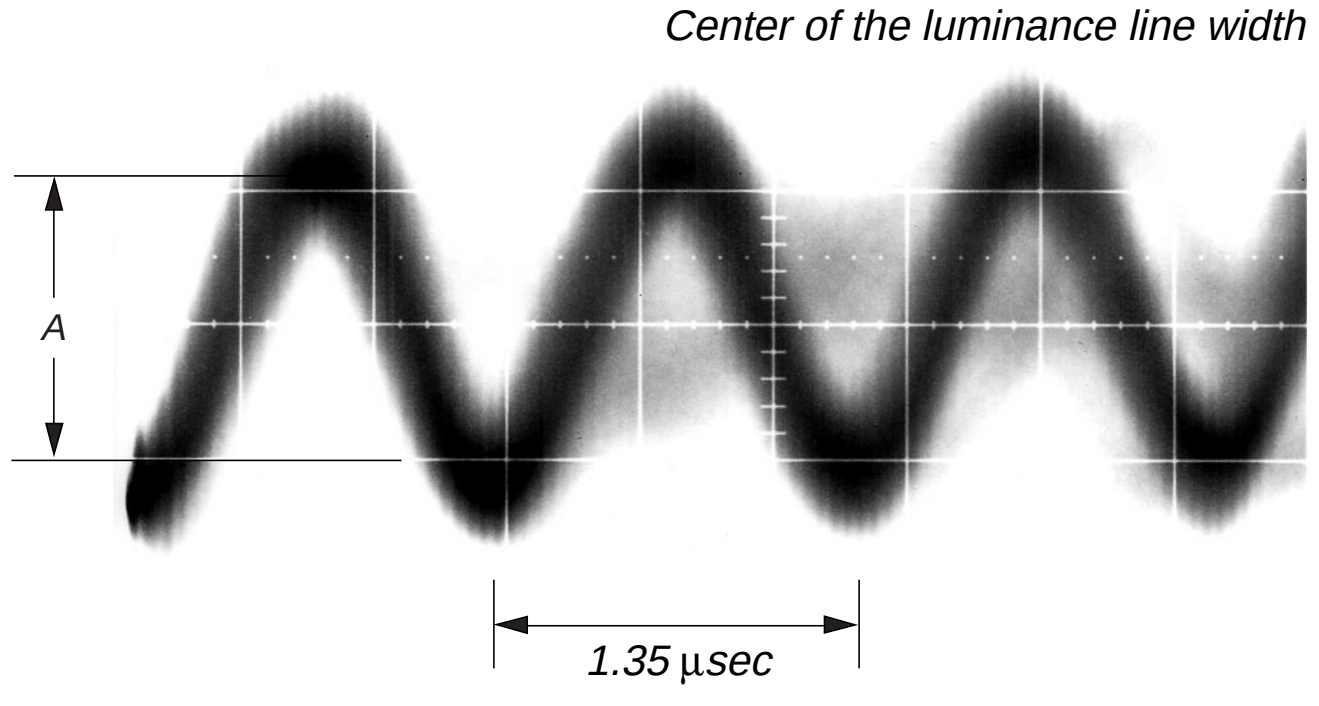

*Fig. 5-3-10.*

### 7-3. REC AFM Current Adjustment (VC-251 board)

Set the recording levels of the REC AFM signal. If the level is too low, the audio S/N will be deteriorated. If too high, color beets will be produced on the self-recording / playback image.

| | |
|---|---|
| Mode | VTR recording (SP mode) |
| Signal | No signal |
| Measurement Point | REC RF (Pin ⑮ of CN713 or Pin ⑮ of CPC connector of FP-262 flexible) |
| Measuring Instrument | Oscilloscope<br>(20 MHz BW LIMIT: OFF) |
| Adjustment Page | F |
| Adjustment Address | 71 |
| Specified Value | NTSC model:<br>A= (REC Chroma signal level) × 0.292 ± 0.9mV (Note)<br>PAL model:<br>A= (REC Chroma signal level) × 0.309 ± 0.9mV (Note) |

**Note1:** REC chroma signal level is written down at step 9 of “REC C Current Check”.

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | | | | Insert a Hi8 ME tape, and set to recording mode. (Note2) |
| 2 | 0 | 01 | 01 | Set the data. |
| 3 | 2 | 01 | 41 | Set the data, and press PAUSE button. |
| 4 | E | FB | | Write down the data. |
| 5 | E | FB | 07 | Set the data, and press PAUSE button. |
| 6 | F | 71 | | Change the data and set the REC AFM signal level (A) to the specified value. |
| 7 | F | 71 | | Press PAUSE button. |
| 8 | E | FB | | Set the data written down at step 4, and press PAUSE button. |
| 9 | 2 | 01 | 00 | Set the data, and press PAUSE button. |
| 10 | 0 | 01 | 00 | Set the data. |
| 11 | | | | Perform “Processing after completed adjustment”. |

**Note2:** Use the REC buttons of the adjustment remote commander (with the HOLD switch set in the OFF position).

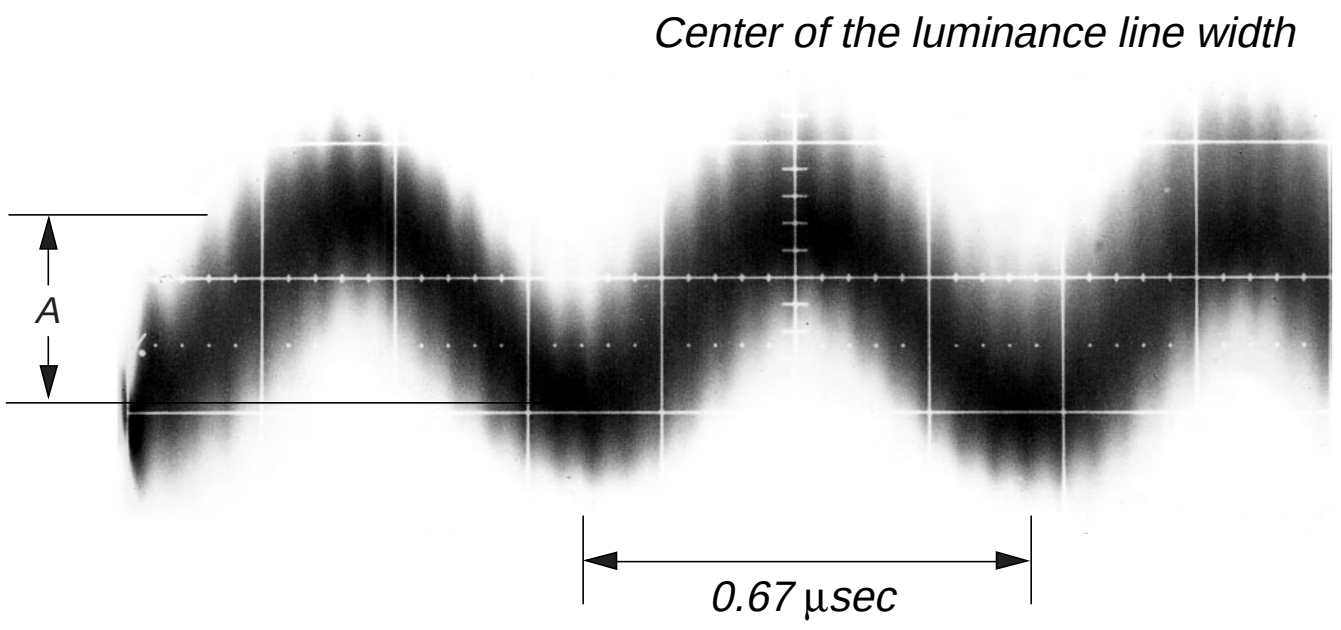

*Fig. 5-3-11.*

### 7-4. Processing after completed adjustment

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | D | 14 | | Set the data written down at step 2 of “7-1. Preparations”, and press PAUSE button. |
| 3 | D | 15 | | Set the data written down at step 4 of “7-1. Preparations”, and press PAUSE button. |
| 4 | 0 | 01 | 00 | Set the data. |

## 3-5. IR TRANSMITTER ADJUSTMENTS (CCD- TRV98)

Adjust using the IR receiver jig (J-6082-383-A).

**Note:** If the distance between the IR receiver jig and the camcorder is below 1m, cover the LASER LINK emitter with a ND filter. (For example, when the distance is 30cm to 50cm, cover the LASER LINK emitter with a ND filter 1.0.)

**Switch setting:**

LASER LINK ........................................ ON (Red LED is lit)

### 1. IR Video Carrier Frequency Adjustment (MI-041 board)

| | |
|---|---|
| Mode | VTR stop |
| Signal | Arbitrary |
| Measurement Point | Pin ⑤ of CN003 of IR receiver jig (RF)<br>(Or Pin ⑯ of IC3901 of MI-041 board) |
| Measuring Instrument | Frequency counter |
| Adjustment Page | F |
| Adjustment Address | 80 |
| Specified Value | f = 11.85 ± 0.05 MHz (*1)<br>f = 11.55 ± 0.05 MHz (*2) |

*1: IC3901 of MI-041 board is LA9511.
*2: IC3901 of MI-041 board is AN2920.

**Connection of Equipment:**

Connect the measuring device as shown in the following figure, and adjust.

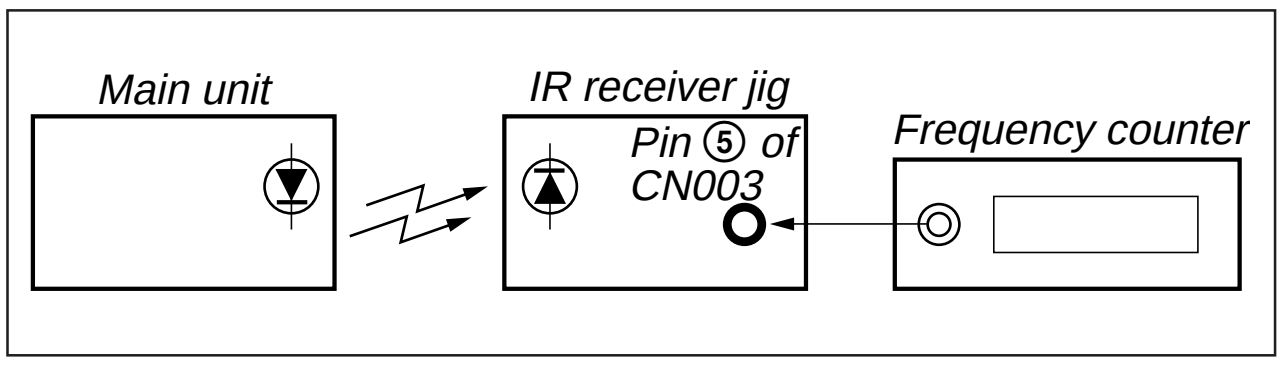

Fig. 5-3-12.

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 2 | 01 | 37 | Set the data, and press PAUSE button. |
| 3 | F | 80 | | Change the data, and set the video carrier frequency (f) to the specified value. |
| 4 | F | 80 | | Press PAUSE button. |
| 5 | 2 | 01 | 00 | Set the data, and press PAUSE button. |
| 6 | 0 | 01 | 00 | Set the data. |

### 2. IR Video Deviation Adjustment (MI-041 board)

| | |
|---|---|
| Mode | VTR stop |
| Signal | Arbitrary |
| Measurement Point | VIDEO OUT terminal of IR receiver jig (Terminated at 75Ω) |
| Measuring Instrument | Oscilloscope |
| Adjustment Page | F |
| Adjustment Address | 7E |
| Specified Value | A = 0.87 ± 0.05 V |

**Connection of Equipment:**

Connect the measuring device as shown in the following figure, and adjust.

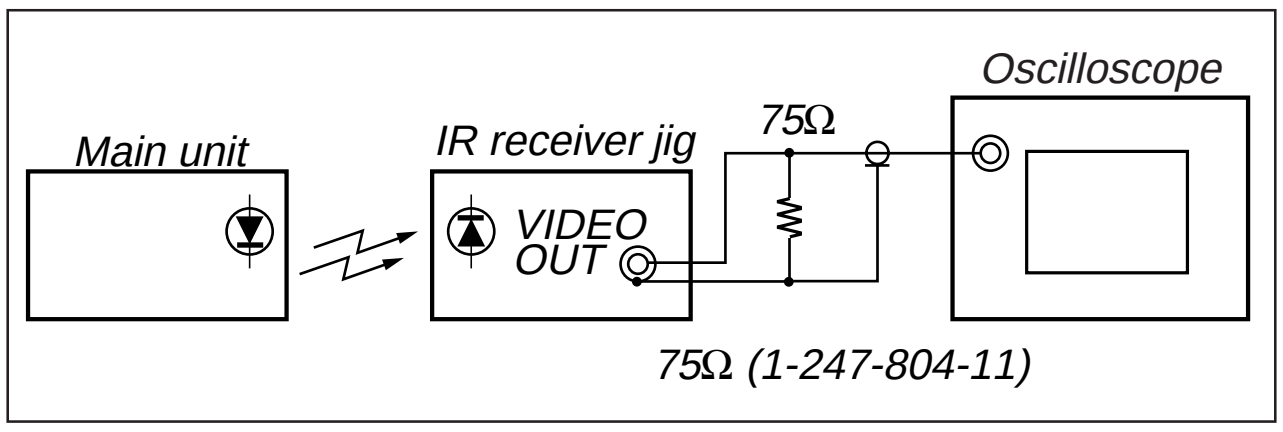

Fig. 5-3-13.

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 2 | 01 | 39 | Set the data, and press PAUSE button. |
| 3 | F | 7E | | Change the data, set the video signal amplitude (A) to the specified value. |
| 4 | F | 7E | | Press PAUSE button. |
| 5 | 2 | 01 | 00 | Set the data, and press PAUSE button. |
| 6 | 0 | 01 | 00 | Set the data. |

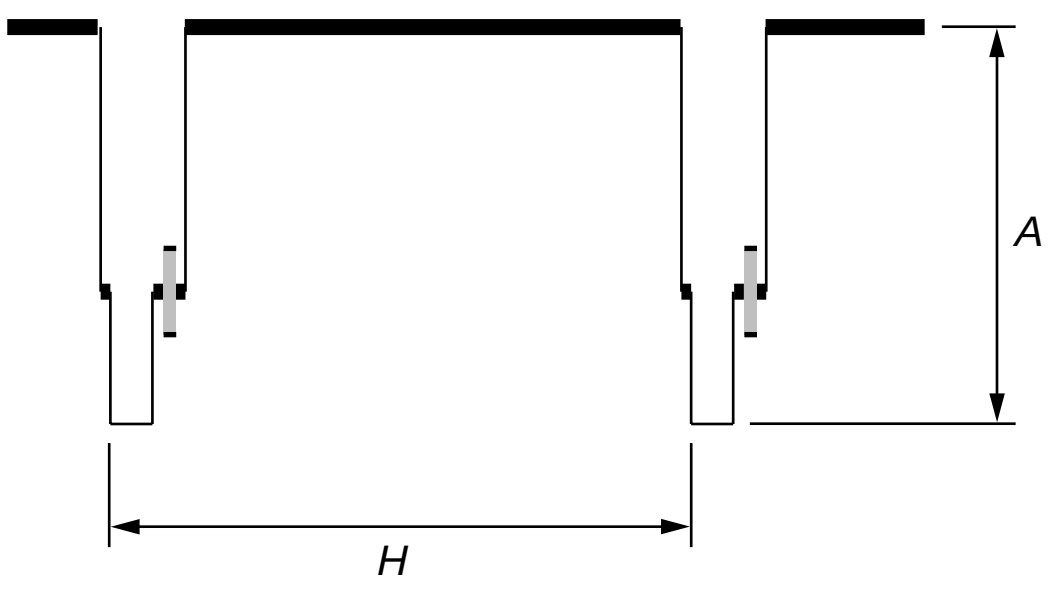

Fig. 5-3-14.

### 3. IR Audio Deviation Adjustment (MI-041 board)

| | |
|---|---|
| Mode | Playback |
| Signal | Alignment tape:<br>For checking operation<br>(WR5-5NSP(NTSC)) |
| Measurement Point | AUDIO L terminal and AUDIO R terminal of IR receiver jig<br>(Terminated at 47kΩ) |
| Measuring Instrument | Audio level meter |
| Adjustment Page | F |
| Adjustment Address | 7F |
| Specified Value | Signal level: –7.5 ± 2.0 dBs |

**Note:** This adjustment should be carried out upon completion of the audio system adjustments.

**Connection of Equipment:**
Connect the measuring device as shown in the following figure, and adjust.

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | | | | Connect the audio level meter to the AUDIO L terminal of the IR receiver jig. |
| 3 | F | 7F | | Change the data and set the 400Hz audio signal level to the specified value. |
| 4 | F | 7F | | Press PAUSE button. |
| 5 | | | | Connect the audio level meter to the AUDIO R terminal of the IR receiver jig. |
| 6 | F | 7F | | Check that the 400Hz audio signal level is within the specified value. If outside, repeat from step 2. |
| 7 | 0 | 01 | 00 | Set the data. |

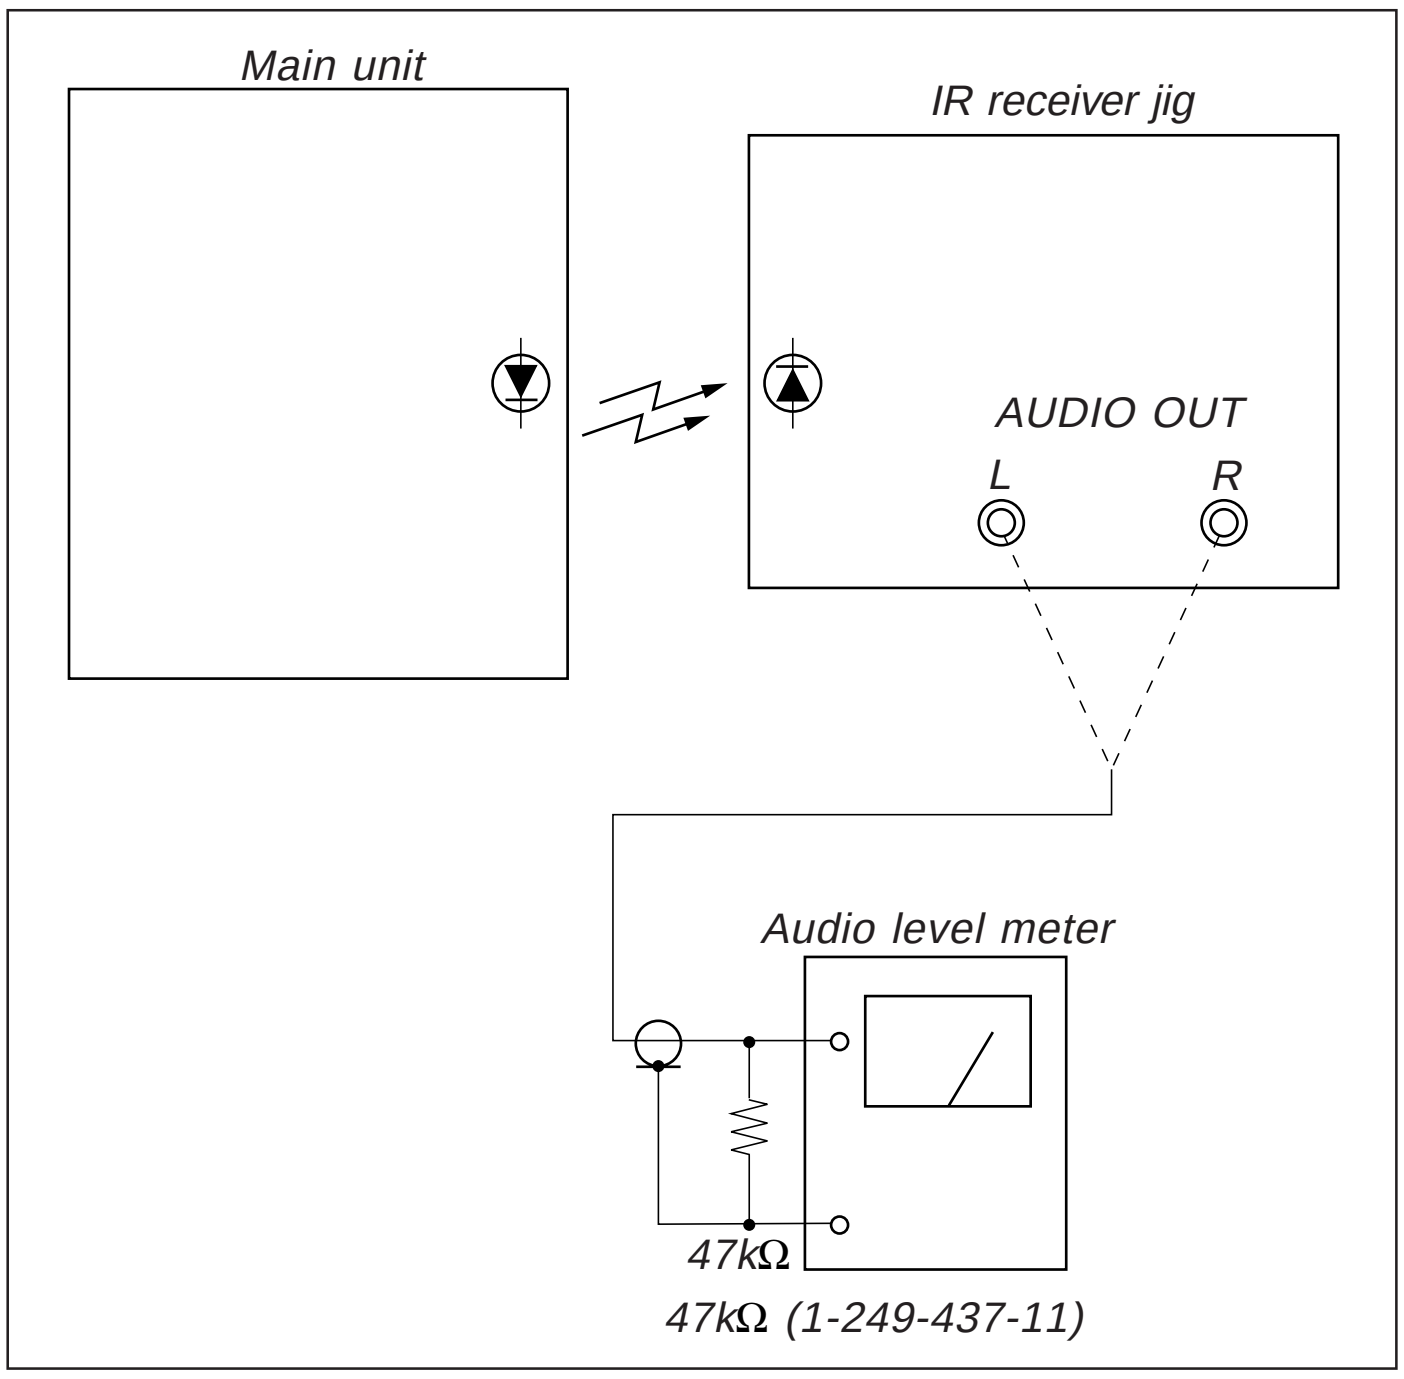

Fig. 5-3-15.

## 3-6. AUDIO SYSTEM ADJUSTMENTS

### [Connecting the measuring instruments for the audio]

Connect the audio system measuring instruments in addition to the video system measuring instruments as shown in Fig. 5-3-16.

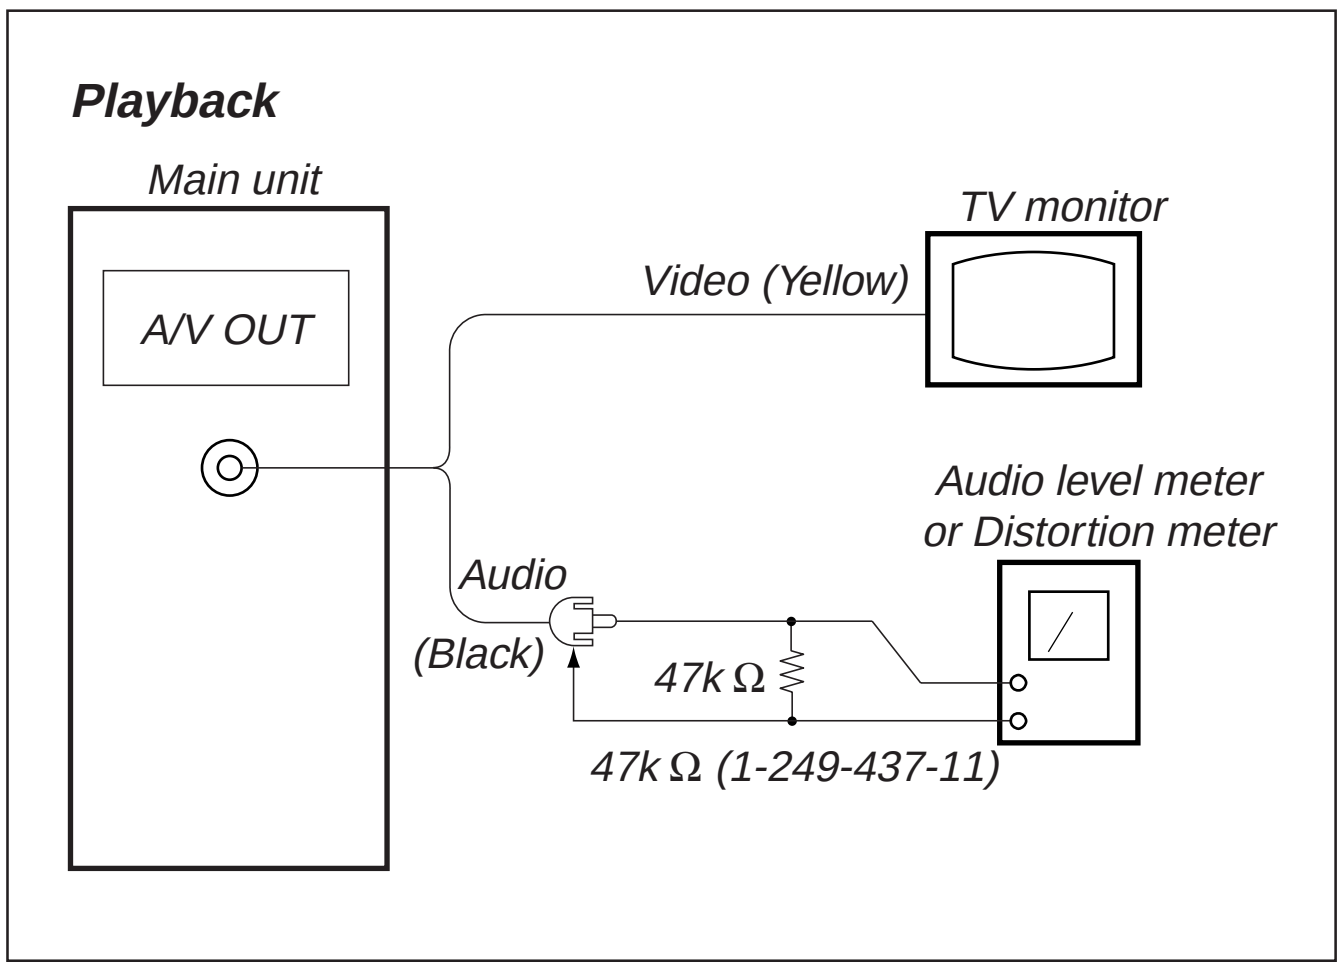

*Fig. 5-3-16.*

### 1. 1.5MHz Deviation Adjustment (VC-251 board)

Adjust to the optimum 1.5MHz audio FM signal deviation.
If the adjustment is not correct, its playback level will differ from that of other units.

| | |
|---|---|
| Mode | Playback |
| Signal | Alignment tape:<br>For checking operation<br>(WR5-5NSP (NTSC))<br>(WR5-5CSP (PAL)) |
| Measurement Point | Audio terminal of A/V OUT jack |
| Measuring Instrument | Audio level meter |
| Adjustment Page | F |
| Adjustment Address | 7B |
| Specified Value | –7.5 ± 2.0 dBs |

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | F | 7B | | Change the data and set the 400Hz audio signal level to the specified value. |
| 3 | F | 7B | | Press PAUSE button. |
| 4 | 0 | 01 | 00 | Set the data. |

### 2. BPF fo Adjustment (VC-251 board)

Sets the BPF passing frequency of IC760 so that the AFM signal can separate from the playback RF signal properly. If deviated. the mono/stereo mode will be differentiated incorrectly, and noises and distortions will increase during high volume playback.

| | |
|---|---|
| Mode | Playback |
| Signal | Alignment tape:<br>For BPF adjustment<br>(WR5-11NS (NTSC)<br>(WR5-11CS (PAL)) |
| Measurement Point | Audio terminal of A/V OUT jack |
| Measuring Instrument | Distortion meter |
| Adjustment Page | F |
| Adjustment Address | 7D |
| Specified Value | The distortion rate should be minimum. |

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | F | 7D | | Change the data and minimize the distortion rate. |
| 3 | F | 7D | | Press PAUSE button. |
| 4 | 0 | 01 | 00 | Set the data. |

## 5-4. SERVICE MODE

### 4-1. ADJUSTMENT REMOTE COMMANDER

The adjustment remote commander is used for changing the calculation coefficient in signal processing, EVR data, etc. The adjustment remote commander performs bi-directional communication with the unit using the remote commander signal line (LANC). The resultant data of this bi-directional communication is written in the non-volatile memory.

### 1. Using the Adjustment Remote Commander

1) Connect the adjustment remote commander to CN713 of VC-251 board or CPC connector of FP-262 flexible via CPC jig for BX/BK (J-6082-521-A). To operate the adjustment remote commander, connect the AC power adapter (8.4Vdc) to the DC IN jack of CPC jig for BX/BK, or connect the L series Info-LITHIUM battery to the battery terminal of CPC jig for BX/BK.
2) Set the HOLD switch of the adjustment remote commander to "HOLD" (SERVICE position). If it has been properly connected, the LCD on the adjustment remote commander will display as shown in Fig. 5-4-1.

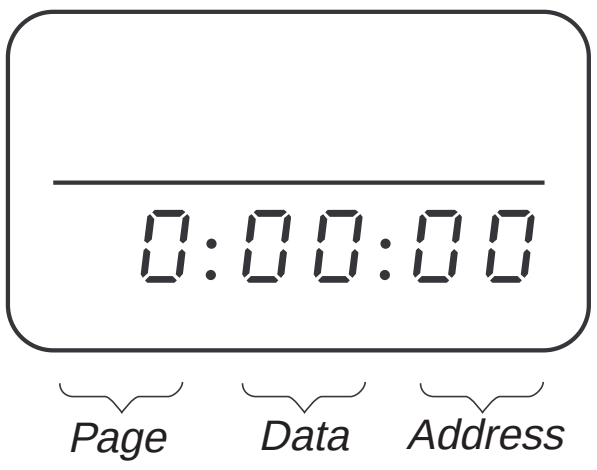

Fig. 5-4-1.

3) Operate the adjustment remote commander as follows.
   - Changing the page
     The page increases when the EDIT SEARCH+ button is pressed, and decreases when the EDIT SEARCH– button is pressed. There are altogether 16 pages, from 0 to F.

| **Hexadecimal notation** | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D | E | F |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| **LCD Display** | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | b | c | d | E | F |
| **Decimal notation conversion value** | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |

   - Changing the address
     The address increases when the FF (▶▶) button is pressed, and decreases when the REW (◀◀) button is pressed. There are altogether 256 addresses, from 00 to FF.
   - Changing the data (Data setting)
     The data increases when the PLAY (▶) button is pressed, and decreases when the STOP (■) button is pressed. There are altogether 256 data, from 00 to FF.
   - Writing the adjustment data
     The PAUSE button must be pressed to write the adjustment data (D, E, F, 7 page) in the nonvolatile memory. (The new adjusting data will not be recorded in the nonvolatile memory if this step is not performed.)
4) After completing all adjustments, turn off the main power supply (8.4 V) once.

### 2. Precautions Upon Using the Adjustment Remote Commander

Mishandling of the adjustment remote commander may erase the correct adjustment data at times. To prevent this, it is recommended that all adjustment data be noted down before beginning adjustments and new adjustment data after each adjustment.

## 4-2. DATA PROCESS

The calculation of the DDS display and the adjustment remote commander display data (hexadecimal notation) are required for obtaining the adjustment data of some adjustment items. In this case, after converting the hexadecimal notation to decimal notation, calculate and convert the result to hexadecimal notation, and use it as the adjustment data. Indicates the hexadecimal-decimal conversion table.

**Hexadecimal-decimal Conversion Table**

| Lower digit of hexadecimal / Upper digit of hexadecimal | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A (A) | B (b) | C (c) | ② D (d) | E (E) | F (F) |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
| 1 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 |
| 2 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 |
| 3 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 | 61 | 62 | 63 |
| 4 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 77 | 76 | 77 | 78 | 79 |
| 5 | 80 | 81 | 82 | 83 | 84 | 85 | 86 | 87 | 88 | 89 | 90 | 91 | 92 | 93 | 94 | 95 |
| 6 | 96 | 97 | 98 | 99 | 100 | 101 | 102 | 103 | 104 | 105 | 106 | 107 | 108 | 109 | 110 | 111 |
| 7 | 112 | 113 | 114 | 115 | 116 | 117 | 118 | 119 | 120 | 121 | 122 | 123 | 124 | 125 | 126 | 127 |
| 8 | 128 | 129 | 130 | 131 | 132 | 133 | 134 | 135 | 136 | 137 | 138 | 139 | 140 | 141 | 142 | 143 |
| 9 | 144 | 145 | 146 | 147 | 148 | 149 | 150 | 151 | 152 | 153 | 154 | 155 | 156 | 157 | 158 | 159 |
| A (A) | 160 | 161 | 162 | 163 | 164 | 165 | 166 | 167 | 168 | 169 | 170 | 171 | 172 | 173 | 174 | 175 |
| ① B (b) | 176 | 177 | 178 | 179 | 180 | 181 | 182 | 183 | 184 | 185 | 186 | 187 | 188 | 189 | 190 | 191 |
| C (c) | 192 | 193 | 194 | 195 | 196 | 197 | 198 | 199 | 200 | 201 | 202 | 203 | 204 | 205 | 206 | 207 |
| D (d) | 208 | 209 | 210 | 211 | 212 | 213 | 214 | 215 | 216 | 217 | 218 | 219 | 220 | 221 | 222 | 223 |
| E (E) | 224 | 225 | 226 | 227 | 228 | 229 | 230 | 231 | 232 | 233 | 234 | 235 | 236 | 237 | 238 | 239 |
| F (F) | 240 | 241 | 242 | 243 | 244 | 245 | 246 | 247 | 248 | 249 | 250 | 251 | 252 | 253 | 254 | 255 |

**Note:** The characters shown in the parenthesis ( ) shown the display on the adjustment remote commander.

**(Example)** If the DDS display or the adjustment remote commander shows BD (bd);
Because the upper digit of the adjustment number is B (b), and the lower digit is D (d), the meeting point "189" of ① and ② in the above table is the corresponding decimal number.

*Table. 5-4-1.*

## 4-3. SERVICE MODE

**Note:** After the completion of the all adjustments, cancel the service mode by either of the following ways.

1) Unplug the main power supply and remove the lithium battery. (In this case, date and time and menu setting have been set by users are canceled. Perform resetting.)
2) After data on page: D and F is restored, return data of the address: 01 on page: 0 to 00. And when data on page: 2 is changed, return the data to the original condition.

### 1. Test Mode Setting

Set/release each test mode. Set page: 0, address: 01, data: 01 before setting the data of page D and F.

| | |
|---|---|
| Page F | Address 22 |

| Data | Function |
|---|---|
| 80 | Normal |
| 81 | Test mode<br>Various emergency prohibitions and releases Drum emergency, capstan emergency, loading motor emergency, reel emergency, tape top and end, DEW detection |

| | |
|---|---|
| Page D | Address 10 |

| Data | Function |
|---|---|
| 00 | Normal |
| 01 | Camera power ON |
| 02 | VTR power ON |
| 03 | Camera + VTR power ON |

* For page D and F, the data set will be recorded in the nonvolatile memory by pressing the PAUSE button on the adjustment remote commander. Take note that, in this case, the test mode will not be released even if the main power has been turned off.

* Be sure to return the data of page: F, address: 22 to 80, and the data of page : D, address: 10 to 00 after completing adjustments/ repairs and press the PAUSE button of the adjustment remote commander. And set page: 0, address: 01, data: 00.

## 2. Emergency Memory Address

| Page F | Address 10 to 1B |
|---|---|

| Address | Contents |
|---|---|
| 10 | 1st EMG code |
| 12 | Upper: MSW code when the mechanism starts shifting the 1st time<br>Lower: MSW code when the 1st emergency occurs |
| 13 | Lower: Target MSW code of the 1st emergency occurs |
| 14 | 2nd EMG code |
| 16 | Upper: MSW code when the mechanism starts shifting the 2nd time<br>Lower: MSW code when the 2nd emergency occurs |
| 17 | Lower: Target MSW code of the 2nd emergency occurs |
| 18 | Last EMG code |
| 1A | Upper: MSW code when the mechanism starts shifting the last time<br>Lower: MSW code when the last emergency occurs |
| 1B | Lower: Target MSW code of the last emergency occurs |

When there are no emergency, data 00 will be written in the above addresses (10 to 1B). When the first emergency occurs, the data corresponding to the emergency will be written in the address (10 to 13) for this first emergency. In the same way, when the second emergency occurs, the data corresponding to the emergency will be written in the address (14 to 17) for this second emergency.
The data corresponding to the emergency occurring the last will be written in the address (18 to 1B) for this last emergency.
Therefore the data of addresses 18 to 1B are renewed each time an emergency occurs.

**Note 1:** Be sure to rewrite the data of addresses 10 to 1B to 00 after repairs/adjustments.
**Note 2:** When rewriting the data, be sure to press the PAUSE button of the remote commander after setting the data.

### 2-1. EMG code (Emergency code)

The codes shown in the following table which correspond to errors that occur are recorded in addresses 10, 14, and 18.

| Code | Type of Emergency |
|---|---|
| 00 | No error |
| 10 | Loading motor time-out during load |
| 11 | Loading motor time-out during unload |
| 20 | T reel emergency (reel slack) during unloading |
| 21 | S reel emergency (reel slack) during unloading |
| 22 | T reel emergency |
| 23 | S reel emergency |
| 30 | FG emergency at the start up of the capstan |
| 31 | FG emergency during the normal rotation of the capstan |
| 40 | FG emergency at the start up of the drum |
| 41 | PG emergency at the start up of the drum |
| 42 | FG emergency during the normal rotation of the drum |
| 43 | PG emergency during the normal rotation of the drum |
| 44 | Phase emergency during the normal rotation of the drum |

## 2-2. MSW codes

- The lower parts of the data of addresses 12, 16 and 1A represent the MSW codes (mode switch, mechanism position) when errors occurs.
- The upper parts of the data of addresses 12, 16 and 1A represent, when the mechanism position is to be moved, the MSW codes at the start of movement (when moving the loading motor).
- The lower parts of the data of addresses 13, 17 and 1B represent the MSW codes of the desired movement when the mechanism position is to be moved.

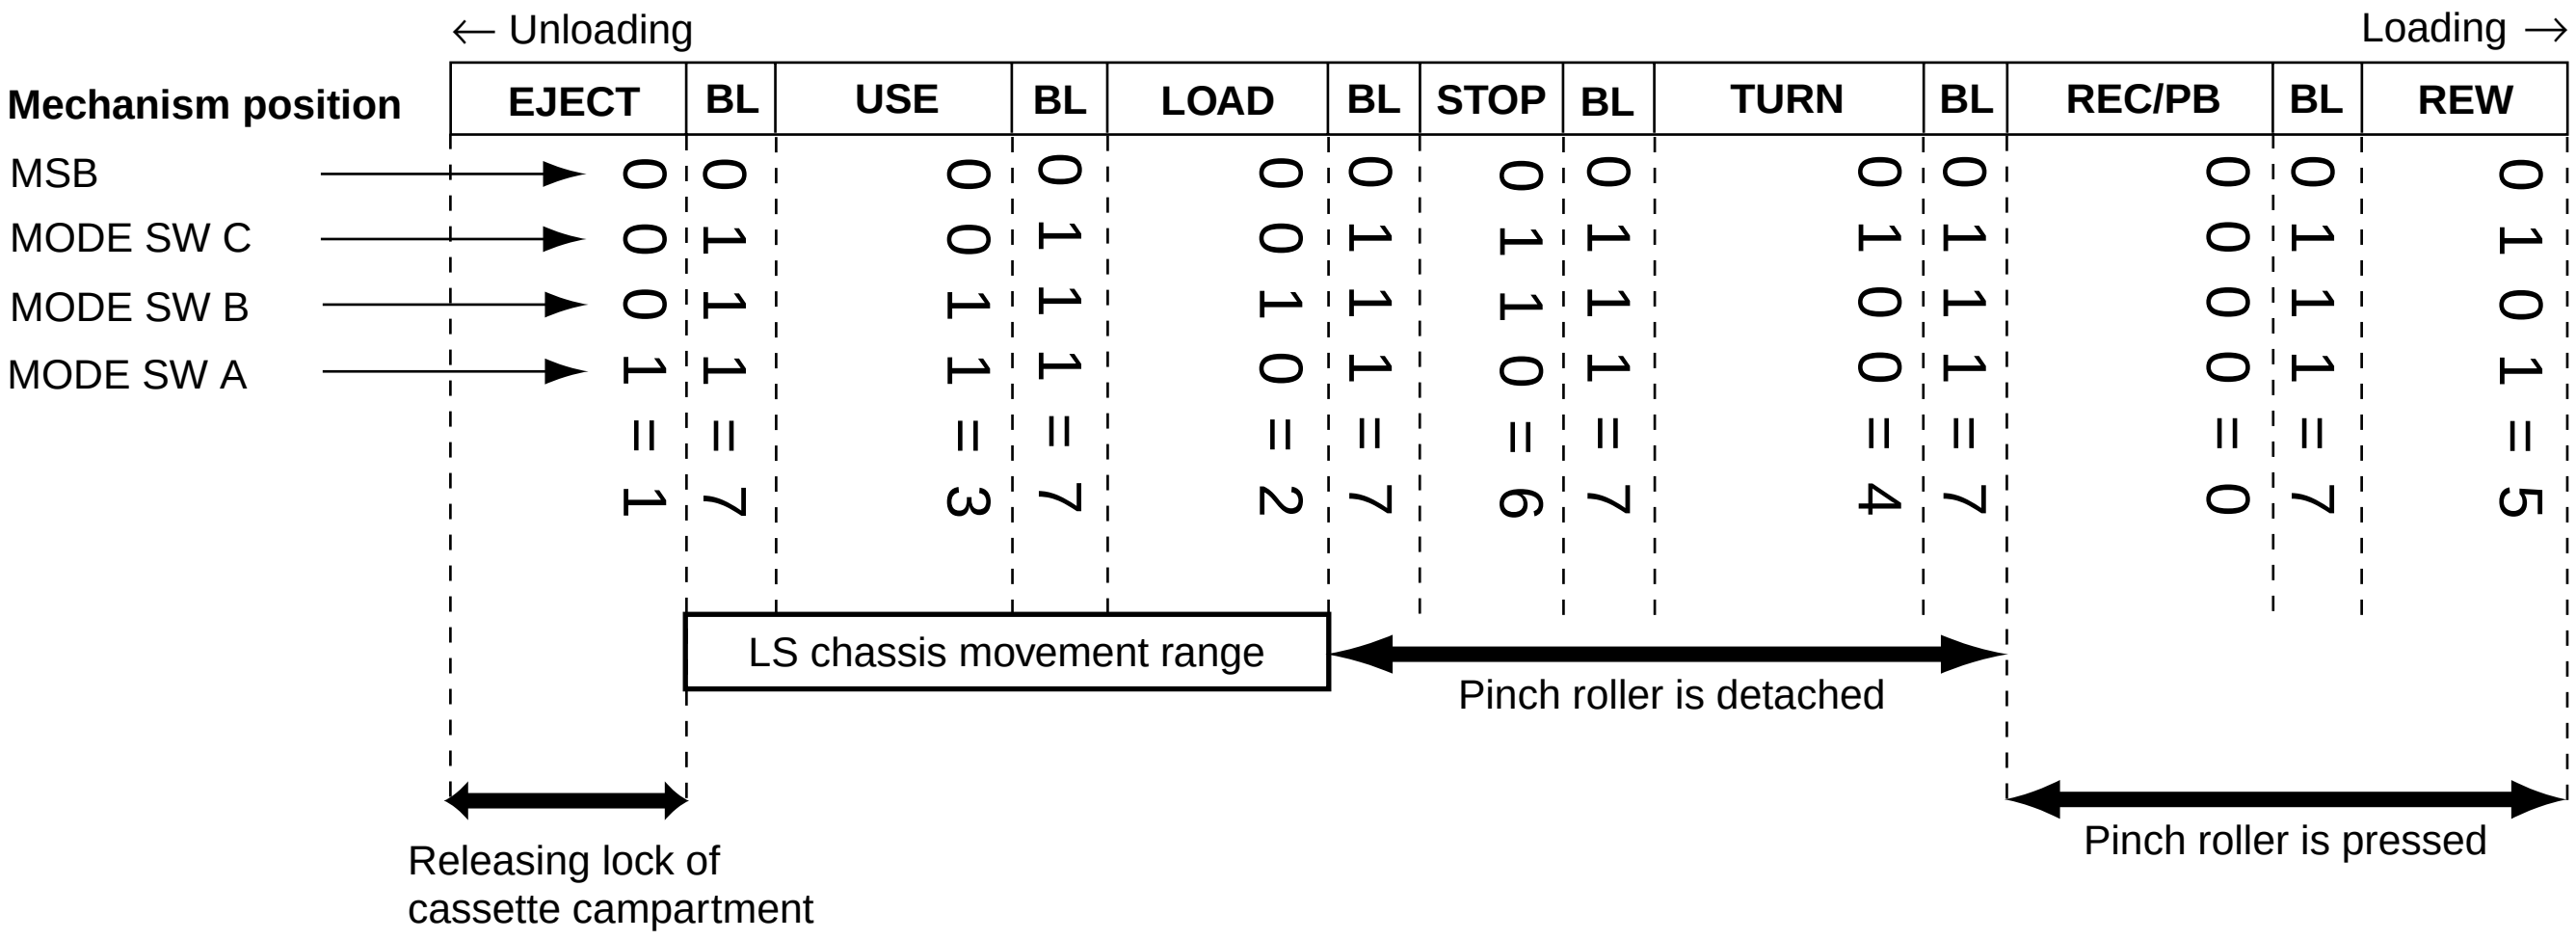
← Unloading
Loading →
Mechanism position
EJECT
BL
USE
BL
LOAD
BL
STOP
BL
TURN
BL
REC/PB
BL
REW
MSB
MODE SW C
MODE SW B
MODE SW A
0 0 0 1 = 1
0 1 1 1 = 7
0 0 1 1 = 3
0 1 1 1 = 7
0 0 1 0 = 2
0 1 1 1 = 7
0 1 1 0 = 6
0 1 1 1 = 7
0 1 0 0 = 4
0 1 1 1 = 7
0 0 0 0 = 0
0 1 1 1 = 7
0 1 0 1 = 5
LS chassis movement range
Pinch roller is detached
Releasing lock of cassette campartment
Pinch roller is pressed

| Mechanism Position | MSW Code | Contents |
|---|---|---|
| EJECT | 1 | Position at which the cassette compartment lock is released. The mechanism will not move any further in the unloading direction. |
| BL | 7 | BLANC code. Between two codes. The mechanism will not be stopped by this code while it is operating. |
| USE | 3 | EJECT completion position. When the cassette is ejected, the mechanism will stop at this position. |
| LOAD | 2 | Code during loading/unloading. Code that is used while the LS chassis is moving. |
| STOP | 6 | Normal stop position. The pinch roller separates, the tension regulator returns, and the brakes of both reels turn on. |
| TURN | 4 | Position at which is used when the pendulum gear swings from S to T or from T to S. |
| RECP/PB | 0 | PB, REC, CUE, REV, PAUSE, FF positions.<br>The pinch roller is pressed and tension regulator is on. |
| REW | 5 | REW position. REW are carried at this position.<br>The mechanism will not move any further in the loading direction. |

## 3. Bit Value Discrimination

Bit values must be discriminated using the display data of the adjustment remote commander for the following items. Us the table below to discriminate if the bit value is “1” or “0”.

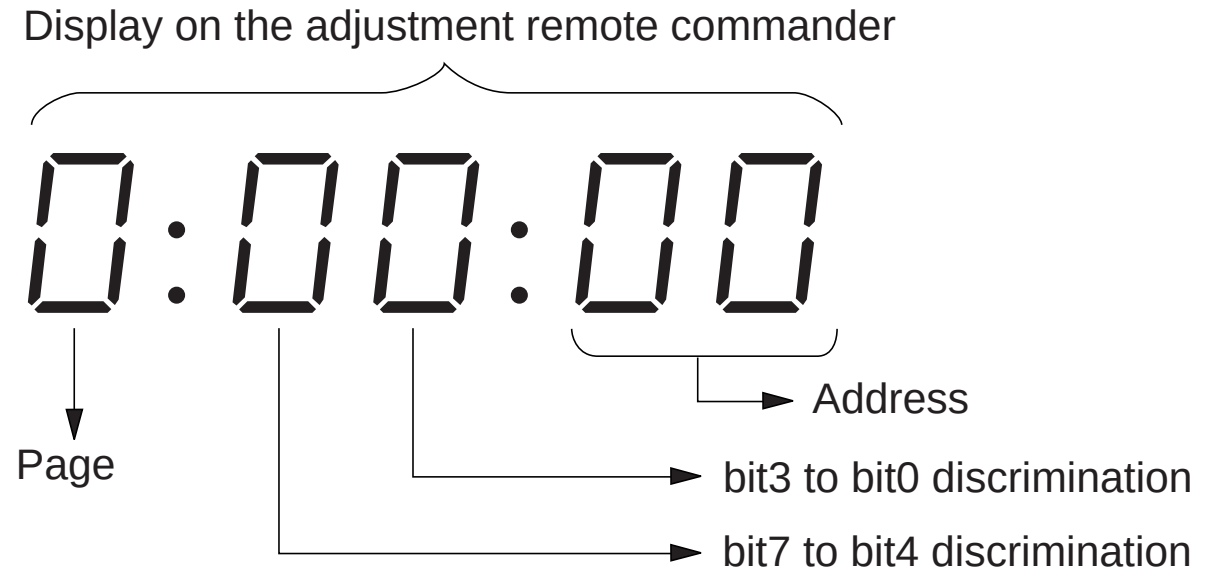
Display on the adjustment remote commander
0:00:00
Address
Page
bit3 to bit0 discrimination
bit7 to bit4 discrimination

(Example) If the remote commander display is “8E”, bit value from bit 7 to bit 4 can be discriminated from the column Ⓐ, and those from bit 3 to bit 0 from column Ⓑ.

| | Display on the adjustment remote commander | Bit values | | | |
|---|---|---|---|---|---|
| | | bit3 or bit7 | bit2 or bit6 | bit1 or bit5 | bit0 or bit4 |
| | 0 | 0 | 0 | 0 | 0 |
| | 1 | 0 | 0 | 0 | 1 |
| | 2 | 0 | 0 | 1 | 0 |
| | 3 | 0 | 0 | 1 | 1 |
| | 4 | 0 | 1 | 0 | 0 |
| | 5 | 0 | 1 | 0 | 1 |
| | 6 | 0 | 1 | 1 | 0 |
| | 7 | 0 | 1 | 1 | 1 |
| Ⓐ | 8 | 1 | 0 | 0 | 0 |
| | 9 | 1 | 0 | 0 | 1 |
| | A (A) | 1 | 0 | 1 | 0 |
| | B (b) | 1 | 0 | 1 | 1 |
| | C (C) | 1 | 1 | 0 | 0 |
| | D (d) | 1 | 1 | 0 | 1 |
| Ⓑ | E (E) | 1 | 1 | 1 | 0 |
| | F (F) | 1 | 1 | 1 | 1 |

## 4. Switch check (1)

| | |
|---|---|
| Page 2 | Address 43 |

| Bit | Function | When bit value = 1 | When bit value = 0 |
|---|---|---|---|
| 0 | POWER SW (VTR MODE SW) (SS-1000 block) | OFF | ON (PLAYER) |
| 1 | POWER SW (CAM MODE SW) (SS-1000 block) | OFF | ON (CAMERA) |
| 2 | START/STOP SW (SS-1000 block) | OFF | ON |
| 3 | EJECT SW (FK-1000 block) | OFF | ON |
| 4 | CC DOWN SW (Mechanism chassis) | OFF (UP) | ON (DOWN) |
| 5 | | | |
| 6 | | | |
| 7 | | | |

**Using method:**

1) Select page: 2, address: 43.
2) By discriminating the bit value of display data, the state of the switch can be discriminated.

## 5. Switch check (2)

| | |
|---|---|
| Page 2 | Address 49 |

| Bit | Function | When bit value = 1 | When bit value = 0 |
|---|---|---|---|
| 6 | A/V OUT jack (FP-257 flexible) | Used | Not used |
| 7 | S VIDEO jack (FP-257 flexible) | Not used | Used |

**Using method:**

1) Select page: 2, address: 49.
2) By discriminating the bit value of display data, the state of the switch can be discriminated.

## 6. Switch check (3)

(TRV model: CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

| | |
|---|---|
| Page 2 | Address 45 |

| Bit | Function | When bit value = 1 | When bit value = 0 |
|---|---|---|---|
| 1 | HEADPHONE jack (CF-1000 block) | Used | Not used |

**Using method:**

1) Select page: 2, address: 45.
2) By discriminating the bit value of display data, the state of the switch can be discriminated.

## 7. Switch check (4)

| Page 2 | Address 60 to 65 |
|---|---|

**Using method:**

1) Select page: 2, address: 60 to 65.
2) By discriminating the display data, the pressed key can be discriminated.

| Address | Data | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | 00 to 0C | 0D to 24 | 25 to 3F | 40 to 5D | 5E to 81 | 82 to AA | AB to D7 | D8 to FF |
| 60<br>(KEY AD0)<br>(IC4803 (93)) | SUPER LASER LINK<br>(FK-1000) *1 | LIGHT<br>(FK-1000)<br>*2 | STOP<br>(FK-1000) | FF<br>(FK-1000) | | | | No key input |
| 61<br>(KEY AD1)<br>(IC4803 (94)) | | | PAUSE<br>(FK-1000) | REW<br>(FK-1000) | PLAY<br>(FK-1000) | | | No key input |
| 62<br>(KEY AD2)<br>(IC4803 (95)) | MENU<br>(CF-077 S002)<br>(CF-1000) *4 | EXPOSURE<br>(CF-077 S004)<br>(CF-1000) *4 | MENU EXECUTE<br>(CF-077 S006)<br>(CF-1000) *4 | TITLE<br>(CF-077 S007)<br>(CF-1000) *4 | VOLUME +<br>(CF-1000)<br>*4 | VOLUME –<br>(CF-1000)<br>*4 | BACKLIGHT<br>(CF-077 S009)<br>(CF-1000) *4 | No key input |
| 63<br>(KEY AD3)<br>(IC4803 (96)) | | DATA<br>(CF-077 S005)<br>(CF-1000) *4 | | | | COUNTER RESET<br>(CF-077 S008)<br>(CF-1000) *4 | PANEL CLOSE<br>(S902) *3 | PANEL OPEN<br>(S902) *3 |
| 64<br>(KEY AD4)<br>(IC4803 (97)) | TIME<br>(CF-077 S003)<br>(CF-1000) *4 | | END SEARCH<br>(CF-1000)<br>*4 | DISPLAY<br>(CF-1000)<br>*4 | | FADER<br>(CF-077 S011)<br>(CF-1000) *4 | FOCUS<br>(CF-077 S010)<br>(CF-1000) *4 | No key input |
| 65<br>(KEY AD5)<br>(IC4803 (98)) | PANEL REVERSE<br>(PR-10500) *3 | | | | | | | PANEL NORMAL<br>(PR-10500) *3 |

*1: LASER LINK model (CCD-TRV98)

*2: Video light model (CCD-TR618/TR618E/TR718E/TR728E/TR818/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

*3: TRV model (CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

*4: CF-1000 block: TRV model
CF-077 board: TR model

## 8. Record of Use check

**Note:** When replacing the drum assembly, initialize the data of address: A2 to A4.
When replacing the video light, initialize the data of address: E0 to E2.

| Page 2 | Address A2 to AA, E0 to E2 |
|---|---|

| Address | Function | | Remarks |
|---|---|---|---|
| A2 | Drum rotation counted time (BCD code) | Hour (H) | 1000th place digit and 100th place digit of counted time (decimal digit) |
| A3 | | Hour (L) | 10th place digit and 1st place digit of counted time (decimal digit) |
| A4 | | Minutes | |
| A5 | User initial power on date (BCD code) | Year | After setting the clock, set the date of power on next |
| A6 | | Month | |
| A7 | | Day | |
| A8 | Final condensation occurrence date (BCD code) | Year | |
| A9 | | Month | |
| AA | | Day | |
| E0 | Video light counted time (BCD code) | Hour (H) | 1000th place digit and 100th place digit of counted time (decimal digit) |
| E1 | | Hour (L) | 10th place digit and 1st place digit of counted time (decimal digit) |
| E2 | | Minutes | |

**Using method:**

1) The record of use data is displayed at page: 2, addresses: A2 to AA and E0 to E2.
   **Note:** This data will be erased (reset) when the cabinet (R) assembly (VC-251 board CN709 (24P)) is removed.

**Initializing method:**

1) Using the adjustment remote commander, select the object address and set data: 00.

## 9. Record of Self-diagnosis check

| | |
|---|---|
| Page 2 | Address B0 to C6 |

| Address | Self-diagnosis code |
|---|---|
| B0 | “Repaired by” code (Occurred 1st time) *1 |
| B1 | “Block function” code (Occurred 1st time) |
| B2 | “Detailed” code (Occurred 1st time) |
| B4 | “Repaired by” code (Occurred 2nd time) *1 |
| B5 | “Block function” code (Occurred 2nd time) |
| B6 | “Detailed” code (Occurred 2nd time) |
| B8 | “Repaired by” code (Occurred 3rd time) *1 |
| B9 | “Block function” code (Occurred 3rd time) |
| BA | “Detailed” code (Occurred 3rd time) |
| BC | “Repaired by” code (Occurred 4th time) *1 |
| BD | “Block function” code (Occurred 4th time) |
| BE | “Detailed” code (Occurred 4th time) |
| C0 | “Repaired by” code (Occurred 5th time) *1 |
| C1 | “Block function” code (Occurred 5th time) |
| C2 | “Detailed” code (Occurred 5th time) |
| C4 | “Repaired by” code (Occurred the last time) *1 |
| C5 | “Block function” code (Occurred the last time) |
| C6 | “Detailed” code (Occurred the last time) |

*1 : “01”→“C”, “03”→“E”

**Using method:**

1) The past self-diagnosis codes are displayed at page: 2, addresses: BC to C6. Refer to “SELF-DIAGNOSIS FUNCTION” for detail of the self-diagnosis code.
   **Note:** This data will be erased (reset) when the cabinet (R) assembly (VC-251 board CN709 (24P)) is removed.

# SECTION 6
# REPAIR PARTS LIST

## 6-1. EXPLODED VIEWS

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

- Abbreviation

| | |
|---|---|
| CND | : Canadian model |
| HK | : Hong Kong model |
| KR | : Korea model |
| JE | : Tourist model |
| AUS | : Australian model |
| CN | : Chinese model |
| BR | : Brazilian model |
| AR | : Argentina model |

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

### 6-1-1. OVERALL SECTION

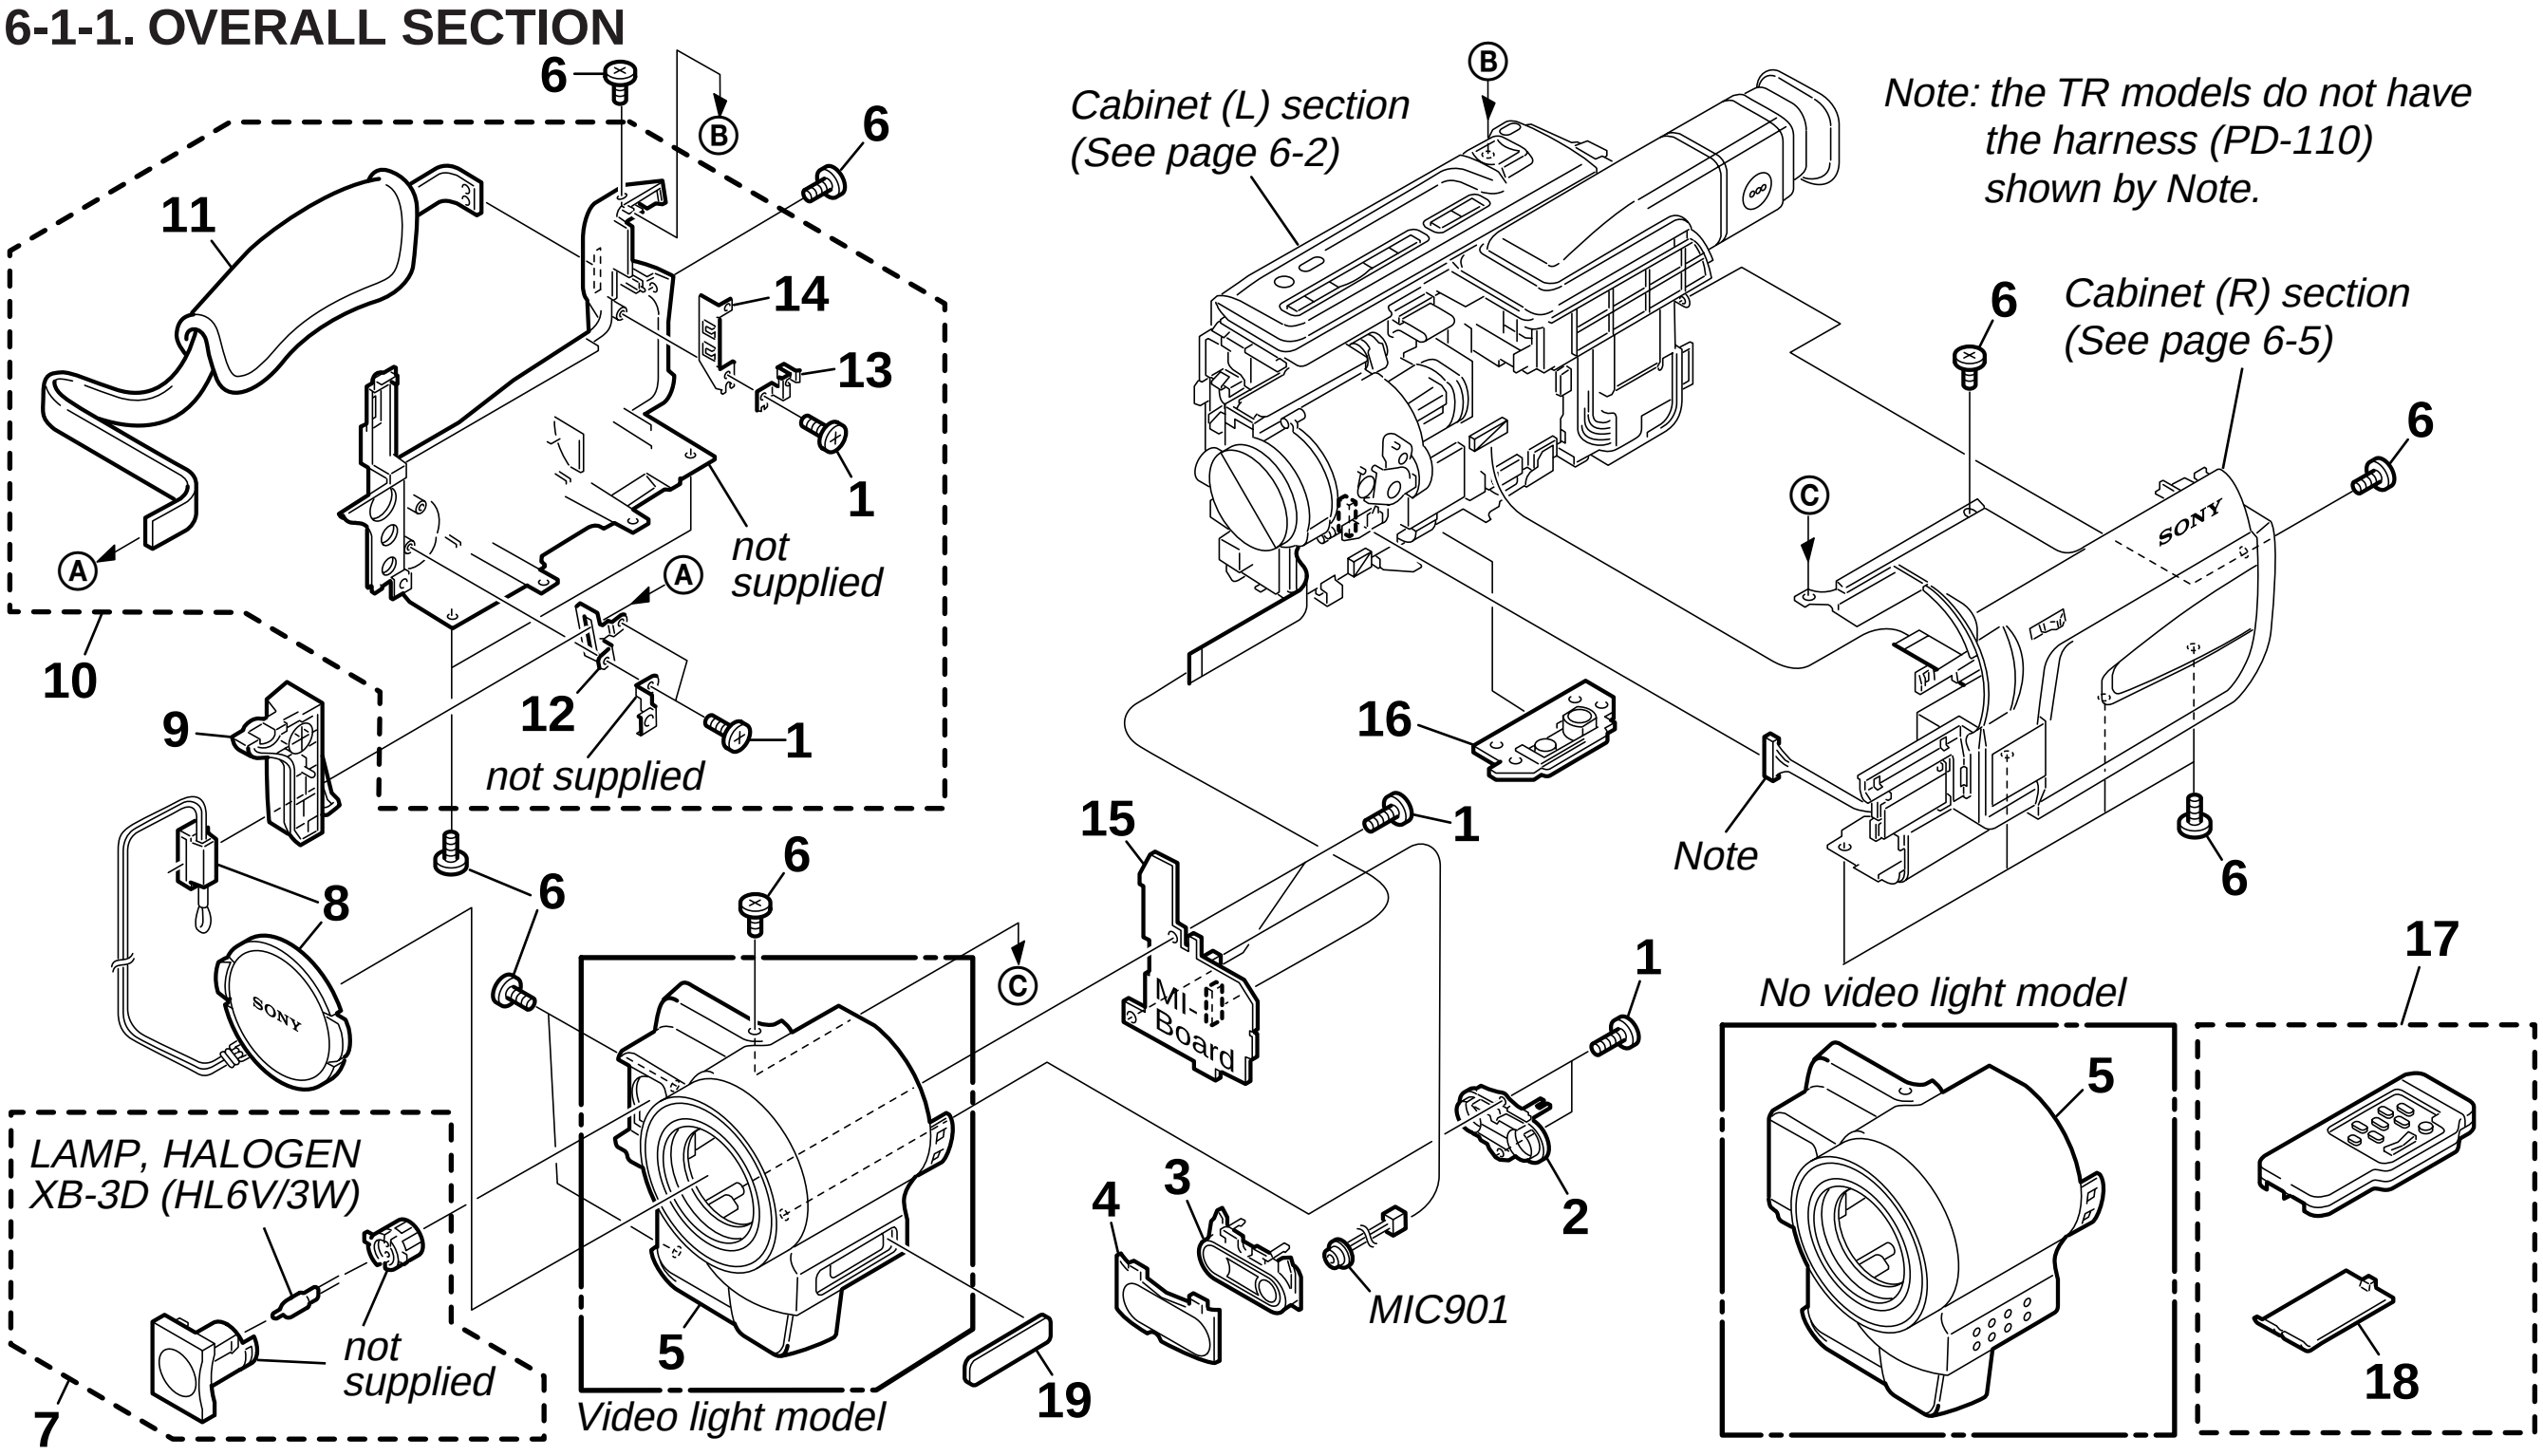
6
B
6
11
14
13
1
A
A
not supplied
10
9
12
1
not supplied
8
6
6
C
LAMP, HALOGEN XB-3D (HL6V/3W)
not supplied
7
5
Video light model
19
4
3
Cabinet (L) section (See page 6-2)
B
Note: the TR models do not have the harness (PD-110) shown by Note.
6
Cabinet (R) section (See page 6-5)
6
C
16
15
1
MI-Board
Note
6
1
2
MIC901
No video light model
5
17
18

*TR model :CCD-TR618/TR618E/TR718E/TR728E/TR818*
*Video light model :CCD-TR618/TR618E/TR718E/TR728E/*
*TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E*
*No video light model :CCD-TR818*

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| 1 | 3-948-339-61 | TAPPING | |
| 2 | 3-065-468-01 | RETAINER (REAR), MICROPHONE | |
| 3 | 3-065-467-11 | RETAINER (FRONT), MICROPHONE | |
| * 4 | 3-065-470-01 | CUSHION (10), MICROPHONE | |
| 5 | X-3951-213-1 | PANEL(10) ASSY, F (TRV88) | |
| 5 | X-3951-214-1 | PANEL(10) ASSY, F (TR728E) | |
| 5 | X-3951-215-1 | PANEL(10) ASSY, F (TR818) | |
| 5 | X-3951-216-1 | PANEL(10) ASSY, F (TRV98) | |
| 5 | X-3951-217-1 | PANEL(10) ASSY, F (TR618/TR618E) | |
| 5 | X-3951-218-1 | PANEL(10) ASSY, F (TRV59E) | |
| 5 | X-3951-219-1 | PANEL(10) ASSY, F (TR718E) | |
| 5 | X-3951-221-1 | PANEL(10) ASSY, F (TRV68) | |
| 5 | X-3951-368-1 | PANEL(10) ASSY, F (TRV78/TRV78E/TRV98E) | |
| 5 | X-3951-383-1 | PANEL(10) ASSY, F (TRV49/TRV49E) | |
| 5 | X-3951-384-1 | PANEL(10) ASSY, F (TRV58/TRV58E) | |
| 6 | 3-067-347-01 | MI SCREW M2 (H) | |
| 7 | 1-518-723-21 | LIGHT, VIDEO (TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) | |
| 8 | X-3949-376-1 | CAP(N) ASSY, LENS | |
| 9 | 3-065-433-01 | COVER(10), JACK | |
| 10 | X-3951-193-1 | CABINET L (10) ASSY | |
| 11 | 3-052-815-01 | BELT(ES), GRIP | |
| * 12 | 3-065-455-01 | STOPPER (FRONT) (10), BELT | |
| * 13 | 3-065-457-01 | PLATE REAR (10), L GROUND | |
| 14 | 3-058-622-01 | STOPPER (REAR), BELT | |
| 15 | A-7074-659-A | MI-040 (L0) BOARD, COMPLETE (TR618/TR618E/TR718E) | |
| 15 | A-7074-661-A | MI-040 (MM0) BOARD, COMPLETE (TR818) | |
| 15 | A-7074-665-A | MI-041 (MMI) BOARD, COMPLETE (TRV98) | |
| 15 | A-7074-682-A | MI-041 (MM) BOARD, COMPLETE (TRV78/TRV78E/TRV98E) | |
| 15 | A-7074-683-A | MI-040 (0) BOARD, COMPLETE (TR728E) | |
| 15 | A-7074-700-A | MI-041 (ML) BOARD, COMPLETE (TRV58/TRV58E) | |
| 15 | A-7074-707-A | MI-041 (MML) BOARD, COMPLETE (TRV68/TRV88) | |
| 15 | A-7074-719-A | MI-041 (M) BOARD, COMPLETE (TRV49/TRV49E/TRV59E) | |
| 16 | 3-987-717-01 | SCREW, TRIPOD | |
| 17 | 1-467-574-21 | REMOTE COMMANDER (RMT-708) (TR728E/TRV49/TRV49E/TRV59E/TRV78/TRV78E/TRV98/TRV98E) | |
| 18 | 3-958-131-01 | LID,BATTERY CASE (FOR RMT-708) | |
| 19 | 3-065-464-11 | WINDOW (12), LCD (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) | |
| MIC901 | 1-542-312-11 | MICROPHONE | |

## 6-1-2. CABINET (L) SECTION

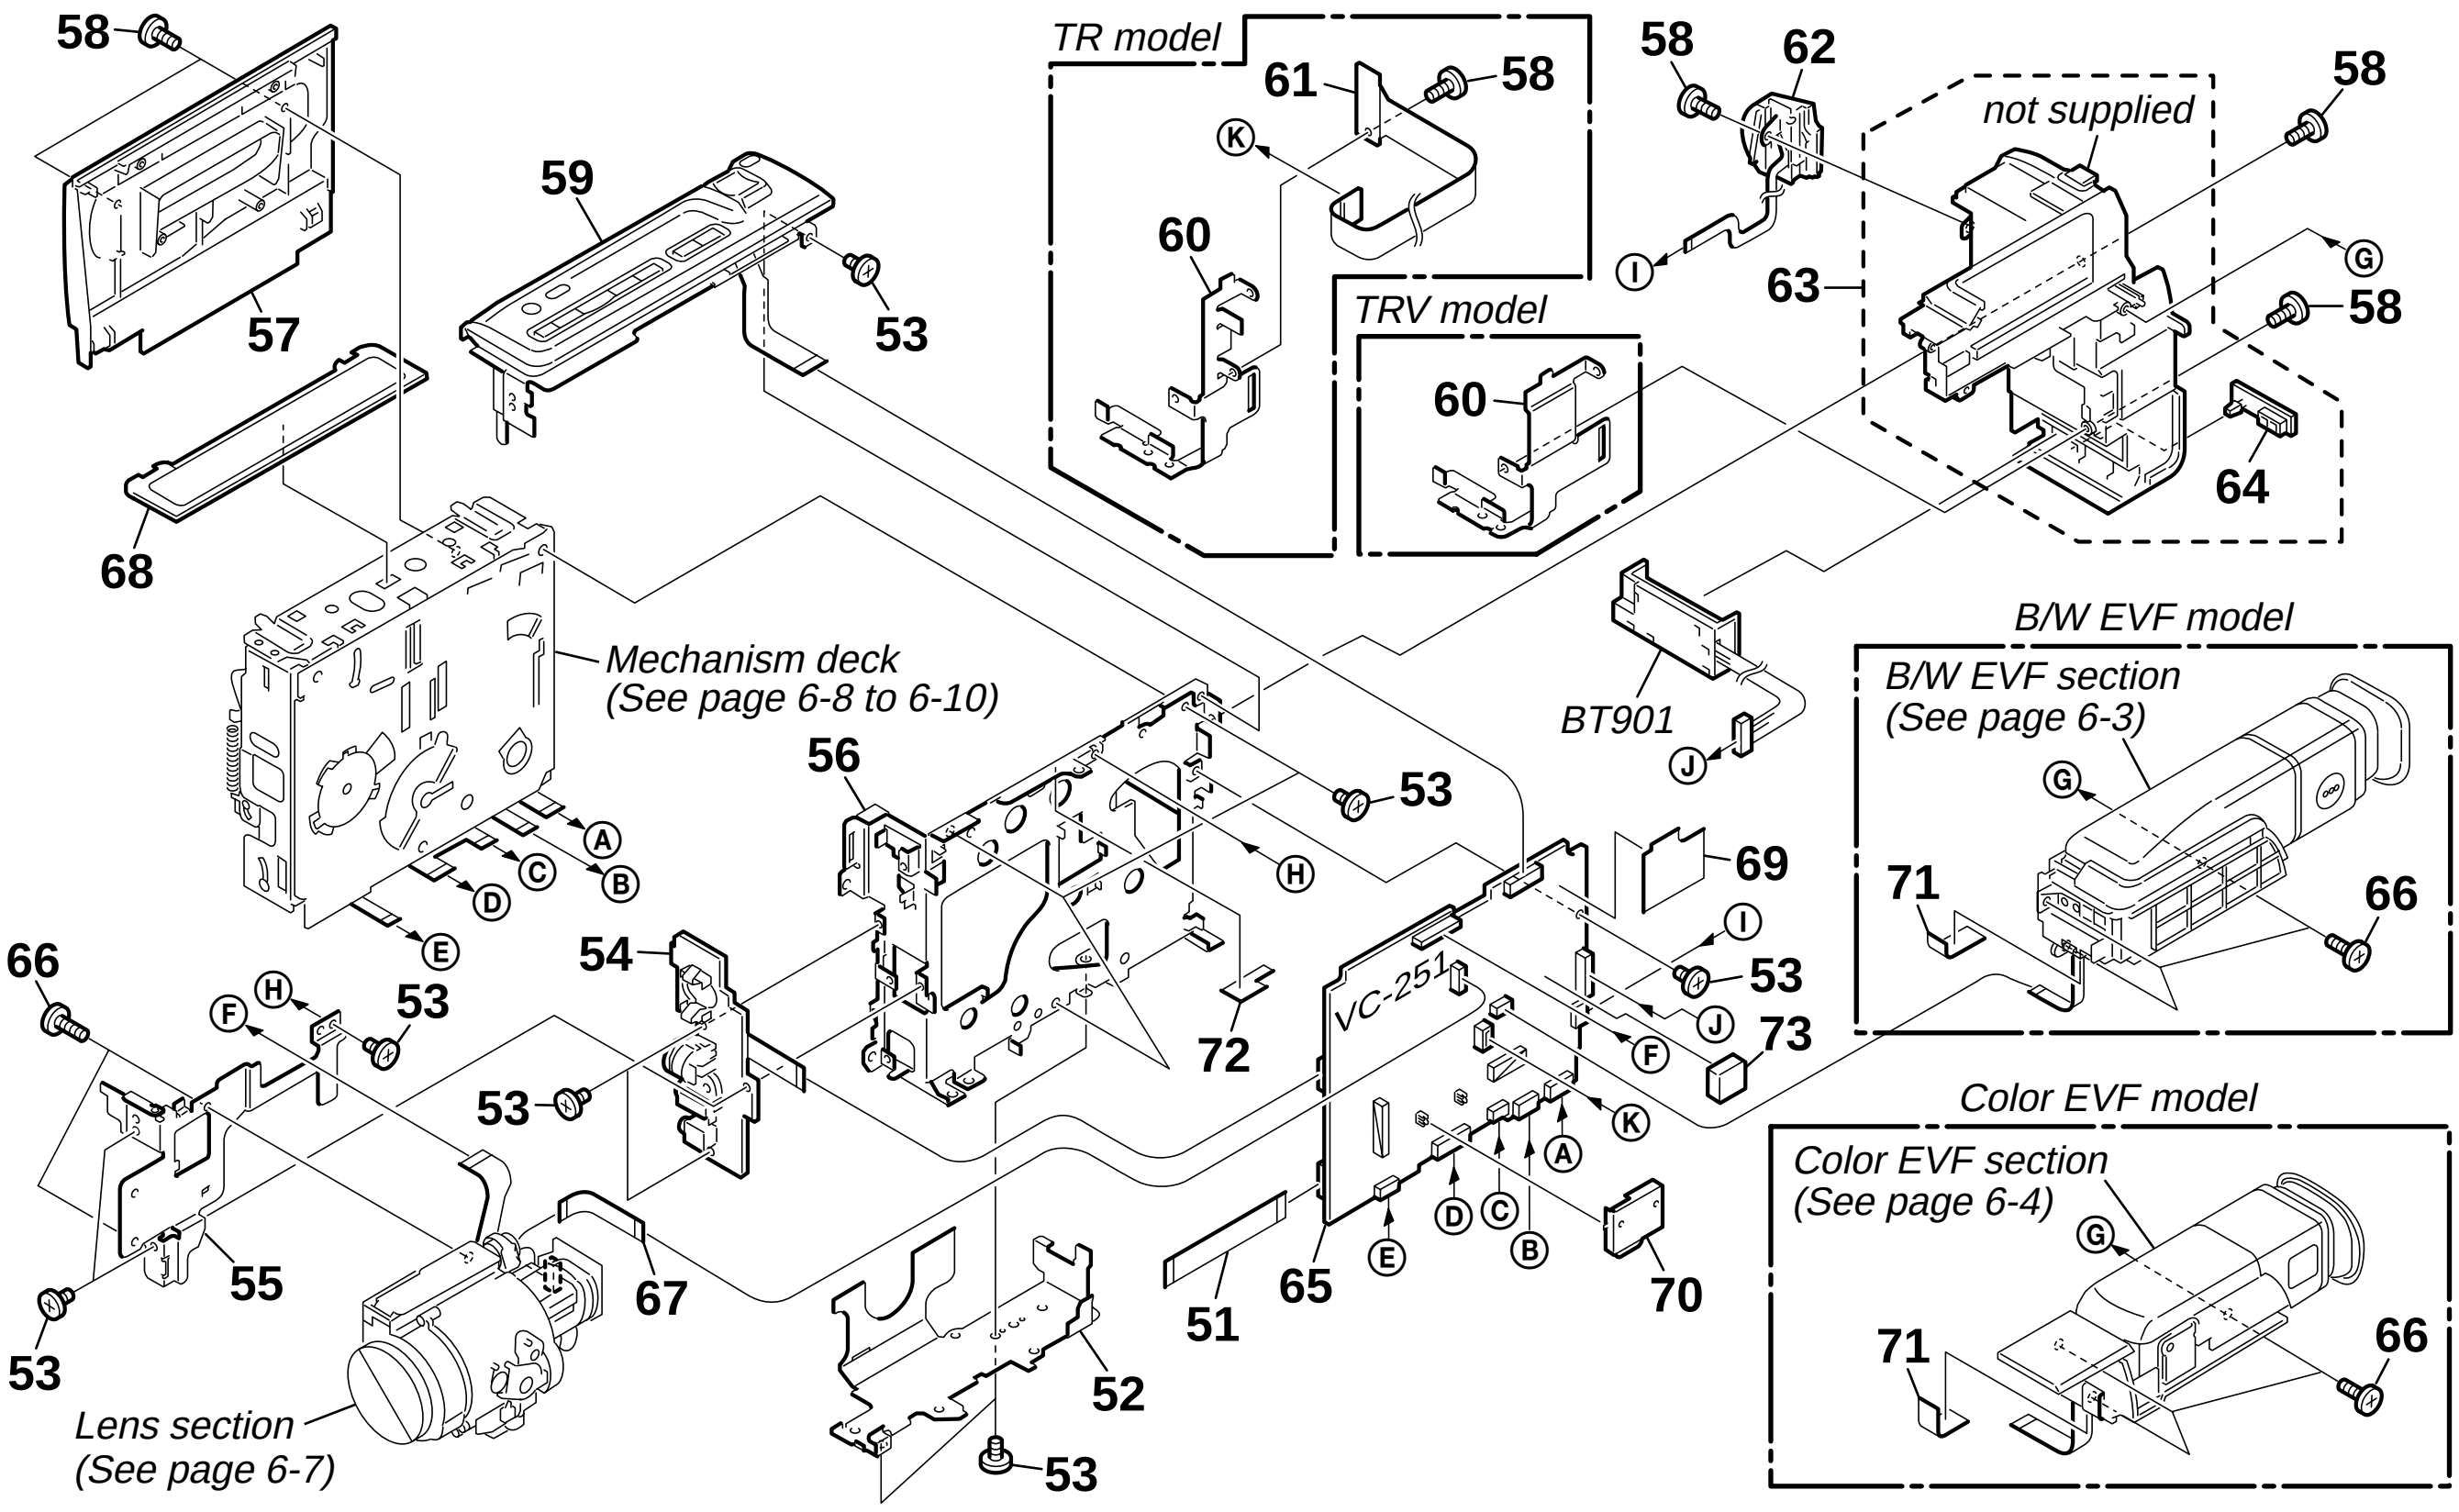
58
57
59
53
68
TR model
61
58
60
TRV model
60
58
62
not supplied
58
63
58
64
Mechanism deck
(See page 6-8 to 6-10)
56
53
BT901
B/W EVF model
B/W EVF section
(See page 6-3)
69
71
66
66
54
53
53
53
72
VC-251
53
73
Color EVF model
Color EVF section
(See page 6-4)
55
67
51
65
70
71
66
53
52
53
Lens section
(See page 6-7)
A
B
C
D
E
F
G
H
I
J
K

*TR model :CCD-TR618/TR618E/TR718E/TR728E/TR818*
*TRV model :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E*
*B/W EVF model :CCD-TR618/TR618E/TR718E/TR728E/*
*TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E*
*Color EVF model :CCD-TR818*

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| 51 | 1-680-203-11 | FP-263 FLEXIBLE BOARD | |
| * 52 | 3-065-428-01 | FRAME B (10), MD | |
| 53 | 3-968-729-51 | SCREW (M2), LOCK ACE, P2 | |
| 54 | 1-680-198-11 | FP-257 FLEXIBLE BOARD | |
| * 55 | 3-065-429-01 | FRAME (10), LENS | |
| * 56 | 3-065-427-01 | FRAME A (10), MD | |
| 57 | X-3951-228-1 | LID(10) ASSY, CASSETTE | |
| 58 | 3-067-347-01 | MI SCREW M2 (H) | |
| 59 | 1-476-424-11 | SWITCH BLOCK, CONTROL (FK-1000) | (TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98E) |
| 59 | 1-476-424-21 | SWITCH BLOCK, CONTROL (FK-1000)(TR818) | |
| 59 | 1-476-424-51 | SWITCH BLOCK, CONTROL (FK-1000)(TRV98) | |
| 60 | 3-065-421-01 | SHEET METAL (LOWER)(12), STRAP | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| 60 | 3-065-422-01 | SHEET METAL (LOWER)(10), STRAP | (TR618/TR618E/TR718E/TR728E/TR818) |
| 61 | 1-680-202-11 | FP-262 FLEXIBLE BOARD | (TR618/TR618E/TR718E/TR728E/TR818) |
| 62 | 1-476-423-11 | SWITCH BLOCK, CONTROL (SS-1000) | |
| 63 | X-3951-196-1 | PANEL (12) ASSY, BATTERY | (TRV49/TRV49E/TRV58:US,CND,E,AR/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98:US,CND,E,HK,KR,JE/TRV98E) |
| 63 | X-3951-198-1 | PANEL (10) ASSY, BATTERY | (TR618/TR618E/TR718E/TR728E/TR818:US,CND,E,AR) |
| 63 | X-3951-470-1 | PANEL (B)(10) ASSY, BATTERY (TR818:BR) | |
| 63 | X-3951-471-1 | PANEL (B)(12) ASSY, BATTERY | (TRV58:BR/TRV98:BR) |
| 64 | 3-987-656-01 | LID,JACK | |
| 65 | A-7096-402-A | VC-251 (N-B) BOARD, COMPLETE (SERVICE) | (TR618) |
| 65 | A-7096-403-A | VC-251 (N-C) BOARD, COMPLETE (SERVICE) | (TR818) |
| 65 | A-7096-404-A | VC-251 (P-B) BOARD, COMPLETE (SERVICE) | (TR618E/TR718E/TR728E) |
| 65 | A-7096-405-A | VC-251 (N-VMMB) BOARD, COMPLETE (SERVICE) | (TRV68/TRV78/TRV88/TRV98) |
| 65 | A-7096-406-A | VC-251 (P-VMMB) BOARD, COMPLETE (SERVICE) | (TRV78E/TRV98E) |
| 65 | A-7096-409-A | VC-251 (N-VB) BOARD, COMPLETE (SERVICE) | (TRV49/TRV58) |
| 65 | A-7096-456-A | VC-251 (P-VB) BOARD, COMPLETE (SERVICE) | (TRV49E/TRV58E/TRV59E) |
| 66 | 3-948-339-61 | TAPPING | |
| 67 | 1-680-200-11 | FP-259 FLEXIBLE BOARD | |
| 68 | X-3950-697-1 | LID ASSY, LS | |
| * 69 | 3-065-654-01 | SHIELD (10), DD | |
| * 70 | 3-065-432-01 | CASE (10), RP SHIELD | |
| 71 | 3-941-343-21 | TAPE(A) | |
| 72 | 3-067-254-01 | SHEET (10), ABSORBING | |
| * 73 | 3-062-053-01 | SPACER, PC | |
| BT901 | 1-694-384-11 | TERMINAL BOARD, BATTERY | |

## 6-1-3. B/W EVF SECTION (TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E)

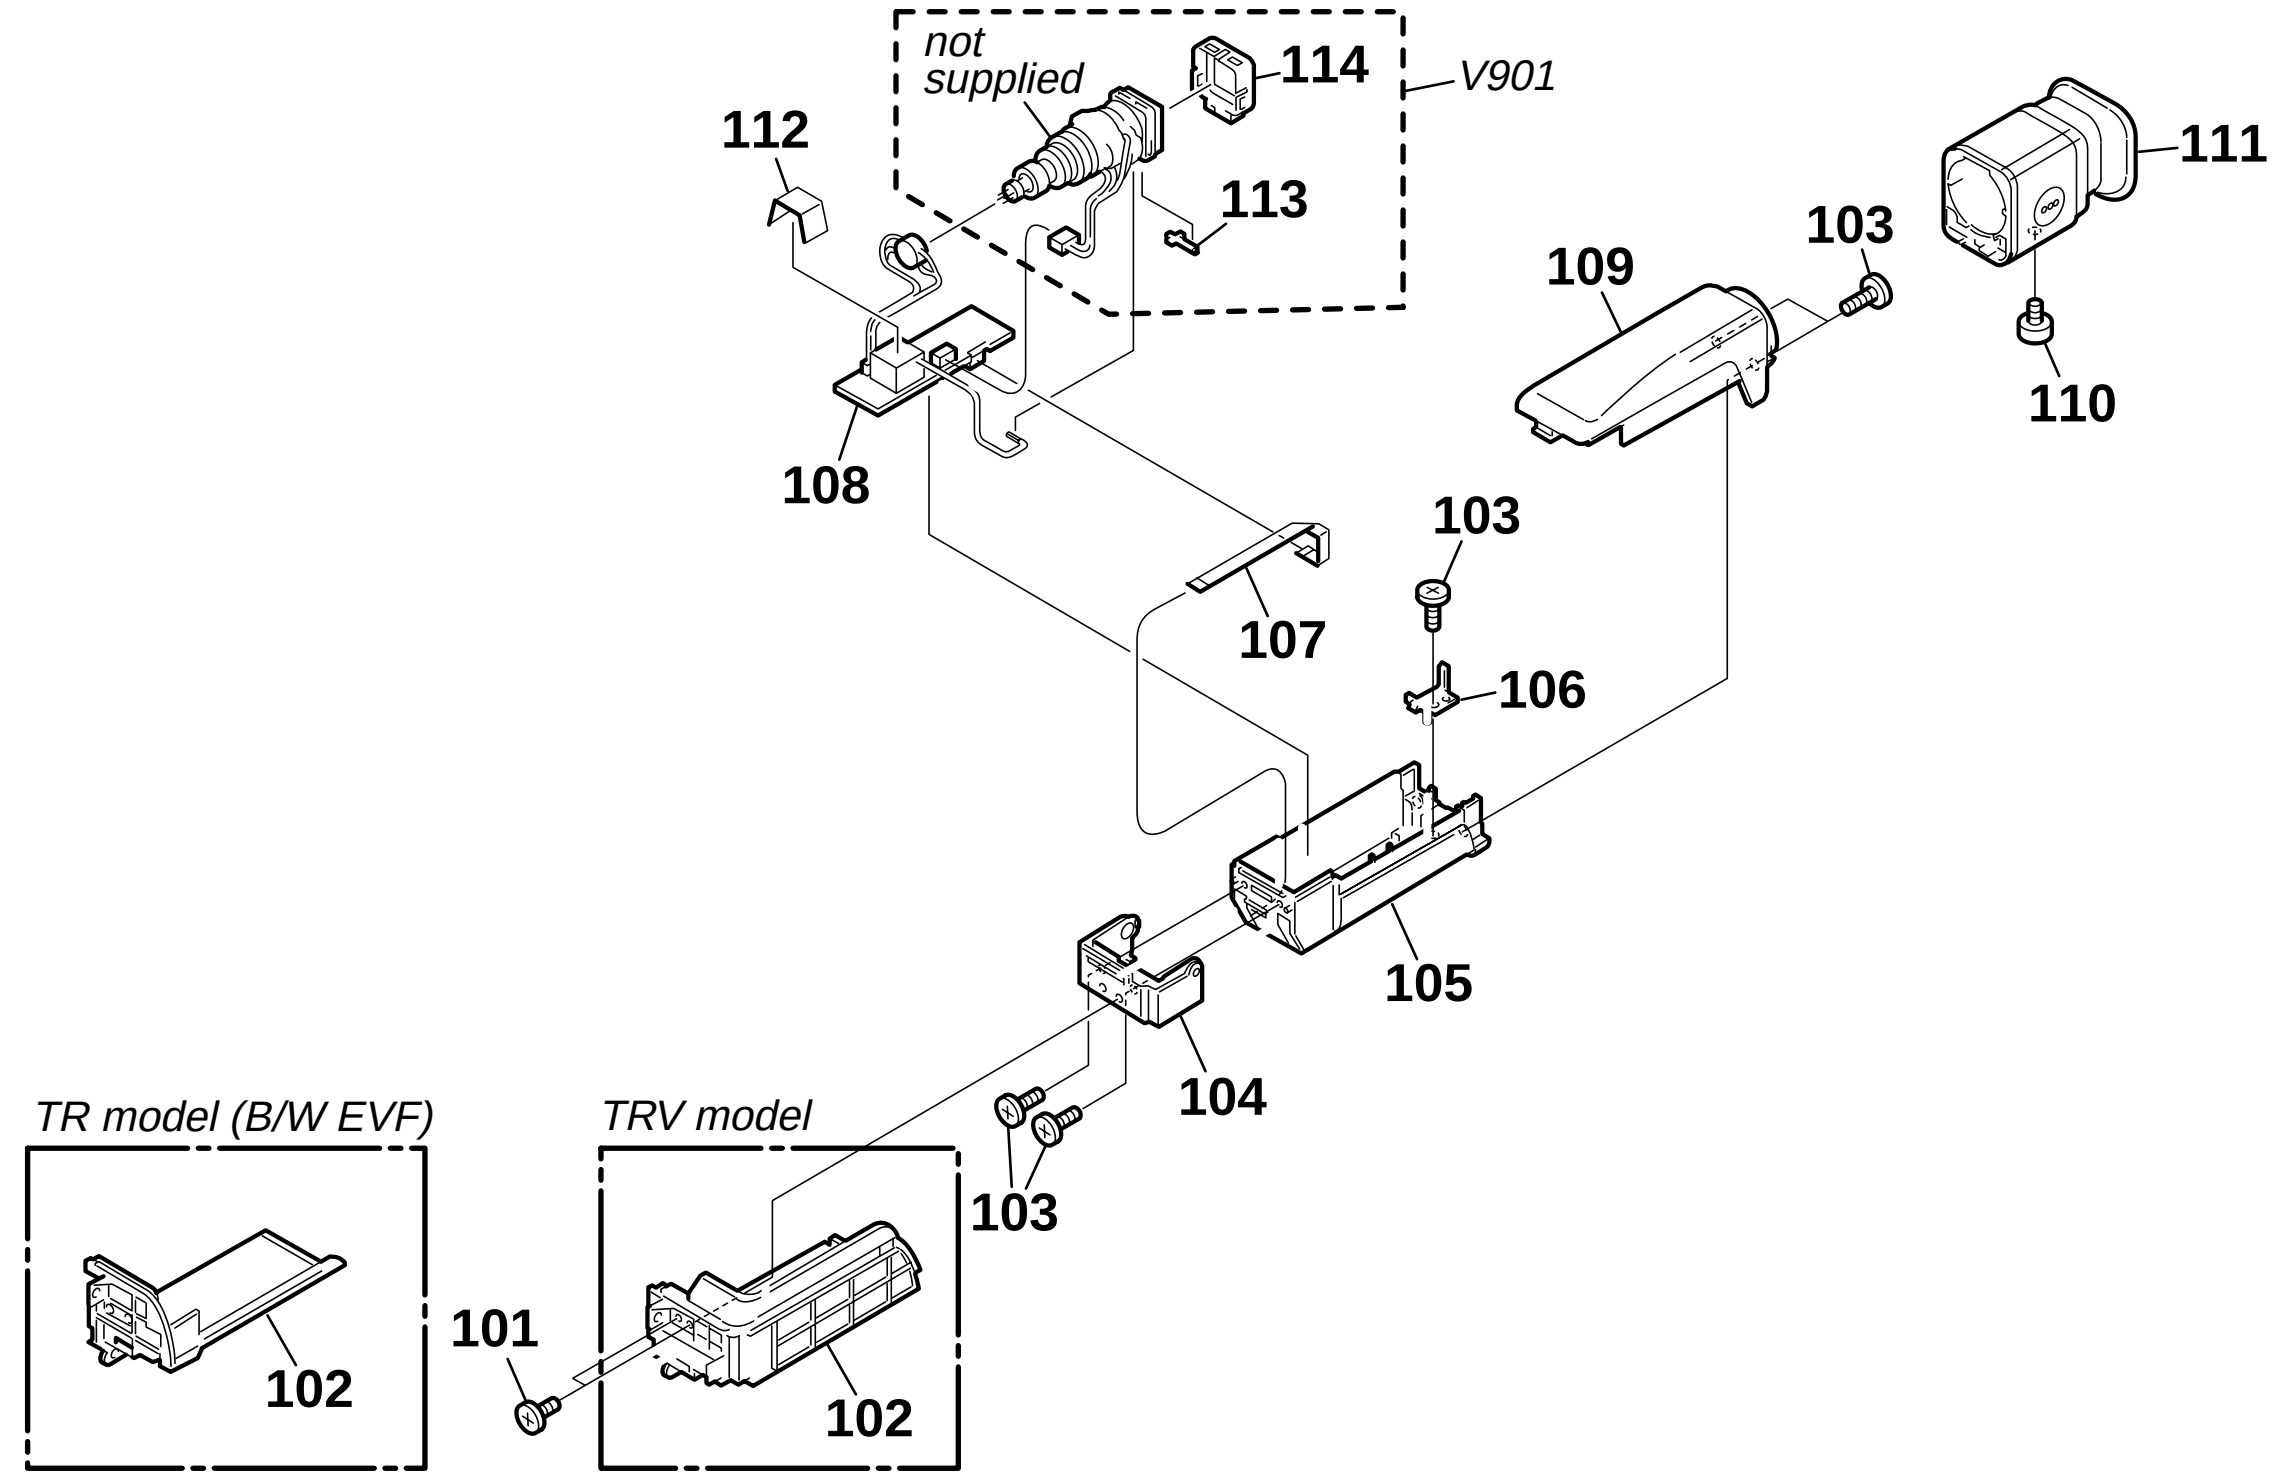

*TR model (B/W EVF) :CCD-TR618/TR618E/TR718E/TR728E*
*TRV model :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E*

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| 101 | 3-061-794-01 | SCREW, LOOSE STOPPER | |
| 102 | 3-065-481-01 | BASE B (12), VF | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| 102 | 3-065-482-01 | BASE B (10), VF | (TR618/TR618E/TR718E/TR728E) |
| 103 | 3-948-339-81 | TAPPING | |
| 104 | X-3950-230-1 | HINGE ASSY, VF | |
| 105 | 3-058-644-11 | CABINET (LOWER) (B) (100), EVF | (TR618/TR618E/TR718E/TR728E) |
| 105 | 3-065-480-01 | CABINET LOWER B (12), EVF | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| 106 | 3-053-681-01 | TALLY, EVF | |
| 107 | 1-792-454-11 | CABLE, FLEXIBLE FLAT (FFC-289) | |
| 108 | A-7073-838-A | VF-129 (N) BOARD, COMPLETE | (TR618/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) |
| 108 | A-7073-855-A | VF-129 (P) BOARD, COMPLETE | (TR618E/TR718E/TR728E/TRV49E/ TRV58E/TRV59E/TRV78E/TRV98E) |
| 109 | X-3951-202-1 | CABINET UPPER B (12) ASSY, EVF | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| 109 | X-3951-203-1 | CABINET UPPER B (10) ASSY, EVF | (TR618/TR618E/TR718E/TR728E) |
| 110 | 3-975-898-01 | SCREW (T), F LOCK | |
| 111 | X-3949-329-1 | FINDER (S) ASSY | |
| 112 | 3-941-343-21 | TAPE (A) | |
| 113 | 3-709-272-01 | COVER, HIGH VOLTAGE | |
| 114 | 3-709-273-01 | MASK, CRT | |
| ⚠V901 | 1-452-673-61 | CRT ASSY (M01KXX90WB) | |

| **Note :** The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified. | **Note :** Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié. |
|---|---|

## 6-1-4. COLOR EVF SECTION (TR818)

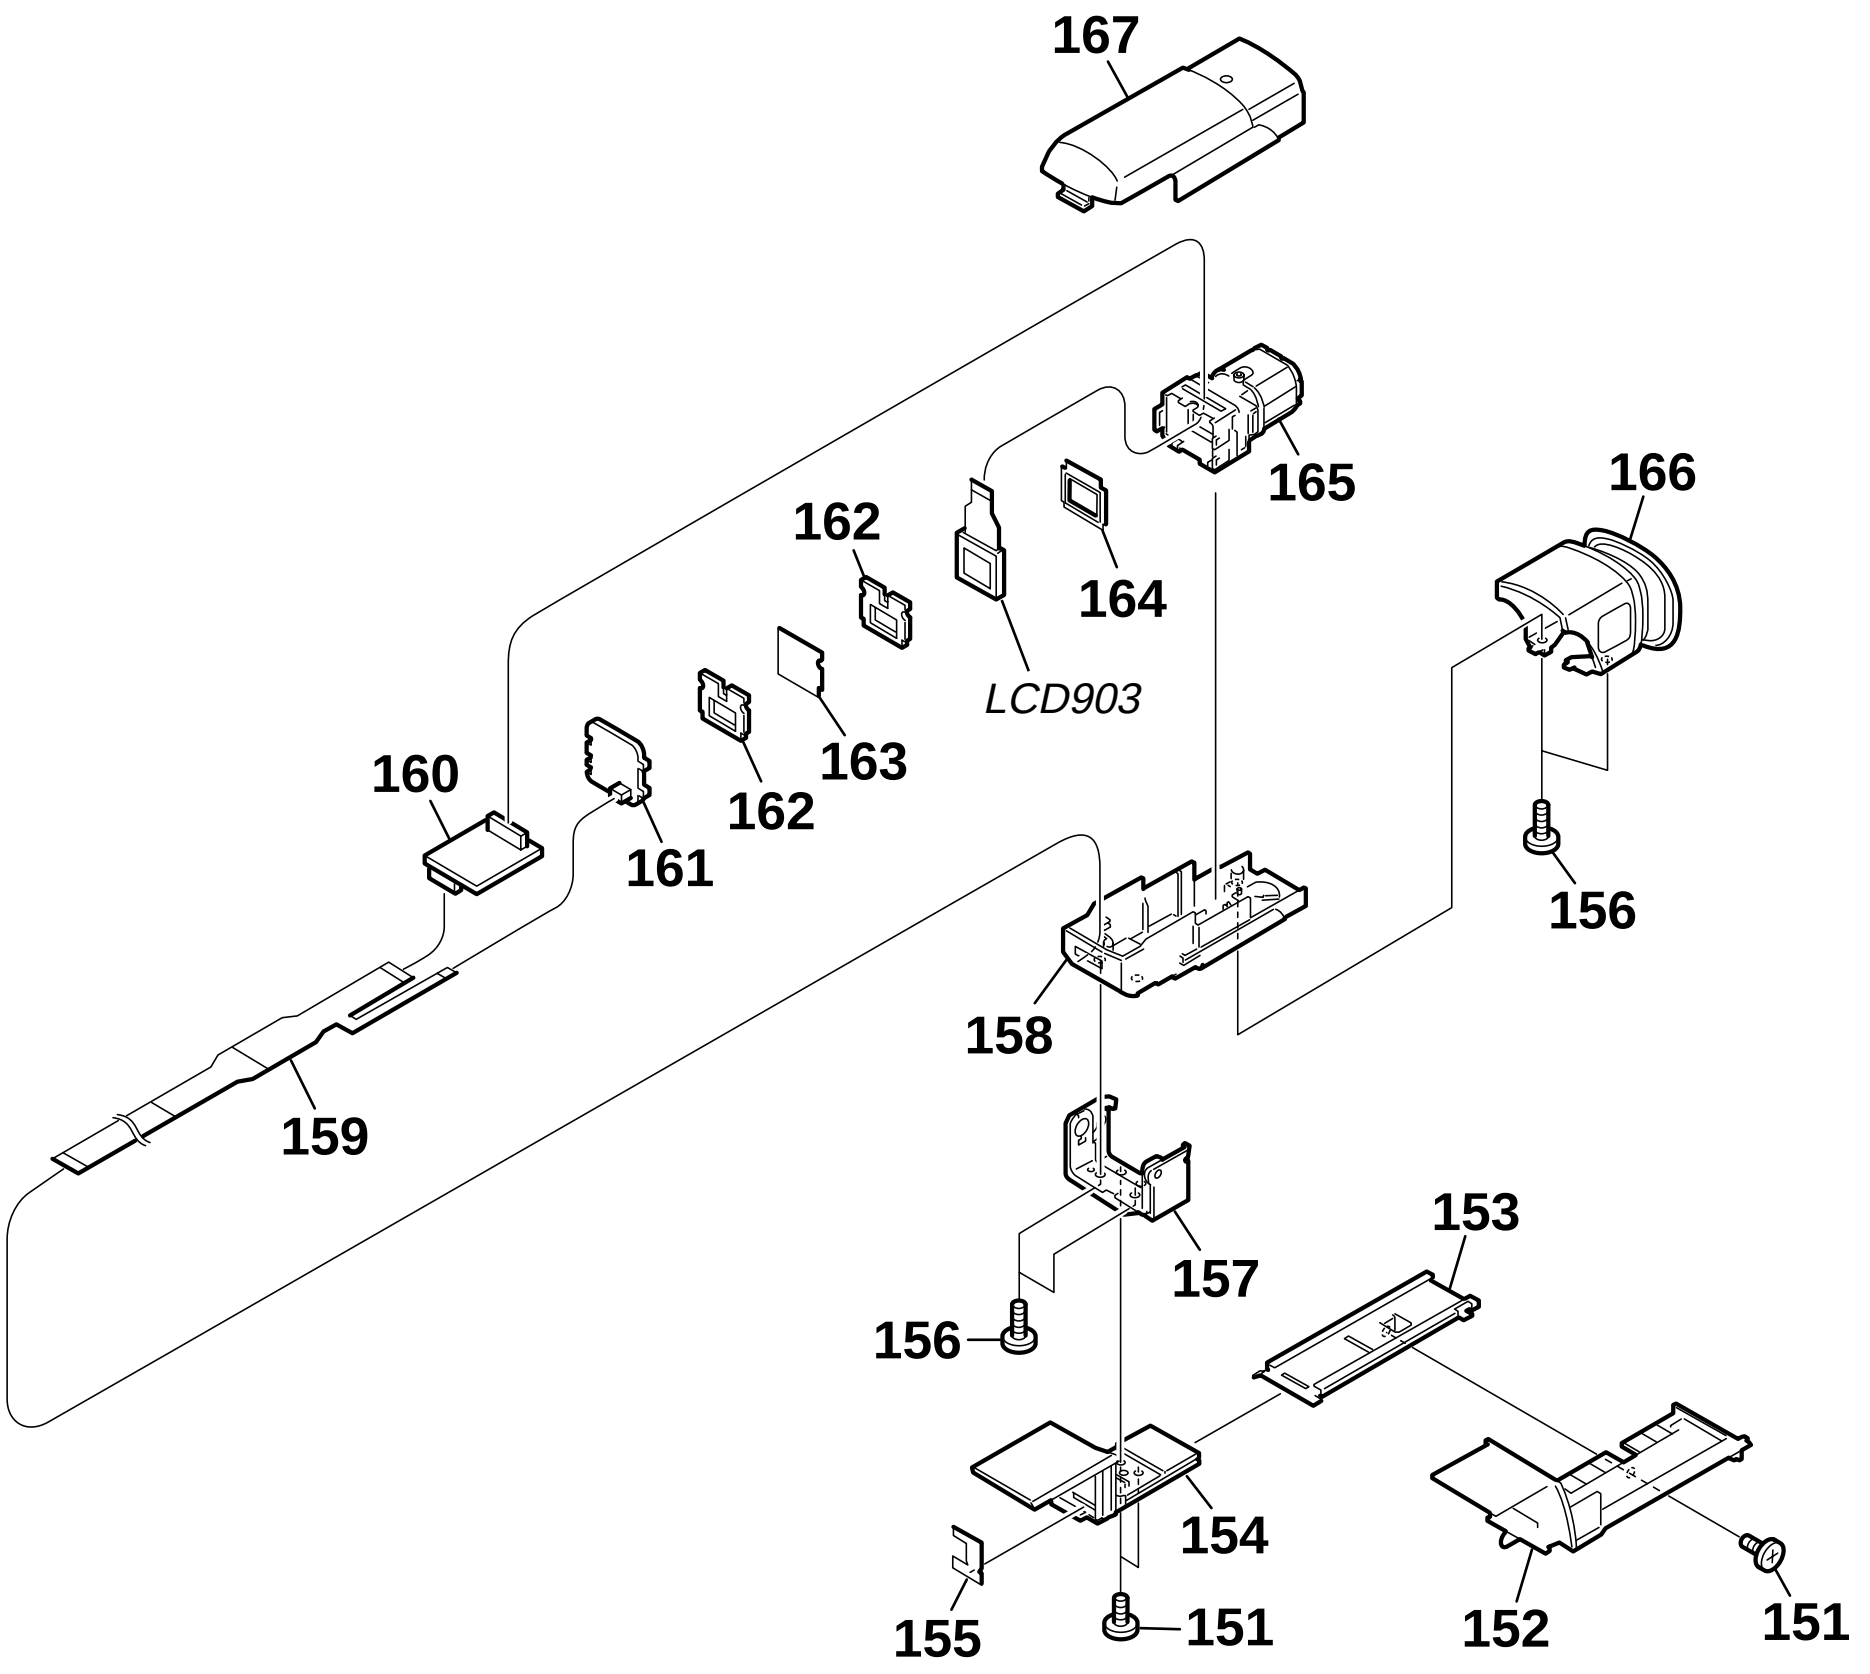
167
165
166
162
164
LCD903
163
160
162
161
156
158
159
153
157
156
154
155
151
152
151

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| 151 | 3-067-347-01 | MI SCREW M2 (H) | |
| 152 | 3-065-484-01 | BASE C (10), VF | |
| 153 | 3-065-483-01 | PLATE (10), SLIDE FIXED | |
| 154 | X-3951-205-1 | BASE (10) ASSY, SLIDE | |
| * 155 | 3-058-640-01 | RETAINER (100), HARNESS | |
| 156 | 3-948-339-81 | TAPPING | |
| 157 | X-3950-230-1 | HINGE ASSY, VF | |
| 158 | X-3951-204-1 | CABINET LOWER C (10) ASSY, EVF | |
| 159 | 1-676-299-11 | FP-151 FLEXIBLE BOARD | |
| 160 | A-7074-193-A | VF-141 BOARD, COMPLETE | |
| 161 | A-7074-192-A | LB-62 BOARD, COMPLETE | |
| * 162 | 3-058-234-02 | CUSHION (2) (97), LCD | |
| 163 | 3-058-233-01 | ILLUMINATOR (97), BL | |
| * 164 | 3-058-232-01 | CUSHION (1) (97), LCD | |
| 165 | X-3950-101-1 | LENS (C) (97) ASSY, VF | |
| 166 | X-3950-227-1 | CABINET (REAR) (100) ASSY, EVF | |
| 167 | 3-058-638-11 | CABINET (UPPER) (100), EVF | |
| LCD903 | 8-753-028-47 | LCX032AN-J | |

## 6-1-5. CABINET (R) SECTION

### *TRV model*

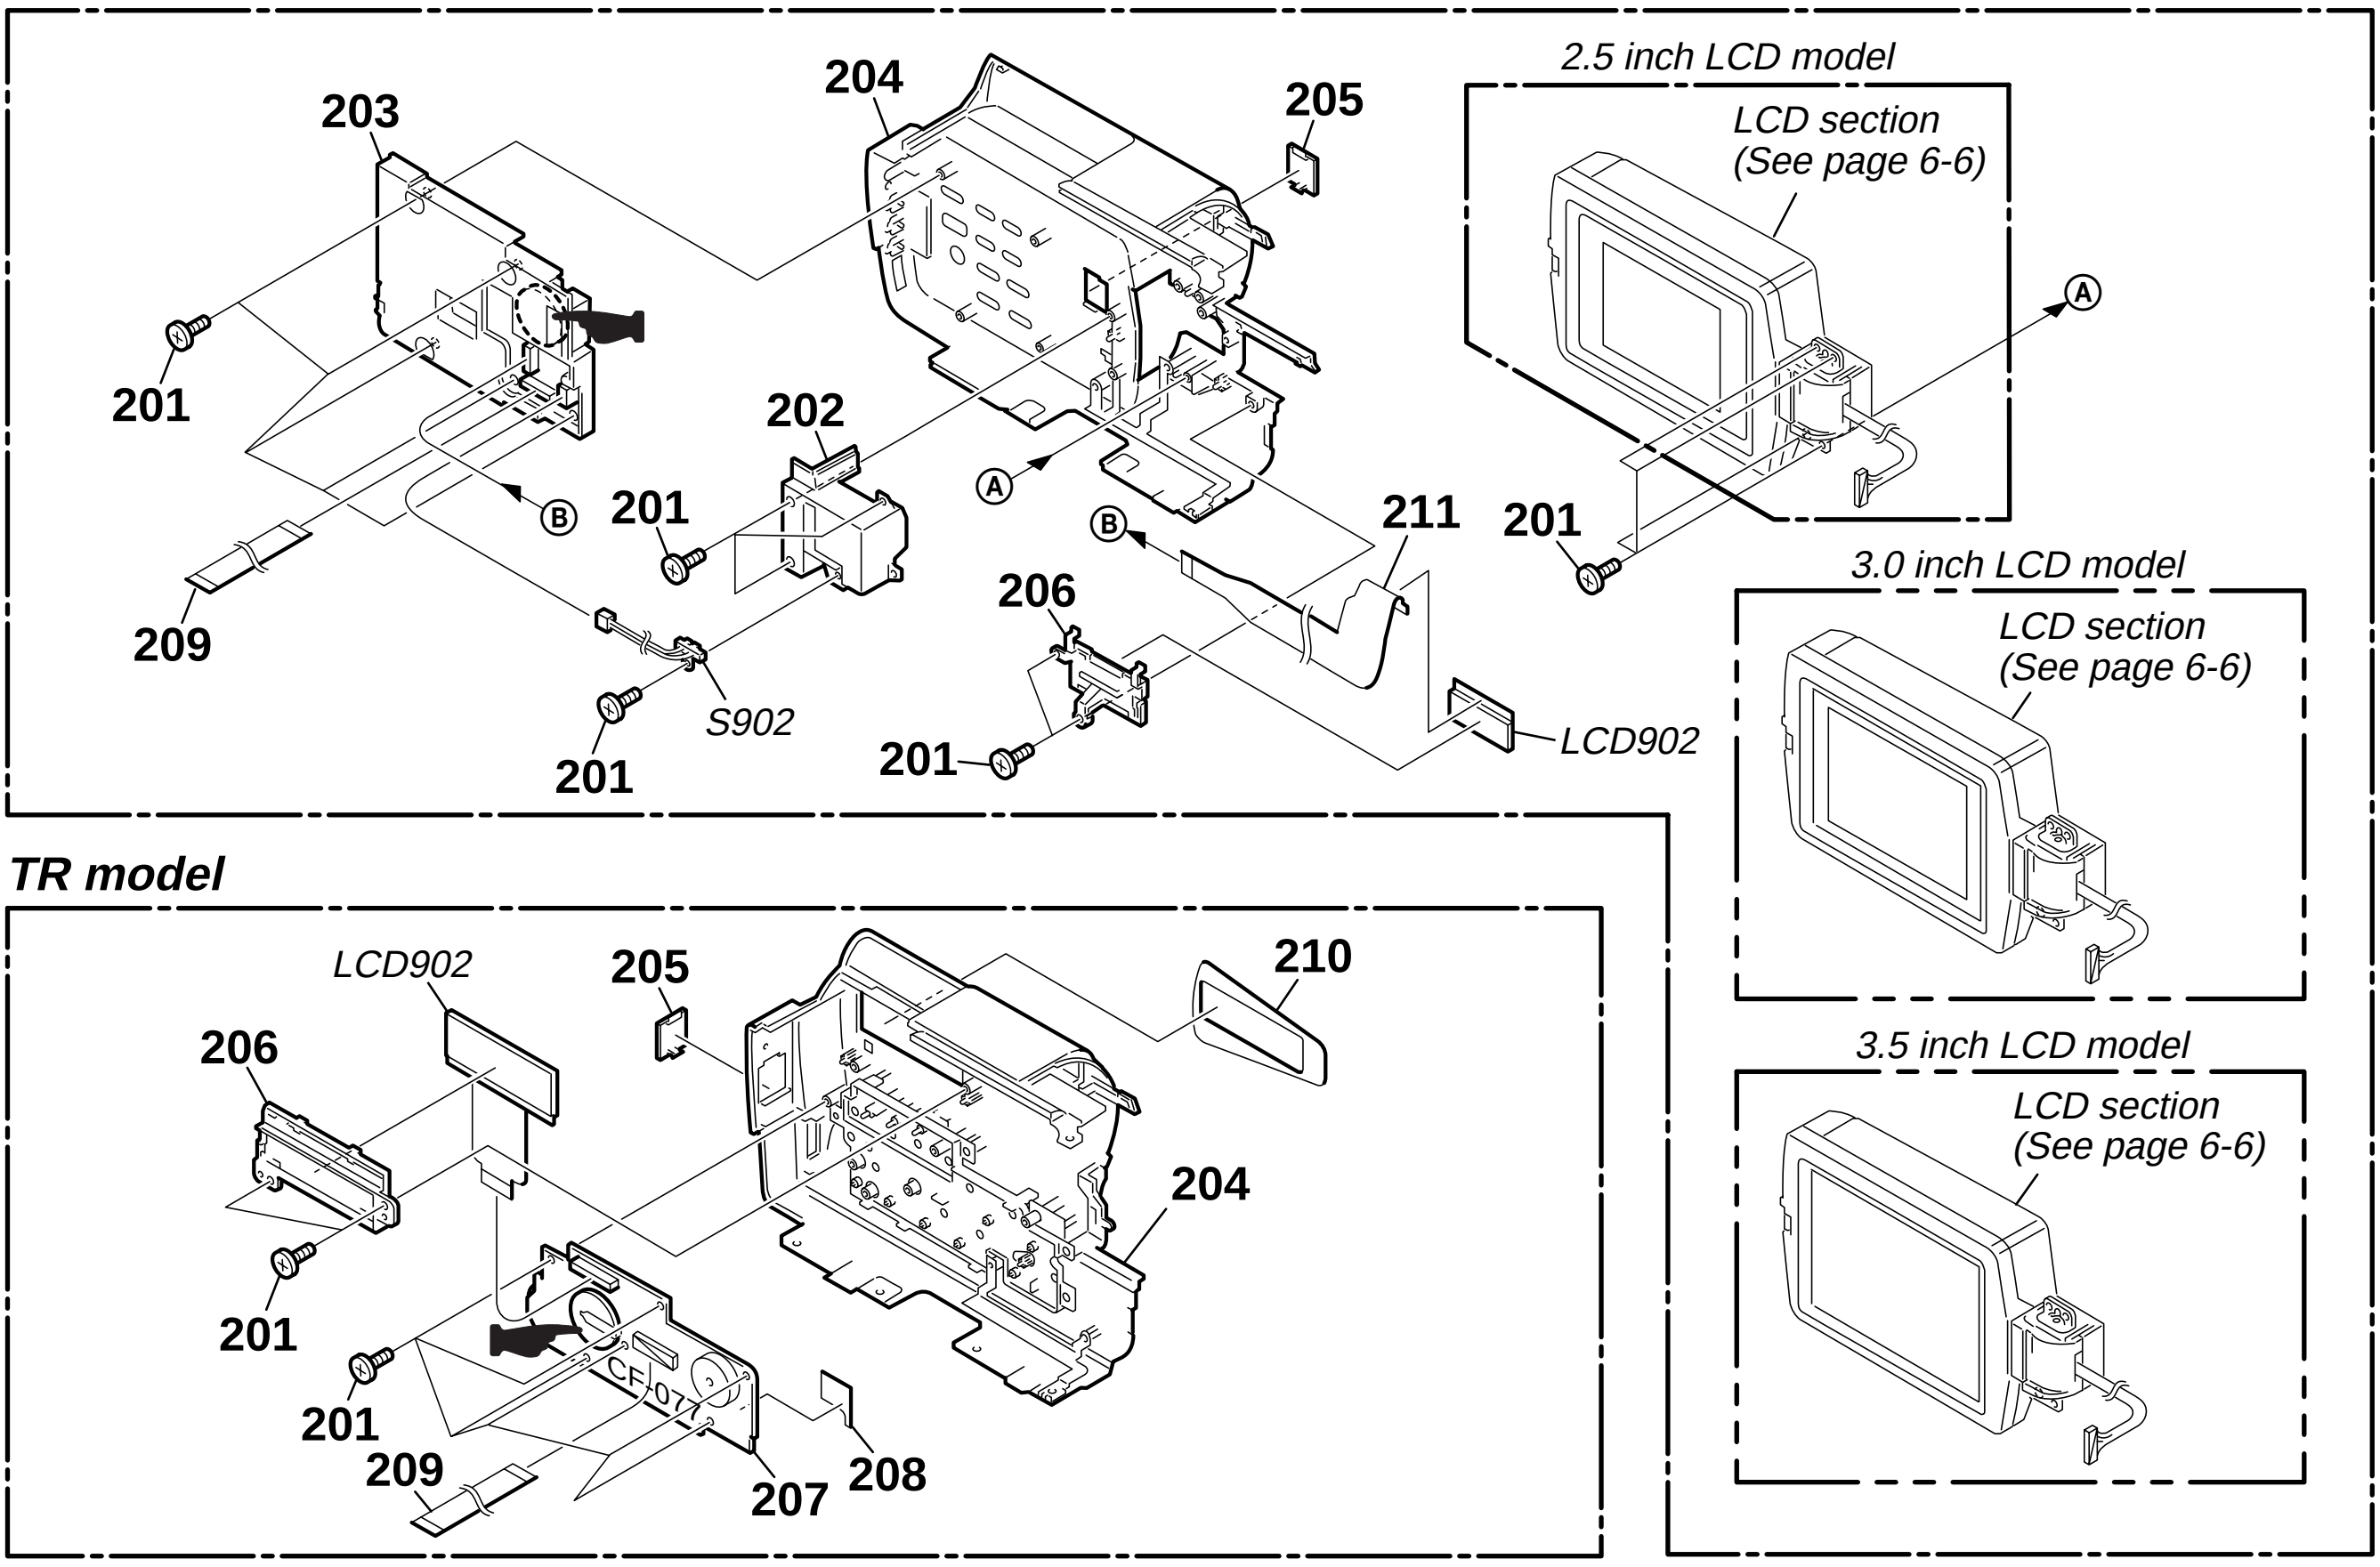
203
204
205
201
202
A
B
201
211
201
206
209
S902
201
201
LCD902
2.5 inch LCD model
LCD section
(See page 6-6)
A
3.0 inch LCD model
LCD section
(See page 6-6)
TR model
LCD902
205
210
206
204
201
201
CF-077
209
207
208
3.5 inch LCD model
LCD section
(See page 6-6)

☛ : BT001(Lithium battary) CF board on the mount position. (See page 4-36/TR model)
[In the TRV model, the printed wiring board of the control switch block (CF-1000) on which lithium battery is mounted, is not shown.]

*TR model :CCD-TR618/TR618E/TR718E/TR728E/TR818*
*TRV model :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E*
*2.5 inch LCD model :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E*
*3.0 inch LCD model :CCD-TRV88*
*3.5 inch LCD model :CCD-TRV98/TRV98E*

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| 201 | 3-948-339-61 | TAPPING | |
| 202 | 3-065-436-01 | BLIND (12), HINGE<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) | |
| 203 | 1-476-425-11 | SWITCH BLOCK, CONTROL (CF-1000)<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) | |
| 204 | X-3951-224-1 | CABINET R (12) ASSY<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) | |
| 204 | X-3951-226-1 | CABINET R (10) ASSY<br>(TR618/TR618E/TR718E/TR728E/TR818) | |
| 205 | 3-059-539-11 | LID(103P), CPC | |
| 206 | 3-065-451-01 | HOLDER (12), LCD<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) | |
| 206 | 3-065-452-01 | HOLDER (10), LCD<br>(TR618/TR618E/TR718E/TR728E/TR818) | |
| 207 | A-7074-663-A | CF-077 BOARD, COMPLETE<br>(TR618/TR618E/TR718E/TR728E/TR818) | |
| * 208 | 3-065-453-01 | SHEET (10), MUFFLE<br>(TR618/TR618E/TR718E/TR728E/TR818) | |
| 209 | 1-757-397-21 | CABLE, FLEXIBLE FLAT (FFC-295) | |
| 210 | 3-065-434-01 | WINDOW (10), LCD (TR818) | |
| 210 | 3-065-434-11 | WINDOW (10), LCD (TR728E) | |
| 210 | 3-065-434-21 | WINDOW (10), LCD (TR618) | |
| 210 | 3-065-434-31 | WINDOW (10), LCD (TR618E) | |
| 210 | 3-065-434-41 | WINDOW (10), LCD (TR718E) | |
| 211 | 1-680-201-11 | FP-260 FLEXIBLE BOARD<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) | |
| LCD902 | 1-803-844-91 | DISPLAY PANEL, LIQUID CRYSTAL<br>(TR618/TR618E/TR718E/TR728E/TR818) | |
| LCD902 | 1-804-255-11 | DISPLAY PANEL, LIQUID CRYSTAL<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) | |
| S902 | 1-771-848-11 | SWITCH, PUSH<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) | |

## 6-1-6. LCD SECTION (TRV MODEL)
## (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)

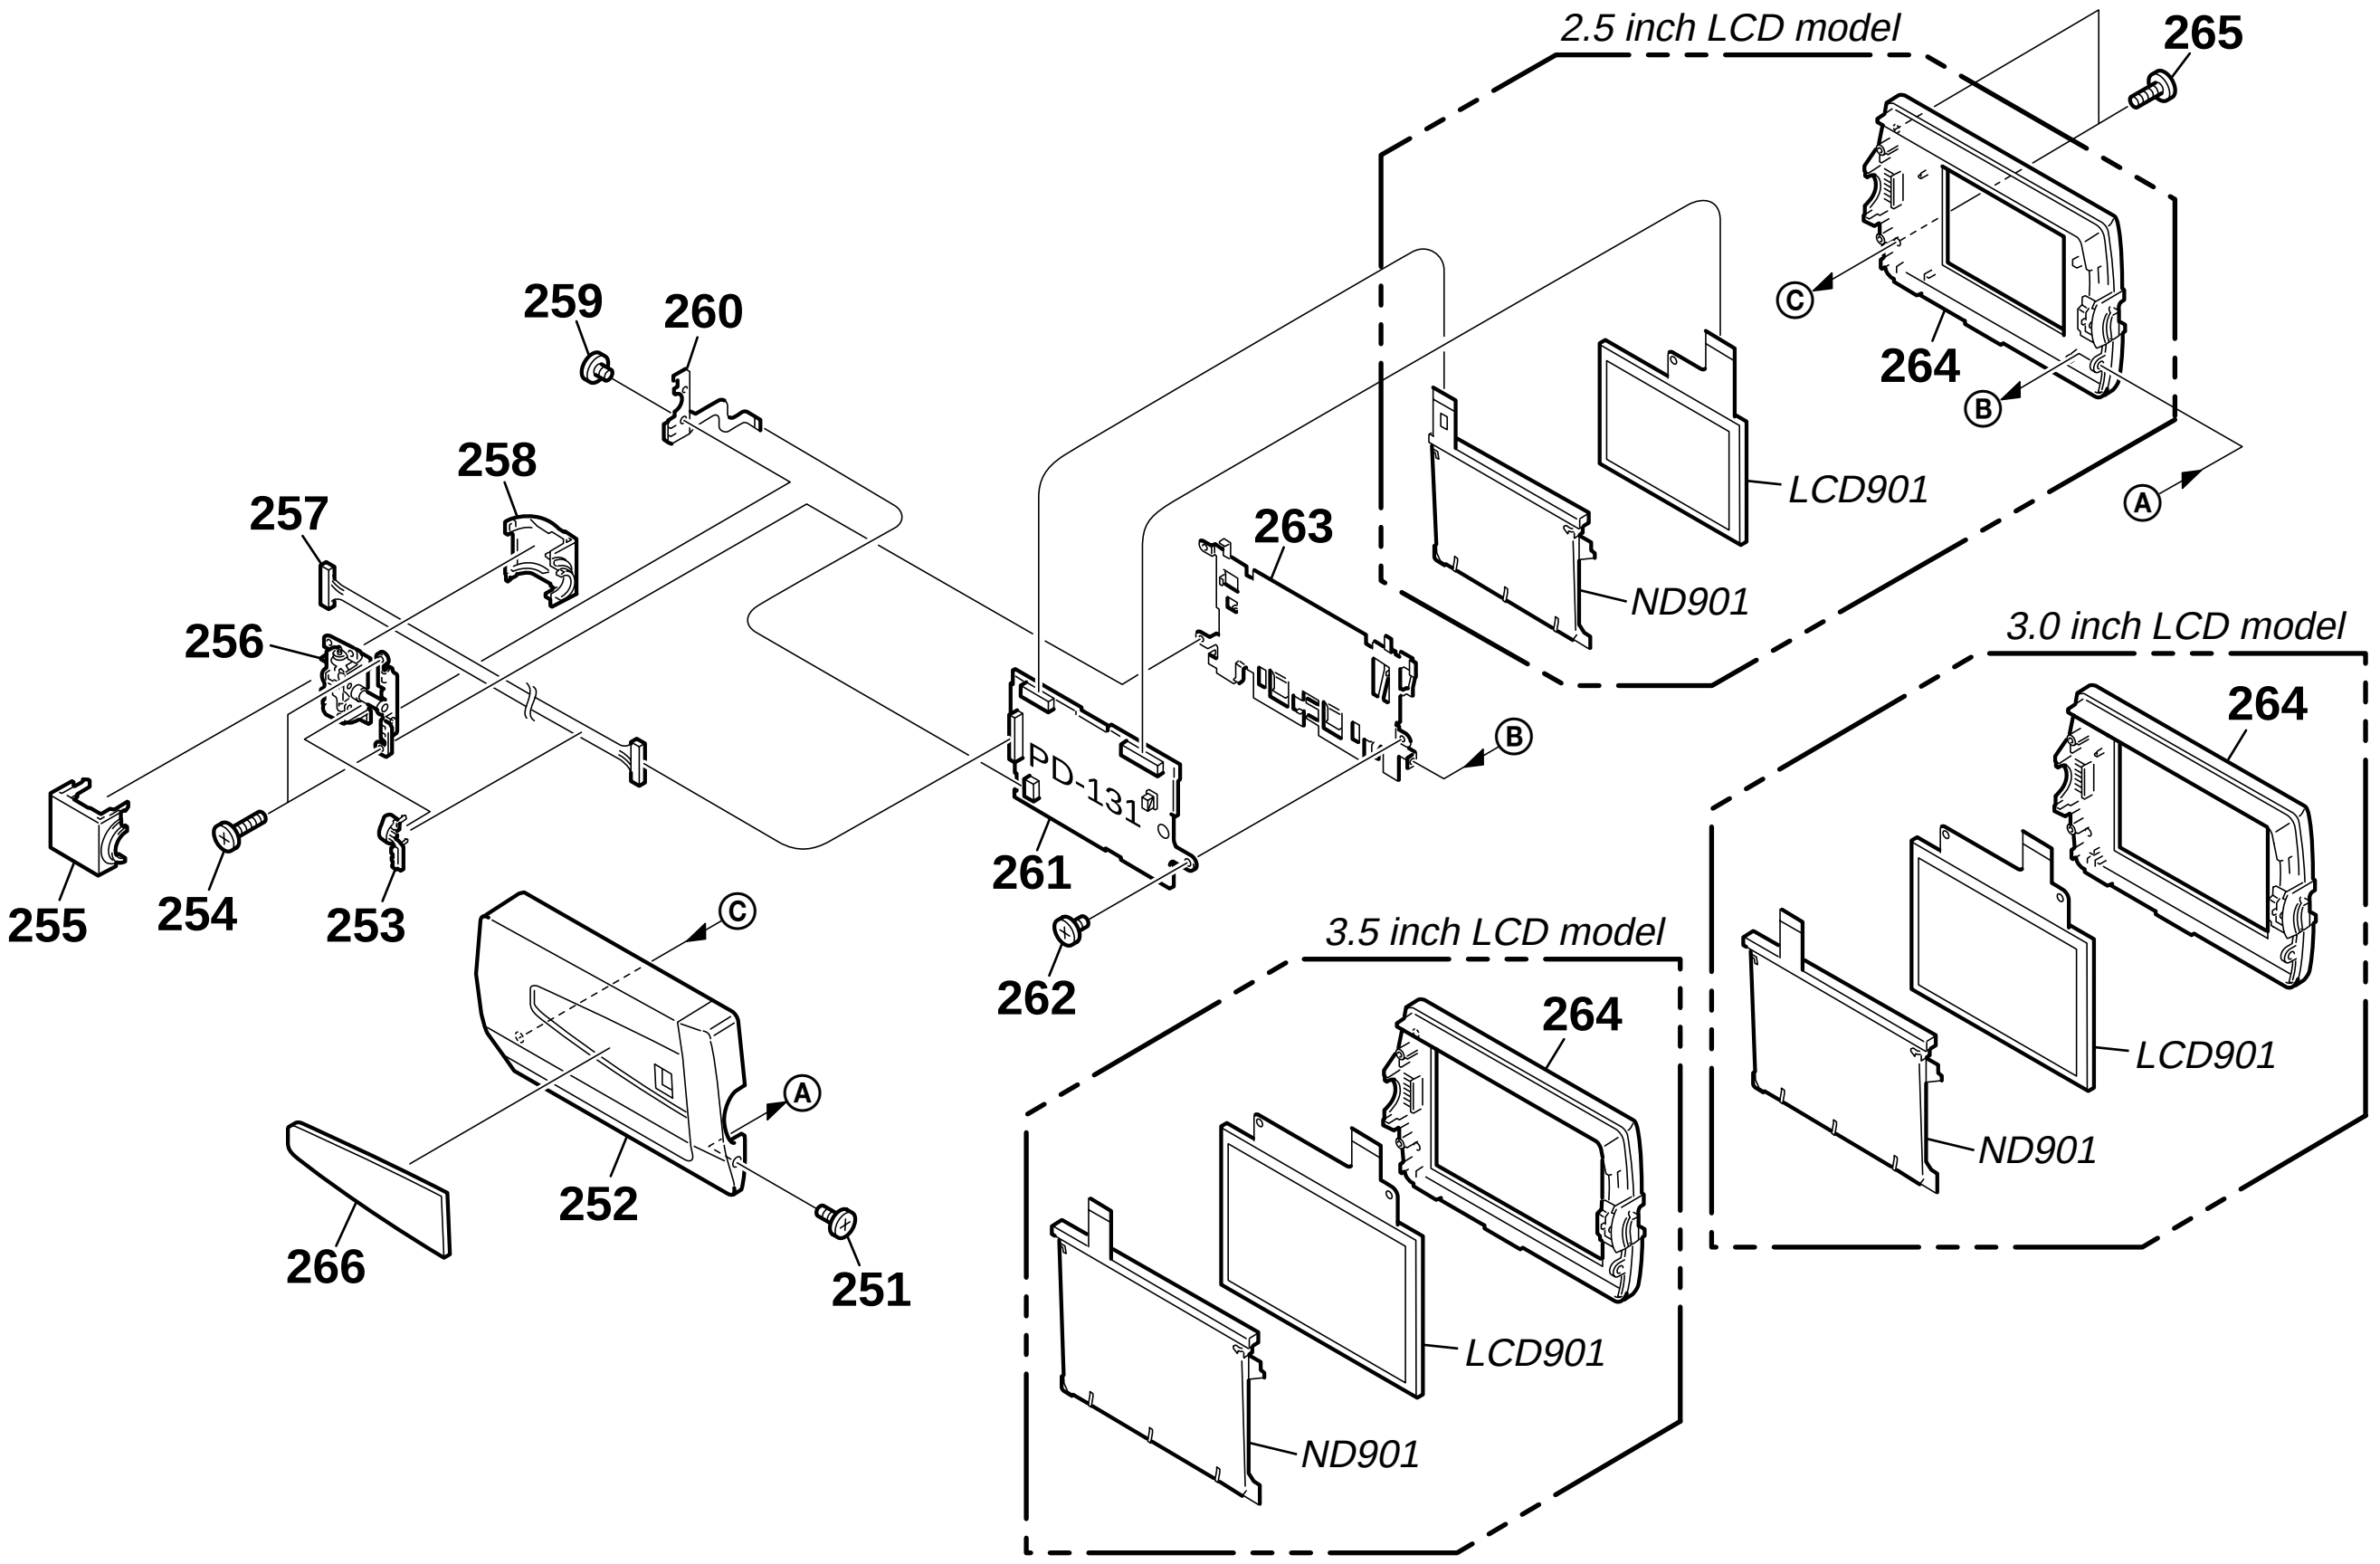

*2.5 inch LCD model :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E*
*3.0 inch LCD model :CCD-TRV88*
*3.5 inch LCD model :CCD-TRV98/TRV98E*

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| 251 | 3-067-347-01 | MI SCREW M2 (H) | |
| 252 | 3-065-474-11 | CABINET C (12), P | |
| * 253 | 3-058-672-01 | CLAMP, HARNESS | |
| 254 | 3-948-339-31 | SCREW, TAPPING | |
| 255 | 3-065-477-11 | COVER C (12), HINGE | |
| 256 | X-3951-206-1 | HINGE (12) ASSY | |
| 257 | 1-960-975-11 | HARNESS (PD-110) | |
| 258 | 3-065-478-01 | COVER M (12), HINGE | |
| 259 | 4-974-725-01 | SCREW (M1.7X2.5), P | |
| 260 | 1-418-802-11 | SWITCH BLOCK, CONTROL (PR-10000) | |
| 261 | A-7074-667-A | PD-131 (S-3.5) BOARD, COMPLETE (TRV98/TRV98E) | |
| 261 | A-7074-680-A | PD-131 (S-2.5) BOARD, COMPLETE (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E) | |
| 261 | A-7074-701-A | PD-131 (S-3.0) BOARD, COMPLETE (TRV88) | |
| 262 | 3-968-729-51 | SCREW (M2), LOCK ACE, P2 | |
| 263 | 3-065-475-01 | FRAME (12), PANEL (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E) | |
| * 263 | 3-065-475-11 | FRAME (12), PANEL (TRV88/TRV98/TRV98E) | |
| 264 | X-3951-199-1 | CABINET M (12) ASSY, P (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E) | |
| 264 | X-3951-200-1 | CABINET M (12) ASSY, P (TRV98/TRV98E) | |
| 264 | X-3951-201-1 | CABINET M (12) ASSY, P (TRV88) | |
| 265 | 3-948-339-81 | TAPPING | |
| 266 | 3-065-435-01 | PLATE (12), PANEL ORNAMENTAL (TRV98) | |
| 266 | 3-065-435-21 | PLATE (12), PANEL ORNAMENTAL (TRV88) | |
| 266 | 3-065-435-31 | PLATE (12), PANEL ORNAMENTAL (TRV78) | |
| 266 | 3-065-435-41 | PLATE (12), PANEL ORNAMENTAL (TRV59E) | |
| 266 | 3-065-435-51 | PLATE (12), PANEL ORNAMENTAL (TRV68) | |
| 266 | 3-065-435-61 | PLATE (12), PANEL ORNAMENTAL (TRV98E) | |
| 266 | 3-065-435-81 | PLATE (12), PANEL ORNAMENTAL (TRV78E) | |
| 266 | 3-065-529-21 | PLATE (12), PANEL ORNAMENTAL (TRV58) | |
| 266 | 3-065-529-31 | PLATE (12), PANEL ORNAMENTAL (TRV49) | |
| 266 | 3-065-529-41 | PLATE (12), PANEL ORNAMENTAL (TRV58E) | |
| 266 | 3-065-529-51 | PLATE (12), PANEL ORNAMENT (TRV49E) | |
| LCD901 | 1-803-852-31 | INDICATOR MODULE LIQUID CRYSTAL (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E) | |
| LCD901 | 1-803-854-21 | INDICATOR MODULE LIQUID CRYSTAL(TRV88) | |
| LCD901 | 1-803-855-21 | INDICATOR MODULE LIQUID CRYSTAL (TRV98/TRV98E) | |
| ⚠ND901 | 1-517-752-41 | TUBE, FLUORESCENT,COLD CATHODE (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E) | |
| ⚠ND901 | 1-517-855-31 | TUBE, FLUORESCENT,COLD CATHODE (TRV98/TRV98E) | |
| ⚠ND901 | 1-517-856-31 | TUBE, FLUORESCENT,COLD CATHODE (TRV88) | |

| Note : | Note : |
|---|---|
| The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.<br>Replace only with part number specified. | Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.<br>Ne les remplacer que par une pièce portant le numéro spécifié. |

## 6-1-7. LENS SECTION

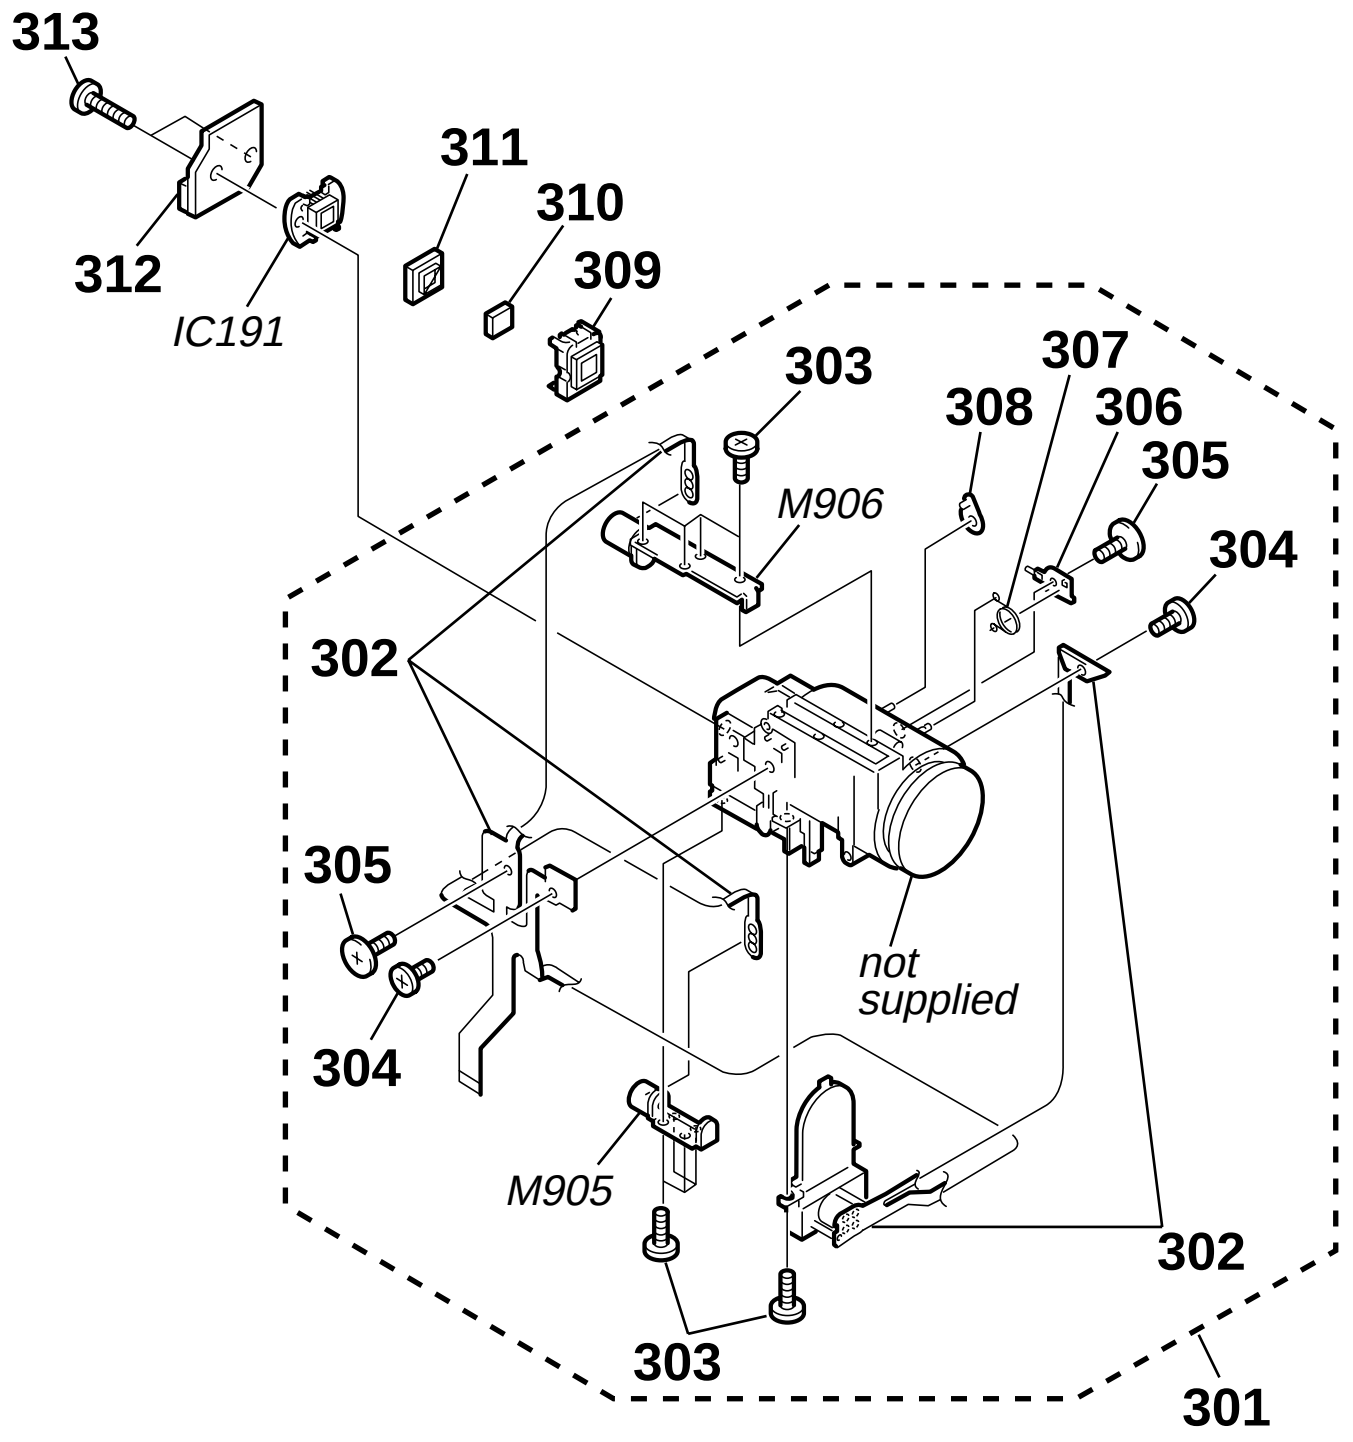

Be sure to read “Precautions upon replacing CCD imager” on page 4-8 when changing the CCD imager.

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| 301 | 8-848-729-01 | DEVICE, LENS LSV-630A | |
| 302 | X-3949-355-2 | FLEXIBLE ASSY (630), IRIS | |
| 303 | 3-713-791-41 | SCREW (M1.7X5), TAPPING, P2 | |
| 304 | 3-713-791-51 | SCREW (M1.7X3.5), TAPPING, P2 | |
| 305 | 3-056-022-01 | TAPPING (B1.7X3.5), HEAD | |
| 306 | 3-053-827-01 | LEVER, IR | |
| 307 | 3-053-800-01 | SPRING, RETURN | |
| 308 | 3-053-799-01 | GEA, IR | |
| 309 | 3-978-981-11 | ADAPTOR (FK), CCD FITTING | |
| 310 | 1-758-084-21 | FILTER BLOCK, OPTICAL | (TR618/TR618E/TR718E/TR728E/TRV49/ TRV49E/TRV58/TRV58E/TRV59E) |
| 310 | 1-758-133-21 | FILTER BLOCK, OPTICAL | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| 311 | 3-953-817-01 | RUBBER (F), SEAL | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| 311 | 3-968-054-11 | RUBBER (FM), SHIELD | (TR618/TR618E/TR718E/TR728E/TRV49/ TRV49E/TRV58/TRV58E/TRV59E) |
| 312 | A-7074-658-A | CD-286 BOARD, COMPLETE | (TR618/TR618E/TR718E/TR728E) |
| 312 | A-7074-662-A | CD-286 (MM) BOARD, COMPLETE (TR818) | |
| 312 | A-7074-666-A | CD-281 (MM) BOARD, COMPLETE | (TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| 312 | A-7074-698-A | CD-281 BOARD, COMPLETE | (TRV49/TRV49E/TRV58/TRV58E/TRV59E) |
| 313 | 3-318-203-11 | SCREW (B1.7X6), TAPPING | |
| IC191 | A-7031-040-A | CCD BLOCK ASSY (TR618/TRV49/TRV58) | |
| IC191 | A-7031-043-A | CCD BLOCK ASSY | (TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E) |
| IC191 | A-7031-049-A | CCD BLOCK ASSY (TRV78E/TRV98E) | |
| IC191 | A-7031-207-A | CCD BLOCK ASSY | (TR818/TRV68/TRV78/TRV88/TRV98) |
| M905 | 1-763-262-11 | MOTOR, STEPPING F630 (FOCUS) | |
| M906 | 1-763-046-21 | MOTOR, STEPPING Z600 (ZOOM) | |

## 6-1-8. CASSETTE COMPARTMENT ASSEMBLY

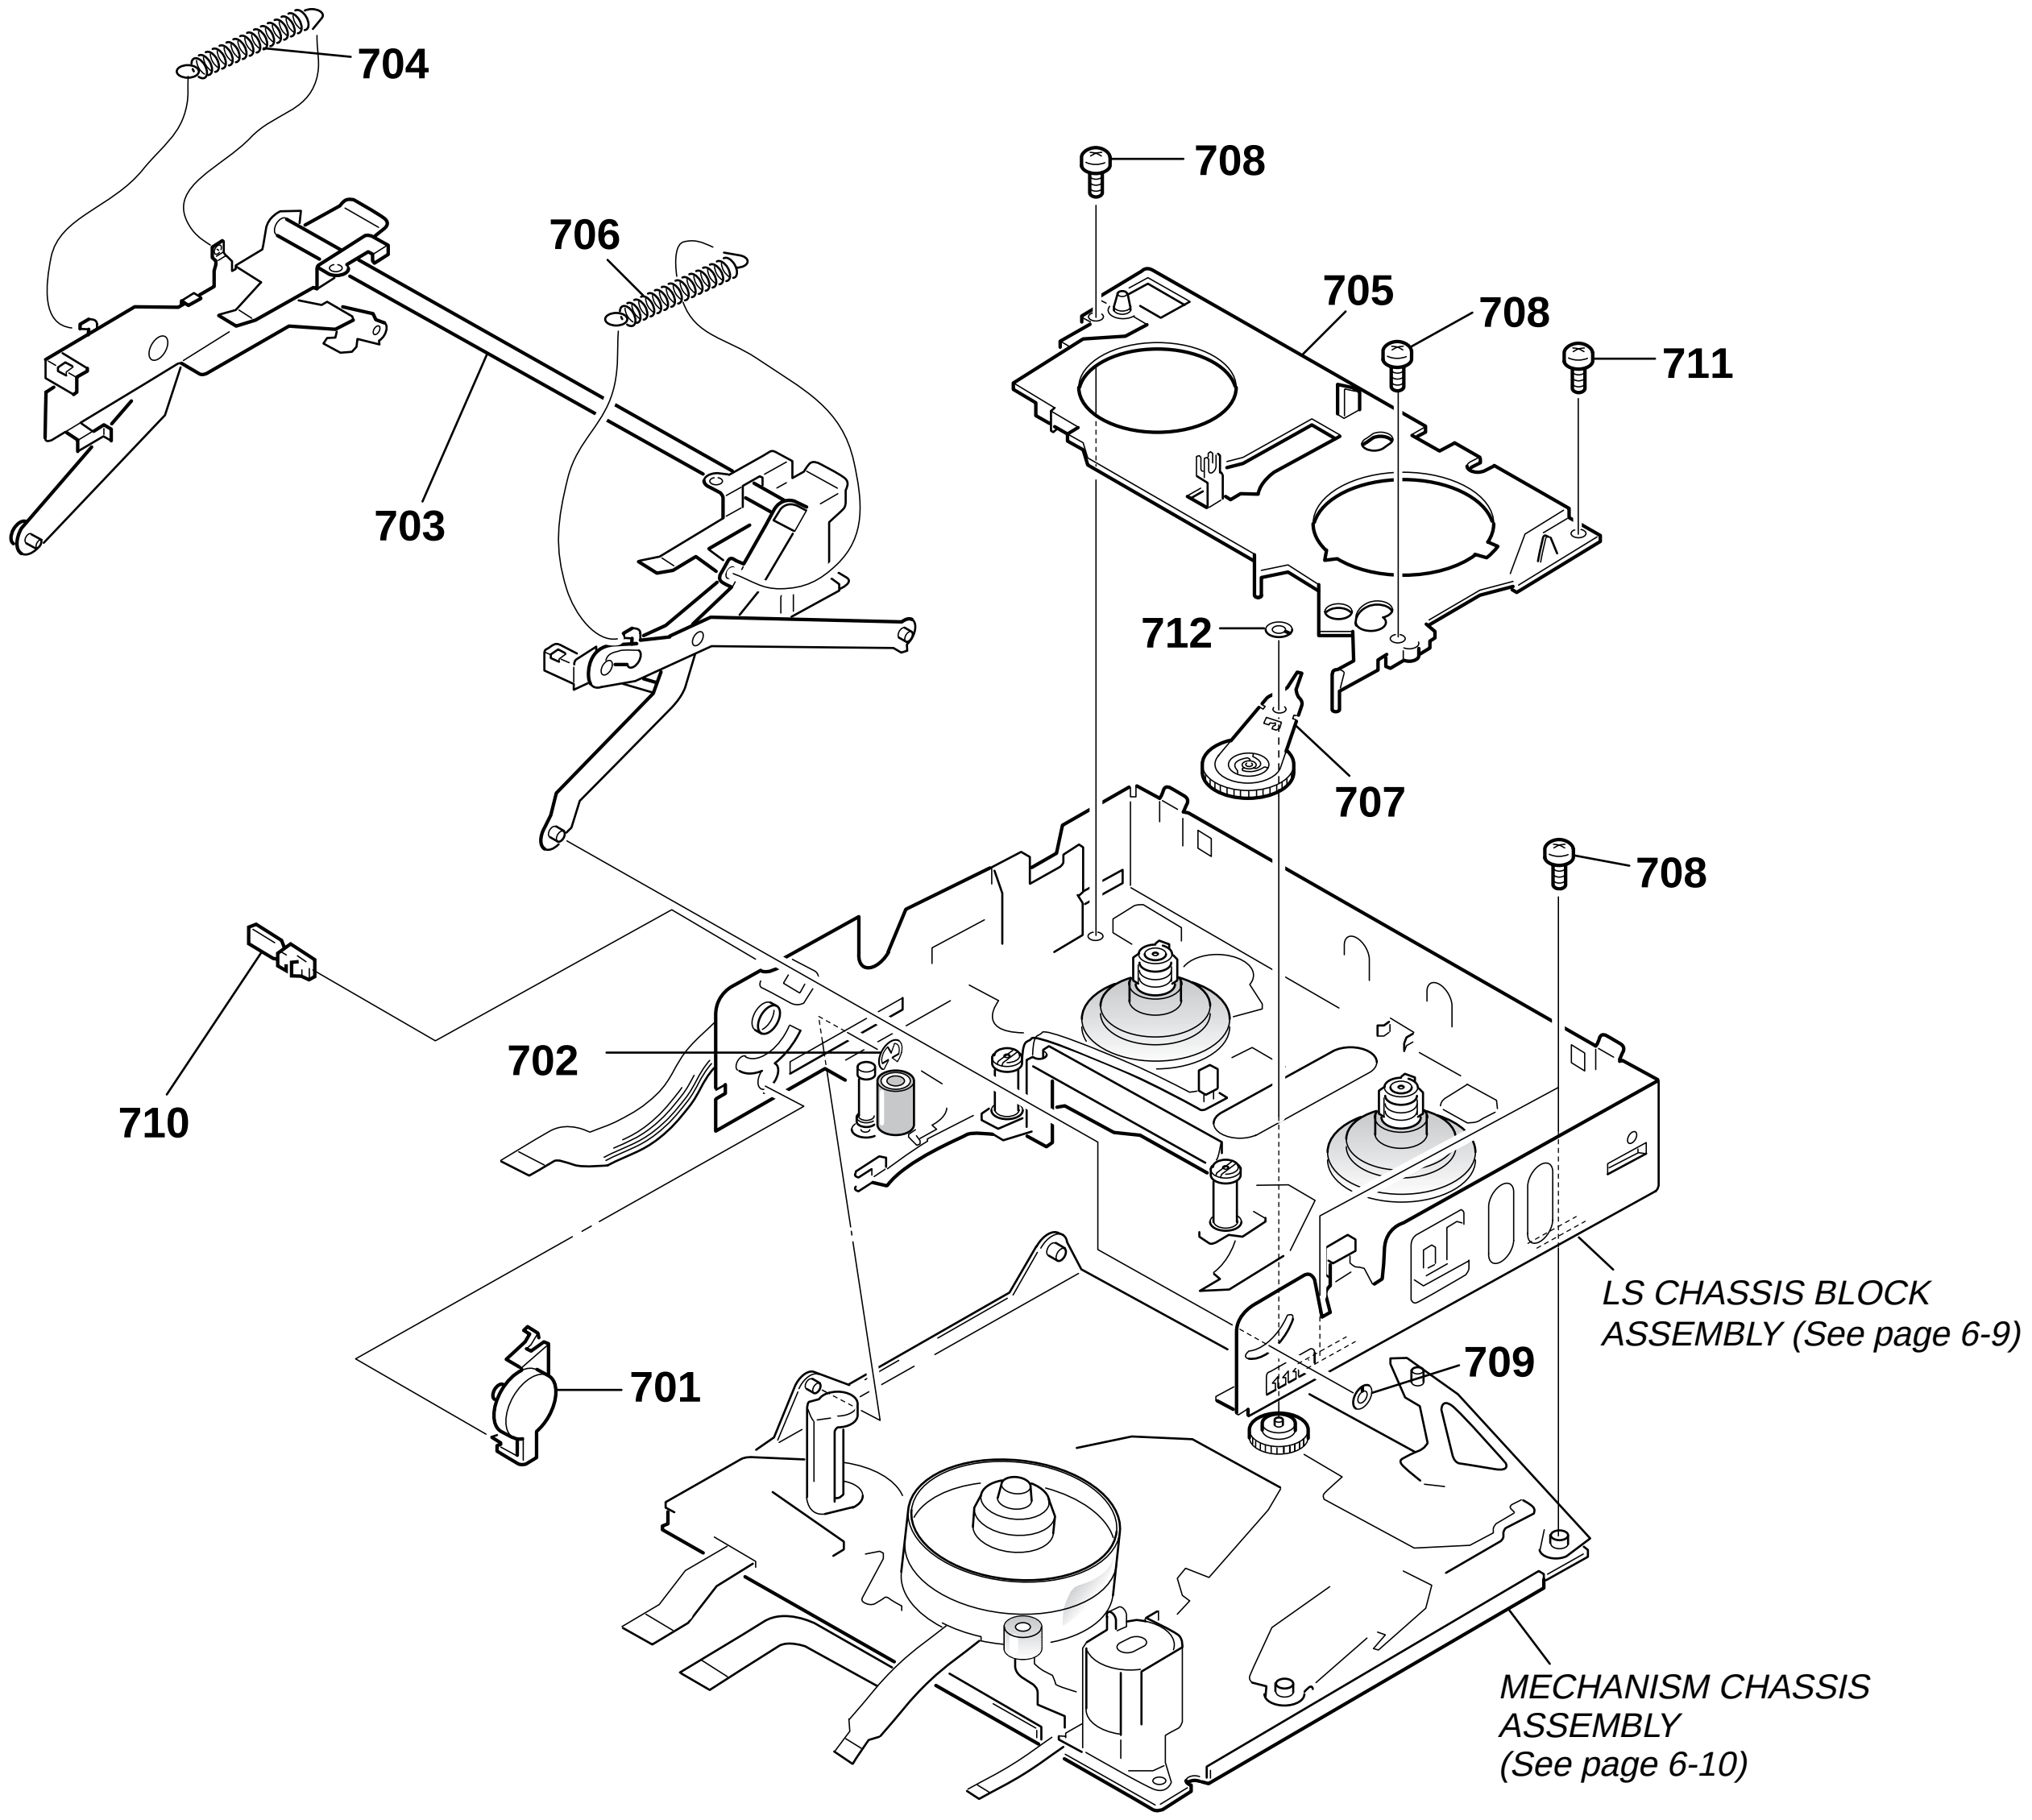
704
708
706
705
708
711
703
712
707
708
710
702
701
709
LS CHASSIS BLOCK ASSEMBLY (See page 6-9)
MECHANISM CHASSIS ASSEMBLY (See page 6-10)

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| 701 | A-7040-421-A | DAMPER ASSY | |
| 702 | 7-624-102-04 | STOP RING 1.5, TYPE -E | |
| 703 | X-3949-153-2 | CASSETTE COMPARTMENT ASSY | |
| 704 | 3-965-587-03 | SPRING(POWER TENSION),TENSION | |
| 705 | 3-989-479-01 | RETAINER (2), GOOSENECK | |
| 706 | 3-973-268-01 | SPRING(POWER TENSION),TENSION | |
| 707 | X-3945-399-1 | GEAR ASSY, GOOSENECK | |
| 708 | 3-947-503-01 | SCREW (M1.4) | |
| 709 | 3-979-686-01 | WASHER, STOPPER | |
| 710 | 3-971-076-01 | FASTENER, D | |
| 711 | 3-976-055-01 | SCREW (M1.4X1) | |
| 712 | 3-331-007-21 | WASHER | |

## 6-1-9. LS CHASSIS BLOCK ASSEMBLY

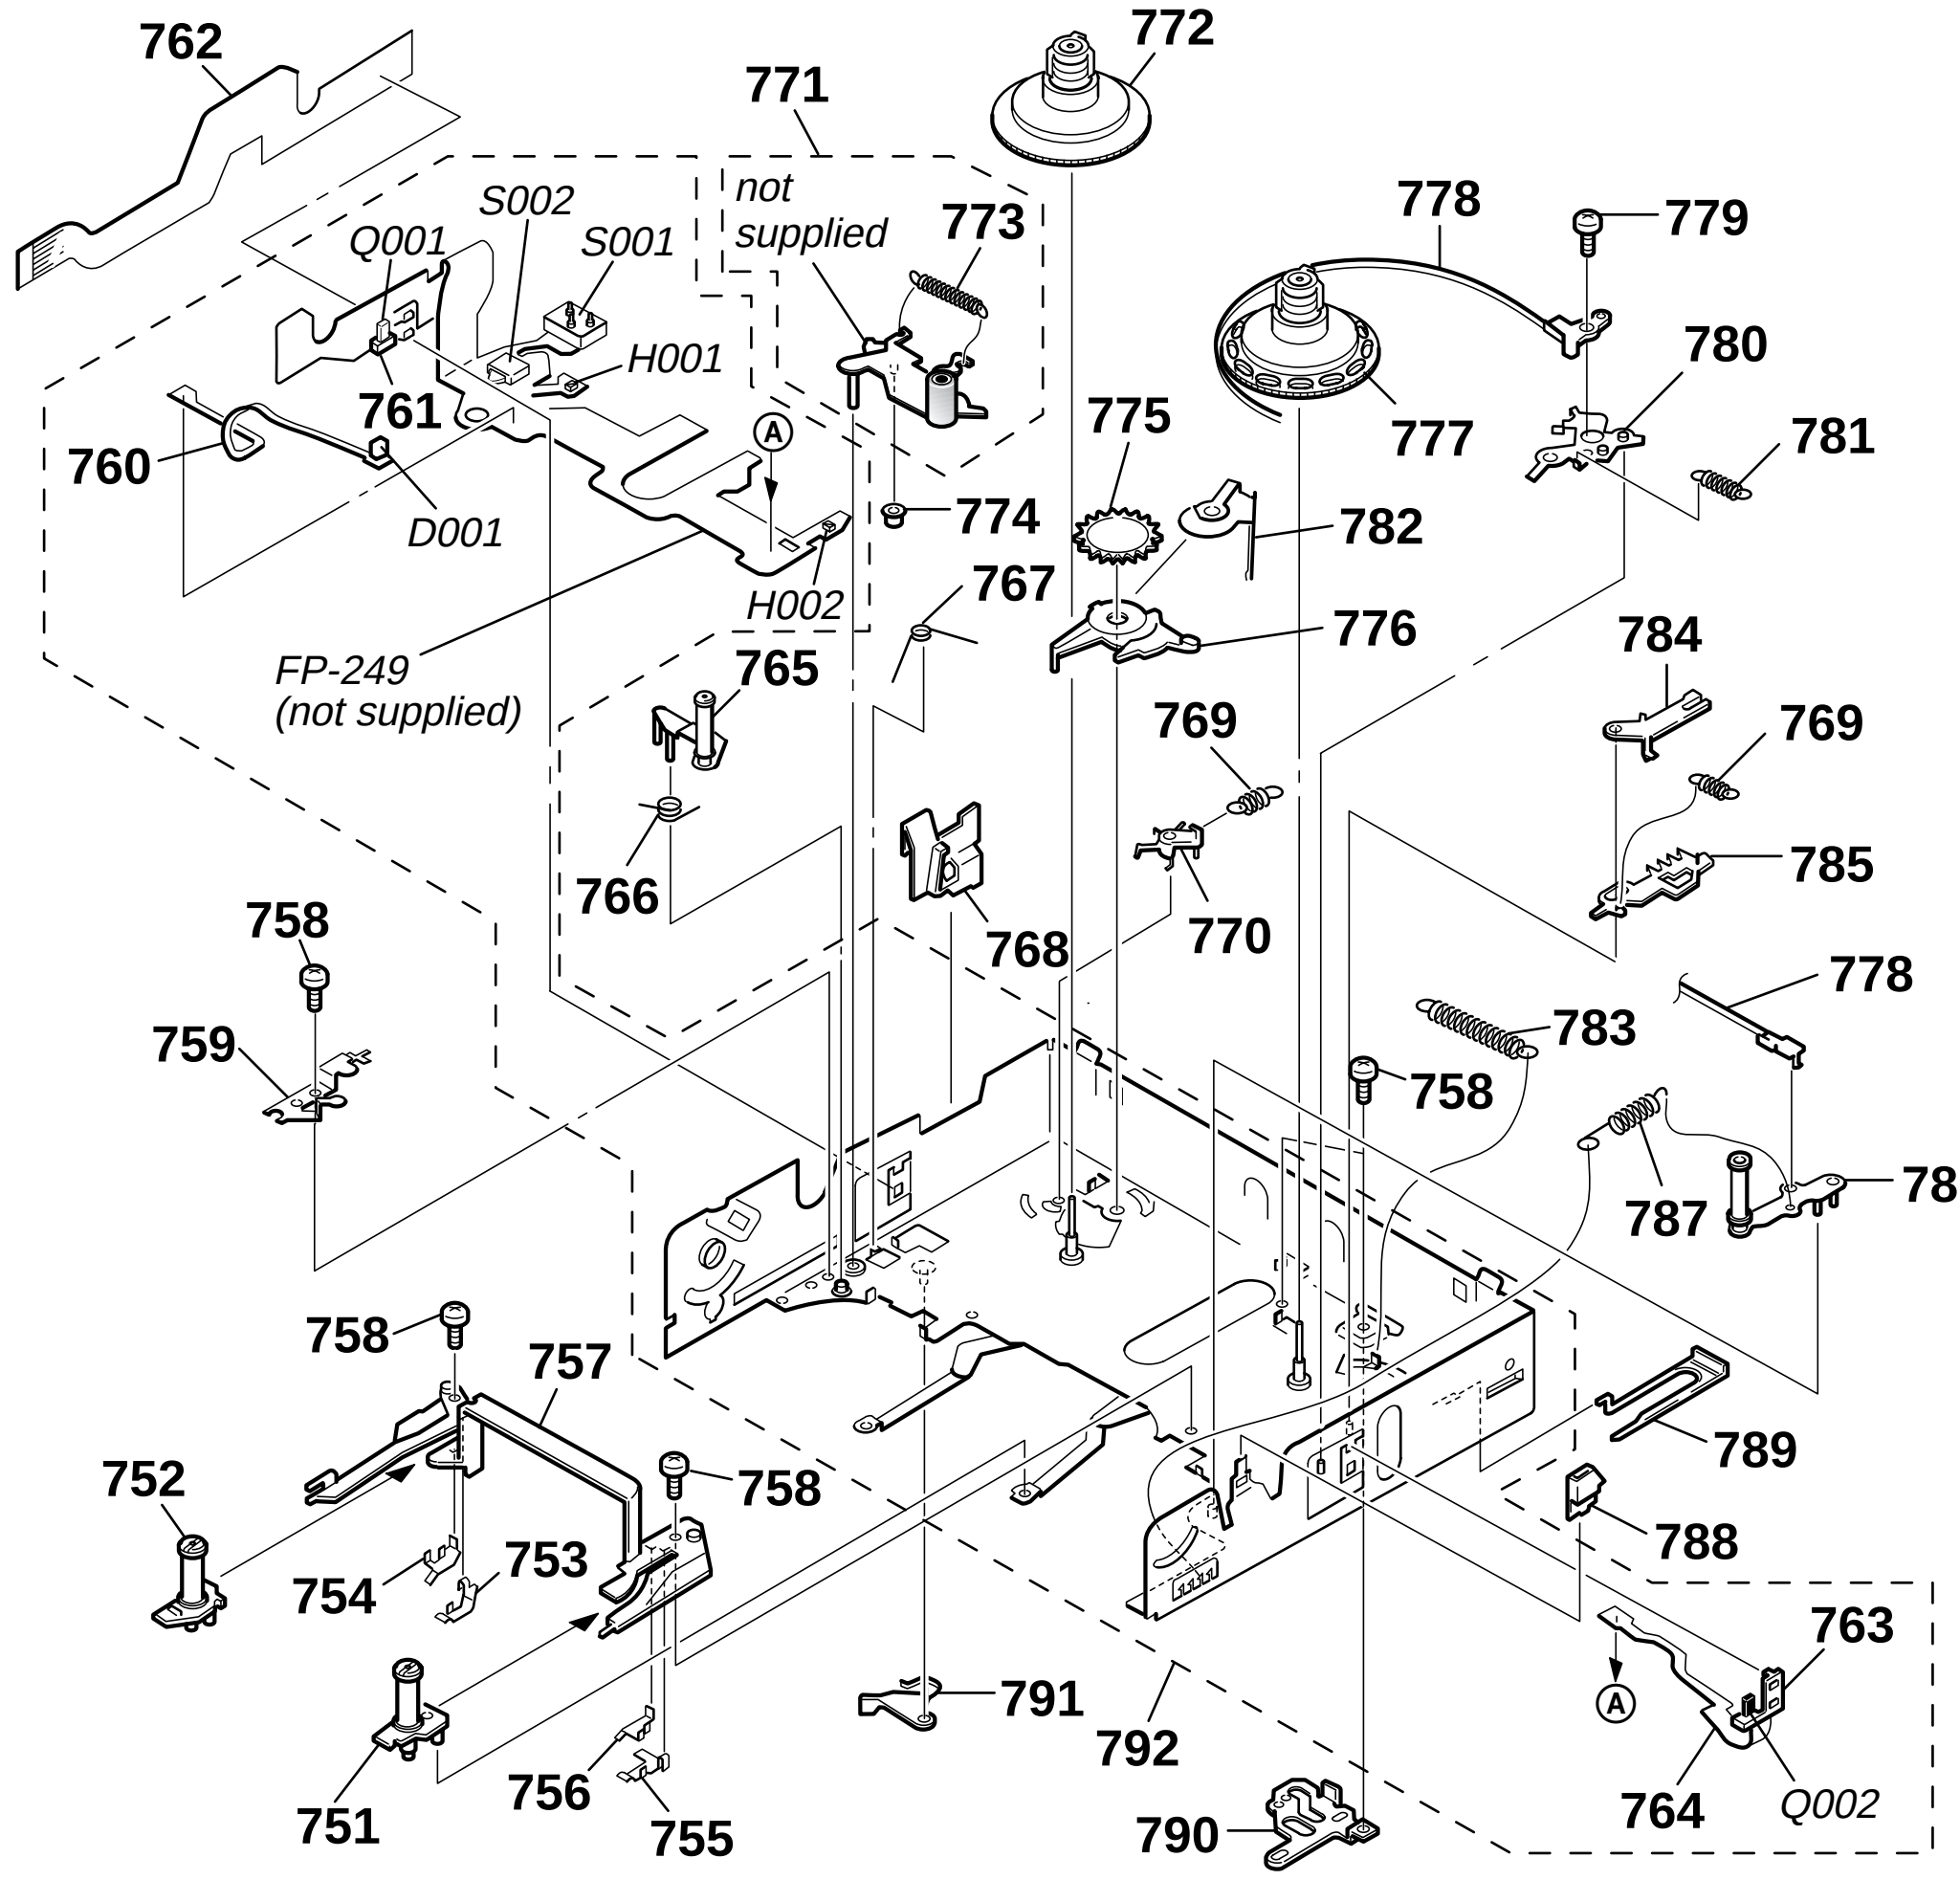
762
771
772
not supplied
773
778
779
S002
Q001
S001
H001
780
761
760
D001
A
775
777
781
774
782
H002
767
776
FP-249
(not supplied)
765
784
769
769
785
766
768
770
758
778
783
759
758
786
787
758
757
752
758
789
753
754
788
763
A
791
792
751
756
755
790
764
Q002

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| 751 | A-7040-419-A | BASE (S) BLOCK ASSY, GUIDE | |
| 752 | A-7040-418-B | BASE (T) BLOCK ASSY, GUIDE | |
| 753 | 3-965-559-01 | STOPPER (T) | |
| 754 | 3-965-557-01 | STOPPER (T), GB | |
| 755 | 3-965-558-01 | STOPPER (S) | |
| 756 | 3-965-556-01 | STOPPER (S), GB | |
| 757 | 3-965-553-01 | RAIL, GUIDE | |
| 758 | 3-947-503-01 | SCREW (M1.4) | |
| 759 | 3-965-573-01 | RETAINER, TG4 | |
| 760 | 1-658-213-11 | FP-355 FLEXIBLE BOARD | |
| 761 | 3-965-552-01 | HOLDER, SENSOR (T) | |
| 762 | 1-657-786-13 | FP-221 FLEXIBLE PRINT BOARD | |
| 763 | 3-965-551-01 | HOLDER, SENSOR (S) | |
| 764 | 1-658-214-11 | FP-356 FLEXIBLE BOARD | |
| 765 | A-7040-417-A | ARM BLOCK ASSY, TG4 | |
| 766 | 3-965-574-01 | SPRING (RETURN, TG4), TORSION | |
| 767 | 3-965-575-01 | SPRING (PINCH), TORSION | |
| 768 | 3-965-568-11 | GUIDE, LOCK | |
| 769 | 3-965-562-01 | SPRING (RATCHET), TENSION | |
| 770 | 3-965-581-03 | RATCHET, T | |
| 771 | X-3949-380-1 | ARM ASSY (E), PINCH | |
| 772 | X-3945-398-6 | DECK ASSY, REEL, T | |
| 773 | 3-965-648-01 | SPRING (PINCH), TENSION | |
| 774 | 3-965-579-01 | ROLLER, PINCH PRESS | |
| 775 | 3-965-563-01 | GEAR, T SOFT | |
| 776 | 3-965-565-01 | CLAW, T SOFT | |
| 777 | X-3945-397-4 | DECK ASSY, REEL, S | |
| 778 | X-3945-396-1 | BAND ASSY, TENSION REGULATOR | |
| 779 | 3-945-756-01 | SCREW (M1.4X3) | |
| 780 | 3-965-583-01 | ARM, RVS | |
| 781 | 3-965-580-01 | SPRING (ARM, RVS), TENSION | |
| 782 | 3-966-384-01 | SPRING, T SOFT | |
| 783 | 3-965-578-01 | SPRING, TENSION COIL | |
| 784 | 3-965-560-01 | RATCHET, S | |
| 785 | 3-965-561-01 | PLATE, RELEASE, S RATCHET | |
| 786 | X-3945-395-1 | ARM ASSY, TG1 | |
| 787 | 3-965-576-01 | SPRING (TG1), TENSION | |
| 788 | 3-965-567-01 | LID OPEN | |
| 789 | 3-965-566-01 | COVER, LS GUIDE | |
| * 790 | 3-965-577-01 | PLATE, CAM, LS | |
| 791 | 3-965-569-01 | ARM, EJ | |
| 792 | A-7018-245-B | CHASSIS (S1) ASSY, LS | |
| D001 | 8-719-988-42 | DIODE GL453 (TAPE LED) | |
| H001 | 8-719-033-37 | ELEMENT, HALL HW-105C (T REEL SENSOR) | |
| H002 | 8-719-033-37 | ELEMENT, HALL HW-105C (S REEL SENSOR) | |
| Q001 | 8-729-907-25 | PHOTO TRANSISTOR PT4850F (TAPE TOP) | |
| Q002 | 8-729-907-25 | PHOTO TRANSISTOR PT4850F (TAPE END) | |
| S001 | 1-692-614-11 | SWITCH, PUSH (3KEY) (Hi8 MP, ME/MP, REC PROOF) | |
| S002 | 1-572-688-11 | SWITCH, PUSH (1KEY) (C.C.LOCK) | |

## 6-1-10. MECHANISM CHASSIS ASSEMBLY

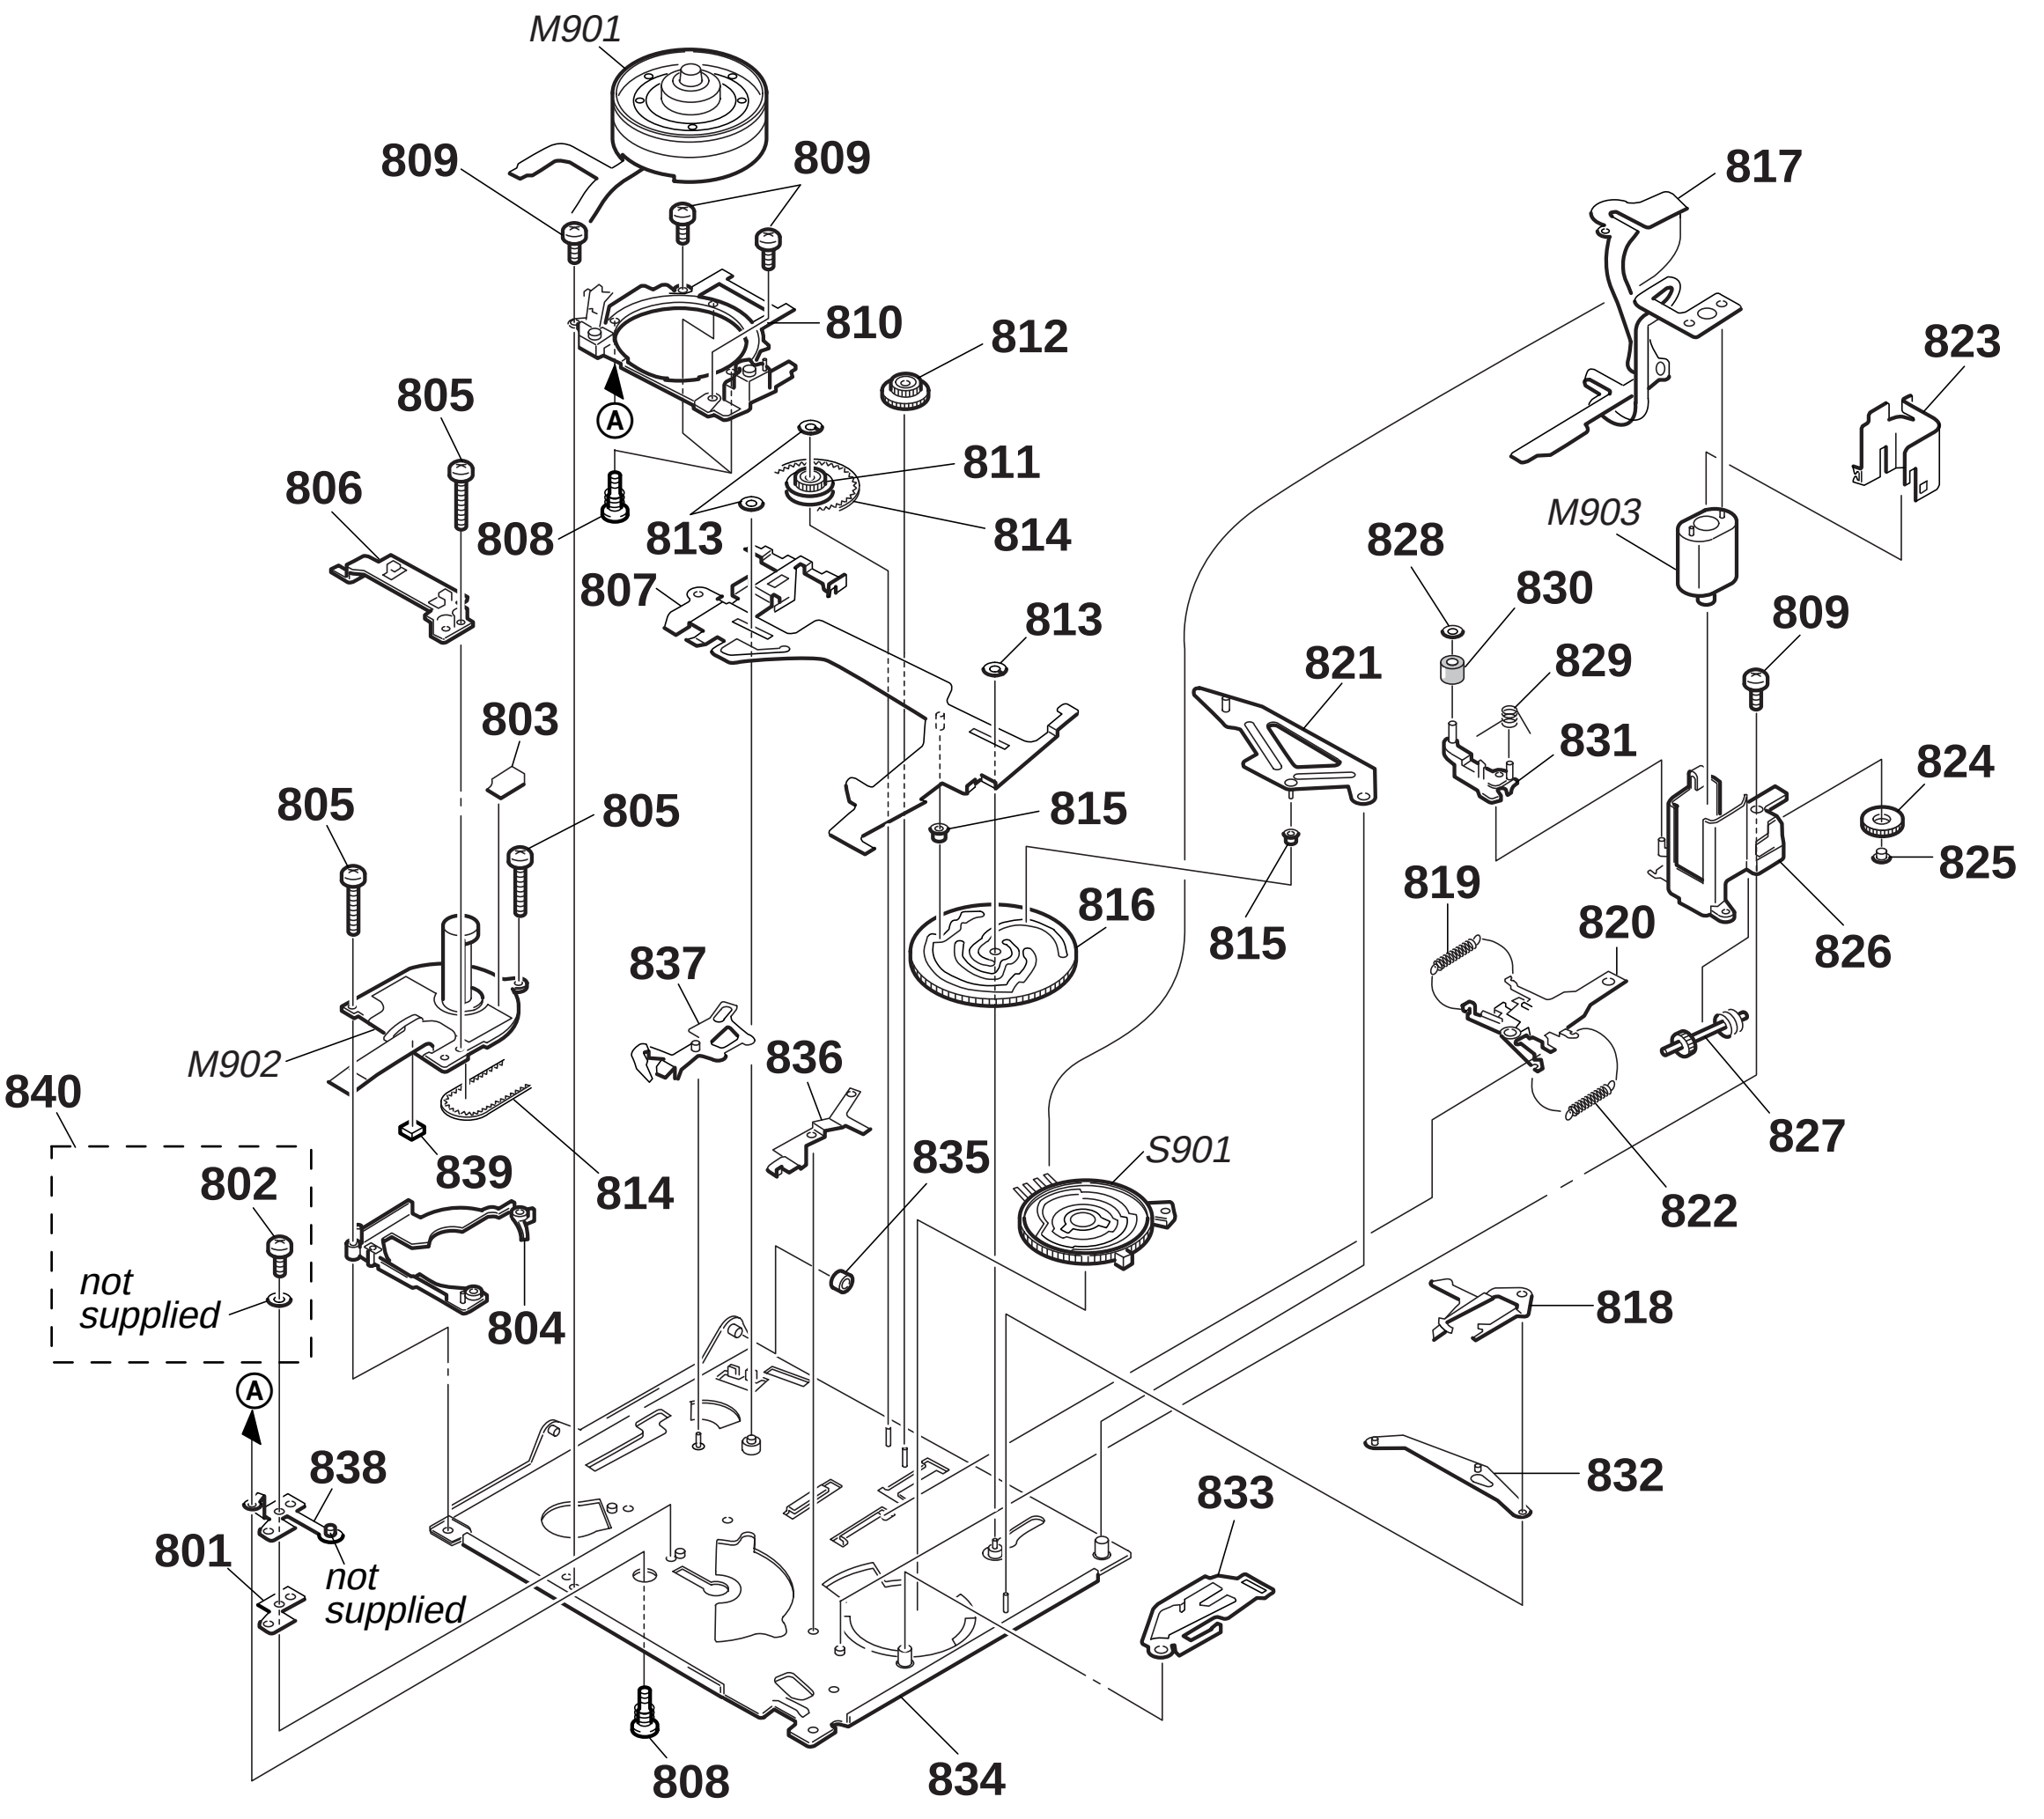
M901
809
809
817
810
812
823
805
Ⓐ
811
806
808
813
814
828
M903
807
813
830
809
821
829
803
831
824
805
805
815
825
819
816
820
826
815
837
M902
836
840
827
835
S901
802
839
814
822
not supplied
804
818
Ⓐ
838
833
832
801
not supplied
808
834

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| 801 | 3-975-900-03 | SPACER, GROUND | |
| 802 | 3-965-550-02 | SCREW (M1.7X1.6) | |
| 803 | 1-657-785-11 | FP-248 FLEXIBLE BOARD | |
| 804 | 3-054-404-01 | SPACER, CAPSTAN | |
| 805 | 3-965-549-01 | SCREW (M1.4 X 6.5) | |
| 806 | 3-966-349-01 | HOLDER, FLEXIBLE | |
| 807 | 3-971-644-02 | SLIDER (2), M | |
| 808 | X-3947-895-1 | SCREW ASSY, DRUM ATTACHED | |
| 809 | 3-947-503-01 | SCREW (M1.4) | |
| 810 | A-7096-321-A | DRUM BASE BLOCK ASSY (BA) | |
| 811 | 3-965-527-01 | GEAR, CHANGE | |
| 812 | 3-965-544-01 | GEAR, RELAY | |
| 813 | 3-331-007-21 | WASHER | |
| 814 | 3-965-546-01 | BELT, TIMING | |
| 815 | 3-965-533-01 | ROLLER, LS | |
| 816 | 3-965-528-01 | GEAR, CAM | |
| 817 | 1-657-784-11 | FP-220 FLEXIBLE BOARD | |
| 818 | 3-965-529-01 | PLATE, REGULATOR, TENSION | |
| 819 | 3-965-536-01 | SPRING (LIMITTER ARM T), COIL | |
| 820 | X-3945-388-1 | SLIDER ASSY, GL | |
| 821 | 3-965-532-21 | ARM, LS | |
| 822 | 3-965-535-01 | SPRING (LIMITTER ARM S), COIL | |
| 823 | 3-965-542-01 | SHIELD, MOTOR | |
| 824 | 3-965-539-01 | GEAR (A) | |
| 825 | 3-965-538-01 | SLEEVE, MOTOR HOLDER | |
| 826 | 3-965-540-01 | HOLDER, MOTOR | |
| 827 | 3-965-541-01 | SHAFT, WORM | |
| 828 | 3-321-393-01 | WASHER, STOPPER | |
| 829 | 3-965-724-01 | SPRING (RETURN, HC), TORSION | |
| 830 | A-7040-423-A | ROLLER BLOCK ASSY, HC | |
| 831 | X-3945-407-1 | ARM ASSY, HC ROLLER | |
| 832 | 3-965-531-01 | ARM, GL | |
| 833 | 3-965-530-01 | PLATE (2), REGULATOR, TENSION | |
| 834 | X-3949-589-3 | CHASSIS ASSY, MECHANICAL | |
| 835 | 3-965-526-02 | ROLLER, LS GUIDE | |
| 836 | 3-965-547-01 | ARM, HC DRIVING | |
| 837 | 3-965-534-01 | PLATE, PRESS, PINCH | |
| 838 | 3-974-320-02 | GROUND (IM), SHAFT | |
| 839 | 3-987-953-01 | SPACER, RUBBER | |
| 840 | X-3947-398-1 | SCREW ASSY, M1.7 PW | |
| S901 | 1-762-436-15 | SWITCH, ROTARY (ENCODER) | |
| M901 | A-7048-953-A | DRUM BLOCK ASSY (DGH-0F0B-R) (NTSC) | |
| M901 | A-7048-955-A | DRUM BLOCK ASSY (DGH-0F1B-R) (PAL) | |
| M902 | 8-835-531-32 | MOTOR, DC SCE-0601A/C-NP (CAPSTAN) | |
| M903 | X-3945-401-1 | MOTOR ASSY, DC (LOADING) | |

## 6-2. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
  uF: μF
- COILS
  uH: μH
- RESISTORS
  All resistors are in ohms.
  METAL: metal-film resistor
  METAL OXIDE: Metal Oxide-film resistor
  F: nonflammable
- SEMICONDUCTORS
  In each case, u: μ, for example:
  uA...: μA... , uPA... , μPA... ,
  uPB... , μPB... , uPC... , μPC... ,
  uPD..., μPD...
- Abbreviation

| | |
|---|---|
| CND | : Canadian model |
| HK | : Hong Kong model |
| KR | : Korea model |
| JE | : Tourist model |
| AUS | : Australian model |
| CN | : Chinese model |
| BR | : Brazilian model |
| AR | : Argentina model |

When indicating parts by reference number, please include the board name.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

| Ref. No. | Part No. | Description | | | | Remarks |
|---|---|---|---|---|---|---|
| | A-7074-658-A | CD-286 BOARD, COMPLETE | | | | |
| | | | | | | (TR618/TR618E/TR718E/TR728E) |
| | | *************************************** | | | | |
| | A-7074-662-A | CD-286 BOARD, COMPLETE (TR818) | | | | |
| | | ****************************** | | | | |
| | A-7074-666-A | CD-281 BOARD, COMPLETE | | | | |
| | | (TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) | | | | |
| | | *************************************** | | | | |
| | A-7074-698-A | CD-281 BOARD, COMPLETE | | | | |
| | | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E) |
| | | *************************************** | | | | |
| | | | | | | (Ref.No.;1000 Series) |
| | | | | | | (IC191 is not included in this mounted board) |
| | | < CAPACITOR > | | | | |
| C191 | 1-126-395-11 | ELECT | 22uF | 20% | 16V | |
| C195 | 1-164-156-11 | CERAMIC CHIP | 0.1uF | | 25V | |
| C196 | 1-128-994-21 | ELECT CHIP | 47uF | 20% | 10V | |
| | | < CONNECTOR > | | | | |
| CN191 | 1-766-344-21 | CONNECTOR, FFC/FPC 14P | | | | |
| | | < IC > | | | | |
| IC191 | A-7031-040-A | CCD BLOCK ASSY (TR618/TRV49/TRV58) | | | | |
| IC191 | A-7031-043-A | CCD BLOCK ASSY | | | | |
| | | | | | | (TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E) |
| IC191 | A-7031-049-A | CCD BLOCK ASSY (TRV78E/TRV98E) | | | | |
| IC191 | A-7031-207-A | CCD BLOCK ASSY | | | | |
| | | | | | | (TR818/TRV68/TRV78/TRV88/TRV98) |
| | | < COIL > | | | | |
| L191 | 1-469-528-91 | INDUCTOR | 100uH | | | |
| | | < TRANSISTOR > | | | | |
| Q191 | 8-729-117-73 | TRANSISTOR | 2SC4178-F13F14-T1 | | | |
| | | < RESISTOR > | | | | |
| R191 | 1-216-797-11 | METAL CHIP | 10 | 5% | 1/16W | |
| R192 | 1-216-864-91 | SHORT | 0 | | | |
| R193 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W | |
| R195 | 1-216-864-91 | SHORT | 0 | | | |
| R198 | 1-216-809-11 | METAL CHIP | 100 | 5% | 1/16W | |
| | | | | | | (TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E) |
| R198 | 1-216-864-91 | SHORT | 0 | | | |
| | | | | | | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |

Be sure to read “Precautions upon replacing CCD imager” on page 4-8 when changing the CCD imager.

| Ref. No. | Part No. | Description | | | | Remarks |
|---|---|---|---|---|---|---|
| | A-7074-663-A | CF-077 BOARD, COMPLETE | | | | |
| | | | | | | (TR618/TR618E/TR718E/TR728E/TR818) |
| | | *************************************** | | | | |
| | | | | | | (Ref.No.;1000 Series) |
| | | < BATTERY > | | | | |
| BT001 | 1-756-146-11 | BATTERY, LITHIUM (SECONDARY) | | | | |
| | | < BUZZER > | | | | |
| BZ001 | 1-529-107-11 | BUZZER, PIEZOELECTRIC | | | | |
| | | < CAPACITOR > | | | | |
| C001 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V | |
| | | < CONNECTOR > | | | | |
| CN001 | 1-815-031-11 | CONNECTOR, FFC/FPC (ZIF) 24P | | | | |
| CN002 | 1-794-050-21 | CONNECTOR, FFC/FPC (ZIF) 26P | | | | |
| | | < IC > | | | | |
| IC001 | 8-759-573-02 | IC BU9735K-E2 | | | | |
| | | < RESISTOR > | | | | |
| R005 | 1-216-822-11 | METAL CHIP | 1.2K | 5% | 1/16W | |
| R006 | 1-216-822-11 | METAL CHIP | 1.2K | 5% | 1/16W | |
| R010 | 1-216-855-11 | METAL CHIP | 680K | 5% | 1/16W | |
| R011 | 1-216-823-11 | METAL CHIP | 1.5K | 5% | 1/16W | |
| R013 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W | |
| R014 | 1-216-828-11 | METAL CHIP | 3.9K | 5% | 1/16W | |
| R015 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W | |
| R016 | 1-216-834-11 | METAL CHIP | 12K | 5% | 1/16W | |
| R017 | 1-216-840-11 | METAL CHIP | 39K | 5% | 1/16W | |
| R018 | 1-216-838-11 | METAL CHIP | 27K | 5% | 1/16W | |
| R023 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W | |
| | | < SWITCH > | | | | |
| S001 | 1-771-138-82 | SWITCH, KEY BOARD (RESET) | | | | |
| S002 | 1-771-138-82 | SWITCH, KEY BOARD (MENU) | | | | |
| S003 | 1-771-138-82 | SWITCH, KEY BOARD (TIME) | | | | |
| S004 | 1-771-138-82 | SWITCH, KEY BOARD (EXPOSURE) | | | | |
| S005 | 1-771-138-82 | SWITCH, KEY BOARD (DATE) | | | | |

## CF-077 FP-249 FP-355 FP-356 LB-062 MI-040 MI-041

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| S006 | 1-771-025-41 | SWITCH, ROTARY (ENCODER) | |
| | | | (SEL/PUSH EXEC.) |
| S007 | 1-771-138-82 | SWITCH, KEY BOARD (TITLE) | |
| S008 | 1-771-138-82 | SWITCH, KEY BOARD (COUNTER RESET) | |
| S009 | 1-771-138-82 | SWITCH, KEY BOARD (BACK LIGHT) | |
| S010 | 1-771-138-82 | SWITCH, KEY BOARD (FOCUS) | |
| S011 | 1-771-138-82 | SWITCH, KEY BOARD (FADER) | |

---

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| | | FP-249 BOARD, COMPLETE (Not supplied) | |
| | | ************************************** | |
| | | | (Ref.No.;20000 Series) |
| | 3-965-552-01 | HOLDER (T), SENSOR | |
| | | < HOLE ELEMENT > | |
| H001 | 8-719-033-37 | ELEMENT, HALL HW-105C (T REEL) | |
| H002 | 8-719-033-37 | ELEMENT, HALL HW-105C (S REEL) | |
| | | < TRANSISTOR > | |
| Q002 | 8-729-907-25 | PHOTO TRANSISTOR PT4850F (TAPE END) | |
| | | < SWITCH > | |
| S001 | 1-692-614-11 | SWITCH, PUSH (3 KEY) | |
| | | | (Hi8 MP,ME/MP,REC PROOF) |
| S002 | 1-572-688-11 | SWITCH, PUSH (1 KEY)(C.C.DOWN) | |

---

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| | 1-658-213-11 | FP-355 FLEXIBLE BOARD | |
| | | ******************** | |
| | | | (Ref.No.;20000 Series) |
| | | < DIODE > | |
| D001 | 8-719-988-42 | DIODE GL453 (TAPE LED) | |

---

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| | 1-658-214-11 | FP-356 FLEXIBLE BOARD | |
| | | ******************** | |
| | | | (Ref.No.;20000 Series) |
| | 3-965-551-01 | HOLDER (S), SENSOR | |
| | | < TRANSISTOR > | |
| Q001 | 8-729-907-25 | PHOTO TRANSISTOR PT4850F (TAPE TOP) | |

---

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| | A-7074-192-A | LB-062 BOARD, COMPLETE (TR818) | |
| | | ****************************** | |
| | | | (Ref.No.;10000 Series) |
| | | < CAPACITOR > | |
| C4601 | 1-113-682-11 | TANTAL. CHIP 33uF 20% 10V | |
| C4602 | 1-127-760-11 | CERAMIC CHIP 4.7uF 10% 6.3V | |
| C4603 | 1-115-464-91 | CERAMIC CHIP 0.0022uF 10% 630V | |
| C4604 | 1-107-826-11 | CERAMIC CHIP 0.1uF 10% 16V | |
| | | < CONNECTOR > | |
| CN4601 | 1-764-516-21 | CONNECTOR, FFC/FPC (ZIF) 6P | |
| | | < IC > | |
| IC4601 | 8-759-485-79 | IC TC7SET08FU(TE85R) | |
| | | < COIL > | |
| L4601 | 1-412-031-11 | INDUCTOR CHIP 47uH | |
| L4602 | 1-469-525-91 | INDUCTOR 10uH | |
| | | < FLUORESCENT INDICATOR > | |
| ⚠ND4601 | 1-517-933-11 | FLUORESCENT TUBE (0.44) | |
| | | < TRANSISTOR > | |
| Q4601 | 8-729-039-24 | TRANSISTOR FX216-TL1 | |
| | | < RESISTOR > | |
| R4601 | 1-216-808-11 | METAL CHIP 82 5% 1/16W | |
| R4604 | 1-216-853-11 | METAL CHIP 470K 5% 1/16W | |
| | | < TRANSFORMER > | |
| ⚠T4601 | 1-435-225-21 | TRANSFORMER, INVERTER | |

---

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| | A-7074-659-A | MI-040 BOARD, COMPLETE | |
| | | | (TR618/TR618E/TR718E) |
| | | *************************************** | |
| | A-7074-661-A | MI-040 BOARD, COMPLETE (TR818) | |
| | | ****************************** | |
| | A-7074-665-A | MI-041 BOARD, COMPLETE (TRV98) | |
| | | ****************************** | |
| | A-7074-682-A | MI-041 BOARD, COMPLETE | |
| | | | (TRV78/TRV78E/TRV98E) |
| | | *************************************** | |
| | A-7074-683-A | MI-040 BOARD, COMPLETE (TR728E) | |
| | | ******************************* | |
| | A-7074-700-A | MI-041 BOARD, COMPLETE (TRV58/TRV58E) | |
| | | ************************************* | |
| | A-7074-707-A | MI-041 BOARD, COMPLETE (TRV68/TRV88) | |
| | | ************************************ | |
| | A-7074-719-A | MI-041 BOARD, COMPLETE | |
| | | | (TRV49/TRV49E/TRV59E) |
| | | *************************************** | |
| | | | (Ref.No.;10000 Series) |
| | | < CAPACITOR > | |
| C758 | 1-124-778-00 | ELECT CHIP 22uF 20% 6.3V | |
| | | | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C759 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V | |
| | | | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C762 | 1-124-778-00 | ELECT CHIP 22uF 20% 6.3V | |
| | | | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C763 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V | |
| | | | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C764 | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V | |
| C768 | 1-164-343-11 | CERAMIC CHIP 0.056uF 10% 25V | |
| | | | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C772 | 1-164-343-11 | CERAMIC CHIP 0.056uF 10% 25V | |
| | | | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C774 | 1-164-343-11 | CERAMIC CHIP 0.056uF 10% 25V | |
| | | | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C775 | 1-110-666-11 | ELECT CHIP 22uF 20% 6.3V | |
| | | | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C776 | 1-107-826-11 | CERAMIC CHIP 0.1uF 10% 16V | |

**Note :**
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

**Note :**
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| C777 | 1-164-343-11 | CERAMIC CHIP | 0.056uF | 10% | 25V<br>(TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C781 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| C782 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C784 | 1-110-666-11 | ELECT CHIP | 22uF | 20% | 6.3V<br>(TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C785 | 1-164-227-11 | CERAMIC CHIP | 0.022uF | 10% | 25V |
| C788 | 1-164-227-11 | CERAMIC CHIP | 0.022uF | 10% | 25V |
| C789 | 1-110-501-11 | CERAMIC CHIP | 0.33uF | 10% | 16V<br>(TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C791 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V<br>(TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C794 | 1-110-410-11 | ELECT CHIP | 10uF | 20% | 6.3V<br>(TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C799 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| C800 | 1-110-446-11 | ELECT CHIP | 10uF | 20% | 6.3V |
| C808 | 1-110-446-11 | ELECT CHIP | 10uF | 20% | 6.3V |
| C809 | 1-126-205-11 | ELECT CHIP | 47uF | 20% | 6.3V |
| C3901 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V<br>(TRV98) |
| C3904 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V<br>(TRV98) |
| C3905 | 1-117-863-11 | CERAMIC CHIP | 0.47uF | 10% | 6.3V<br>(TRV98) |
| C3906 | 1-117-863-11 | CERAMIC CHIP | 0.47uF | 10% | 6.3V<br>(TRV98) |
| C3907 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V<br>(TRV98) |
| C3908 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V<br>(TRV98) |
| C3909 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V<br>(TRV98) |
| C3910 | 1-135-181-11 | TANTALUM CHIP | 4.7uF | 20% | 10V<br>(TRV98) |
| C3911 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V<br>(TRV98) |
| C3912 | 1-110-410-11 | ELECT CHIP | 10uF | 20% | 6.3V<br>(TRV98) |
| C3913 | 1-164-668-11 | CERAMIC CHIP | 510PF | 5% | 50V<br>(TRV98) |
| C3914 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V<br>(TRV98) |
| C3915 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V<br>(TRV98) |
| C3916 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V<br>(TRV98) |
| C3917 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V<br>(TRV98) |
| C3918 | 1-162-913-11 | CERAMIC CHIP | 8PF | 0.50PF | 50V<br>(TRV98) |
| C3919 | 1-117-863-11 | CERAMIC CHIP | 0.47uF | 10% | 6.3V<br>(TRV98) |
| C3920 | 1-117-863-11 | CERAMIC CHIP | 0.47uF | 10% | 6.3V<br>(TRV98) |
| C3921 | 1-162-921-11 | CERAMIC CHIP | 33PF | 5% | 50V<br>(TRV98) |
| C3922 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V<br>(TRV98) |
| C3923 | 1-162-922-11 | CERAMIC CHIP | 39PF | 5% | 50V<br>(TRV98) |
| C3924 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V<br>(TRV98) |

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| C3925 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V<br>(TRV98) |
| C3926 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V<br>(TRV98) |
| C3929 | 1-104-847-11 | TANTAL. CHIP | 22uF | 20% | 4V<br>(TRV98) |
| C3930 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V<br>(TRV98) |
| C3931 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V<br>(TRV98) |
| C3932 | 1-110-453-11 | ELECT CHIP | 4.7uF | 20% | 16V |
| C3933 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C3934 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V<br>(TRV98) |
| | | < CONNECTOR > | | | |
| * CN752 | 1-695-320-21 | PIN, CONNECTOR (1.5MM)(SMD) 2P | | | |
| CN753 | 1-779-336-11 | CONNECTOR, FFC/FPC 24P | | | |
| | | < DIODE > | | | |
| D752 | 8-719-073-01 | DIODE | MA111-(K8).S0 | | (TR728E/TRV49/TRV49E/TRV59E/TRV78/TRV78E/TRV98/TRV98E) |
| D753 | 8-719-070-91 | DIODE | TLSU1008(T05,SOY) | | |
| D754 | 8-719-073-01 | DIODE | MA111-(K8).S0 | | |
| D755 | 8-719-073-01 | DIODE | MA111-(K8).S0 | | |
| D3901 | 8-719-067-44 | DIODE | CL-310IRS-X-TU | | (TRV98) |
| D3902 | 8-719-083-13 | DIODE | DCS2815 | | (TRV98) |
| D3903 | 8-719-067-44 | DIODE | CL-310IRS-X-TU | | |
| | | < IC > | | | |
| IC751 | 8-749-012-83 | IC | RS-180-T | | (TR728E/TRV78/TRV78E/TRV98E) |
| IC751 | 8-749-018-83 | IC | PNA4S13M02 | | (TRV49/TRV49E/TRV59E/TRV98) |
| IC752 | 8-759-712-78 | IC | BH7871FV-E2 | | |
| IC753 | 8-759-489-19 | IC | UPC6756GR-8JG-E2 | | (TRV78/TRV78E/TRV98E) |
| IC753 | 8-759-637-19 | IC | NJM3230V(TE2) | | (TR818/TRV68/TRV88/TRV98) |
| IC3901 | 8-759-566-96 | IC | AN2920FHQ-EB | | (TRV98) |
| | | < COIL > | | | |
| L751 | 1-469-525-91 | INDUCTOR | 10uH | | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| L3902 | 1-469-525-91 | INDUCTOR | 10uH | | (TRV98) |
| L3903 | 1-412-948-11 | INDUCTOR | 5.6uH | | (TRV98) |
| L3904 | 1-412-957-11 | INDUCTOR | 33uH | | (TRV98) |
| L3905 | 1-412-957-11 | INDUCTOR | 33uH | | (TRV98) |
| L3906 | 1-469-525-91 | INDUCTOR | 10uH | | (TRV98) |
| | | < TRANSISTOR > | | | |
| Q3901 | 8-729-037-53 | TRANSISTOR | 2SA1832F-Y/GR(TPL3) | | (TRV98) |
| Q3902 | 8-729-026-48 | TRANSISTOR | 2SA1037AK-T146-Q | | (TRV98) |
| Q3903 | 8-729-920-85 | TRANSISTOR | 2SD1664-T100-QR | | (TRV98) |
| Q3904 | 8-729-052-52 | TRANSISTOR | 2SC4738F-Y/GR(TPL3) | | (EXCEPT TRV98) |

< RESISTOR >

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| R757 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R769 | 1-216-832-11 | METAL CHIP | 8.2K | 5% | 1/16W |
| R774 | 1-216-836-11 | METAL CHIP | 18K | 5% | 1/16W |
| R775 | 1-216-832-11 | METAL CHIP | 8.2K | 5% | 1/16W |
| R776 | 1-216-864-91 | SHORT | 0 | | |
| R779 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W<br>(TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R780 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R782 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R783 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W<br>(TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R785 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W<br>(TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R788 | 1-216-839-11 | METAL CHIP | 33K | 5% | 1/16W |
| R797 | 1-216-824-11 | METAL CHIP | 1.8K | 5% | 1/16W |
| R3901 | 1-216-839-11 | METAL CHIP | 33K | 5% | 1/16W<br>(TRV98) |
| R3902 | 1-216-829-11 | METAL CHIP | 4.7K | 5% | 1/16W<br>(TRV98) |
| R3903 | 1-216-839-11 | METAL CHIP | 33K | 5% | 1/16W<br>(TRV98) |
| R3904 | 1-216-834-11 | METAL CHIP | 12K | 5% | 1/16W<br>(TRV98) |
| R3905 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W<br>(TRV98) |
| R3907 | 1-218-879-11 | METAL CHIP | 22K | 0.5% | 1/16W<br>(TRV98) |
| R3908 | 1-216-815-11 | METAL CHIP | 330 | 5% | 1/16W<br>(TRV98) |
| R3909 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W<br>(TRV98) |
| R3912 | 1-216-819-11 | METAL CHIP | 680 | 5% | 1/16W<br>(TRV98) |
| R3913 | 1-216-847-11 | METAL CHIP | 150K | 5% | 1/16W<br>(TRV98) |
| R3914 | 1-216-847-11 | METAL CHIP | 150K | 5% | 1/16W<br>(TRV98) |
| R3915 | 1-216-818-11 | METAL CHIP | 560 | 5% | 1/16W<br>(TRV98) |
| R3916 | 1-216-831-11 | METAL CHIP | 6.8K | 5% | 1/16W<br>(TRV98) |
| R3917 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W<br>(TRV98) |
| R3919 | 1-216-823-11 | METAL CHIP | 1.5K | 5% | 1/16W<br>(TRV98) |
| R3920 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W<br>(TRV98) |
| R3921 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W<br>(TRV98) |
| R3922 | 1-216-864-91 | SHORT | 0 | | (TRV98) |
| R3923 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R3924 | 1-216-295-11 | SHORT | 0 | | (TRV98) |
| R3925 | 1-216-001-00 | METAL CHIP | 10 | 5% | 1/10W<br>(TRV98) |
| R3925 | 1-216-027-00 | METAL CHIP | 120 | 5% | 1/10W<br>(EXCEPT TRV98) |
| R3926 | 1-216-800-11 | RES-CHIP | 18 | 5% | 1/16W<br>(TRV98) |
| R3927 | 1-216-295-11 | SHORT | 0 | | (EXCEPT TRV98) |
| R3929 | 1-216-027-00 | METAL CHIP | 120 | 5% | 1/10W<br>(EXCEPT TRV98) |
| R3931 | 1-216-834-11 | METAL CHIP | 12K | 5% | 1/16W<br>(TRV98) |
| R3948 | 1-216-295-11 | SHORT | 0 | | (EXCEPT TRV98) |

< COMPOSITION CIRCUIT BLOCK >

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| RB751 | 1-239-702-81 | RESISTOR, NETWORK 22K | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| RB752 | 1-239-702-81 | RESISTOR, NETWORK 22K | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |

< SENSOR >

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| SE751 | 1-418-252-11 | SENSOR, ANGULAR VELOCITY (PITCH) | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| SE752 | 1-418-252-21 | SENSOR, ANGULAR VELOCITY (YAW) | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |

A-7074-667-A PD-131 BOARD, COMPLETE (TRV98/TRV98E)

****************************************

A-7074-680-A PD-131 BOARD, COMPLETE
(TRV49/TRV49E/TRV58/TRV58E/
TRV59E/TRV68/TRV78/TRV78E)

*****************************************

A-7074-701-A PD-131 BOARD, COMPLETE (TRV88)

*******************************

(Ref.No.;10000 Series)

< CAPACITOR >

| Ref. No. | Part No. | Description | | | |
|---|---|---|---|---|---|
| C5501 | 1-135-201-11 | TANTALUM CHIP | 10uF | 20% | 4V |
| C5503 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C5504 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C5505 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C5506 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C5507 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C5509 | 1-126-602-11 | ELECT CHIP | 3.3uF | 20% | 50V |
| C5510 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C5511 | 1-164-739-11 | CERAMIC CHIP | 560PF | 5% | 50V |
| C5512 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C5513 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C5514 | 1-119-750-11 | TANTAL. CHIP | 22uF | 20% | 6.3V |
| C5515 | 1-164-357-11 | CERAMIC CHIP | 0.001uF | 5% | 50V |
| C5516 | 1-162-927-11 | CERAMIC CHIP | 100PF | 5% | 50V |
| C5517 | 1-107-826-11 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C5518 | 1-107-826-11 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C5519 | 1-107-826-11 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C5520 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V |
| C5521 | 1-127-573-11 | CERAMIC CHIP | 1uF | 10% | 16V |
| C5522 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C5523 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C5524 | 1-127-573-11 | CERAMIC CHIP | 1uF | 10% | 16V |
| C5527 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C5528 | 1-126-193-11 | ELECT | 1uF | 20% | 50V |
| C5530 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| C5531 | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% | 16V |
| C5603 | 1-164-657-11 | CERAMIC CHIP 0.015uF 10% | 50V |
| C5604 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% | 10V |
| C5605 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% | 10V |
| ⚠C5606 | 1-131-959-91 | CERAMIC CHIP 12PF 10% | 3KV |
| C5607 | 1-115-566-11 | CERAMIC CHIP 4.7uF 10% | 10V |
| | | < CONNECTOR > | |
| CN5501 | 1-815-031-11 | CONNECTOR, FFC/FPC (ZIF) 24P | |
| * CN5502 | 1-573-984-11 | CONNECTOR, BOARD TO BOARD 10P | |
| CN5601 | 1-764-709-11 | CONNECTOR, FFC/FPC (LIF) 10P | |
| CN5701 | 1-794-998-21 | PIN, CONNECTOR 20P | |
| CN5702 | 1-573-346-21 | CONNECTOR, FFC/FPC 6P | |
| | | < DIODE > | |
| D5502 | 8-713-102-80 | DIODE 1T369-01-T8A | |
| D5503 | 8-719-073-01 | DIODE MA111-(K8).S0 | |
| D5503 | 8-719-988-61 | DIODE 1SS355TE-17 | |
| D5601 | 8-719-073-01 | DIODE MA111-(K8).S0 | |
| D5601 | 8-719-988-61 | DIODE 1SS355TE-17 | |
| | | < FERRITE BEAD > | |
| FB003 | 1-414-760-21 | FERRITE 0UH | |
| FB5501 | 1-414-760-21 | FERRITE 0UH | |
| FB5501 | 1-414-760-21 | FERRITE 0UH | |
| FB5501 | 1-414-760-21 | FERRITE 0UH | |
| FB5501 | 1-500-329-21 | FERRITE 0UH | |
| FB5502 | 1-414-760-21 | FERRITE 0UH | |
| FB5502 | 1-414-760-21 | FERRITE 0UH | |
| FB5502 | 1-414-760-21 | FERRITE 0UH | |
| FB5502 | 1-500-329-21 | FERRITE 0UH | |
| | | < IC > | |
| IC5501 | 8-759-660-92 | IC RB5P003AM1 | |
| IC5502 | 8-759-714-77 | IC LZ9FF474 | |
| IC5601 | 8-759-564-49 | IC TC7W53FU(TE12R) | |
| IC5602 | 8-759-075-70 | IC TA75S393F-TE85R | |
| | | < COIL > | |
| L001 | 1-419-354-21 | INDUCTOR 22uH | |
| L5501 | 1-469-525-91 | INDUCTOR 10uH | |
| L5502 | 1-469-525-91 | INDUCTOR 10uH | |
| L5503 | 1-412-949-21 | INDUCTOR 6.8uH | (TRV88/TRV98/TRV98E) |
| L5503 | 1-412-956-21 | INDUCTOR 27uH | (TRV49/TRV49E/TRV58/TRV58E/ TRV59E/TRV68/TRV78/TRV78E) |
| L5601 | 1-419-387-11 | INDUCTOR 100uH | |
| | | < TRANSISTOR > | |
| Q5502 | 8-729-041-23 | TRANSISTOR NDS356AP | |
| Q5503 | 8-729-054-48 | TRANSISTOR N1B04FE-Y/GR(TPLR3) | |
| Q5504 | 8-729-054-48 | TRANSISTOR N1B04FE-Y/GR(TPLR3) | |
| Q5505 | 8-729-042-29 | TRANSISTOR RN1104F(TPL3) | |
| Q5601 | 8-729-042-29 | TRANSISTOR RN1104F(TPL3) | |
| Q5602 | 8-729-039-43 | TRANSISTOR FP216-TL | |
| | | < RESISTOR > | |
| R5501 | 1-216-853-11 | METAL CHIP 470K 5% | 1/16W |
| R5503 | 1-218-893-11 | METAL CHIP 82K 0.5% | 1/16W<br>(TRV88/TRV98/TRV98E) |
| R5503 | 1-218-895-11 | METAL CHIP 100K 0.5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/ TRV59E/TRV68/TRV78/TRV78E) |
| R5505 | 1-216-835-11 | METAL CHIP 15K 5% | 1/16W |
| R5506 | 1-216-826-11 | METAL CHIP 2.7K 5% | 1/16W |
| R5507 | 1-216-841-11 | METAL CHIP 47K 5% | 1/16W |
| R5508 | 1-216-843-11 | METAL CHIP 68K 5% | 1/16W |
| R5509 | 1-216-837-11 | METAL CHIP 22K 5% | 1/16W |
| R5510 | 1-216-843-11 | METAL CHIP 68K 5% | 1/16W |
| R5511 | 1-216-857-11 | METAL CHIP 1M 5% | 1/16W |
| R5512 | 1-216-845-11 | METAL CHIP 100K 5% | 1/16W |
| R5513 | 1-216-857-11 | METAL CHIP 1M 5% | 1/16W |
| R5515 | 1-216-864-91 | SHORT 0 | |
| R5516 | 1-216-833-11 | METAL CHIP 10K 5% | 1/16W |
| R5519 | 1-216-864-91 | SHORT 0 | |
| R5521 | 1-216-841-11 | METAL CHIP 47K 5% | 1/16W |
| R5522 | 1-216-821-11 | METAL CHIP 1K 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/ TRV59E/TRV68/TRV78/TRV78E) |
| R5522 | 1-216-829-11 | METAL CHIP 4.7K 5% | 1/16W<br>(TRV88) |
| R5522 | 1-216-830-11 | METAL CHIP 5.6K 5% | 1/16W<br>(TRV98/TRV98E) |
| R5523 | 1-216-864-91 | SHORT 0 | |
| R5531 | 1-216-848-11 | METAL CHIP 180K 5% | 1/16W |
| R5532 | 1-216-845-11 | METAL CHIP 100K 5% | 1/16W |
| R5533 | 1-216-857-11 | METAL CHIP 1M 5% | 1/16W |
| R5534 | 1-216-864-91 | SHORT 0 | |
| R5535 | 1-216-864-91 | SHORT 0 | |
| R5601 | 1-216-824-11 | METAL CHIP 1.8K 5% | 1/16W |
| R5602 | 1-216-845-11 | METAL CHIP 100K 5% | 1/16W |
| R5603 | 1-216-834-11 | METAL CHIP 12K 5% | 1/16W |
| R5604 | 1-216-824-11 | METAL CHIP 1.8K 5% | 1/16W |
| R5606 | 1-216-837-11 | METAL CHIP 22K 5% | 1/16W |
| R5607 | 1-216-817-11 | METAL CHIP 470 5% | 1/16W |
| R5610 | 1-216-864-91 | SHORT 0 | |
| R5702 | 1-216-833-11 | METAL CHIP 10K 5% | 1/16W |
| | | < COMPOSITION CIRCUIT BLOCK > | |
| RB5501 | 1-234-372-21 | RES, NETWORK 100X4 (1005) | |
| RB5502 | 1-239-698-11 | RESISTOR, NETWORK 10K | |
| RB5503 | 1-239-661-81 | RESISTOR, NETWORK 1M | |
| RB5601 | 1-239-698-11 | RESISTOR, NETWORK 10K | (TRV49/TRV49E/TRV58/TRV58E/ TRV59E/TRV68/TRV78/TRV78E) |
| RB5601 | 1-239-701-81 | RESISTOR, NETWORK 18K | (TRV88/TRV98/TRV98E) |
| | | < TRANSFORMER > | |
| ⚠T5601 | 1-435-227-11 | TRANSFORMER, INVERTER | |

| Note : | Note : |
|---|---|
| The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.<br>Replace only with part number specified. | Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.<br>Ne les remplacer que par une pièce portant le numéro spécifié. |

| Ref. No. | Part No. | Description | | | | Remarks |
|---|---|---|---|---|---|---|
| | A-7096-402-A | VC-251 BOARD, COMPLETE (SERVICE) | | | | (TR618) |
| | | **************************************** | | | | |
| | A-7096-403-A | VC-251 BOARD, COMPLETE (SERVICE) | | | | (TR818) |
| | | **************************************** | | | | |
| | A-7096-404-A | VC-251 BOARD, COMPLETE (SERVICE) | | | | (TR618E/TR718E/TR728E) |
| | | **************************************** | | | | |
| | A-7096-405-A | VC-251 BOARD, COMPLETE (SERVICE) | | | | (TRV68/TRV78/TRV88/TRV98) |
| | | **************************************** | | | | |
| | A-7096-406-A | VC-251 BOARD, COMPLETE (SERVICE) | | | | (TRV78E/TRV98E) |
| | | **************************************** | | | | |
| | A-7096-409-A | VC-251 BOARD, COMPLETE (SERVICE) | | | | (TRV49/TRV58) |
| | | **************************************** | | | | |
| | A-7096-456-A | VC-251 BOARD, COMPLETE (SERVICE) | | | | (TRV49E/TRV58E/TRV59E) |
| | | **************************************** | | | | |
| | | | | | | (Ref.No.;10000 Series) |
| | | < CAPACITOR > | | | | |
| C001 | 1-162-960-11 | CERAMIC CHIP | 220PF | 10% | 50V | |
| C002 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V | |
| C003 | 1-119-923-81 | CERAMIC CHIP | 0.047uF | 10% | 10V | |
| C004 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V | |
| C005 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V | |
| C008 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V | |
| C009 | 1-164-172-11 | CERAMIC CHIP | 0.0056uF | 10% | 25V | |
| C010 | 1-107-819-11 | CERAMIC CHIP | 0.022uF | 10% | 16V | |
| C011 | 1-107-819-11 | CERAMIC CHIP | 0.022uF | 10% | 16V | |
| C012 | 1-162-962-11 | CERAMIC CHIP | 470PF | 10% | 50V | |
| C013 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V | |
| C014 | 1-162-965-11 | CERAMIC CHIP | 0.0015uF | 10% | 50V | |
| C015 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C016 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V | |
| C018 | 1-162-962-11 | CERAMIC CHIP | 470PF | 10% | 50V | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C019 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V | |
| C020 | 1-117-808-91 | CERAMIC CHIP | 10uF | 10% | 10V | |
| C021 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V | |
| C022 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V | |
| C023 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V | |
| C024 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V | |
| C025 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V | |
| C026 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C027 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V | |
| C028 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V | |
| C029 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V | |
| C030 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C031 | 1-127-760-11 | CERAMIC CHIP | 4.7uF | 10% | 6.3V | |
| C032 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C033 | 1-127-760-11 | CERAMIC CHIP | 4.7uF | 10% | 6.3V | |
| C034 | 1-162-974-11 | CERAMIC CHIP | 0.01uF | | 50V | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C035 | 1-127-760-11 | CERAMIC CHIP | 4.7uF | 10% | 6.3V | |
| C036 | 1-127-760-11 | CERAMIC CHIP | 4.7uF | 10% | 6.3V | |
| C037 | 1-127-760-11 | CERAMIC CHIP | 4.7uF | 10% | 6.3V | |
| C038 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V | |
| C039 | 1-135-149-21 | TANTALUM CHIP | 2.2uF | 20% | 10V | |
| C040 | 1-119-750-11 | TANTAL. CHIP | 22uF | 20% | 6.3V | |
| C041 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V | |
| C042 | 1-164-506-11 | CERAMIC CHIP | 4.7uF | | 16V | |
| C043 | 1-164-506-11 | CERAMIC CHIP | 4.7uF | | 16V | |
| C045 | 1-119-749-11 | TANTAL. CHIP | 33uF | 20% | 4V | |
| C046 | 1-119-750-11 | TANTAL. CHIP | 22uF | 20% | 6.3V | |
| C047 | 1-164-505-11 | CERAMIC CHIP | 2.2uF | | 16V | (TR818/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C048 | 1-164-156-11 | CERAMIC CHIP | 0.1uF | | 25V | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C049 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V | |
| C050 | 1-135-149-21 | TANTALUM CHIP | 2.2uF | 20% | 10V | |
| C051 | 1-119-750-11 | TANTAL. CHIP | 22uF | 20% | 6.3V | |
| C052 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V | |
| C053 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V | |
| C054 | 1-164-506-11 | CERAMIC CHIP | 4.7uF | | 16V | |
| C055 | 1-164-506-11 | CERAMIC CHIP | 4.7uF | | 16V | |
| C056 | 1-164-346-11 | CERAMIC CHIP | 1uF | | 16V | (TR818) |
| C057 | 1-164-505-11 | CERAMIC CHIP | 2.2uF | | 16V | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C058 | 1-164-505-11 | CERAMIC CHIP | 2.2uF | | 16V | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C059 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V | |
| C061 | 1-119-750-11 | TANTAL. CHIP | 22uF | 20% | 6.3V | |
| C071 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C072 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C101 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V | |
| C102 | 1-104-752-11 | TANTAL. CHIP | 33uF | 20% | 6.3V | |
| C103 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V | |
| C104 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V | |
| C106 | 1-107-819-11 | CERAMIC CHIP | 0.022uF | 10% | 16V | |
| C107 | 1-107-819-11 | CERAMIC CHIP | 0.022uF | 10% | 16V | |
| C108 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V | |
| C109 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V | |
| C110 | 1-162-927-11 | CERAMIC CHIP | 100PF | 5% | 50V | |
| C111 | 1-164-217-11 | CERAMIC CHIP | 150PF | 5% | 50V | |
| C112 | 1-162-926-11 | CERAMIC CHIP | 82PF | 5% | 50V | |
| C113 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V | |
| C114 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V | |
| C115 | 1-162-927-11 | CERAMIC CHIP | 100PF | 5% | 50V | |
| C116 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V | |
| C117 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V | |
| C118 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V | |

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| C119 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V |
| C121 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C123 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C124 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C125 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C126 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C127 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C128 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C129 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V |
| C130 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C131 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C132 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C133 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C134 | 1-117-863-11 | CERAMIC CHIP | 0.47uF | 10% | 6.3V |
| C135 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C136 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C151 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C152 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V |
| C154 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C155 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C156 | 1-164-392-11 | CERAMIC CHIP | 390PF | 5% | 50V |
| C157 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C158 | 1-135-210-11 | TANTALUM CHIP | 4.7uF | 20% | 10V |
| C160 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C161 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C162 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C163 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C164 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C165 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C166 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C167 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C168 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C169 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C170 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C171 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C172 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C173 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C174 | 1-117-863-11 | CERAMIC CHIP | 0.47uF | 10% | 6.3V |
| C175 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C176 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C177 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C178 | 1-162-965-11 | CERAMIC CHIP | 0.0015uF | 10% | 50V |
| C182 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C184 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C185 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C186 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C187 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C188 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C190 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C195 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C221 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C223 | 1-110-446-11 | ELECT CHIP | 10uF | 20% | 6.3V |
| C225 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C233 | 1-110-423-11 | ELECT CHIP | 2.2uF | 20% | 25V |
| C235 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| C238 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C246 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C247 | 1-126-601-11 | ELECT CHIP | 2.2uF | 20% | 50V |
| C248 | 1-126-601-11 | ELECT CHIP | 2.2uF | 20% | 50V |
| C249 | 1-126-246-11 | ELECT CHIP | 220uF | 20% | 4V |
| C250 | 1-126-246-11 | ELECT CHIP | 220uF | 20% | 4V |
| C252 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V |
| C271 | 1-162-919-11 | CERAMIC CHIP | 22PF | 5% | 50V |
| C272 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C273 | 1-162-919-11 | CERAMIC CHIP | 22PF | 5% | 50V |
| C274 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V<br>(TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E) |
| C275 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V<br>(TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E) |
| C276 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| C277 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C278 | 1-131-861-91 | TANTAL. CHIP | 4.7uF | 20% | 20V |
| C279 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V |
| C280 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C281 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C282 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C283 | 1-162-913-11 | CERAMIC CHIP | 8PF | 0.50PF | 50V |
| C284 | 1-115-339-11 | CERAMIC CHIP | 0.1uF | 10% | 50V |
| C285 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C286 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C287 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C288 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C289 | 1-107-826-11 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C290 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C291 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C292 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| C293 | 1-162-962-11 | CERAMIC CHIP | 470PF | 10% | 50V |
| C294 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C295 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C296 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C297 | 1-104-847-11 | TANTAL. CHIP | 22uF | 20% | 4V |
| C302 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C303 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V |
| C304 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V |
| C305 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C306 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C307 | 1-162-962-11 | CERAMIC CHIP | 470PF | 10% | 50V |
| C308 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C309 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| C310 | 1-126-205-11 | ELECT CHIP | 47uF | 20% | 6.3V |
| C311 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C312 | 1-117-863-11 | CERAMIC CHIP | 0.47uF | 10% | 6.3V |
| C313 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C315 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V |
| C316 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C317 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C318 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V |
| C319 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C352 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V |
| C354 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V |
| C357 | 1-124-778-00 | ELECT CHIP | 22uF | 20% | 6.3V |
| C358 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| C359 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V |
| C361 | 1-126-607-11 | ELECT CHIP | 47uF | 20% | 4V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C363 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C364 | 1-117-863-11 | CERAMIC CHIP | 0.47uF | 10% | 6.3V |
| C365 | 1-124-778-00 | ELECT CHIP | 22uF | 20% | 6.3V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C366 | 1-126-602-11 | ELECT CHIP | 3.3uF | 20% | 50V |
| C367 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C369 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C371 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C372 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C374 | 1-124-778-00 | ELECT CHIP | 22uF | 20% | 6.3V |
| C375 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C380 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C381 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C383 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C384 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| C385 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C386 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C389 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| C390 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C392 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C393 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C394 | 1-117-863-11 | CERAMIC CHIP | 0.47uF | 10% | 6.3V |
| C396 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C397 | 1-162-925-11 | CERAMIC CHIP | 68PF | 5% | 50V |
| C398 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| C401 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C402 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C403 | 1-162-915-11 | CERAMIC CHIP | 10PF | 0.5PF | 50V |
| C404 | 1-162-915-11 | CERAMIC CHIP | 10PF | 0.5PF | 50V |
| C405 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C406 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C407 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C408 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C410 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C411 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C451 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C452 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C453 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C454 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C455 | 1-107-819-11 | CERAMIC CHIP | 0.022uF | 10% | 16V |
| C456 | 1-107-819-11 | CERAMIC CHIP | 0.022uF | 10% | 16V |
| C457 | 1-119-923-81 | CERAMIC CHIP | 0.047uF | 10% | 10V |
| C458 | 1-126-603-11 | ELECT CHIP | 4.7uF | 20% | 35V |
| C459 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C460 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C461 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C462 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C463 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C464 | 1-162-960-11 | CERAMIC CHIP | 220PF | 10% | 50V |
| C465 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V |
| C466 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C467 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V |
| C468 | 1-162-962-11 | CERAMIC CHIP | 470PF | 10% | 50V |
| C469 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V |
| C470 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C471 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V |
| C472 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V |
| | | | | | (TR618E/TR718E/TR728E/TRV49E/ TRV58E/TRV59E/TRV78E/TRV98E) |
| C473 | 1-107-819-11 | CERAMIC CHIP | 0.022uF | 10% | 16V |
| | | | | | (TR618E/TR718E/TR728E/TRV49E/ TRV58E/TRV59E/TRV78E/TRV98E) |
| C474 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C475 | 1-107-819-11 | CERAMIC CHIP | 0.022uF | 10% | 16V |
| C476 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C477 | 1-119-923-81 | CERAMIC CHIP | 0.047uF | 10% | 10V |
| C478 | 1-119-923-81 | CERAMIC CHIP | 0.047uF | 10% | 10V |
| C479 | 1-164-505-11 | CERAMIC CHIP | 2.2uF | | 16V |
| C480 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C481 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C482 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C483 | 1-162-962-11 | CERAMIC CHIP | 470PF | 10% | 50V |
| C484 | 1-162-962-11 | CERAMIC CHIP | 470PF | 10% | 50V |
| C501 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C502 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C503 | 1-126-607-11 | ELECT CHIP | 47uF | 20% | 4V |
| C504 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C506 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C507 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C508 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C509 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C510 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C511 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C512 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C513 | 1-107-819-11 | CERAMIC CHIP | 0.022uF | 10% | 16V |
| C514 | 1-162-969-11 | CERAMIC CHIP | 0.0068uF | 10% | 25V |
| C515 | 1-162-919-11 | CERAMIC CHIP | 22PF | 5% | 50V |
| C516 | 1-162-918-11 | CERAMIC CHIP | 18PF | 5% | 50V |
| C517 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C518 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C519 | 1-119-923-81 | CERAMIC CHIP | 0.047uF | 10% | 10V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C601 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C602 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V |
| C603 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C701 | 1-135-639-21 | ELECT CHIP | 47uF | 20% | 6.3V |
| C708 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V |
| | | | | | (EXCEPT TR818) |

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| | | < CONNECTOR > | |
| * CN001 | 1-764-177-11 | PIN, CONNECTOR (SMD)(1.5MM) 7P | |
| CN101 | 1-766-346-21 | CONNECTOR, FFC/FPC 16P | |
| CN271 | 1-779-331-11 | CONNECTOR, FFC/FPC 14P | |
| CN301 | 1-750-360-21 | CONNECTOR, FFC/FPC (ZIF) 24P | |
| CN701 | 1-794-998-21 | PIN, CONNECTOR 20P<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) | |
| CN702 | 1-766-350-21 | CONNECTOR, FFC/FPC 20P | |
| CN703 | 1-766-354-21 | CONNECTOR, FFC/FPC 24P | |
| CN704 | 1-766-644-21 | CONNECTOR, FFC/FPC 8P | |
| CN706 | 1-766-340-21 | CONNECTOR, FFC/FPC 10P | |
| CN707 | 1-766-342-21 | CONNECTOR, FFC/FPC 12P | |
| CN708 | 1-779-334-11 | CONNECTOR, FFC/FPC 20P (TR818) | |
| CN709 | 1-815-031-11 | CONNECTOR, FFC/FPC (ZIF) 24P | |
| CN710 | 1-750-076-21 | CONNECTOR, FFC/FPC 12P | |
| CN711 | 1-764-704-21 | CONNECTOR, FFC/FPC (LIF) 5P | |
| CN712 | 1-766-345-21 | CONNECTOR, FFC/FPC 15P | |
| CN713 | 1-774-711-41 | CONNECTOR, BOARD TO BOARD 20P | |
| * CN715 | 1-778-283-11 | CONNECTOR, FFC/FPC 4P (EXCEPT TR818) | |
| | | < DIODE > | |
| D001 | 8-719-421-27 | DIODE MA728-(K8).S0 | |
| D002 | 8-719-062-16 | DIODE 01ZA8.2(TPL3) | |
| D004 | 8-719-073-03 | DIODE MA8082-(K8).S0 | |
| D005 | 8-719-078-02 | DIODE 1SS357(T3SONY1) | |
| D006 | 8-719-081-19 | DIODE 1SS383(T5RSONY1) | |
| D007 | 8-719-081-19 | DIODE 1SS383(T5RSONY1) | |
| D010 | 8-719-078-02 | DIODE 1SS357(T3SONY1)<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) | |
| D151 | 8-719-081-25 | DIODE JDV3C11(TPH3) | |
| D152 | 8-719-081-25 | DIODE JDV3C11(TPH3) | |
| D271 | 8-719-073-01 | DIODE MA111-(K8).S0<br>(TR618/TR618E/TR718E/TR728E/TRV49/ TRV49E/TRV58/TRV58E/TRV59E) | |
| D272 | 8-719-082-63 | DIODE 1SV329(TPL3) | |
| D301 | 8-719-073-01 | DIODE MA111-(K8).S0 | |
| D501 | 8-719-421-67 | DIODE MA132WK-(K8).SO | |
| D503 | 8-719-421-27 | DIODE MA728-(K8).S0 | |
| D504 | 8-719-073-01 | DIODE MA111-(K8).S0 | |
| D702 | 8-719-062-16 | DIODE 01ZA8.2(TPL3) | |
| | | < PIN CONNECTOR > | |
| ET101 | 1-815-032-21 | PIN, CONNECTOR (CASE, SHIELD) | |
| ET102 | 1-815-032-21 | PIN, CONNECTOR (CASE, SHIELD) | |
| | | < FUSE > | |
| ⚠F001 | 1-576-406-21 | FUSE, MICRO (1.4A) (1608) | |
| ⚠F002 | 1-576-406-21 | FUSE, MICRO (1.4A) (1608) | |
| ⚠F003 | 1-576-406-21 | FUSE, MICRO (1.4A) (1608) | |
| ⚠F004 | 1-576-406-21 | FUSE, MICRO (1.4A) (1608)<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) | |

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| | | < FERRITE BEAD > | |
| FB001 | 1-414-760-21 | FERRITE 0UH | |
| FB003 | 1-414-760-21 | FERRITE 0UH<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) | |
| FB101 | 1-414-228-11 | FERRITE 0UH | |
| FB102 | 1-414-228-11 | FERRITE 0UH | |
| FB152 | 1-414-760-21 | FERRITE 0UH | |
| FB153 | 1-414-760-21 | FERRITE 0UH | |
| FB154 | 1-414-760-21 | FERRITE 0UH | |
| FB221 | 1-414-760-21 | FERRITE 0UH | |
| FB271 | 1-414-760-21 | FERRITE 0UH<br>(TR618/TR618E/TR718E/TR728E/TRV49/ TRV49E/TRV58/TRV58E/TRV59E) | |
| FB273 | 1-500-284-21 | FERRITE 0UH | |
| FB274 | 1-500-284-21 | FERRITE 0UH | |
| FB275 | 1-414-760-21 | FERRITE 0UH | |
| FB276 | 1-500-284-21 | FERRITE 0UH | |
| FB601 | 1-414-760-21 | FERRITE 0UH | |
| | | < IC > | |
| IC001 | 8-752-090-20 | IC CXA3057R-T6 | |
| IC101 | 8-752-093-69 | IC CXA3265R-T4 | |
| IC151 | 8-759-670-78 | IC HG75C012SFL | |
| IC153 | 8-759-714-10 | IC BU3095-01FV-E2 | |
| IC221 | 8-759-599-37 | IC AN2225FHQ-EB | |
| IC271 | 8-752-386-72 | IC CXD2444R-T4 | |
| IC272 | 8-759-699-92 | IC AD80013AJSTRL | |
| IC301 | 8-759-637-96 | IC MPC17A135DTAEL | |
| IC302 | 8-759-681-42 | IC NJM12902V(TE2) | |
| IC351 | 8-752-093-74 | IC CXA3285R-T6 | |
| IC401 | 8-759-593-47 | IC AK6417AM-E2<br>(TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) | |
| IC401 | 8-759-640-87 | IC BR9016RFV-E2<br>(TR618E/TR718E/TR728E/TRV49E/ TRV58E/TRV59E/TRV78E/TRV98E) | |
| IC402 | 8-759-836-63 | IC MB91191RPFF-G-166-BND-ER | |
| IC451 | 8-759-640-85 | IC CXA8096R-TBM | |
| IC502 | 8-759-424-79 | IC S-8423YFS-T2<br>(TRV49/TRV58/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) | |
| IC502 | 8-759-660-94 | IC NJU7285AV-TE2<br>(TR618/TR618E/TR718E/TR728E/ TR818/TRV49E/TRV58E/TRV59E) | |
| IC503 | 8-752-921-65 | IC CXP921048A-033R-T6 | |
| IC504 | 8-759-653-63 | IC S-817A36ANB-CUZ-T2 | |
| IC601 | 8-759-713-19 | IC BH2222FV-E2 | |
| | | < COIL > | |
| L001 | 1-416-669-11 | INDUCTOR 22uH<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) | |
| L002 | 1-416-670-11 | INDUCTOR 33uH | |
| L003 | 1-412-056-11 | INDUCTOR 4.7uH<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) | |
| L004 | 1-416-669-11 | INDUCTOR 22uH | |
| L005 | 1-419-354-21 | INDUCTOR 22uH | |

| Note : | Note : |
|---|---|
| The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.<br>Replace only with part number specified. | Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.<br>Ne les remplacer que par une pièce portant le numéro spécifié. |

| Ref. No. | Part No. | Description | | Remarks |
|---|---|---|---|---|
| L006 | 1-416-670-11 | INDUCTOR | 33uH | |
| L007 | 1-419-354-21 | INDUCTOR | 22uH | |
| L008 | 1-469-524-91 | INDUCTOR | 4.7uH | |
| L009 | 1-469-524-91 | INDUCTOR | 4.7uH | |
| L010 | 1-469-524-91 | INDUCTOR | 4.7uH | |
| L011 | 1-469-524-91 | INDUCTOR | 4.7uH | |
| L012 | 1-414-400-41 | INDUCTOR | 22uH | |
| L013 | 1-469-524-91 | INDUCTOR | 4.7uH | |
| L014 | 1-469-526-91 | INDUCTOR | 22uH | |
| L016 | 1-414-400-41 | INDUCTOR | 22uH | |
| L101 | 1-414-406-41 | INDUCTOR | 220uH | |
| L102 | 1-412-952-11 | INDUCTOR | 12uH | |
| L103 | 1-469-526-91 | INDUCTOR | 22uH | |
| L104 | 1-414-406-41 | INDUCTOR | 220uH | |
| L151 | 1-469-570-21 | INDUCTOR | 10uH | |
| L152 | 1-469-570-21 | INDUCTOR | 10uH | |
| L154 | 1-469-570-21 | INDUCTOR | 10uH | |
| L155 | 1-469-570-21 | INDUCTOR | 10uH | |
| L156 | 1-412-945-11 | INDUCTOR | 3.3uH | |
| L221 | 1-469-525-91 | INDUCTOR | 10uH | |
| L224 | 1-469-525-91 | INDUCTOR | 10uH | |
| L271 | 1-469-570-21 | INDUCTOR | 10uH | |
| L272 | 1-469-525-91 | INDUCTOR | 10uH | |
| L301 | 1-469-525-91 | INDUCTOR | 10uH | |
| L303 | 1-469-570-21 | INDUCTOR | 10uH | |
| L601 | 1-469-570-21 | INDUCTOR | 10uH | |
| L705 | 1-419-860-21 | INDUCTOR | 10uH | (EXCEPT TR818) |

< TRANSISTOR >

| Ref. No. | Part No. | Description | | Remarks |
|---|---|---|---|---|
| Q001 | 8-729-038-05 | TRANSISTOR | HN1K02FU(T5RSONY) | |
| Q002 | 8-729-051-49 | TRANSISTOR | TPC8305(TE12L) | |
| Q003 | 8-729-101-07 | TRANSISTOR | 2SB798-T1-DLDK | |
| Q004 | 8-729-042-31 | TRANSISTOR | UN9213J-(K8).SO | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q004 | 8-729-052-64 | TRANSISTOR | DTC144EHT2L | (TR618/TR618E/TR718E/TR728E/TR818) |
| Q006 | 8-729-054-82 | TRANSISTOR | XN09D6100LS0 | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q007 | 8-729-043-60 | TRANSISTOR | CPH6102-TL | |
| Q008 | 8-729-054-82 | TRANSISTOR | XN09D6100LS0 | |
| Q009 | 8-729-054-82 | TRANSISTOR | XN09D6100LS0 | |
| Q010 | 8-729-054-82 | TRANSISTOR | XN09D6100LS0 | |
| Q011 | 8-729-054-82 | TRANSISTOR | XN09D6100LS0 | |
| Q012 | 8-729-054-82 | TRANSISTOR | XN09D6100LS0 | |
| Q014 | 8-729-053-52 | TRANSISTOR | N1C01FE-Y/GR(TPLR3) | |
| Q015 | 8-729-101-07 | TRANSISTOR | 2SB798-T1-DLDK | |
| Q016 | 8-729-042-26 | TRANSISTOR | 2SB1462J-QR(K8).SO | |
| Q018 | 8-729-052-64 | TRANSISTOR | DTC144EHT2L | |
| Q019 | 8-729-053-54 | TRANSISTOR | HN1A01FE-Y/GR(TPLR3) | |
| Q020 | 8-729-053-52 | TRANSISTOR | HN1C01FE-Y/GR(TPLR3) | (TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q021 | 8-729-052-66 | TRANSISTOR | 2SC4617HT2L | |
| Q022 | 8-729-052-65 | TRANSISTOR | 2SC4617HT2L | |
| Q023 | 8-729-052-65 | TRANSISTOR | 2SA1774HT2L | |
| Q026 | 8-729-053-54 | TRANSISTOR | HN1A01FE-Y/GR(TPLR3) | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q027 | 8-729-042-28 | TRANSISTOR | 2SD2216J-QR(K8).SO | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q071 | 8-729-042-31 | TRANSISTOR | UN9213J-(K8).SO | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q072 | 8-729-041-76 | TRANSISTOR | NDS356AP | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q101 | 8-729-047-19 | TRANSISTOR | 2SA1965-S-TL | |
| Q102 | 8-729-052-65 | TRANSISTOR | 2SA1774HT2L | |
| Q103 | 8-729-054-48 | TRANSISTOR | HN1B04FE-Y/GR(TPLR3) | |
| Q104 | 8-729-052-64 | TRANSISTOR | DTC144EHT2L | |
| Q105 | 8-729-053-58 | TRANSISTOR | RN1904FE(TPLR3) | |
| Q107 | 8-729-052-65 | TRANSISTOR | 2SA1774HT2L | |
| Q151 | 8-729-053-53 | TRANSISTOR | HN1B04FE-Y/GR(TPLR3) | |
| Q152 | 8-729-042-26 | TRANSISTOR | 2SB1462J-QR(K8).SO | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q153 | 8-729-042-26 | TRANSISTOR | 2SB1462J-QR(K8).SO | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q154 | 8-729-042-26 | TRANSISTOR | 2SA1832F-Y/GR(TPL3) | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q156 | 8-729-052-65 | TRANSISTOR | 2SA1774HT2L | |
| Q158 | 8-729-052-65 | TRANSISTOR | 2SA1774HT2L | |
| Q301 | 8-729-052-66 | TRANSISTOR | 2SC4617HT2L | |
| Q302 | 8-729-054-51 | TRANSISTOR | RN2910FE(TPLR3) | |
| Q303 | 8-729-052-66 | TRANSISTOR | 2SC4617HT2L | |
| Q352 | 8-729-052-63 | TRANSISTOR | DTC143THT2L | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q354 | 8-729-053-52 | TRANSISTOR | HN1C01FE-Y/GR(TPLR3) | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q355 | 8-729-053-56 | TRANSISTOR | RN4990FE(TPLR3) | |
| Q451 | 8-729-052-66 | TRANSISTOR | 2SC4617HT2L | |
| Q501 | 8-729-041-43 | TRANSISTOR | HN1L02FU(TE85R) | |
| Q701 | 8-729-052-64 | TRANSISTOR | DTC144EHT2L | |
| Q702 | 8-729-043-94 | TRANSISTOR | CPH3106-PM-TL | (EXCEPT TR818) |
| Q703 | 8-729-028-26 | TRANSISTOR | 2SK1829(TE85L) | (EXCEPT TR818) |
| Q704 | 8-729-903-53 | TRANSISTOR | 2SB1132-T1 00Q | |
| Q705 | 8-729-052-66 | TRANSISTOR | 2SC4617HT2L | |

< RESISTOR >

| Ref. No. | Part No. | Description | | | | Remarks |
|---|---|---|---|---|---|---|
| R001 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W | |
| R002 | 1-216-839-11 | METAL CHIP | 33K | 5% | 1/16W | |
| R003 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W | |
| R006 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W | |
| R007 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W | |
| R008 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W | |
| R010 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W | |
| R011 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W | |
| R012 | 1-216-839-11 | METAL CHIP | 33K | 5% | 1/16W | |
| R013 | 1-216-801-11 | METAL CHIP | 22 | 5% | 1/16W | |

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| R014 | 1-216-829-11 | METAL CHIP | 4.7K | 5% | 1/16W |
| R016 | 1-216-832-11 | METAL CHIP | 8.2K | 5% | 1/16W |
| R017 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R018 | 1-216-831-11 | METAL CHIP | 6.8K | 5% | 1/16W |
| R020 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R021 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R022 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R023 | 1-216-839-11 | METAL CHIP | 33K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R025 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R026 | 1-218-879-11 | METAL CHIP | 22K | 0.5% | 1/16W |
| R027 | 1-218-871-11 | METAL CHIP | 10K | 0.5% | 1/16W |
| R028 | 1-218-877-11 | METAL CHIP | 18K | 0.5% | 1/16W |
| R029 | 1-216-829-11 | METAL CHIP | 4.7K | 5% | 1/16W |
| R031 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R032 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W |
| R033 | 1-218-879-11 | METAL CHIP | 22K | 0.5% | 1/16W |
| R034 | 1-218-871-11 | METAL CHIP | 10K | 0.5% | 1/16W |
| R035 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R036 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R037 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R038 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W |
| R039 | 1-216-864-91 | SHORT | 0 | | (TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E) |
| R040 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W |
| R041 | 1-218-891-11 | METAL CHIP | 68K | 0.5% | 1/16W<br>(TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R041 | 1-218-895-11 | METAL CHIP | 100K | 0.5% | 1/16W<br>(TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E) |
| R042 | 1-218-871-11 | METAL CHIP | 10K | 0.5% | 1/16W<br>(TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E) |
| R042 | 1-218-879-11 | METAL CHIP | 22K | 0.5% | 1/16W<br>(TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R043 | 1-218-903-11 | METAL CHIP | 220K | 0.5% | 1/16W |
| R044 | 1-218-895-11 | METAL CHIP | 100K | 0.5% | 1/16W<br>(TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R045 | 1-218-887-11 | METAL CHIP | 47K | 0.5% | 1/16W<br>(TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R046 | 1-218-877-11 | METAL CHIP | 18K | 0.5% | 1/16W<br>(TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R047 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R048 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R049 | 1-216-864-91 | SHORT | 0 | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R050 | 1-218-903-11 | METAL CHIP | 220K | 0.5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R051 | 1-218-891-11 | METAL CHIP | 68K | 0.5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R052 | 1-216-801-11 | METAL CHIP | 22 | 5% | 1/16W |
| R071 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R072 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R073 | 1-216-864-11 | METAL CHIP | 1 | 5% | 1/16W<br>(TR818) |
| R073 | 1-216-864-91 | SHORT | 0 | | (TR618/TR618E/TR718E/TR728E) |
| R074 | 1-218-446-11 | METAL CHIP | 1 | 5% | 1/16W<br>(TR818) |
| R101 | 1-216-804-11 | METAL CHIP | 39 | 5% | 1/16W<br>(TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E) |
| R101 | 1-216-806-11 | RES-CHIP | 56 | 5% | 1/16W<br>(TR618/TRV818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) |
| R102 | 1-216-818-11 | METAL CHIP | 560 | 5% | 1/16W |
| R105 | 1-216-809-11 | METAL CHIP | 100 | 5% | 1/16W |
| R106 | 1-216-838-11 | METAL CHIP | 27K | 5% | 1/16W |
| R107 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R108 | 1-216-829-11 | METAL CHIP | 4.7K | 5% | 1/16W |
| R109 | 1-216-838-11 | METAL CHIP | 27K | 5% | 1/16W |
| R110 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W |
| R111 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W |
| R112 | 1-216-814-11 | METAL CHIP | 270 | 5% | 1/16W |
| R113 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W |
| R115 | 1-216-839-11 | METAL CHIP | 33K | 5% | 1/16W |
| R116 | 1-216-826-11 | METAL CHIP | 2.7K | 5% | 1/16W |
| R117 | 1-216-826-11 | METAL CHIP | 2.7K | 5% | 1/16W |
| R118 | 1-218-899-11 | METAL CHIP | 150K | 0.5% | 1/16W |
| R120 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W |
| R121 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W |
| R122 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W |
| R123 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W |
| R124 | 1-216-838-11 | METAL CHIP | 27K | 5% | 1/16W |
| R154 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W |
| R155 | 1-216-822-11 | METAL CHIP | 1.2K | 5% | 1/16W |
| R156 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R157 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R158 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV88/TRV98) |
| R160 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W<br>(EXCEPT TR818) |
| R165 | 1-216-864-91 | SHORT | 0 | | (TR818) |
| R166 | 1-216-864-91 | SHORT | 0 | | (TR818) |
| R167 | 1-216-864-91 | SHORT | 0 | | (TR818) |
| R168 | 1-216-830-11 | METAL CHIP | 5.6K | 5% | 1/16W |
| R169 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R170 | 1-216-831-11 | METAL CHIP | 6.8K | 5% | 1/16W |

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| R171 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R172 | 1-216-809-11 | METAL CHIP | 100 | 5% | 1/16W |
| R173 | 1-216-840-11 | METAL CHIP | 39K | 5% | 1/16W |
| R174 | 1-216-820-11 | METAL CHIP | 820 | 5% | 1/16W |
| R175 | 1-216-827-11 | METAL CHIP | 3.3K | 5% | 1/16W |
| R176 | 1-216-832-11 | METAL CHIP | 8.2K | 5% | 1/16W |
| R177 | 1-216-834-11 | METAL CHIP | 12K | 5% | 1/16W |
| R178 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R179 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W |
| R180 | 1-216-830-11 | METAL CHIP | 5.6K | 5% | 1/16W |
| R181 | 1-216-834-11 | METAL CHIP | 12K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R182 | 1-216-814-11 | METAL CHIP | 270 | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R183 | 1-216-814-11 | METAL CHIP | 270 | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R184 | 1-216-834-11 | METAL CHIP | 12K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R185 | 1-216-834-11 | METAL CHIP | 12K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R186 | 1-216-814-11 | METAL CHIP | 270 | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R187 | 1-216-814-11 | METAL CHIP | 270 | 5% | 1/16W<br>(TR818) |
| R188 | 1-216-834-11 | METAL CHIP | 12K | 5% | 1/16W |
| R189 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(EXCEPT TR818) |
| R189 | 1-216-834-11 | METAL CHIP | 12K | 5% | 1/16W<br>(TR818) |
| R190 | 1-216-814-11 | METAL CHIP | 270 | 5% | 1/16W<br>(TR818) |
| R190 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W<br>(EXCEPT TR818) |
| R191 | 1-216-814-11 | METAL CHIP | 270 | 5% | 1/16W<br>(TR818) |
| R192 | 1-216-834-11 | METAL CHIP | 12K | 5% | 1/16W |
| R193 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W |
| R195 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| R196 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| R197 | 1-216-834-11 | METAL CHIP | 12K | 5% | 1/16W |
| R198 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R199 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R200 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W |
| R204 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R208 | 1-216-864-91 | SHORT | 0 | | |
| R216 | 1-216-807-11 | METAL CHIP | 68 | 5% | 1/16W |
| R226 | 1-216-864-91 | SHORT | 0 | | |
| R229 | 1-216-807-11 | METAL CHIP | 68 | 5% | 1/16W |
| R232 | 1-218-879-11 | METAL CHIP | 22K | 0.5% | 1/16W |
| R271 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E) |
| R274 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R275 | 1-216-864-91 | SHORT | 0 | | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R280 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W |
| R281 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W |
| R301 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R302 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R304 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R306 | 1-216-797-11 | METAL CHIP | 10 | 5% | 1/16W |
| R307 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W |
| R308 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R309 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W |
| R310 | 1-216-849-11 | METAL CHIP | 220K | 5% | 1/16W |
| R311 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W |
| R312 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W |
| R313 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R314 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| R316 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W |
| R317 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R318 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R319 | 1-216-815-11 | METAL CHIP | 330 | 5% | 1/16W |
| R321 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R322 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W |
| R323 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R351 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R353 | 1-216-864-91 | SHORT | 0 | | (TR818/TR618/TR618E/TR718E/TR728E) |
| R354 | 1-216-809-11 | METAL CHIP | 100 | 5% | 1/16W<br>(TR818/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R356 | 1-216-864-91 | SHORT | 0 | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R358 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(TR818/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R363 | 1-216-832-11 | METAL CHIP | 8.2K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R364 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R368 | 1-216-847-11 | METAL CHIP | 150K | 5% | 1/16W |
| R372 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R373 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W |
| R379 | 1-216-820-11 | METAL CHIP | 820 | 5% | 1/16W |
| R382 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R401 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R402 | 1-216-854-11 | METAL CHIP | 560K | 5% | 1/16W |
| R403 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R404 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R408 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R411 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R417 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R420 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R428 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R431 | 1-218-881-11 | METAL CHIP | 27K | 0.5% | 1/16W |
| R432 | 1-218-895-11 | METAL CHIP | 100K | 0.5% | 1/16W |
| R433 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R434 | 1-216-864-91 | SHORT | 0 | | |
| R451 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R452 | 1-216-851-11 | METAL CHIP | 330K | 5% | 1/16W |
| R455 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R457 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| R458 | 1-217-671-11 | METAL CHIP | 1 | 5% | 1/10W |
| R459 | 1-217-671-11 | METAL CHIP | 1 | 5% | 1/10W |
| R460 | 1-217-671-11 | METAL CHIP | 1 | 5% | 1/10W |
| R461 | 1-216-812-11 | METAL CHIP | 180 | 5% | 1/16W |
| R462 | 1-216-811-11 | METAL CHIP | 150 | 5% | 1/16W |
| R464 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R465 | 1-216-829-11 | METAL CHIP | 4.7K | 5% | 1/16W |
| R466 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E) |
| R466 | 1-216-864-91 | SHORT | 0 | | (TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) |
| R467 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W<br>(TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) |
| R467 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W<br>(TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E) |
| R468 | 1-216-827-11 | METAL CHIP | 3.3K | 5% | 1/16W |
| R469 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R470 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E) |
| R470 | 1-216-864-91 | SHORT | 0 | | (TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) |
| R471 | 1-218-446-11 | METAL CHIP | 1 | 5% | 1/16W |
| R472 | 1-218-446-11 | METAL CHIP | 1 | 5% | 1/16W |
| R474 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R480 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W<br>(TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) |
| R480 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W<br>(TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E) |
| R481 | 1-216-829-11 | METAL CHIP | 4.7K | 5% | 1/16W |
| R501 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R502 | 1-216-864-91 | SHORT | 0 | | |
| R504 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R513 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R516 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R519 | 1-218-903-11 | METAL CHIP | 220K | 0.5% | 1/16W |
| R520 | 1-218-911-11 | METAL CHIP | 470K | 0.5% | 1/16W |
| R521 | 1-218-911-11 | METAL CHIP | 470K | 0.5% | 1/16W |
| R525 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R531 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W |
| R542 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R543 | 1-216-854-11 | METAL CHIP | 560K | 5% | 1/16W |
| R544 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R547 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W |
| R552 | 1-219-570-11 | RES-CHIP | 10M | 5% | 1/16W |
| R554 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R558 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R559 | 1-216-803-11 | METAL CHIP | 33 | 5% | 1/16W |
| R611 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(TR618/TR818/TRV68/TRV78/TRV88/TRV98) |
| R611 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W<br>(TRV49/TRV58) |
| R611 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(TRV49E/TRV58E/TRV59E) |
| R612 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(TR618E/TR718E/TR728E/TRV78E/TRV98E) |
| R612 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W<br>(TRV49E/TRV58E/TRV59E) |
| R612 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(TRV49/TRV58) |

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| R613 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(TR618/TR618E/TR718E/TR728E) |
| R613 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W<br>(TR818/TRV78E/TRV98E) |
| R613 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV88/TRV98) |
| R614 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R614 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(TR818) |
| R701 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W<br>(EXCEPT TR818) |
| R702 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W<br>(EXCEPT TR818) |
| R703 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(EXCEPT TR818) |
| R704 | 1-216-795-11 | RES-CHIP | 6.8 | 5% | 1/16W |
| R705 | 1-216-830-11 | METAL CHIP | 5.6K | 5% | 1/16W |
| R706 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R707 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W |
| R708 | 1-216-795-11 | RES-CHIP | 6.8 | 5% | 1/16W |
| R709 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W<br>(TR818) |
| R710 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W<br>(TR818) |
| R711 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W<br>(TRV68/TRV78/TRV88/TRV98) |
| R712 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W<br>(TRV68/TRV78/TRV88/TRV98) |
| R713 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W<br>(TR818/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R916 | 1-218-881-11 | METAL CHIP | 27K | 0.5% | 1/16W |
| R917 | 1-218-893-11 | METAL CHIP | 82K | 0.5% | 1/16W |

< COMPOSITION CIRCUIT BLOCK >

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| RB101 | 1-239-702-81 | RESISTOR, NETWORK 22K | |
| RB102 | 1-239-698-11 | RESISTOR, NETWORK 10K | |
| RB151 | 1-239-698-11 | RESISTOR, NETWORK 10K | |
| RB221 | 1-239-686-11 | RESISTOR, NETWORK 1K | |
| RB222 | 1-239-686-11 | RESISTOR, NETWORK 1K | |
| RB223 | 1-239-672-81 | RESISTOR, NETWORK 68 | |
| RB272 | 1-234-380-21 | RES, NETWORK 47KX4 (1005) | |
| RB273 | 1-234-372-21 | RES, NETWORK 100X4 (1005) | |
| RB301 | 1-239-708-81 | RESISTOR, NETWORK 68K | |
| RB302 | 1-239-702-81 | RESISTOR, NETWORK 22K | |
| RB351 | 1-239-698-11 | RESISTOR, NETWORK 10K | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| RB352 | 1-239-706-81 | RESISTOR, NETWORK 47K | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| RB401 | 1-234-381-21 | RES, NETWORK 100KX4 (1005) | |
| RB402 | 1-239-694-81 | RESISTOR, NETWORK 4.7K | |
| RB406 | 1-239-698-11 | RESISTOR, NETWORK 10K | |
| RB407 | 1-239-690-81 | RESISTOR, NETWORK 2.2K | |
| RB451 | 1-234-381-21 | RES, NETWORK 100KX4 (1005) | |
| RB452 | 1-239-698-11 | RESISTOR, NETWORK 10K | |
| RB501 | 1-234-375-21 | RES, NETWORK 1KX4 (1005) | |
| RB502 | 1-234-383-21 | RES, NETWORK 470KX4 (1005) | |

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| RB503 | 1-234-383-21 | RES, NETWORK 470KX4 (1005) | |
| RB504 | 1-234-375-21 | RES, NETWORK 1KX4 (1005) | |
| RB505 | 1-239-686-11 | RESISTOR, NETWORK 1K | |
| RB506 | 1-234-378-21 | RES, NETWORK 10KX4 (1005) (TR618/TR618E/TR718E/TR728E/TR818) | |
| RB508 | 1-239-686-11 | RESISTOR, NETWORK 1K | |
| RB509 | 1-239-657-81 | RESISTOR, NETWORK 470K | |
| RB510 | 1-234-375-21 | RES, NETWORK 1KX4 (1005) | |
| RB511 | 1-234-383-21 | RES, NETWORK 470KX4 (1005) | |
| RB514 | 1-239-706-81 | RESISTOR, NETWORK 47K | |
| | | < TRANSFORMER > | |
| T001 | 1-435-252-11 | TRANSFORMER, DC-DC CONVERTER | |
| | | < VARISTOR > | |
| VDR701 | 1-803-974-21 | VARISTOR, CHIP | |
| VDR703 | 1-803-974-21 | VARISTOR, CHIP | |
| VDR704 | 1-803-974-21 | VARISTOR, CHIP | |
| VDR706 | 1-803-974-21 | VARISTOR, CHIP | |
| VDR707 | 1-803-974-21 | VARISTOR, CHIP | |
| | | < VIBRATOR > | |
| X271 | 1-760-320-11 | VIBRATOR, CRYSTAL (28.636363MHz) (TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) | |
| X271 | 1-760-321-11 | VIBRATOR, CRYSTAL (28.375MHz) (TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E) | |
| X401 | 1-760-655-41 | VIBRATOR, CRYSTAL (20MHz) | |
| X501 | 1-767-980-21 | VIBRATOR, CERAMIC (20MHz) | |
| X502 | 1-760-458-21 | VIBRATOR, CRYSTAL (32.768kHz) | |

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| | A-7073-838-A | VF-129 (N) BOARD, COMPLETE (EXCEPT TR818) | |
| | | ****************************************** (Ref.No.;1000 Series) | |
| | | < CAPACITOR > | |
| C901 | 1-107-854-11 | TANTAL. CHIP 68uF 20% 6.3V | |
| C902 | 1-163-038-11 | CERAMIC CHIP 0.1uF 25V | |
| C903 | 1-135-145-11 | TANTALUM CHIP 0.47uF 10% 35V | |
| C904 | 1-162-965-11 | CERAMIC CHIP 0.0015uF 10% 50V | |
| C905 | 1-104-752-11 | TANTAL. CHIP 33uF 20% 6.3V | |
| C906 | 1-162-638-11 | CERAMIC CHIP 1uF 16V | |
| C907 | 1-104-563-11 | FILM CHIP 0.1uF 5% 16V | |
| C908 | 1-162-920-11 | CERAMIC CHIP 27PF 5% 50V | |
| C909 | 1-163-009-11 | CERAMIC CHIP 0.001uF 10% 50V | |
| ⚠C910 | 1-162-625-11 | CERAMIC CHIP 0.0047uF 5% 50V | |
| ⚠C911 | 1-164-715-11 | CERAMIC CHIP 0.0068uF 5% 50V | |
| C912 | 1-107-854-11 | TANTAL. CHIP 68uF 20% 6.3V | |
| C913 | 1-135-145-11 | TANTALUM CHIP 0.47uF 10% 35V | |
| C914 | 1-113-984-11 | TANTAL. CHIP 1.5uF 20% 35V | |
| C915 | 1-163-037-11 | CERAMIC CHIP 0.022uF 10% 25V | |
| C916 | 1-135-475-91 | CERAMIC CHIP 0.001uF 10% 630V | |
| | | < CONNECTOR > | |
| * CN901 | 1-785-379-01 | CONNECTOR, FFC/FPC 4P | |
| * CN902 | 1-580-057-11 | PIN, CONNECTOR (SMD) 4P | |
| | | < DIODE > | |
| D901 | 8-719-951-21 | DIODE PR1102W-TR | |
| D903 | 8-719-073-01 | DIODE MA111-(K8).S0 | |
| | | < IC > | |
| IC901 | 8-759-196-14 | IC BA7149F-E2 | |
| | | < COIL > | |
| L901 | 1-412-031-11 | INDUCTOR CHIP 47uH | |
| L902 | 1-410-387-11 | INDUCTOR CHIP 33uH | |
| ⚠L903 | 1-411-697-11 | COIL, FERRITE (HLC) | |
| | | < TRANSISTOR > | |
| Q901 | 8-729-230-63 | TRANSISTOR 2SD1819A-QRS-TX | |
| Q902 | 8-729-106-68 | TRANSISTOR 2SD1615-T1GLGK | |
| Q903 | 8-729-216-31 | TRANSISTOR 2SA1163G-TE85L | |
| Q904 | 8-729-230-63 | TRANSISTOR 2SD1819A-QRS-TX | |
| | | < RESISTOR > | |
| R901 | 1-216-817-11 | METAL CHIP 470 5% 1/16W | |
| R902 | 1-216-817-11 | METAL CHIP 470 5% 1/16W | |
| R903 | 1-216-055-00 | METAL CHIP 1.8K 5% 1/10W | |
| R904 | 1-216-833-11 | METAL CHIP 10K 5% 1/16W | |
| R905 | 1-216-822-11 | METAL CHIP 1.2K 5% 1/16W | |
| R906 | 1-216-823-11 | METAL CHIP 1.5K 5% 1/16W | |
| R907 | 1-216-845-11 | METAL CHIP 100K 5% 1/16W | |
| R908 | 1-216-852-11 | METAL CHIP 390K 5% 1/16W | |
| R909 | 1-216-833-11 | METAL CHIP 10K 5% 1/16W | |
| R910 | 1-216-835-11 | METAL CHIP 15K 5% 1/16W | |
| R911 | 1-216-160-00 | RES-CHIP 27 5% 1/8W | |
| R912 | 1-216-857-11 | METAL CHIP 1M 5% 1/16W | |
| R915 | 1-218-879-11 | METAL CHIP 22K 0.5% 1/16W | |
| R917 | 1-218-891-11 | METAL CHIP 68K 0.5% 1/16W | |
| R918 | 1-216-829-11 | METAL CHIP 4.7K 5% 1/16W | |
| R919 | 1-216-843-11 | METAL CHIP 68K 5% 1/16W | |
| R920 | 1-216-837-11 | METAL CHIP 22K 5% 1/16W | |
| R921 | 1-216-795-11 | RES-CHIP 6.8 5% 1/16W | |
| R921 | 1-216-800-11 | RES-CHIP 18 5% 1/16W | |
| R922 | 1-216-850-11 | METAL CHIP 270K 5% 1/16W | |
| R923 | 1-216-857-11 | METAL CHIP 1M 5% 1/16W | |
| R924 | 1-216-862-11 | RES-CHIP 2.7M 5% 1/16W | |
| R925 | 1-216-862-11 | RES-CHIP 2.7M 5% 1/16W | |
| R926 | 1-216-821-11 | METAL CHIP 1K 5% 1/16W | |
| R927 | 1-216-821-11 | METAL CHIP 1K 5% 1/16W | |
| R928 | 1-216-827-11 | METAL CHIP 3.3K 5% 1/16W | |
| R929 | 1-216-821-11 | METAL CHIP 1K 5% 1/16W | |
| R930 | 1-216-791-11 | METAL CHIP 3.3 5% 1/16W | |
| R931 | 1-217-671-11 | METAL CHIP 1 5% 1/10W | |
| R932 | 1-216-829-11 | METAL CHIP 4.7K 5% 1/16W | |
| | | < VARIABLE RESISTOR > | |
| RV903 | 1-238-852-11 | RES, ADJ, CERMET 470 | |
| RV904 | 1-238-095-11 | RES, ADJ, CERMET 470K | |

**Note :**
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

**Note :**
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| | | < TRANSFORMER > | | | |
| ⚠T901 | 1-453-124-11 | TRANSFORMER ASSY, FLYBACK | | | |
| T902 | 1-431-915-11 | TRANSFORMER ASSY, FLYBACK (M) | | | |
| | | < FLAT CABLE > | | | |
| ⚠W901 | 1-540-019-21 | SOCKET ASSY, CRT | | | |

---

A-7074-193-A VF-141 BOARD, COMPLETE (TR818)
******************************
(Ref.No.;10000 Series)

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| | | < CAPACITOR > | | | |
| C4501 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V |
| C4501 | 1-135-259-11 | TANTAL. CHIP | 10uF | 20% | 6.3V |
| C4503 | 1-107-826-11 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C4504 | 1-107-826-11 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C4507 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C4508 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C4509 | 1-162-970-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C4510 | 1-107-826-11 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C4511 | 1-164-739-11 | CERAMIC CHIP | 560PF | 5% | 50V |
| C4512 | 1-107-826-11 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C4513 | 1-107-826-11 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C4514 | 1-107-687-11 | TANTAL. CHIP | 3.3uF | 20% | 20V |
| C4515 | 1-164-357-11 | CERAMIC CHIP | 0.001uF | 5% | 50V |
| C4516 | 1-162-928-11 | CERAMIC CHIP | 120PF | 5% | 50V |
| C4517 | 1-107-826-11 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C4518 | 1-109-982-11 | CERAMIC CHIP | 1uF | 10% | 10V |
| C4519 | 1-109-982-11 | CERAMIC CHIP | 1uF | 10% | 10V |
| C4520 | 1-109-982-11 | CERAMIC CHIP | 1uF | 10% | 10V |
| C4521 | 1-107-826-11 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C4523 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V |
| C4524 | 1-164-505-11 | CERAMIC CHIP | 2.2uF | | 16V |
| C4526 | 1-107-726-11 | CERAMIC CHIP | 0.01uF | 10% | 25V |
| C4527 | 1-107-725-11 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| | | < CONNECTOR > | | | |
| CN4501 | 1-764-526-11 | CONNECTOR, FFC/FPC 18P | | | |
| CN4502 | 1-750-630-11 | CONNECTOR, FFC/FPC (ZIF) 16P | | | |
| | | < DIODE > | | | |
| D4502 | 8-713-102-80 | DIODE 1T369-01-T8A | | | |
| D4503 | 8-719-077-74 | DIODE MA2S784008S0 | | | |
| D4504 | 8-719-077-74 | DIODE MA2S784008S0 | | | |
| | | < FERRITE BEAD > | | | |
| FB4502 | 1-500-329-21 | FERRITE | 0UH | | |
| FB4505 | 1-500-329-21 | FERRITE | 0UH | | |
| | | < IC > | | | |
| IC4501 | 8-759-660-93 | IC RB5P004AM1 | | | |
| IC4502 | 8-752-405-57 | IC CXD3501AR-T4 | | | |
| | | < COIL > | | | |
| L4501 | 1-469-525-91 | INDUCTOR | 10uH | | |
| L4504 | 1-412-949-21 | INDUCTOR | 6.8uH | | |
| | | < TRANSISTOR > | | | |
| Q4504 | 8-729-037-52 | TRANSISTOR | 2SD2216J-QR(K8).SO | | |
| | | < RESISTOR > | | | |
| R4505 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W |
| R4507 | 1-218-895-11 | METAL CHIP | 100K | 0.5% | 1/16W |
| R4508 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R4513 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| R4515 | 1-216-826-11 | METAL CHIP | 2.7K | 5% | 1/16W |
| R4516 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R4517 | 1-216-843-11 | METAL CHIP | 68K | 5% | 1/16W |
| R4518 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W |
| R4520 | 1-216-843-11 | METAL CHIP | 68K | 5% | 1/16W |
| R4521 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W |
| R4522 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R4523 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R4524 | 1-216-844-11 | METAL CHIP | 82K | 5% | 1/16W |
| R4525 | 1-216-838-11 | METAL CHIP | 27K | 5% | 1/16W |
| R4526 | 1-216-809-11 | METAL CHIP | 100 | 5% | 1/16W |
| R4527 | 1-216-809-11 | METAL CHIP | 100 | 5% | 1/16W |
| R4528 | 1-216-809-11 | METAL CHIP | 100 | 5% | 1/16W |
| R4529 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W |
| R4530 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R4534 | 1-216-864-91 | SHORT | 0 | | |
| R4542 | 1-216-864-91 | SHORT | 0 | | |
| R4544 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W |
| R4545 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R4546 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R4547 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |

---

ACCESSORIES
***********

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| | 1-467-574-21 | REMOTE COMMANDER (RMT-708) | (TR728E/TRV49/TRV49E/TRV59E/TRV78/TRV78E/TRV98/TRV98E) |
| | 1-467-574-73 | REMOTE COMMANDER (RMT-708) | (TRV49E:E/TRV78E:E/TRV98E:E) |
| ⚠ | 1-475-599-11 | ADAPTOR, AC (AC-L10A) | (TR618/TR618E:E,HK,AUS/TR718E:AEP,UK/TR728E:AEP,UK/TR818/TRV49:E,HK,JE/TRV49E:E,HK,AUS,JE/TRV58/TRV58E/TRV59E/TRV68/TRV78:E,HK,JE/TRV78E/TRV88/TRV98:US,CND,E,HK,JE,BR/TRV98E:AEP,UK,E,HK,AUS,JE) |
| ⚠ | 1-475-599-71 | ADAPTOR, AC (AC-L10A) | (TRV49:KR/TRV78:KR/TRV98:KR) |
| ⚠ | 1-475-599-81 | ADAPTOR, AC (AC-L10B) | (TR618E:CN/TRV49E:CN/TRV98E:CN) |

| **Note :** | **Note :** |
|---|---|
| The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.<br>Replace only with part number specified. | Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.<br>Ne les remplacer que par une pièce portant le numéro spécifié. |

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| ⚠ | 1-569-007-11 | ADAPTOR, CONVERSION 2P | (TRV49:JE/TRV49E:JE/TRV78:JE/TRV78E:JE/TRV98:JE/TRV98E:JE) |
| ⚠ | 1-569-008-21 | ADAPTOR, CONVERSION 2P | (TR618/TR618E:E,HK/TR818:E,BR/TRV49:E,HK/TRV49E:E,HK/TRV58:E,BR/TRV68:E/TRV78:E,HK/TRV78E:E,HK/TRV88:E/TRV98:E,HK/TRV98E:E,HK) |
|  | 1-573-291-11 | ADAPTOR, CONVERSION 21P | (TR718E/TR728E/TRV58E/TRV59E/TRV78E:AEP,UK/TRV98E:AEP,UK) |
| * ⚠ | 1-575-131-11 | CORD, POWER | (TR818:E,BR/TRV49:E/TRV49E:E/TRV58:E,BR/TRV68:E/TRV78:E/TRV78E:E/TRV88:E/TRV98:E,BR/TRV98E:E) |
| ⚠ | 1-690-827-11 | CORD SET, POWER | (TR718E:AEP/TR728E:AEP/TRV58E:AEP/TRV59E:AEP/TRV78E:AEP/TRV98E:AEP) |
| ⚠ | 1-696-819-11 | CORD, POWER | (TR618E:AUS/TRV49E:AUS/TRV78E:AUS/TRV98E:AUS) |
| ⚠ | 1-769-608-11 | CORD, POWER | (TR618/TR618E:E/TR818:E/TRV49:E/TRV49E:E/TRV58:E/TRV68:E/TRV78:E/TRV78E:E/TRV88:E/TRV98:E/TRV98E:E) |
| ⚠ | 1-775-843-21 | CORD, POWER (WITH FILTER) | (TR718E:UK/TR728E:UK/TRV58E:UK/TRV59E:UK/TRV78E:UK/TRV98E:UK) |
| ⚠ | 1-776-985-11 | CORD, POWER | (TRV49:KR/TRV78:KR/TRV98:KR) |
| ⚠ | 1-782-476-11 | CORD, POWER | (TR618E:CN/TRV49E:CN/TRV98E:CN) |
| ⚠ | 1-783-374-11 | CORD, POWER | (TR618E:HK/TRV49:HK/TRV49E:HK/TRV78:HK/TRV78E:HK/TRV98:HK/TRV98E:HK) |
| ⚠ | 1-783-952-11 | CORD, POWER (TR818:AR/TRV58:AR) |  |
|  | 1-783-738-31 | CORD, CONNECTION (AV CABLE)(1.5m) |  |
| ⚠ | 1-790-107-22 | CORD, POWER | (TR818:US,CND/TRV58:US,CND/TRV68:US,CND/TRV88:US/TRV98:US,CND) |
| ⚠ | 1-790-732-11 | CORD, POWER | (TRV49:JE/TRV49E:JE/TRV78:JE/TRV78E:JE/TRV98:JE/TRV98E:JE) |
|  | 3-065-645-11 | MANUAL, INSTRUCTION (ENGLISH) | (TR618/TR818:US,CND) |
|  | 3-065-645-21 | MANUAL, INSTRUCTION (FRENCH) | (TR818:CND) |
|  | 3-065-645-31 | MANUAL, INSTRUCTION (SRANISH/PORTUGUESE) | (TR618/TR818:E,AR) |
|  | 3-065-645-41 | MANUAL, INSTRUCTION (TRANDTIONAL CHINESE) | (TR618) |
|  | 3-065-645-61 | MANUAL, INSTRUCTION (ARABIC) (TR618) |  |
|  | 3-065-646-11 | MANUAL, INSTRUCTION (ENGLISH/RUSSIAN) | (TR618E/TR718E:AEP/TR728E:AEP) |
|  | 3-065-646-21 | MANUAL, INSTRUCTION (FRENCH/GERMAN) | (TR618E:E/TR718E:AEP/TR728E:AEP) |
|  | 3-065-646-31 | MANUAL, INSTRUCTION (ENGLISH/DUTCH) | (TR718E:AEP/TR728E:AEP) |
|  | 3-065-646-41 | MANUAL, INSTRUCTION (SPANISH/PORTUGUESE) | (TR718E:AEP/TR728E:AEP) |
|  | 3-065-646-51 | MANUAL, INSTRUCTION (ITALIAN/GREEK) | (TR718E:AEP/TR728E:AEP) |
|  | 3-065-646-61 | MANUAL, INSTRUCTION (ENGLISH/SWEDISH) | (TR718E:AEP/TR728E:AEP) |
|  | 3-065-646-71 | MANUAL, INSTRUCTION (FINNISH/DANISH) | (TR718E:AEP/TR728E:AEP) |
|  | 3-065-646-81 | MANUAL, INSTRUCTION (POLISH/CZECH) | (TR718E:AEP/TR728E:AEP) |
|  | 3-065-646-91 | MANUAL, INSTRUCTION (SLOVAKIAN) | (TR718E:AEP/TR728E:AEP) |
|  | 3-065-647-11 | MANUAL, INSTRUCTION (ARABIC/PERSIAN) | (TR618E:E) |
|  | 3-065-647-21 | MANUAL, INSTRUCTION (SIMPLIFIED CHINESE) | (TR618E:E,CN) |
|  | 3-065-647-31 | MANUAL, INSTRUCTION (TRADITIONAL CHINESE) | (TR618E:HK) |
|  | 3-065-648-11 | MANUAL, INSTRUCTION (ENGLISH) | (TRV49:E,HK,JE/TRV58/TRV68/TRV78:E,HK,JE/TRV88/TRV98:US,CND,E,HK,JE) |
|  | 3-065-648-21 | MANUAL, INSTRUCTION (FRENCH) | (TRV58:CND/TRV68:CND/TRV98:CND) |
|  | 3-065-648-31 | MANUAL, INSTRUCTION (SPANISH/PORTUGUESE) | (TRV49:E,JE/TRV58:E,AR/TRV68:E/TRV78:E,JE/TRV88:E/TRV98:E,JE) |
|  | 3-065-648-41 | MANUAL, INSTRUCTION (TRADITIONAL CHINESE) | (TRV49:E,HK/TRV78:E,HK/TRV98:E,HK) |
|  | 3-065-648-51 | MANUAL, INSTRUCTION (KOREAN) | (TRV49:KR,JE/TRV78:KR,JE/TRV98:KR,JE) |
|  | 3-065-648-61 | MANUAL, INSTRUCTION (ARABIC) | (TRV49:E/TRV78:E/TRV98:E) |
|  | 3-065-649-11 | MANUAL, INSTRUCTION (ENGLISH/RUSSIAN) | (TRV49E/TRV58E:AEP/TRV59E:AEP/TRV78E:AEP,E,HK,AUS,JE/TRV98E:AEP,E,HK,AUS,JE,CN) |
|  | 3-065-649-21 | MANUAL, INSTRUCTION (FRENCH/GERMAN) | (TRV49E:E,JE/TRV58E:AEP/TRV59E:AEP/TRV78E:AEP,E,JE/TRV98E:AEP,E,JE) |
|  | 3-065-649-31 | MANUAL, INSTRUCTION (ENGLISH/DUTCH) | (TRV58E:AEP/TRV59E:AEP/TRV78E:AEP/TRV98E:AEP) |
|  | 3-065-649-41 | MANUAL, INSTRUCTION (SPANISH/PORTUGUESE) | (TRV58E:AEP/TRV59E:AEP/TRV78E:AEP/TRV98E:AEP) |
|  | 3-065-649-51 | MANUAL, INSTRUCTION (ITALIAN/GREEK) | (TRV58E:AEP/TRV59E:AEP1/TRV78E:AEP/TRV98E:AEP) |
|  | 3-065-649-61 | MANUAL, INSTRUCTION (EHGLISH/SWEDISH) | (TRV58E:AEP/TRV59E:AEP/TRV78E:AEP/TRV98E:AEP) |
|  | 3-065-649-71 | MANUAL, INSTRUCTION (FINNISH/DANISH) | (TRV58E:AEP/TRV59E:AEP/TRV78E:AEP/TRV98E:AEP) |
|  | 3-065-649-81 | MANUAL, INSTRUCTION (POLISH/CZECH) | (TRV58E:AEP/TRV59E:AEP/TRV78E:AEP/TRV98E:AEP) |
|  | 3-065-649-91 | MANUAL, INSTRUCTION (SLOVSAKIAN/HUNGARIAN) | (TRV58E:AEP/TRV59E:AEP/TRV78E:AEP/TRV98E:AEP) |
|  | 3-065-650-11 | MANUAL, INSTRUCTION (ARABIC/PERSIAN) | (TRV49E:E/TRV78E:E/TRV98E:E) |
|  | 3-065-650-21 | MANUAL, INSTRUCTION (SIMPLIFIED CHINESE) | (TRV49E:E,JE,CN/TRV78E:E,JE/TRV98E:E,JE,CN) |
|  | 3-065-650-31 | MANUAL, INSTRUCTION (TRANDTIONAL CHINESE) | (TRV49E:HK/TRV78E:HK/TRV98E:HK) |
|  | 3-958-131-01 | LID,BATTERY CASE (FOR RMT-708) |  |

| **Note :** | **Note :** |
|---|---|
| The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.<br>Replace only with part number specified. | Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.<br>Ne les remplacer que par une pièce portant le numéro spécifié. |

## 〈FOR CAMERA COLOR REPRODUCTION ADJUSTMENT〉

**For NTSC model**

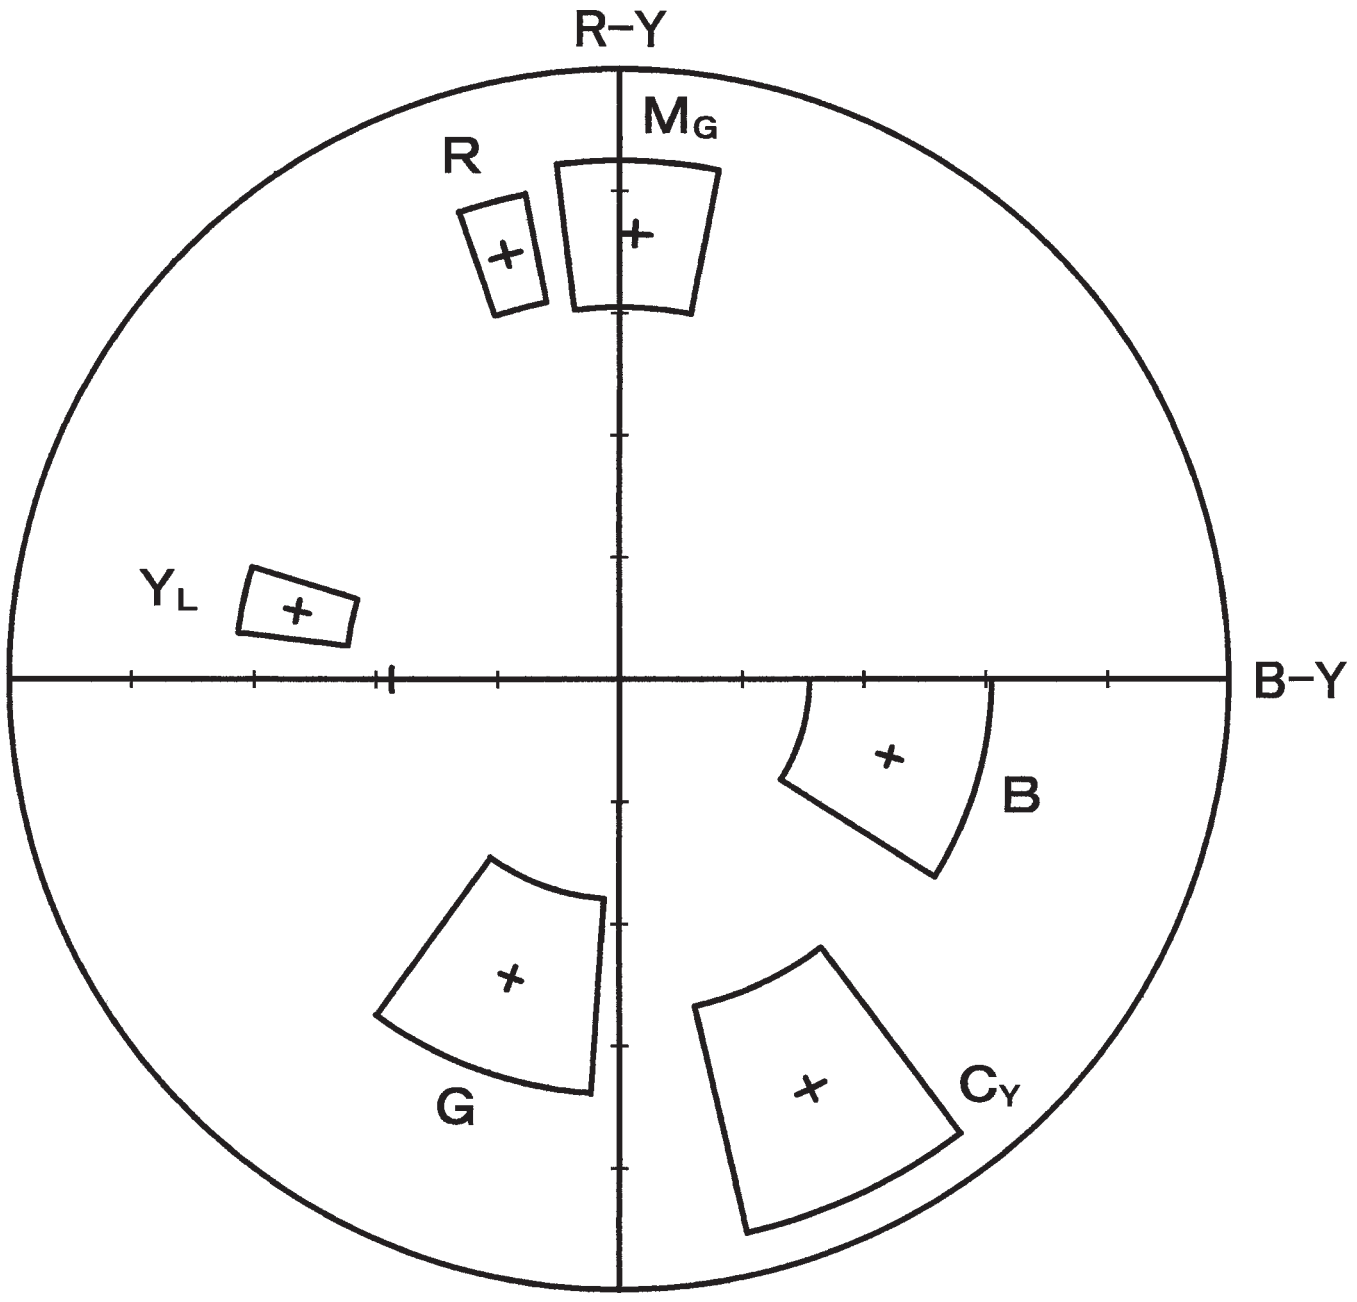
R−Y
MG
R
YL
B−Y
B
G
CY

**CCD-TR618/TR818/TRV49/TRV58/
TRV68/TRV78/TRV88/TRV98**

Take a copy of CAMERA COLOR REPRODUCTION FRAME with a clear sheet for use.

**For PAL model**

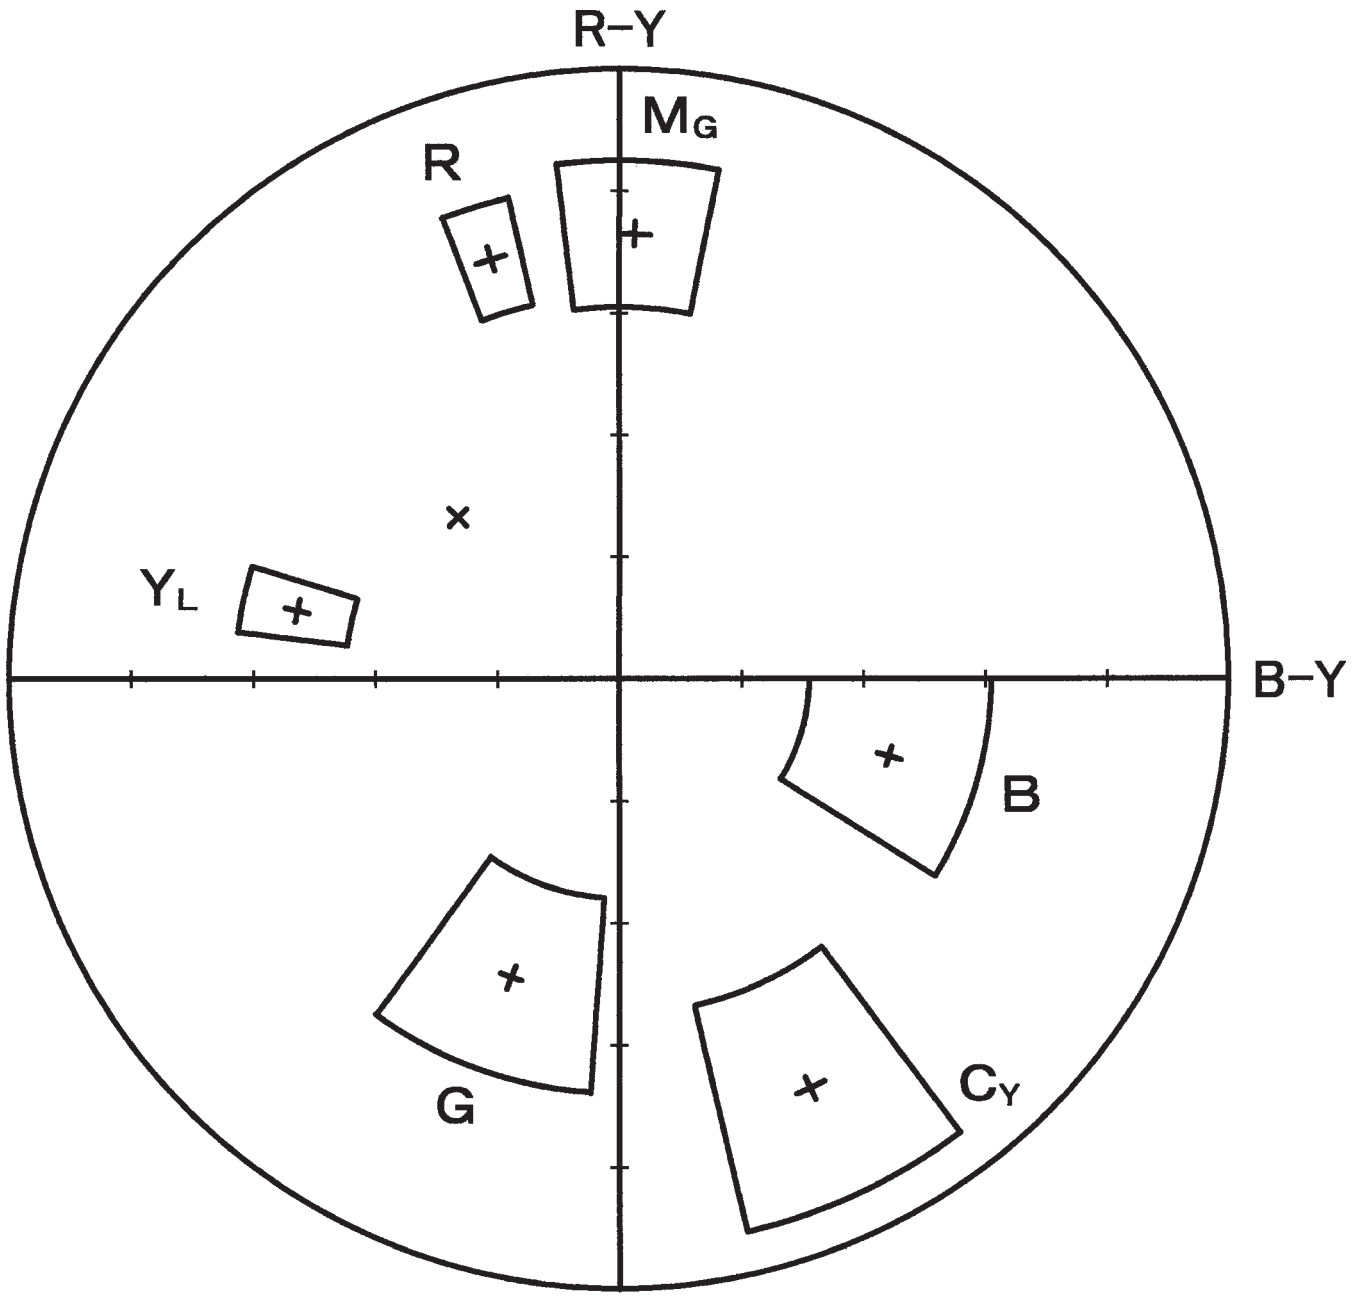
R−Y
MG
R
YL
B−Y
B
G
CY

**CCD-TR618E/TR718E/TR728E/TRV49E/
TRV58E/TRV59E/TRV78E/TRV98E**

Sony EMCS Co.

2002E1600-1

©2002.5

Published by DI Customer Center

# CCD-TR618/TR618E/TR718E/TR728E/TR818
# CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
## RMT-708

*US Model*
*CCD-TR818/TRV58/TRV68/TRV88/TRV98*
*Canadian Model*
*CCD-TR818/TRV58/TRV68/TRV98*
*AEP Model*
*UK Model*
*CCD-TR718E/TR728E/TRV58E/*
*TRV59E/TRV78E/TRV98E*
*E Model*
*CCD-TR618/TR618E/TR818/TRV49/*
*TRV49E/TRV58/TRV68/TRV78/*
*TRV78E/TRV88/TRV98/TRV98E*
*Australian Model*
*CCD-TR618E/TRV49E/TRV78E/TRV98E*
*Hong Kong Model*
*CCD-TR618E/TRV49/TRV49E/TRV78/*
*TRV78E/TRV98/TRV98E*
*Tourist Model*
*CCD-TRV49/TRV49E/TRV78/*
*TRV78E/TRV98/TRV98E*
*Chinese Model*
*CCD-TR618E/TRV49E/TRV98E*
*Brazilian Model*
*CCD-TR818/TRV58/TRV98*
*Argentina Model*
*CCD-TR818/TRV58*
*Korea Model*
*CCD-TRV49/TRV78/TRV98*

SONY®

# SERVICE MANUAL

2001. 11

# SUPPLEMENT-1

**File this supplement with the Service Manual.**
**(PV01-033)**

Subject

- This SUPPLEMENT -1 describes the change of the CCD imager of the CCD-TRV68/TRV78/TRV88/TRV98 (NTSC model) from type S to type M.
  The following contents are added in accordance with this change.

| | **Type S** | **Type M** |
|---|---|---|
| CCD BLOCK ASSY | A-7031-207-A | A-7031-301-A |
| VC-251 Board | A-7096-405-A<br>(1-680-208-11) | A-7096-815-A<br>(1-608-208-13) |
| Adjustments | | |
| CAMERA Color Reproduction Frame | | |

Note1: See page 2 “Discrimination of the CCD imager type” on how to identify the CCD imager type S from type M.
Note2: In the schematic diagrams, the changed blocks are exchanged with the new circuits.

- The LCD (Liquid Crystal Display) panel is supplied as the block assembly.

## Discrimination of the CCD imager type

**Method 1: The check method using the adjustment remote commander.**

1) Select page: 6, address: 04, and check the data.

| | Type S | Type M |
|---|---|---|
| **Data** | DF to FF | 9E to C0 |

**Method 2: The check method from the resistor values.**

1) Check the R611 and R612 on VC-251 board.

| | Type S | Type M |
|---|---|---|
| R611 | 10 kΩ | 47 kΩ |
| R612 | XX | 100 kΩ |

## TABLE OF CONTENTS

### 4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS ······ 3
- CD-281/286 (CCD IMAGER) SCHEMATIC DIAGRAM ······ 4
- VC-251 (CAMERA PROCESSOR, Y/C PROCESSOR, FOCUS/ZOOM MOTOR DRIVE, REC/PB AMP, LINE I/O AMP, SERVO, MODE CONTROL, HI CONTROL, AUDIO, DC/DC CONVERTER, CONNECTOR) PRINTED WIRING BOARD ······ 7
- VC-251 (CAMERA PROCESSOR AMP)(1/11) SCHEMATIC DIAGRAM ······ 11
- VC-251 (Y/C PROCESSOR)(2/11) SCHEMATIC DIAGRAM ······ 13
- VC-251 (FOCUS/ZOOM MOTOR DRIVE)(3/11) SCHEMATIC DIAGRAM ······ 15
- VC-251 (REC/PB AMP)(4/11) SCHEMATIC DIAGRAM ······ 17
- VC-251 (LINE I/O AMP)(5/11) SCHEMATIC DIAGRAM ······ 19
- VC-251 (SERVO)(6/11) SCHEMATIC DIAGRAM ······ 21
- VC-251 (MODE CONTROL)(7/11) SCHEMATIC DIAGRAM ······ 23
- VC-251 (HI CONTROL)(8/11) SCHEMATIC DIAGRAM ······ 25
- VC-251 (AUDIO)(9/11) SCHEMATIC DIAGRAM ······ 27
- VC-251 (DC/DC CONVERTER)(10/11) SCHEMATIC DIAGRAM ······ 29
- VC-251 (CONNECTOR)(11/11) SCHEMATIC DIAGRAM ······ 31

### 5. ADJUSTMENTS

1. Before starting adjustment ······ 33
1-1. Adjusting items when replacing main parts and boards ··· 33
4. F Page table ······ 35
5. E Page Table ······ 36
1-3. CAMERA SYSTEM ADJUSTMENTS ······ 37
0. CCD imager type input (CCD-TRV68/TRV78/TRV88/TRV98 (NTSC)) only ······ 37
7. Color Reproduction Adjustment ······ 38
9. Auto White Balance Adjustment ······ 39

### 6. REPAIR PARTS LIST

6-1. EXPLODED VIEWS ······ 40
6-1-5. CABINET (R) SECTION ······ 40
6-1-2. CABINET (L) SECTION ······ 40
6-1-7. LENS SECTION ······ 40
6-2. ELECTRICAL PARTS LIST ······ 41

* Color reproduction frame are shown on page 50 and 51.

# SECTION 4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

## 4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

### THIS NOTE IS COMMON FOR WIRING BOARDS AND SCHEMATIC DIAGRAMS (In addition to this, the necessary note is printed in each block)

**(For printed wiring boards)**

- ░: Pattern from the side which enables seeing.
  (The other layers' patterns are not indicated.)
- Through hole is omitted.
- Circled numbers refer to waveforms.
- There are few cases that the part printed on diagram isn't mounted in this model.
- Chip parts.

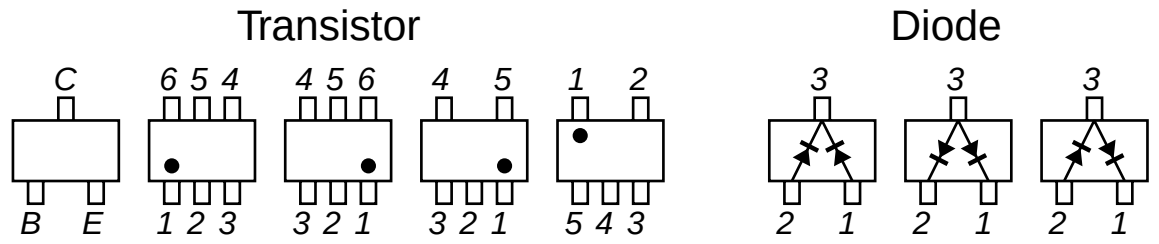

**(For schematic diagrams)**

- All capacitors are in mF unless otherwise noted. pF : m mF. 50V or less are not indicated except for electrolytics and tantalums.
- Chip resistors are 1/10W unless otherwise noted.
  kW=1000W, MW=1000kW.
- Caution when replacing chip parts.
  New parts must be attached after removal of chip.
  Be careful not to heat the minus side of tantalum capacitor, Because it is damaged by the heat.
- Some chip part will be indicated as follows.

Example C541 L452
22U 10UH
TA A 2520

Kinds of capacitor
Temperature characteristics
External dimensions (mm)

- Constants of resistors, capacitors, ICs and etc with XX indicate that they are not used.
  In such cases, the unused circuits may be indicated.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Signal name
  XEDIT → $\overline{\text{EDIT}}$    PB/XREC → PB/$\overline{\text{REC}}$
- —▭— : non flammable resistor
- —∿— : fusible resistor
- ▭ : panel designation
- ▬▬ : B+ Line *
- ▬ ▬ ▬ : B– Line *
- ⇨ : IN/OUT direction of (+,–) B LINE. *
- ▭ : adjustment for repair. *
- Circled numbers refer to waveforms. *

* Indicated by the color red.

| Note : | Note : |
|---|---|
| The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.<br>Replace only with part number specified. | Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.<br>Ne les remplacer que par une pièce portant le numéro spécifié. |

### (Measuring conditions voltage and waveform)

- Voltages and waveforms are measured between the measurement points and ground when camera shoots color bar chart of pattern box. They are reference values and reference waveforms. *
  (VOM of DC 10 MΩ input impedance is used.).
- Voltage values change depending upon input impedance of VOM used.) *

1. Connection

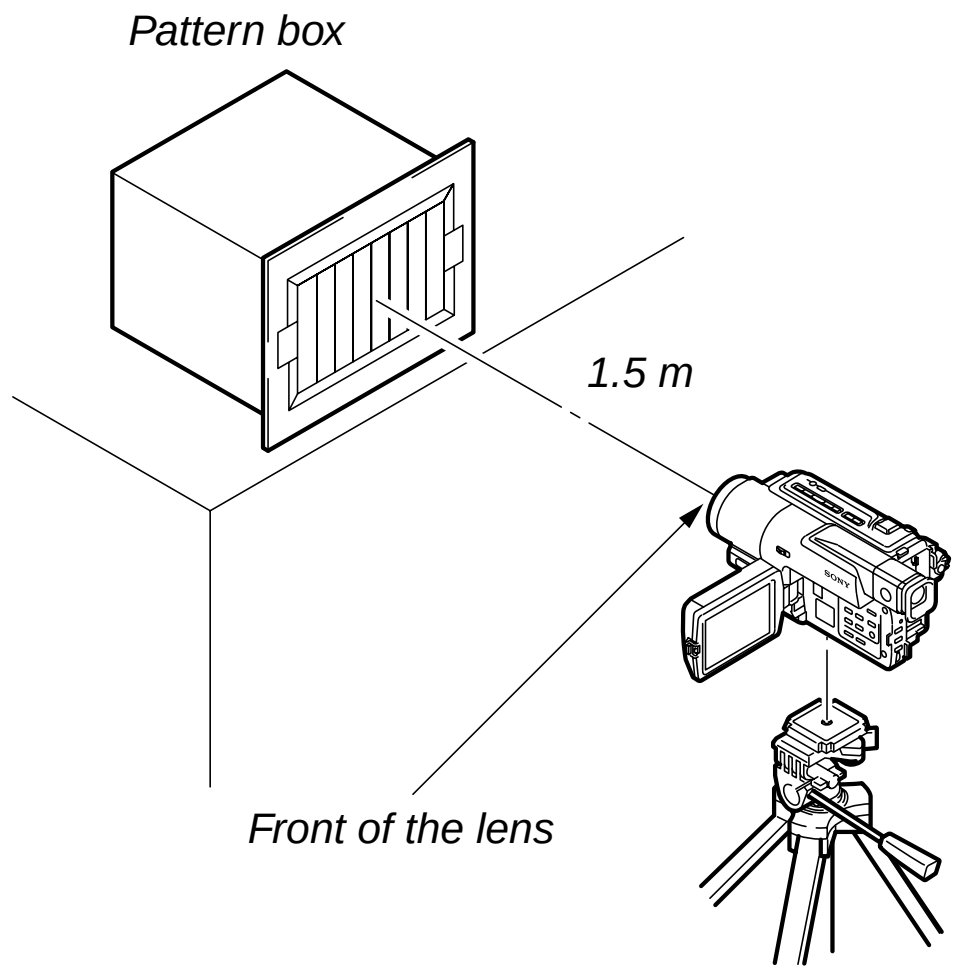

2. Adjust the distance so that the output waveform of Fig. a and the Fig. b can be obtain.

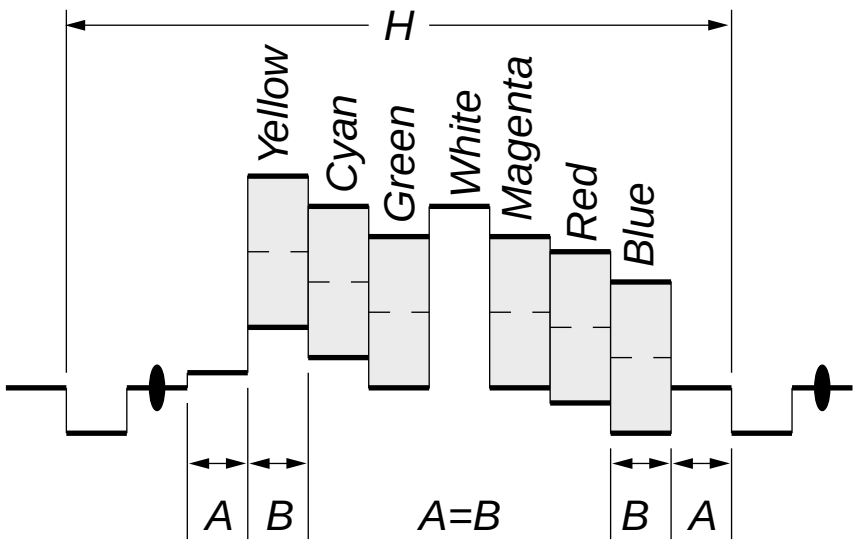

Fig. a (Video output terminal output waveform)

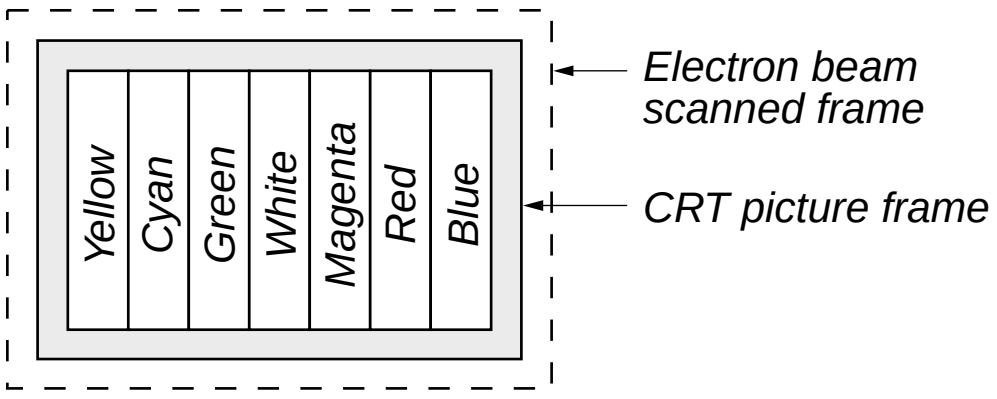

Fig.b (Picture on monitor TV)

When indicating parts by reference number, pleas include the board name.

**< Page 4-8 >**

CD-281 BOARD (TRV MODEL)
CD-286 BOARD (TR MODEL)
CCD IMAGER

-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT

NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE

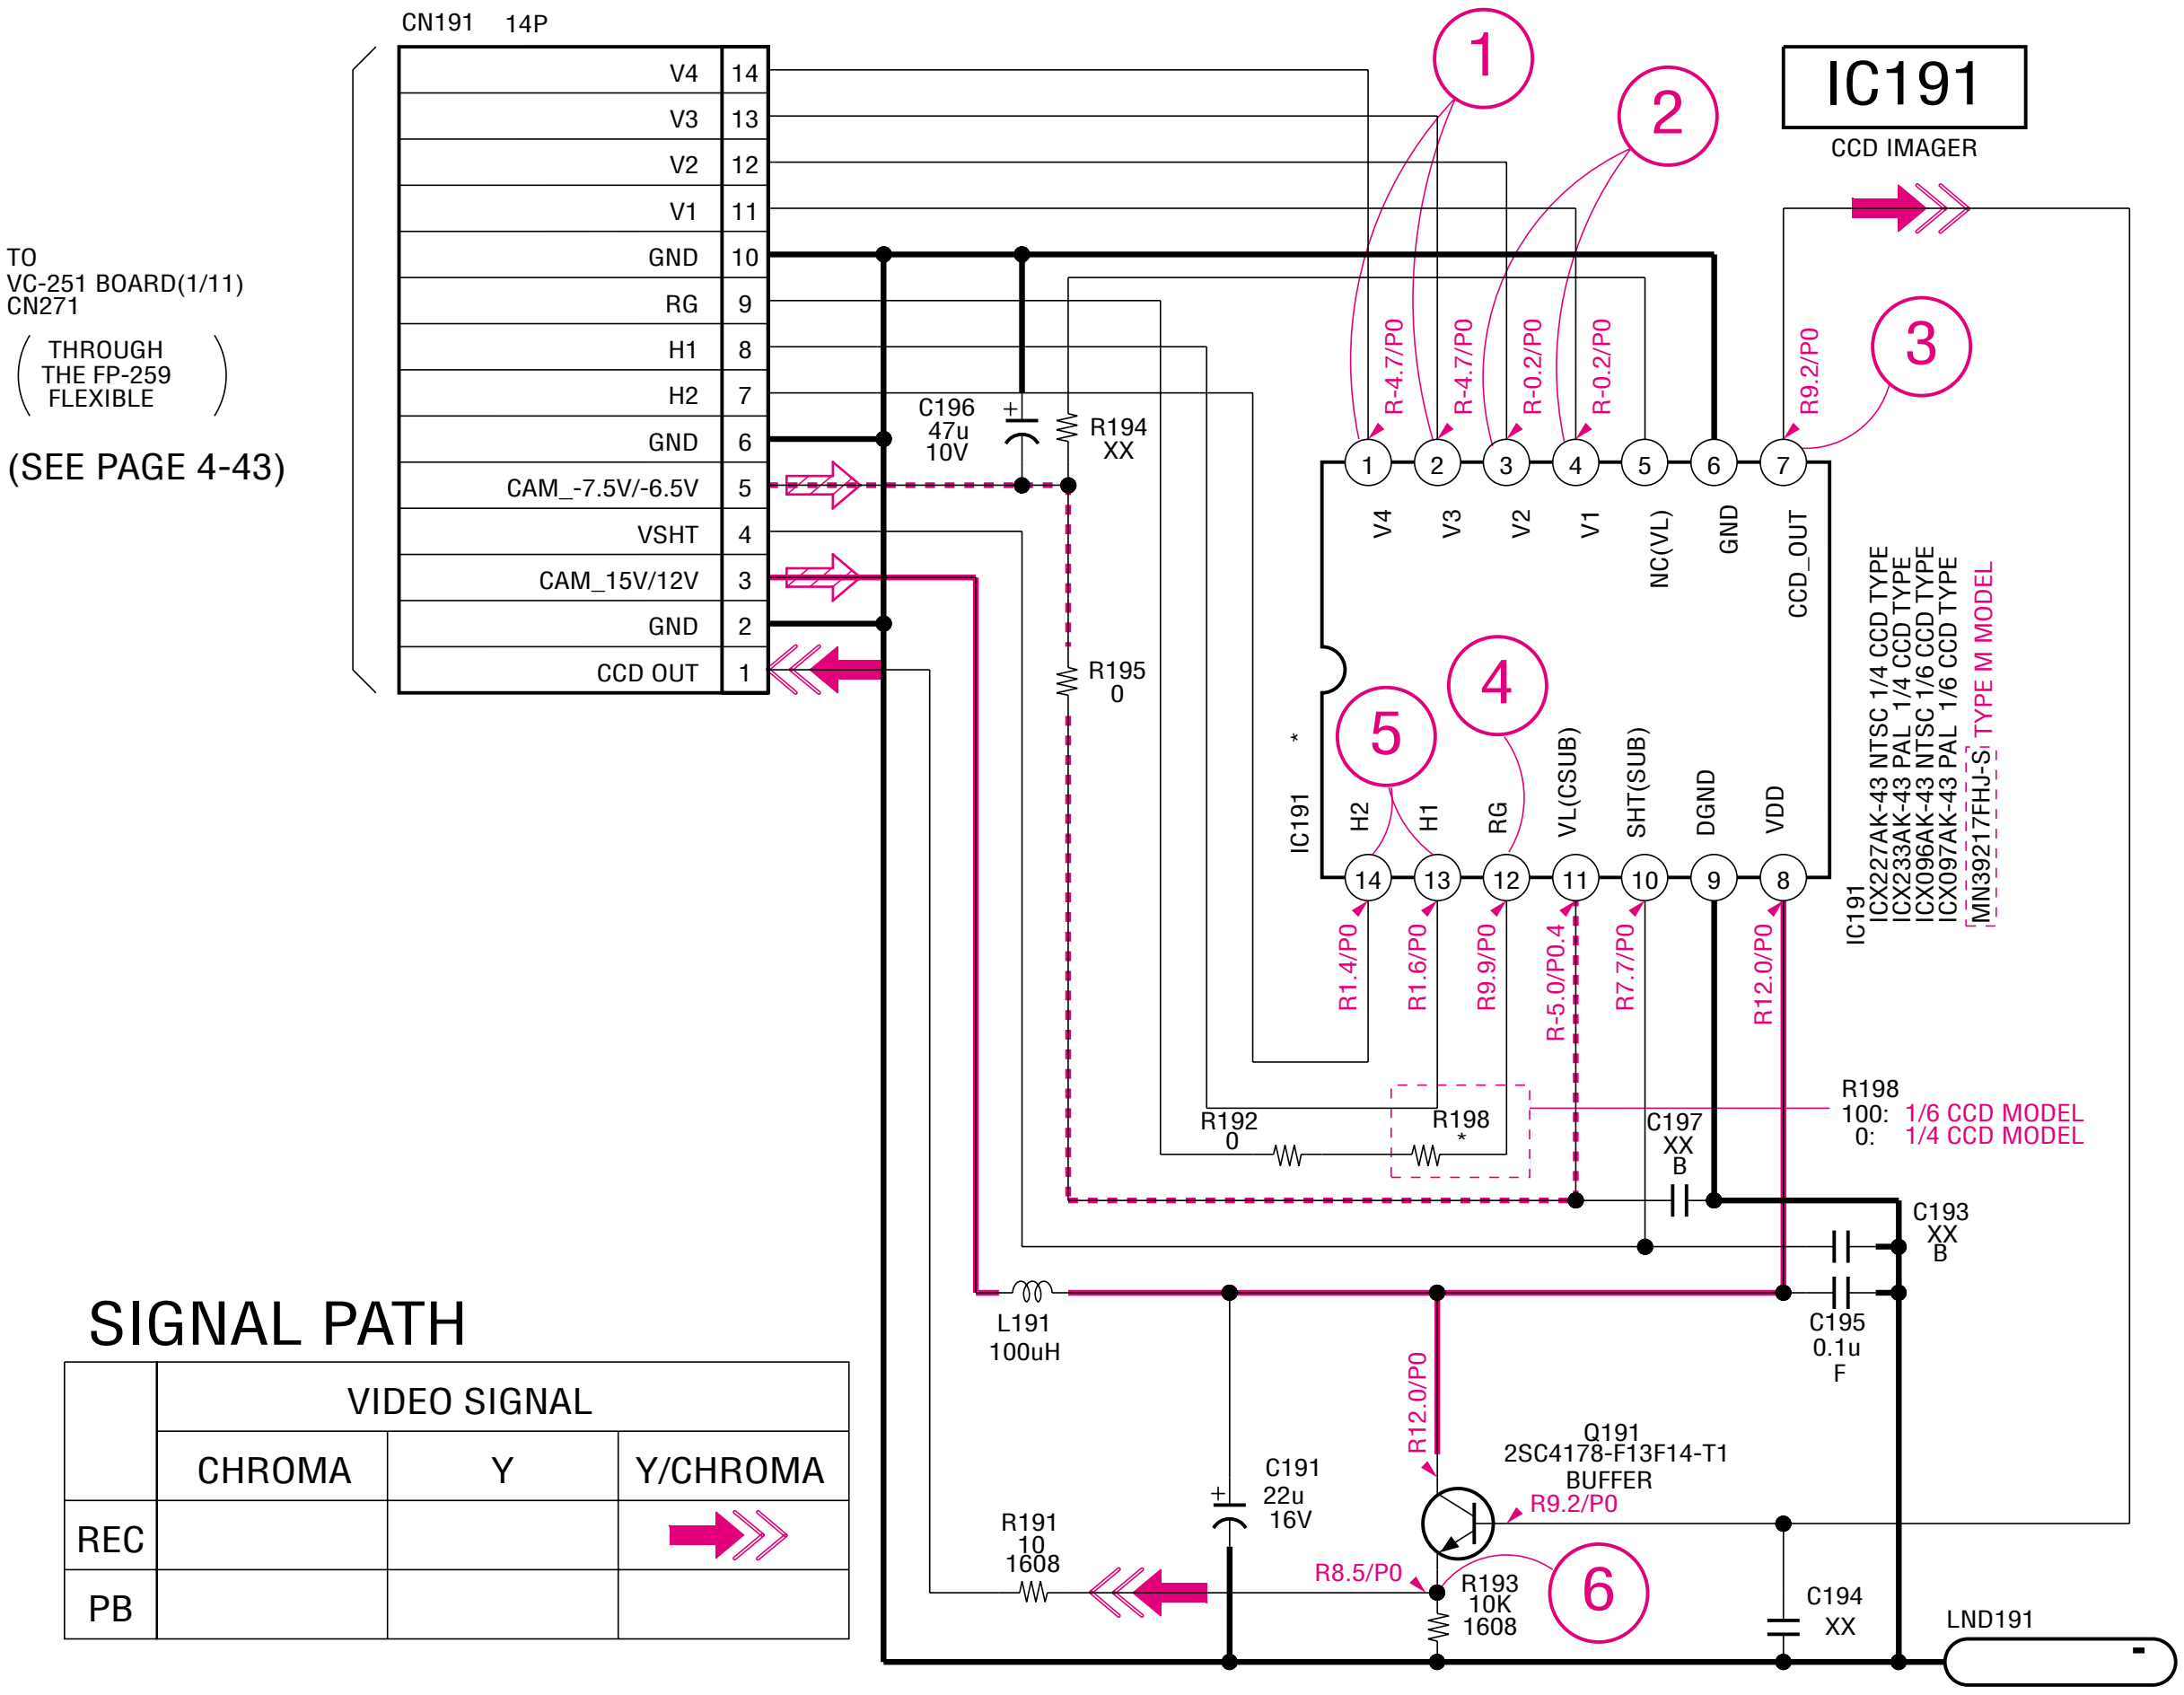
CN191 14P
V4 14
V3 13
V2 12
V1 11
GND 10
RG 9
H1 8
H2 7
GND 6
CAM_-7.5V/-6.5V 5
VSHT 4
CAM_15V/12V 3
GND 2
CCD OUT 1
TO VC-251 BOARD(1/11) CN271
THROUGH THE FP-259 FLEXIBLE
(SEE PAGE 4-43)
IC191
CCD IMAGER
①
②
③
④
⑤
⑥
R-4.7/P0
R-4.7/P0
R-0.2/P0
R-0.2/P0
R9.2/P0
V4
V3
V2
V1
NC(VL)
GND
CCD_OUT
IC191 *
H2
H1
RG
VL(CSUB)
SHT(SUB)
DGND
VDD
R1.4/P0
R1.6/P0
R9.9/P0
R-5.0/P0.4
R7.7/P0
R12.0/P0
IC191
ICX227AK-43 NTSC 1/4 CCD TYPE
ICX233AK-43 PAL 1/4 CCD TYPE
ICX096AK-43 NTSC 1/6 CCD TYPE
ICX097AK-43 PAL 1/6 CCD TYPE
MN39217FHJ-S TYPE M MODEL
C196 47u 10V
R194 XX
R195 0
R192 0
R198 *
C197 XX B
R198
100: 1/6 CCD MODEL
0: 1/4 CCD MODEL
C193 XX B
C195 0.1u F
L191 100uH
R12.0/P0
Q191 2SC4178-F13F14-T1 BUFFER
R9.2/P0
C191 22u 16V
R191 10 1608
R8.5/P0
R193 10K 1608
C194 XX
LND191

## SIGNAL PATH

| | VIDEO SIGNAL | | |
|---|---|---|---|
| | CHROMA | Y | Y/CHROMA |
| REC | | | ➡ |
| PB | | | |

NTSC MODEL :CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98
PAL MODEL :CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E
1/6 CCD MODEL :CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E
1/4 CCD MODEL :CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
TRV MODEL :CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E
TR MODEL :CCD-TR618/TR618E/TR718E/TR728E/TR818
TYPE M MODEL :CCD-TRV68/TRV78/TRV88/TRV98

16

Precautions Upon Replacing CCD imager

- The CD-281/286 board mounted as a repair part is not equipped with a CCD imager.
  When replacing this board, remove the CCD imager from the old one and mount it onto the new one.
- If the CCD imager has been replaced, carry out all the adjustments for the camera section.
- As the CCD imager may be damaged by static electricity from its structure, handle it carefully like for the MOS IC.
  In addition, ensure that the receiver is not covered with dusts nor exposed to strong light.

## MOUNTED PARTS LOCATION

no mark : side A
* mark : side B

### VC-261 BOARD

| | |
|---|---|
| * C001 | E-12 |
| * C002 | E-12 |
| * C003 | E-12 |
| * C004 | E-12 |
| * C005 | E-12 |
| * C008 | E-12 |
| * C009 | E-12 |
| C010 | E-8 |
| * C011 | E-11 |
| * C012 | E-13 |
| * C013 | E-11 |
| * C014 | E-13 |
| * C015 | E-11 |
| * C016 | F-11 |
| * C017 | E-11 |
| * C018 | F-13 |
| * C019 | F-13 |
| C020 | E-8 |
| * C021 | F-12 |
| * C022 | F-12 |
| * C023 | F-12 |
| * C024 | F-12 |
| C025 | D-8 |
| * C026 | G-11 |
| * C027 | G-11 |
| * C028 | G-10 |
| * C029 | F-10 |
| * C030 | G-11 |
| * C031 | F-11 |
| * C032 | G-11 |
| * C033 | G-11 |
| * C034 | F-11 |
| * C035 | F-10 |
| * C036 | F-10 |
| * C037 | G-11 |
| C038 | F-7 |
| * C039 | G-11 |
| C040 | F-6 |
| C041 | F-7 |
| * C042 | G-12 |
| * C043 | F-12 |
| C045 | F-7 |
| C046 | G-6 |
| * C047 | G-12 |
| * C048 | F-12 |
| C049 | G-7 |
| C050 | G-6 |
| C051 | F-6 |
| * C052 | F-10 |
| * C053 | G-13 |
| * C054 | G-13 |
| * C055 | G-12 |
| C056 | F-7 |
| * C057 | F-13 |
| C058 | F-7 |
| * C059 | F-10 |
| * C060 | E-12 |
| C061 | F-6 |
| C062 | F-6 |
| * C071 | F-13 |
| * C072 | F-13 |
| * C101 | A-14 |
| * C102 | A-15 |
| * C103 | A-15 |
| * C104 | B-14 |
| C105 | B-5 |
| * C106 | B-15 |
| * C107 | B-14 |
| C108 | B-4 |
| C109 | B-5 |
| C110 | B-5 |
| C111 | B-5 |
| * C112 | B-14 |
| C113 | B-4 |
| C114 | B-5 |
| C115 | B-5 |
| C116 | B-4 |
| C117 | B-5 |
| C118 | B-4 |
| C119 | B-4 |
| C121 | B-5 |
| C122 | B-4 |
| * C123 | B-14 |
| C124 | B-4 |
| C125 | B-5 |
| C126 | B-5 |
| C127 | B-5 |
| C128 | B-4 |
| C129 | B-4 |
| C130 | B-5 |
| C131 | C-5 |
| C132 | B-5 |
| C133 | B-5 |
| * C134 | B-14 |
| C135 | B-4 |
| C136 | B-4 |
| * C151 | C-16 |
| C152 | D-3 |
| C154 | E-2 |
| * C155 | C-15 |
| C156 | C-3 |
| C157 | C-3 |
| C158 | C-3 |
| C160 | D-2 |
| C161 | C-3 |
| C162 | E-3 |
| C163 | E-3 |
| C164 | E-3 |
| C165 | E-3 |
| C166 | D-3 |
| C167 | D-3 |
| C168 | D-3 |
| C169 | D-3 |
| C170 | C-3 |
| C171 | C-3 |
| C172 | C-3 |
| C173 | C-3 |
| C174 | C-3 |
| C175 | C-3 |
| * C176 | D-16 |
| C177 | C-3 |
| * C178 | C-16 |
| * C179 | C-16 |
| * C182 | C-16 |
| * C183 | C-16 |
| C184 | E-3 |
| C185 | E-4 |
| C186 | C-3 |
| C187 | C-4 |
| C188 | C-4 |
| C189 | E-3 |
| C190 | E-4 |
| C192 | C-5 |
| C194 | C-5 |
| * C195 | D-14 |
| * C196 | E-14 |
| C197 | C-4 |
| C201 | C-3 |
| * C221 | C-18 |
| C223 | C-2 |
| * C225 | C-17 |
| * C226 | C-17 |
| * C227 | C-17 |
| * C228 | C-17 |
| * C231 | D-18 |
| C233 | B-2 |
| * C234 | C-17 |
| * C235 | D-17 |
| * C236 | C-17 |
| * C238 | C-18 |
| * C246 | C-18 |
| C247 | C-1 |
| C248 | C-1 |
| C249 | C-1 |
| C250 | B-1 |
| * C251 | C-18 |
| C252 | B-3 |
| * C271 | F-15 |
| * C272 | F-15 |
| * C273 | F-15 |
| * C274 | F-15 |
| * C275 | F-15 |
| * C276 | F-15 |
| * C277 | F-15 |
| * C278 | F-15 |
| * C279 | F-15 |
| C280 | F-4 |
| C281 | F-4 |
| * C282 | F-15 |
| * C283 | F-16 |
| * C284 | E-14 |
| * C285 | E-15 |
| C286 | F-3 |
| C287 | F-3 |
| C288 | F-3 |
| C289 | F-3 |
| C290 | F-3 |
| C291 | F-4 |
| C292 | F-3 |
| C293 | F-3 |
| C294 | F-3 |
| C295 | F-3 |
| C296 | F-3 |
| C297 | F-4 |
| C301 | G-4 |
| C302 | G-4 |
| C303 | G-3 |
| C304 | G-3 |
| C305 | G-3 |
| C306 | G-3 |
| C307 | G-4 |
| C308 | G-6 |
| C309 | G-4 |
| C310 | E-5 |
| C311 | F-4 |
| C312 | G-3 |
| C313 | G-3 |
| C314 | F-4 |
| C315 | G-3 |
| C316 | G-6 |
| C317 | F-4 |
| C318 | F-4 |
| C319 | G-4 |
| * C351 | B-18 |
| C352 | B-1 |
| C353 | B-1 |
| C354 | A-3 |
| * C355 | B-17 |
| * C356 | B-17 |
| C357 | B-2 |
| * C358 | B-17 |
| C359 | B-3 |
| C361 | A-1 |
| C362 | A-1 |
| * C363 | A-18 |
| * C364 | B-17 |
| C365 | A-2 |
| C366 | B-3 |
| C367 | A-2 |
| * C368 | B-17 |
| * C369 | A-17 |
| * C371 | A-17 |
| * C372 | A-17 |
| * C373 | A-17 |
| C374 | A-3 |
| * C375 | B-17 |
| * C376 | A-17 |
| * C377 | A-17 |
| * C378 | A-17 |
| * C379 | A-17 |
| * C380 | B-17 |
| * C381 | A-17 |
| * C382 | B-17 |
| * C383 | A-16 |
| * C384 | A-16 |
| * C385 | B-16 |
| * C386 | A-16 |
| * C387 | B-16 |
| * C388 | B-16 |
| * C389 | A-16 |
| * C390 | B-16 |
| * C391 | B-16 |
| * C392 | B-16 |
| * C393 | B-16 |
| * C394 | A-16 |
| * C395 | B-16 |
| * C396 | B-16 |
| * C397 | B-16 |
| * C398 | B-17 |
| * C401 | C-11 |
| * C402 | B-12 |
| C403 | B-7 |
| C404 | B-7 |
| * C405 | C-12 |
| * C406 | C-13 |
| * C407 | C-13 |
| * C408 | B-13 |
| * C409 | A-13 |
| * C410 | B-13 |
| * C411 | B-13 |
| * C451 | B-11 |
| * C452 | B-11 |
| * C453 | B-11 |
| * C454 | B-11 |
| * C455 | B-11 |
| * C456 | B-11 |
| * C457 | B-11 |
| C458 | B-8 |
| C459 | B-8 |
| * C460 | A-12 |
| C461 | B-8 |
| C462 | B-8 |
| * C463 | B-11 |
| * C464 | A-11 |
| * C465 | B-10 |
| * C466 | B-10 |
| * C467 | B-11 |
| * C468 | B-10 |
| * C469 | B-11 |
| * C470 | B-10 |
| * C471 | B-11 |
| * C472 | B-10 |
| * C473 | B-10 |
| * C474 | A-11 |
| * C475 | A-10 |
| * C476 | A-10 |
| * C477 | A-11 |
| * C478 | A-11 |
| * C479 | A-11 |
| * C480 | A-11 |
| * C481 | A-11 |
| * C482 | A-11 |
| * C483 | A-11 |
| * C484 | A-11 |
| * C485 | B-11 |
| * C501 | E-11 |
| * C502 | E-11 |
| C503 | E-7 |
| C504 | E-7 |
| * C505 | E-12 |
| * C506 | E-12 |
| * C507 | E-12 |
| * C508 | E-12 |
| * C509 | E-12 |
| * C510 | E-12 |
| C511 | E-7 |
| C512 | E-7 |
| C513 | C-7 |
| C514 | D-8 |
| C515 | C-9 |
| C516 | C-8 |
| C517 | D-8 |
| * C518 | D-10 |
| C519 | C-7 |
| * C601 | D-15 |
| * C602 | D-15 |
| * C603 | D-16 |
| C701 | C-2 |
| * C707 | E-17 |
| * C708 | E-18 |
| CN001 | D-9 |
| CN101 | A-4 |
| CN271 | F-5 |
| CN301 | G-4 |
| CN701 | C-2 |
| * CN702 | E-18 |
| * CN703 | B-18 |
| CN704 | A-2 |
| CN706 | A-6 |
| CN707 | A-7 |
| CN708 | E-6 |
| CN709 | B-6 |
| CN710 | G-7 |
| CN711 | C-9 |
| CN712 | A-8 |
| CN713 | D-6 |
| * CN714 | C-10 |
| CN715 | D-6 |
| D001 | D-8 |
| D002 | D-8 |
| D004 | D-8 |
| D005 | D-8 |
| * D006 | F-12 |
| * D007 | F-11 |
| * D010 | F-12 |
| * D151 | C-16 |
| * D152 | C-16 |
| * D271 | F-15 |
| * D272 | E-16 |
| D301 | G-3 |
| * D451 | B-10 |
| D501 | E-7 |
| * D503 | E-10 |
| * D504 | D-11 |
| D505 | E-7 |
| * D702 | D-18 |
| * D703 | F-18 |
| ET101 | B-5 |
| ET102 | B-4 |
| F001 | D-9 |
| F002 | E-8 |
| F003 | E-9 |
| F004 | E-8 |
| F005 | E-7 |
| FB001 | F-7 |
| FB002 | F-7 |
| FB003 | F-7 |
| FB101 | A-4 |
| FB102 | A-5 |
| * FB152 | E-16 |
| * FB153 | E-14 |
| FB154 | D-2 |
| * FB221 | C-18 |
| * FB271 | F-15 |
| * FB273 | F-16 |
| * FB274 | F-16 |
| FB275 | E-4 |
| * FB276 | F-16 |
| * FB601 | D-16 |
| * IC001 | E-12 |
| IC101 | B-4 |
| IC151 | D-4 |
| * IC153 | E-14 |
| * IC221 | C-18 |
| * IC271 | F-15 |
| IC272 | F-3 |
| IC301 | G-5 |
| IC302 | G-4 |
| * IC351 | B-17 |
| * IC401 | C-11 |
| * IC402 | B-12 |
| * IC451 | B-11 |
| * IC502 | E-11 |
| IC503 | D-7 |
| * IC504 | E-11 |
| * IC601 | D-15 |
| L001 | G-8 |
| L002 | F-8 |
| * L003 | G-11 |
| L004 | G-8 |
| L005 | G-9 |
| L006 | F-9 |
| L007 | G-8 |
| L008 | G-7 |
| L009 | F-7 |
| L010 | F-7 |
| * L011 | G-11 |
| L012 | F-7 |
| L013 | G-7 |
| L014 | G-7 |
| L016 | F-7 |
| * L101 | A-15 |
| * L102 | B-14 |
| * L103 | B-15 |
| * L104 | B-14 |
| L151 | D-2 |
| * L152 | E-16 |
| L154 | F-3 |
| * L155 | C-16 |
| * L156 | C-16 |
| * L221 | C-17 |
| * L224 | C-18 |
| L271 | E-4 |
| * L272 | F-16 |
| L301 | G-6 |
| L303 | F-4 |
| * L601 | D-15 |
| L705 | D-1 |
| Q001 | E-7 |
| Q002 | E-9 |
| Q003 | E-8 |
| Q004 | E-8 |
| * Q006 | G-11 |
| * Q007 | F-11 |
| * Q008 | F-11 |
| * Q009 | G-10 |
| * Q010 | G-11 |
| * Q011 | G-10 |
| * Q012 | F-10 |
| * Q013 | G-11 |
| * Q014 | F-11 |
| * Q015 | F-10 |
| * Q016 | F-10 |
| * Q018 | G-12 |
| * Q019 | G-13 |
| * Q020 | G-12 |
| * Q021 | G-12 |
| * Q022 | G-13 |
| * Q023 | G-12 |
| * Q026 | F-13 |
| * Q027 | F-12 |
| Q028 | F-7 |
| * Q071 | F-13 |
| * Q072 | F-13 |
| Q101 | A-5 |
| Q102 | B-5 |
| Q103 | B-5 |
| Q104 | B-5 |
| * Q105 | B-14 |
| * Q106 | B-15 |
| * Q107 | B-14 |
| * Q151 | C-15 |
| Q152 | E-3 |
| Q153 | E-3 |
| Q154 | D-3 |
| Q155 | D-3 |
| Q156 | D-3 |
| Q157 | D-3 |
| Q158 | E-2 |
| Q301 | G-3 |
| Q302 | G-5 |
| Q303 | F-3 |
| * Q351 | A-18 |
| * Q352 | A-18 |
| * Q353 | A-18 |
| * Q354 | A-17 |
| * Q355 | A-18 |
| * Q451 | A-11 |
| * Q501 | D-10 |
| Q701 | E-6 |
| * Q702 | E-18 |
| * Q703 | E-17 |
| * Q704 | D-18 |
| * Q705 | D-18 |
| * R001 | E-12 |
| * R002 | E-12 |
| R003 | D-8 |
| * R004 | E-11 |
| * R006 | E-13 |
| * R007 | E-12 |
| R008 | E-8 |
| * R009 | E-13 |
| R010 | E-8 |
| * R011 | E-11 |
| * R012 | E-13 |
| R013 | E-8 |
| * R014 | E-11 |
| * R016 | E-13 |
| R017 | E-8 |
| R018 | E-8 |
| * R020 | E-11 |
| * R021 | E-11 |
| R022 | E-7 |
| * R023 | E-11 |
| * R025 | F-10 |
| * R026 | F-11 |
| * R027 | F-11 |
| * R028 | G-12 |
| * R029 | F-11 |
| * R031 | G-12 |
| * R032 | G-12 |
| * R033 | F-10 |
| * R034 | F-11 |
| * R035 | G-13 |
| * R036 | G-12 |
| * R037 | G-12 |
| * R038 | G-13 |
| * R039 | G-12 |
| * R040 | G-12 |
| * R041 | G-13 |
| * R042 | G-12 |
| * R043 | G-12 |
| * R044 | G-12 |
| * R045 | G-12 |
| * R046 | G-12 |
| * R047 | F-12 |
| * R048 | G-12 |
| * R049 | F-12 |
| * R050 | G-13 |
| * R051 | G-13 |
| R052 | E-8 |
| R053 | F-7 |
| * R054 | G-12 |
| R055 | F-7 |
| * R071 | F-13 |
| * R072 | F-13 |
| * R073 | F-12 |
| * R074 | F-13 |
| R101 | A-5 |
| R102 | A-5 |
| R105 | B-5 |
| * R106 | B-14 |
| R107 | B-5 |
| R108 | B-5 |
| * R109 | B-15 |
| * R110 | B-15 |
| * R111 | B-14 |
| R112 | B-5 |
| R113 | B-5 |
| R115 | B-5 |
| R116 | B-4 |
| R117 | B-5 |
| R118 | B-4 |
| R120 | B-5 |
| R121 | B-4 |
| R122 | B-4 |
| * R123 | B-15 |
| * R124 | B-15 |
| R154 | C-3 |
| R155 | C-3 |
| R156 | E-2 |
| R157 | E-2 |
| R158 | D-2 |
| R159 | D-2 |
| R160 | D-2 |
| R161 | D-2 |
| R162 | E-2 |
| R163 | E-2 |
| R164 | D-2 |
| R165 | D-2 |
| R166 | D-2 |
| R167 | D-2 |
| * R168 | D-15 |
| R169 | C-3 |
| R170 | C-3 |
| R171 | C-3 |
| * R172 | C-15 |
| R173 | C-3 |
| R174 | C-3 |
| * R175 | C-16 |
| R176 | C-3 |
| R177 | E-3 |
| R178 | E-2 |
| R179 | E-2 |
| R180 | E-3 |
| R181 | E-3 |
| R182 | E-3 |
| R183 | E-3 |
| R184 | E-3 |
| R185 | D-3 |
| R186 | D-3 |
| R187 | D-3 |
| R188 | D-3 |
| R189 | D-3 |
| R190 | D-3 |
| R191 | D-3 |
| R192 | D-3 |
| R193 | C-3 |
| * R195 | C-16 |
| * R196 | C-15 |
| R197 | E-3 |
| R198 | E-3 |
| R199 | C-4 |
| R200 | C-4 |
| R204 | E-2 |
| R206 | C-4 |
| R208 | C-5 |
| R216 | C-4 |
| * R226 | D-17 |
| R229 | D-1 |
| * R232 | D-17 |
| * R271 | F-15 |
| * R274 | F-14 |
| * R275 | F-15 |
| * R279 | F-16 |
| * R280 | E-15 |
| * R281 | E-16 |
| R301 | G-4 |
| R302 | G-4 |
| R304 | G-3 |
| R306 | G-3 |
| R307 | G-4 |
| R308 | G-4 |
| R309 | G-3 |
| R310 | G-3 |
| R311 | G-4 |
| R312 | G-3 |
| R313 | G-4 |
| R314 | G-4 |
| R316 | G-4 |
| R317 | G-4 |
| R318 | F-4 |
| R319 | F-3 |
| R321 | F-3 |
| R322 | F-3 |
| R323 | G-3 |
| * R351 | B-18 |
| * R352 | B-17 |
| * R353 | B-17 |
| R354 | A-1 |
| R355 | A-1 |
| * R356 | B-17 |
| R358 | A-1 |
| R359 | A-1 |
| * R363 | B-18 |
| * R364 | A-18 |
| * R368 | B-17 |
| * R372 | B-17 |
| * R373 | A-16 |
| * R374 | B-16 |
| * R379 | B-16 |
| * R381 | E-18 |
| * R382 | E-18 |
| * R401 | B-12 |
| R402 | B-7 |
| * R403 | C-11 |
| * R404 | C-12 |
| * R408 | C-12 |
| * R411 | C-12 |
| * R417 | B-13 |
| * R420 | B-13 |
| * R423 | B-13 |
| * R428 | B-13 |
| * R430 | C-13 |
| * R431 | B-13 |
| * R432 | C-13 |
| * R433 | B-13 |
| R451 | D-8 |
| R452 | E-8 |
| R455 | A-7 |
| R457 | A-8 |
| * R458 | B-11 |
| * R459 | B-11 |
| * R460 | B-11 |
| * R461 | B-10 |
| * R462 | C-10 |
| * R464 | A-12 |
| * R465 | A-12 |
| * R466 | B-10 |
| * R467 | B-10 |
| * R468 | B-11 |
| * R469 | A-11 |
| * R470 | B-10 |
| * R471 | A-11 |
| * R472 | A-11 |
| * R474 | A-10 |
| * R480 | A-10 |
| * R481 | A-11 |
| R482 | B-8 |
| R483 | B-7 |
| * R501 | D-10 |
| * R502 | E-10 |
| * R503 | E-10 |
| * R504 | D-10 |
| R513 | D-7 |
| R516 | C-7 |
| R518 | E-7 |
| R519 | E-7 |
| R520 | E-7 |
| R521 | E-7 |
| R525 | C-8 |
| * R531 | C-12 |
| R542 | C-8 |
| R543 | C-7 |
| R544 | C-8 |
| * R547 | C-11 |
| R552 | C-8 |
| R554 | D-8 |
| R558 | D-8 |
| * R559 | D-11 |
| * R611 | B-13 |
| * R612 | B-13 |
| * R613 | C-13 |
| * R614 | B-13 |
| * R701 | E-17 |
| * R702 | E-17 |
| * R703 | E-17 |
| * R704 | D-18 |
| * R705 | D-17 |
| * R706 | D-18 |
| * R707 | D-18 |
| * R708 | D-18 |
| R709 | D-6 |
| R710 | D-6 |
| R711 | G-7 |
| R712 | F-6 |
| R713 | C-2 |
| RB101 | B-5 |
| * RB102 | B-14 |
| * RB151 | C-15 |
| RB221 | C-1 |
| RB222 | D-1 |
| RB223 | D-1 |
| RB272 | F-3 |
| * RB273 | F-16 |
| RB301 | G-4 |
| RB302 | G-3 |
| * RB351 | A-17 |
| * RB352 | A-17 |
| * RB401 | A-12 |
| * RB402 | C-13 |
| * RB404 | B-13 |
| * RB405 | B-13 |
| * RB406 | B-13 |
| * RB407 | A-13 |
| * RB451 | A-12 |
| * RB452 | A-11 |
| * RB501 | D-12 |
| * RB502 | D-12 |
| * RB503 | D-12 |
| * RB504 | D-12 |
| * RB505 | D-12 |
| * RB506 | D-12 |
| * RB507 | D-12 |
| * RB508 | E-12 |
| * RB509 | E-11 |
| RB510 | D-8 |
| * RB511 | D-11 |
| RB512 | C-7 |
| * RB513 | C-11 |
| RB514 | D-7 |
| T001 | F-8 |
| * VDR701 | E-18 |
| * VDR702 | E-18 |
| * VDR703 | E-18 |
| * VDR704 | E-18 |
| * VDR706 | E-18 |
| * VDR707 | E-18 |
| * X271 | E-16 |
| * X401 | B-12 |
| X501 | C-7 |
| X502 | C-8 |

## VC-251 (CAMERA PROCESSOR, Y/C PROCESSOR, FOCUS/ZOOM MOTOR DRIVE, REC/PB AMP, LINE I/O AMP, SERVO, MODE CONTROL, HI CONTROL, AUDIO, DC/DC CONVERTER, CONNECTOR) PRINTED WIRING BOARD

— Ref. No. VC-251 Board; 10,000 Series — **< Page 4-39, 4-40 >**

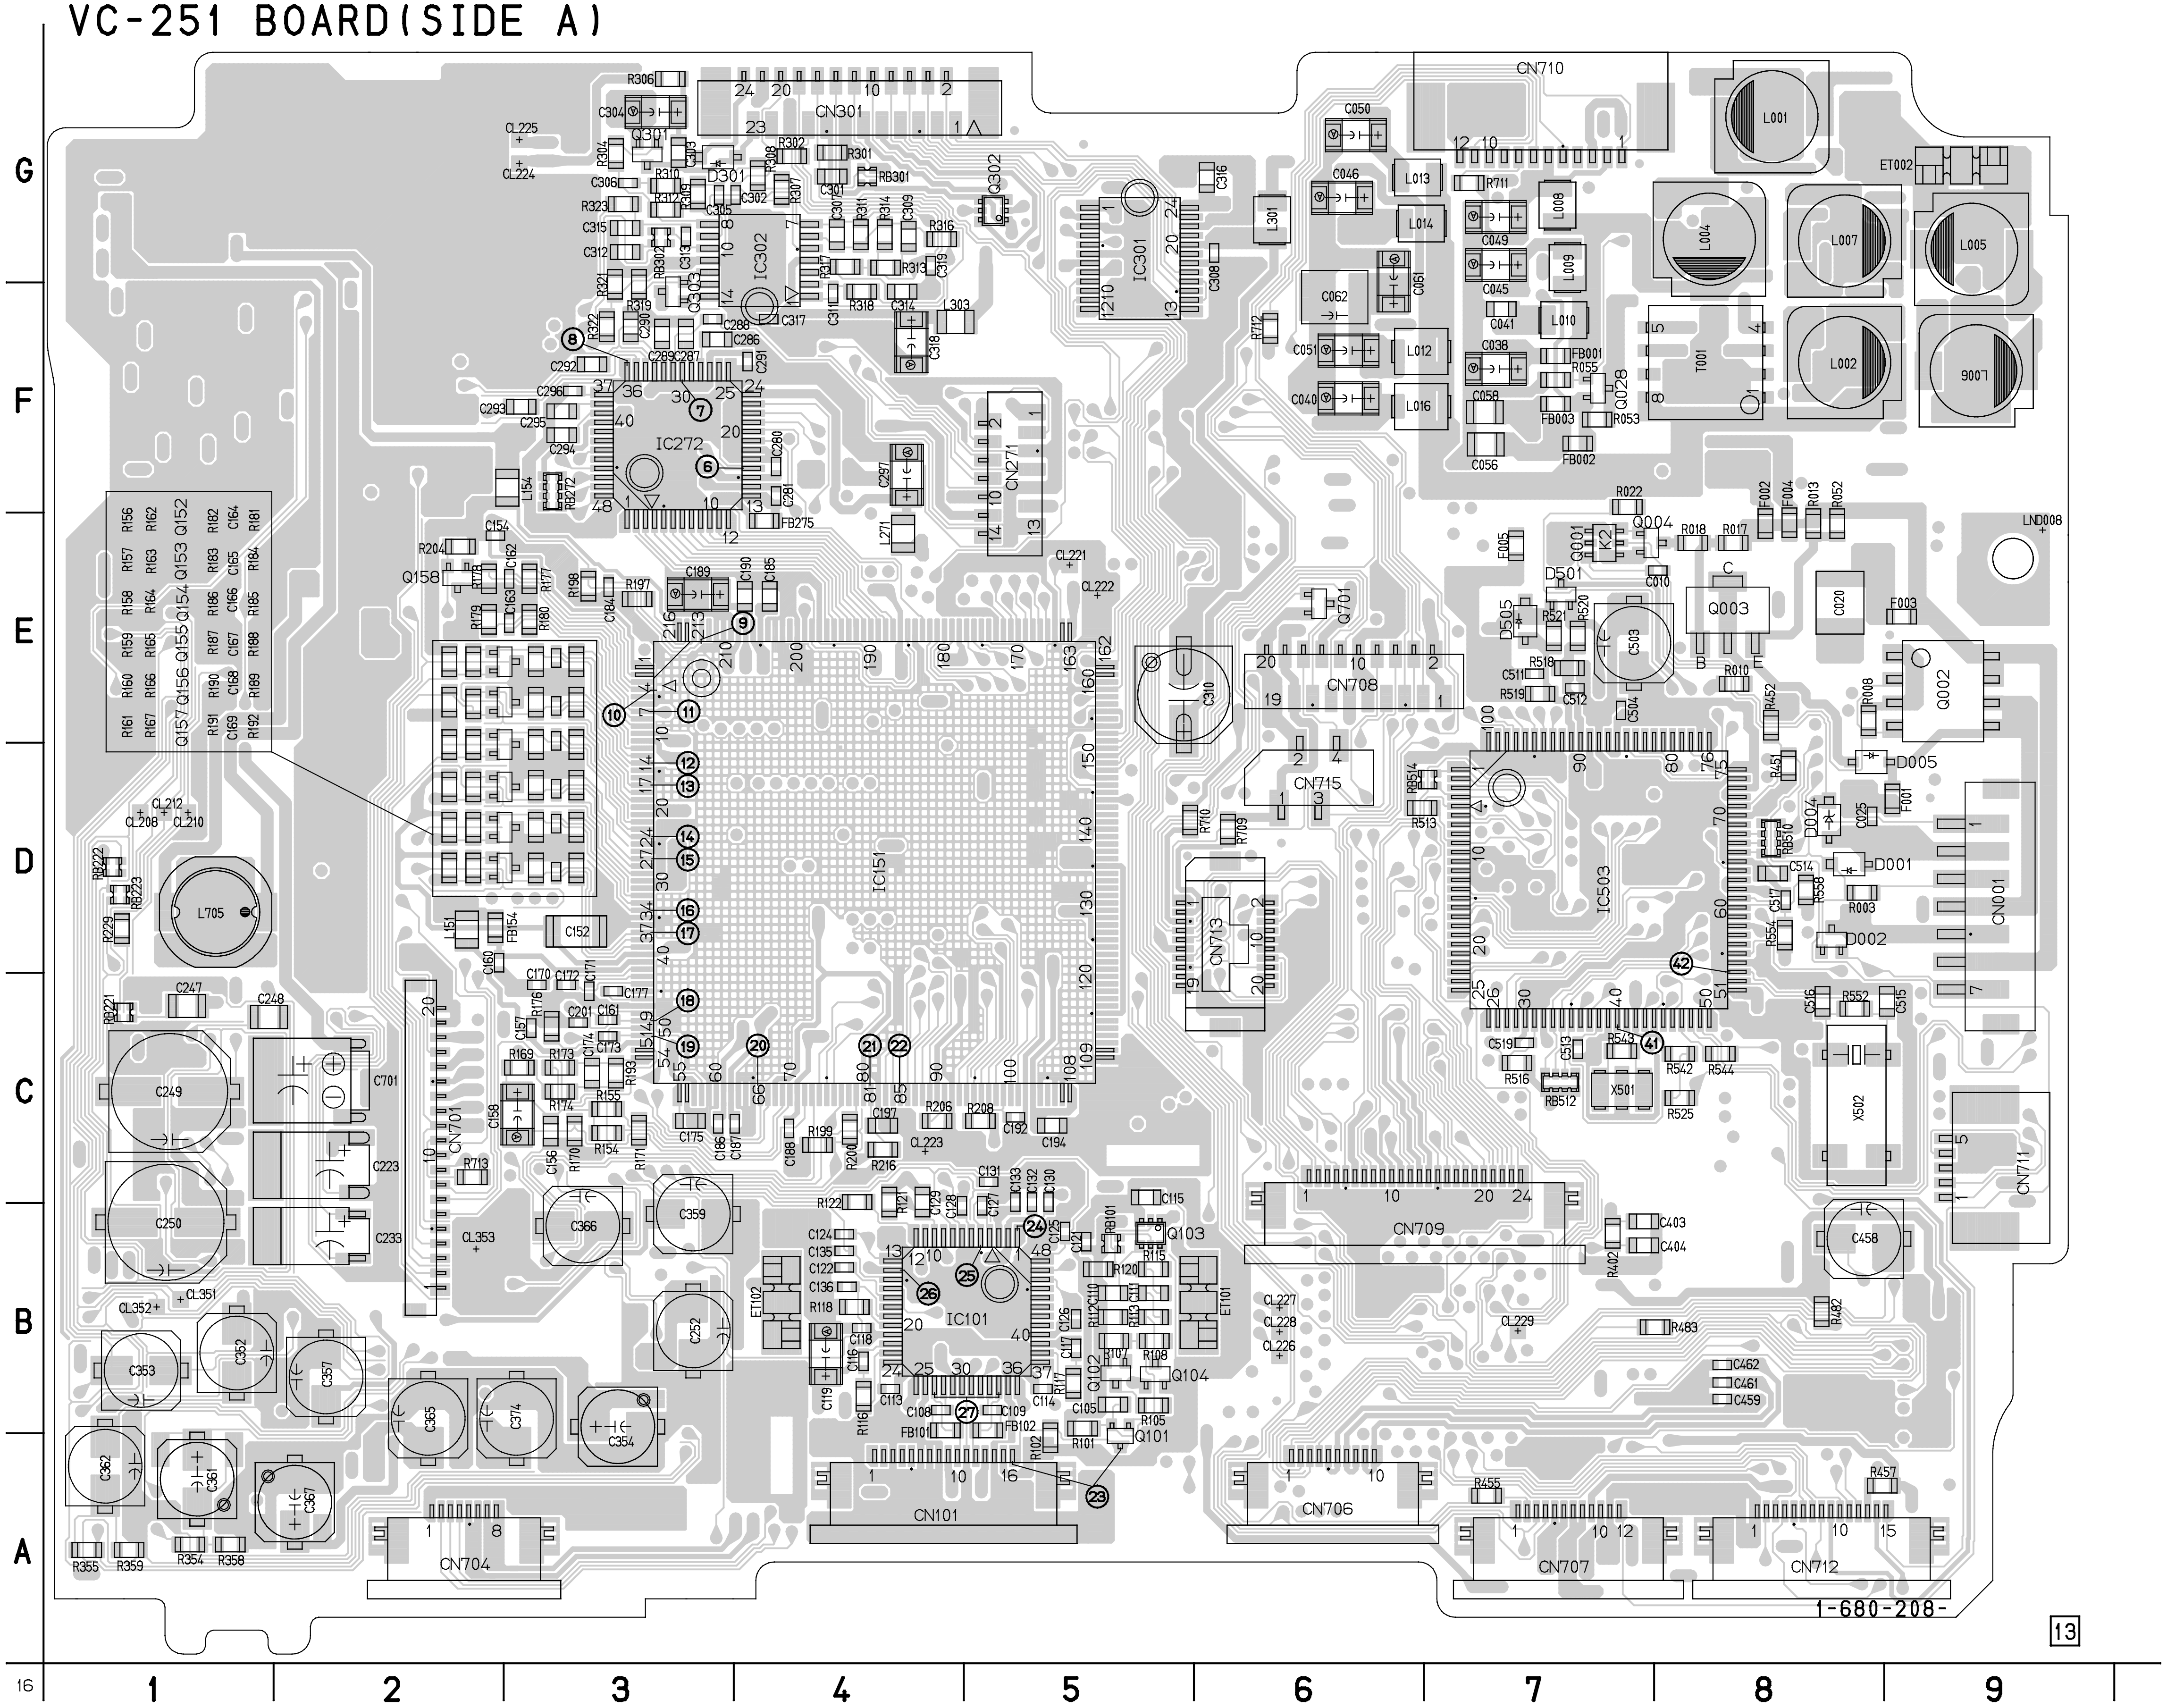
VC-251 BOARD(SIDE A)
G
F
E
D
C
B
A
1
2
3
4
5
6
7
8
9
16
IC151
IC503
IC272
IC301
IC302
IC101
CN301
CN710
CN271
CN708
CN715
CN713
CN001
CN701
CN709
CN711
CN101
CN706
CN704
CN707
CN712
L001
L004
L007
L005
L002
L006
T001
L705
X501
X502
Q003
Q002
1-680-208-
13

**For printed wiring board**

- Refer to pages 5 for parts location.
- VC-251 board consists of multiple layers. However, only the sides (layers) A and B are shown.
- Chip parts

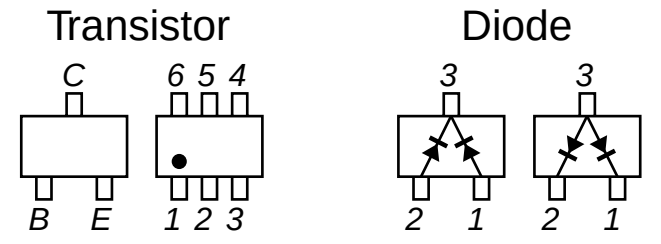
Transistor
C
6 5 4
B
E
1 2 3
Diode
3
3
2
1
2
1

There are a few cases that the part printed on this diagram isn't mounted in this model.

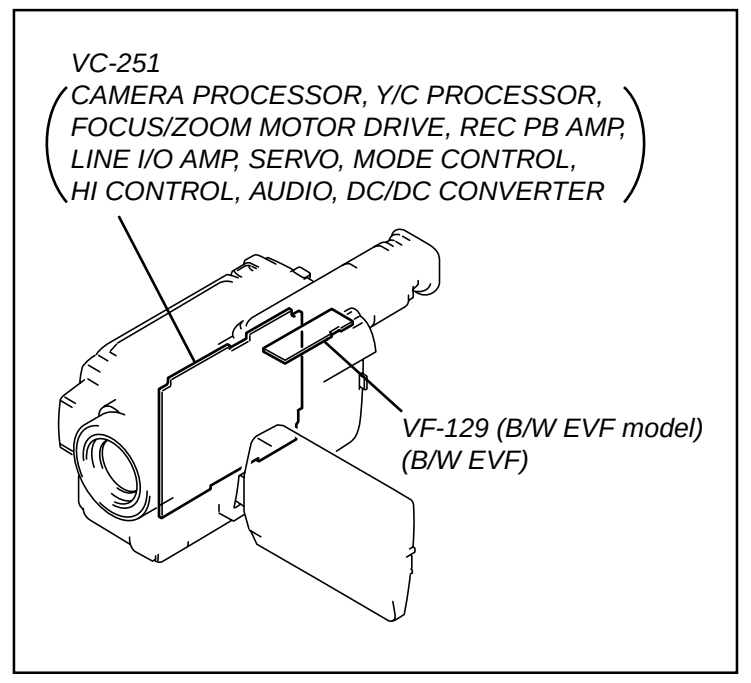
VC-251
CAMERA PROCESSOR, Y/C PROCESSOR, FOCUS/ZOOM MOTOR DRIVE, REC PB AMP, LINE I/O AMP, SERVO, MODE CONTROL, HI CONTROL, AUDIO, DC/DC CONVERTER
VF-129 (B/W EVF model) (B/W EVF)

< Page 4-41, 4-42 >

## VC-251 BOARD(SIDE B)

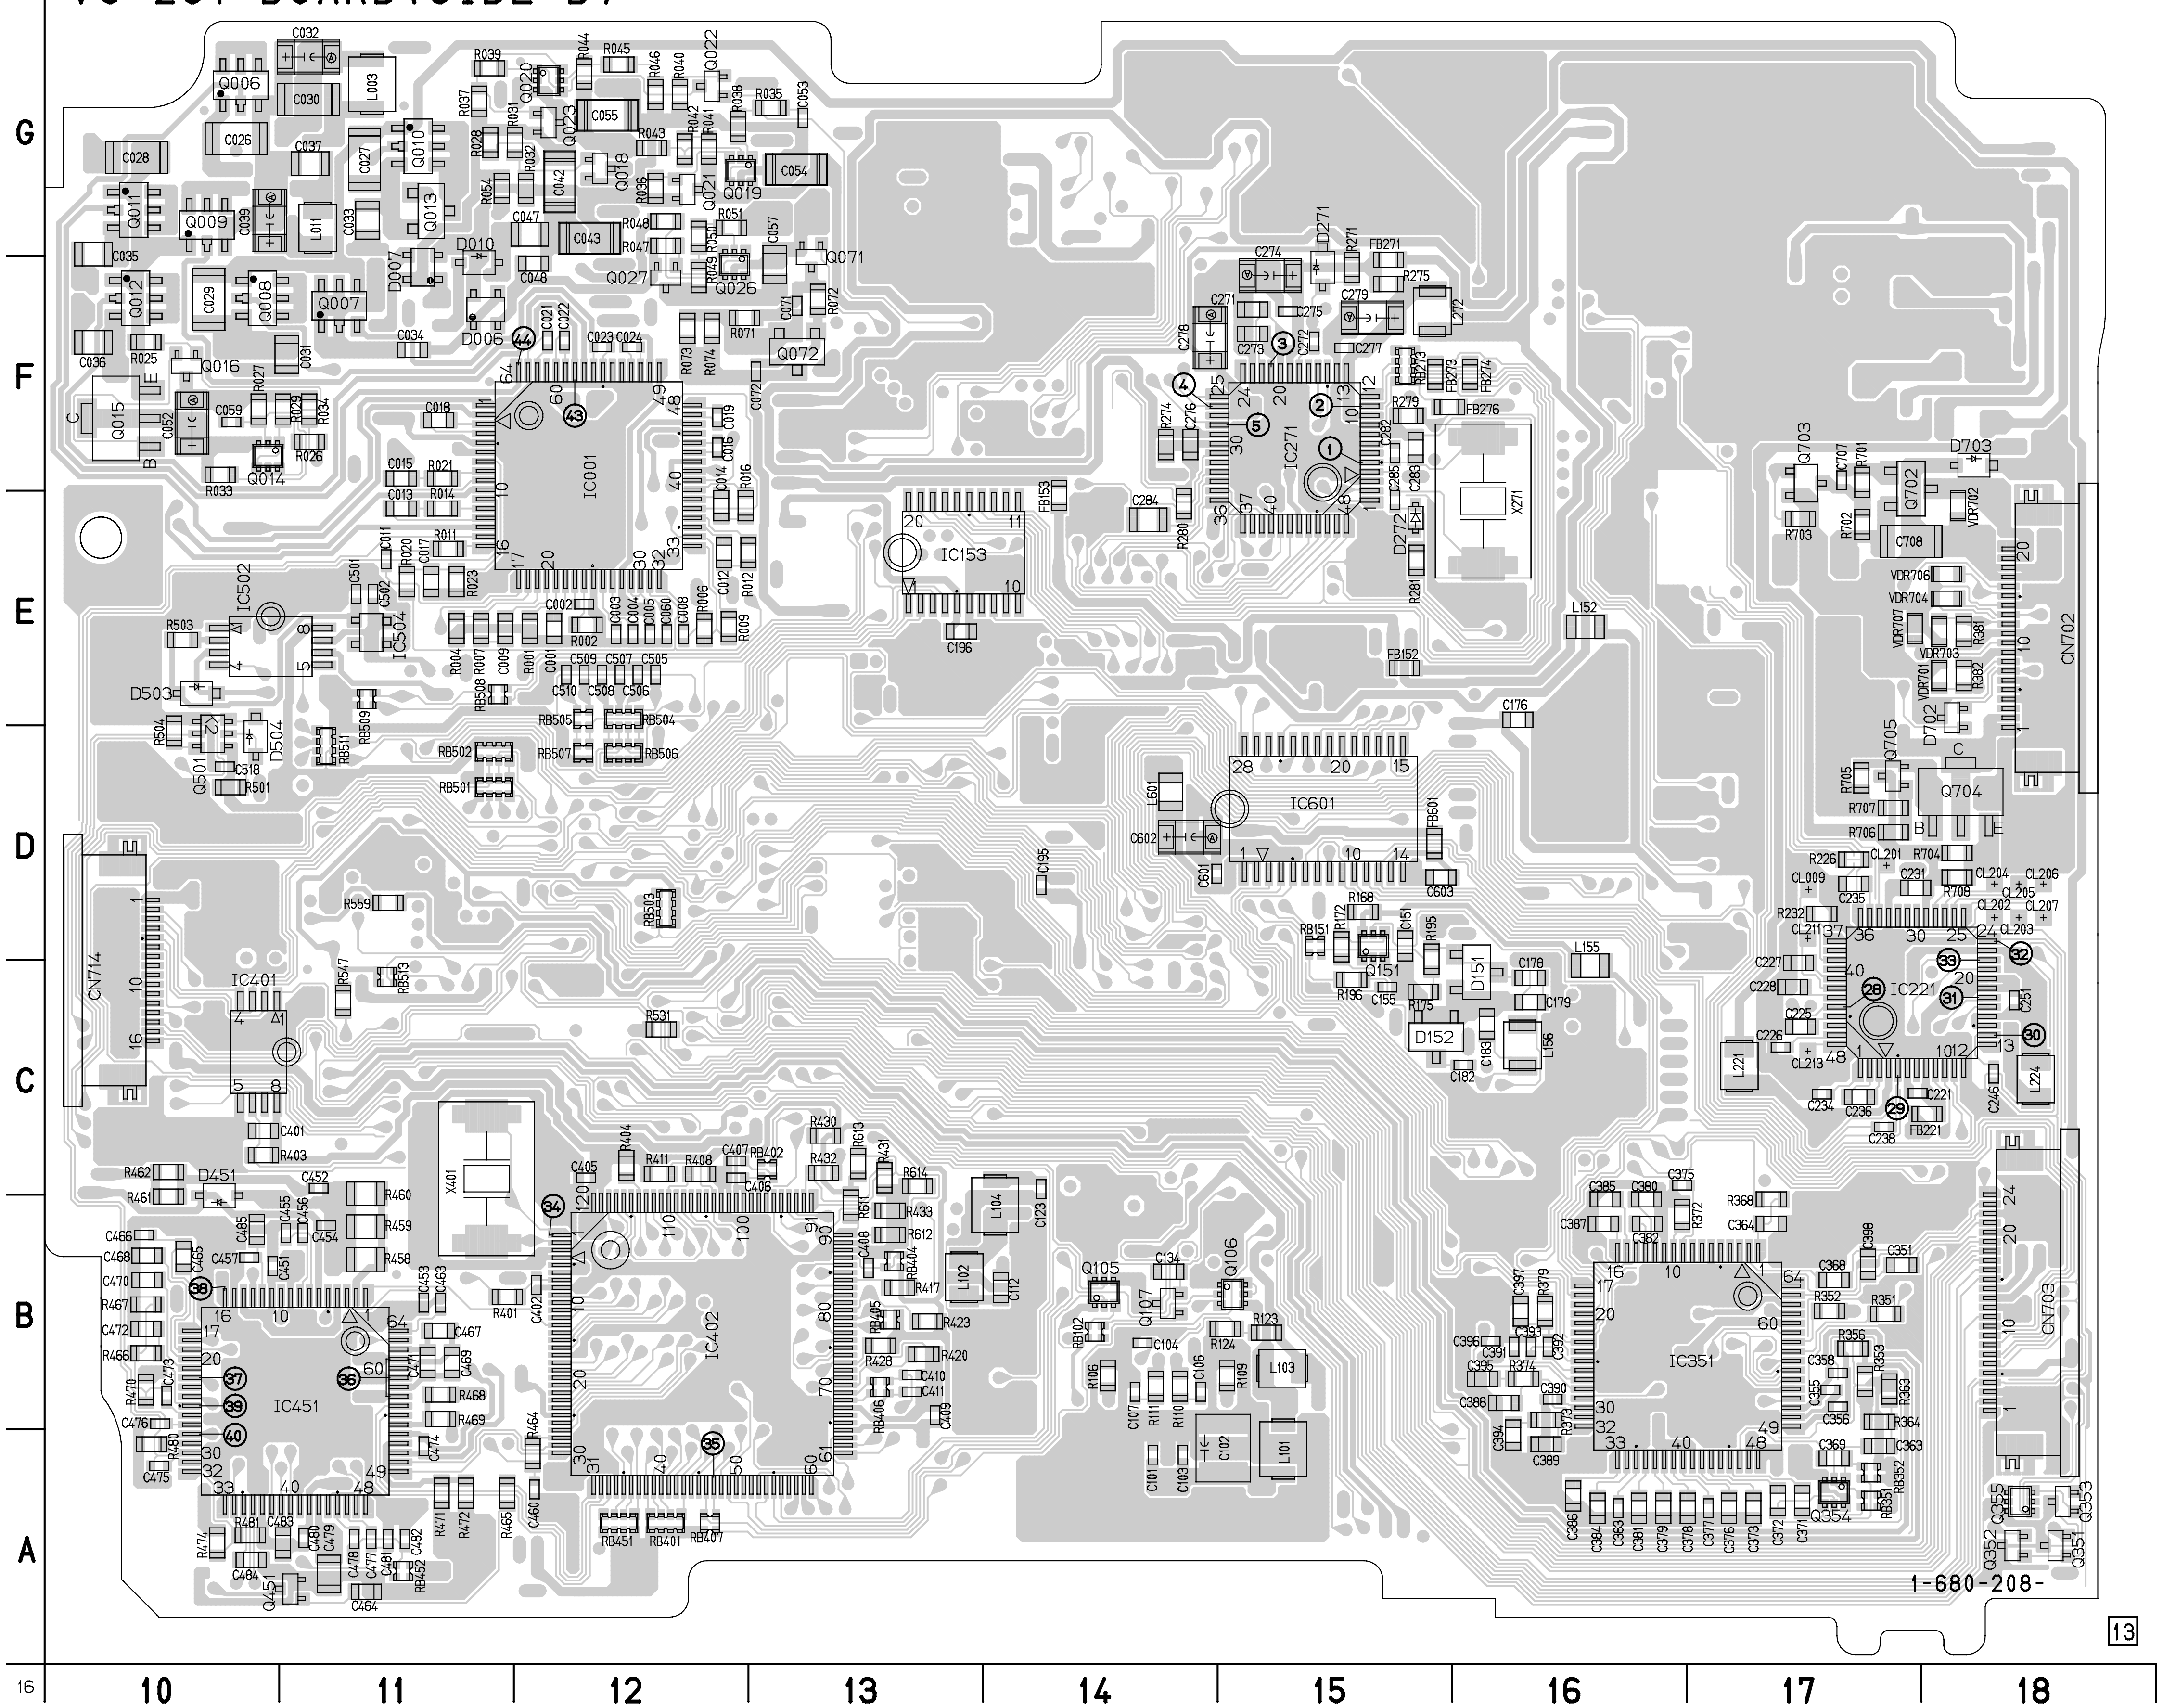
G
F
E
D
C
B
A
10
11
12
13
14
15
16
17
18
16
IC001
IC153
IC271
IC502
IC504
IC601
IC221
IC401
IC402
IC451
IC351
CN702
CN703
CN714
X271
X401
Q704
Q702
Q703
Q705
Q105
Q106
Q107
Q151
Q351
Q352
Q353
Q354
Q355
Q451
Q501
D151
D152
D271
D272
D451
D503
D504
D702
D703
L101
L102
L103
L104
L155
L156
L221
L224
1-680-208-
13

**< Page 4-43, 4-44 >**

**For Schematic Diagram**

- Refer to page 7 for printed wiring board.

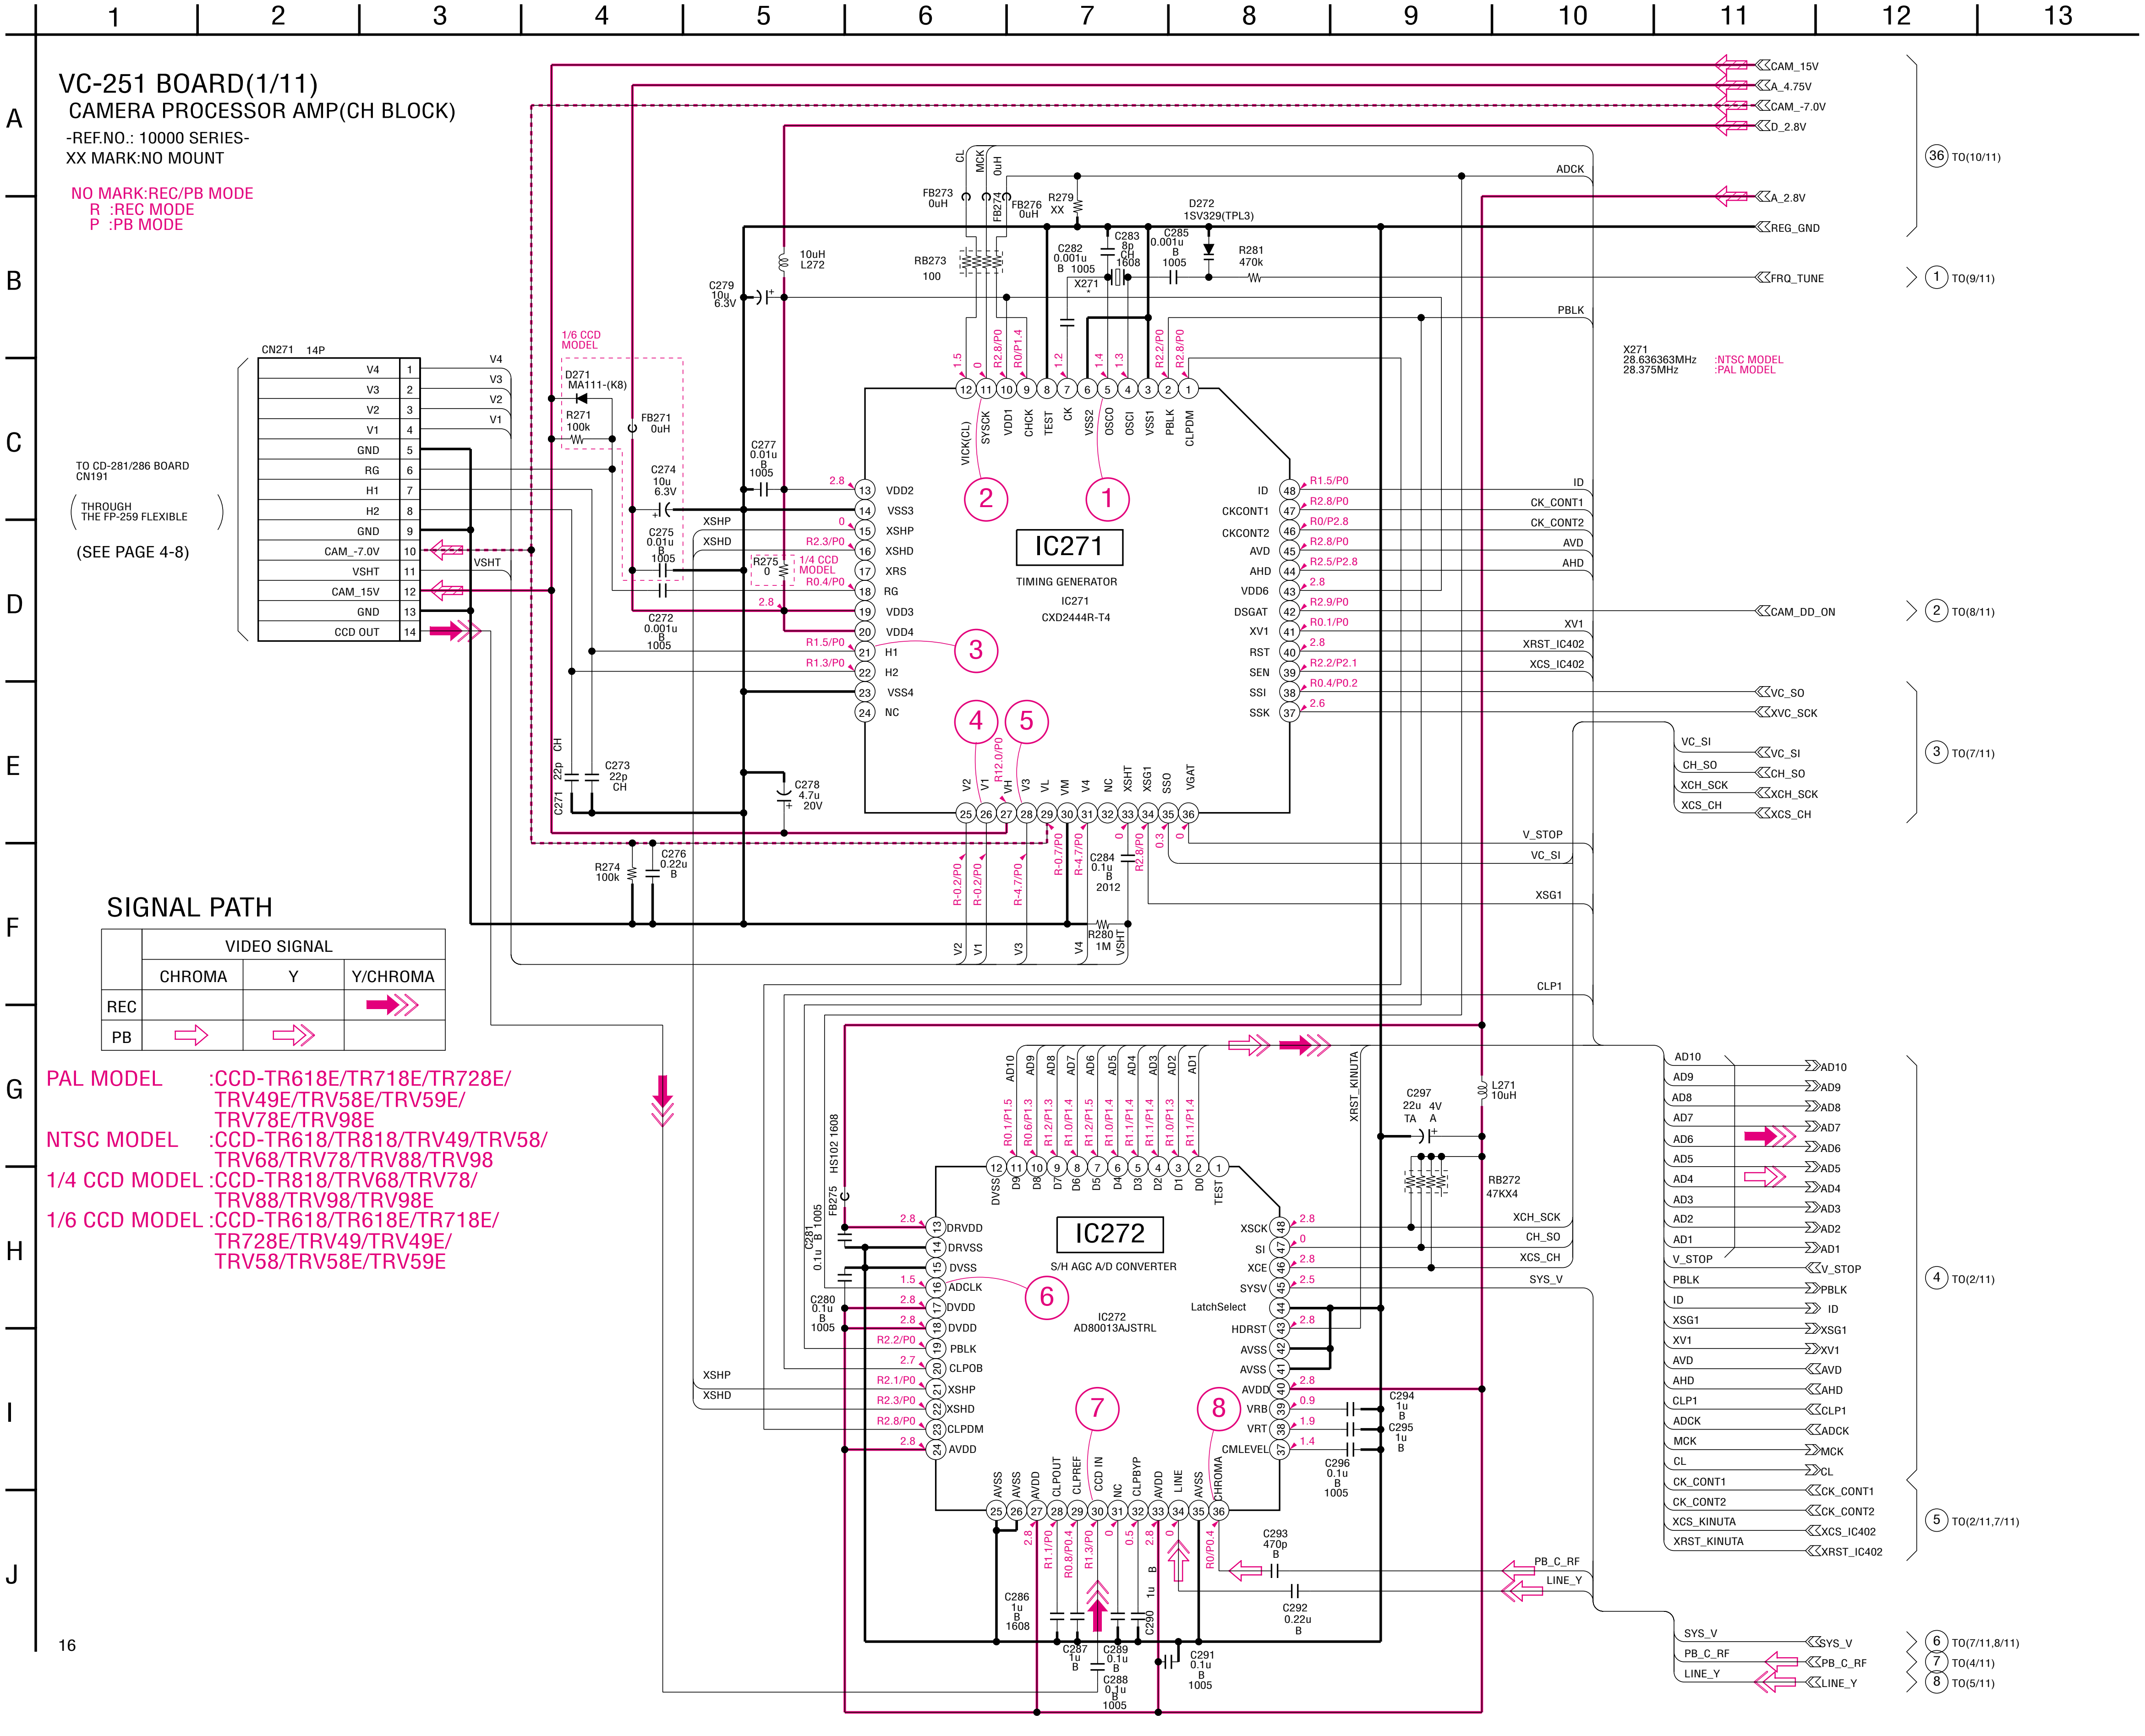
1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
G
H
I
J
CN271 14P
V4
V3
V2
V1
GND
RG
H1
H2
GND
CAM_-7.0V
VSHT
CAM_15V
GND
CCD OUT
TO CD-281/286 BOARD CN191
THROUGH THE FP-259 FLEXIBLE
(SEE PAGE 4-8)
1/6 CCD MODEL
D271 MA111-(K8)
R271 100k
FB271 0uH
IC271
TIMING GENERATOR
IC271 CXD2444R-T4
X271 28.636363MHz :NTSC MODEL
28.375MHz :PAL MODEL
D272 1SV329(TPL3)
IC272
S/H AGC A/D CONVERTER
IC272 AD80013AJSTRL
L271 10uH
RB272 47KX4
CAM_15V
A_4.75V
CAM_-7.0V
D_2.8V
A_2.8V
REG_GND
FRQ_TUNE
CAM_DD_ON
VC_SO
XVC_SCK
VC_SI
CH_SO
XCH_SCK
XCS_CH
AD10
AD9
AD8
AD7
AD6
AD5
AD4
AD3
AD2
AD1
V_STOP
PBLK
ID
XSG1
XV1
AVD
AHD
CLP1
ADCK
MCK
CL
CK_CONT1
CK_CONT2
XCS_KINUTA
XRST_IC402
SYS_V
PB_C_RF
LINE_Y
36 TO(10/11)
1 TO(9/11)
2 TO(8/11)
3 TO(7/11)
4 TO(2/11)
5 TO(2/11,7/11)
6 TO(7/11,8/11)
7 TO(4/11)
8 TO(5/11)
16

VC-251 BOARD(1/11)
CAMERA PROCESSOR AMP(CH BLOCK)

-REF.NO.: 10000 SERIES-
XX MARK:NO MOUNT

NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE

SIGNAL PATH

| | VIDEO SIGNAL | | |
|---|---|---|---|
| | CHROMA | Y | Y/CHROMA |
| REC | | | ➡ |
| PB | ⇨ | ⇨ | |

PAL MODEL :CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E
NTSC MODEL :CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98
1/4 CCD MODEL :CCD-TR818/TRV68/TRV78/TRV88/TRV98/TRV98E
1/6 CCD MODEL :CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E

**< Page 4-45, 4-46 >**

**For Schematic Diagram**
- Refer to page 7 for printed wiring board.

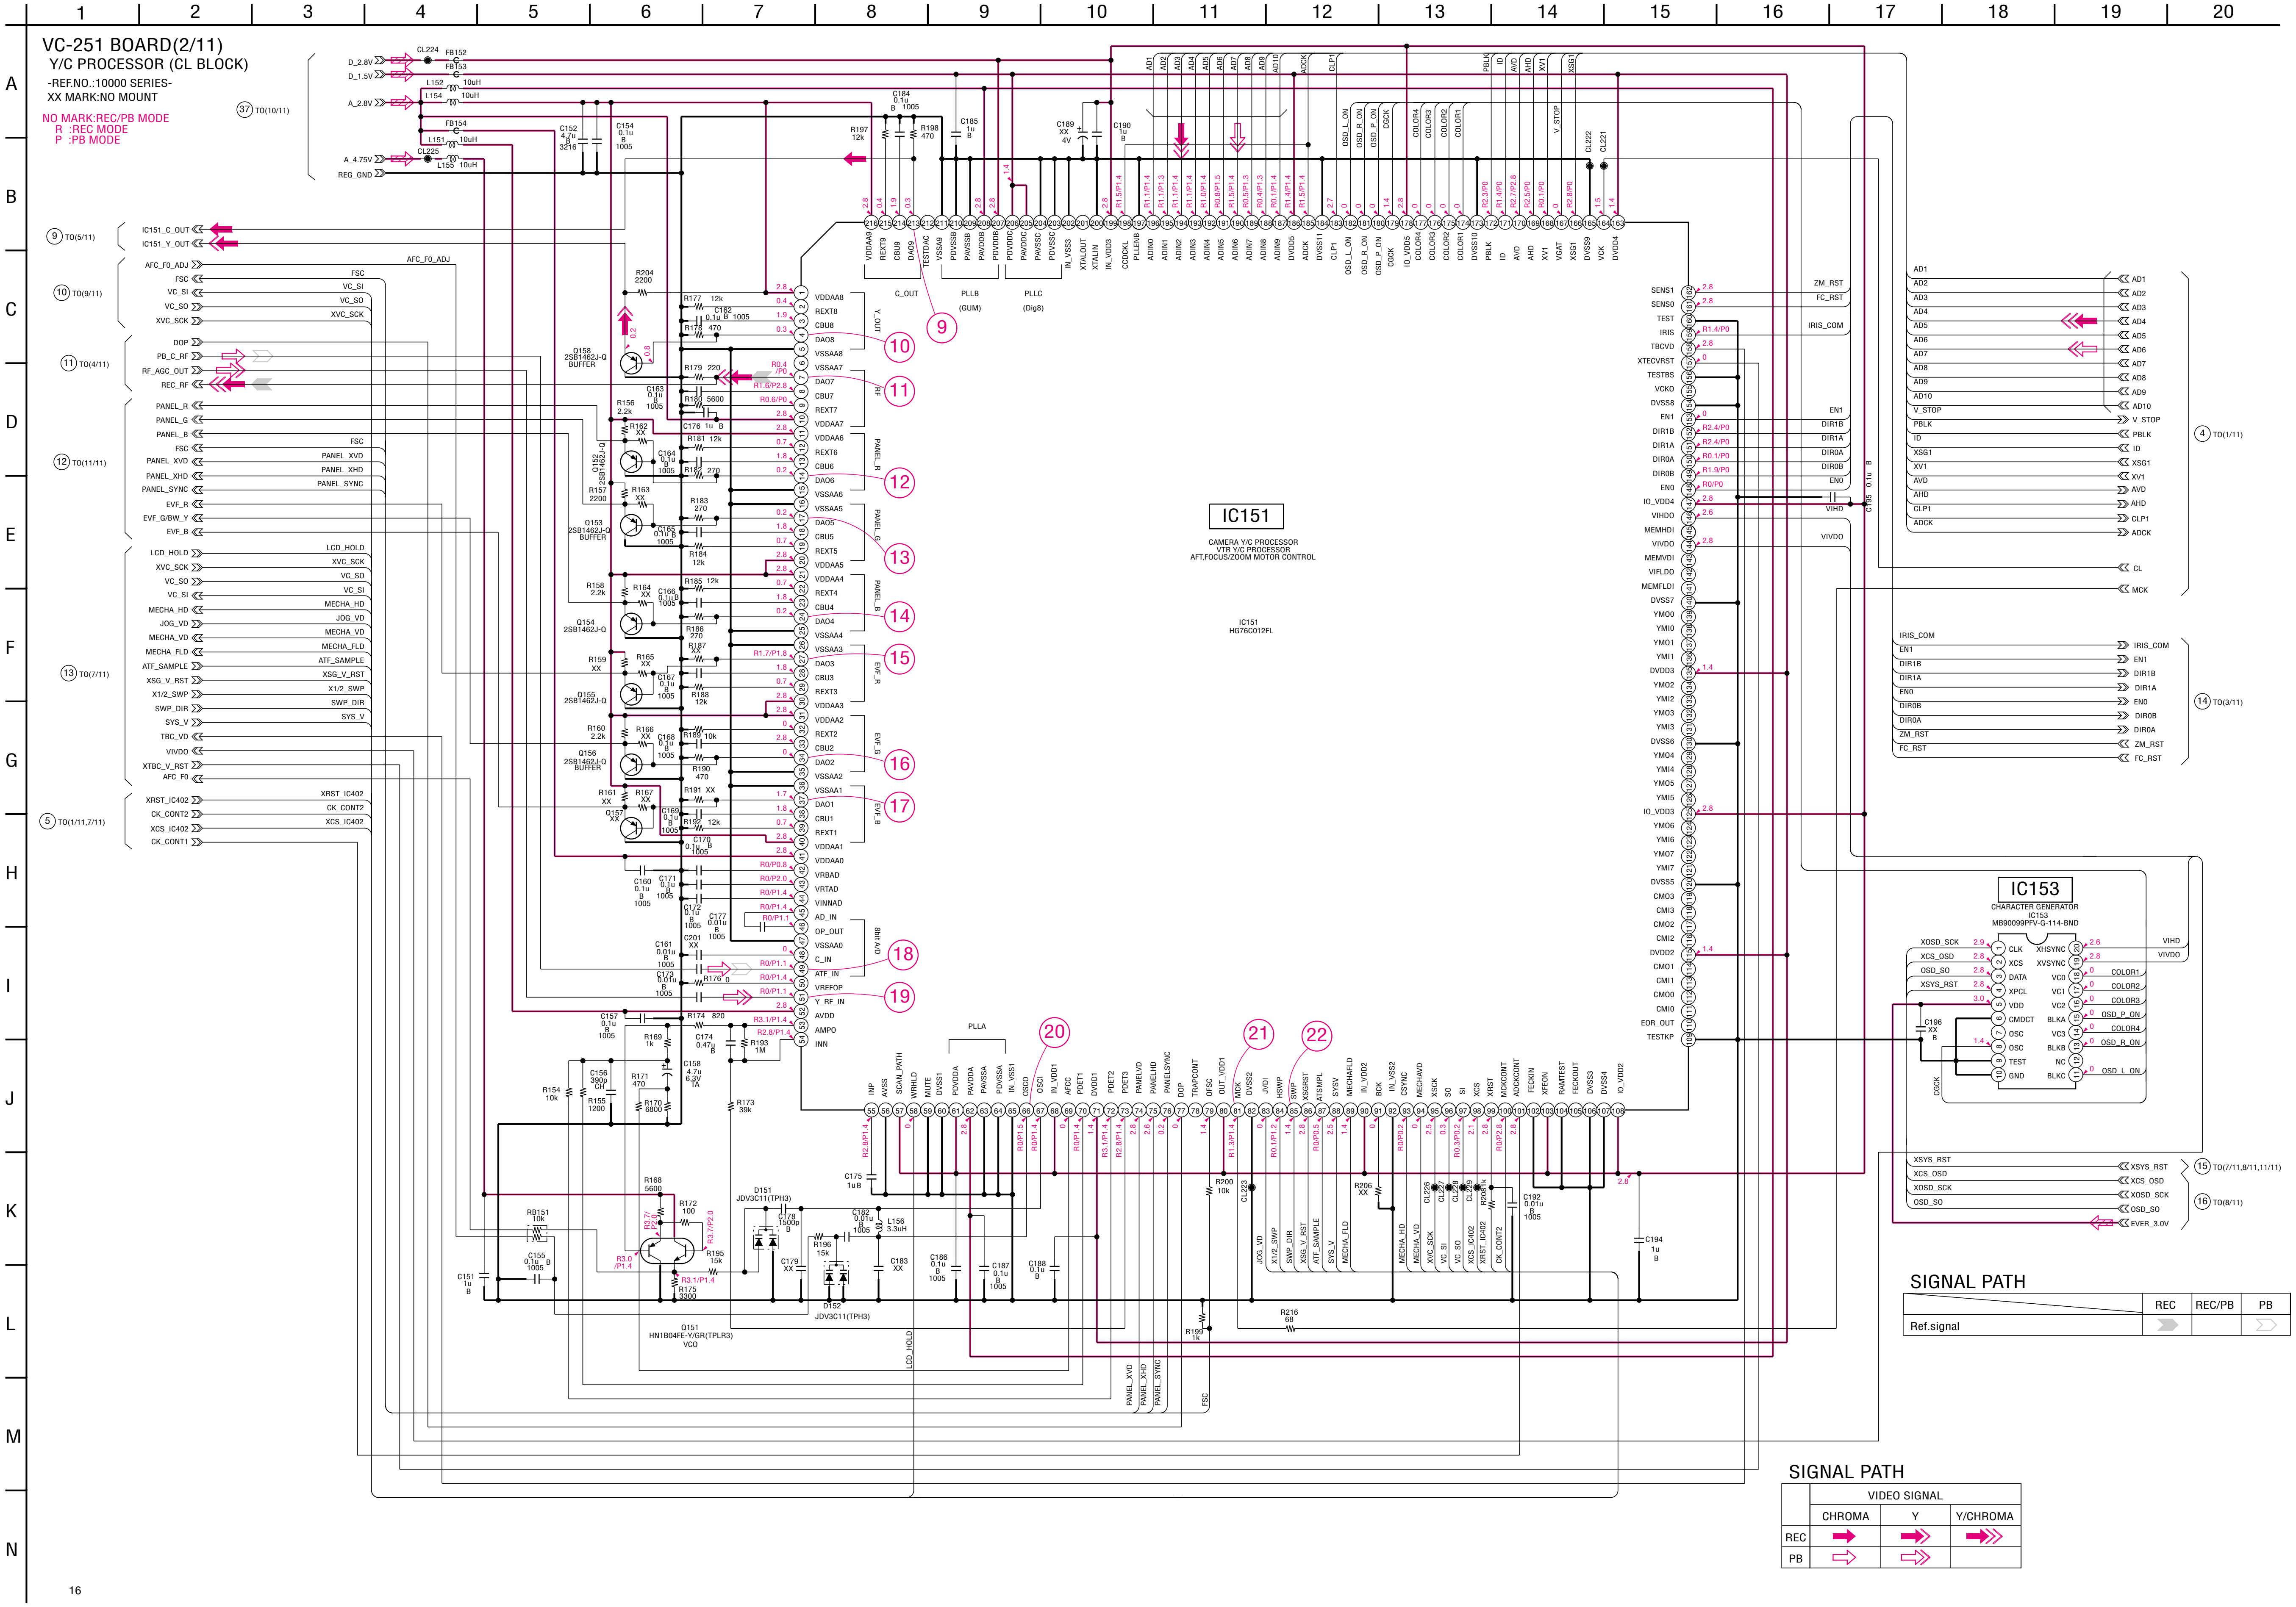
VC-251 BOARD(2/11)
Y/C PROCESSOR (CL BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
IC151
CAMERA Y/C PROCESSOR
VTR Y/C PROCESSOR
AFT,FOCUS/ZOOM MOTOR CONTROL
IC151
HG76C012FL
IC153
CHARACTER GENERATOR
IC153
MB90099PFV-G-114-BND
Q151
HN1B04FE-Y/GR(TPLR3)
VCO
D151
JDV3C11(TPH3)
D152
JDV3C11(TPH3)
Q152
2SB1462J-Q
Q153
2SB1462J-Q
BUFFER
Q154
2SB1462J-Q
Q155
2SB1462J-Q
Q156
2SB1462J-Q
BUFFER
Q157
XX
Q158
2SB1462J-Q
BUFFER
PLLA
PLLB
(GUM)
PLLC
(Dig8)
C_OUT
Y_OUT
TO(10/11)
TO(5/11)
TO(9/11)
TO(4/11)
TO(11/11)
TO(7/11)
TO(1/11,7/11)
TO(1/11)
TO(3/11)
TO(7/11,8/11,11/11)
TO(8/11)
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
A
B
C
D
E
F
G
H
I
J
K
L
M
N
16

SIGNAL PATH

| | REC | REC/PB | PB |
|---|---|---|---|
| Ref.signal | ➡ | | ⇨ |

SIGNAL PATH

| | VIDEO SIGNAL | | |
|---|---|---|---|
| | CHROMA | Y | Y/CHROMA |
| REC | ➡ | ➡ | ⇛ |
| PB | ⇨ | ⇨ | |

< Page 4-47, 4-48 >

**For Schematic Diagram**
- Refer to page 7 for printed wiring board.

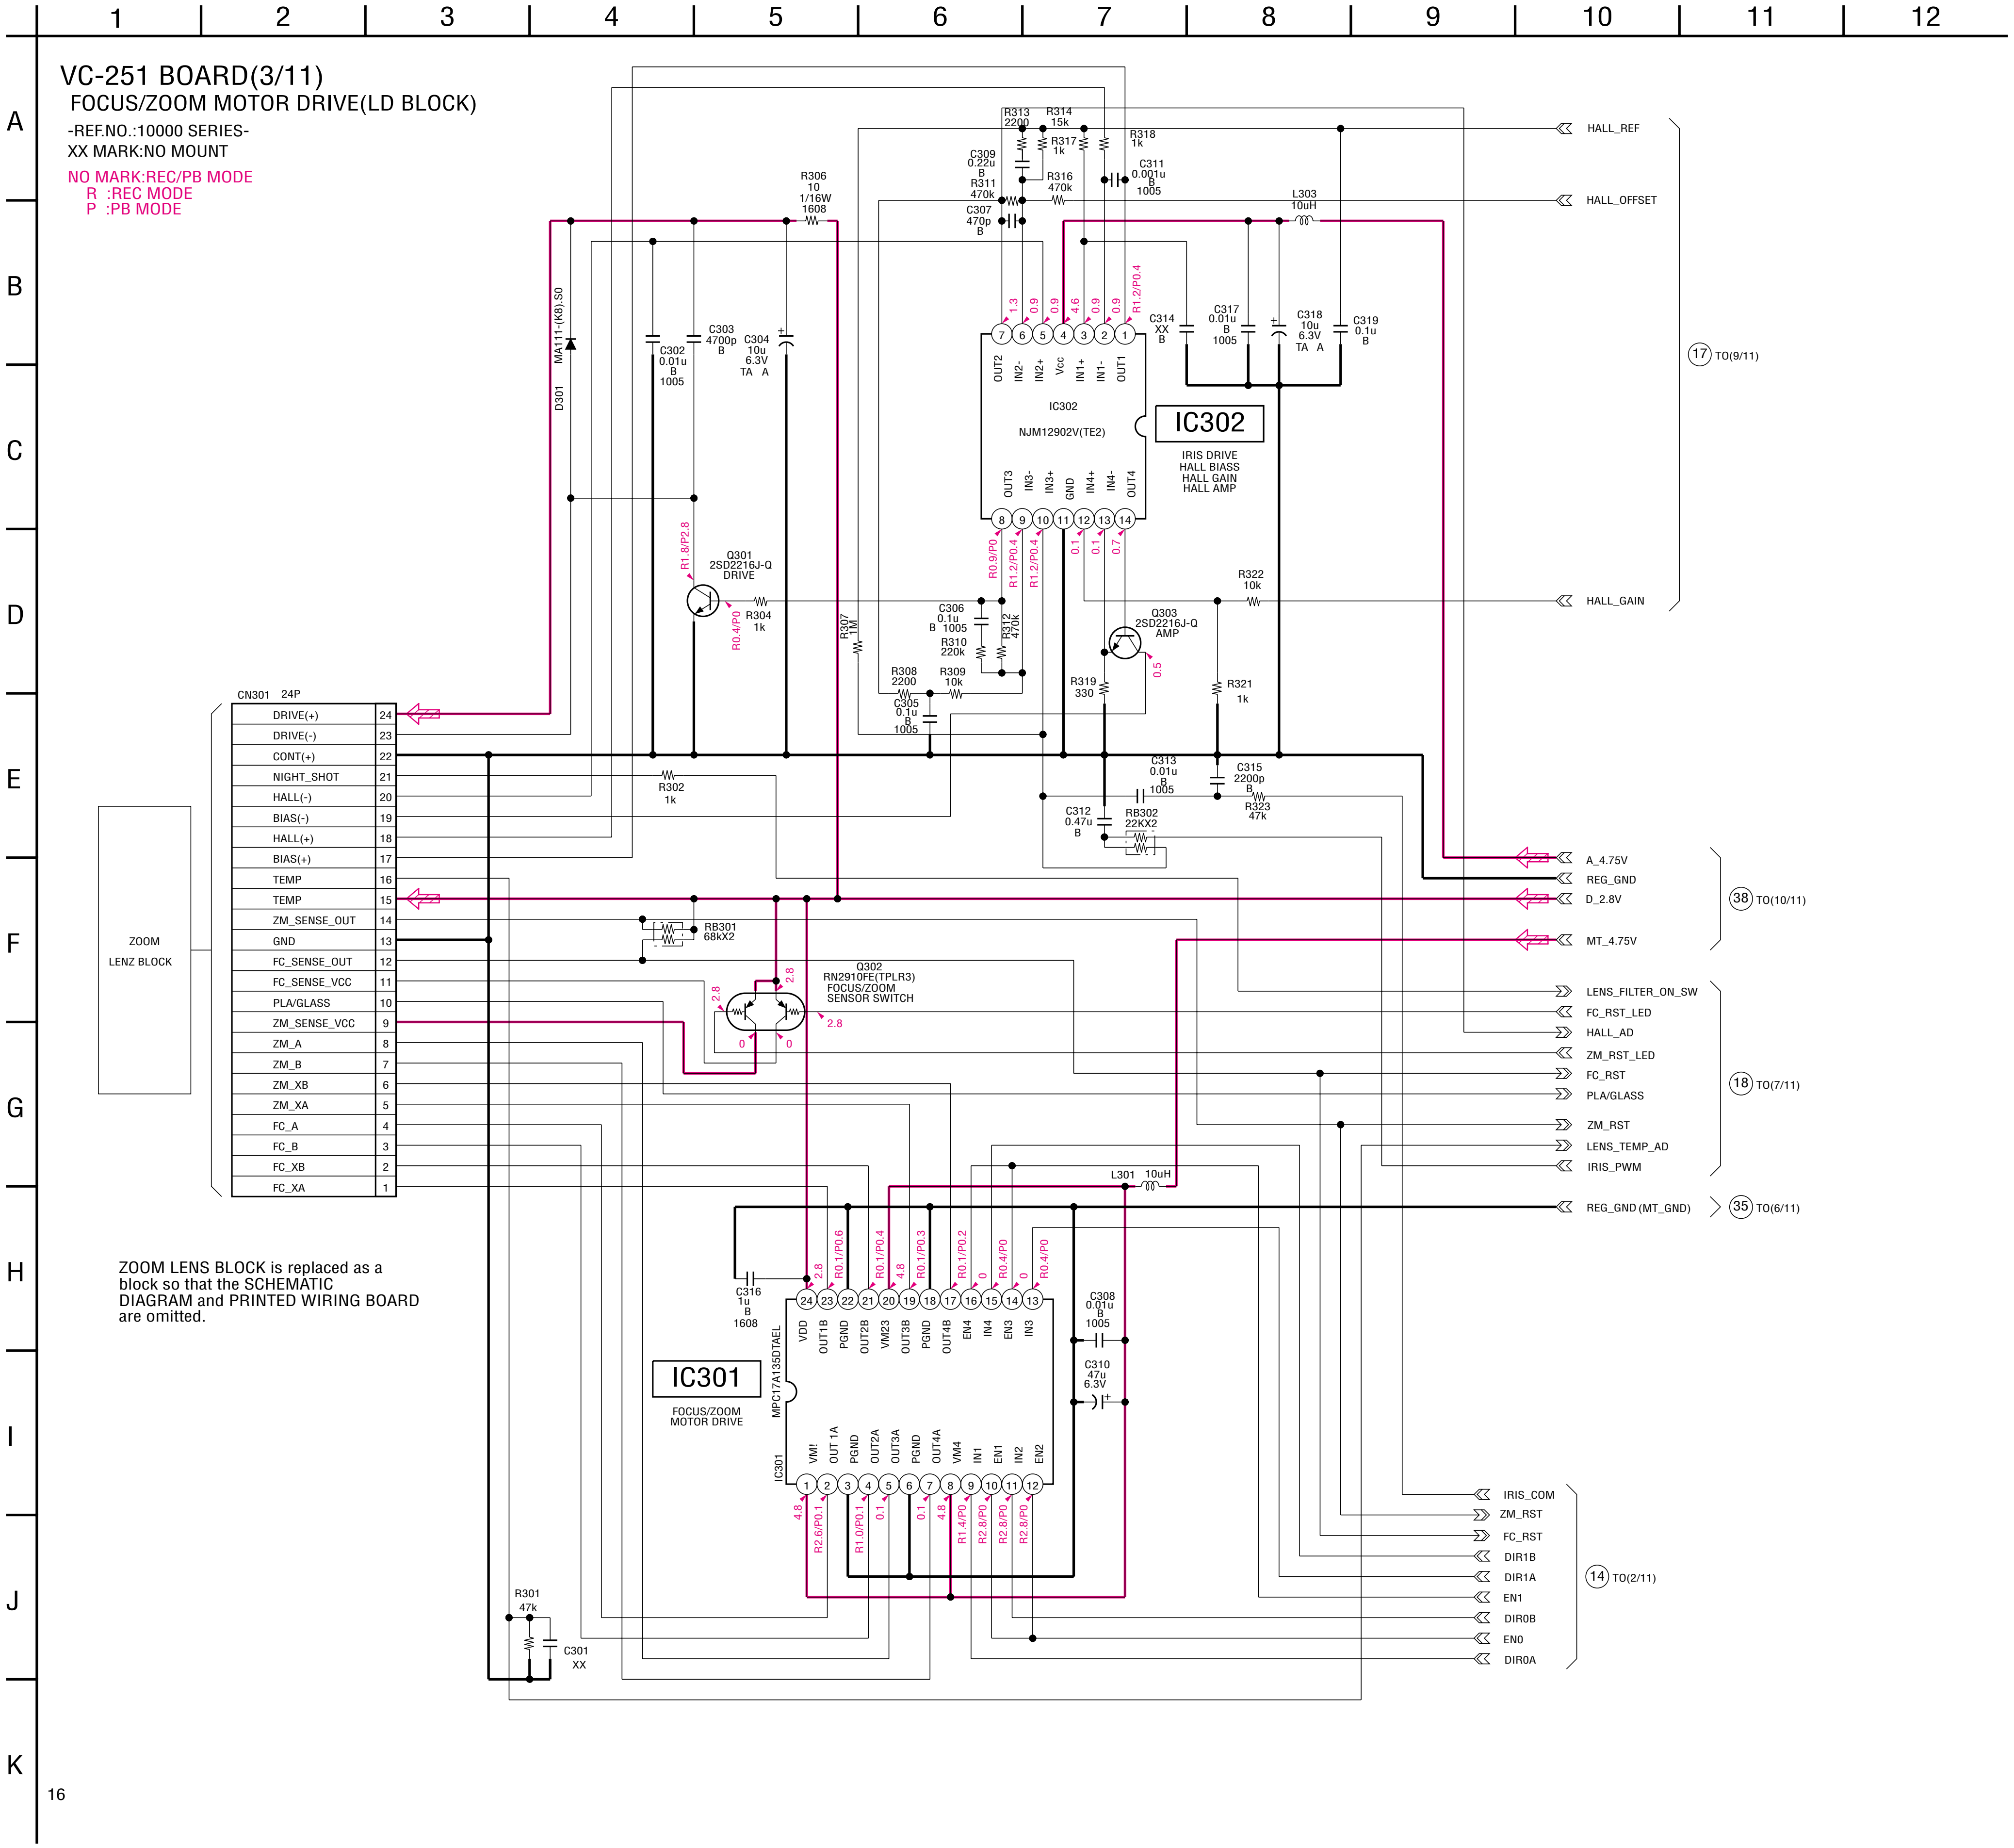
1
2
3
4
5
6
7
8
9
10
11
12
A
B
C
D
E
F
G
H
I
J
K
VC-251 BOARD(3/11)
FOCUS/ZOOM MOTOR DRIVE(LD BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
IC302
NJM12902V(TE2)
IRIS DRIVE
HALL BIASS
HALL GAIN
HALL AMP
IC301
FOCUS/ZOOM
MOTOR DRIVE
MPC17A135DTAEL
Q301
2SD2216J-Q
DRIVE
Q303
2SD2216J-Q
AMP
Q302
RN2910FE(TPLR3)
FOCUS/ZOOM
SENSOR SWITCH
D301
MA111-(K8).SO
L303 10uH
L301 10uH
CN301 24P
DRIVE(+)
DRIVE(-)
CONT(+)
NIGHT_SHOT
HALL(-)
BIAS(-)
HALL(+)
BIAS(+)
TEMP
TEMP
ZM_SENSE_OUT
GND
FC_SENSE_OUT
FC_SENSE_VCC
PLA/GLASS
ZM_SENSE_VCC
ZM_A
ZM_B
ZM_XB
ZM_XA
FC_A
FC_B
FC_XB
FC_XA
ZOOM
LENZ BLOCK
HALL_REF
HALL_OFFSET
HALL_GAIN
(17) TO(9/11)
A_4.75V
REG_GND
D_2.8V
MT_4.75V
(38) TO(10/11)
LENS_FILTER_ON_SW
FC_RST_LED
HALL_AD
ZM_RST_LED
FC_RST
PLA/GLASS
ZM_RST
LENS_TEMP_AD
IRIS_PWM
(18) TO(7/11)
REG_GND (MT_GND)
(35) TO(6/11)
IRIS_COM
ZM_RST
FC_RST
DIR1B
DIR1A
EN1
DIR0B
EN0
DIR0A
(14) TO(2/11)
ZOOM LENS BLOCK is replaced as a
block so that the SCHEMATIC
DIAGRAM and PRINTED WIRING BOARD
are omitted.
16

< Page 4-49, 4-50 >

**For Schematic Diagram**
- Refer to page 7 for printed wiring board.

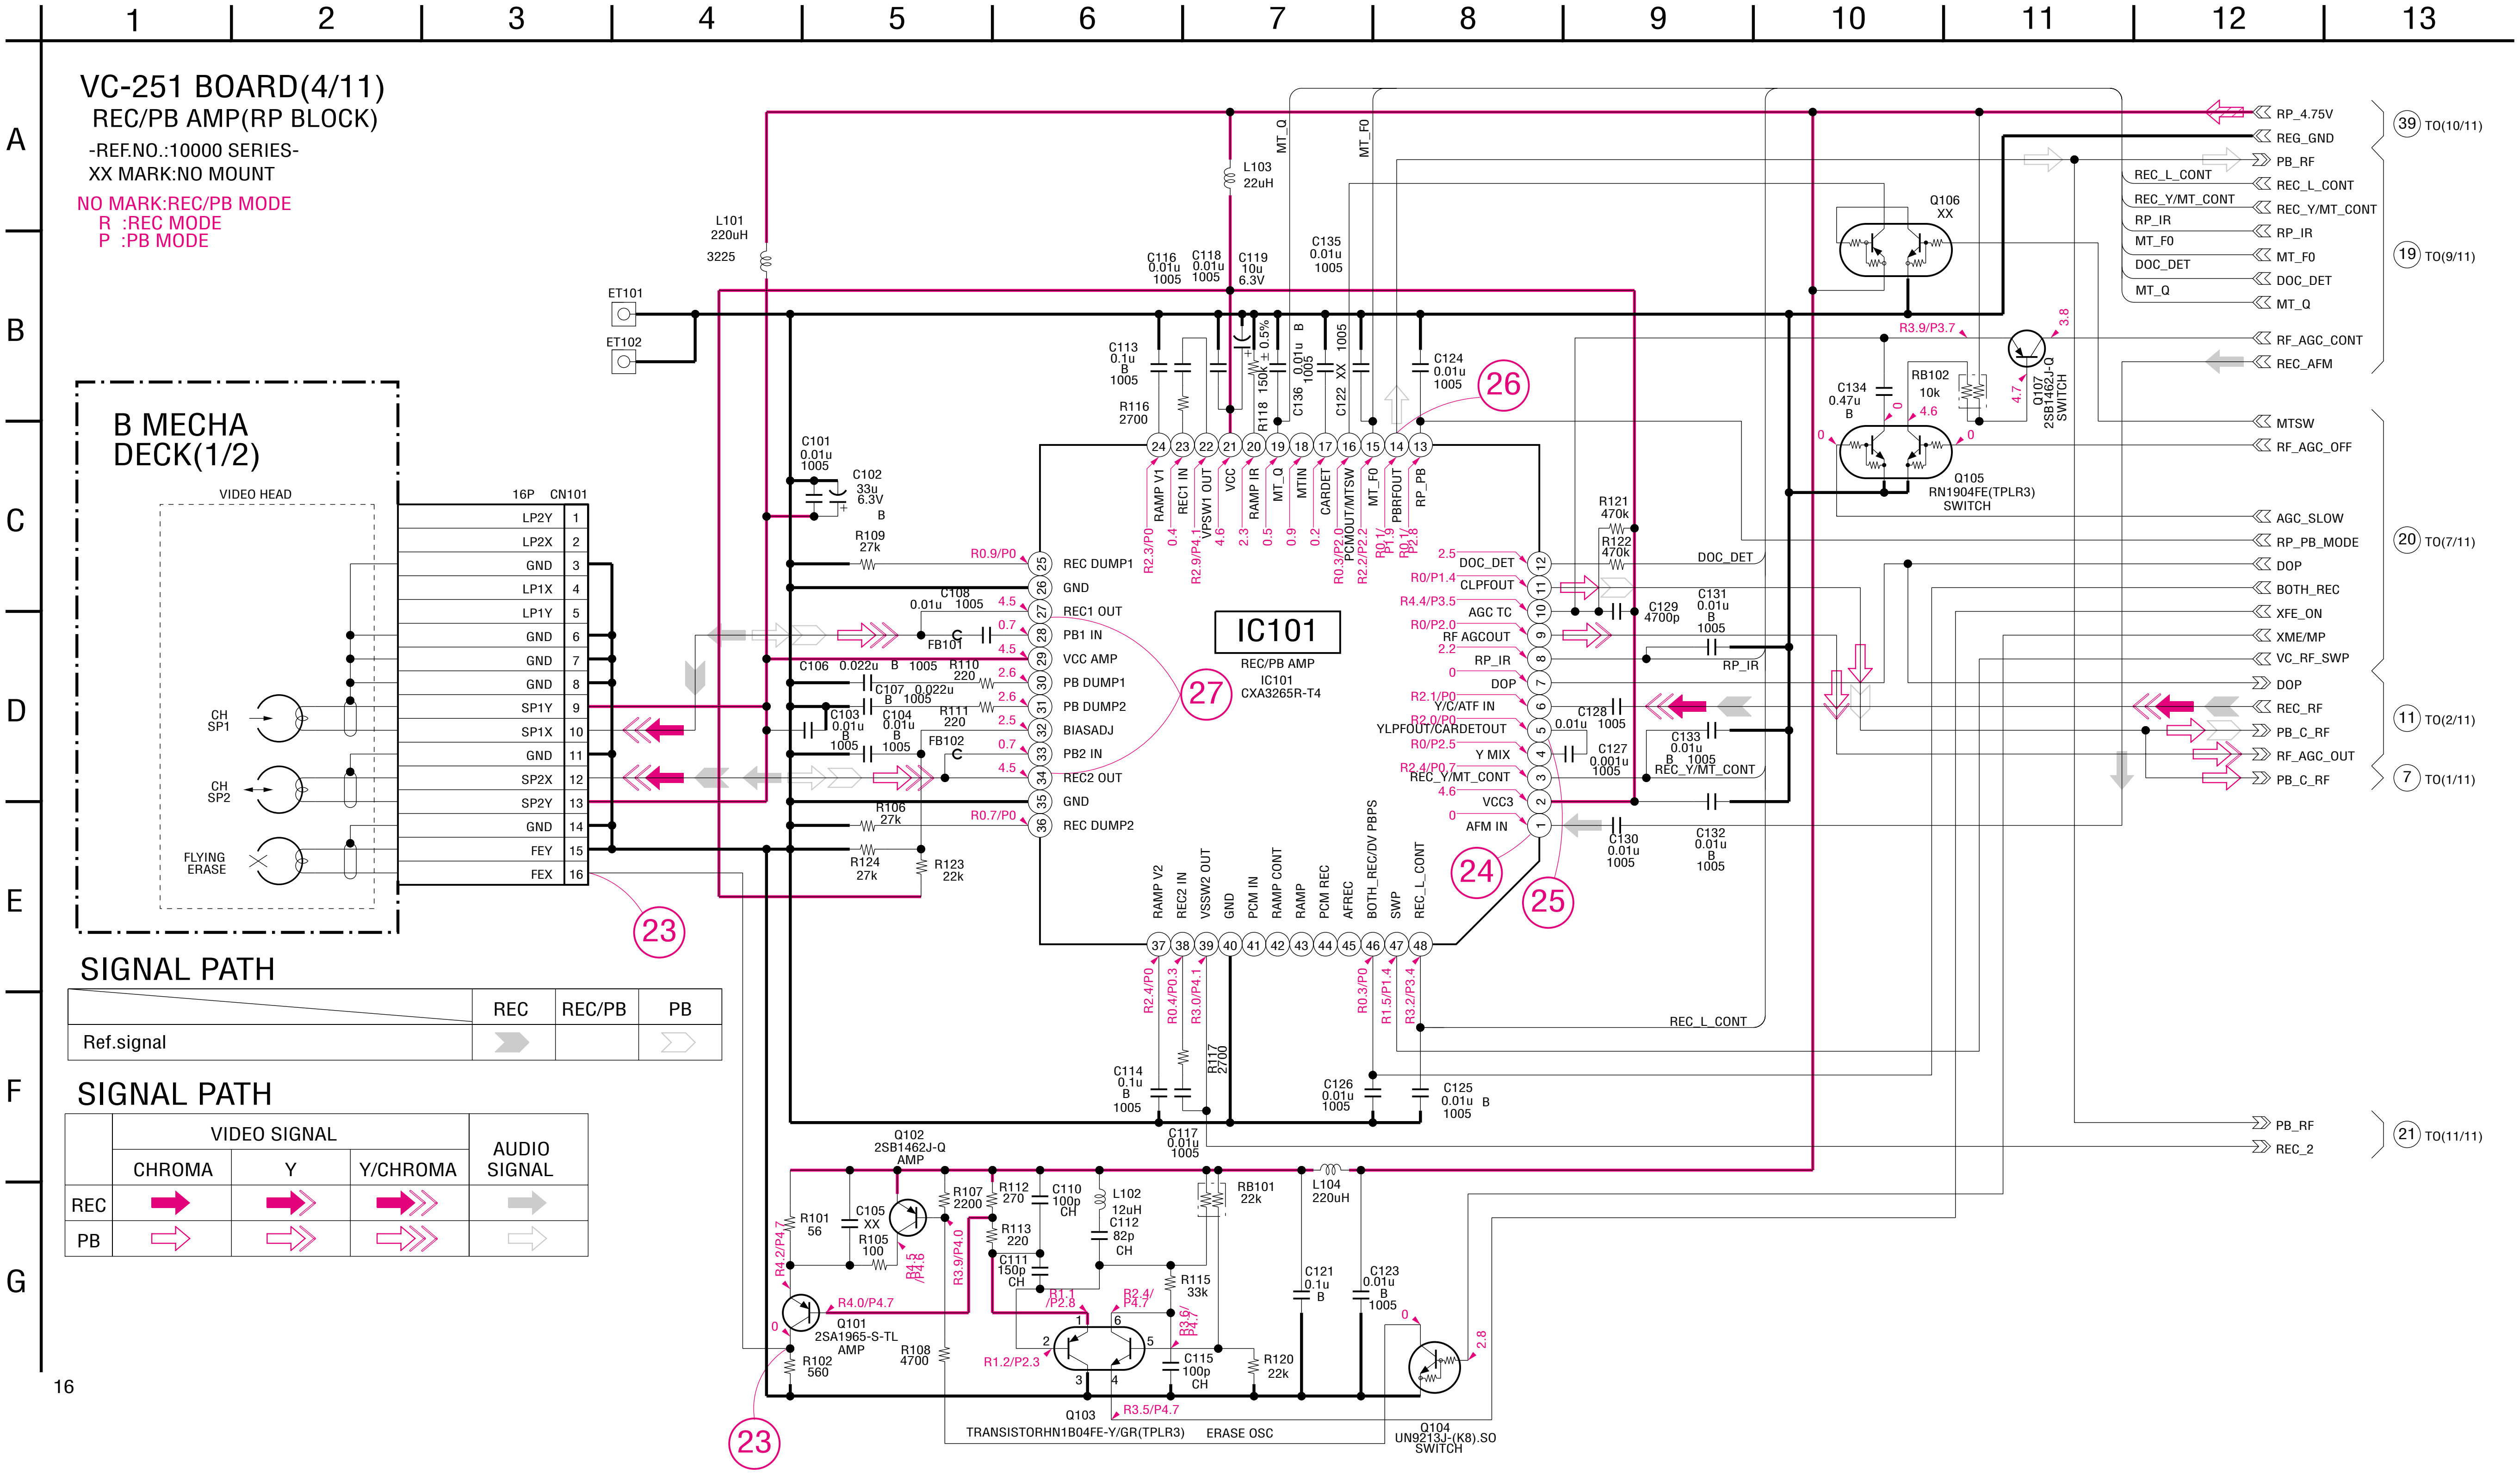
1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
G
VC-251 BOARD(4/11)
REC/PB AMP(RP BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
B MECHA DECK(1/2)
VIDEO HEAD
CH SP1
CH SP2
FLYING ERASE
16P CN101
LP2Y
LP2X
GND
LP1X
LP1Y
SP1Y
SP1X
SP2X
SP2Y
FEY
FEX
ET101
ET102
L101 220uH 3225
L103 22uH
C101 0.01u 1005
C102 33u 6.3V B
R109 27k
C116 0.01u 1005
C118 0.01u 1005
C119 10u 6.3V
C135 0.01u 1005
C113 0.1u B 1005
R116 2700
R118 150k ± 0.5%
C136 0.01u B 1005
C122 XX 1005
C124 0.01u 1005
IC101
REC/PB AMP
IC101
CXA3265R-T4
RAMP V1
REC1 IN
VPSW1 OUT
VCC
RAMP IR
MT_Q
MTIN
CARDET
PCMOUT/MTSW
MT_F0
PBRFOUT
RP_PB
REC DUMP1
REC1 OUT
PB1 IN
VCC AMP
PB DUMP1
PB DUMP2
BIASADJ
PB2 IN
REC2 OUT
REC DUMP2
DOC_DET
CLPFOUT
AGC TC
RF AGCOUT
RP_IR
DOP
Y/C/ATF IN
YLPFOUT/CARDETOUT
Y MIX
REC_Y/MT_CONT
VCC3
AFM IN
RAMP V2
REC2 IN
VSSW2 OUT
PCM IN
RAMP CONT
RAMP
PCM REC
AFREC
BOTH_REC/DV PBPS
SWP
REC_L_CONT
C106 0.022u B 1005
C107 0.022u B 1005
C108 0.01u 1005
R110 220
R111 220
C103 0.01u B 1005
C104 0.01u B 1005
FB101
FB102
R106 27k
R124 27k
R123 22k
C114 0.1u B 1005
R117 2700
C117 0.01u 1005
C126 0.01u 1005
C125 0.01u B 1005
R121 470k
R122 470k
C129 4700p
C131 0.01u B 1005
C128 0.01u 1005
C127 0.001u B 1005
C133 0.01u B 1005
C130 0.01u 1005
C132 0.01u B 1005
C134 0.47u B
RB102 10k
Q106 XX
Q105 RN1904FE(TPLR3) SWITCH
Q107 2SB1462J-Q SWITCH
Q102 2SB1462J-Q AMP
Q101 2SA1965-S-TL AMP
Q103 TRANSISTORHN1B04FE-Y/GR(TPLR3) ERASE OSC
Q104 UN9213J-(K8).SO SWITCH
R101 56
C105 XX
R105 100
R102 560
R108 4700
R107 2200
R112 270
R113 220
C110 100p CH
C111 150p CH
L102 12uH
C112 82p CH
RB101 22k
L104 220uH
R115 33k
C115 100p CH
R120 22k
C121 0.1u B
C123 0.01u B 1005
RP_4.75V
REG_GND
PB_RF
REC_L_CONT
REC_Y/MT_CONT
RP_IR
MT_F0
DOC_DET
MT_Q
RF_AGC_CONT
REC_AFM
MTSW
RF_AGC_OFF
AGC_SLOW
RP_PB_MODE
DOP
BOTH_REC
XFE_ON
XME/MP
VC_RF_SWP
REC_RF
PB_C_RF
RF_AGC_OUT
PB_RF
REC_2
39 TO(10/11)
19 TO(9/11)
20 TO(7/11)
11 TO(2/11)
7 TO(1/11)
21 TO(11/11)
23
24
25
26
27
16

## SIGNAL PATH

| | REC | REC/PB | PB |
|---|---|---|---|
| Ref.signal | ➡ | | ⇨ |

## SIGNAL PATH

| | VIDEO SIGNAL | | | AUDIO SIGNAL |
|---|---|---|---|---|
| | CHROMA | Y | Y/CHROMA | |
| REC | ➡ | ➡➡ | ➡➡➡ | ➡ |
| PB | ⇨ | ⇨⇨ | ⇨⇨⇨ | ⇨ |

**< Page 4-51, 4-52 >**

**For Schematic Diagram**
- Refer to page 7 for printed wiring board.

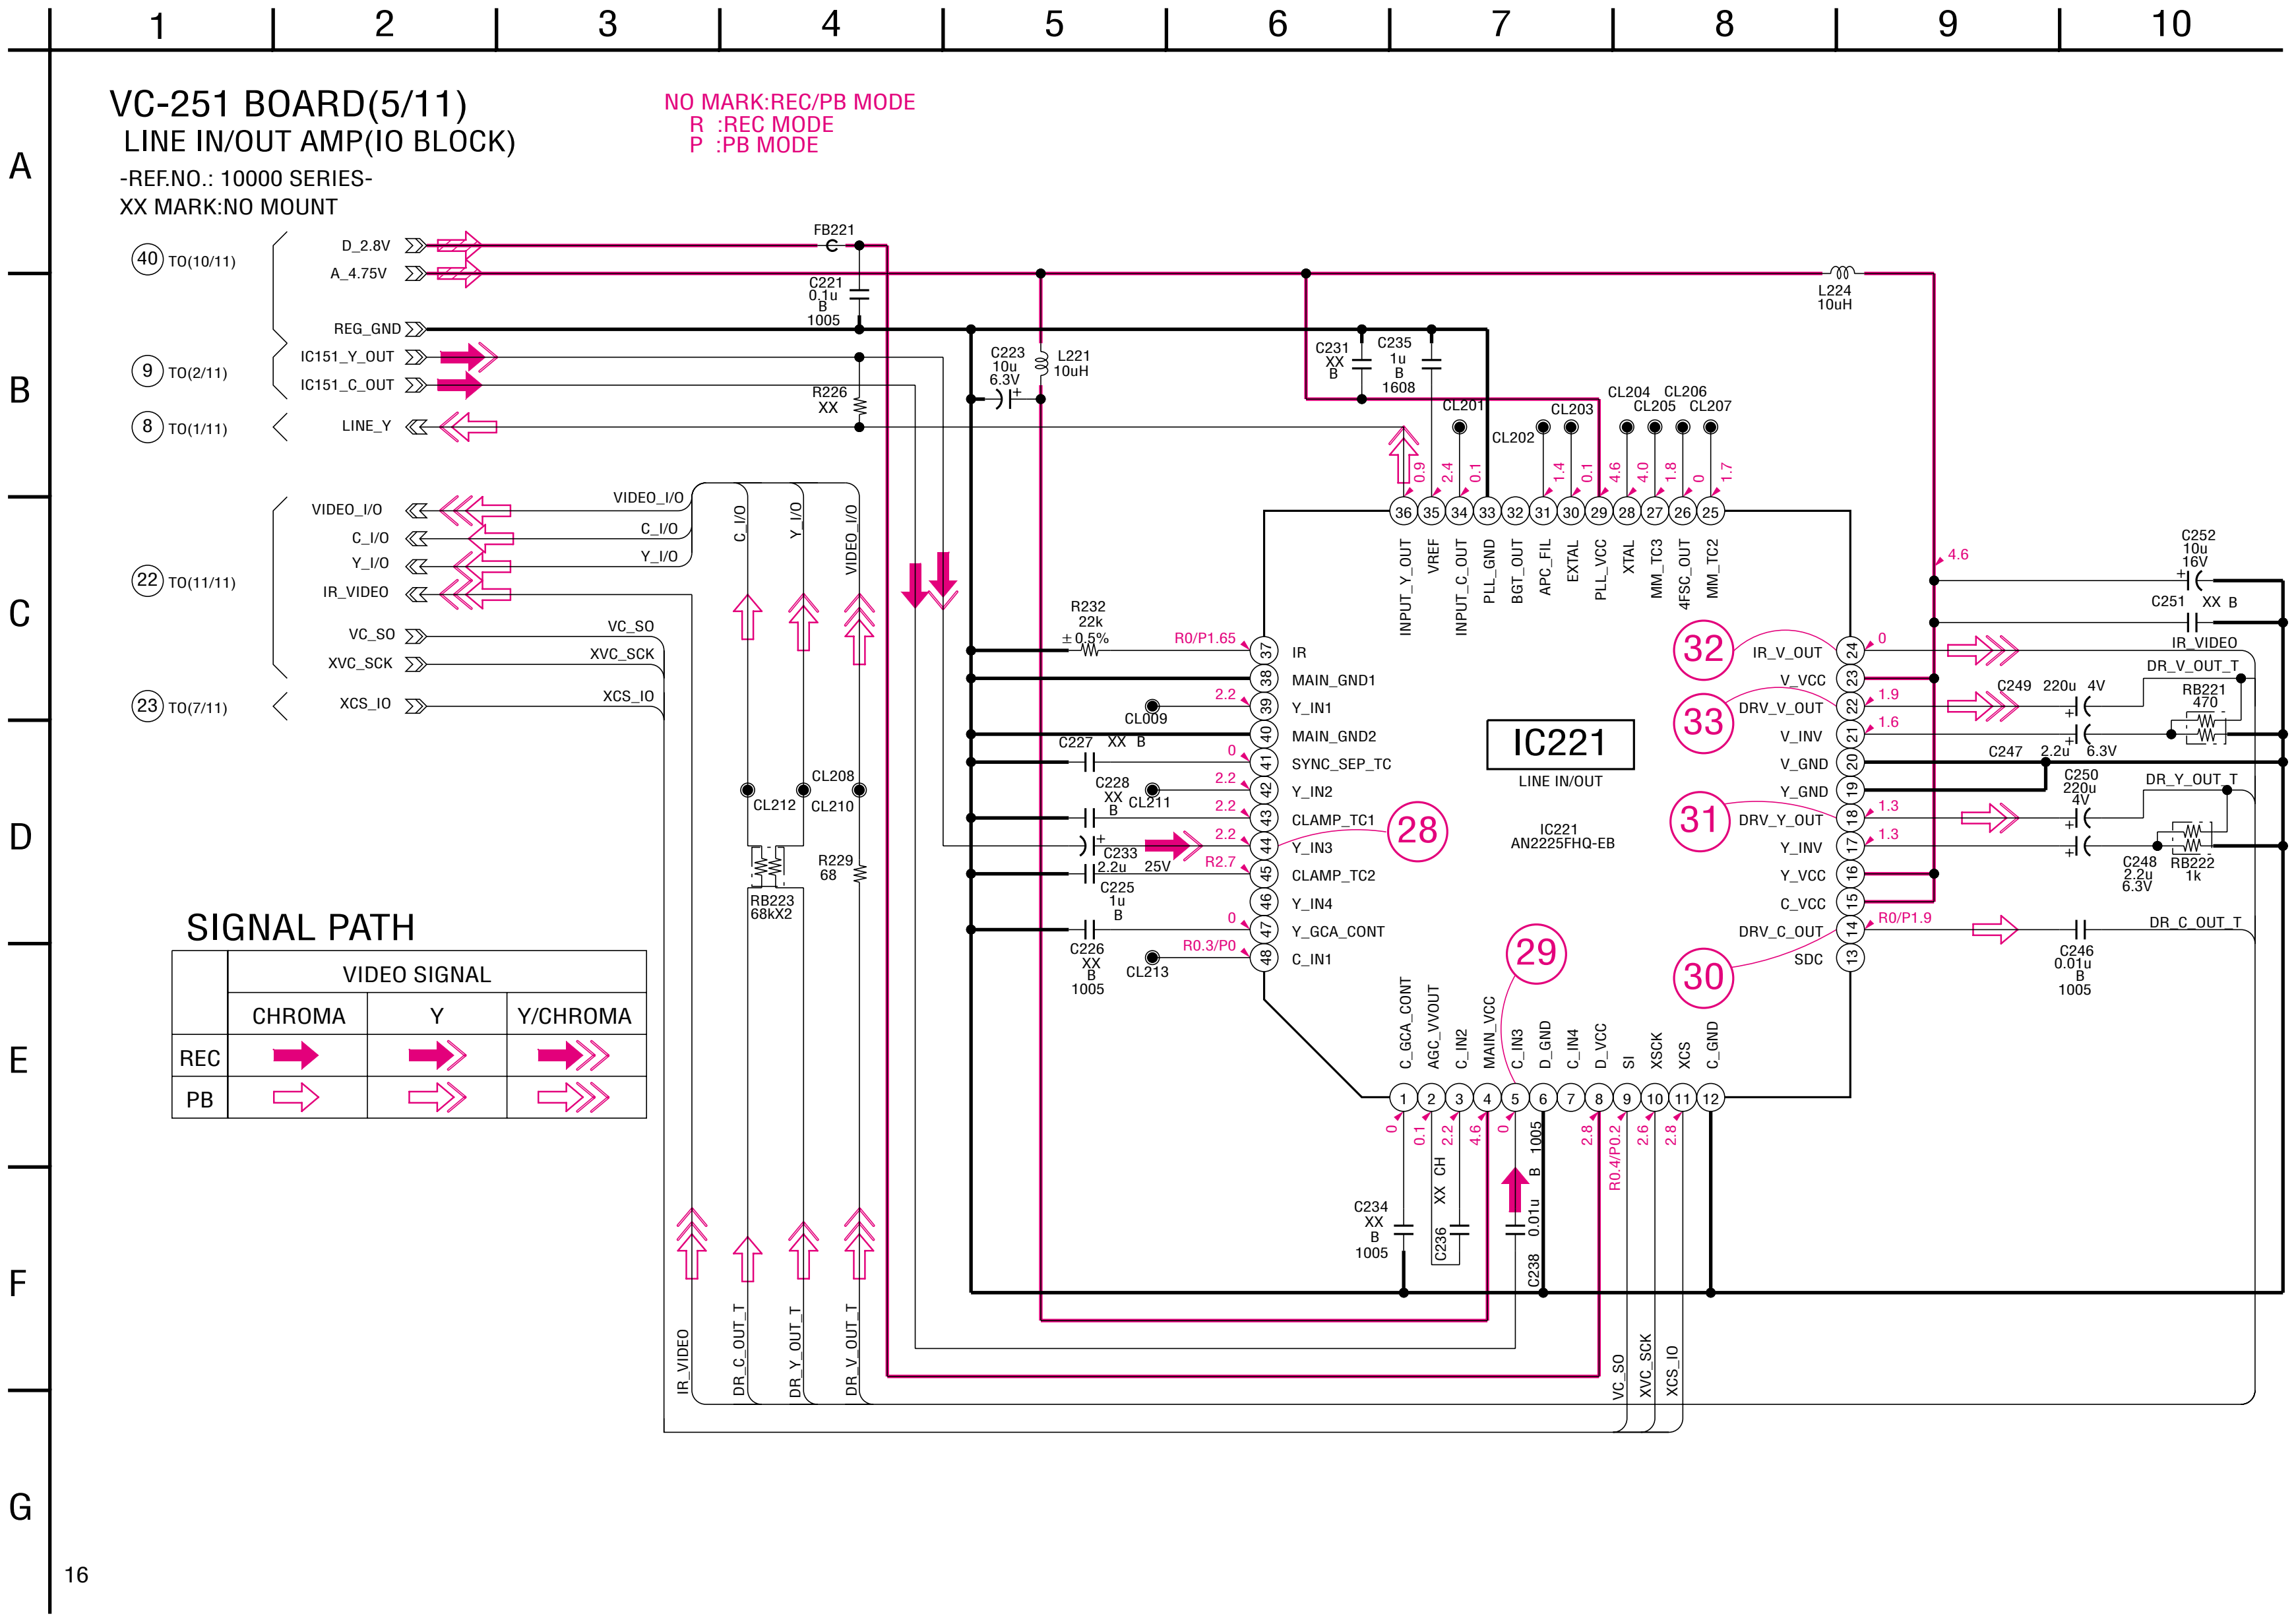
1
2
3
4
5
6
7
8
9
10
A
B
C
D
E
F
G
VC-251 BOARD(5/11)
LINE IN/OUT AMP(IO BLOCK)
-REF.NO.: 10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
40 TO(10/11)
D_2.8V
A_4.75V
REG_GND
9 TO(2/11)
IC151_Y_OUT
IC151_C_OUT
8 TO(1/11)
LINE_Y
VIDEO_I/O
C_I/O
Y_I/O
22 TO(11/11)
IR_VIDEO
VC_SO
XVC_SCK
23 TO(7/11)
XCS_IO
FB221
C221 0.1u B 1005
R226 XX
C223 10u 6.3V
L221 10uH
C231 XX B
C235 1u B 1608
L224 10uH
CL201
CL202
CL203
CL204
CL205
CL206
CL207
C_I/O
Y_I/O
VIDEO_I/O
R232 22k ±0.5%
CL009
C227 XX B
C228 XX B
CL211
C233 2.2u 25V
C225 1u B
C226 XX B 1005
CL213
CL208
CL210
CL212
R229 68
RB223 68kX2
IC221
LINE IN/OUT
IC221 AN2225FHQ-EB
INPUT_Y_OUT
VREF
INPUT_C_OUT
PLL_GND
BGT_OUT
APC_FIL
EXTAL
PLL_VCC
XTAL
MM_TC3
4FSC_OUT
MM_TC2
IR
MAIN_GND1
Y_IN1
MAIN_GND2
SYNC_SEP_TC
Y_IN2
CLAMP_TC1
Y_IN3
CLAMP_TC2
Y_IN4
Y_GCA_CONT
C_IN1
C_GCA_CONT
AGC_V.VOUT
C_IN2
MAIN_VCC
C_IN3
D_GND
C_IN4
D_VCC
SI
XSCK
XCS
C_GND
IR_V_OUT
V_VCC
DRV_V_OUT
V_INV
V_GND
Y_GND
DRV_Y_OUT
Y_INV
Y_VCC
C_VCC
DRV_C_OUT
SDC
28
29
30
31
32
33
R0/P1.65
R0.3/P0
R2.7
R0/P1.9
R0.4/P0.2
4.6
C252 10u 16V
C251 XX B
IR_VIDEO
DR_V_OUT_T
C249 220u 4V
RB221 470
C247 2.2u 6.3V
C250 220u 4V
DR_Y_OUT_T
C248 2.2u 6.3V
RB222 1k
C246 0.01u B 1005
DR_C_OUT_T
C234 XX B 1005
C236 XX CH
C238 0.01u B 1005
IR_VIDEO
DR_C_OUT_T
DR_Y_OUT_T
DR_V_OUT_T
VC_SO
XVC_SCK
XCS_IO
16

SIGNAL PATH

| | VIDEO SIGNAL | | |
|---|---|---|---|
| | CHROMA | Y | Y/CHROMA |
| REC | ➡ | ➡➡ | ➡➡➡ |
| PB | ⇨ | ⇨⇨ | ⇨⇨⇨ |

**LINE IN/OUT AMP**
**VC-251 (5/11)**

< Page 4-53, 4-54 >

**For Schematic Diagram**

- Refer to page 7 for printed wiring board.

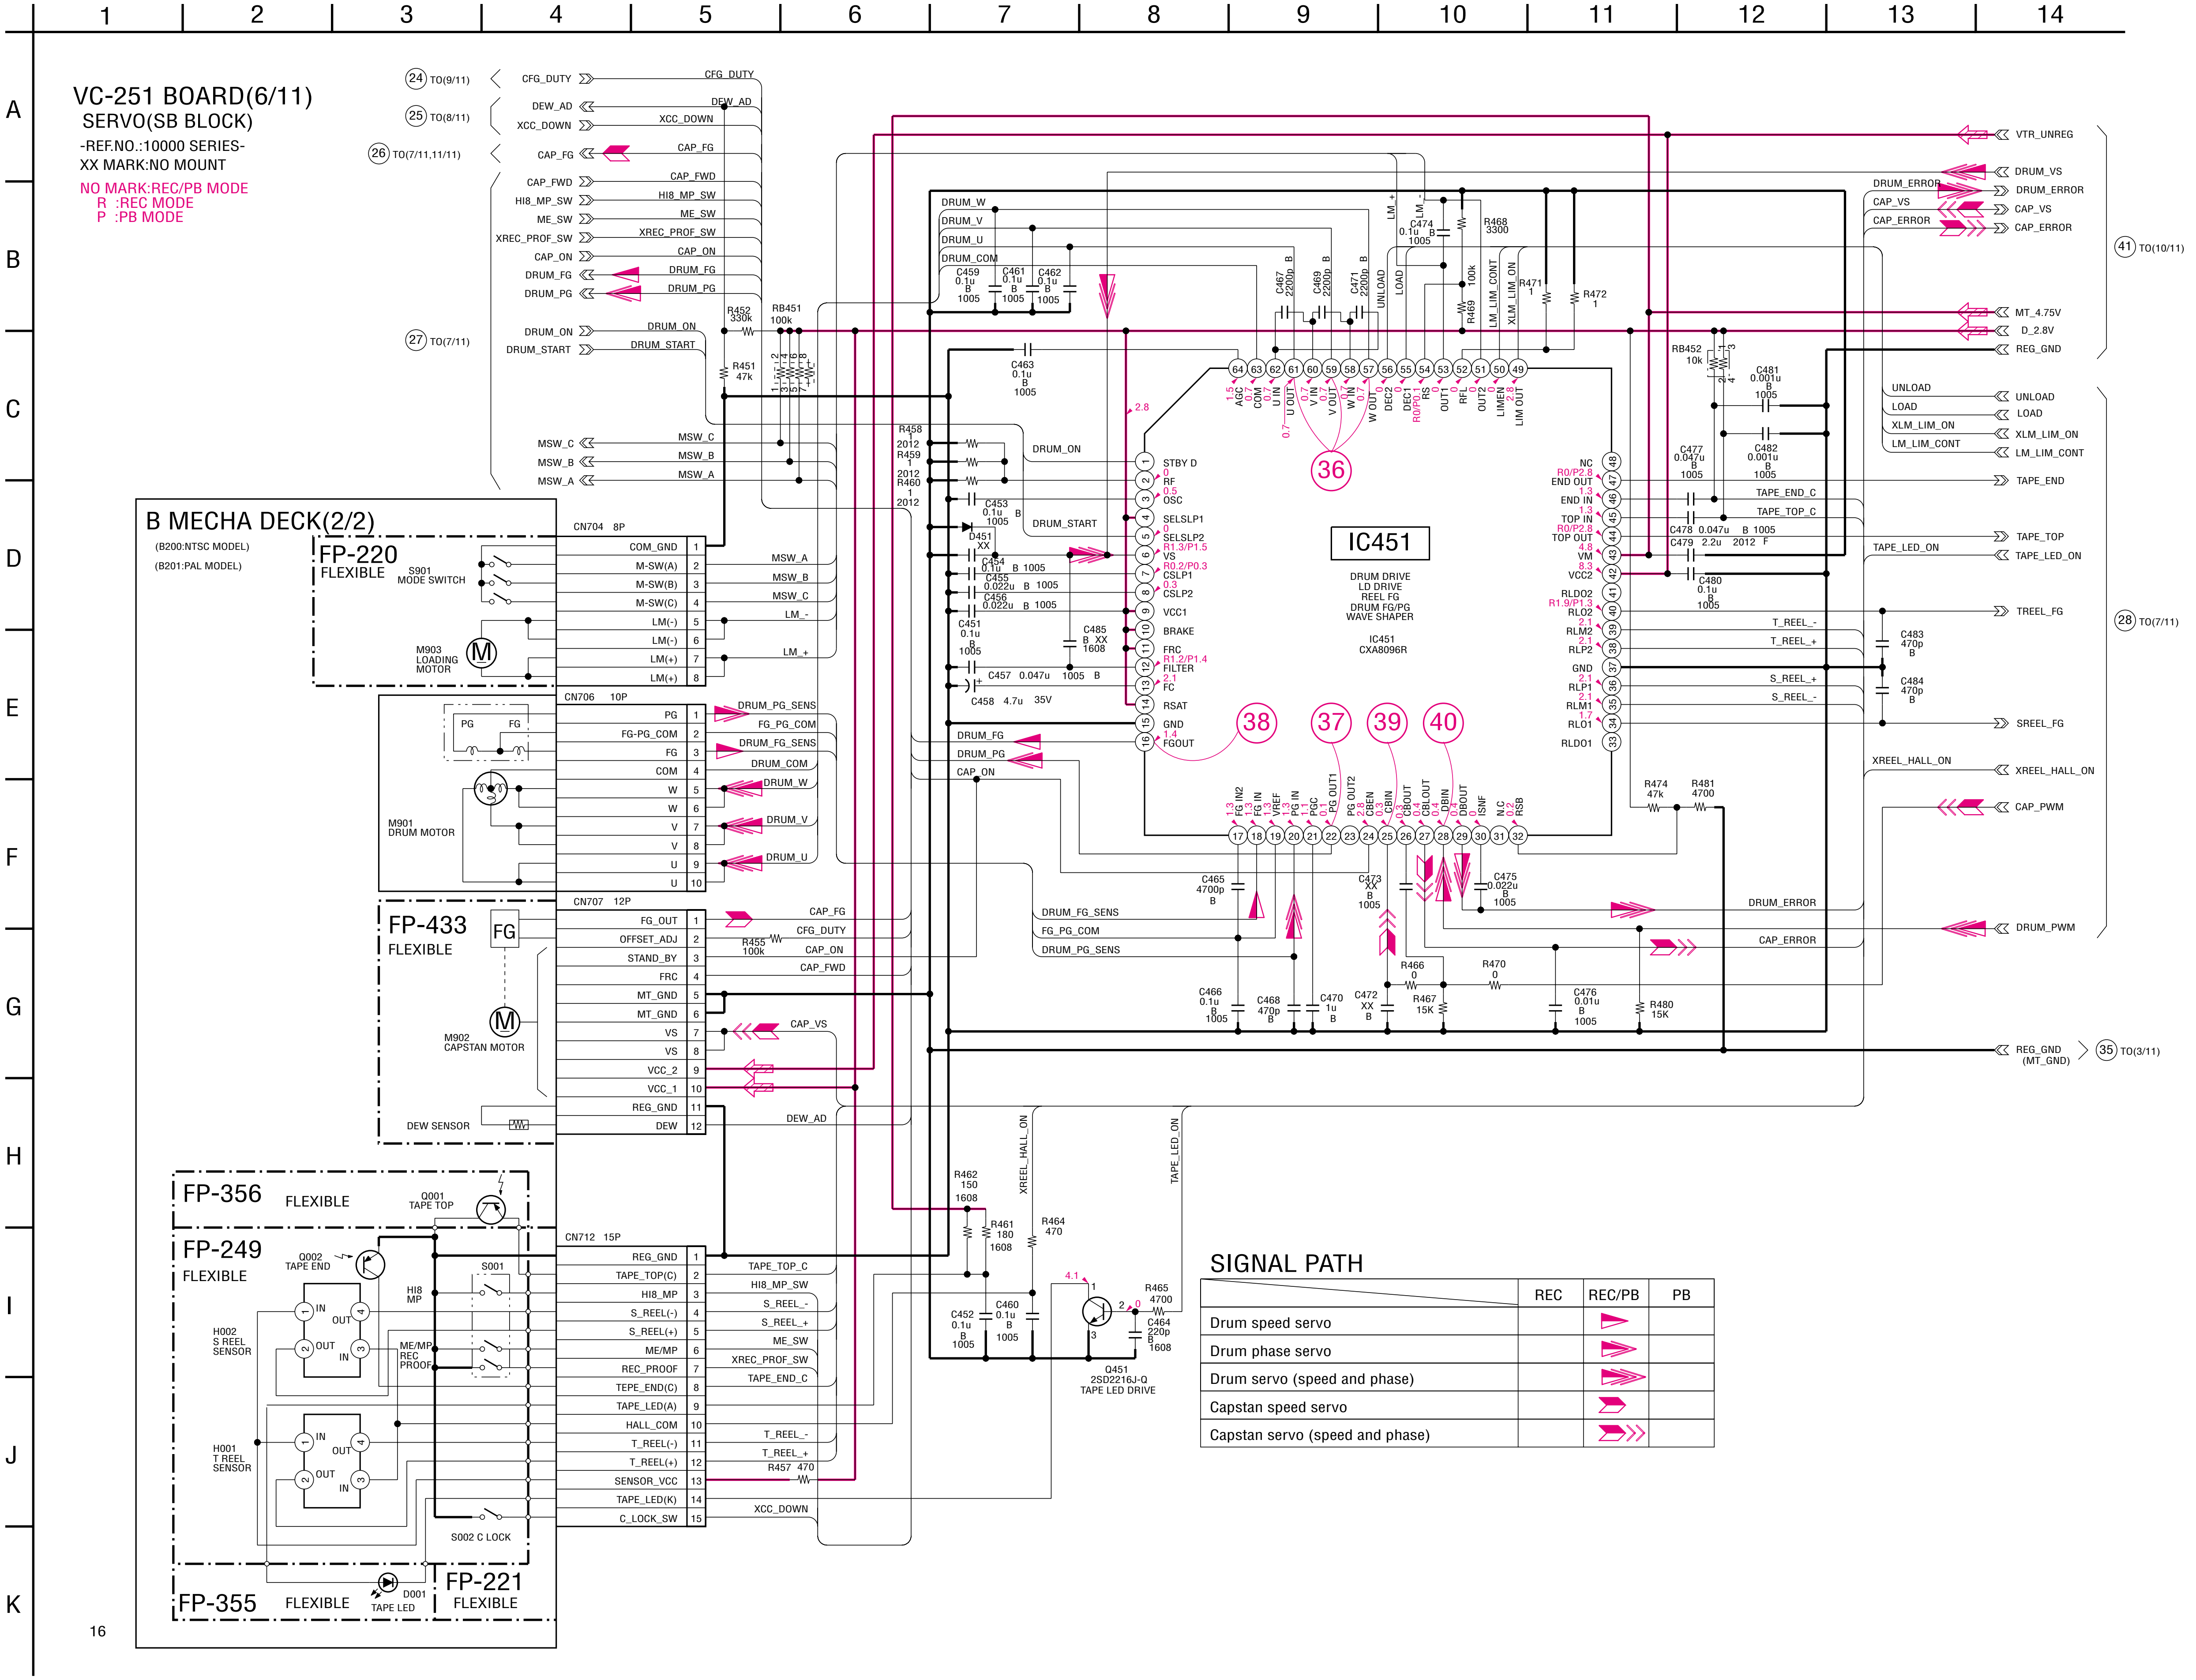
VC-251 BOARD(6/11)
SERVO(SB BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
B MECHA DECK(2/2)
(B200:NTSC MODEL)
(B201:PAL MODEL)
FP-220 FLEXIBLE
S901 MODE SWITCH
M903 LOADING MOTOR
CN704 8P
CN706 10P
M901 DRUM MOTOR
FP-433 FLEXIBLE
CN707 12P
M902 CAPSTAN MOTOR
DEW SENSOR
FP-356 FLEXIBLE
Q001 TAPE TOP
FP-249 FLEXIBLE
Q002 TAPE END
H002 S REEL SENSOR
H001 T REEL SENSOR
S001
S002 C LOCK
CN712 15P
FP-355 FLEXIBLE
D001 TAPE LED
FP-221 FLEXIBLE
IC451
DRUM DRIVE
LD DRIVE
REEL FG
DRUM FG/PG
WAVE SHAPER
IC451 CXA8096R
Q451 2SD2216J-Q TAPE LED DRIVE
TO(9/11)
TO(8/11)
TO(7/11,11/11)
TO(7/11)
TO(10/11)
TO(7/11)
TO(3/11)
VTR_UNREG
DRUM_VS
DRUM_ERROR
CAP_VS
CAP_ERROR
MT_4.75V
D_2.8V
REG_GND
UNLOAD
LOAD
XLM_LIM_ON
LM_LIM_CONT
TAPE_END
TAPE_TOP
TAPE_LED_ON
TREEL_FG
SREEL_FG
XREEL_HALL_ON
CAP_PWM
DRUM_PWM
REG_GND (MT_GND)
CFG_DUTY
DEW_AD
XCC_DOWN
CAP_FG
CAP_FWD
HI8_MP_SW
ME_SW
XREC_PROF_SW
CAP_ON
DRUM_FG
DRUM_PG
DRUM_ON
DRUM_START
MSW_C
MSW_B
MSW_A
24
25
26
27
28
35
36
37
38
39
40
41
16

## SIGNAL PATH

|  | REC | REC/PB | PB |
|---|---|---|---|
| Drum speed servo |  | ▷ |  |
| Drum phase servo |  | ▷ |  |
| Drum servo (speed and phase) |  | ⇛ |  |
| Capstan speed servo |  | ➤ |  |
| Capstan servo (speed and phase) |  | ➤» |  |

**< Page 4-55, 4-56 >**

**For Schematic Diagram**

- Refer to page 7 for printed wiring board.

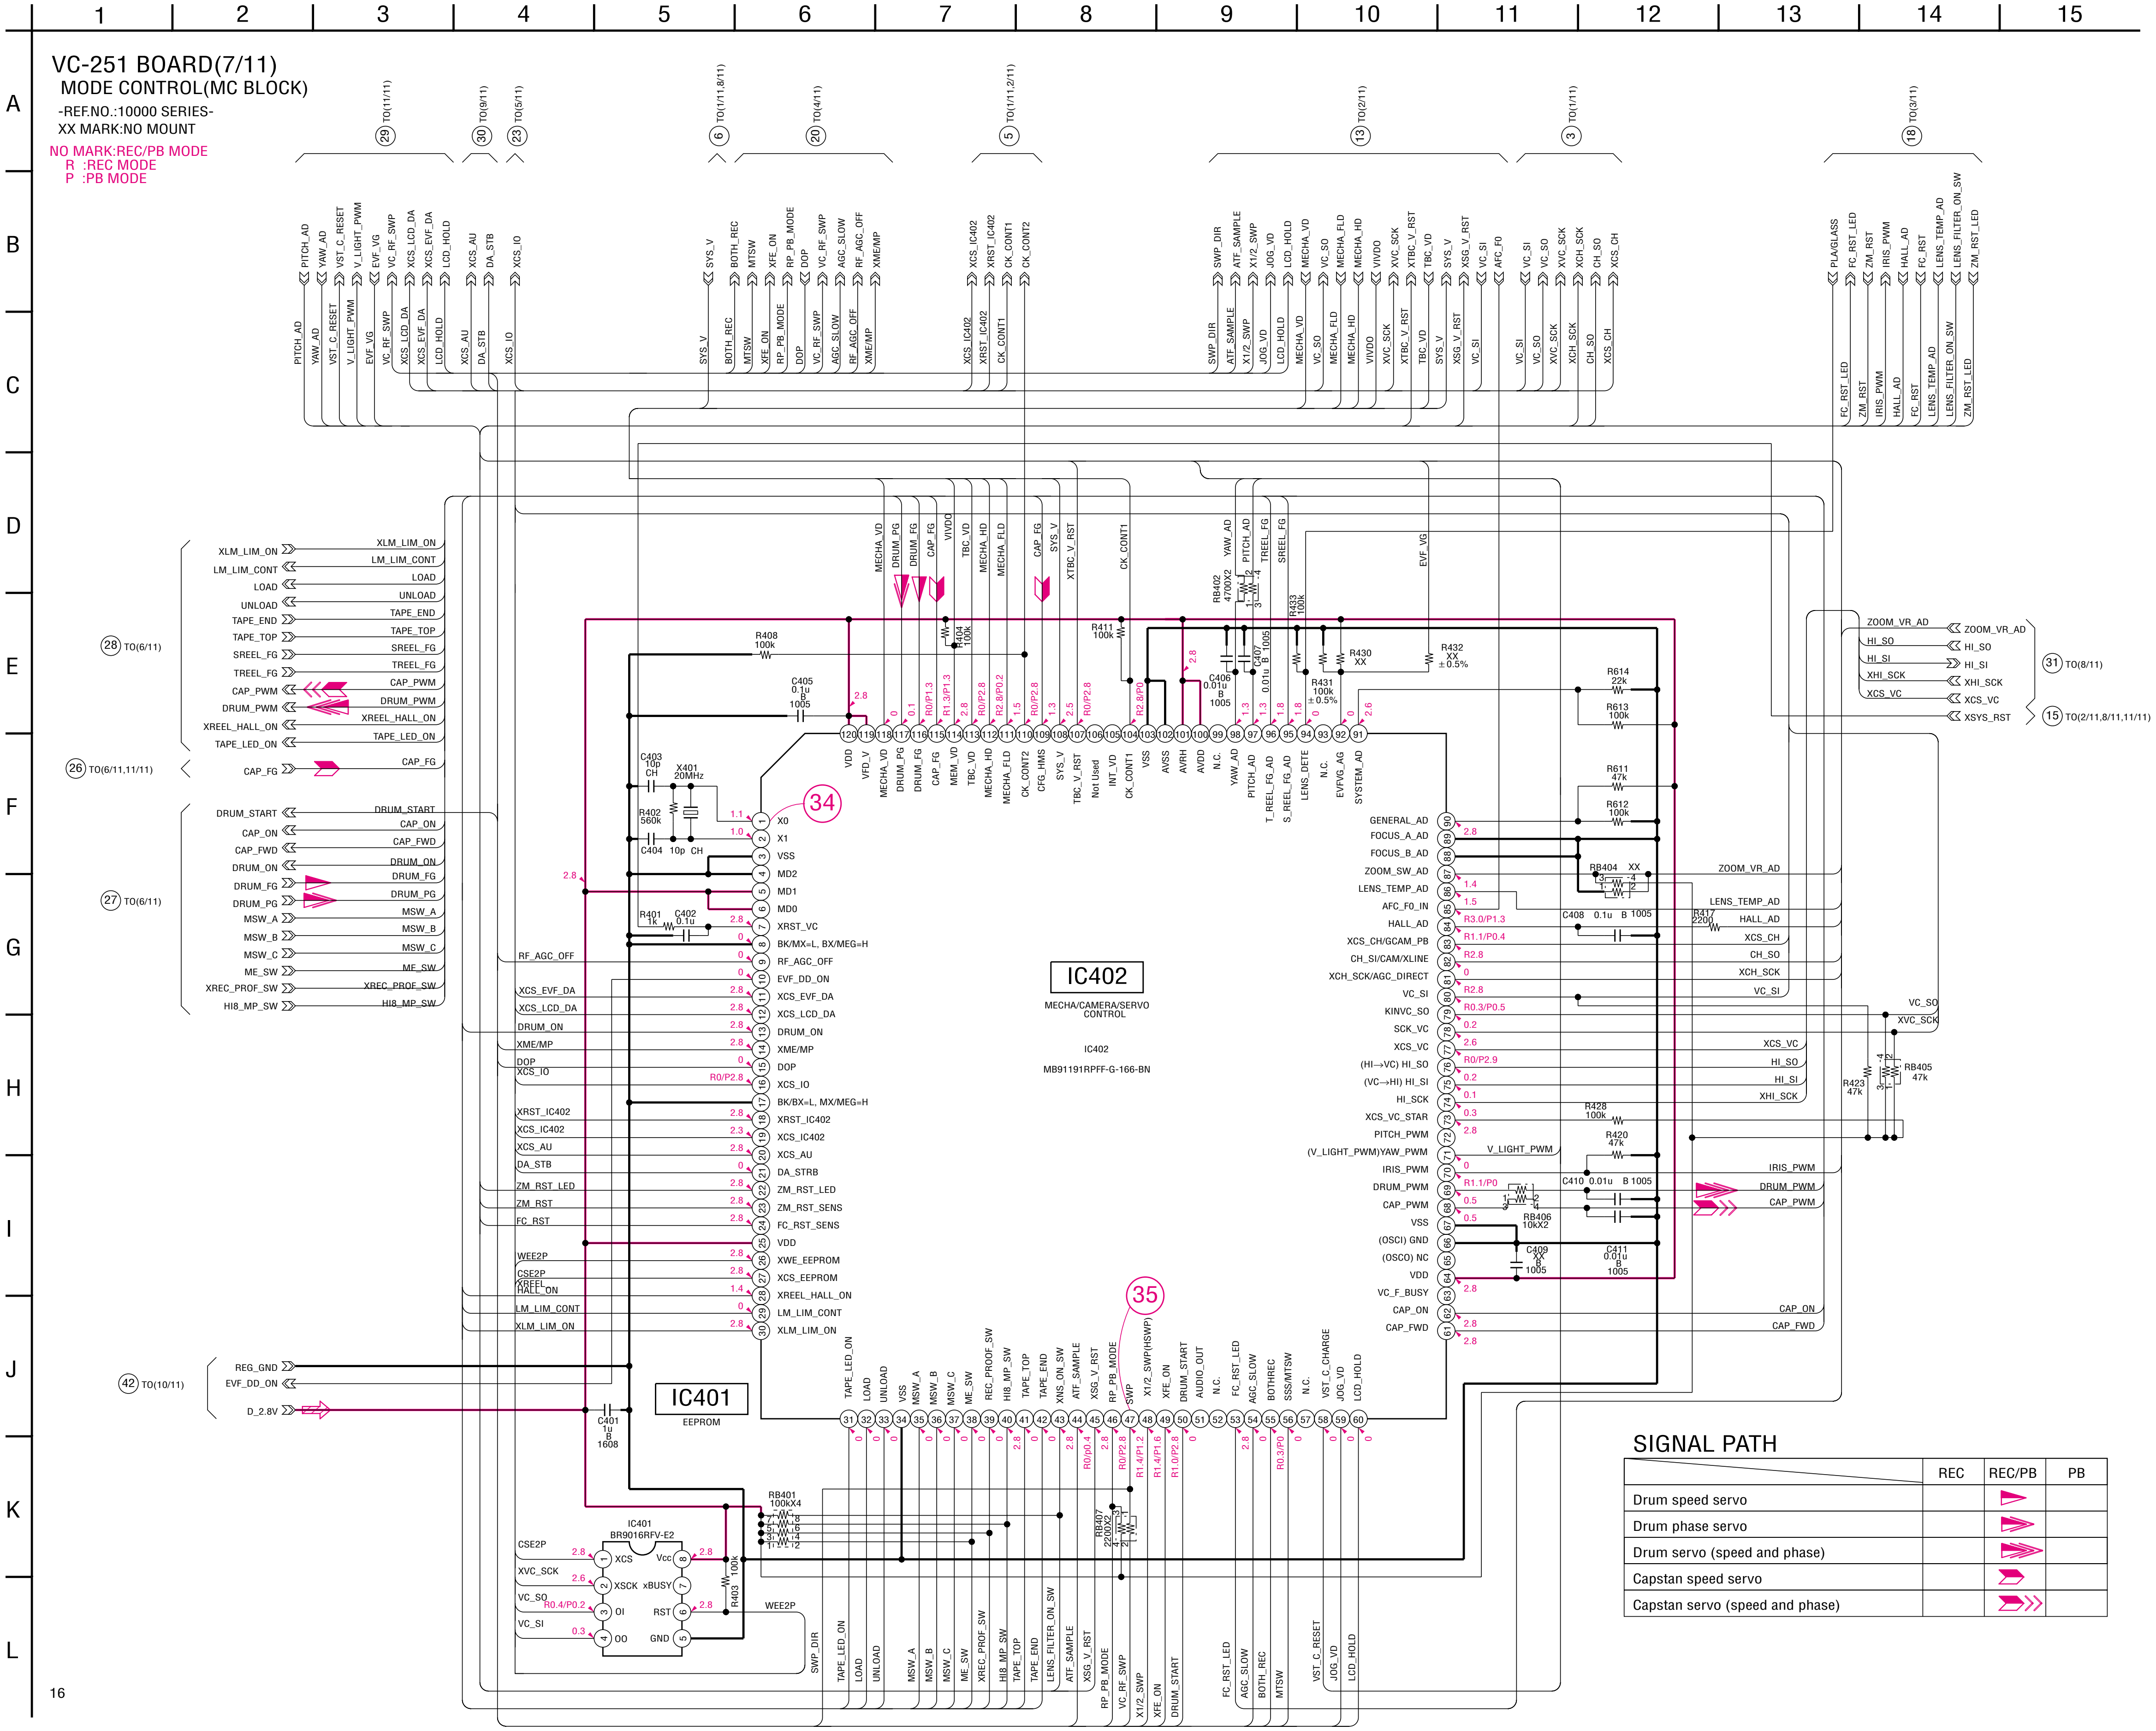
VC-251 BOARD(7/11)
MODE CONTROL(MC BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
IC402
MECHA/CAMERA/SERVO CONTROL
IC402
MB91191RPFF-G-166-BN
IC401
EEPROM
IC401
BR9016RFV-E2
X401
20MHz
34
35
TO(11/11)
TO(9/11)
TO(5/11)
TO(1/11,8/11)
TO(4/11)
TO(1/11,2/11)
TO(2/11)
TO(1/11)
TO(3/11)
TO(6/11)
TO(6/11,11/11)
TO(10/11)
TO(8/11)
TO(2/11,8/11,11/11)
XLM_LIM_ON
LM_LIM_CONT
LOAD
UNLOAD
TAPE_END
TAPE_TOP
SREEL_FG
TREEL_FG
CAP_PWM
DRUM_PWM
XREEL_HALL_ON
TAPE_LED_ON
CAP_FG
DRUM_START
CAP_ON
CAP_FWD
DRUM_ON
DRUM_FG
DRUM_PG
MSW_A
MSW_B
MSW_C
ME_SW
XREC_PROF_SW
HI8_MP_SW
REG_GND
EVF_DD_ON
D_2.8V
PITCH_AD
YAW_AD
VST_C_RESET
V_LIGHT_PWM
EVF_VG
VC_RF_SWP
XCS_LCD_DA
XCS_EVF_DA
LCD_HOLD
XCS_AU
DA_STB
XCS_IO
SYS_V
BOTH_REC
MTSW
XFE_ON
RP_PB_MODE
DOP
AGC_SLOW
RF_AGC_OFF
XME/MP
XCS_IC402
XRST_IC402
CK_CONT1
CK_CONT2
SWP_DIR
ATF_SAMPLE
X1/2_SWP
JOG_VD
MECHA_VD
VC_SO
MECHA_FLD
MECHA_HD
VIVDD
XVC_SCK
XTBC_V_RST
TBC_VD
XSG_V_RST
VC_SI
AFC_F0
XCH_SCK
CH_SO
XCS_CH
PLAY/GLASS
FC_RST_LED
ZM_RST
IRIS_PWM
HALL_AD
FC_RST
LENS_TEMP_AD
LENS_FILTER_ON_SW
ZM_RST_LED
ZOOM_VR_AD
HI_SO
HI_SI
XHI_SCK
XCS_VC
XSYS_RST
R408 100k
C405 0.1u B 1005
R411 100k
R404 100k
C406 0.01u B 1005
C407 0.01u B 1005
R431 100k ±0.5%
R430 XX
R432 XX ±0.5%
RB402 4700X2
R433 100k
C403 10p CH
R402 560k
C404 10p CH
R401 1k
C402 0.1u
R614 22k
R613 100k
R611 47k
R612 100k
RB404 XX
C408 0.1u B 1005
R417 220k
R423 47k
RB405 47k
R428 100k
R420 47k
C410 0.01u B 1005
RB406 10kX2
C409 XX B 1005
C411 0.01u B 1005
C401 1u B 1608
RB401 100kX4
R403 100k
RB407 2200X2
VDD
VFD_V
MEM_VD
CFG_HMS
Not Used
INT_VD
AVSS
AVRH
AVDD
N.C.
T_REEL_FG_AD
S_REEL_FG_AD
LENS_DETE
EVFVG_AG
SYSTEM_AD
X0
X1
VSS
MD2
MD1
MD0
XRST_VC
BK/MX=L, BX/MEG=H
XCS_IO
BK/BX=L, MX/MEG=H
XCS_AU
DA_STRB
ZM_RST_LED
ZM_RST_SENS
FC_RST_SENS
XWE_EEPROM
XCS_EEPROM
XREEL_HALL_ON
GENERAL_AD
FOCUS_A_AD
FOCUS_B_AD
ZOOM_SW_AD
LENS_TEMP_AD
AFC_F0_IN
XCS_CH/GCAM_PB
CH_SI/CAM/XLINE
XCH_SCK/AGC_DIRECT
KINVC_SO
SCK_VC
XCS_VC
(HI→VC) HI_SO
(VC→HI) HI_SI
HI_SCK
XCS_VC_STAR
PITCH_PWM
(V_LIGHT_PWM)YAW_PWM
(OSCI) GND
(OSCO) NC
VC_F_BUSY
AUDIO_OUT
VST_C_CHARGE
SSS/MTSW
BOTHREC
X1/2_SWP(HSWP)
XNS_ON_SW
XCS
XSCK
OI
OO
Vcc
xBUSY
RST
GND
CSE2P
XVC_SCK
VC_SO
VC_SI
WEE2P
16

## SIGNAL PATH

| | REC | REC/PB | PB |
|---|---|---|---|
| Drum speed servo | | ➤ | |
| Drum phase servo | | ⇨ | |
| Drum servo (speed and phase) | | ⇛ | |
| Capstan speed servo | | ❯ | |
| Capstan servo (speed and phase) | | ❯»» | |

**MODE CONTROL**
VC-251 (7/11)

< Page 4-57, 4-58 >

**For Schematic Diagram**

- Refer to page 7 for printed wiring board.

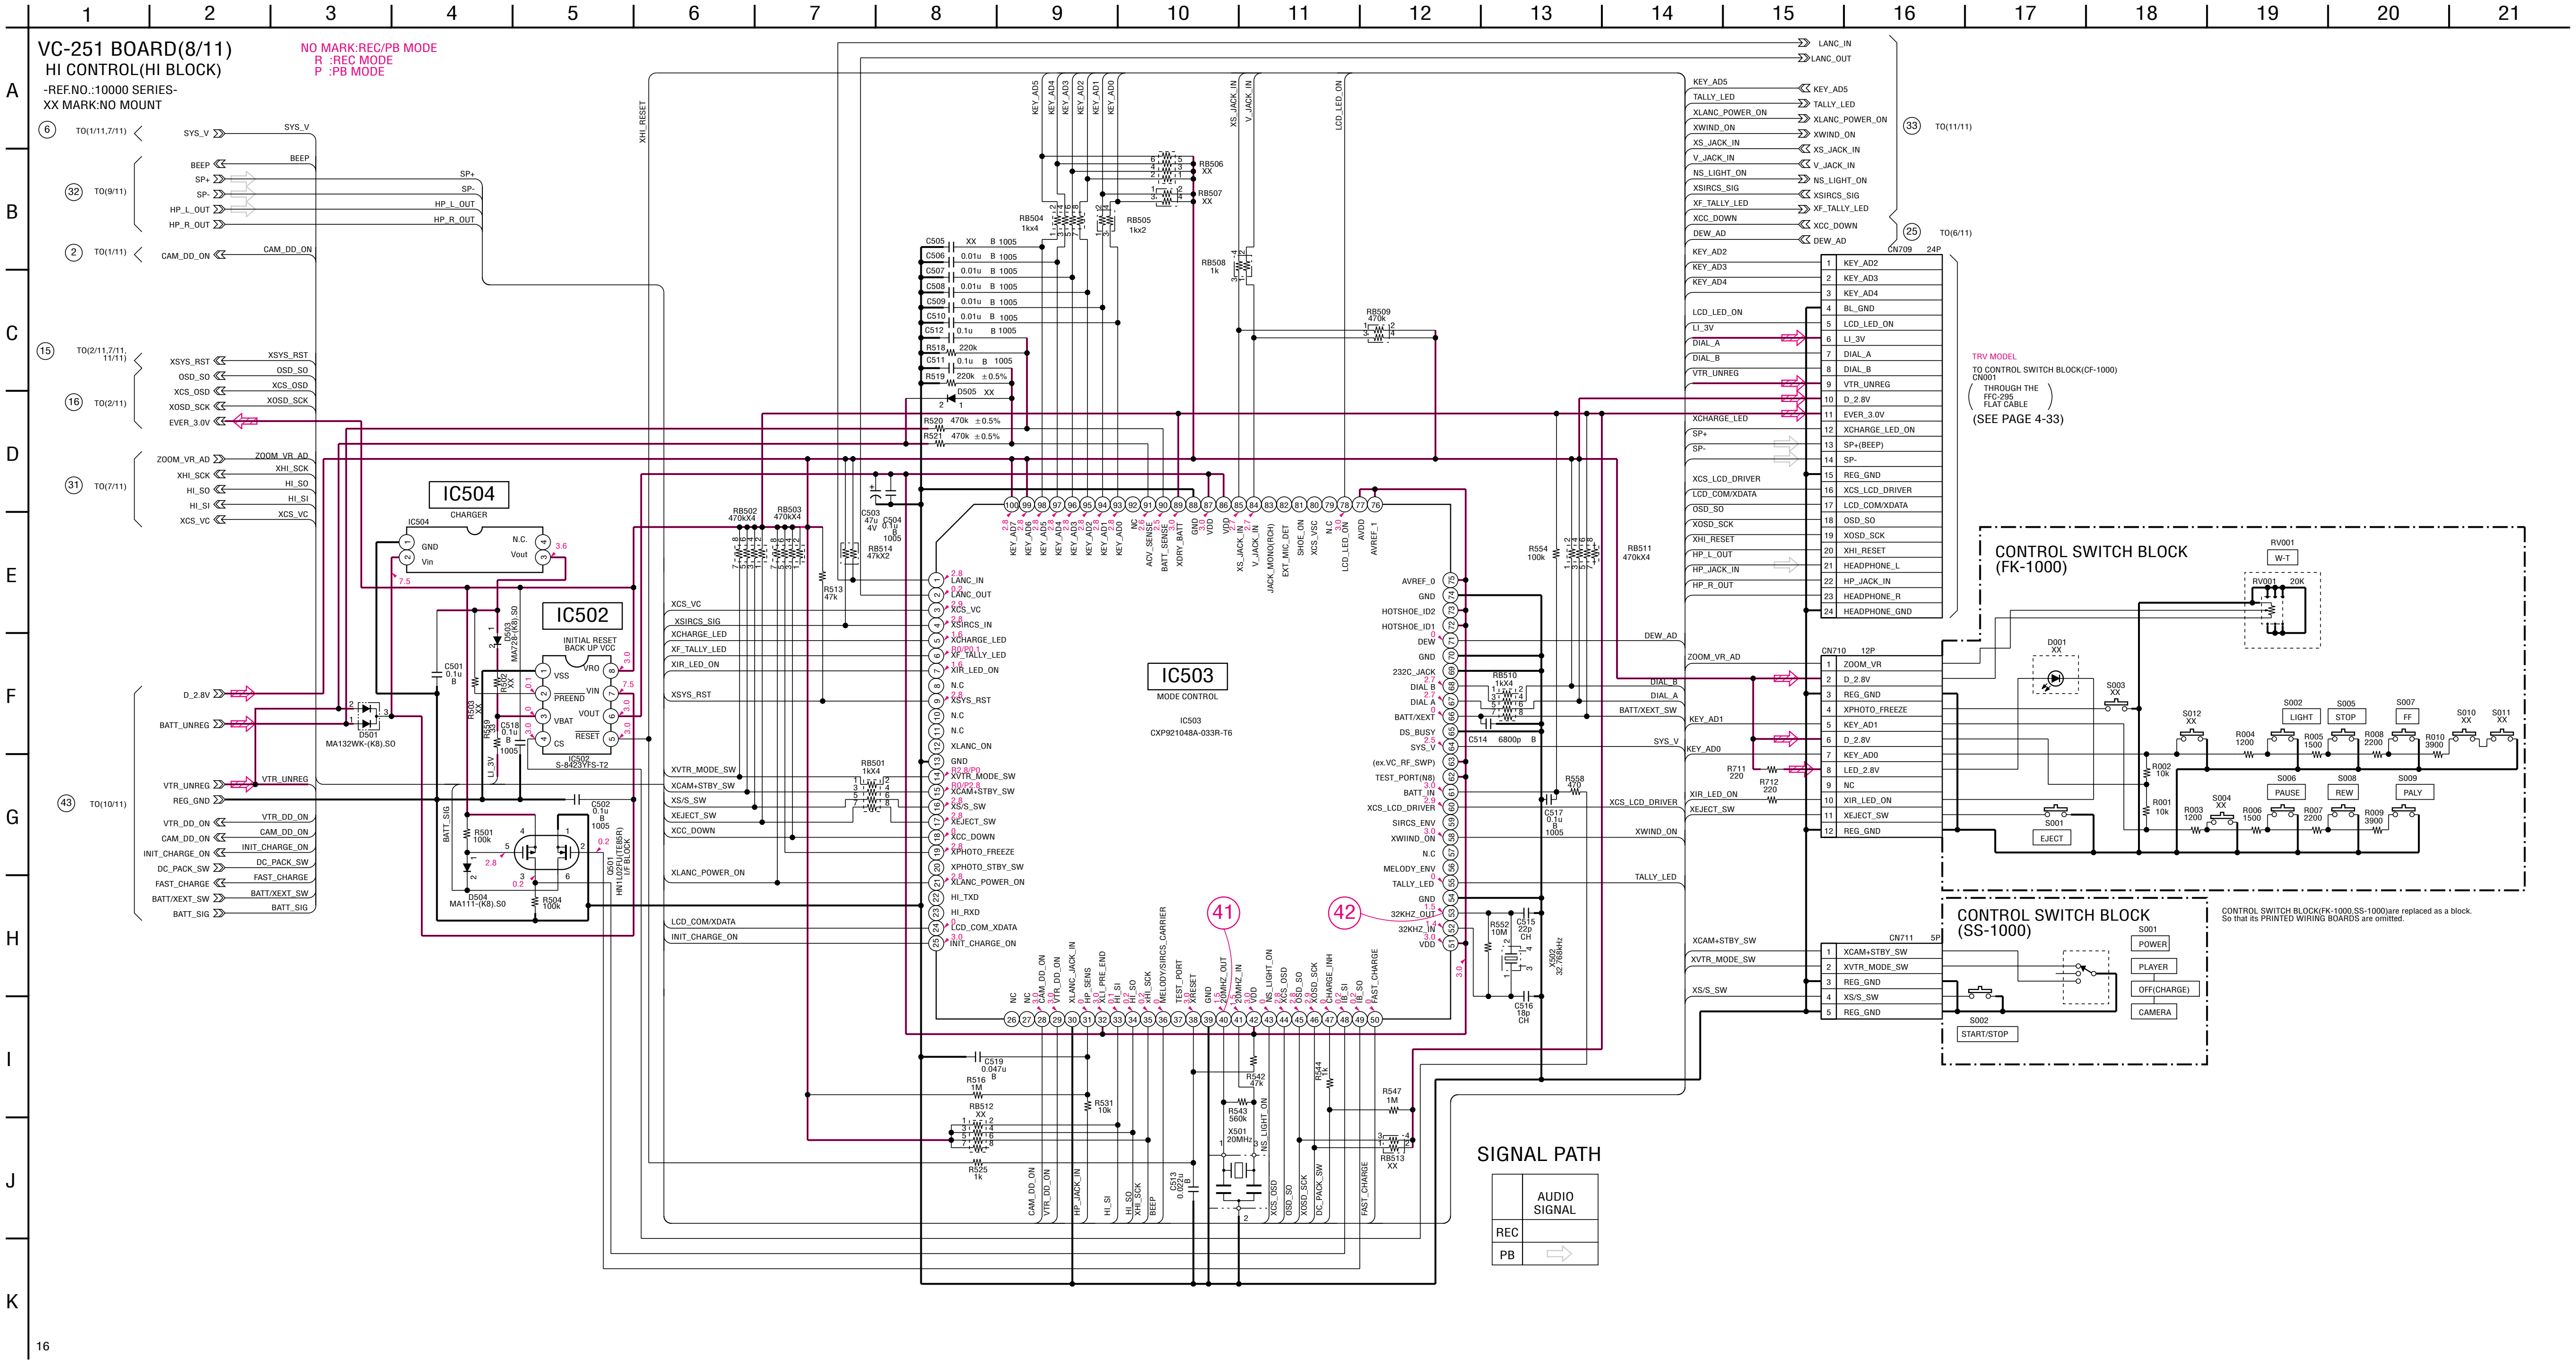
VC-251 BOARD(8/11)
HI CONTROL(HI BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
IC504
CHARGER
IC502
INITIAL RESET
BACK UP VCC
S-8423YFS-T2
IC503
MODE CONTROL
CXP921048A-033R-T6
D501
MA132WK-(K8).SO
D504
MA111-(K8).SO
41
42
CONTROL SWITCH BLOCK
(FK-1000)
CONTROL SWITCH BLOCK
(SS-1000)
CN709 24P
CN710 12P
CN711 5P
TRV MODEL
TO CONTROL SWITCH BLOCK(CF-1000) CN001
THROUGH THE FFC-295 FLAT CABLE
(SEE PAGE 4-33)
CONTROL SWITCH BLOCK(FK-1000,SS-1000)are replaced as a block. So that its PRINTED WIRING BOARDS are omitted.
RV001 W-T
S001 EJECT
S002 LIGHT
S003
S004
S005 STOP
S006 PAUSE
S007 FF
S008 REW
S009 PALY
S001 POWER
PLAYER
OFF(CHARGE)
CAMERA
S002 START/STOP
X501 20MHz
X502 32.768kHz
SIGNAL PATH
AUDIO SIGNAL
REC
PB
TO(1/11,7/11)
TO(9/11)
TO(1/11)
TO(2/11,7/11,11/11)
TO(2/11)
TO(7/11)
TO(10/11)
TO(11/11)
TO(6/11)
16

**HI CONTROL**
**VC-251 (8/11)**

**< Page 4-59, 4-60 >**

**For Schematic Diagram**
- Refer to page 7 for printed wiring board.

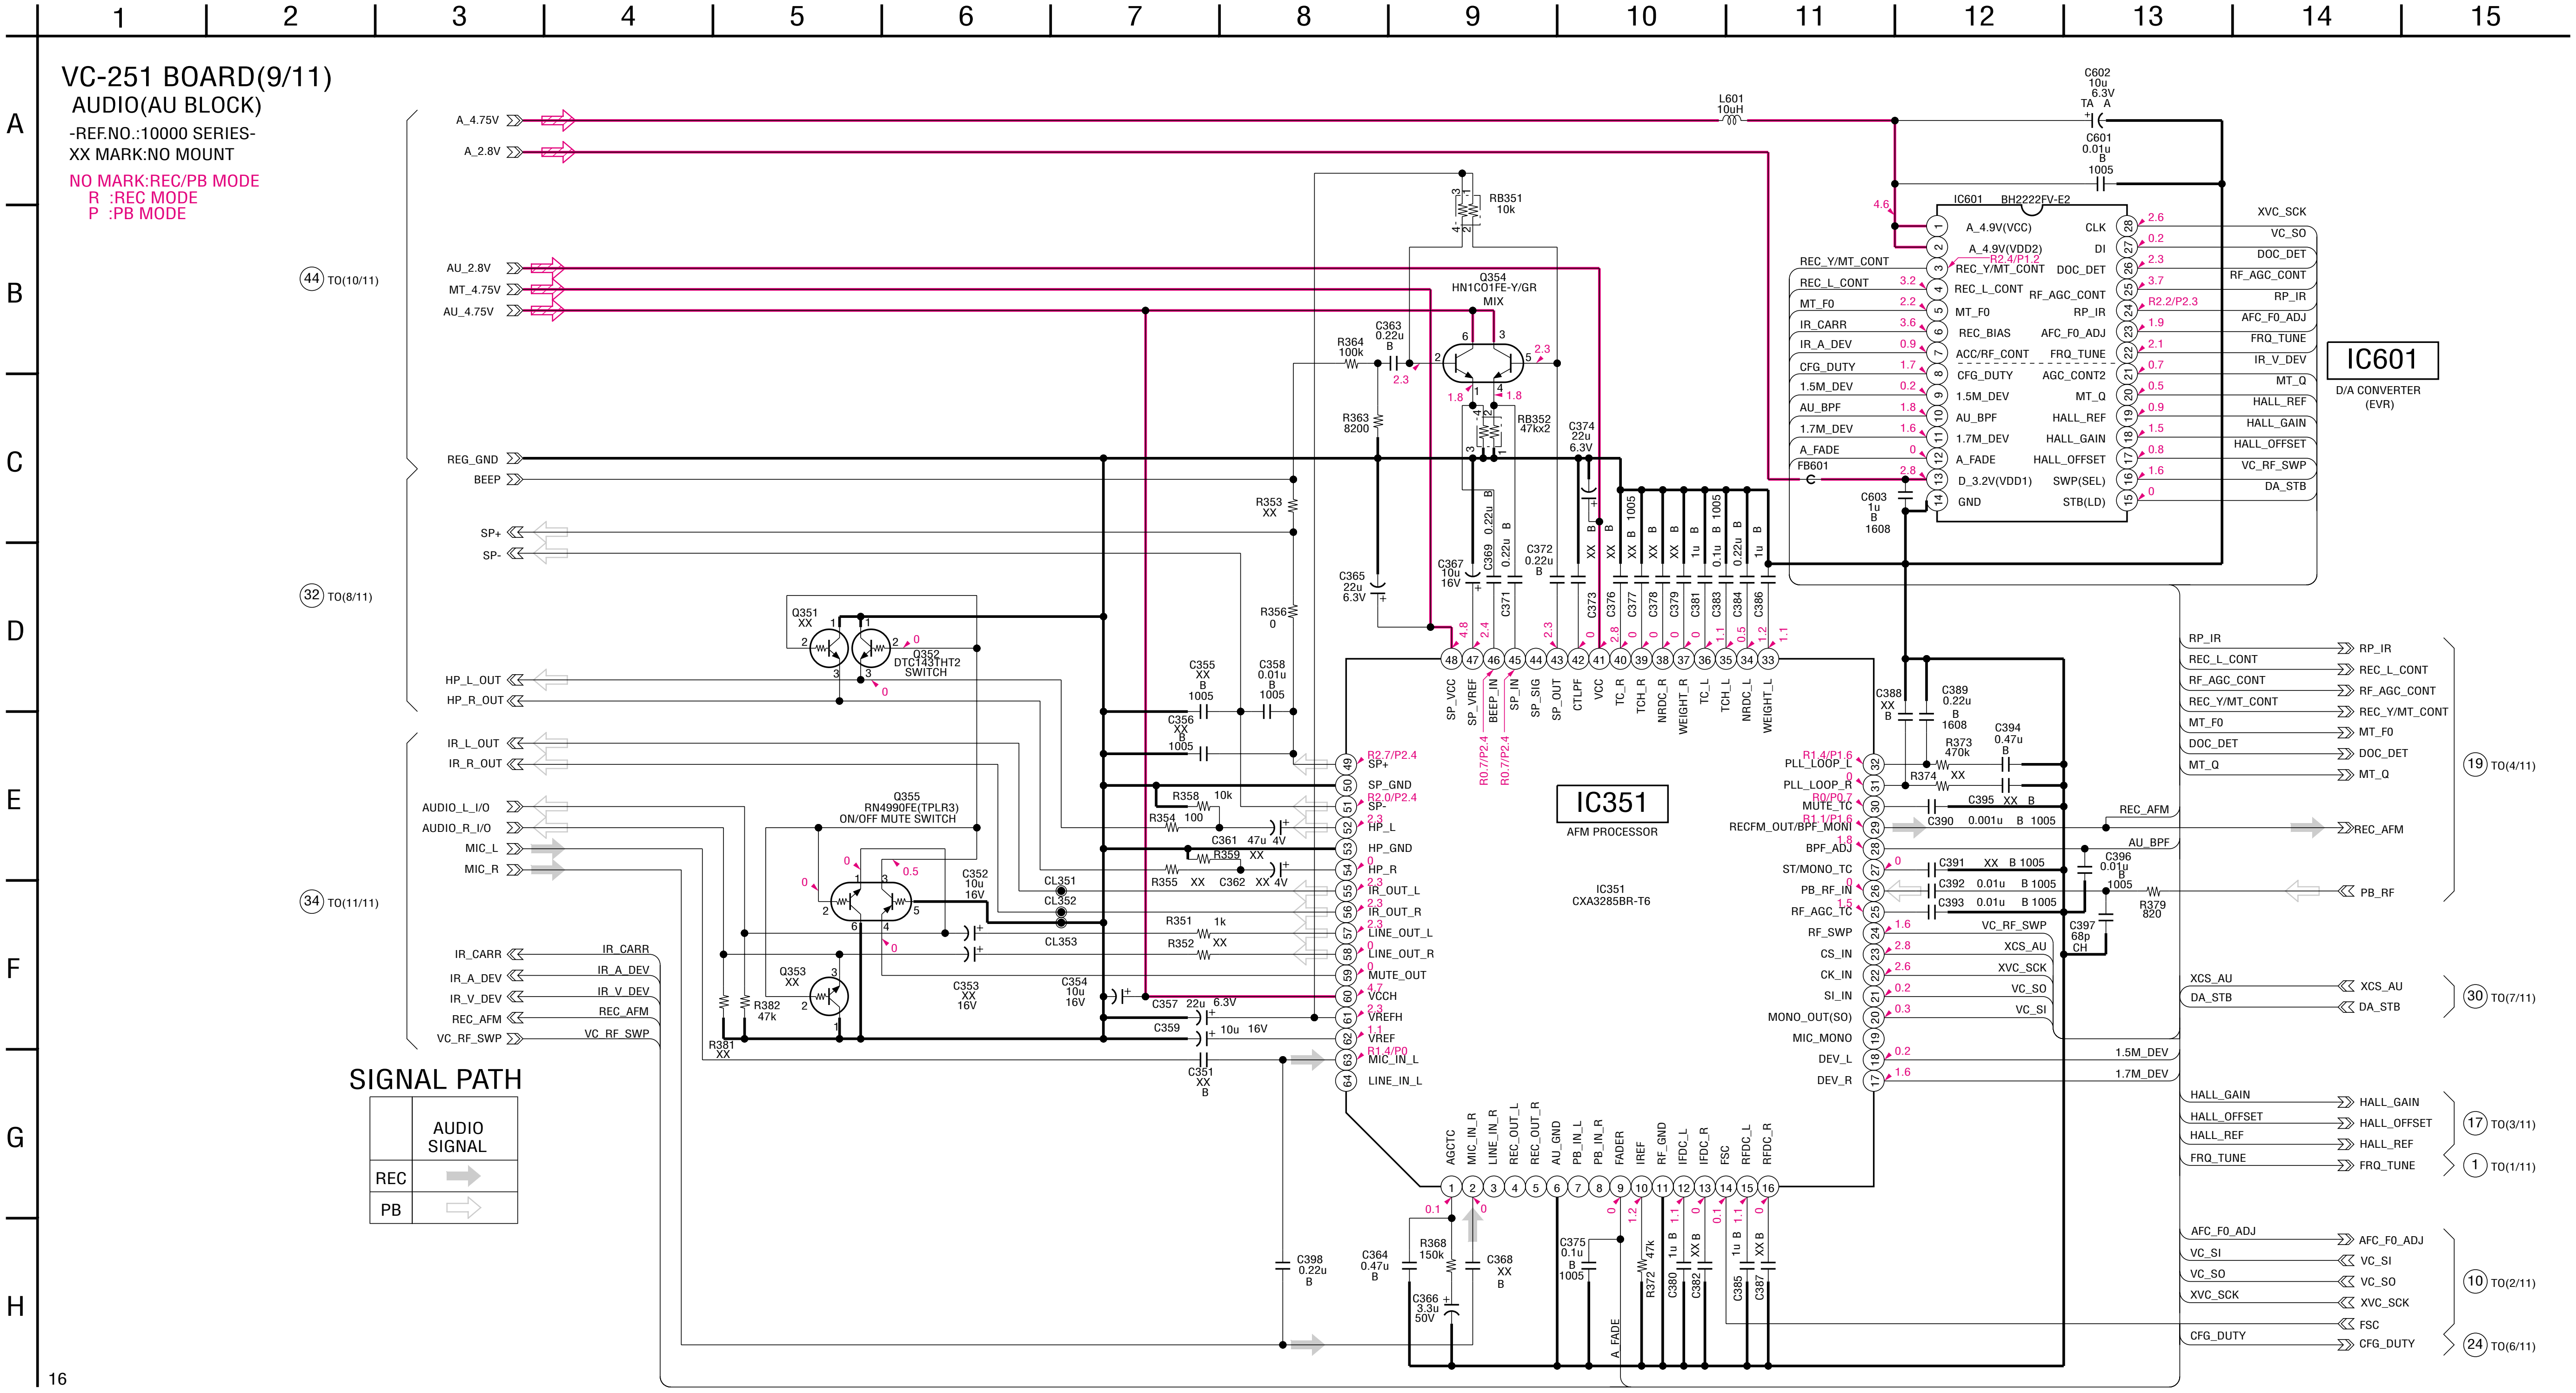
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
A B C D E F G H
VC-251 BOARD(9/11)
AUDIO(AU BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
A_4.75V
A_2.8V
(44) TO(10/11)
AU_2.8V
MT_4.75V
AU_4.75V
REG_GND
BEEP
SP+
SP-
(32) TO(8/11)
HP_L_OUT
HP_R_OUT
IR_L_OUT
IR_R_OUT
AUDIO_L_I/O
AUDIO_R_I/O
MIC_L
MIC_R
(34) TO(11/11)
IR_CARR
IR_A_DEV
IR_V_DEV
REC_AFM
VC_RF_SWP
L601 10uH
C602 10u 6.3V TA
C601 0.01u B 1005
RB351 10k
Q354 HN1C01FE-Y/GR MIX
R364 100k
C363 0.22u B
R363 8200
RB352 47kx2
C374 22u 6.3V
R353 XX
R356 0
C365 22u 6.3V
C367 10u 16V
C369 0.22u B
C371 0.22u B
C372 0.22u B
C373 C376 C377 C378 C379 C381 C383 C384 C386
Q351 XX
Q352 DTC143THT2 SWITCH
C355 XX B 1005
C358 0.01u B 1005
C356 XX B 1005
Q355 RN4990FE(TPLR3) ON/OFF MUTE SWITCH
R358 10k
R354 100
C361 47u 4V
R359 XX
R355 XX
C362 XX 4V
C352 10u 16V
CL351 CL352 CL353
R351 1k
R352 XX
Q353 XX
R382 47k
R381 XX
C353 XX 16V
C354 10u 16V
C357 22u 6.3V
C359 10u 16V
C351 XX B
IC351 AFM PROCESSOR
IC351 CXA3285BR-T6
SP_VCC SP_VREF BEEP_IN SP_IN SP_SIG SP_OUT CTLPF VCC TC_R TCH_R NRDC_R WEIGHT_R TC_L TCH_L NRDC_L WEIGHT_L
SP+ SP_GND SP- HP_L HP_GND HP_R IR_OUT_L IR_OUT_R LINE_OUT_L LINE_OUT_R MUTE_OUT VCCH VREFH VREF MIC_IN_L LINE_IN_L
AGCTC MIC_IN_R LINE_IN_R REC_OUT_L REC_OUT_R AU_GND PB_IN_L PB_IN_R FADER IREF RF_GND IFDC_L IFDC_R FSC RFDC_L RFDC_R
PLL_LOOP_L PLL_LOOP_R MUTE_TC RECFM_OUT/BPF_MONI BPF_AD ST/MONO_TC PB_RF_IN RF_AGC_TC RF_SWP CS_IN CK_IN SI_IN MONO_OUT(SO) MIC_MONO DEV_L DEV_R
C388 XX B
C389 0.22u B 1608
R373 470k
C394 0.47u B
R374 XX
C395 XX B
C390 0.001u B 1005
C391 XX B 1005
C392 0.01u B 1005
C393 0.01u B 1005
C396 0.01u B 1005
R379 820
C397 68p CH
C398 0.22u B
C364 0.47u B
R368 150k
C368 XX B
C366 3.3u 50V
C375 0.1u B 1005
R372 47k
C380 1u B
C382 XX B
C385 1u B
C387 XX B
A_FADE
IC601 BH2222FV-E2
IC601 D/A CONVERTER (EVR)
A_4.9V(VCC) A_4.9V(VDD2) REC_Y/MT_CONT REC_L_CONT MT_F0 REC_BIAS ACC/RF_CONT CFG_DUTY 1.5M_DEV AU_BPF 1.7M_DEV A_FADE D_3.2V(VDD1) GND
CLK DI DOC_DET RF_AGC_CONT RP_IR AFC_F0_ADJ FRQ_TUNE AGC_CONT2 MT_Q HALL_REF HALL_GAIN HALL_OFFSET SWP(SEL) STB(LD)
IR_CARR IR_A_DEV FB601
C603 1u B 1608
XVC_SCK VC_SO DOC_DET RF_AGC_CONT RP_IR AFC_F0_ADJ FRQ_TUNE IR_V_DEV MT_Q HALL_REF HALL_GAIN HALL_OFFSET VC_RF_SWP DA_STB
RP_IR REC_L_CONT RF_AGC_CONT REC_Y/MT_CONT MT_F0 DOC_DET MT_Q
(19) TO(4/11)
REC_AFM
AU_BPF
PB_RF
XCS_AU DA_STB
(30) TO(7/11)
1.5M_DEV 1.7M_DEV
HALL_GAIN HALL_OFFSET HALL_REF FRQ_TUNE
(17) TO(3/11)
(1) TO(1/11)
AFC_F0_ADJ VC_SI VC_SO XVC_SCK FSC CFG_DUTY
(10) TO(2/11)
(24) TO(6/11)
VC_RF_SWP XCS_AU XVC_SCK VC_SO VC_SI
16

SIGNAL PATH

| | AUDIO SIGNAL |
|---|---|
| REC | ➡ |
| PB | ⇨ |

**< Page 4-61, 4-62 >**

**For Schematic Diagram**
• Refer to page 7 for printed wiring board.

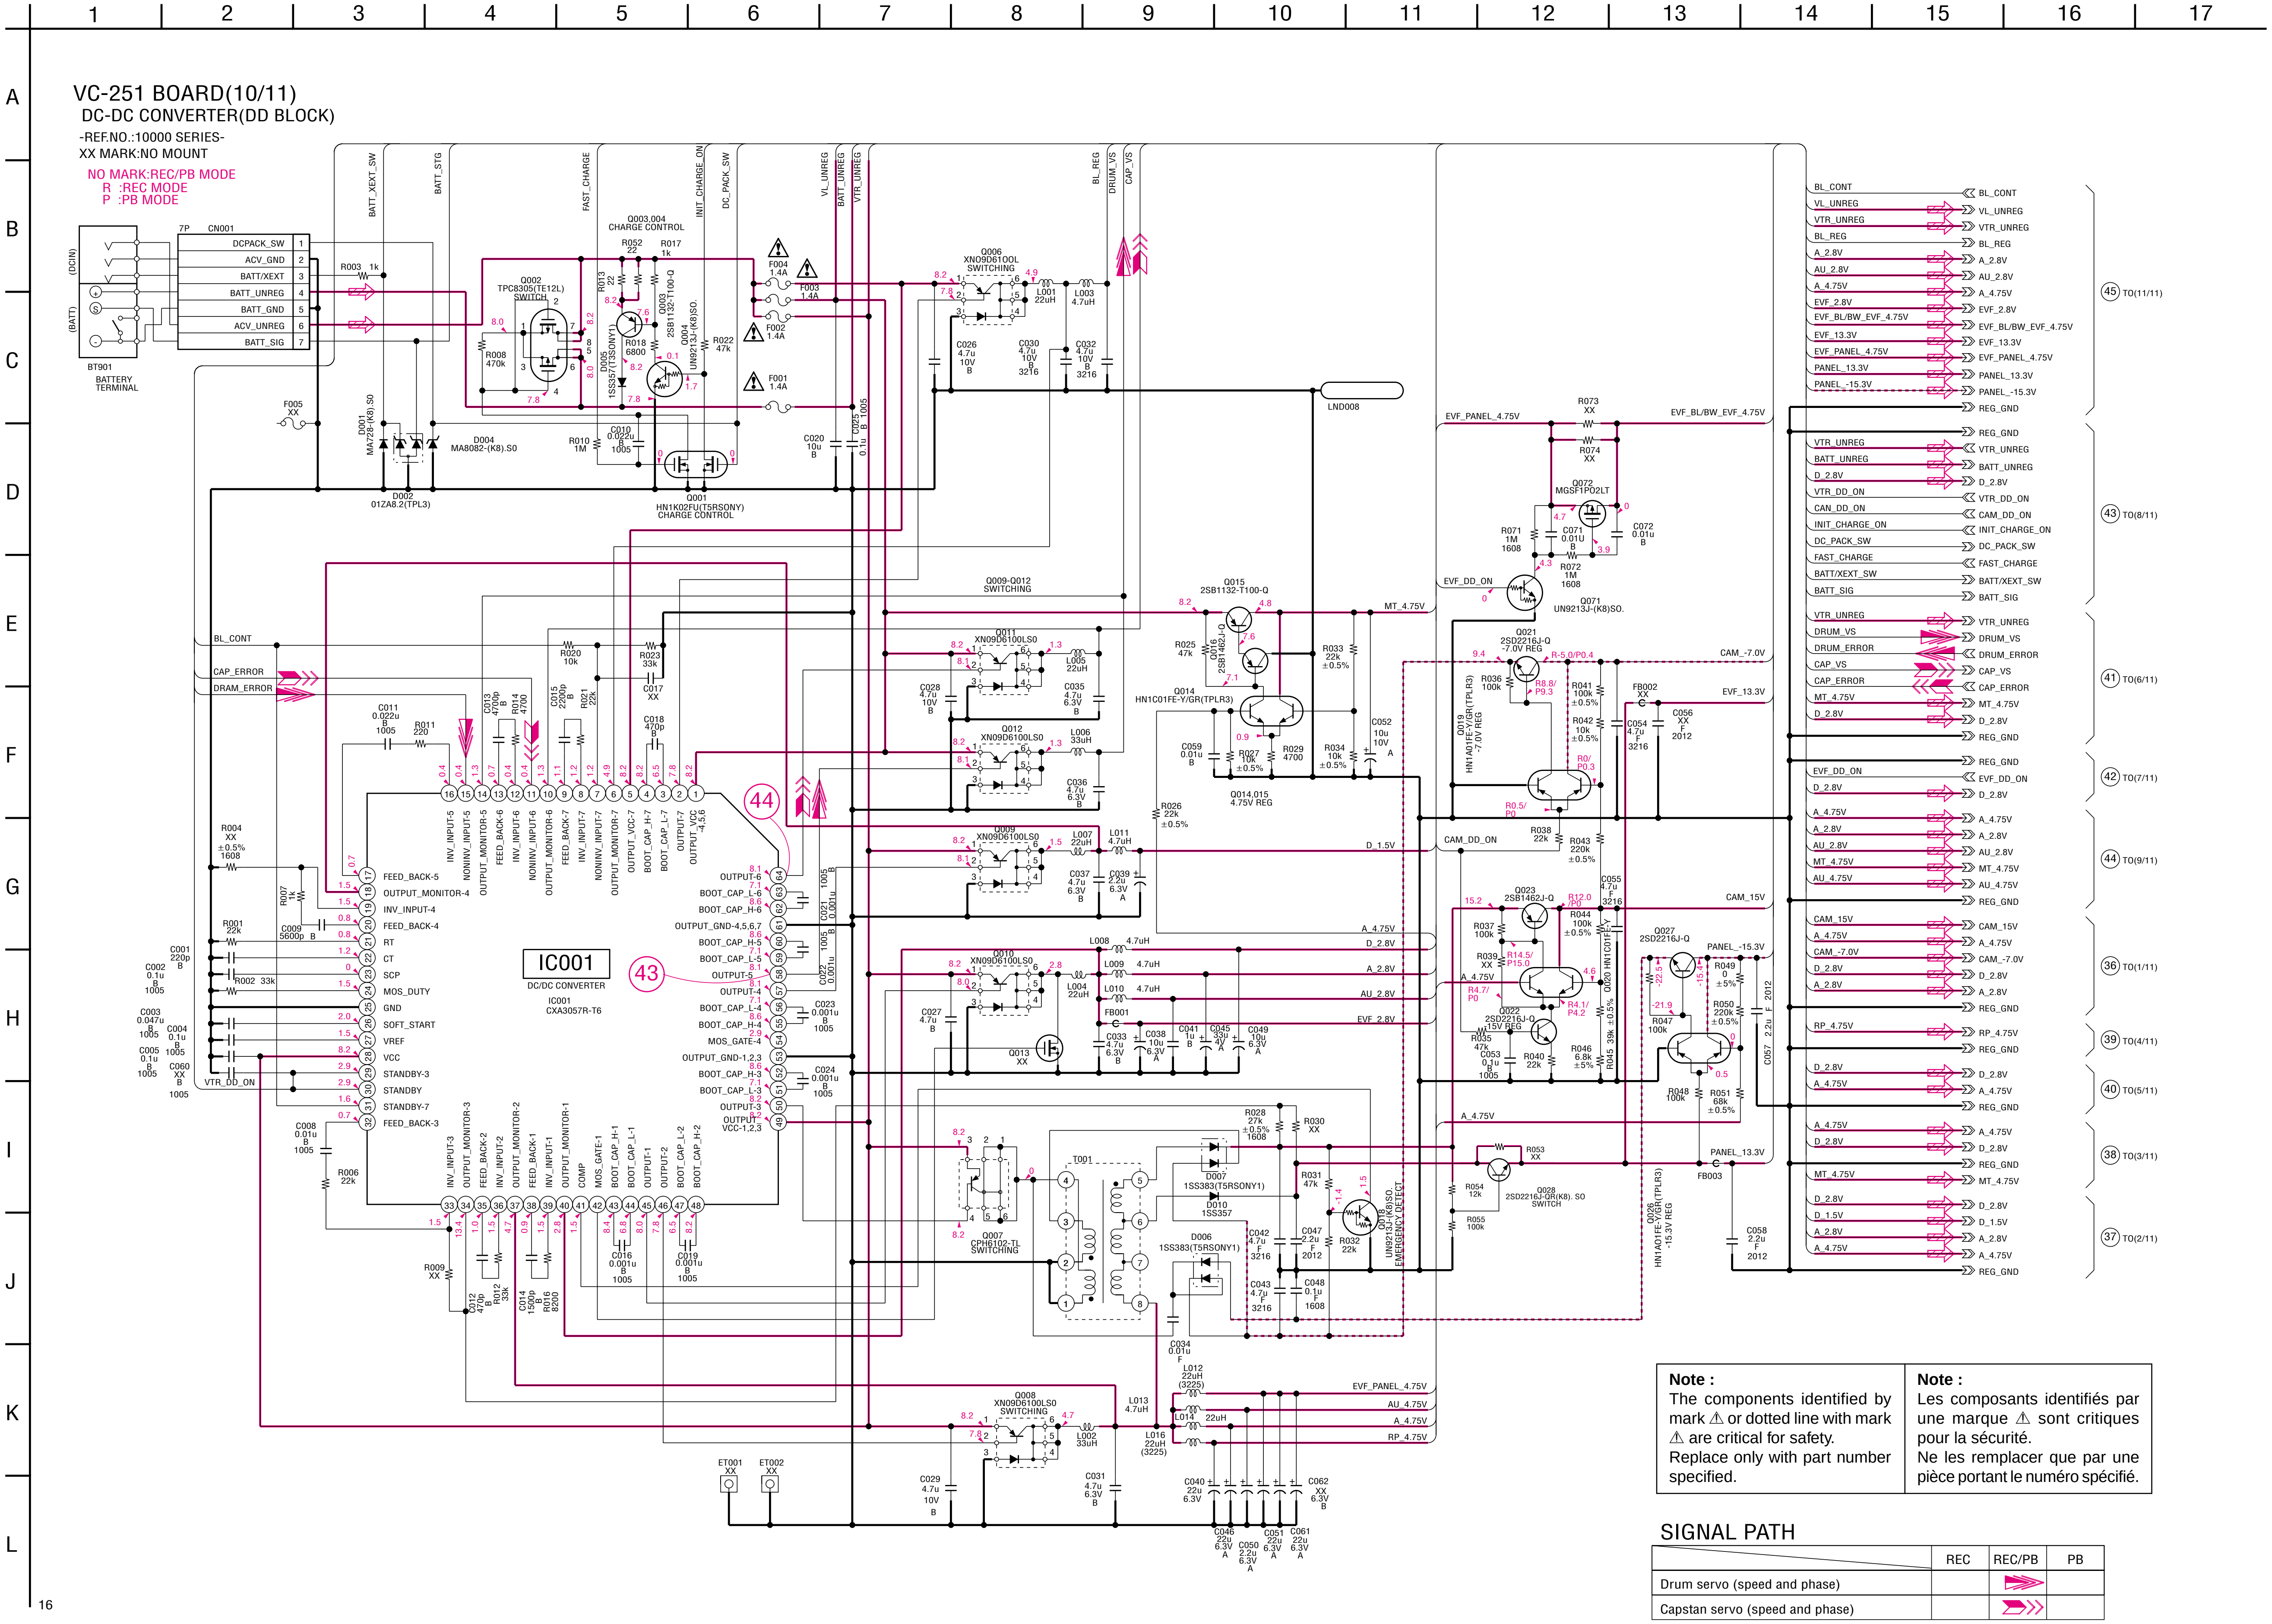

VC-251 BOARD(10/11)
DC-DC CONVERTER(DD BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
A
B
C
D
E
F
G
H
I
J
K
L
BT901 BATTERY TERMINAL
(DCIN)
(BATT)
CN001 7P
DCPACK_SW
ACV_GND
BATT/XEXT
BATT_UNREG
BATT_GND
ACV_UNREG
BATT_SIG
Q002 TPC8305(TE12L) SWITCH
Q003,004 CHARGE CONTROL
Q001 HN1K02FU(T5RSONY) CHARGE CONTROL
D001 MA728-(K8).SO
D002 01ZA8.2(TPL3)
D004 MA8082-(K8).SO
Q006 XN09D61OOL SWITCHING
Q009-Q012 SWITCHING
Q015 2SB1132-T100-Q
Q014 HN1C01FE-Y/GR(TPLR3)
Q014,015 4.75V REG
Q071 UN9213J-(K8)SO.
Q072 MGSF1PO2LT
Q021 2SD2216J-Q -7.0V REG
Q019 HN1A01FE-Y/GR(TPLR3) -7.0V REG
Q023 2SB1462J-Q
Q022 2SD2216J-Q 15V REG
Q027 2SD2216J-Q
Q028 2SD2216J-QR(K8). SO SWITCH
Q026 HN1A01FE-Y/GR(TPLR3) -15.3V REG
Q007 CPH6102-TL SWITCHING
Q008 XN09D6100LS0 SWITCHING
Q013 XX
T001
D006 1SS383(T5RSONY1)
D007 1SS383(T5RSONY1)
D010 1SS357
IC001 DC/DC CONVERTER IC001 CXA3057R-T6
LND008
44
43
45 TO(11/11)
43 TO(8/11)
41 TO(6/11)
42 TO(7/11)
44 TO(9/11)
36 TO(1/11)
39 TO(4/11)
40 TO(5/11)
38 TO(3/11)
37 TO(2/11)
ET001 XX
ET002 XX

**Note :**
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

**Note :**
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

SIGNAL PATH

| | REC | REC/PB | PB |
|---|---|---|---|
| Drum servo (speed and phase) | | ⇛ | |
| Capstan servo (speed and phase) | | ⇒ | |

**< Page 4-63, 4-64 >**

**For Schematic Diagram**

- Refer to page 7 for printed wiring board.

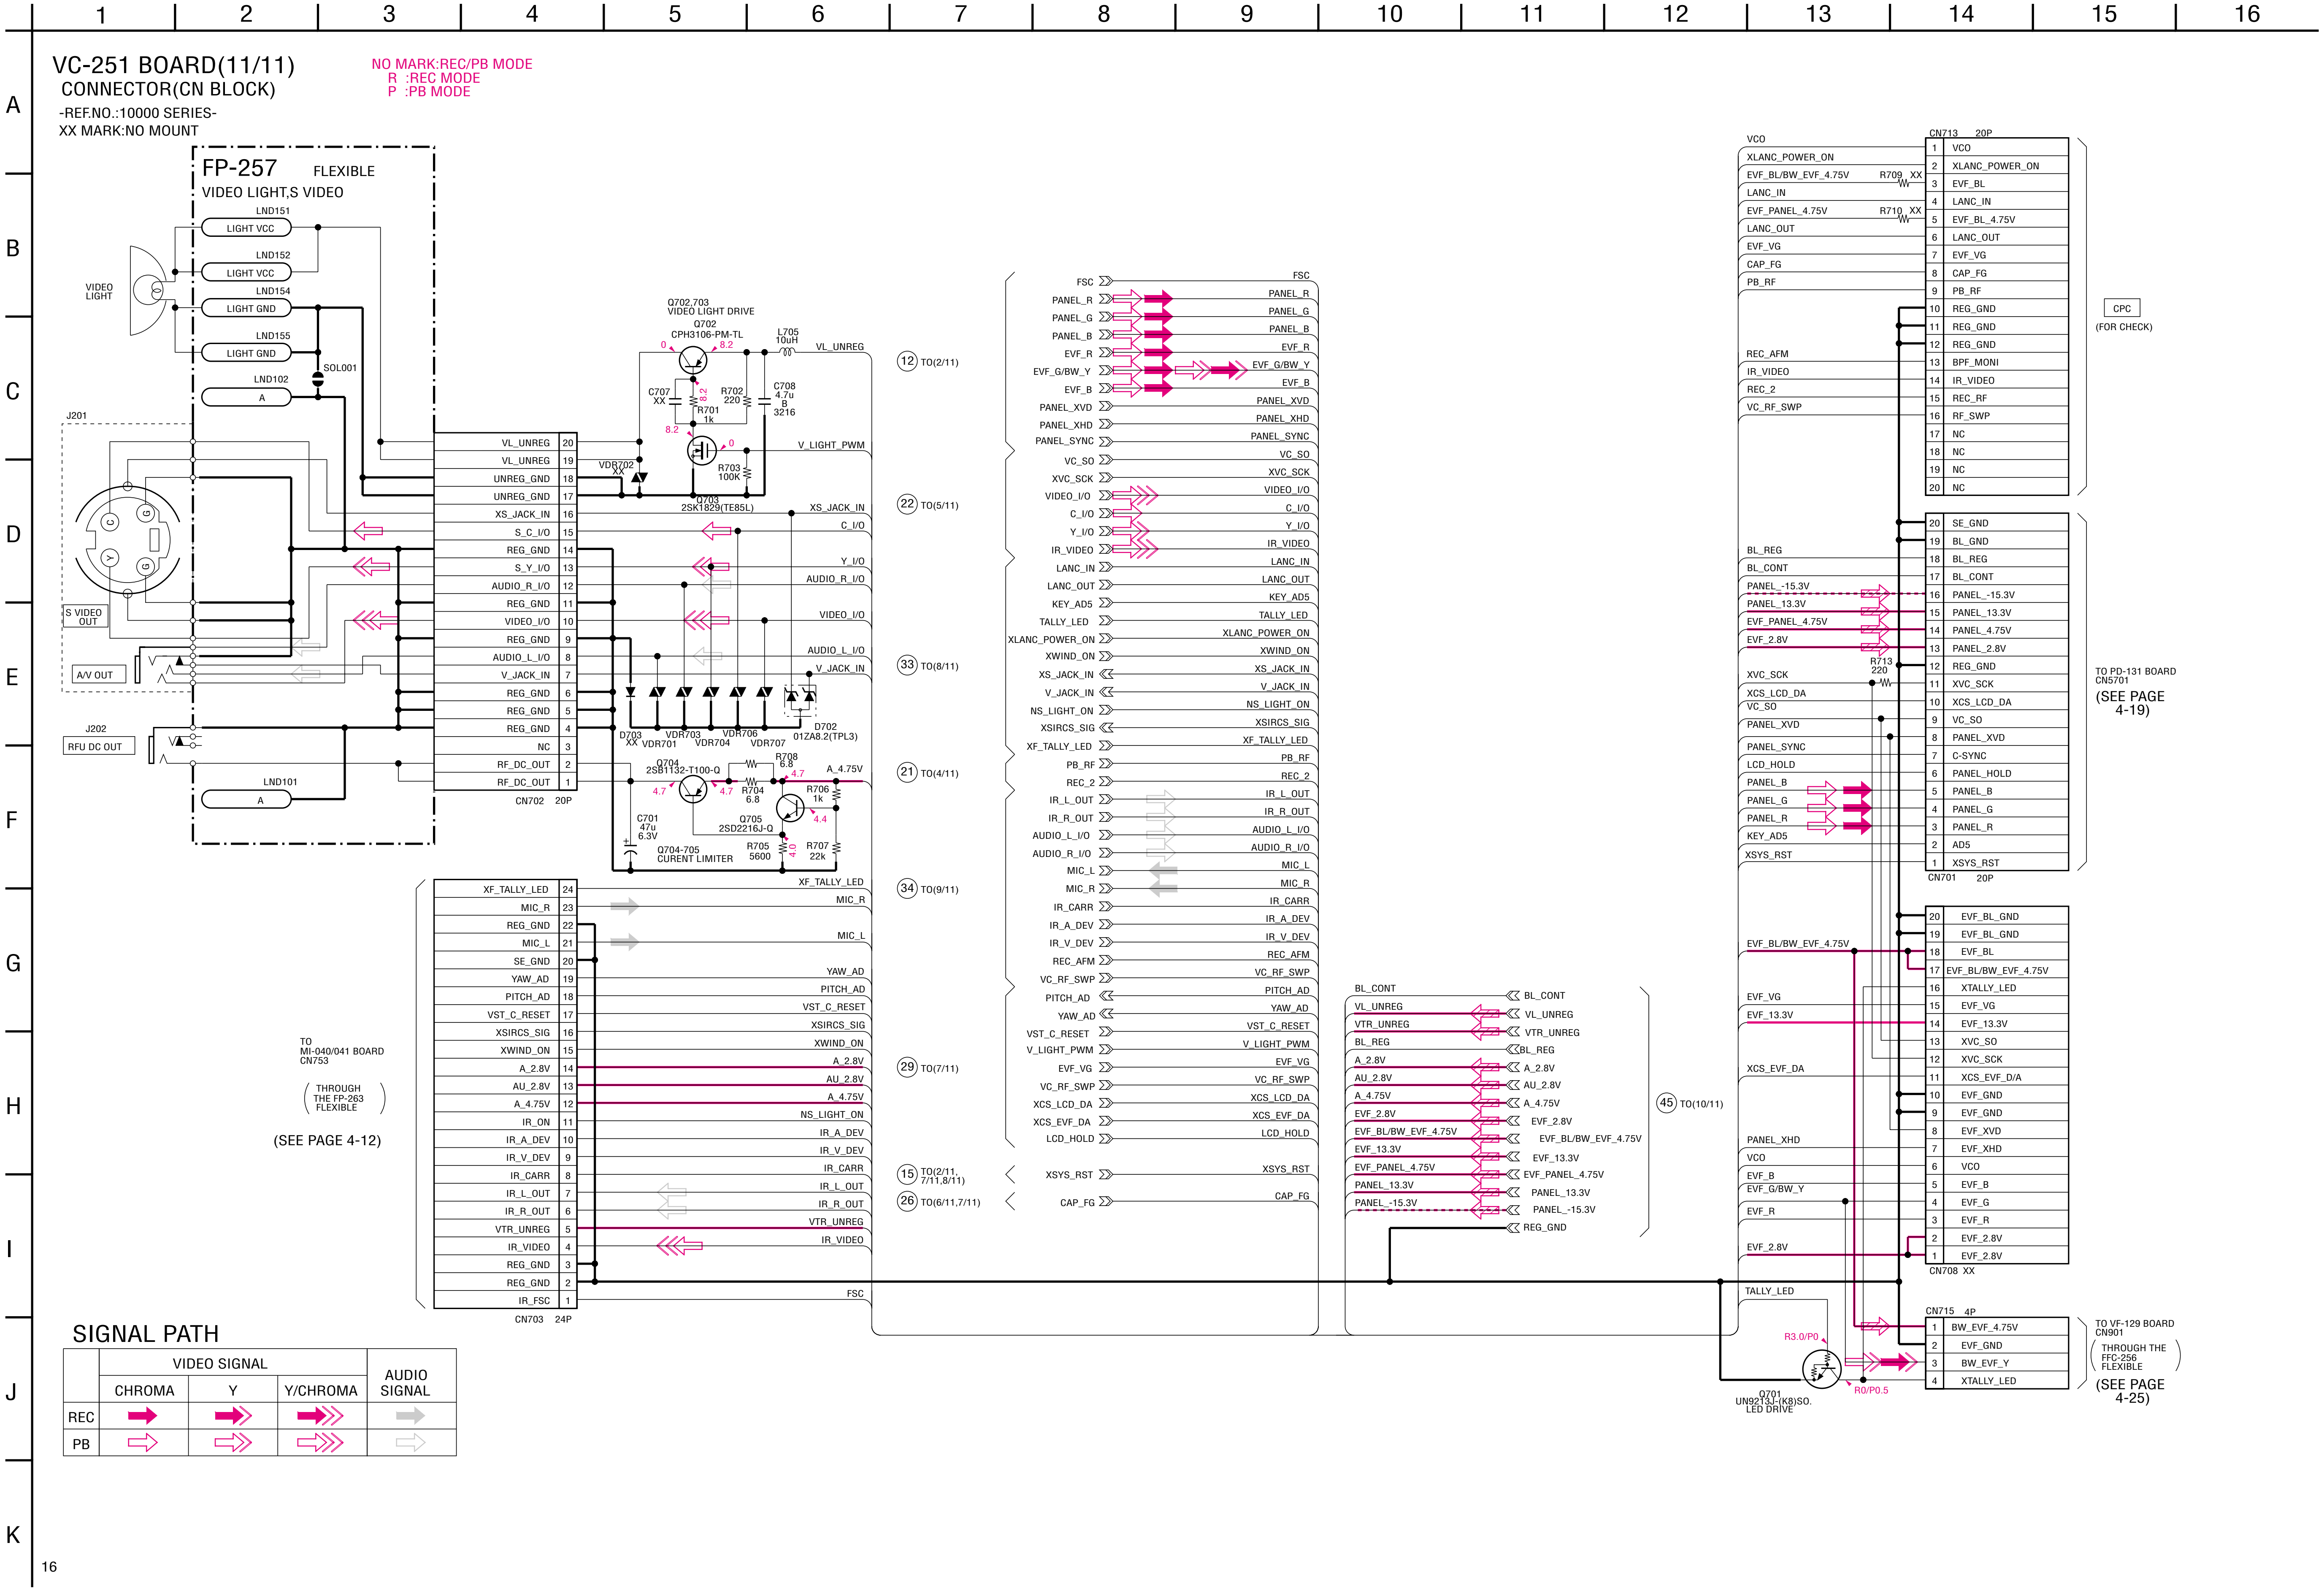

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
A B C D E F G H I J K
VC-251 BOARD(11/11)
CONNECTOR(CN BLOCK)
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
FP-257 FLEXIBLE
VIDEO LIGHT,S VIDEO
LND151 LIGHT VCC
LND152 LIGHT VCC
LND154 LIGHT GND
LND155 LIGHT GND
LND102 A
LND101 A
SOL001
VIDEO LIGHT
J201
S VIDEO OUT
A/V OUT
J202
RFU DC OUT
Q702,703 VIDEO LIGHT DRIVE
Q702 CPH3106-PM-TL
Q703 2SK1829(TE85L)
L705 10uH
C707 XX
R702 220
R701 1k
C708 4.7u B 3216
R703 100K
VDR702 XX
D703 XX
VDR701 VDR703 VDR704 VDR706 VDR707
D702 01ZA8.2(TPL3)
Q704 2SB1132-T100-Q
Q705 2SD2216J-Q
Q704-705 CURENT LIMITER
R708 6.8
R704 6.8
R706 1k
R705 5600
R707 22k
C701 47u 6.3V
A_4.75V
CN702 20P
CN703 24P
VL_UNREG VL_UNREG UNREG_GND UNREG_GND XS_JACK_IN S_C_I/O REG_GND S_Y_I/O AUDIO_R_I/O REG_GND VIDEO_I/O REG_GND AUDIO_L_I/O V_JACK_IN REG_GND REG_GND REG_GND NC RF_DC_OUT RF_DC_OUT
XF_TALLY_LED MIC_R REG_GND MIC_L SE_GND YAW_AD PITCH_AD VST_C_RESET XSIRCS_SIG XWIND_ON A_2.8V AU_2.8V A_4.75V IR_ON IR_A_DEV IR_V_DEV IR_CARR IR_L_OUT IR_R_OUT VTR_UNREG IR_VIDEO REG_GND REG_GND IR_FSC
TO MI-040/041 BOARD CN753
THROUGH THE FP-263 FLEXIBLE
(SEE PAGE 4-12)
(12) TO(2/11)
(22) TO(5/11)
(33) TO(8/11)
(21) TO(4/11)
(34) TO(9/11)
(29) TO(7/11)
(15) TO(2/11, 7/11,8/11)
(26) TO(6/11,7/11)
(45) TO(10/11)
FSC PANEL_R PANEL_G PANEL_B EVF_R EVF_G/BW_Y EVF_B PANEL_XVD PANEL_XHD PANEL_SYNC VC_SO XVC_SCK VIDEO_I/O C_I/O Y_I/O IR_VIDEO LANC_IN LANC_OUT KEY_AD5 TALLY_LED XLANC_POWER_ON XWIND_ON XS_JACK_IN V_JACK_IN NS_LIGHT_ON XSIRCS_SIG XF_TALLY_LED PB_RF REC_2 IR_L_OUT IR_R_OUT AUDIO_L_I/O AUDIO_R_I/O MIC_L MIC_R IR_CARR IR_A_DEV IR_V_DEV REC_AFM VC_RF_SWP PITCH_AD YAW_AD VST_C_RESET V_LIGHT_PWM EVF_VG VC_RF_SWP XCS_LCD_DA XCS_EVF_DA LCD_HOLD XSYS_RST CAP_FG
BL_CONT VL_UNREG VTR_UNREG BL_REG A_2.8V AU_2.8V A_4.75V EVF_2.8V EVF_BL/BW_EVF_4.75V EVF_13.3V EVF_PANEL_4.75V PANEL_13.3V PANEL_-15.3V REG_GND
CN713 20P
VCO XLANC_POWER_ON EVF_BL LANC_IN EVF_BL_4.75V LANC_OUT EVF_VG CAP_FG PB_RF REG_GND REG_GND REG_GND BPF_MONI IR_VIDEO REC_RF RF_SWP NC NC NC NC
R709 XX
R710 XX
CPC (FOR CHECK)
CN701 20P
SE_GND BL_GND BL_REG BL_CONT PANEL_-15.3V PANEL_13.3V PANEL_4.75V PANEL_2.8V REG_GND XVC_SCK XCS_LCD_DA VC_SO PANEL_XVD C-SYNC PANEL_HOLD PANEL_B PANEL_G PANEL_R AD5 XSYS_RST
R713 220
TO PD-131 BOARD CN5701
(SEE PAGE 4-19)
CN708 XX
EVF_BL_GND EVF_BL_GND EVF_BL EVF_BL/BW_EVF_4.75V XTALLY_LED EVF_VG EVF_13.3V XVC_SO XVC_SCK XCS_EVF_D/A EVF_GND EVF_GND EVF_XVD EVF_XHD VCO EVF_B EVF_G EVF_R EVF_2.8V EVF_2.8V
CN715 4P
BW_EVF_4.75V EVF_GND BW_EVF_Y XTALLY_LED
TALLY_LED
R3.0/P0
R0/P0.5
Q701 UN9213J-(K8)SO. LED DRIVE
TO VF-129 BOARD CN901
THROUGH THE FFC-256 FLEXIBLE
(SEE PAGE 4-25)
SIGNAL PATH

| | VIDEO SIGNAL | | | AUDIO SIGNAL |
|---|---|---|---|---|
| | CHROMA | Y | Y/CHROMA | |
| REC | ➡ | ➡➡ | ➡➡➡ | ➡ |
| PB | ⇨ | ⇨⇨ | ⇨⇨⇨ | ⇨ |

16

## SECTION 5. ADJUSTMENTS

☞ : Added portion.

**Page** 5-2

**Type S**

# 1. Before starting adjustment

## 1-1. Adjusting items when replacing main parts and boards.

When replacing main parts, adjust the items indicated by ● in the following table.

| Adjustment Section | Adjustment | Replaced parts | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | Block replacement | | | | | | | | | Parts replacement | | | | | | | | | | | | | | | | |
| | | Lens device | Video light *8 | LCD block ND901 (Fluorescent tube) *4 | LCD block LCD901 (LCD panel) *4 | B/W EVF block V901 (Picture tube) *3 | Color EVF block LCD903 (LCD panel) *2 | Mechanism deck *1 | Mechanism deck M901 (Drum assy.) *1 | Mechanism deck M902 (Capstan motor) | CD-286/281 board IC191 (CCD imager) | VC-251 board IC271, X271 (Timing generator) | VC-251 board IC272 (S/H, AGC) | VC-251 board IC151 (Camera, video process) | VC-251 board IC101 (REC/PB AMP) | VC-251 board IC221 (Video out) | VC-251 board IC601 (EVR) | VC-251 board IC351 (Audio process) | MI-040/041 board SE751,752 (PITCH,YAW sensor) *6 | MI-040/041 board IC3901 (IR transmitter) *5 | PD-131 board IC5501 (RGB driver (LCD)) *4 | PD-131 board IC5502 (Timing generator (LCD)) *4 | VF-129 board IC901 (CRT drive (EVF)) *3 | VF-129 board T901 (FBT (EVF)) *3 | VF-141 board IC4501 (RGB driver (EVF)) *2 | VF-141 board IC4502 (Timing generator (EVF)) *2 | LB-62 board ND4601 (Fluorescent tube (EVF)) *2 |
| Initialization of D, E, F, 7 page data | Initialization of D, E, F, 7 page data | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Modification of D, E, F, 7 page data | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Camera | Lens type input | ● | | | | | | | | | | | | | | | | | | | | | | | | | |
| | HALL adj. | ● | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Flange back adj. | ● | | | | | | | | | ● | | | | | | | | | | | | | | | | |
| | Color reproduction adj. | | | | | | | | | | ● | | ● | | | | | | | | | | | | | | |
| | AWB & LV standard data input | | | | | | | | | | ● | | ● | | | | | | | | | | | | | | |
| | Auto white balance adj. | | | | | | | | | | ● | | ● | | | | | | | | | | | | | | |
| | Angular velocity sensor sens. adj. *6 | | | | | | | | | | | | | | | | | | ● | | | | | | | | |

**Type M**

| Adjustment Section | Adjustment | Replaced parts | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | Block replacement | | | | | | | | | Parts replacement | | | | | | | | | | | | | | | | |
| | | Lens device | Video light *8 | LCD block ND901 (Fluorescent tube) *4 | LCD block LCD901 (LCD panel) *4 | B/W EVF block V901 (Picture tube) *3 | Color EVF block LCD903 (LCD panel) *2 | Mechanism deck *1 | Mechanism deck M901 (Drum assy.) *1 | Mechanism deck M902 (Capstan motor) | CD-286/281 board IC191 (CCD imager) | VC-251 board IC271, X271 (Timing generator) | VC-251 board IC272 (S/H, AGC) | VC-251 board IC151 (Camera, video process) | VC-251 board IC101 (REC/PB AMP) | VC-251 board IC221 (Video out) | VC-251 board IC601 (EVR) | VC-251 board IC351 (Audio process) | MI-040/041 board SE751,752 (PITCH,YAW sensor) *6 | MI-040/041 board IC3901 (IR transmitter) *5 | PD-131 board IC5501 (RGB driver (LCD)) *4 | PD-131 board IC5502 (Timing generator (LCD)) *4 | VF-129 board IC901 (CRT drive (EVF)) *3 | VF-129 board T901 (FBT (EVF)) *3 | VF-141 board IC4501 (RGB driver (EVF)) *2 | VF-141 board IC4502 (Timing generator (EVF)) *2 | LB-62 board ND4601 (Fluorescent tube (EVF)) *2 |
| Initialization of D, E, F, 7 page data | Initialization of D, E, F, 7 page data | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Modification of D, E, F, 7 page data | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Camera | Lens type input | ● | | | | | | | | | | | | | | | | | | | | | | | | | |
| | CCD imager type input *9 | ● | | | | | | | | | | | | | | | | | | | | | | | | | |
| | HALL adj. | ● | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Flange back adj. | ● | | | | | | | | | ● | | | | | | | | | | | | | | | | |
| | Color reproduction adj. | | | | | | | | | | ● | | ● | | | | | | | | | | | | | | |
| | AWB & LV standard data input | | | | | | | | | | ● | | ● | | | | | | | | | | | | | | |
| | Auto white balance adj. | | | | | | | | | | ● | | ● | | | | | | | | | | | | | | |
| | Angular velocity sensor sens. adj. *6 | | | | | | | | | | | | | | | | | | ● | | | | | | | | |

: Added portion.

**Page** | **Type S**

5-3

| Adjustment Section | Adjustment | Board replacement | | | | | EEPROM |
|---|---|---|---|---|---|---|---|
| | | VC-251 board (COMPLETE) | MI-040/041 board (COMPLETE) *7 | PD-131 board (COMPLETE) *4 | VF-129 board (COMPLETE) *3 | VF-141 board (COMPLETE) *2 | VC-251 board IC401 |
| Initialization of D, E, F, 7 page data | Initialization of D, E, F, 7 page data | | | | | | ● |
| | Modification of D, E, F, 7 page data | ● | | | | | ● |
| Camera | Lens type input | ● | | | | | ● |
| | HALL adj. | ● | | | | | ● |
| | Flange back adj. | ● | | | | | ● |
| | Color reproduction adj. | ● | | | | | ● |
| | AWB & LV standard data input | ● | | | | | ● |
| | Auto white balance adj. | ● | | | | | ● |
| | Angular velocity sensor sens. adj. *6 | ● | ● | | | | ● |

*1: When replacing the drum assy. or mechanism deck, reset the data of page: 2, address: A2 to A4 to "00". (Refer to "Record of Use check" of "5-4. SERVICE MODE")
*2: Color EVF model (CCD-TR818)
*3: B/W EVF model (CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)
*4: TRV model: (CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)
*5: LASER LINK model (CCD-TRV98)
*6: Steady shot model (CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)
*7: MI-040 board: TR model
MI-041 board: TRV model
*8: When replacing the video light, reset the data of page: 2, address: E0 to E2 to "00". (Except for CCD-TR818)

**Type M**

| Adjustment Section | Adjustment | Board replacement | | | | | EEPROM |
|---|---|---|---|---|---|---|---|
| | | VC-251 board (COMPLETE) | MI-040/041 board (COMPLETE) *7 | PD-131 board (COMPLETE) *4 | VF-129 board (COMPLETE) *3 | VF-141 board (COMPLETE) *2 | VC-251 board IC401 |
| Initialization of D, E, F, 7 page data | Initialization of D, E, F, 7 page data | | | | | | ● |
| | Modification of D, E, F, 7 page data | ● | | | | | ● |
| Camera | Lens type input | ● | | | | | ● |
| | CCD imager typr input *9 | ● | | | | | ● |
| | HALL adj. | ● | | | | | ● |
| | Flange back adj. | ● | | | | | ● |
| | Color reproduction adj. | ● | | | | | ● |
| | AWB & LV standard data input | ● | | | | | ● |
| | Auto white balance adj. | ● | | | | | ● |
| | Angular velocity sensor sens. adj. *6 | ● | ● | | | | ● |

*1: When replacing the drum assy. or mechanism deck, reset the data of page: 2, address: A2 to A4 to "00". (Refer to "Record of Use check" of "5-4. SERVICE MODE")
*2: Color EVF model (CCD-TR818)
*3: B/W EVF model (CCD-TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)
*4: TRV model: (CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)
*5: LASER LINK model (CCD-TRV98)
*6: Steady shot model (CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)
*7: MI-040 board: TR model
MI-041 board: TRV model
*8: When replacing the video light, reset the data of page: 2, address: E0 to E2 to "00". (Except for CCD-TR818)
*9: 1/4 CCD NTSC TRV model (CCD-TRV68/TRV78/TRV88/TRV98)

☞ : Added portion. ☞ : Changed portion.

**Page:** 5-10 5-11

**Type S**

### 4. F Page table

**Note1:** Fixed data-1: Initialized data. (Refer to “1. Initializing the D, E, F, 7 Page Data”.)
Fixed data-2: Modified data. (Refer to “2. Modification of D, E, F, 7 Page Data”.)

| Address | Initial value NTSC | Initial value PAL | Remark |
|---|---|---|---|
| 00 to 0F | | | |
| 3A | 8D | 8D | |
| 3B | | | Fixed data-2 |
| 3C | 80 | 80 | AWB & LV standard data input |
| 3D | 7A | 7A | |
| 9B to 9F | | | Fixed data-1 |
| A0 | | | Fixed data-2 |
| A1 to B7 | | | Fixed data-1 |
| B8 | | | Fixed data-2<br>(Modified data. Copy the data built in the same model.) |
| B9 | | | |
| BA | | | |
| BB | | | |
| BC to CC | | | Fixed data-1 |
| CD | | | Fixed data-2 |
| CE to D3 | | | Fixed data-1 |
| D4 | | | Fixed data-2 |
| D5 to D6 | | | Fixed data-1 |
| DB to DD | | | Fixed data-1 |
| DE | | | Fixed data-2 |
| DF | | | |
| F0 to F2 | | | Fixed data-1 |
| F3 | | | Fixed data-2 |
| F4 | | | |
| F5 | | | Fixed data-1 |
| F6 | | | Fixed data-2 |
| F7 to FF | | | Fixed data-1 |

*1: Steady shot model (CCD-TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)
*2: LASER LINK model (CCD-TRV98)

*Table. 5-1-3.*

**Type M**

### 4. F Page table

**Note1:** Fixed data-1: Initialized data. (Refer to “1. Initializing the D, E, F, 7 Page Data”.)
Fixed data-2: Modified data. (Refer to “2. Modification of D, E, F, 7 Page Data”.)

| Address | Initial value NTSC | Initial value PAL | Remark |
|---|---|---|---|
| 00 to 0F | | | |
| 3B | 58(*3)<br>55(*4) | | CCD imager type input (*5)<br>Fixed data-2 (*6) |
| A0 | 10(*3)<br>30(*4) | | CCD imager type input (*5)<br>Fixed data-2 (*6) |
| CD | DA(*3)<br>D9(*4) | | CCD imager type input (*5)<br>Fixed data-2 (*6) |
| D4 | 40(*3)<br>80(*4) | | CCD imager type input (*5)<br>Fixed data-2 (*6) |
| DE | 56(*3)<br>76(*4) | | CCD imager type input (*5)<br>Fixed data-2 (*6) |
| DF | | | Fixed data-2 |
| F7 to FA | | | Fixed data-1 |
| FB | 81(*3)<br>01(*4) | | CCD imager type input (*5)<br>Fixed data-2 (*6) |
| FC to FF | | | Fixed data-1 |

*3: 1/4 CCD NTSC TRV model with CCD type S
*4: 1/4 CCD NTSC TRV model with CCD type M
*5: 1/4 CCD NTSC TRV model
*6: 1/6 CCD model or 1/4 CCD PAL model or 1/4 CCD NTSC TR model

**Note2:** 1/4 CCD NTSC TRV model:
CCD-TRV68/TRV78/TRV88/TRV98
1/4 CCD NTSC TR model:
CCD-TR818
1/6 CCD NTSC model:
CCD-TRV49/TRV58/TR618
1/4 CCD PAL model:
CCD-TRV78E/TRV98E
1/6 CCD PAL model:
CCD-TRV49E/TRV58E/TRV59E/TR618E/TR718E/TR728E

*Table. 5-1-3.*

☞ : Added portion. ✎ : Changed portion.

**Page:** 5-12

## Type S

**5. E Page Table**

**Note:** Fixed data-1: Initialized data. (Refer to "1. Initializing the D, E, F, 7 Page Data".)
Fixed data-2: Modified data. (Refer to "2. Modification of D, E, F, 7 Page Data".)

| Address | Initial value | | Remark |
|---|---|---|---|
| | NTSC | PAL | |
| 00 to 01 | | | Fixed data-1 |
| 02 | | | Fixed data-2<br>(Modified data. Copy the data built in the same model.) |
| 03 | | | |
| 04 | | | |
| 05 | | | |
| 06 | | | |
| 07 | | | Fixed data-1 |

| Address | NTSC | PAL | Remark |
|---|---|---|---|
| 58 | | | Fixed data-1 |
| 59 | | | Fixed data-2 |
| 5A to 5B | | | Fixed data-1 |
| 5C | 22 | 22 | Lens type input |
| 5D | 51 | 51 | |
| 5E | FD | FD | |
| 5F | C4 | C4 | |
| 60 to 71 | | | Fixed data-1 |
| 72 | | | Fixed data-2 |
| 73 to 7B | | | Fixed data-1 |

| Address | NTSC | PAL | Remark |
|---|---|---|---|
| FC | | | Fixed data-2 |
| FD | | | |
| FE to FF | | | Fixed data-1 |

*Table. 5-1-4.*

## Type M

**5. E Page Table**

**Note1:** Fixed data-1: Initialized data. (Refer to "1. Initializing the D, E, F, 7 Page Data".)
Fixed data-2: Modified data. (Refer to "2. Modification of D, E, F, 7 Page Data".)

| Address | Initial value | | Remark |
|---|---|---|---|
| | NTSC | PAL | |
| 00 to 01 | | | Fixed data-1 |

✎

| Address | NTSC | PAL | Remark |
|---|---|---|---|
| 06 | 44(*1)<br>42(*2) | | CCD imager type input (*3)<br>Fixed data-2 (*4) |

✎

| Address | NTSC | PAL | Remark |
|---|---|---|---|
| 59 | 02(*1)<br>04(*2) | | CCD imager type input (*3)<br>Fixed data-2 (*4) |

✎

| Address | NTSC | PAL | Remark |
|---|---|---|---|
| 72 | 62(*1)<br>76(*2) | | CCD imager type input (*3)<br>Fixed data-2 (*4) |

| Address | NTSC | PAL | Remark |
|---|---|---|---|
| FE to FF | | | Fixed data-1 |

*1: 1/4 CCD NTSC TRV model with CCD type S
*2: 1/4 CCD NTSC TRV model with CCD type M
*3: 1/4 CCD NTSC TRV model
*4: 1/6 CCD model or 1/4 CCD PAL model
or 1/4 CCD NTSC TR model

**Note2:** 1/4 CCD NTSC TRV model:
CCD-TRV68/TRV78/TRV88/TRV98
1/4 CCD NTSC TR model:
CCD-TR818
1/6 CCD NTSC model:
CCD-TRV49/TRV58/TR618
1/4 CCD PAL model:
CCD-TRV78E/TRV98E
1/6 CCD PAL model:
CCD-TRV49E/TRV58E/TRV59E/TR618E/TR718E/TR728E

☞

*Table. 5-1-4.*

☞ : Added portion.

| Page | Type S | Type M |
|---|---|---|
| 5-14 | **1-3. CAMERA SYSTEM ADJUSTMENTS**<br>Before perform the camera system adjustments, check that the specified values of “VIDEO SYSTEM ADJUSTMENTS” are satisfied.<br>**Note:** NTSC model: CCD-TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98<br>PAL model: CCD-TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E | ☞<br>**0. CCD Imager Type Input (CCD-TRV68/TRV78/TRV88/TRV98 (NTSC)) only**<br>Distinguish the type of the CCD imager used for the camcorder, and input data corresponding to the type. |

| | | |
|---|---|---|
| Subject | Not required | |
| Measurement Point | Display data of page 6 (Note) | |
| Measuring Instrument | Adjustment remote commander | |
| Adjustment Page | E | F |
| Adjustment Address | 06, 59, 72 | 3B, A0, CD, D4, DE, FB |

**Note:** Displayed data of page 1 of the adjustment remote commander.
1 : XX : XX
Display data

**Adjusting method:**

| Order | Page | Address | Data | Procedure |
|---|---|---|---|---|
| 1 | 0 | 01 | 01 | Set the data. |
| 2 | 6 | 03 | | Check that the data is “22” to “3F”. |
| 3 | 6 | 04 | | Check the data.<br>When the data is “9E” to “C0”, proceed to step 4. (CCD type M)<br>When the data is “DF” to “FF”, proceed to step 14. (CCD type S) |
| 4 | E | 06 | 42 | Set the data, and press PAUSE button. |
| 5 | E | 59 | 04 | Set the data, and press PAUSE button. |
| 6 | E | 72 | 76 | Set the data, and press PAUSE button. |
| 7 | F | 3B | 55 | Set the data, and press PAUSE button. |
| 8 | F | A0 | 30 | Set the data, and press PAUSE button. |
| 9 | F | CD | D9 | Set the data, and press PAUSE button. |
| 10 | F | D4 | 80 | Set the data, and press PAUSE button. |
| 11 | F | DE | 76 | Set the data, and press PAUSE button. |
| 12 | F | FB | 01 | Set the data, and press PAUSE button. |
| 13 | | | | Proceed to step 23. |
| 14 | E | 06 | 44 | Set the data, and press PAUSE button. |
| 15 | E | 59 | 02 | Set the data, and press PAUSE button. |
| 16 | E | 72 | 62 | Set the data, and press PAUSE button. |
| 17 | F | 3B | 58 | Set the data, and press PAUSE button. |
| 18 | F | A0 | 10 | Set the data, and press PAUSE button. |
| 19 | F | CD | DA | Set the data, and press PAUSE button. |
| 20 | F | D4 | 40 | Set the data, and press PAUSE button. |
| 21 | F | DE | 56 | Set the data, and press PAUSE button. |
| 22 | F | FB | 81 | Set the data, and press PAUSE button. |
| 23 | 0 | 01 | 01 | Set the data. |

☞ : Added portion.

| Page | Type S | Type M |
|---|---|---|
| 5-19 | **7. Color Reproduction Adjustment**<br>Adjust the color Separation matrix coefficient so that proper color reproduction is produced.<br>***For NTSC model***<br>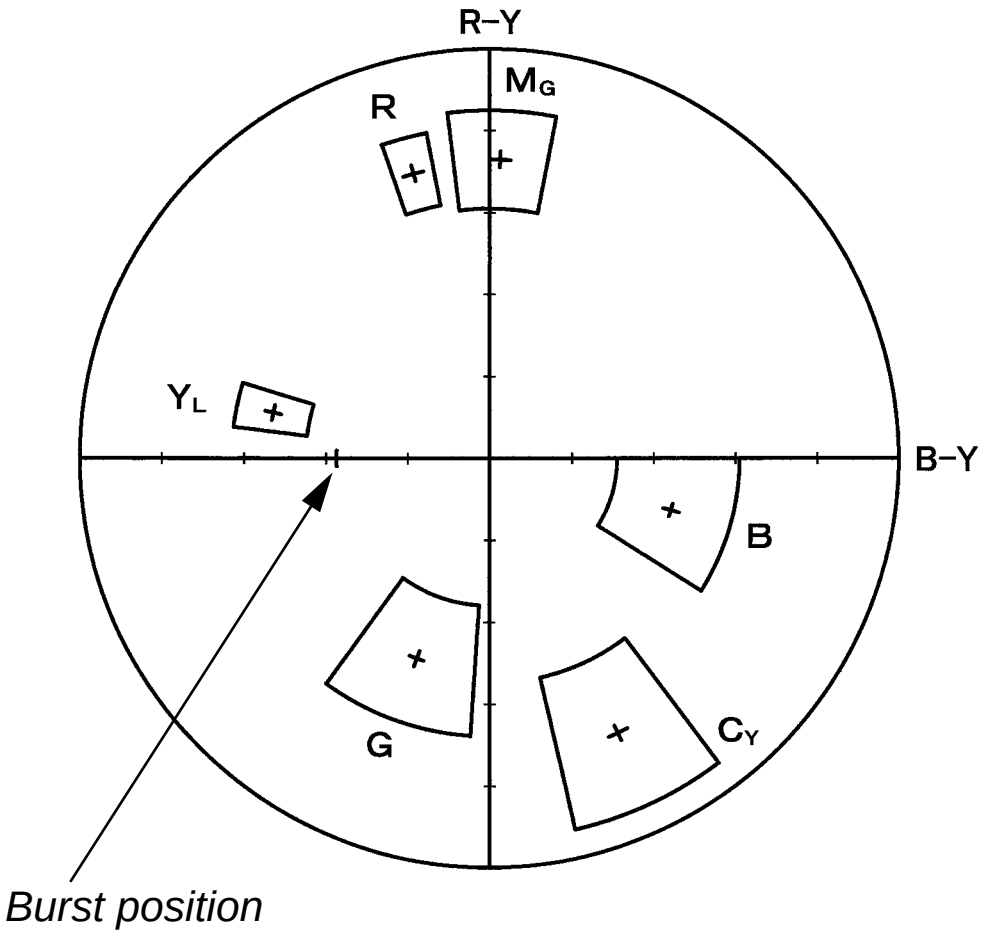<br> R−Y<br>MG<br>R<br>YL<br>B−Y<br>B<br>G<br>CY<br>Burst position<br>***For PAL model***<br>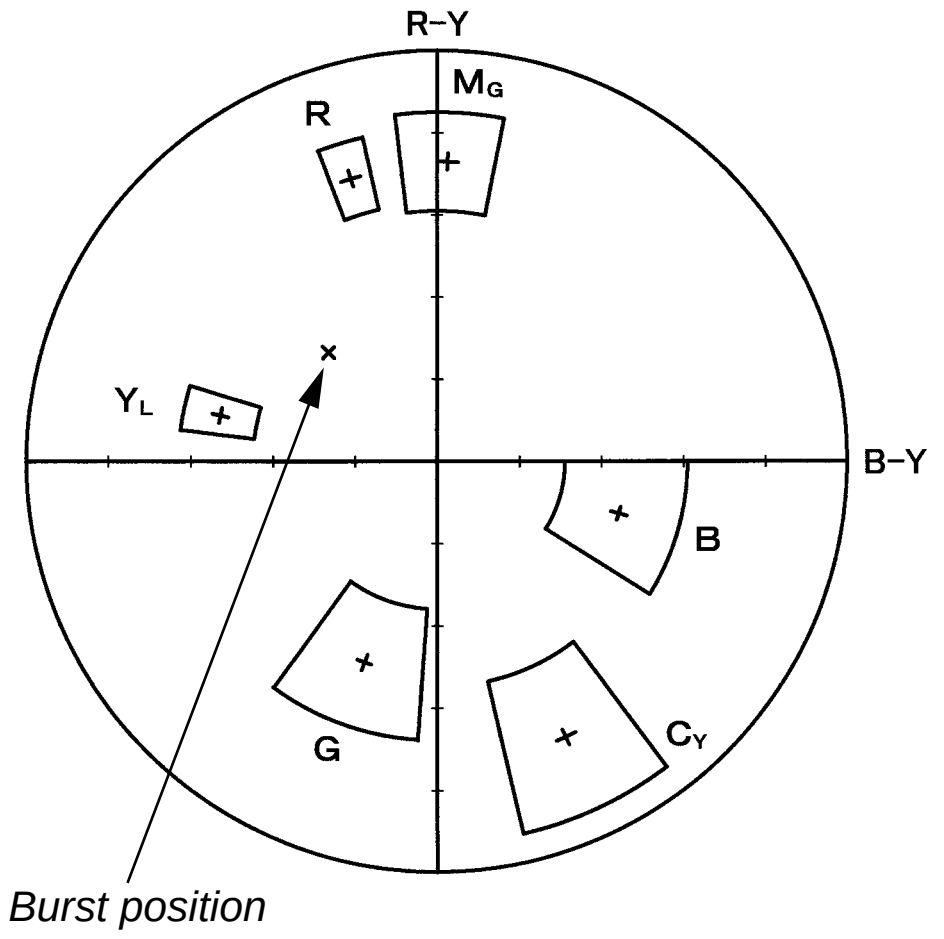<br> R−Y<br>MG<br>R<br>YL<br>B−Y<br>B<br>G<br>CY<br>Burst position<br>*Fig. 5-1-12.* | ***For NTSC model (CCD type S)*** ☜<br>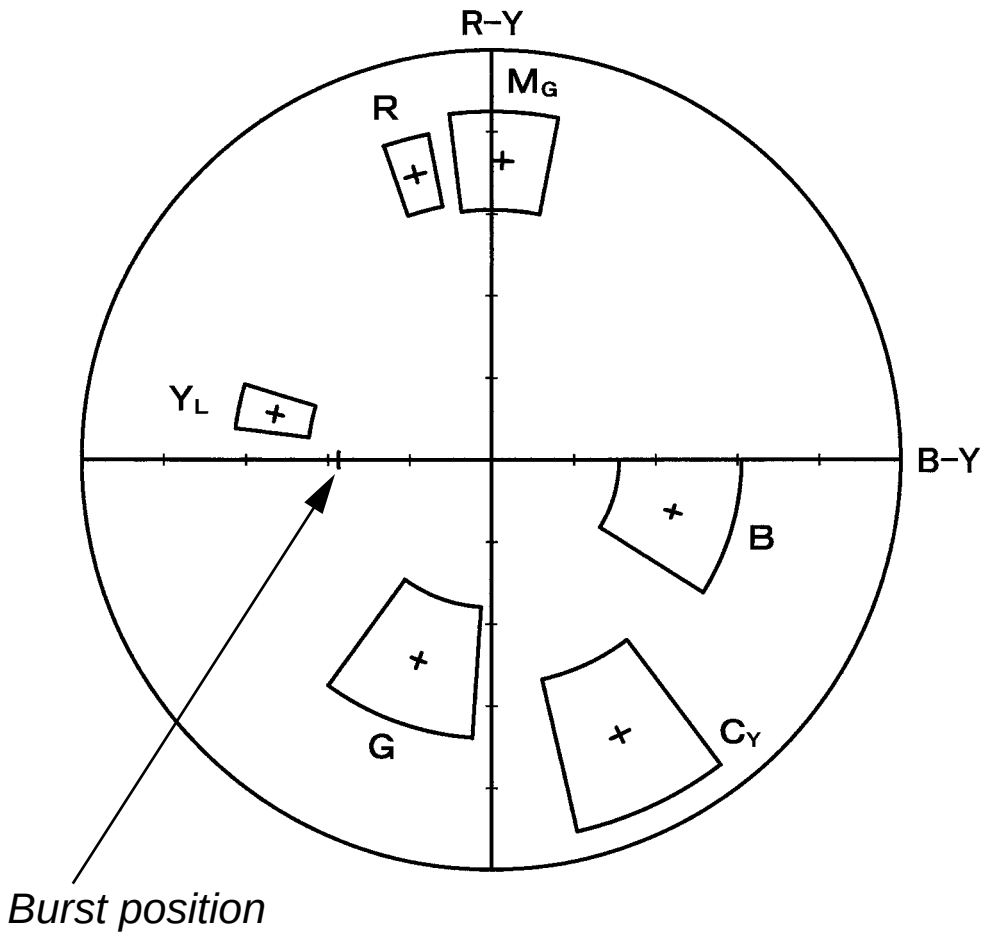<br> R−Y<br>MG<br>R<br>YL<br>B−Y<br>B<br>G<br>CY<br>Burst position<br>☞<br>***For NTSC model (CCD type M)***<br>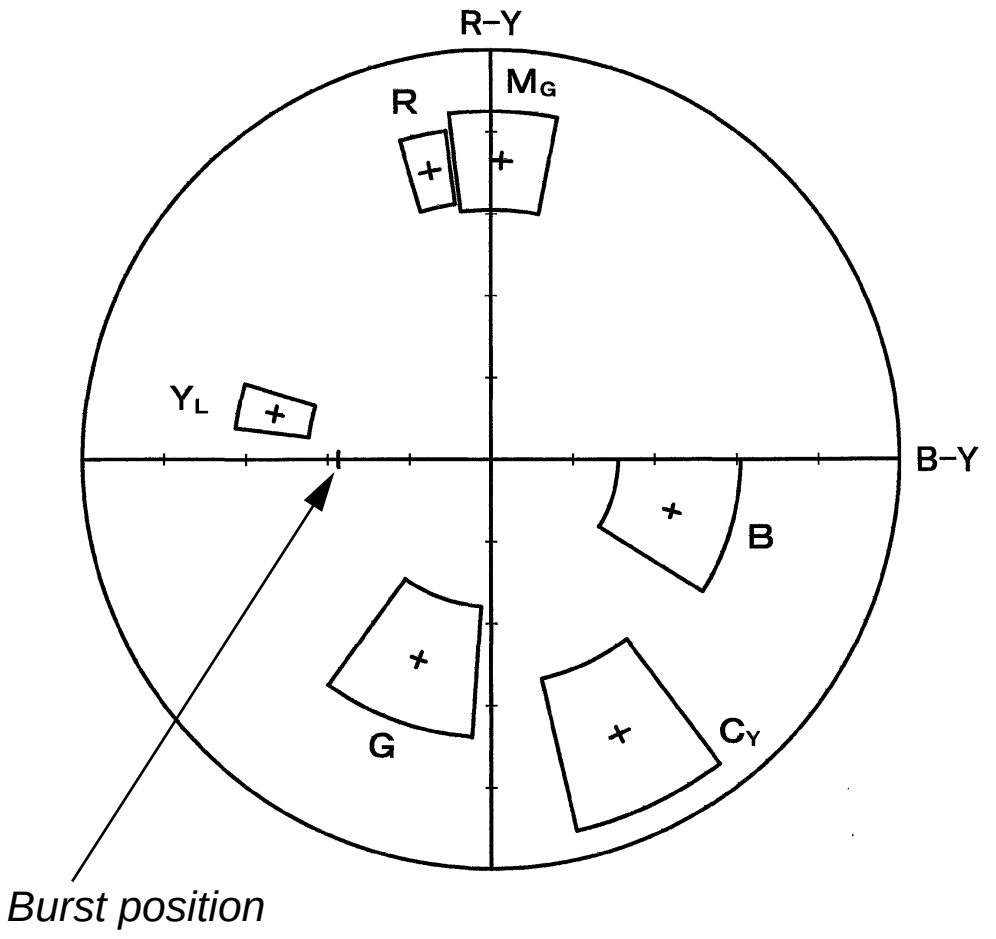<br> R−Y<br>MG<br>R<br>YL<br>B−Y<br>B<br>G<br>CY<br>Burst position<br>***For PAL model***<br>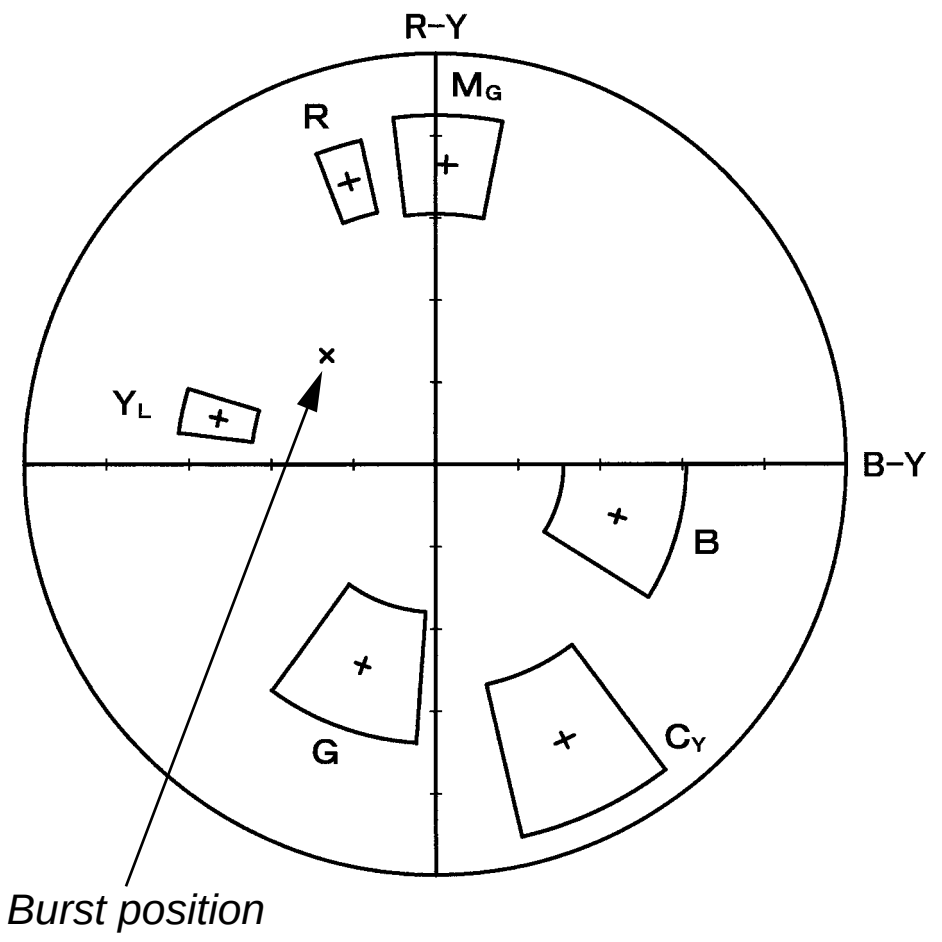<br> R−Y<br>MG<br>R<br>YL<br>B−Y<br>B<br>G<br>CY<br>Burst position<br>*Fig. 5-1-12.* |

☞ : Added portion.

<table>
<tr><th>Page</th><th>Type S</th><th>Type M</th></tr>
<tr><td>5-21</td><td>
<b>9. Auto White Balance Adjustment</b><br>
Adjust to the proper auto white balance output data.<br>
If it is not correct, auto white balance and color reproducibility will be poor.
<table>
<tr><td>Subject</td><td>Clear chart<br>(Color reproduction adjustment frame)</td></tr>
<tr><td>Filter</td><td>Filter C14 for color temperature correction</td></tr>
<tr><td>Measurement Point</td><td>Display data of page 1 (Note4)</td></tr>
<tr><td>Measuring Instrument</td><td>Adjustment remote commander</td></tr>
<tr><td>Adjustment Page</td><td>F</td></tr>
<tr><td>Adjustment Address</td><td>42, 43</td></tr>
<tr><td>Specified Value</td><td>1/6 CCD NTSC model:<br>R ratio: 2AC0 to 2B40<br>B ratio: 5E20 to 5EE0<br>1/6 CCD PAL model:<br>R ratio: 2B40 to 2BC0<br>B ratio: 61A0 to 6260<br>1/4 CCD NTSC model:<br>R ratio: 2D40 to 2DC0<br>B ratio: 5D20 to 5DE0<br>1/4 CCD PAL model:<br>R ratio: 2B40 to 2BC0<br>B ratio: 5D20 to 5DE0</td></tr>
</table>
<b>Adjusting method:</b>
<table>
<tr><th>Order</th><th>Page</th><th>Address</th><th>Data</th><th>Procedure</th></tr>
<tr><td>1</td><td></td><td></td><td></td><td>Place the C14 filter for color temperature correction on the lens.</td></tr>
<tr><td>2</td><td>0</td><td>01</td><td>01</td><td>Set the data.</td></tr>
<tr><td>3</td><td>F</td><td>B8</td><td></td><td>Write down the data.</td></tr>
<tr><td>4</td><td>F</td><td>B8</td><td></td><td>Set the following data, and press PAUSE button.<br>2B: 1/6 CCD NTSC model<br>2B: 1/6 CCD PAL model<br>2D: 1/4 CCD NTSC model<br>2B: 1/4 CCD PAL model</td></tr>
<tr><td>5</td><td>F</td><td>B9</td><td></td><td>Write down the data.</td></tr>
<tr><td>6</td><td>F</td><td>B9</td><td></td><td>Set the following data, and press PAUSE button.<br>00: 1/6 CCD NTSC model<br>80: 1/6 CCD PAL model<br>80: 1/4 CCD NTSC model<br>80: 1/4 CCD PAL model</td></tr>
<tr><td>7</td><td>F</td><td>BA</td><td></td><td>Write down the data.</td></tr>
<tr><td>8</td><td>F</td><td>BA</td><td></td><td>Set the following data, and press PAUSE button.<br>5E: 1/6 CCD NTSC model<br>62: 1/6 CCD PAL model<br>5D: 1/4 CCD NTSC model<br>5D: 1/4 CCD PAL model</td></tr>
<tr><td>9</td><td>F</td><td>BB</td><td></td><td>Write down the data.</td></tr>
</table>
</td><td>
<table>
<tr><td>Specified Value</td><td>1/6 CCD NTSC model:<br>R ratio: 2AC0 to 2B40<br>B ratio: 5E20 to 5EE0<br>1/6 CCD PAL model:<br>R ratio: 2B40 to 2BC0<br>B ratio: 61A0 to 6260<br>1/4 CCD NTSC model (CCD type S): ☞<br>R ratio: 2D40 to 2DC0<br>B ratio: 5D20 to 5DE0<br>☞ 1/4 CCD NTSC model (CCD type M):<br>R ratio: 2A40 to 2AC0<br>B ratio: 6120 to 61E0<br>1/4 CCD PAL model:<br>R ratio: 2B40 to 2BC0<br>B ratio: 5D20 to 5DE0</td></tr>
</table>
<b>Adjusting method:</b>
<table>
<tr><th>Order</th><th>Page</th><th>Address</th><th>Data</th><th>Procedure</th></tr>
<tr><td>4</td><td>F</td><td>B8</td><td></td><td>Set the following data, and press PAUSE button.<br>2B: 1/6 CCD NTSC model<br>2B: 1/6 CCD PAL model<br>2D: 1/4 CCD NTSC model (CCD type S) ☞<br>2A: 1/4 CCD NTSC model (CCD type M) ☞<br>2B: 1/4 CCD PAL model</td></tr>
<tr><td>8</td><td>F</td><td>BA</td><td></td><td>Set the following data, and press PAUSE button.<br>5E: 1/6 CCD NTSC model<br>62: 1/6 CCD PAL model<br>5D: 1/4 CCD NTSC model (CCD type S) ☞<br>61: 1/4 CCD NTSC model (CCD type M) ☞<br>5D: 1/4 CCD PAL model</td></tr>
</table>
</td></tr>
</table>

# SECTION 6. REPAIR PARTS LIST

## 6-1. EXPLODED VIEWS

☞ : Added portion. ▨ : Changed portion. ☛ : Deleted portion.

| Page | Old | New |
|---|---|---|
| 6-5 | **6-1-5. CABINET (R) SECTION**<br>*TRV model*<br>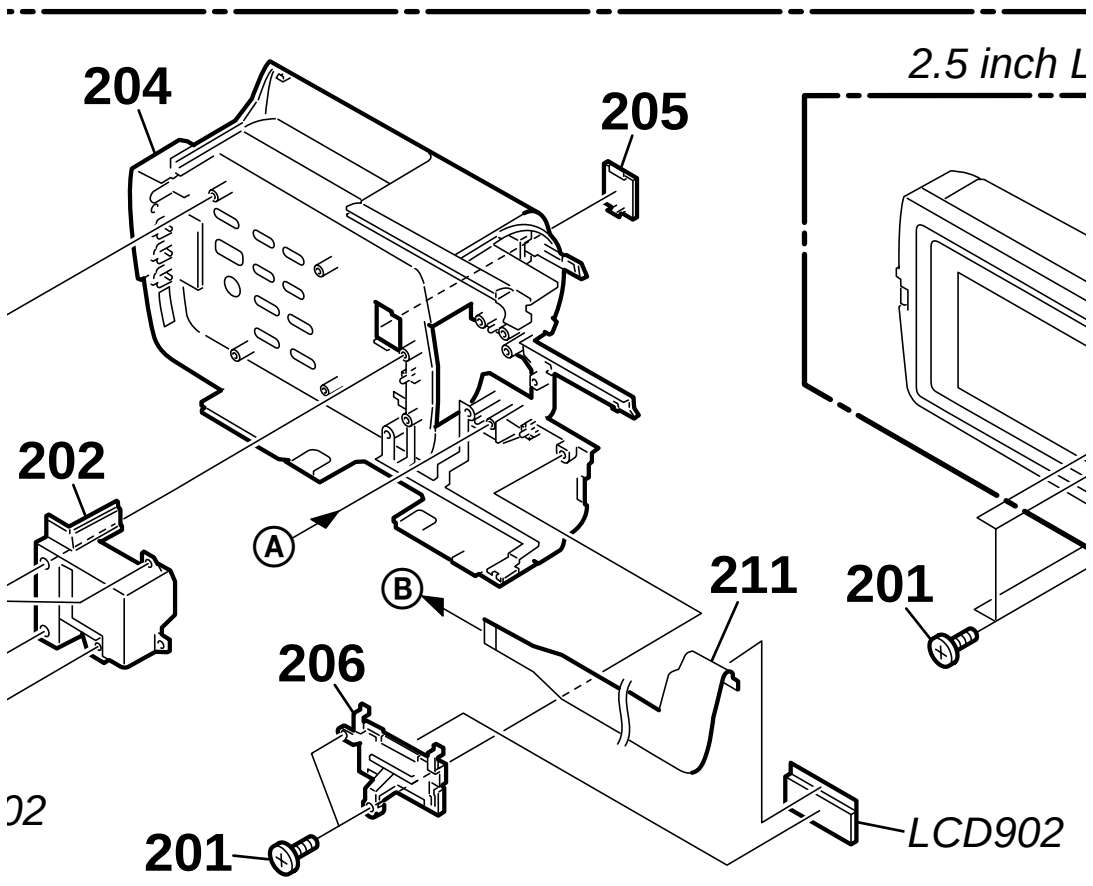<br> 2.5 inch L<br>204<br>205<br>202<br>A<br>B<br>211<br>201<br>206<br>02<br>201<br>LCD902<br>Ref. No. Part No. Description Remarks<br>210 3-065-434-41 WINDOW (10), LCD (TR718E)<br>211 1-680-201-11 FP-260 FLEXIBLE BOARD (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)<br>———— ————<br>LCD902 1-803-844-91 DISPLAY PANEL, LIQUID CRYSTAL (TR618/TR618E/TR718E/TR728E/TR818)<br>LCD902 1-804-255-11 DISPLAY PANEL, LIQUID CRYSTAL (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) | **6-1-5. CABINET (R) SECTION**<br>*TRV model*<br>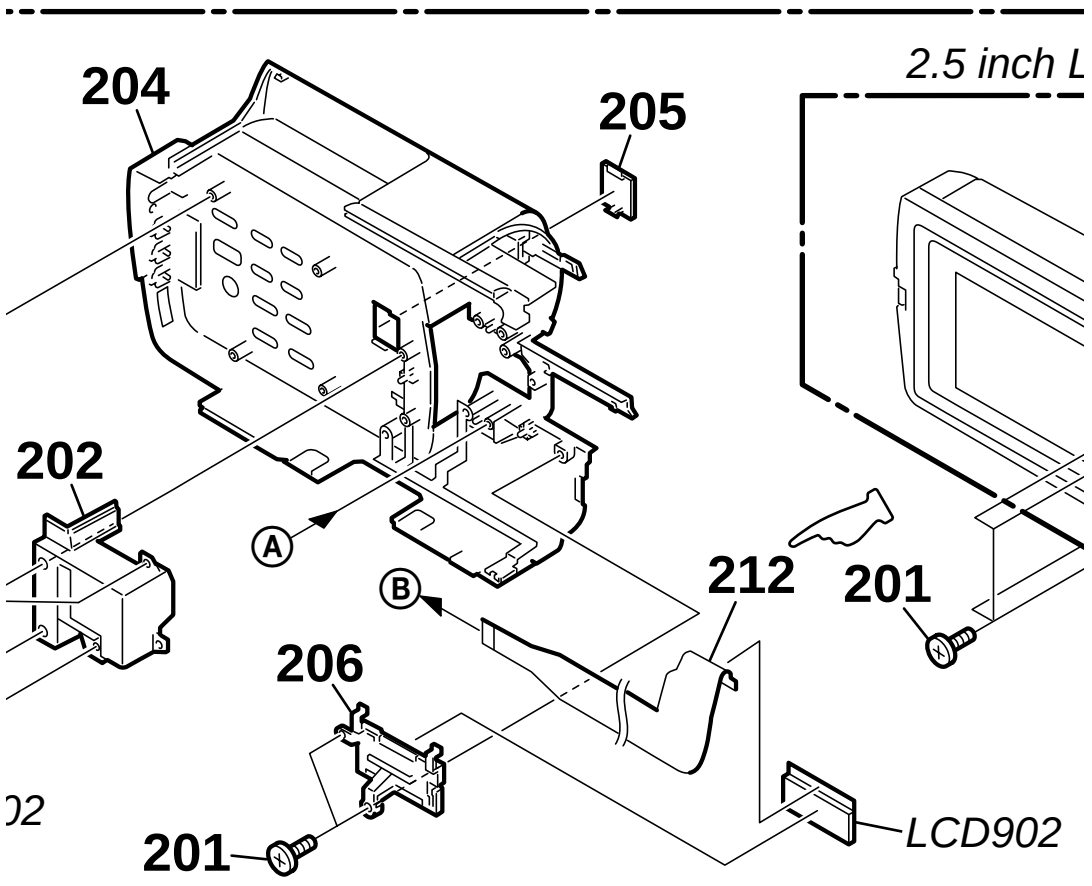<br> 2.5 inch L<br>204<br>205<br>202<br>A<br>B<br>212<br>201<br>206<br>02<br>201<br>LCD902<br>Ref. No. Part No. Description Remarks<br>210 3-065-434-41 WINDOW (10), LCD (TR718E)<br>———— ———— ☛<br>212 A-7096-917-A LCD BLOCK ASSY (FOR SERVICE) ☞ (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)<br>LCD902 1-803-844-91 DISPLAY PANEL, LIQUID CRYSTAL (TR618/TR618E/TR718E/TR728E/TR818)<br>———— ———— ☛ |
|  | **Type S** | **Type M** |
| 6-2 | **6-1-2. CABINET (L) SECTION**<br>65 A-7096-402-A VC-251 (N-B) BOARD, COMPLETE (SERVICE)(TR618)<br>65 A-7096-403-A VC-251 (N-C) BOARD, COMPLETE (SERVICE)(TR818)<br>65 A-7096-404-A VC-251 (P-B) BOARD, COMPLETE (SERVICE)(TR618E/TR718E/TR728E)<br>65 A-7096-405-A VC-251 (N-VMMB) BOARD, COMPLETE (SERVICE)(TRV68/TRV78/TRV88/TRV98)<br>65 A-7096-406-A VC-251 (P-VMMB) BOARD, COMPLETE (SERVICE)(TRV78E/TRV98E)<br>65 A-7096-409-A VC-251 (N-VB) BOARD, COMPLETE (SERVICE)(TRV49/TRV58)<br>65 A-7096-456-A VC-251 (P-VB) BOARD, COMPLETE (SERVICE)(TRV49E/TRV58E/TRV59E) | **6-1-2. CABINET (L) SECTION**<br>65 A-7096-402-A VC-251 (N-B) BOARD, COMPLETE (SERVICE)(TR618)<br>65 A-7096-403-A VC-251 (N-C) BOARD, COMPLETE (SERVICE)(TR818)<br>65 A-7096-404-A VC-251 (P-B) BOARD, COMPLETE (SERVICE)(TR618E/TR718E/TR728E)<br>65 A-7096-815-A VC-251 (N-VMMB-M) BOARD, COMPLETE (SERVICE)(TRV68/TRV78/TRV88/TRV98) ▨<br>65 A-7096-406-A VC-251 (P-VMMB) BOARD, COMPLETE (SERVICE)(TRV78E/TRV98E)<br>65 A-7096-409-A VC-251 (N-VB) BOARD, COMPLETE (SERVICE)(TRV49/TRV58)<br>65 A-7096-456-A VC-251 (P-VB) BOARD, COMPLETE (SERVICE)(TRV49E/TRV58E/TRV59E) |
| 6-7 | **6-1-7. LENS SECTION**<br>311 3-953-817-01 RUBBER (F), SEAL (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)<br>———— ————<br>311 3-968-054-11 RUBBER (FM), SHIELD (TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E)<br>IC191 A-7031-040-A CCD BLOCK ASSY (TR618/TRV49/TRV58)<br>IC191 A-7031-043-A CCD BLOCK ASSY (TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E)<br>IC191 A-7031-049-A CCD BLOCK ASSY (TRV78E/TRV98E)<br>IC191 A-7031-207-A CCD BLOCK ASSY (TR818/TRV68/TRV78/TRV88/TRV98)<br>———— ———— | **6-1-7. LENS SECTION**<br>311 3-953-817-01 RUBBER (F), SEAL(TR818/TRV78E/TRV98E) ▨<br>311 3-953-817-11 RUBBER (F), SEAL (TRV68/TRV78/TRV88/TRV98) ☞<br>311 3-968-054-11 RUBBER (FM), SHIELD (TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E)<br>IC191 A-7031-040-A CCD BLOCK ASSY (TR618/TRV49/TRV58)<br>IC191 A-7031-043-A CCD BLOCK ASSY (TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E)<br>IC191 A-7031-049-A CCD BLOCK ASSY (TRV78E/TRV98E)<br>IC191 A-7031-207-A CCD BLOCK ASSY (TR818/TRV68/TRV78/TRV88/TRV98)<br>IC191 A-7031-301-A CCD BLOCK ASSY (TRV68/TRV78/TRV88/TRV98) ☞ |

## 6-2. ELECTRICAL PARTS LIST

☞ : Added portion.

| Page | Type S | | | | Type M | | | |
|---|---|---|---|---|---|---|---|---|
| | Ref. No. | Part No. | Description | Remarks | Ref. No. | Part No. | Description | Remarks |
| | | | CD-286 BOARD, COMPLETE | | | | CD-286 BOARD, COMPLETE | |
| | | | *********************** | | | | *********************** | |
| | | | (IC191 is not included in this mounted board) | | | | (IC191 is not included in this mounted board) | |
| | | | < IC > | | | | < IC > | |
| 6-11 | IC191 | A-7031-040-A | CCD BLOCK ASSY (TR618/TRV49/TRV58) | | IC191 | A-7031-040-A | CCD BLOCK ASSY (TR618/TRV49/TRV58) | |
| | IC191 | A-7031-043-A | CCD BLOCK ASSY | (TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E) | IC191 | A-7031-043-A | CCD BLOCK ASSY | (TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E) |
| | IC191 | A-7031-049-A | CCD BLOCK ASSY (TRV78E/TRV98E) | | IC191 | A-7031-049-A | CCD BLOCK ASSY (TRV78E/TRV98E) | |
| | IC191 | A-7031-207-A | CCD BLOCK ASSY | (TR818/TRV68/TRV78/TRV88/TRV98) | IC191 | A-7031-207-A | CCD BLOCK ASSY | (TR818/TRV68/TRV78/TRV88/TRV98) |
| | | | | | IC191 | A-7031-301-A | CCD BLOCK ASSY | (TRV68/TRV78/TRV88/TRV98) |
| | | | | | ☞ | | | |

### Type M

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| | A-7096-402-A | VC-251 BOARD, COMPLETE (SERVICE)(TR618) | | | |
| | | ************************************** | | | |
| | A-7096-403-A | VC-251 BOARD, COMPLETE (SERVICE)(TR818) | | | |
| | | ************************************** | | | |
| | A-7096-404-A | VC-251 BOARD, COMPLETE (SERVICE) | | | (TR618E/TR718E/TR728E) |
| | | ************************************** | | | |
| | A-7096-815-A | VC-251 BOARD, COMPLETE (SERVICE) | | | (TRV68/TRV78/TRV88/TRV98) |
| | | ************************************** | | | |
| | A-7096-406-A | VC-251 BOARD, COMPLETE (SERVICE) | | | (TRV78E/TRV98E) |
| | | ************************************** | | | |
| | A-7096-409-A | VC-251 BOARD, COMPLETE (SERVICE) | | | (TRV49/TRV58) |
| | | ************************************** | | | |
| | A-7096-456-A | VC-251 BOARD, COMPLETE (SERVICE) | | | (TRV49E/TRV58E/TRV59E) |
| | | ************************************** | | | |
| | | | | | (Ref.No.;10000 Series) |
| | | < CAPACITOR > | | | |
| C001 | 1-162-960-11 | CERAMIC CHIP | 220PF | 10% | 50V |
| C002 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C003 | 1-119-923-81 | CERAMIC CHIP | 0.047uF | 10% | 10V |
| C004 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C005 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C008 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C009 | 1-164-172-11 | CERAMIC CHIP | 0.0056uF | 10% | 25V |
| C010 | 1-107-819-11 | CERAMIC CHIP | 0.022uF | 10% | 16V |
| C011 | 1-107-819-11 | CERAMIC CHIP | 0.022uF | 10% | 16V |
| C012 | 1-162-962-11 | CERAMIC CHIP | 470PF | 10% | 50V |
| C013 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V |
| C014 | 1-162-965-11 | CERAMIC CHIP | 0.0015uF | 10% | 50V |
| C015 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C016 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C018 | 1-162-962-11 | CERAMIC CHIP | 470PF | 10% | 50V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C019 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C020 | 1-117-808-91 | CERAMIC CHIP | 10uF | 10% | 10V |
| C021 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C022 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C023 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C024 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C025 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C026 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C027 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V |
| C028 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V |
| C029 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V |
| C030 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C031 | 1-127-760-11 | CERAMIC CHIP | 4.7uF | 10% | 6.3V |
| C032 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C033 | 1-127-760-11 | CERAMIC CHIP | 4.7uF | 10% | 6.3V |
| C034 | 1-162-974-11 | CERAMIC CHIP | 0.01uF | | 50V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C035 | 1-127-760-11 | CERAMIC CHIP | 4.7uF | 10% | 6.3V |
| C036 | 1-127-760-11 | CERAMIC CHIP | 4.7uF | 10% | 6.3V |
| C037 | 1-127-760-11 | CERAMIC CHIP | 4.7uF | 10% | 6.3V |
| C038 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V |
| C039 | 1-135-149-21 | TANTALUM CHIP | 2.2uF | 20% | 10V |
| C040 | 1-119-750-11 | TANTAL. CHIP | 22uF | 20% | 6.3V |
| C041 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C042 | 1-164-506-11 | CERAMIC CHIP | 4.7uF | | 16V |
| C043 | 1-164-506-11 | CERAMIC CHIP | 4.7uF | | 16V |
| C045 | 1-119-749-11 | TANTAL. CHIP | 33uF | 20% | 4V |
| C046 | 1-119-750-11 | TANTAL. CHIP | 22uF | 20% | 6.3V |
| C047 | 1-164-505-11 | CERAMIC CHIP | 2.2uF | | 16V |
| | | | | | (TR818/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C048 | 1-164-156-11 | CERAMIC CHIP | 0.1uF | | 25V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C049 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V |

## Type M

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| C050 | 1-135-149-21 | TANTALUM CHIP | 2.2uF | 20% | 10V |
| C051 | 1-119-750-11 | TANTAL. CHIP | 22uF | 20% | 6.3V |
| C052 | 1-104-851-91 | TANTAL. CHIP | 10uF | 20% | 10V |
| C053 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C054 | 1-164-506-11 | CERAMIC CHIP | 4.7uF | | 16V |
| C055 | 1-164-506-11 | CERAMIC CHIP | 4.7uF | | 16V |
| C056 | 1-164-346-11 | CERAMIC CHIP | 1uF | | 16V<br>(TR818) |
| C057 | 1-164-505-11 | CERAMIC CHIP | 2.2uF | | 16V<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C058 | 1-164-505-11 | CERAMIC CHIP | 2.2uF | | 16V<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C059 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C061 | 1-119-750-11 | TANTAL. CHIP | 22uF | 20% | 6.3V |
| C071 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C072 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C101 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C102 | 1-104-752-11 | TANTAL. CHIP | 33uF | 20% | 6.3V |
| C103 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C104 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C106 | 1-107-819-11 | CERAMIC CHIP | 0.022uF | 10% | 16V |
| C107 | 1-107-819-11 | CERAMIC CHIP | 0.022uF | 10% | 16V |
| C108 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C109 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C110 | 1-162-927-11 | CERAMIC CHIP | 100PF | 5% | 50V |
| C111 | 1-164-217-11 | CERAMIC CHIP | 150PF | 5% | 50V |
| C112 | 1-162-926-11 | CERAMIC CHIP | 82PF | 5% | 50V |
| C113 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C114 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C115 | 1-162-927-11 | CERAMIC CHIP | 100PF | 5% | 50V |
| C116 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C117 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C118 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C119 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V |
| C121 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C123 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C124 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C125 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C126 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C127 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C128 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C129 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V |
| C130 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C131 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C132 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C133 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C134 | 1-117-863-11 | CERAMIC CHIP | 0.47uF | 10% | 6.3V |
| C135 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C136 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C151 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C152 | 1-115-566-11 | CERAMIC CHIP | 4.7uF | 10% | 10V |
| C154 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C155 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C156 | 1-164-392-11 | CERAMIC CHIP | 390PF | 5% | 50V |
| C157 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C158 | 1-135-210-11 | TANTALUM CHIP | 4.7uF | 20% | 10V |
| C160 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C161 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C162 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C163 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C164 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C165 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C166 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C167 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C168 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C169 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C170 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C171 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C172 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C173 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C174 | 1-117-863-11 | CERAMIC CHIP | 0.47uF | 10% | 6.3V |
| C175 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C176 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C177 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C178 | 1-162-965-11 | CERAMIC CHIP | 0.0015uF | 10% | 50V |
| C182 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C184 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C185 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C186 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C187 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C188 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C190 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C192 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C194 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C195 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C221 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C223 | 1-110-446-11 | ELECT CHIP | 10uF | 20% | 6.3V |
| C225 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C233 | 1-110-423-11 | ELECT CHIP | 2.2uF | 20% | 25V |
| C235 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C238 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C246 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C247 | 1-125-838-11 | ELECT CHIP | 2.2uF | 20% | 6.3V |
| C248 | 1-125-838-11 | ELECT CHIP | 2.2uF | 20% | 6.3V |
| C249 | 1-126-246-11 | ELECT CHIP | 220uF | 20% | 4V |
| C250 | 1-126-246-11 | ELECT CHIP | 220uF | 20% | 4V |
| C252 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V |
| C271 | 1-162-919-11 | CERAMIC CHIP | 22PF | 5% | 50V |
| C272 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C273 | 1-162-919-11 | CERAMIC CHIP | 22PF | 5% | 50V |
| C274 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V<br>(TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E) |
| C275 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V<br>(TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E) |
| C276 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |

**Type M**

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| C277 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C278 | 1-131-861-91 | TANTAL. CHIP | 4.7uF | 20% | 20V |
| C279 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V |
| C280 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C281 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C282 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C283 | 1-162-913-11 | CERAMIC CHIP | 8PF | 0.50PF | 50V |
| C284 | 1-115-339-11 | CERAMIC CHIP | 0.1uF | 10% | 50V |
| C285 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C286 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C287 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C288 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C289 | 1-107-826-11 | CERAMIC CHIP | 0.1uF | 10% | 16V |
| C290 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C291 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C292 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| C293 | 1-162-962-11 | CERAMIC CHIP | 470PF | 10% | 50V |
| C294 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C295 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C296 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C297 | 1-104-847-11 | TANTAL. CHIP | 22uF | 20% | 4V |
| C302 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C303 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V |
| C304 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V |
| C305 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C306 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C307 | 1-162-962-11 | CERAMIC CHIP | 470PF | 10% | 50V |
| C308 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C309 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| C310 | 1-126-205-11 | ELECT CHIP | 47uF | 20% | 6.3V |
| C311 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C312 | 1-117-863-11 | CERAMIC CHIP | 0.47uF | 10% | 6.3V |
| C313 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C315 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V |
| C316 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C317 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C318 | 1-127-688-21 | TANTAL. CHIP | 10uF | 20% | 6.3V |
| C319 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C352 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V |
| C354 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V |
| C357 | 1-124-778-00 | ELECT CHIP | 22uF | 20% | 6.3V |
| C358 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C359 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V |
| C361 | 1-126-607-11 | ELECT CHIP | 47uF | 20% | 4V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C363 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C364 | 1-117-863-11 | CERAMIC CHIP | 0.47uF | 10% | 6.3V |
| C365 | 1-124-778-00 | ELECT CHIP | 22uF | 20% | 6.3V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C366 | 1-126-602-11 | ELECT CHIP | 3.3uF | 20% | 50V |
| C367 | 1-124-779-00 | ELECT CHIP | 10uF | 20% | 16V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C369 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C371 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C372 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| | | | | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C374 | 1-124-778-00 | ELECT CHIP | 22uF | 20% | 6.3V |
| C375 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C380 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C381 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C383 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C384 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| C385 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C386 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C389 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| C390 | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 16V |
| C392 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C393 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C394 | 1-117-863-11 | CERAMIC CHIP | 0.47uF | 10% | 6.3V |
| C396 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C397 | 1-162-925-11 | CERAMIC CHIP | 68PF | 5% | 50V |
| C398 | 1-115-467-11 | CERAMIC CHIP | 0.22uF | 10% | 10V |
| C401 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C402 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C403 | 1-162-915-11 | CERAMIC CHIP | 10PF | 0.5PF | 50V |
| C404 | 1-162-915-11 | CERAMIC CHIP | 10PF | 0.5PF | 50V |
| C405 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C406 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C407 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C408 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C410 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C411 | 1-164-943-11 | CERAMIC CHIP | 0.01uF | 10% | 16V |
| C451 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C452 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C453 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C454 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C455 | 1-107-819-11 | CERAMIC CHIP | 0.022uF | 10% | 16V |
| C456 | 1-107-819-11 | CERAMIC CHIP | 0.022uF | 10% | 16V |
| C457 | 1-119-923-81 | CERAMIC CHIP | 0.047uF | 10% | 10V |
| C458 | 1-126-603-11 | ELECT CHIP | 4.7uF | 20% | 35V |
| C459 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C460 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C461 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C462 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C463 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C464 | 1-162-960-11 | CERAMIC CHIP | 220PF | 10% | 50V |
| C465 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V |
| C466 | 1-125-777-11 | CERAMIC CHIP | 0.1uF | 10% | 10V |
| C467 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V |
| C468 | 1-162-962-11 | CERAMIC CHIP | 470PF | 10% | 50V |
| C469 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V |
| C470 | 1-125-837-91 | CERAMIC CHIP | 1uF | 10% | 6.3V |
| C471 | 1-162-966-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V |
| C472 | 1-162-968-11 | CERAMIC CHIP | 0.0047uF | 10% | 50V |
| | | | | | (TR618E/TR718E/TR728E/TRV49E/ TRV58E/TRV59E/TRV78E/TRV98E) |

## Type M

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| C473 | 1-107-819-11 | CERAMIC CHIP 0.022uF 10% | 16V<br>(TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E) |
| C474 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% | 10V |
| C475 | 1-107-819-11 | CERAMIC CHIP 0.022uF 10% | 16V |
| C476 | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% | 16V |
| C477 | 1-119-923-81 | CERAMIC CHIP 0.047uF 10% | 10V |
| C478 | 1-119-923-81 | CERAMIC CHIP 0.047uF 10% | 10V |
| C479 | 1-164-505-11 | CERAMIC CHIP 2.2uF | 16V |
| C480 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% | 10V |
| C481 | 1-164-937-11 | CERAMIC CHIP 0.001uF 10% | 16V |
| C482 | 1-164-937-11 | CERAMIC CHIP 0.001uF 10% | 16V |
| C483 | 1-162-962-11 | CERAMIC CHIP 470PF 10% | 50V |
| C484 | 1-162-962-11 | CERAMIC CHIP 470PF 10% | 50V |
| C501 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% | 10V |
| C502 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% | 10V |
| C503 | 1-126-607-11 | ELECT CHIP 47uF 20% | 4V |
| C504 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% | 10V |
| C506 | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% | 16V |
| C507 | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% | 16V |
| C508 | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% | 16V |
| C509 | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% | 16V |
| C510 | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% | 16V |
| C511 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% | 10V |
| C512 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% | 10V |
| C513 | 1-107-819-11 | CERAMIC CHIP 0.022uF 10% | 16V |
| C514 | 1-162-969-11 | CERAMIC CHIP 0.0068uF 10% | 25V |
| C515 | 1-162-919-11 | CERAMIC CHIP 22PF 5% | 50V |
| C516 | 1-162-918-11 | CERAMIC CHIP 18PF 5% | 50V |
| C517 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% | 10V |
| C518 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% | 10V |
| C519 | 1-119-923-81 | CERAMIC CHIP 0.047uF 10% | 10V<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| C601 | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% | 16V |
| C602 | 1-127-688-21 | TANTAL. CHIP 10uF 20% | 6.3V |
| C603 | 1-125-837-91 | CERAMIC CHIP 1uF 10% | 6.3V |
| C701 | 1-135-639-21 | ELECT CHIP 47uF 20% | 6.3V |
| C708 | 1-115-566-11 | CERAMIC CHIP 4.7uF 10% | 10V<br>(EXCEPT TR818) |
|  |  | < CONNECTOR > |  |
| * CN001 | 1-764-177-11 | PIN, CONNECTOR (SMD)(1.5MM) 7P |  |
| CN101 | 1-766-346-21 | CONNECTOR, FFC/FPC 16P |  |
| CN271 | 1-779-331-11 | CONNECTOR, FFC/FPC 14P |  |
| CN301 | 1-750-360-21 | CONNECTOR, FFC/FPC (ZIF) 24P |  |
| CN701 | 1-794-998-21 | PIN, CONNECTOR 20P | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| CN702 | 1-766-350-21 | CONNECTOR, FFC/FPC 20P |  |
| CN703 | 1-766-354-21 | CONNECTOR, FFC/FPC 24P |  |
| CN704 | 1-766-644-21 | CONNECTOR, FFC/FPC 8P |  |
| CN706 | 1-766-340-21 | CONNECTOR, FFC/FPC 10P |  |
| CN707 | 1-766-342-21 | CONNECTOR, FFC/FPC 12P |  |
| CN708 | 1-779-334-11 | CONNECTOR, FFC/FPC 20P (TR818) |  |
| CN709 | 1-815-031-11 | CONNECTOR, FFC/FPC (ZIF) 24P |  |
| CN710 | 1-750-076-21 | CONNECTOR, FFC/FPC 12P |  |
| CN711 | 1-764-704-21 | CONNECTOR, FFC/FPC (LIF) 5P |  |
| CN712 | 1-766-345-21 | CONNECTOR, FFC/FPC 15P |  |

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| CN713 | 1-774-711-41 | CONNECTOR, BOARD TO BOARD 20P |  |
| * CN715 | 1-778-283-11 | CONNECTOR, FFC/FPC 4P (EXCEPT TR818) |  |
|  |  | < DIODE > |  |
| D001 | 8-719-421-27 | DIODE MA728-(K8).S0 |  |
| D002 | 8-719-062-16 | DIODE 01ZA8.2(TPL3) |  |
| D004 | 8-719-073-03 | DIODE MA8082-(K8).S0 |  |
| D005 | 8-719-078-02 | DIODE 1SS357(T3SONY1) |  |
| D006 | 8-719-081-19 | DIODE 1SS383(T5RSONY1) |  |
| D007 | 8-719-081-19 | DIODE 1SS383(T5RSONY1) |  |
| D010 | 8-719-078-02 | DIODE 1SS357(T3SONY1) | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| D151 | 8-719-081-25 | DIODE JDV3C11(TPH3) |  |
| D152 | 8-719-081-25 | DIODE JDV3C11(TPH3) |  |
| D271 | 8-719-073-01 | DIODE MA111-(K8).S0 | (TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E) |
| D272 | 8-719-082-63 | DIODE 1SV329(TPL3) |  |
| D301 | 8-719-073-01 | DIODE MA111-(K8).S0 |  |
| D501 | 8-719-421-67 | DIODE MA132WK-(K8).S0 |  |
| D503 | 8-719-421-27 | DIODE MA728-(K8).S0 |  |
| D504 | 8-719-073-01 | DIODE MA111-(K8).S0 |  |
| D702 | 8-719-062-16 | DIODE 01ZA8.2(TPL3) |  |
|  |  | < PIN CONNECTOR > |  |
| ET101 | 1-815-032-21 | PIN, CONNECTOR (CASE, SHIELD) |  |
| ET102 | 1-815-032-21 | PIN, CONNECTOR (CASE, SHIELD) |  |
|  |  | < FUSE > |  |
| ⚠F001 | 1-576-406-21 | FUSE, MICRO (1.4A) (1608) |  |
| ⚠F002 | 1-576-406-21 | FUSE, MICRO (1.4A) (1608) |  |
| ⚠F003 | 1-576-406-21 | FUSE, MICRO (1.4A) (1608) |  |
| ⚠F004 | 1-576-406-21 | FUSE, MICRO (1.4A) (1608) | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
|  |  | < FERRITE BEAD > |  |
| FB001 | 1-414-760-21 | FERRITE 0UH |  |
| FB003 | 1-414-760-21 | FERRITE 0UH | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| FB101 | 1-414-228-11 | FERRITE 0UH |  |
| FB102 | 1-414-228-11 | FERRITE 0UH |  |
| FB152 | 1-414-760-21 | FERRITE 0UH |  |
| FB153 | 1-414-760-21 | FERRITE 0UH |  |
| FB154 | 1-414-760-21 | FERRITE 0UH |  |
| FB221 | 1-414-760-21 | FERRITE 0UH |  |
| FB271 | 1-414-760-21 | FERRITE 0UH | (TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E) |
| FB273 | 1-500-284-21 | FERRITE 0UH |  |
| FB274 | 1-500-284-21 | FERRITE 0UH |  |
| FB275 | 1-414-760-21 | FERRITE 0UH |  |
| FB276 | 1-500-284-21 | FERRITE 0UH |  |
| FB601 | 1-414-760-21 | FERRITE 0UH |  |

**Note :**
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

**Note :**
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

## Type M

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| | | < IC > | |
| IC001 | 8-752-090-20 | IC CXA3057R-T6 | |
| IC101 | 8-752-093-69 | IC CXA3265R-T4 | |
| IC151 | 6-700-453-01 | IC HG76C012FL | |
| IC153 | 6-800-230-01 | IC MB90099PFV-G-114-BND | |
| IC221 | 8-759-599-37 | IC AN2225FHQ-EB | |
| IC271 | 8-752-386-72 | IC CXD2444R-T4 | |
| IC272 | 8-759-699-92 | IC AD80013AJSTRL | |
| IC301 | 8-759-637-96 | IC MPC17A135DTAEL | |
| IC302 | 8-759-681-42 | IC NJM12902V(TE2) | |
| IC351 | 8-752-102-58 | IC CXA3285BR-T6 | |
| IC401 | 8-759-593-47 | IC AK6417AM-E2 | (TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) |
| IC401 | 8-759-640-87 | IC BR9016RFV-E2 | (TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E) |
| IC402 | 8-759-836-63 | IC MB91191RPFF-G-166-BN | |
| IC451 | 8-759-640-85 | IC CXA8096R-TBM | |
| IC502 | 8-759-424-79 | IC S-8423YFS-T2 | (TRV49/TRV58/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| IC502 | 8-759-660-94 | IC NJU7285AV-TE2 | (TR618/TR618E/TR718E/TR728E/TR818/TRV49E/TRV58E/TRV59E) |
| IC503 | 8-752-921-65 | IC CXP921048A-033R-T6 | |
| IC504 | 8-759-653-63 | IC S-817A36ANB-CUZ-T2 | |
| IC601 | 8-759-713-19 | IC BH2222FV-E2 | |
| | | < COIL > | |
| L001 | 1-416-669-11 | INDUCTOR 22uH | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| L002 | 1-416-670-11 | INDUCTOR 33uH | |
| L003 | 1-412-056-11 | INDUCTOR 4.7uH | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| L004 | 1-416-669-11 | INDUCTOR 22uH | |
| L005 | 1-419-354-21 | INDUCTOR 22uH | |
| L006 | 1-416-670-11 | INDUCTOR 33uH | |
| L007 | 1-419-354-21 | INDUCTOR 22uH | |
| L008 | 1-469-524-91 | INDUCTOR 4.7uH | |
| L009 | 1-469-524-91 | INDUCTOR 4.7uH | |
| L010 | 1-469-524-91 | INDUCTOR 4.7uH | |
| L011 | 1-469-524-91 | INDUCTOR 4.7uH | |
| L012 | 1-414-400-41 | INDUCTOR 22uH | |
| L013 | 1-469-524-91 | INDUCTOR 4.7uH | |
| L014 | 1-469-526-91 | INDUCTOR 22uH | |
| L016 | 1-414-400-41 | INDUCTOR 22uH | |
| L101 | 1-414-406-41 | INDUCTOR 220uH | |
| L102 | 1-412-952-11 | INDUCTOR 12uH | |
| L103 | 1-469-526-91 | INDUCTOR 22uH | |
| L104 | 1-414-406-41 | INDUCTOR 220uH | |
| L151 | 1-469-570-21 | INDUCTOR 10uH | |
| L152 | 1-469-570-21 | INDUCTOR 10uH | |
| L154 | 1-469-570-21 | INDUCTOR 10uH | |
| L155 | 1-469-570-21 | INDUCTOR 10uH | |
| L156 | 1-412-945-11 | INDUCTOR 3.3uH | |
| L221 | 1-469-525-91 | INDUCTOR 10uH | |

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| L224 | 1-469-525-91 | INDUCTOR 10uH | |
| L271 | 1-469-570-21 | INDUCTOR 10uH | |
| L272 | 1-469-525-91 | INDUCTOR 10uH | |
| L301 | 1-469-525-91 | INDUCTOR 10uH | |
| L303 | 1-469-570-21 | INDUCTOR 10uH | |
| L601 | 1-469-570-21 | INDUCTOR 10uH | |
| L705 | 1-419-860-21 | INDUCTOR 10uH | (EXCEPT TR818) |
| | | < TRANSISTOR > | |
| Q001 | 8-729-038-05 | TRANSISTOR HN1K02FU(T5RSONY) | |
| Q002 | 8-729-051-49 | TRANSISTOR TPC8305(TE12L) | |
| Q003 | 8-729-101-07 | TRANSISTOR 2SB798-T1-DLDK | |
| Q004 | 8-729-042-31 | TRANSISTOR UN9213J-(K8).SO | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q004 | 8-729-052-64 | TRANSISTOR DTC144EHT2L | (TR618/TR618E/TR718E/TR728E/TR818) |
| Q006 | 8-729-054-82 | TRANSISTOR XN09D6100LS0 | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q007 | 8-729-043-60 | TRANSISTOR CPH6102-TL | |
| Q008 | 8-729-054-82 | TRANSISTOR XN09D6100LS0 | |
| Q009 | 8-729-054-82 | TRANSISTOR XN09D6100LS0 | |
| Q010 | 8-729-054-82 | TRANSISTOR XN09D6100LS0 | |
| Q011 | 8-729-054-82 | TRANSISTOR XN09D6100LS0 | |
| Q012 | 8-729-054-82 | TRANSISTOR XN09D6100LS0 | |
| Q014 | 8-729-053-52 | TRANSISTOR N1C01FE-Y/GR(TPLR3) | |
| Q015 | 8-729-101-07 | TRANSISTOR 2SB798-T1-DLDK | |
| Q016 | 8-729-042-26 | TRANSISTOR 2SB1462J-QR(K8).SO | |
| Q018 | 8-729-042-31 | TRANSISTOR UN9213J-(K8).SO | (TRV68/TRV78/TRV88/TRV98) |
| Q018 | 8-729-052-64 | TRANSISTOR DTC144EHT2L | |
| Q019 | 8-729-053-54 | TRANSISTOR HN1A01FE-Y/GR(TPLR3) | |
| Q020 | 8-729-053-52 | TRANSISTOR HN1C01FE-Y/GR(TPLR3) | (TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q021 | 8-729-042-28 | TRANSISTOR 2SD2216J-QR(K8).SO | (TRV68/TRV78/TRV88/TRV98) |
| Q021 | 8-729-052-66 | TRANSISTOR 2SC4617HT2L | |
| Q022 | 8-729-042-28 | TRANSISTOR 2SD2216J-QR(K8).SO | (TRV68/TRV78/TRV88/TRV98) |
| Q022 | 8-729-052-65 | TRANSISTOR 2SC4617HT2L | |
| Q023 | 8-729-042-26 | TRANSISTOR 2SB1462J-QR(K8).SO | (TRV68/TRV78/TRV88/TRV98) |
| Q023 | 8-729-052-65 | TRANSISTOR 2SA1774HT2L | |
| Q026 | 8-729-053-54 | TRANSISTOR HN1A01FE-Y/GR(TPLR3) | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q027 | 8-729-042-28 | TRANSISTOR 2SD2216J-QR(K8).SO | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q028 | 8-729-042-28 | TRANSISTOR 2SD2216J-QR(K8).SO | |
| Q071 | 8-729-042-31 | TRANSISTOR UN9213J-(K8).SO | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q072 | 8-729-041-76 | TRANSISTOR NDS356AP | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |

**Type M**

| Ref. No. | Part No. | Description | | Remarks |
|---|---|---|---|---|
| Q101 | 8-729-047-19 | TRANSISTOR | 2SA1965-S-TL | |
| Q102 | 8-729-042-26 | TRANSISTOR | 2SB1462J-QR(K8).SO | (TRV68/TRV78/TRV88/TRV98) |
| Q102 | 8-729-052-65 | TRANSISTOR | 2SA1774HT2L | |
| Q103 | 8-729-054-48 | TRANSISTOR | HN1B04FE-Y/GR(TPLR3) | |
| Q104 | 8-729-042-31 | TRANSISTOR | UN9213J-(K8).SO | (TRV68/TRV78/TRV88/TRV98) |
| Q104 | 8-729-052-64 | TRANSISTOR | DTC144EHT2L | |
| Q105 | 8-729-053-58 | TRANSISTOR | RN1904FE(TPLR3) | |
| Q107 | 8-729-042-26 | TRANSISTOR | 2SB1462J-QR(K8).SO | (TRV68/TRV78/TRV88/TRV98) |
| Q107 | 8-729-052-65 | TRANSISTOR | 2SA1774HT2L | |
| Q151 | 8-729-053-53 | TRANSISTOR | HN1B04FE-Y/GR(TPLR3) | |
| Q152 | 8-729-042-26 | TRANSISTOR | 2SB1462J-QR(K8).SO | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q153 | 8-729-042-26 | TRANSISTOR | 2SB1462J-QR(K8).SO | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q154 | 8-729-042-26 | TRANSISTOR | 2SA1832F-Y/GR(TPL3) | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q156 | 8-729-042-26 | TRANSISTOR | 2SB1462J-QR(K8).SO | (TRV68/TRV78/TRV88/TRV98) |
| Q156 | 8-729-052-65 | TRANSISTOR | 2SA1774HT2L | |
| Q158 | 8-729-042-26 | TRANSISTOR | 2SB1462J-QR(K8).SO | (TRV68/TRV78/TRV88/TRV98) |
| Q158 | 8-729-052-65 | TRANSISTOR | 2SA1774HT2L | |
| Q301 | 8-729-052-66 | TRANSISTOR | 2SC4617HT2L | |
| Q301 | 8-729-042-28 | TRANSISTOR | 2SD2216J-QR(K8).SO | (TRV68/TRV78/TRV88/TRV98) |
| Q302 | 8-729-054-51 | TRANSISTOR | RN2910FE(TPLR3) | |
| Q303 | 8-729-042-28 | TRANSISTOR | 2SD2216J-QR(K8).SO | (TRV68/TRV78/TRV88/TRV98) |
| Q303 | 8-729-052-66 | TRANSISTOR | 2SC4617HT2L | |
| Q352 | 8-729-052-63 | TRANSISTOR | DTC143THT2L | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q354 | 8-729-053-52 | TRANSISTOR | HN1C01FE-Y/GR(TPLR3) | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| Q355 | 8-729-053-56 | TRANSISTOR | RN4990FE(TPLR3) | |
| Q451 | 8-729-042-28 | TRANSISTOR | 2SD2216J-QR(K8).SO | (TRV68/TRV78/TRV88/TRV98) |
| Q451 | 8-729-052-66 | TRANSISTOR | 2SC4617HT2L | |
| Q501 | 8-729-041-43 | TRANSISTOR | HN1L02FU(TE85R) | |
| Q701 | 8-729-042-23 | TRANSISTOR | UN9213J-(K8).SO | (TRV68/TRV78/TRV88/TRV98) |
| Q701 | 8-729-052-64 | TRANSISTOR | DTC144EHT2L | |
| Q702 | 8-729-043-94 | TRANSISTOR | CPH3106-PM-TL | (EXCEPT TR818) |
| Q703 | 8-729-028-26 | TRANSISTOR | 2SK1829(TE85L) | (EXCEPT TR818) |
| Q704 | 8-729-903-53 | TRANSISTOR | 2SB1132-T1 00Q | |
| Q705 | 8-729-042-28 | TRANSISTOR | 2SD2216J-QR(K8).SO | (TRV68/TRV78/TRV88/TRV98) |
| Q705 | 8-729-052-66 | TRANSISTOR | 2SC4617HT2L | |

| Ref. No. | Part No. | Description | | | | Remarks |
|---|---|---|---|---|---|---|
| | | < RESISTOR > | | | | |
| R001 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W | |
| R002 | 1-216-839-11 | METAL CHIP | 33K | 5% | 1/16W | |
| R003 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W | |
| R006 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W | |
| R007 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W | |
| R008 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W | |
| R010 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W | |
| R011 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W | |
| R012 | 1-216-839-11 | METAL CHIP | 33K | 5% | 1/16W | |
| R013 | 1-216-801-11 | METAL CHIP | 22 | 5% | 1/16W | |
| R014 | 1-216-829-11 | METAL CHIP | 4.7K | 5% | 1/16W | |
| R016 | 1-216-832-11 | METAL CHIP | 8.2K | 5% | 1/16W | |
| R017 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W | |
| R018 | 1-216-831-11 | METAL CHIP | 6.8K | 5% | 1/16W | |
| R020 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R021 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R022 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W | |
| R023 | 1-216-839-11 | METAL CHIP | 33K | 5% | 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/ TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R025 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W | |
| R026 | 1-218-879-11 | METAL CHIP | 22K | 0.5% | 1/10W | |
| R027 | 1-218-871-11 | METAL CHIP | 10K | 0.5% | 1/10W | |
| R028 | 1-218-881-11 | METAL CHIP | 27K | 0.5% | 1/10W | |
| R029 | 1-216-829-11 | METAL CHIP | 4.7K | 5% | 1/16W | |
| R031 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W | |
| R032 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W | |
| R033 | 1-218-879-11 | METAL CHIP | 22K | 0.5% | 1/10W | |
| R034 | 1-218-871-11 | METAL CHIP | 10K | 0.5% | 1/10W | |
| R035 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W | |
| R036 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W | |
| R037 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W | |
| R038 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W | |
| R039 | 1-216-864-91 | SHORT | 0 | | | (TR618/TR618E/TR718E/TR728E/TRV49/ TRV49E/TRV58/TRV58E/TRV59E) |
| R040 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W | |
| R041 | 1-218-891-11 | METAL CHIP | 68K | 0.5% | 1/10W | (TR818/TRV78E/TRV98E) |
| R041 | 1-218-895-11 | METAL CHIP | 100K | 0.5% | 1/10W | (TR618/TR618E/TR718E/TR728E/TRV49/ TRV49E/TRV58/TRV58E/TRV59E/ TRV68/TRV78/TRV88/TRV98) |
| R042 | 1-218-871-11 | METAL CHIP | 10K | 0.5% | 1/10W | (TR618/TR618E/TR718E/TR728E/TRV49/ TRV49E/TRV58/TRV58E/TRV59E/ TRV68/TRV78/TRV88/TRV98) |
| R042 | 1-218-879-11 | METAL CHIP | 22K | 0.5% | 1/10W | (TR818/TRV78E/TRV98E) |
| R043 | 1-218-903-11 | METAL CHIP | 220K | 0.5% | 1/10W | |
| R044 | 1-218-895-11 | METAL CHIP | 100K | 0.5% | 1/10W | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R045 | 1-218-885-11 | METAL CHIP | 39K | 0.5% | 1/10W | (TRV68/TRV78/TRV88/TRV98) |

### Type M

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| R045 | 1-218-887-11 | METAL CHIP 47K 0.5% 1/10W | (TR818/TRV78E/TRV98E) |
| R046 | 1-218-867-11 | METAL CHIP 6.8K 0.5% 1/10W | (TRV68/TRV78/TRV88/TRV98) |
| R046 | 1-218-877-11 | METAL CHIP 18K 0.5% 1/10W | (TR818/TRV78E/TRV98E) |
| R047 | 1-216-845-11 | METAL CHIP 100K 5% 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R048 | 1-216-845-11 | METAL CHIP 100K 5% 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R049 | 1-216-864-91 | SHORT 0 | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R050 | 1-218-903-11 | METAL CHIP 220K 0.5% 1/10W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R051 | 1-218-891-11 | METAL CHIP 68K 0.5% 1/10W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R052 | 1-216-801-11 | METAL CHIP 22 5% 1/16W | |
| R053 | 1-216-864-91 | SHORT 0 | |
| R054 | 1-218-873-11 | METAL CHIP 12K 0.5% 1/10W | |
| R055 | 1-218-895-11 | METAL CHIP 100K 0.5% 1/10W | |
| R071 | 1-216-857-11 | METAL CHIP 1M 5% 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R072 | 1-216-857-11 | METAL CHIP 1M 5% 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R073 | 1-216-864-11 | METAL CHIP 1 5% 1/16W | (TR818) |
| R073 | 1-216-864-91 | SHORT 0 | (TR618/TR618E/TR718E/TR728E) |
| R074 | 1-218-446-11 | METAL CHIP 1 5% 1/16W | (TR818) |
| R101 | 1-216-804-11 | METAL CHIP 39 5% 1/16W | (TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E) |
| R101 | 1-216-806-11 | RES-CHIP 56 5% 1/16W | (TR618/TRV818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) |
| R102 | 1-216-818-11 | METAL CHIP 560 5% 1/16W | |
| R105 | 1-216-809-11 | METAL CHIP 100 5% 1/16W | |
| R106 | 1-216-838-11 | METAL CHIP 27K 5% 1/16W | |
| R107 | 1-216-825-11 | METAL CHIP 2.2K 5% 1/16W | |
| R108 | 1-216-829-11 | METAL CHIP 4.7K 5% 1/16W | |
| R109 | 1-216-838-11 | METAL CHIP 27K 5% 1/16W | |
| R110 | 1-216-813-11 | METAL CHIP 220 5% 1/16W | |
| R111 | 1-216-813-11 | METAL CHIP 220 5% 1/16W | |
| R112 | 1-216-814-11 | METAL CHIP 270 5% 1/16W | |
| R113 | 1-216-813-11 | METAL CHIP 220 5% 1/16W | |
| R115 | 1-216-839-11 | METAL CHIP 33K 5% 1/16W | |
| R116 | 1-216-826-11 | METAL CHIP 2.7K 5% 1/16W | |
| R117 | 1-216-826-11 | METAL CHIP 2.7K 5% 1/16W | |
| R118 | 1-218-899-11 | METAL CHIP 150K 0.5% 1/16W | |
| R120 | 1-216-837-11 | METAL CHIP 22K 5% 1/16W | |
| R121 | 1-216-853-11 | METAL CHIP 470K 5% 1/16W | |
| R122 | 1-216-853-11 | METAL CHIP 470K 5% 1/16W | |
| R123 | 1-216-837-11 | METAL CHIP 22K 5% 1/16W | |
| R124 | 1-216-838-11 | METAL CHIP 27K 5% 1/16W | |
| R154 | 1-216-833-11 | METAL CHIP 10K 5% 1/16W | |
| R155 | 1-216-822-11 | METAL CHIP 1.2K 5% 1/16W | |
| R156 | 1-216-825-11 | METAL CHIP 2.2K 5% 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R157 | 1-216-825-11 | METAL CHIP 2.2K 5% 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R158 | 1-216-825-11 | METAL CHIP 2.2K 5% 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV88/TRV98) |
| R160 | 1-216-825-11 | METAL CHIP 2.2K 5% 1/16W | (EXCEPT TR818) |
| R165 | 1-216-864-91 | SHORT 0 | (TR818) |
| R166 | 1-216-864-91 | SHORT 0 | (TR818) |
| R167 | 1-216-864-91 | SHORT 0 | (TR818) |
| R168 | 1-216-830-11 | METAL CHIP 5.6K 5% 1/16W | |
| R169 | 1-216-821-11 | METAL CHIP 1K 5% 1/16W | |
| R170 | 1-216-831-11 | METAL CHIP 6.8K 5% 1/16W | |
| R171 | 1-216-817-11 | METAL CHIP 470 5% 1/16W | |
| R172 | 1-216-809-11 | METAL CHIP 100 5% 1/16W | |
| R173 | 1-216-840-11 | METAL CHIP 39K 5% 1/16W | |
| R174 | 1-216-820-11 | METAL CHIP 820 5% 1/16W | |
| R175 | 1-216-827-11 | METAL CHIP 3.3K 5% 1/16W | |
| R176 | 1-216-864-91 | SHORT 0 | |
| R177 | 1-216-834-11 | METAL CHIP 12K 5% 1/16W | |
| R178 | 1-216-817-11 | METAL CHIP 470 5% 1/16W | |
| R179 | 1-216-813-11 | METAL CHIP 220 5% 1/16W | |
| R180 | 1-216-830-11 | METAL CHIP 5.6K 5% 1/16W | |
| R181 | 1-216-834-11 | METAL CHIP 12K 5% 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R182 | 1-216-814-11 | METAL CHIP 270 5% 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R183 | 1-216-814-11 | METAL CHIP 270 5% 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R184 | 1-216-834-11 | METAL CHIP 12K 5% 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R185 | 1-216-834-11 | METAL CHIP 12K 5% 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R186 | 1-216-814-11 | METAL CHIP 270 5% 1/16W | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R187 | 1-216-814-11 | METAL CHIP 270 5% 1/16W | (TR818) |
| R188 | 1-216-834-11 | METAL CHIP 12K 5% 1/16W | |
| R189 | 1-216-833-11 | METAL CHIP 10K 5% 1/16W | (EXCEPT TR818) |
| R189 | 1-216-834-11 | METAL CHIP 12K 5% 1/16W | (TR818) |
| R190 | 1-216-814-11 | METAL CHIP 270 5% 1/16W | (TR818) |
| R190 | 1-216-817-11 | METAL CHIP 470 5% 1/16W | (EXCEPT TR818) |
| R191 | 1-216-814-11 | METAL CHIP 270 5% 1/16W | (TR818) |
| R192 | 1-216-834-11 | METAL CHIP 12K 5% 1/16W | |
| R193 | 1-216-857-11 | METAL CHIP 1M 5% 1/16W | |

**Type M**

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| R195 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| R196 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| R197 | 1-216-834-11 | METAL CHIP | 12K | 5% | 1/16W |
| R198 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R199 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R200 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W |
| R204 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R208 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R216 | 1-216-807-11 | METAL CHIP | 68 | 5% | 1/16W |
| R229 | 1-216-807-11 | METAL CHIP | 68 | 5% | 1/16W |
| R232 | 1-218-879-11 | METAL CHIP | 22K | 0.5% | 1/16W |
| R271 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/TRV59E) |
| R274 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R275 | 1-216-864-91 | SHORT | 0 | | (TR818/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R280 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W |
| R281 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W |
| R301 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R302 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R304 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R306 | 1-216-797-11 | METAL CHIP | 10 | 5% | 1/16W |
| R307 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W |
| R308 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R309 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W |
| R310 | 1-216-849-11 | METAL CHIP | 220K | 5% | 1/16W |
| R311 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W |
| R312 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W |
| R313 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R314 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W |
| R316 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W |
| R317 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R318 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R319 | 1-216-815-11 | METAL CHIP | 330 | 5% | 1/16W |
| R321 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R322 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W |
| R323 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R351 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R353 | 1-216-864-91 | SHORT | 0 | | (TR818/TR618/TR618E/TR718E/TR728E) |
| R354 | 1-216-809-11 | METAL CHIP | 100 | 5% | 1/16W<br>(TR818/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R356 | 1-216-864-91 | SHORT | 0 | | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R358 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(TR818/TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R363 | 1-216-832-11 | METAL CHIP | 8.2K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R364 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R368 | 1-216-847-11 | METAL CHIP | 150K | 5% | 1/16W |
| R372 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R373 | 1-216-853-11 | METAL CHIP | 470K | 5% | 1/16W |
| R379 | 1-216-820-11 | METAL CHIP | 820 | 5% | 1/16W |
| R382 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R401 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R402 | 1-216-854-11 | METAL CHIP | 560K | 5% | 1/16W |
| R403 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R404 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R408 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R411 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R417 | 1-216-825-11 | METAL CHIP | 2.2K | 5% | 1/16W |
| R420 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R423 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R428 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R431 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R433 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R451 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R452 | 1-216-851-11 | METAL CHIP | 330K | 5% | 1/16W |
| R455 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R457 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R458 | 1-217-671-11 | METAL CHIP | 1 | 5% | 1/10W |
| R459 | 1-217-671-11 | METAL CHIP | 1 | 5% | 1/10W |
| R460 | 1-217-671-11 | METAL CHIP | 1 | 5% | 1/10W |
| R461 | 1-216-812-11 | METAL CHIP | 180 | 5% | 1/16W |
| R462 | 1-216-811-11 | METAL CHIP | 150 | 5% | 1/16W |
| R464 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R465 | 1-216-829-11 | METAL CHIP | 4.7K | 5% | 1/16W |
| R466 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E) |
| R466 | 1-216-864-91 | SHORT | 0 | | (TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) |
| R467 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W<br>(TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) |
| R467 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W<br>(TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E) |
| R468 | 1-216-827-11 | METAL CHIP | 3.3K | 5% | 1/16W |
| R469 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R470 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E) |
| R470 | 1-216-864-91 | SHORT | 0 | | (TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) |
| R471 | 1-218-446-11 | METAL CHIP | 1 | 5% | 1/16W |
| R472 | 1-218-446-11 | METAL CHIP | 1 | 5% | 1/16W |
| R474 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R480 | 1-216-835-11 | METAL CHIP | 15K | 5% | 1/16W<br>(TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) |
| R480 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W<br>(TR618E/TR718E/TR728E/TRV49E/TRV58E/TRV59E/TRV78E/TRV98E) |
| R481 | 1-216-829-11 | METAL CHIP | 4.7K | 5% | 1/16W |
| R501 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R504 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R513 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R516 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R519 | 1-218-903-11 | METAL CHIP | 220K | 0.5% | 1/16W |
| R520 | 1-218-911-11 | METAL CHIP | 470K | 0.5% | 1/16W |

## Type M

| Ref. No. | Part No. | Description | | | Remarks |
|---|---|---|---|---|---|
| R521 | 1-218-911-11 | METAL CHIP | 470K | 0.5% | 1/16W |
| R525 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R531 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W |
| R542 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W |
| R543 | 1-216-854-11 | METAL CHIP | 560K | 5% | 1/16W |
| R544 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R547 | 1-216-857-11 | METAL CHIP | 1M | 5% | 1/16W |
| R552 | 1-219-570-11 | RES-CHIP | 10M | 5% | 1/16W |
| R554 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W |
| R558 | 1-216-817-11 | METAL CHIP | 470 | 5% | 1/16W |
| R559 | 1-216-803-11 | METAL CHIP | 33 | 5% | 1/16W |
| R611 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(TR618/TR818) |
| R611 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W<br>(TRV49/TRV58) |
| R611 | 1-216-841-11 | METAL CHIP | 47K | 5% | 1/16W<br>(TRV68/TRV78/TRV88/TRV98) |
| R611 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(TRV49E/TRV58E/TRV59E) |
| R612 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(TR618E/TR718E/TR728E/TRV78E/TRV98E) |
| R612 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W<br>(TRV49E/TRV58E/TRV59E) |
| R612 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) |
| R613 | 1-216-833-11 | METAL CHIP | 10K | 5% | 1/16W<br>(TR618/TR618E/TR718E/TR728E) |
| R613 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W<br>(TR818/TRV78E/TRV98E) |
| R613 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/<br>TRV68/TRV78/TRV88/TRV98) |
| R614 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W<br>(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/<br>TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R614 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(TR818) |
| R701 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W<br>(EXCEPT TR818) |
| R702 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W<br>(EXCEPT TR818) |
| R703 | 1-216-845-11 | METAL CHIP | 100K | 5% | 1/16W<br>(EXCEPT TR818) |
| R704 | 1-216-795-11 | RES-CHIP | 6.8 | 5% | 1/16W |
| R705 | 1-216-830-11 | METAL CHIP | 5.6K | 5% | 1/16W |
| R706 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W |
| R707 | 1-216-837-11 | METAL CHIP | 22K | 5% | 1/16W |
| R708 | 1-216-795-11 | RES-CHIP | 6.8 | 5% | 1/16W |
| R709 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W<br>(TR818) |
| R710 | 1-216-821-11 | METAL CHIP | 1K | 5% | 1/16W<br>(TR818) |
| R711 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W<br>(TRV68/TRV78/TRV88/TRV98) |
| R712 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W<br>(TRV68/TRV78/TRV88/TRV98) |
| R713 | 1-216-813-11 | METAL CHIP | 220 | 5% | 1/16W<br>(TR818/TRV49/TRV49E/TRV58/TRV58E/TRV59E/<br>TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| R916 | 1-218-881-11 | METAL CHIP | 27K | 0.5% | 1/16W |
| R917 | 1-218-893-11 | METAL CHIP | 82K | 0.5% | 1/16W |

| Ref. No. | Part No. | Description | Remarks |
|---|---|---|---|
| | | < COMPOSITION CIRCUIT BLOCK > | |
| RB101 | 1-239-702-81 | RESISTOR, NETWORK 22K | |
| RB102 | 1-239-698-11 | RESISTOR, NETWORK 10K | |
| RB151 | 1-239-698-11 | RESISTOR, NETWORK 10K | |
| RB221 | 1-239-682-11 | RESISTOR, NETWORK 470 | |
| RB222 | 1-239-686-11 | RESISTOR, NETWORK 1K | |
| RB223 | 1-239-672-81 | RESISTOR, NETWORK 68 | |
| RB272 | 1-234-380-21 | RES, NETWORK 47KX4 (1005) | |
| RB273 | 1-234-372-21 | RES, NETWORK 100X4 (1005) | |
| RB301 | 1-239-708-81 | RESISTOR, NETWORK 68K | |
| RB302 | 1-239-702-81 | RESISTOR, NETWORK 22K | |
| RB351 | 1-239-698-11 | RESISTOR, NETWORK 10K | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/<br>TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| RB352 | 1-239-706-81 | RESISTOR, NETWORK 47K | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/<br>TRV78/TRV78E/TRV88/TRV98/TRV98E) |
| RB401 | 1-234-381-21 | RES, NETWORK 100KX4 (1005) | |
| RB402 | 1-239-694-81 | RESISTOR, NETWORK 4.7K | |
| RB405 | 1-239-706-81 | RESISTOR, NETWORK 47K | |
| RB406 | 1-239-698-11 | RESISTOR, NETWORK 10K | |
| RB407 | 1-239-690-81 | RESISTOR, NETWORK 2.2K | |
| RB451 | 1-234-381-21 | RES, NETWORK 100KX4 (1005) | |
| RB452 | 1-239-698-11 | RESISTOR, NETWORK 10K | |
| RB501 | 1-234-375-21 | RES, NETWORK 1KX4 (1005) | |
| RB502 | 1-234-383-21 | RES, NETWORK 470KX4 (1005) | |
| RB503 | 1-234-383-21 | RES, NETWORK 470KX4 (1005) | |
| RB504 | 1-234-375-21 | RES, NETWORK 1KX4 (1005) | |
| RB505 | 1-239-686-11 | RESISTOR, NETWORK 1K | |
| RB506 | 1-234-378-21 | RES, NETWORK 10KX4 (1005) | (TR618/TR618E/TR718E/TR728E/TR818) |
| RB508 | 1-239-686-11 | RESISTOR, NETWORK 1K | |
| RB509 | 1-239-657-81 | RESISTOR, NETWORK 470K | |
| RB510 | 1-234-375-21 | RES, NETWORK 1KX4 (1005) | |
| RB511 | 1-234-383-21 | RES, NETWORK 470KX4 (1005) | |
| RB514 | 1-239-706-81 | RESISTOR, NETWORK 47K | |
| | | < TRANSFORMER > | |
| T001 | 1-435-252-11 | TRANSFORMER, DC-DC CONVERTER | |
| | | < VARISTOR > | |
| VDR701 | 1-803-974-21 | VARISTOR, CHIP | |
| VDR703 | 1-803-974-21 | VARISTOR, CHIP | |
| VDR704 | 1-803-974-21 | VARISTOR, CHIP | |
| VDR706 | 1-803-974-21 | VARISTOR, CHIP | |
| VDR707 | 1-803-974-21 | VARISTOR, CHIP | |
| | | < VIBRATOR > | |
| X271 | 1-760-320-11 | VIBRATOR, CRYSTAL (28.636363MHz) | (TR618/TR818/TRV49/TRV58/TRV68/TRV78/TRV88/TRV98) |
| X271 | 1-760-321-11 | VIBRATOR, CRYSTAL (28.375MHz) | (TR618E/TR718E/TR728E/TRV49E/<br>TRV58E/TRV59E/TRV78E/TRV98E) |
| X401 | 1-760-655-41 | VIBRATOR, CRYSTAL (20MHz) | |
| X501 | 1-767-980-21 | VIBRATOR, CERAMIC (20MHz) | |
| X502 | 1-760-458-21 | VIBRATOR, CRYSTAL (32.768kHz) | |

## 〈FOR CAMERA COLOR REPRODUCTION ADJUSTMENT〉

**For NTSC model TYPE S**

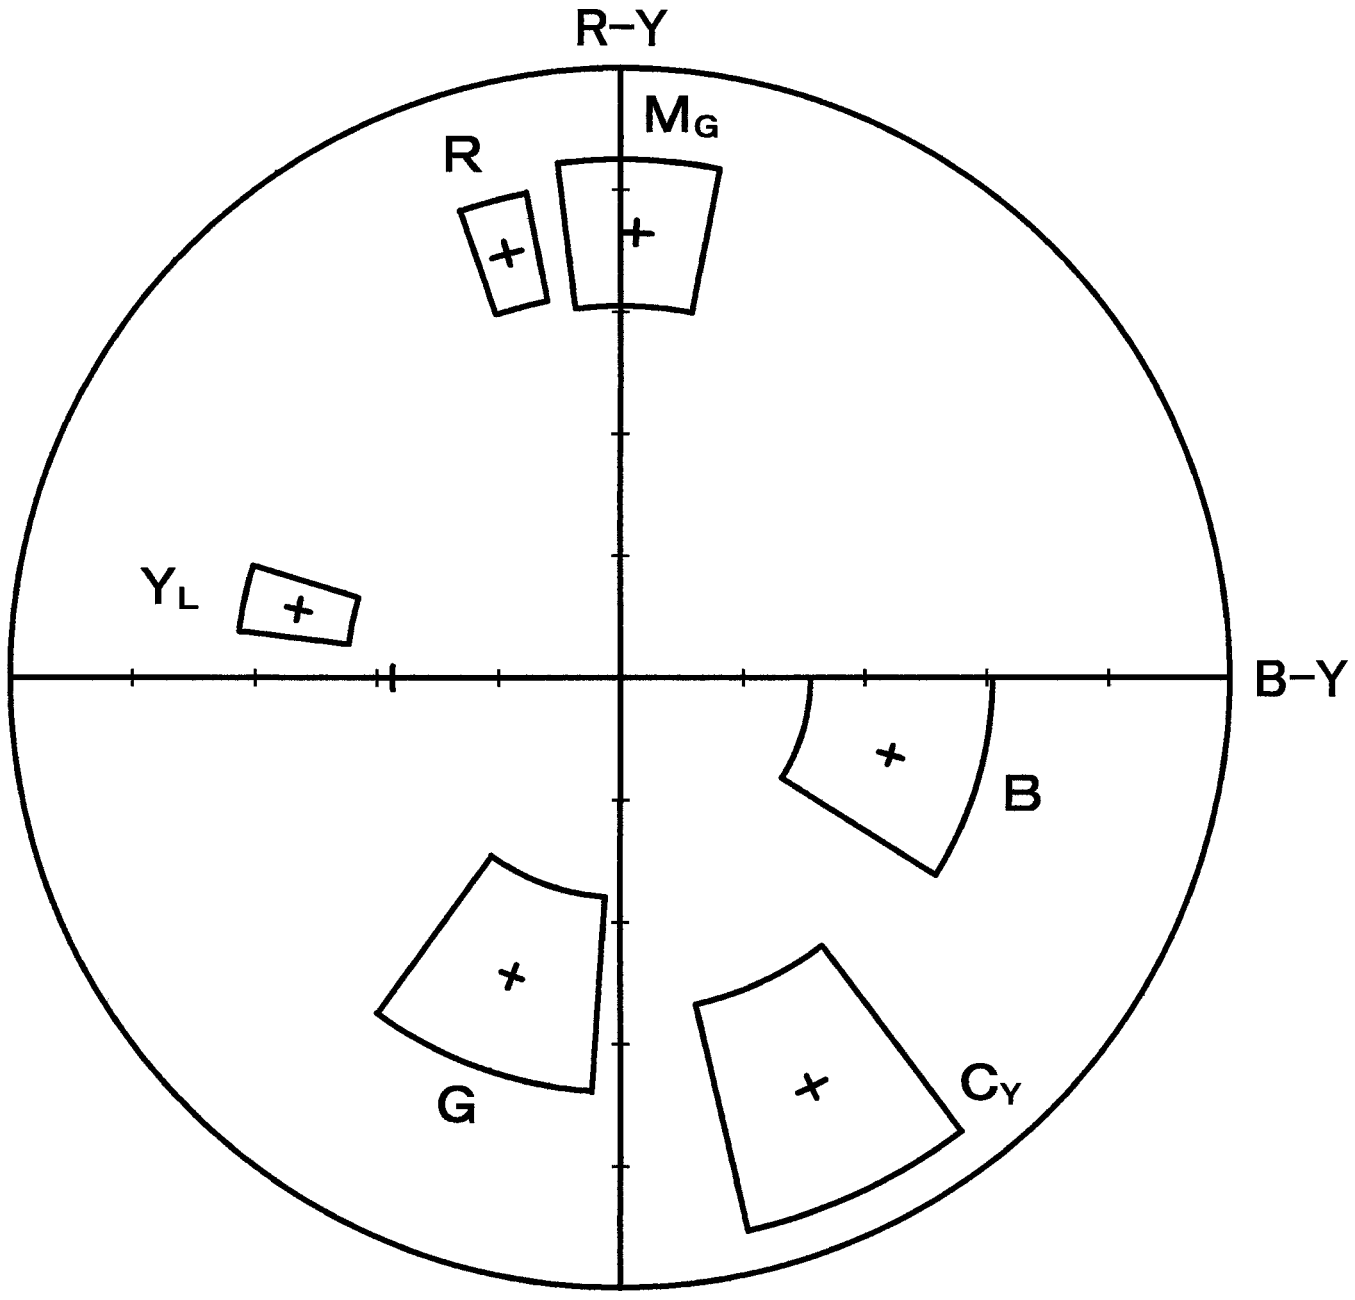

**CCD-TR618/TR818/TRV49/TRV58/
TRV68/TRV78/TRV88/TRV98**

Take a copy of CAMERA COLOR REPRODUCTION FRAME with a clear sheet for use.

**For NTSC model TYPE M**

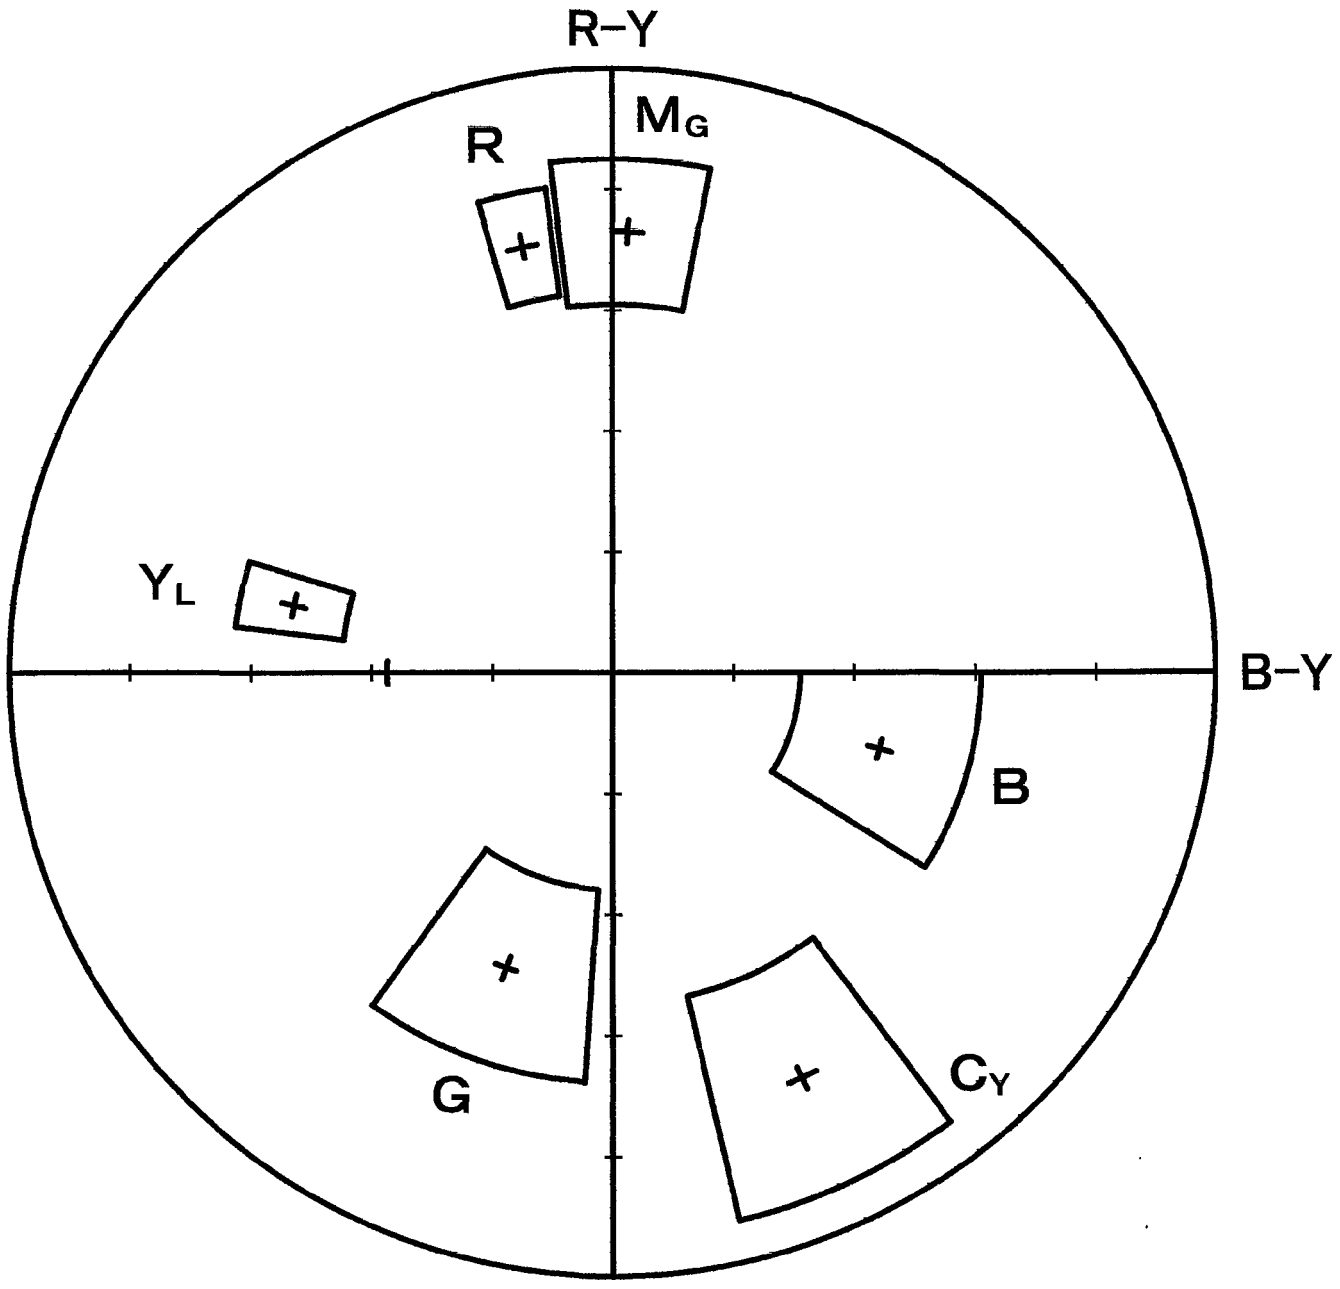

**CCD-TRV68/TRV78/TRV88/TRV98**

## 〈FOR CAMERA COLOR REPRODUCTION ADJUSTMENT〉

**For PAL model**

Take a copy of CAMERA COLOR REPRODUCTION FRAME with a clear sheet for use.

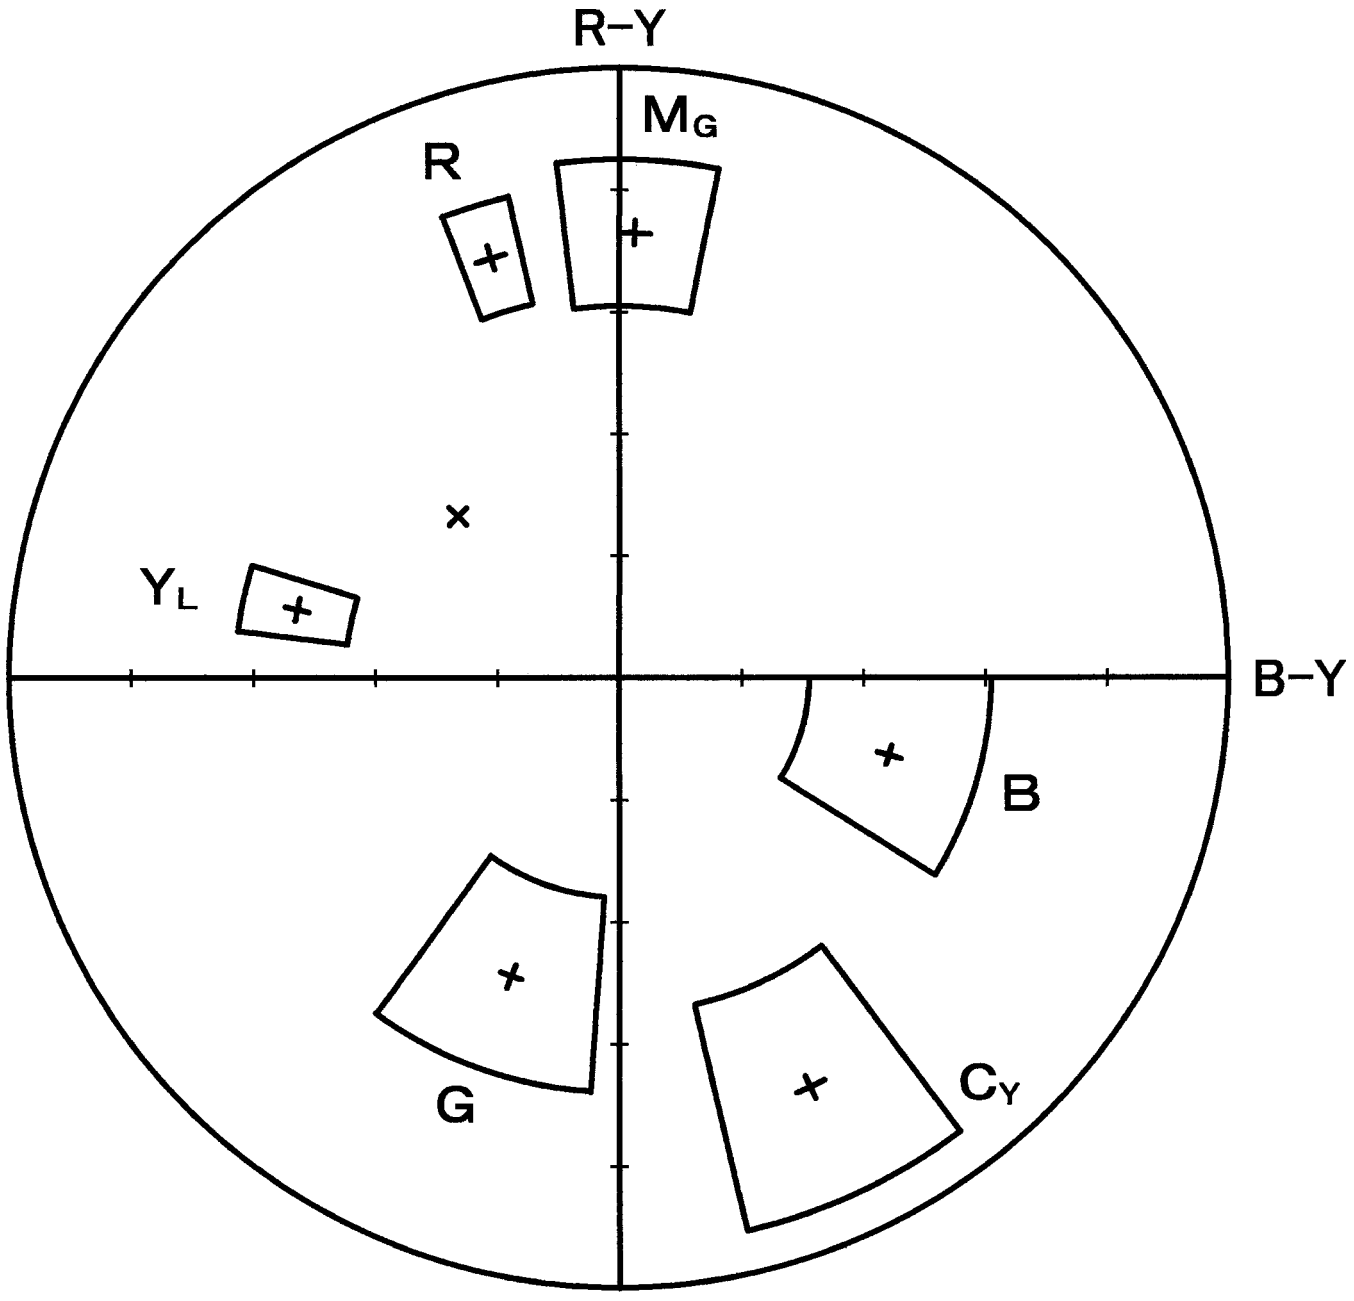

CCD-TR618E/TR718E/TR728E/TRV49E/
TRV58E/TRV59E/TRV78E/TRV98E

Sony EMCS Co.

2001K1600-1

©2001.11

Published by DI Customer Center

# CCD-TR618/TR618E/TR718E/TR728E/TR818
# CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/
# TRV78/TRV78E/TRV88/TRV98/TRV98E
# RMT-708

US Model
CCD-TR818/TRV58/TRV68/TRV88/TRV98
Canadian Model
CCD-TR818/TRV58/TRV68/TRV98
AEP Model
UK Model
CCD-TR718E/TR728E/TRV58E/
TRV59E/TRV78E/TRV98E
E Model
CCD-TR618/TR618E/TR818/TRV49/
TRV49E/TRV58/TRV68/TRV78/
TRV78E/TRV88/TRV98/TRV98E
Australian Model
CCD-TR618E/TRV49E/TRV78E/TRV98E
Hong Kong Model
CCD-TR618E/TRV49/TRV49E/TRV78/
TRV78E/TRV98/TRV98E
Tourist Model
CCD-TRV49/TRV49E/TRV78/
TRV78E/TRV98/TRV98E
Chinese Model
CCD-TR618E/TRV49E/TRV98E
Brazilian Model
CCD-TR818/TRV58/TRV98
Argentina Model
CCD-TR818/TRV58
Korea Model
CCD-TRV49/TRV78/TRV98

SONY

# SERVICE MANUAL

Ver 1.3  2002. 03

## SUPPLEMENT-2

**File this supplement with the Service Manual.**
**(PV01-062)**

The display LCD assembly Type C is added to the conventional Type S. In accordance with the addition of Type C, adjustment and repair parts list are changed.

- For the method of identifying Type C from Type S, see Section "5. Adjustment, 1-6. LCD System Adjustment, 1. LCD Type Check".
- There are combinations of the display LCD assembly and the PD-131 board. Use them in the combination as shown below.

| | INDICATOR MODULE, LIQUID CRYST (LCD901) | PD-131 BOARD, COMPLETE |
|---|---|---|
| **TYPE S** | 1-803-852-31 | A-7074-680-A |
| **TYPE C** | 1-803-859-21 | A-7074-681-A |

# SECTION 5. ADJUSTMENTS

## 5-1. CAMERA SECTION ADJUSTMENT

☞: Added portion.

<table>
<tr><th>Page</th><th>Before change</th><th>After change</th></tr>
<tr>
<td>5-30</td>
<td>1-6. LCD SYSTEM ADJUSTMENT (CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)<br>1. LCD Type Check<br>By measuring the resistor value between Pin ⑥ of CN5502 and GND, the type of LCD can be discriminated.
<table>
<tr><th>Resistor value</th><th>LCD type</th><th>CCD-</th></tr>
<tr><td>1.0kΩ</td><td>2.5 LCD TYPE S (61k)</td><td>TRV49,TRV49E,TRV58,<br>TRV58E,TRV59E,<br>TRV68,TRV78,TRV78E</td></tr>
<tr><td>4.7kΩ</td><td>3.0 LCD TYPE S (123k)</td><td>TRV88</td></tr>
<tr><td>5.6kΩ</td><td>3.5 LCD TYPE S (123k)</td><td>TRV98,TRV98E</td></tr>
</table>
Table. 5-1-9.</td>
<td>1-6. LCD SYSTEM ADJUSTMENT (CCD-TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)<br>1. LCD Type Check<br>By measuring the resistor value between Pin ⑥ of CN5502 and GND, the type of LCD can be discriminated.
<table>
<tr><th>Resistor value</th><th>LCD type</th><th>CCD-</th></tr>
<tr><td>1.0kΩ</td><td>2.5 LCD TYPE S (61k)</td><td rowspan="2">TRV49,TRV49E,TRV58,<br>TRV58E,TRV59E,<br>TRV68,TRV78,TRV78E</td></tr>
<tr><td>☞ 1.5kΩ</td><td>2.5 LCD TYPE C (61k)</td></tr>
<tr><td>4.7kΩ</td><td>3.0 LCD TYPE S (123k)</td><td>TRV88</td></tr>
<tr><td>5.6kΩ</td><td>3.5 LCD TYPE S (123k)</td><td>TRV98,TRV98E</td></tr>
</table>
Table. 5-1-9.</td>
</tr>
<tr>
<td rowspan="2">5-32</td>
<td>4. Contrast Adjustment (PD-131 board)
<table>
<tr><td>Adjustment Address</td><td>ED</td></tr>
<tr><td>Specified Value</td><td>2.5 LCD TYPE S:<br>A = 3.55 ± 0.07V<br>3.0/3.5 LCD TYPE S:<br>A = 3.35 ± 0.07V</td></tr>
</table></td>
<td>4. Contrast Adjustment (PD-131 board)
<table>
<tr><td>Adjustment Address</td><td>ED</td></tr>
<tr><td>Specified Value</td><td>2.5 LCD TYPE S:<br>A = 3.55 ± 0.07V<br>☞ 2.5 LCD TYPE C:<br>A = 3.00 ± 0.07V<br>3.0/3.5 LCD TYPE S:<br>A = 3.35 ± 0.07V</td></tr>
</table></td>
</tr>
<tr>
<td>5. COM AMP Adjustment (PD-131 board)
<table>
<tr><td>Adjustment Address</td><td>ED</td></tr>
<tr><td>Specified Value</td><td>2.5 LCD TYPE S:<br>A = 6.30 ± 0.05V (NTSC)<br>A = 6.10 ± 0.05V (PAL)<br>3.0 LCD TYPE S:<br>A = 6.00 ± 0.05V (NTSC)<br>3.5 LCD TYPE S:<br>A = 5.90 ± 0.05V (NTSC)<br>A = 6.00 ± 0.05V (PAL)</td></tr>
</table></td>
<td>5. COM AMP Adjustment (PD-131 board)
<table>
<tr><td>Adjustment Address</td><td>ED</td></tr>
<tr><td>Specified Value</td><td>2.5 LCD TYPE S:<br>A = 6.30 ± 0.05V (NTSC)<br>A = 6.10 ± 0.05V (PAL)<br>☞ 2.5 LCD TYPE C:<br>A = 5.09 ± 0.05V (NTSC)<br>A = 5.20 ± 0.05V (PAL)<br>3.0 LCD TYPE S:<br>A = 6.00 ± 0.05V (NTSC)<br>3.5 LCD TYPE S:<br>A = 5.90 ± 0.05V (NTSC)<br>A = 6.00 ± 0.05V (PAL)</td></tr>
</table></td>
</tr>
</table>

# SECTION 6. REPAIR PARTS LIST

## 6-1. EXPLODED VIEWS

☞: Added portion.

| Page | Before change | | | | After change | | | |
|---|---|---|---|---|---|---|---|---|
| | Ref. No. | Part No. | Description | Remarks | Ref. No. | Part No. | Description | Remarks |
| 6-6 | 261 | A-7074-667-A | PD-131 (S-3.5) BOARD, COMPLETE | (TRV98/TRV98E) | 261 | A-7074-667-A | PD-131 (S-3.5) BOARD, COMPLETE | (TRV98/TRV98E) |
| | 261 | A-7074-680-A | PD-131 (S-2.5) BOARD, COMPLETE | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E) | 261 | A-7074-680-A | PD-131 (S-2.5) BOARD, COMPLETE (TYPE S) ☞ | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E) |
| | | | | | 261 | A-7074-681-A | PD-131 (S-2.5) BOARD, COMPLETE (TYPE C) ☞ | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E) |
| | 261 | A-7074-701-A | PD-131 (S-3.0) BOARD, COMPLETE | (TRV88) | 261 | A-7074-701-A | PD-131 (S-3.0) BOARD, COMPLETE | (TRV88) |
| | LCD901 | 1-803-852-31 | INDICATOR MODULE LIQUID CRYSTAL | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E) | LCD901 | 1-803-852-31 | INDICATOR MODULE LIQUID CRYSTAL (TYPE S) ☞ | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E) |
| | | | | | LCD901 | 1-803-859-21 | INDICATOR MODULE LIQUID CRYSTAL (TYPE C) ☞ | (TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E) |
| | LCD901 | 1-803-854-21 | INDICATOR MODULE LIQUID CRYSTAL | (TRV88) | LCD901 | 1-803-854-21 | INDICATOR MODULE LIQUID CRYSTAL | (TRV88) |
| | LCD901 | 1-803-855-21 | INDICATOR MODULE LIQUID CRYSTAL | (TRV98/TRV98E) | LCD901 | 1-803-855-21 | INDICATOR MODULE LIQUID CRYSTAL | (TRV98/TRV98E) |

## 6-2. ELECTRICAL PARTS LIST

☞: Added portion.

| Page | Before change | | | | After change | | | |
|---|---|---|---|---|---|---|---|---|
| | Ref. No. | Part No. | Description | Remarks | Ref. No. | Part No. | Description | Remarks |
| 6-14 | | A-7074-667-A | PD-131 BOARD, COMPLETE<br>************************************ | (TRV98/TRV98E) | | A-7074-667-A | PD-131 BOARD, COMPLETE<br>************************************ | (TRV98/TRV98E) |
| | | A-7074-680-A | PD-131 BOARD, COMPLETE<br>************************************ | (TRV49/TRV49E/TRV58/TRV58E/<br>TRV59E/TRV68/TRV78/TRV78E) | | A-7074-680-A | PD-131 BOARD, COMPLETE (TYPE S) ☞<br>************************************ | (TRV49/TRV49E/TRV58/TRV58E/<br>TRV59E/TRV68/TRV78/TRV78E) |
| | | | | | ☞ | A-7074-681-A | PD-131 BOARD, COMPLETE (TYPE C)<br>************************************ | (TRV49/TRV49E/TRV58/TRV58E/<br>TRV59E/TRV68/TRV78/TRV78E) |
| | | A-7074-701-A | PD-131 BOARD, COMPLETE<br>****************************** | (TRV88) | | A-7074-701-A | PD-131 BOARD, COMPLETE<br>****************************** | (TRV88) |
| | | | | (Ref.No.;10000 Series) | | | | (Ref.No.;10000 Series) |

**Sony EMCS Co.**

2002C1600-1

©2002.3

**Published by DI Customer Center**

# Revision History

| Ver. | Date | History | Contents | S.M. Rev. issued |
|---|---|---|---|---|
| 1.0 | 2000.12 | Official Release | — | — |
| 1.1 | 2001.04 | Correction | Correction of adjusting procedure.<br>S.M. correction: Page 5-2, 5-3, 5-5, 5-33, 5-40, 5-44 | Yes |
| 1.2 | 2001.11 | Supplement-1<br>(PV01-033) | • The change of the CCD imager of the CCD-TRV68/TRV78/TRV88/TRV98 (NTSC model) from type S to type M.<br>• The LCD (Liquid Crystal Display) panel is supplied as the block assembly. | No |
| 1.3 | 2002.03 | Supplement-2<br>(PV01-062) | • The display LCD assembly Type C is added to the conventional Type S. In accordance with the addition of Type C, adjustment and repair parts list are changed. | No |
| 1.4 | 2002.05 | Correction-2 | Correction of part No. for service part.<br>S.M. correction: Page 6-14 | Yes |